 


Service
Service
Service

38ZZ3273/18G

 
 
43ZZ3473/18G

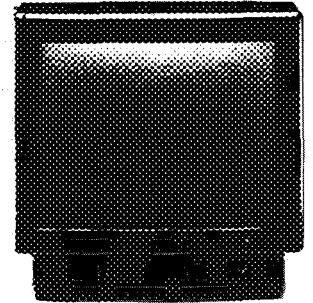


Service Manual

Les normes de sécurité exigent que l'appareil soit remis à l'état d'origine et que soient utilisées les pièces de rechange identiques à celles spécifiées.

CHASSIS ANUBIS A

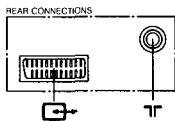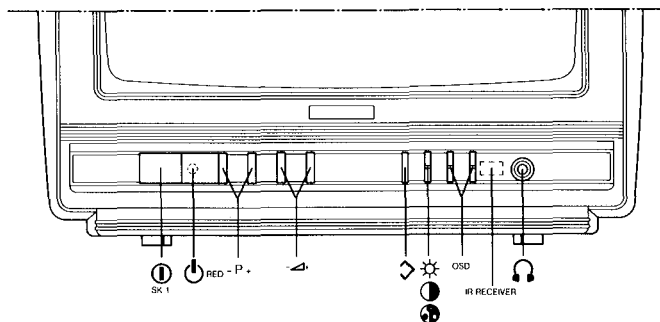

MDA 02844
728/048

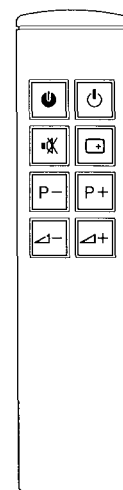 


MDA 02843
128/041

RC9020



 → 220-240 V (± 10%)
55 W



a×b×c (38ZZ)
374×366×367 mm
a×b×c (43ZZ)
421×392×403 mm



→ 1×1W



→ -/18 } PAL B/G/I
SECAM B/G/L/L'




(38ZZ3273)
A36EAM11X13
4822 131 20438

(43ZZ3473)
A41EAM11X13
4822 131 20407



UV917E

 VHF_a : 46-118 MHz
VHF_b : 118-300 MHz
Hyp : 300-470 MHz
UHF : 470-861 MHz

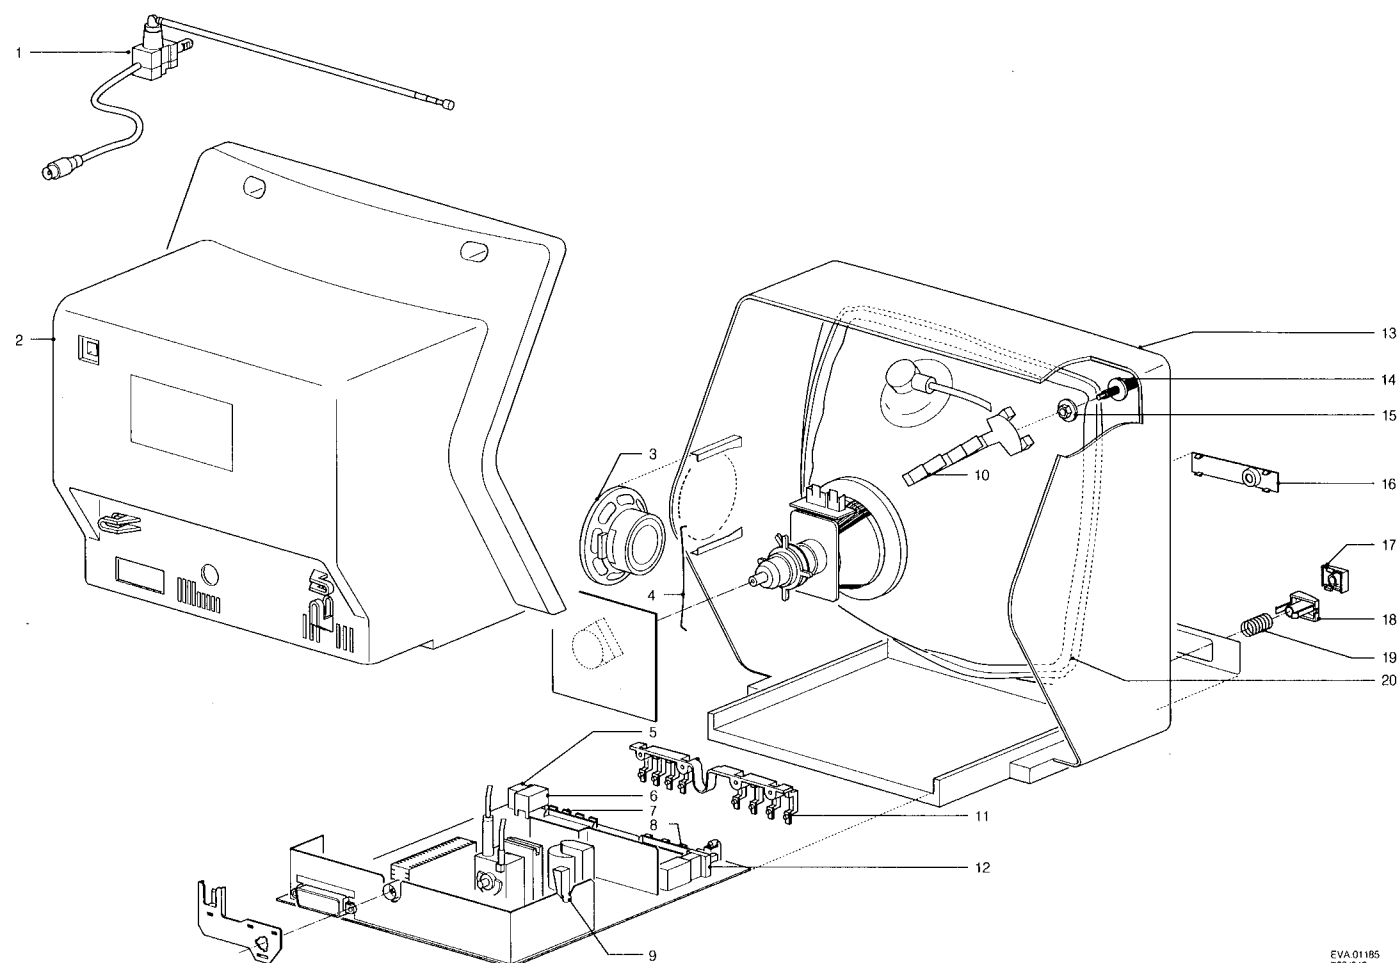

EVA.01185
T28/049

38ZZ3273

1	4822 303 50052	Aerial
2	4822 438 10352	Rear cover
3	4822 240 30583	Loudspeaker
4	4822 492 70215	Spring
5	4822 267 31292	Headphones jack
6	4822 218 20981	RC5 receiver
7	4822 276 40414	Push button assy
8	4822 277 21438	Push button assy
9	4822 492 70559	Spring for 7445
10	4822 404 30753	Bracket
11	4822 410 61151	Button frame
12	4822 276 12597	Mainsswitch
13	4822 430 10334	Cabinet
14	4822 503 21006	Spindle
15	4822 505 10903	Nut
16	4822 432 92734	Cover
17	4822 432 92723	Led gate cover
18	4822 410 61055	Mains knob
19	4822 492 32656	Spring
20	4822 157 52316	Degaussing coil
-	4822 218 20998	Remote control

43ZZ3473

4822 303 50052	Aerial
4822 438 10353	Rear cover
4822 240 30583	Loudspeaker
4822 492 70215	Spring
4822 267 31292	Headphones jack
4822 218 20981	RC5 receiver
4822 276 40414	Push button assy
4822 277 21438	Push button assy
4822 492 70559	Spring for 7445
4822 404 30839	Bracket
4822 410 61151	Button frame
4822 276 12597	Mainsswitch
4822 430 10336	Cabinet
4822 503 21006	Spindle
4822 505 10903	Nut
4822 432 92735	Cover
4822 432 92723	Led gate cover
4822 410 61055	Mains knob
4822 492 32656	Spring
4822 157 52883	Degaussing coil
4822 218 20998	Remote control