

Service Manual

Multi-Scan Color CRT Display
MODEL NO. 1769GA-1


ViewSonic 17GA



CONTENTS


SERVICE WARNING	1
SAFETY PRECAUTIONS	2
GENERAL INFORMATION	3
REPAIRATIONS	5
DIAGNOSIS	15
DISASSEMBLY INSTRUCTIONS	15
CONTROL LOCATION	18
CAUTION FOR AN ELECTRIC SHOCK	18
CAUTION FOR A HOT TUBE	18
ADJUSTMENT PROCEDURE	20
SOFTWARE	22
ADJUSTMENT CONTROL LOCATION	23
REPAIR PROCEDURE AFTER A PART IS REPLACED	24
ADJUSTMENT PROCEDURE	26
BLACK SCREEN	28
CONDUCTOR VIEW	43
NON-MATIC SCREEN	47
THROUGH SCREEN TIME	50
REPLACEMENT PARTS LIST	50


ViewSonic

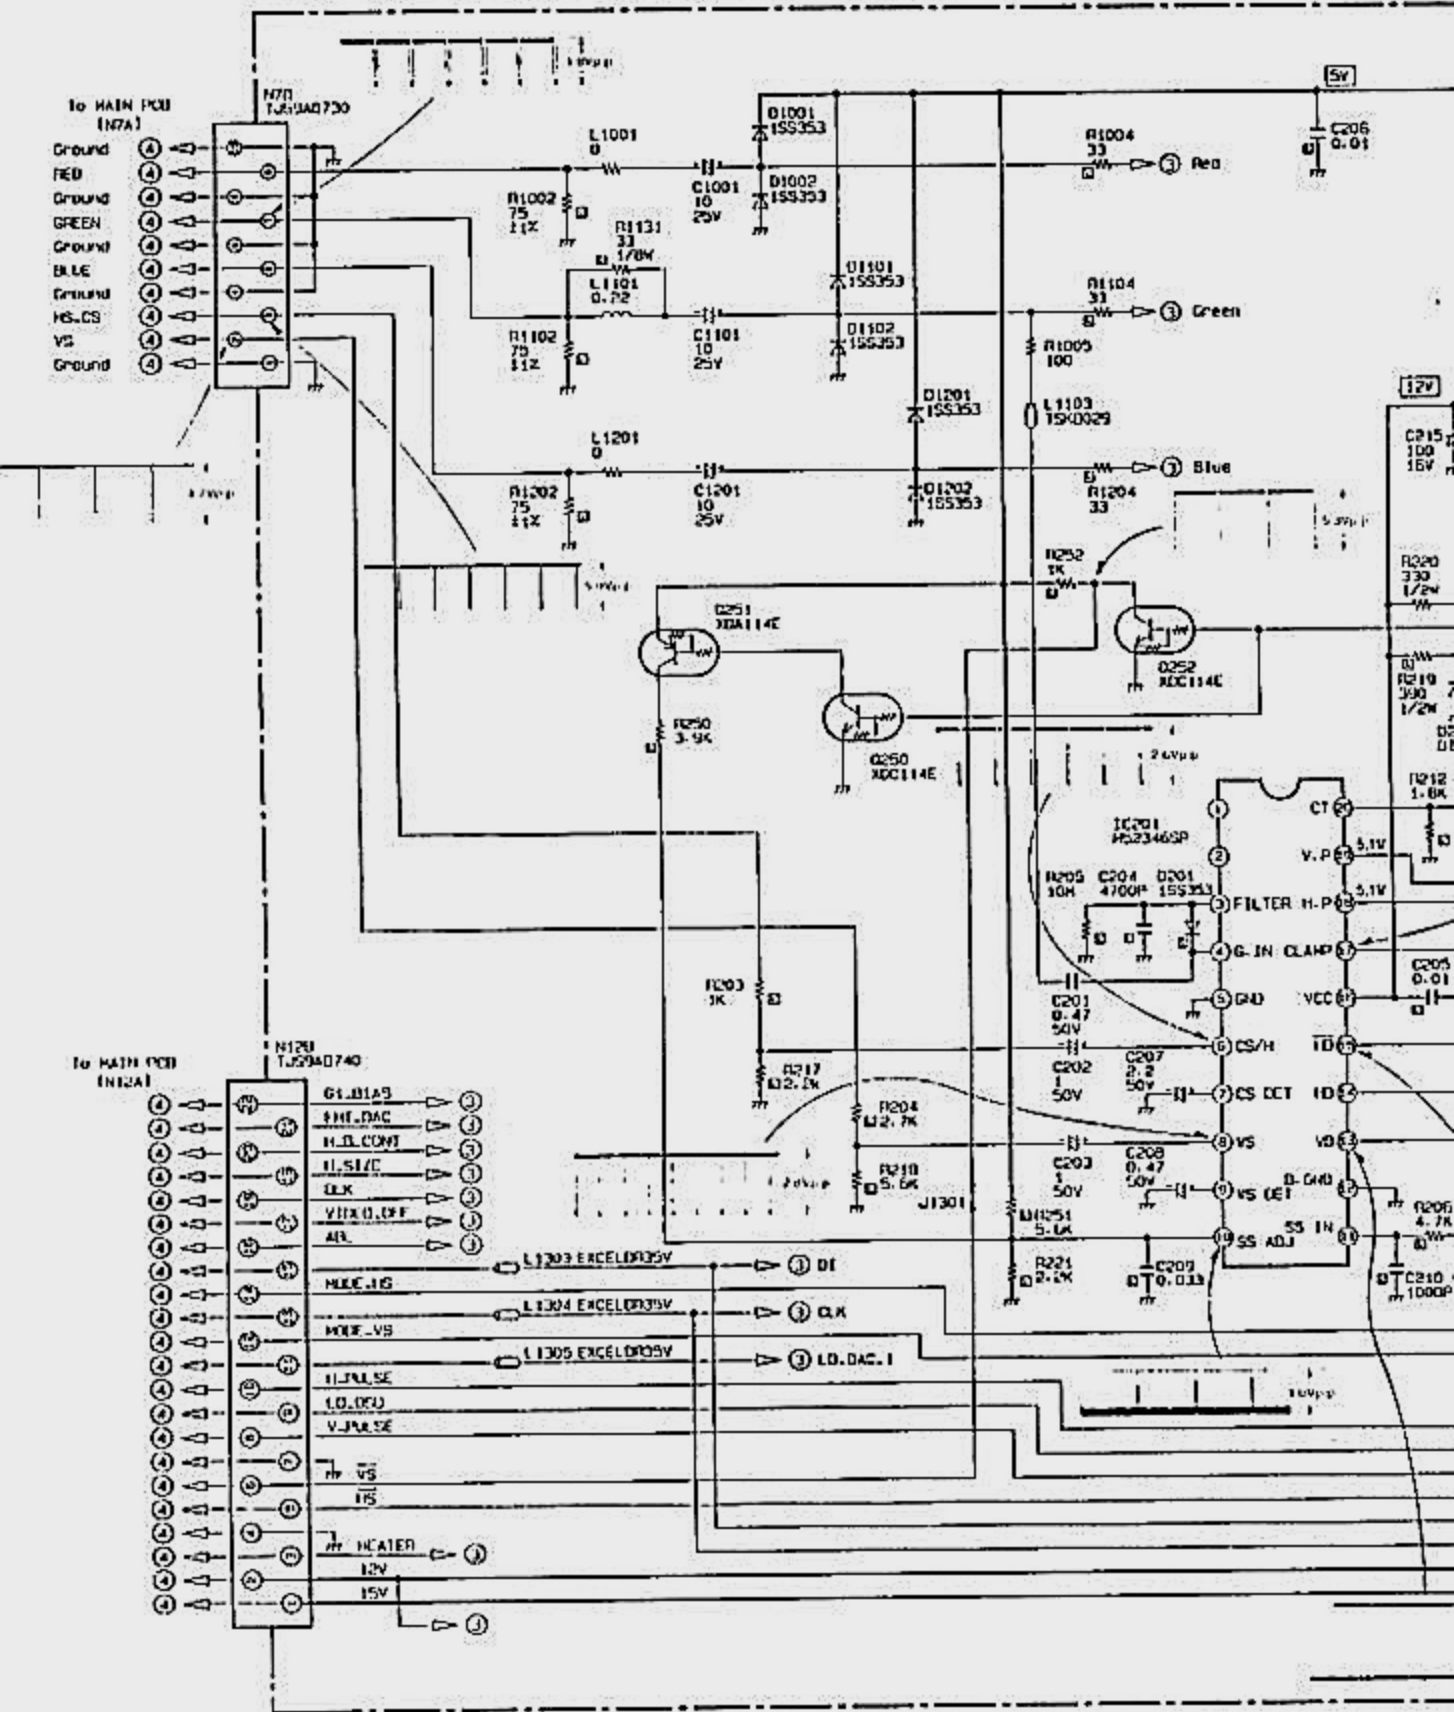



58

C206
D-01

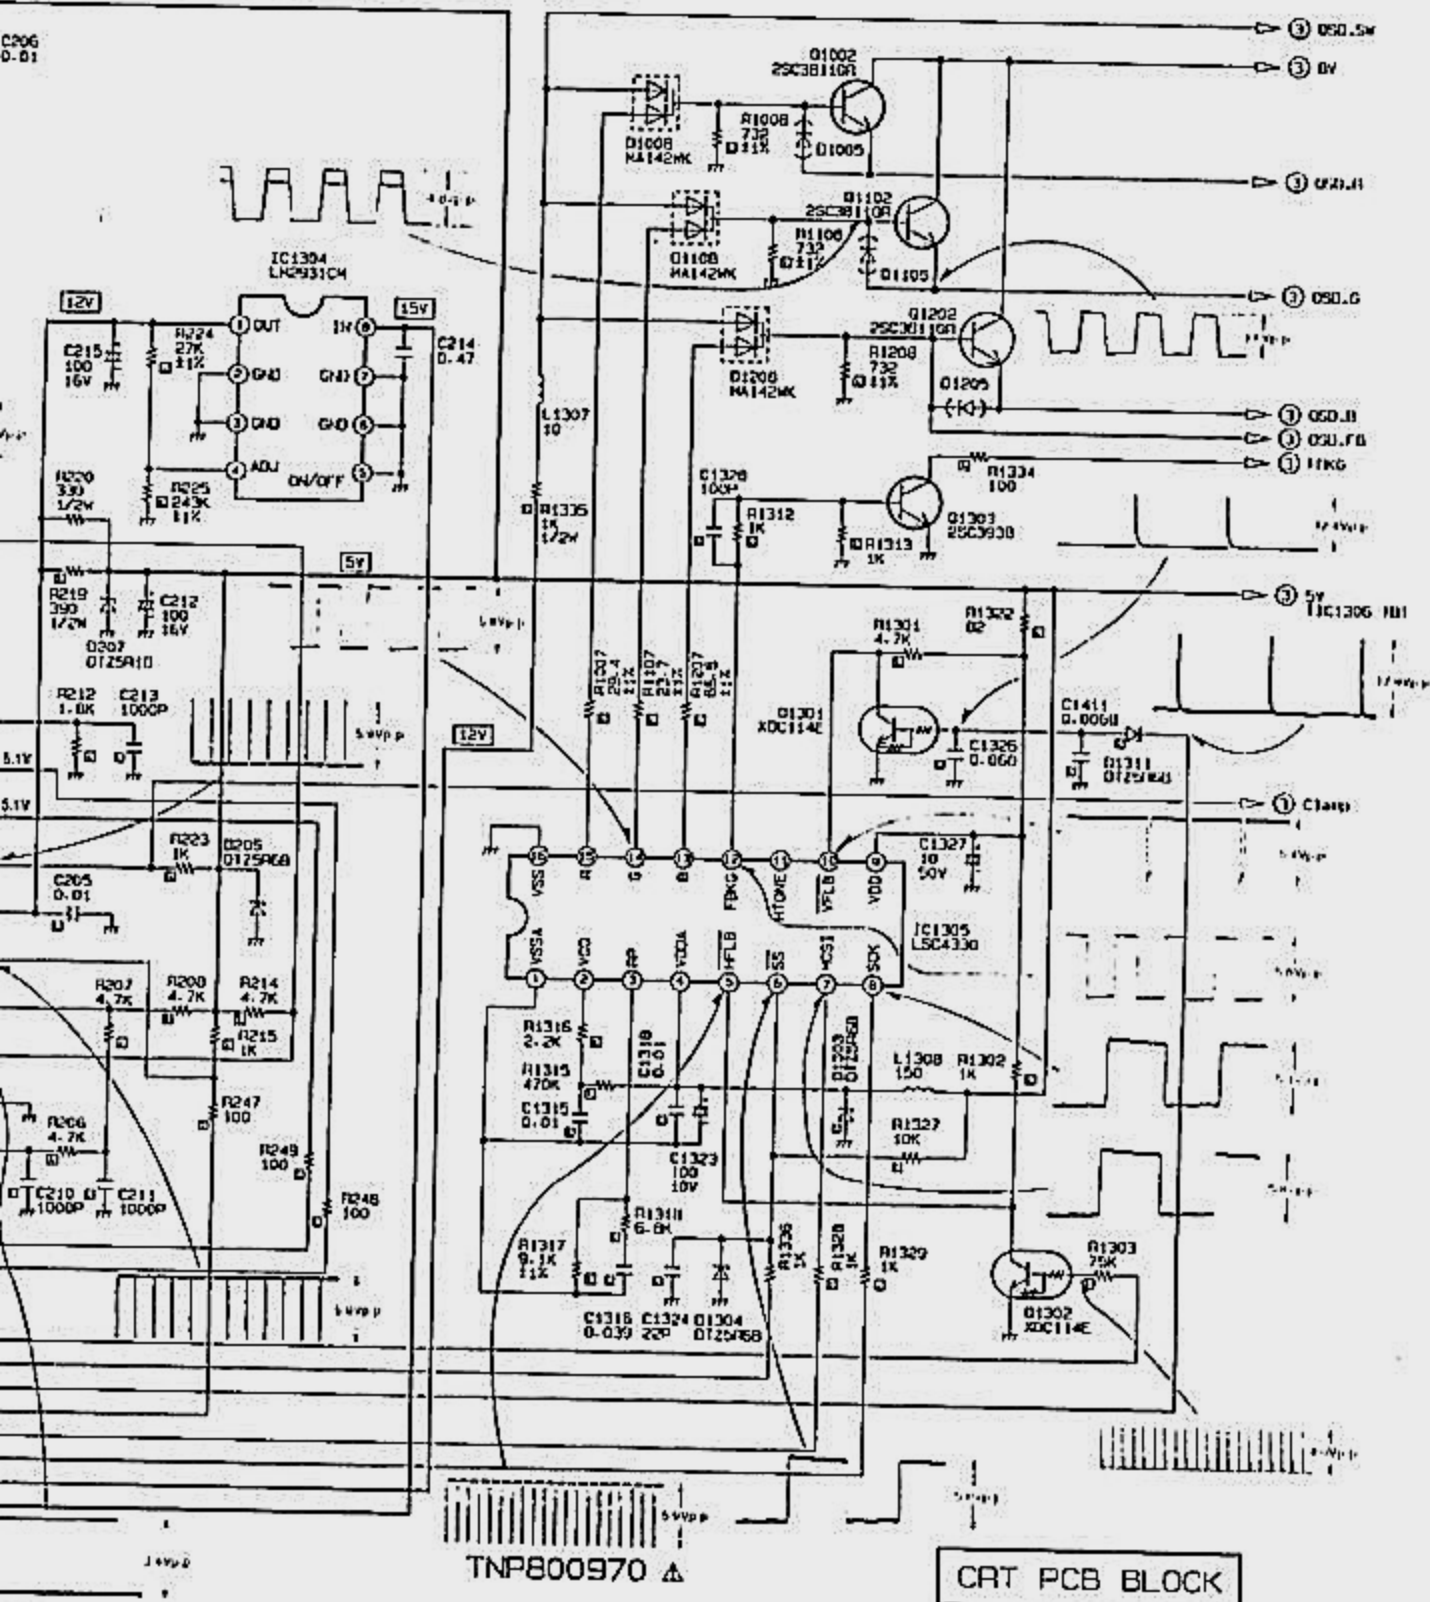


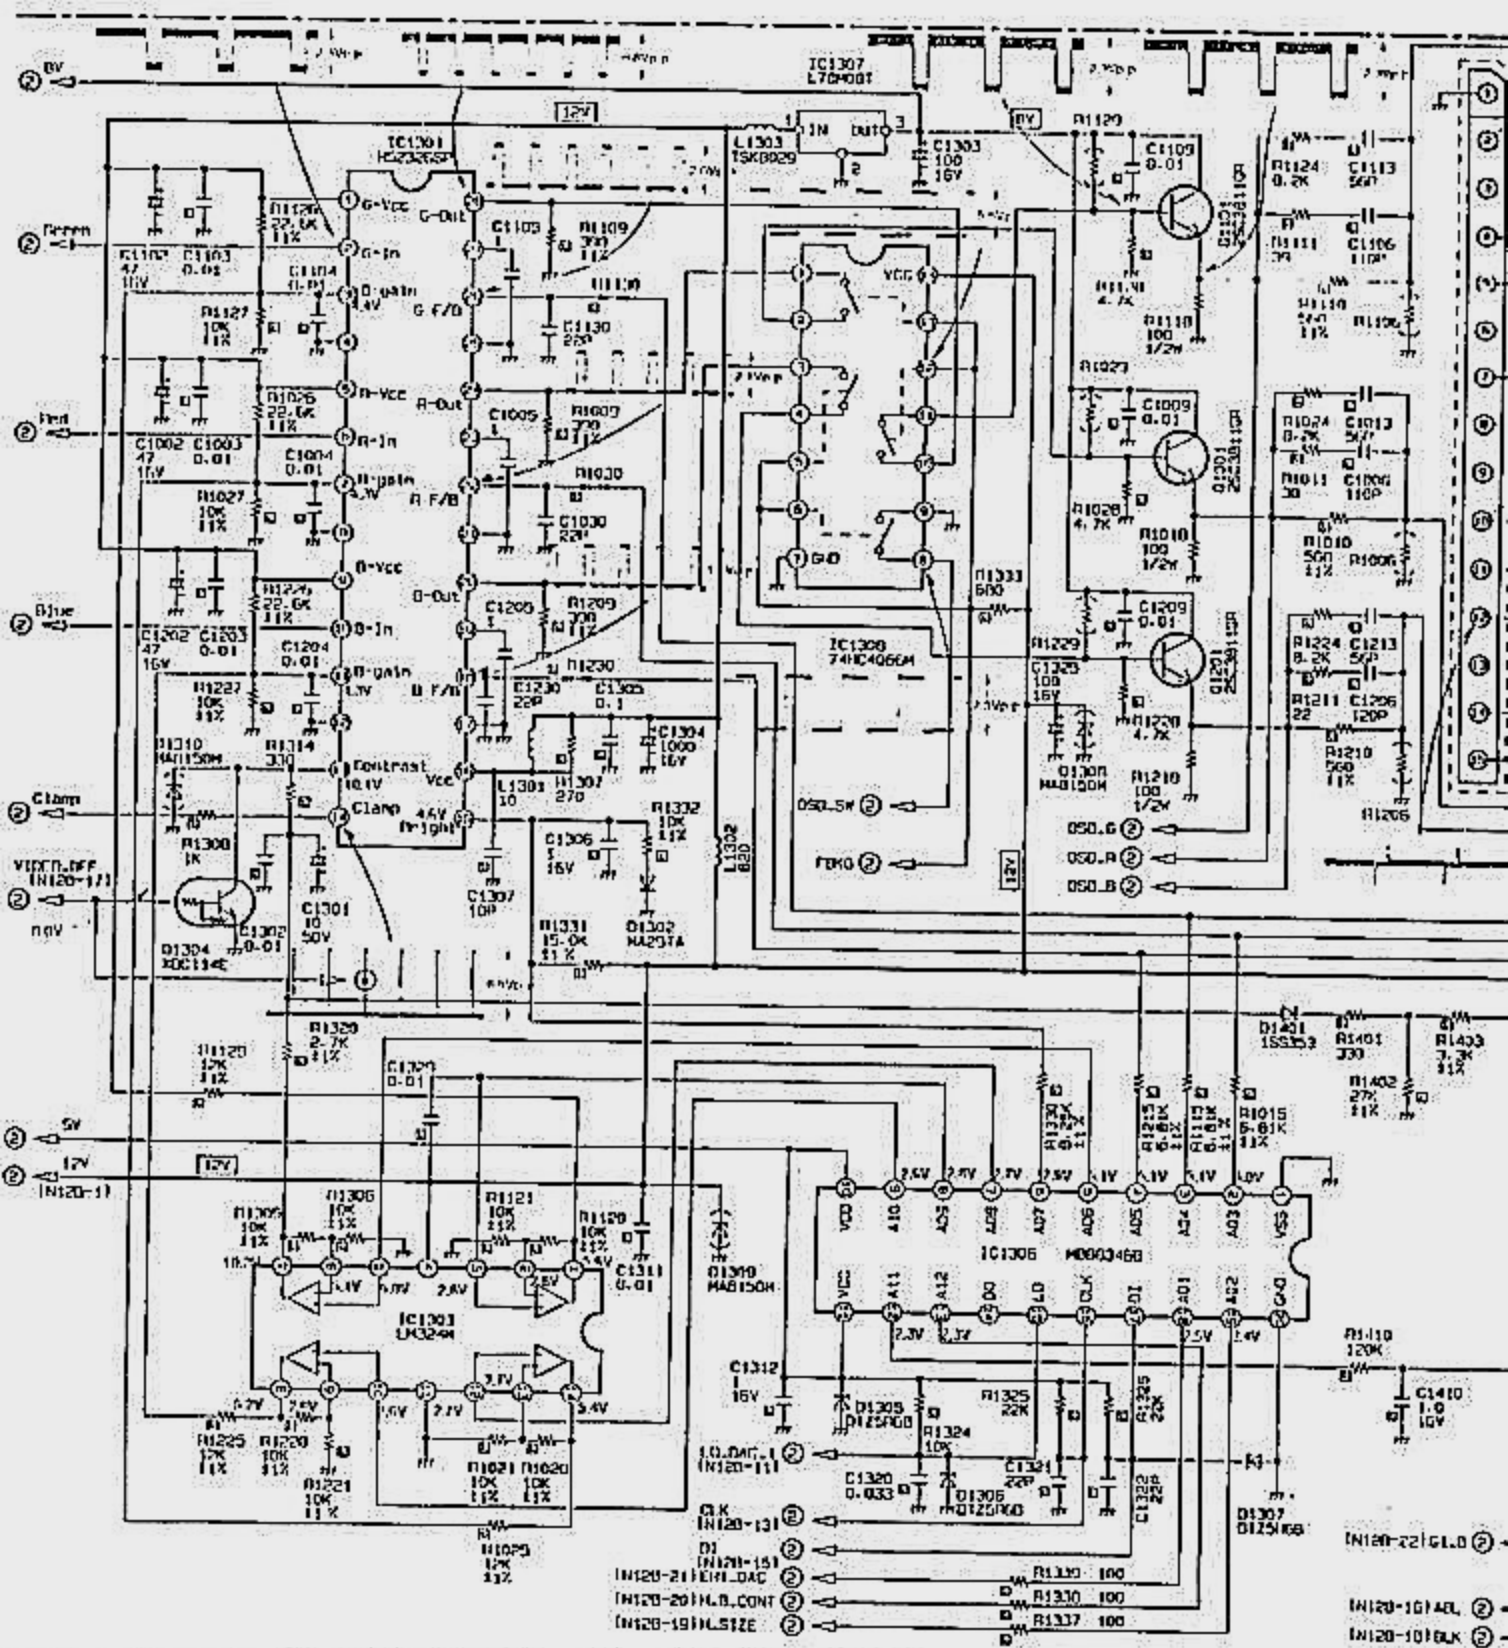


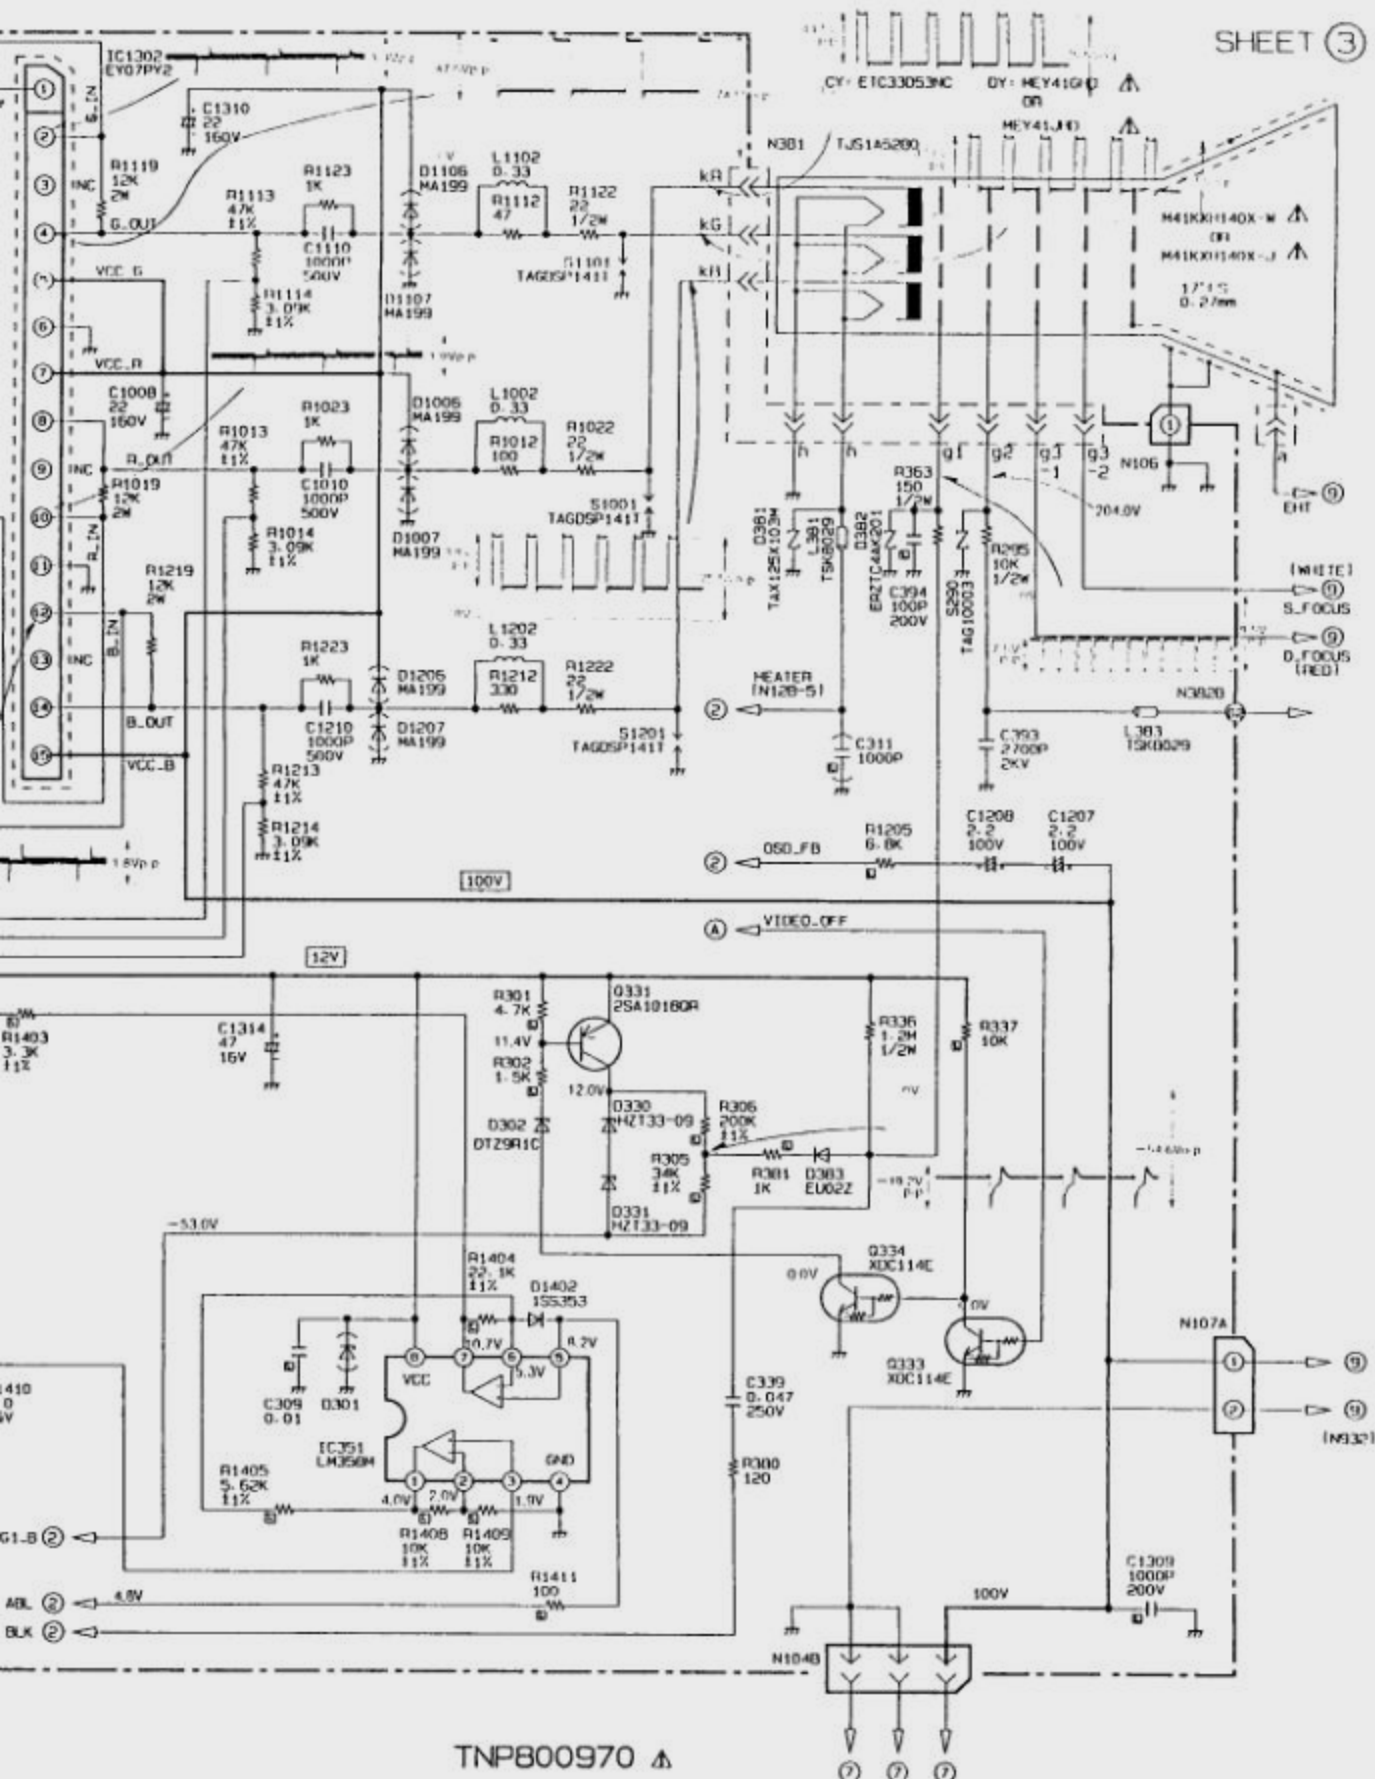


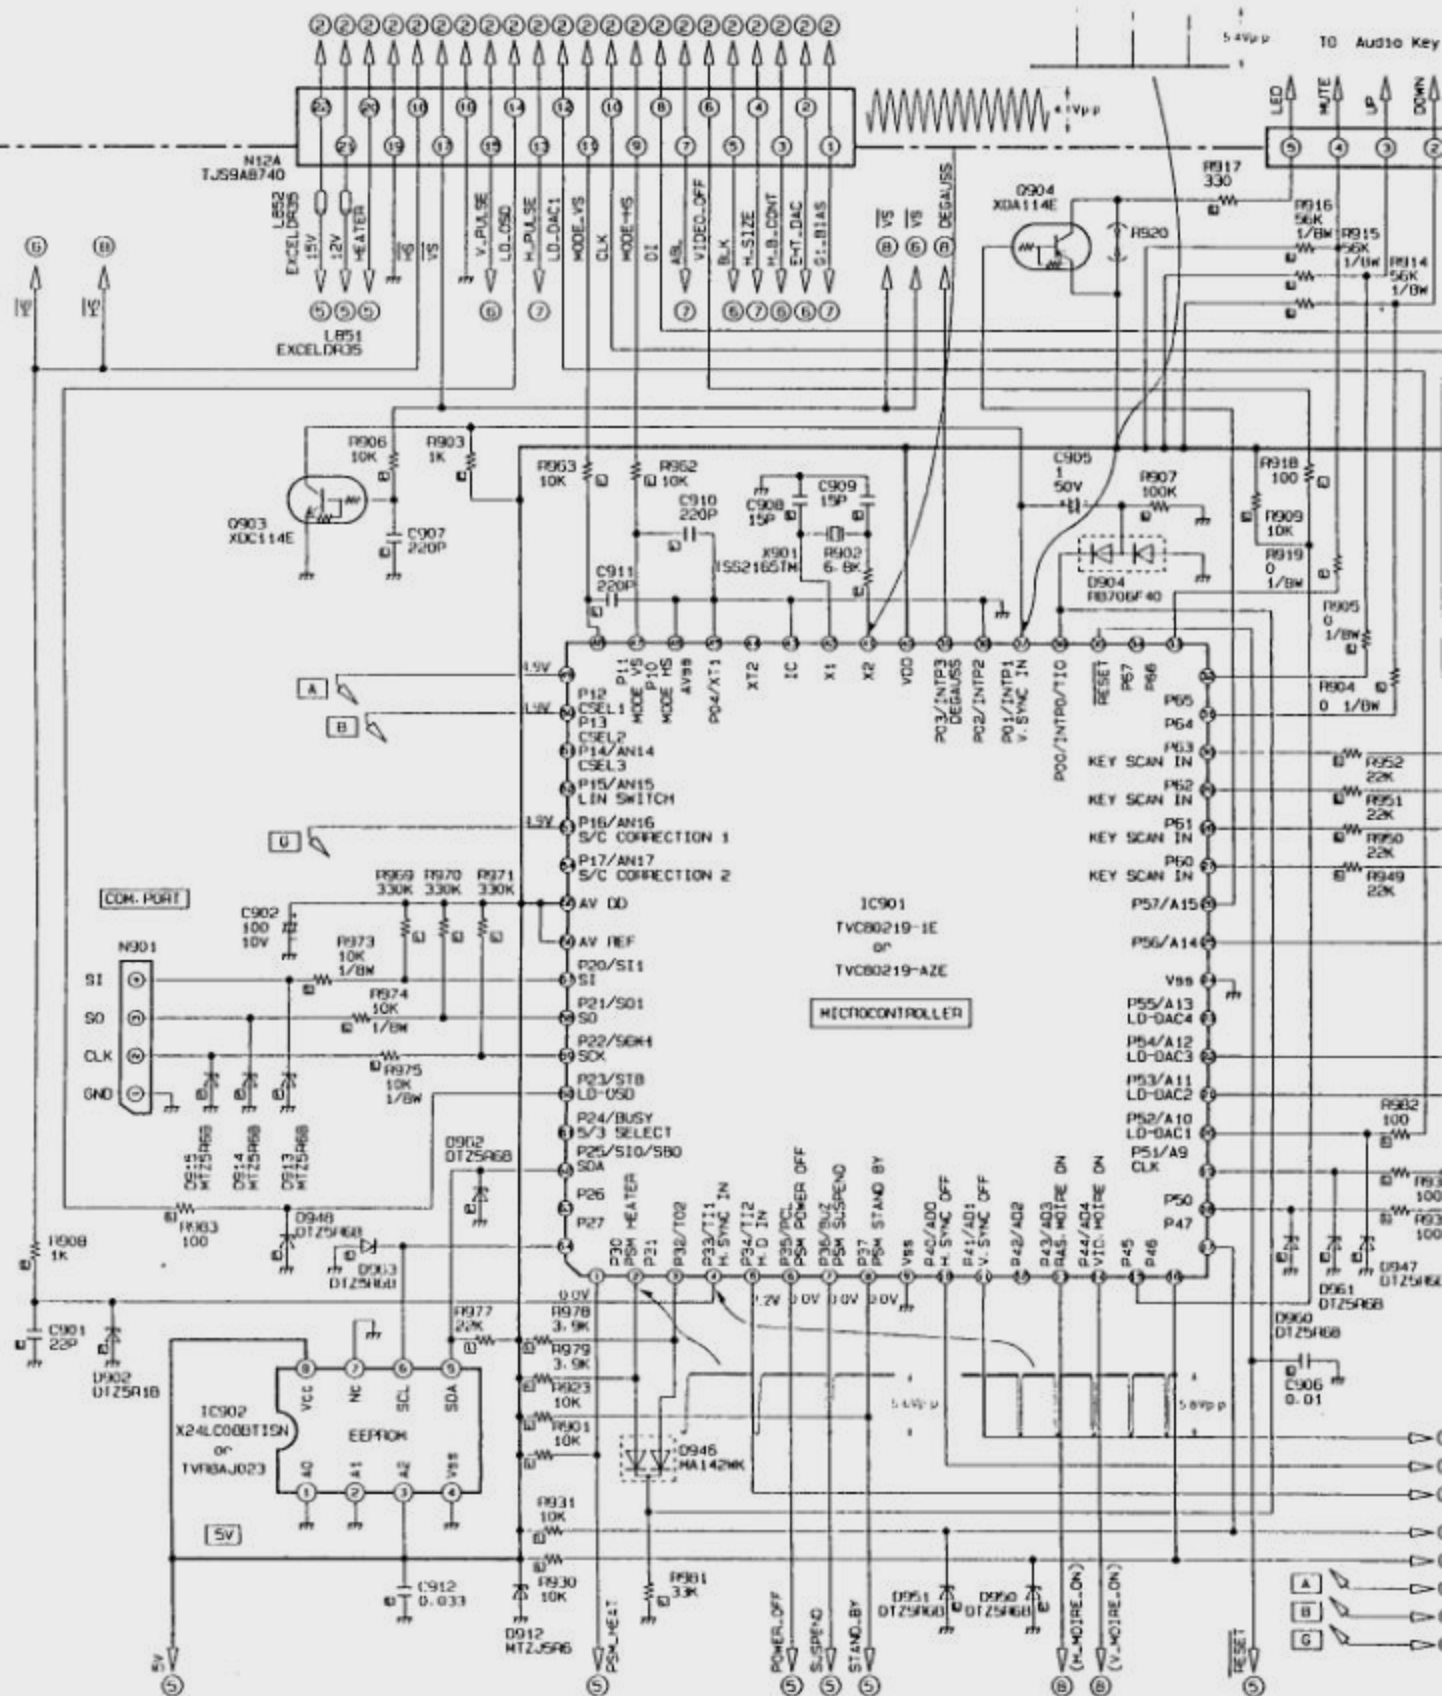



TO Audio Key PCB

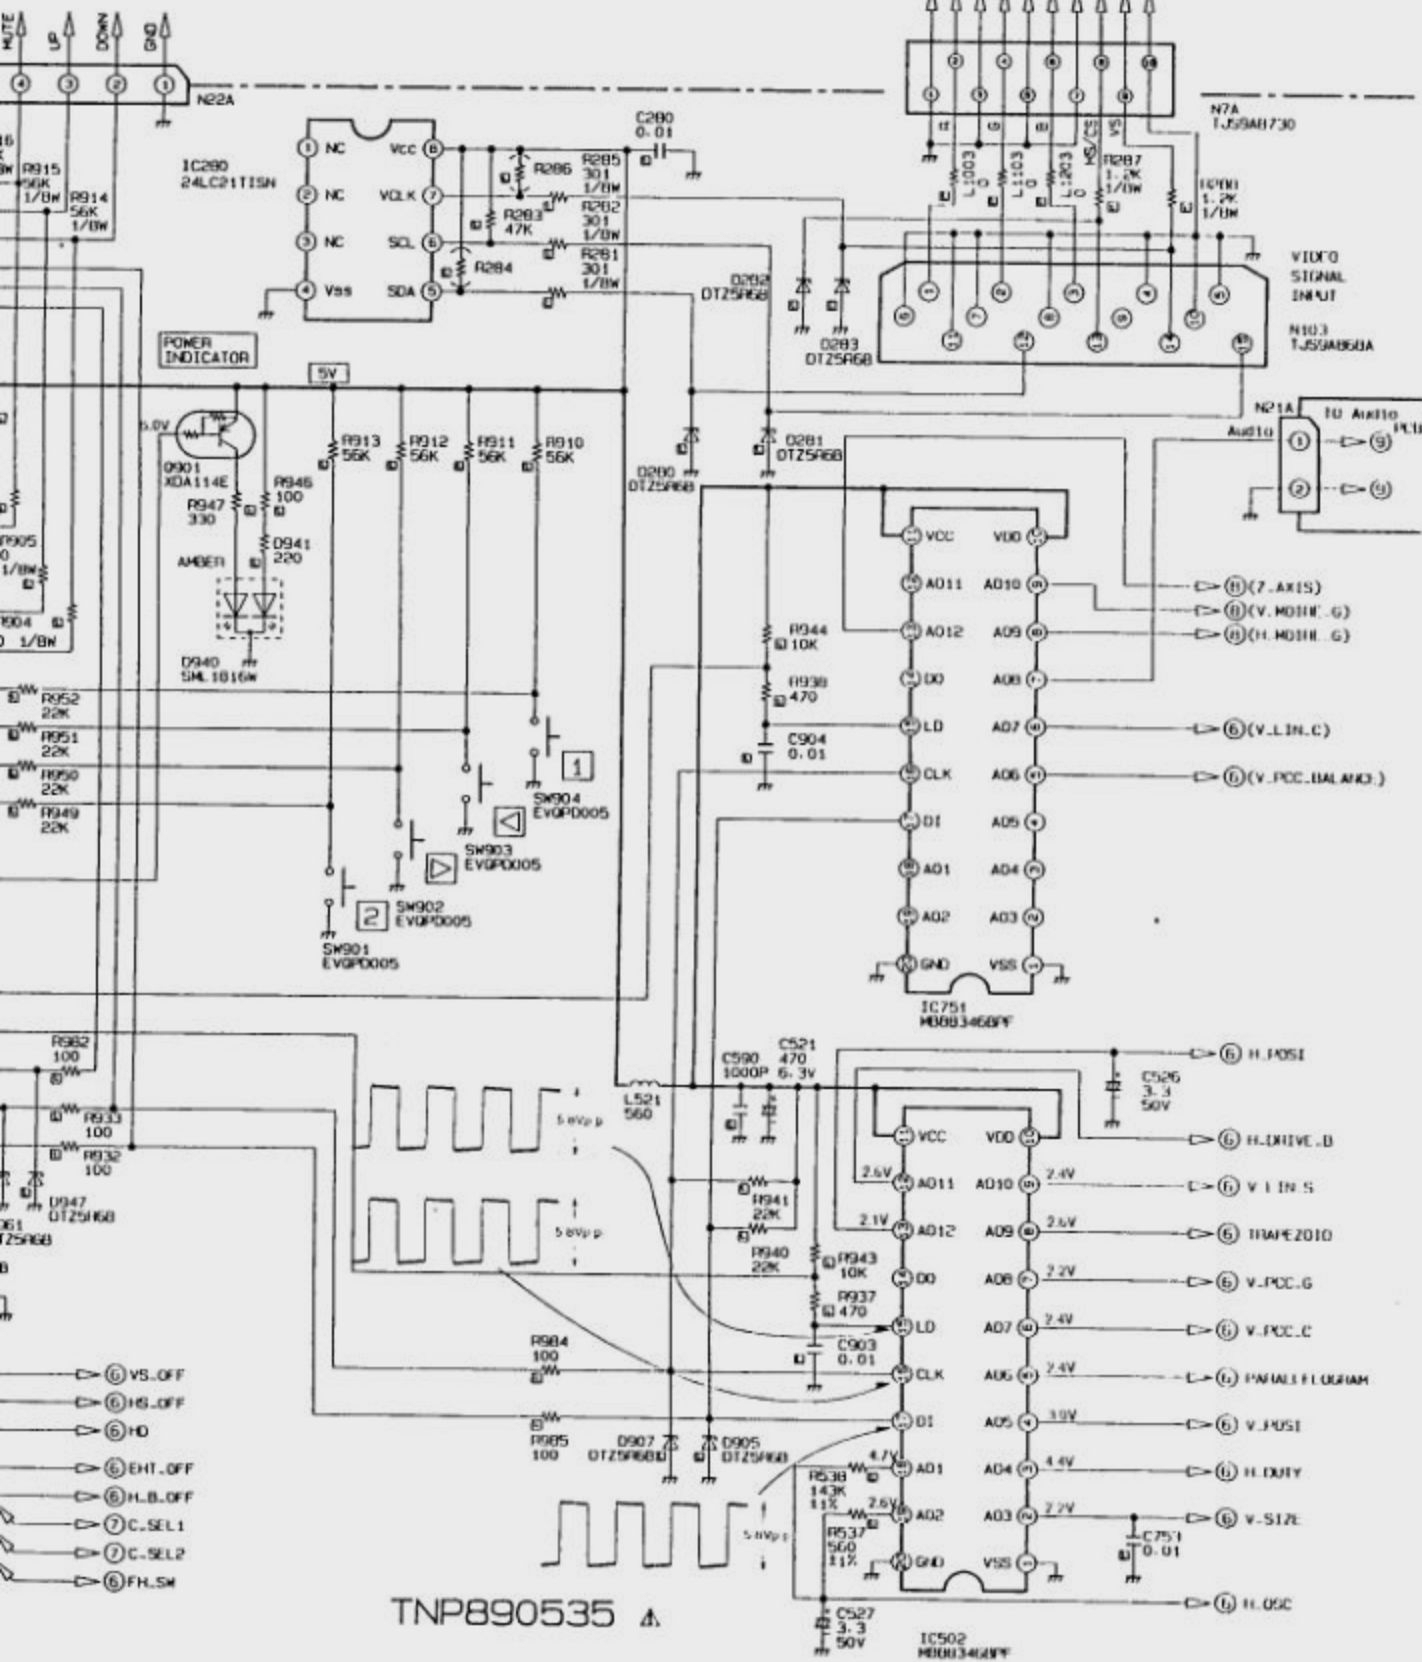


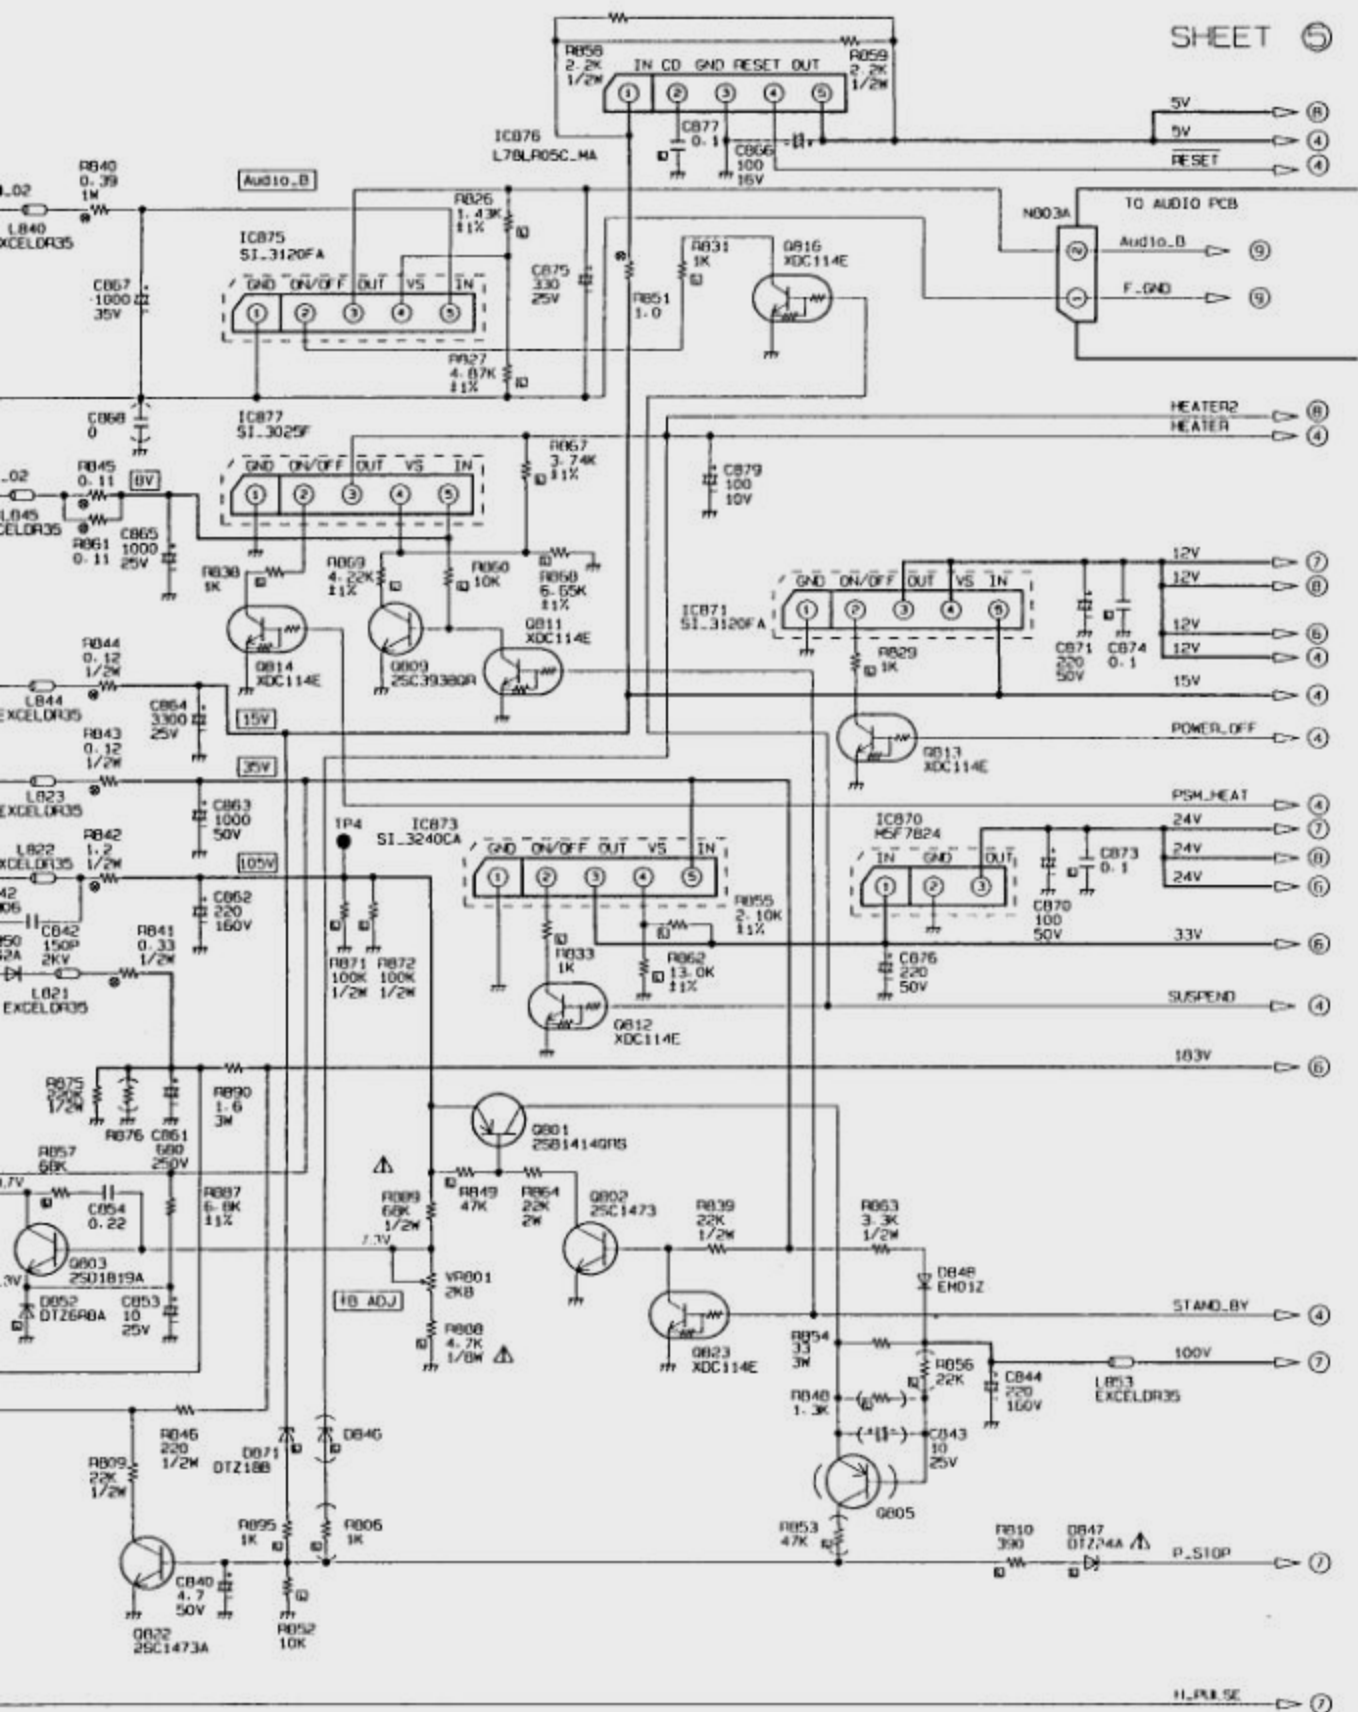

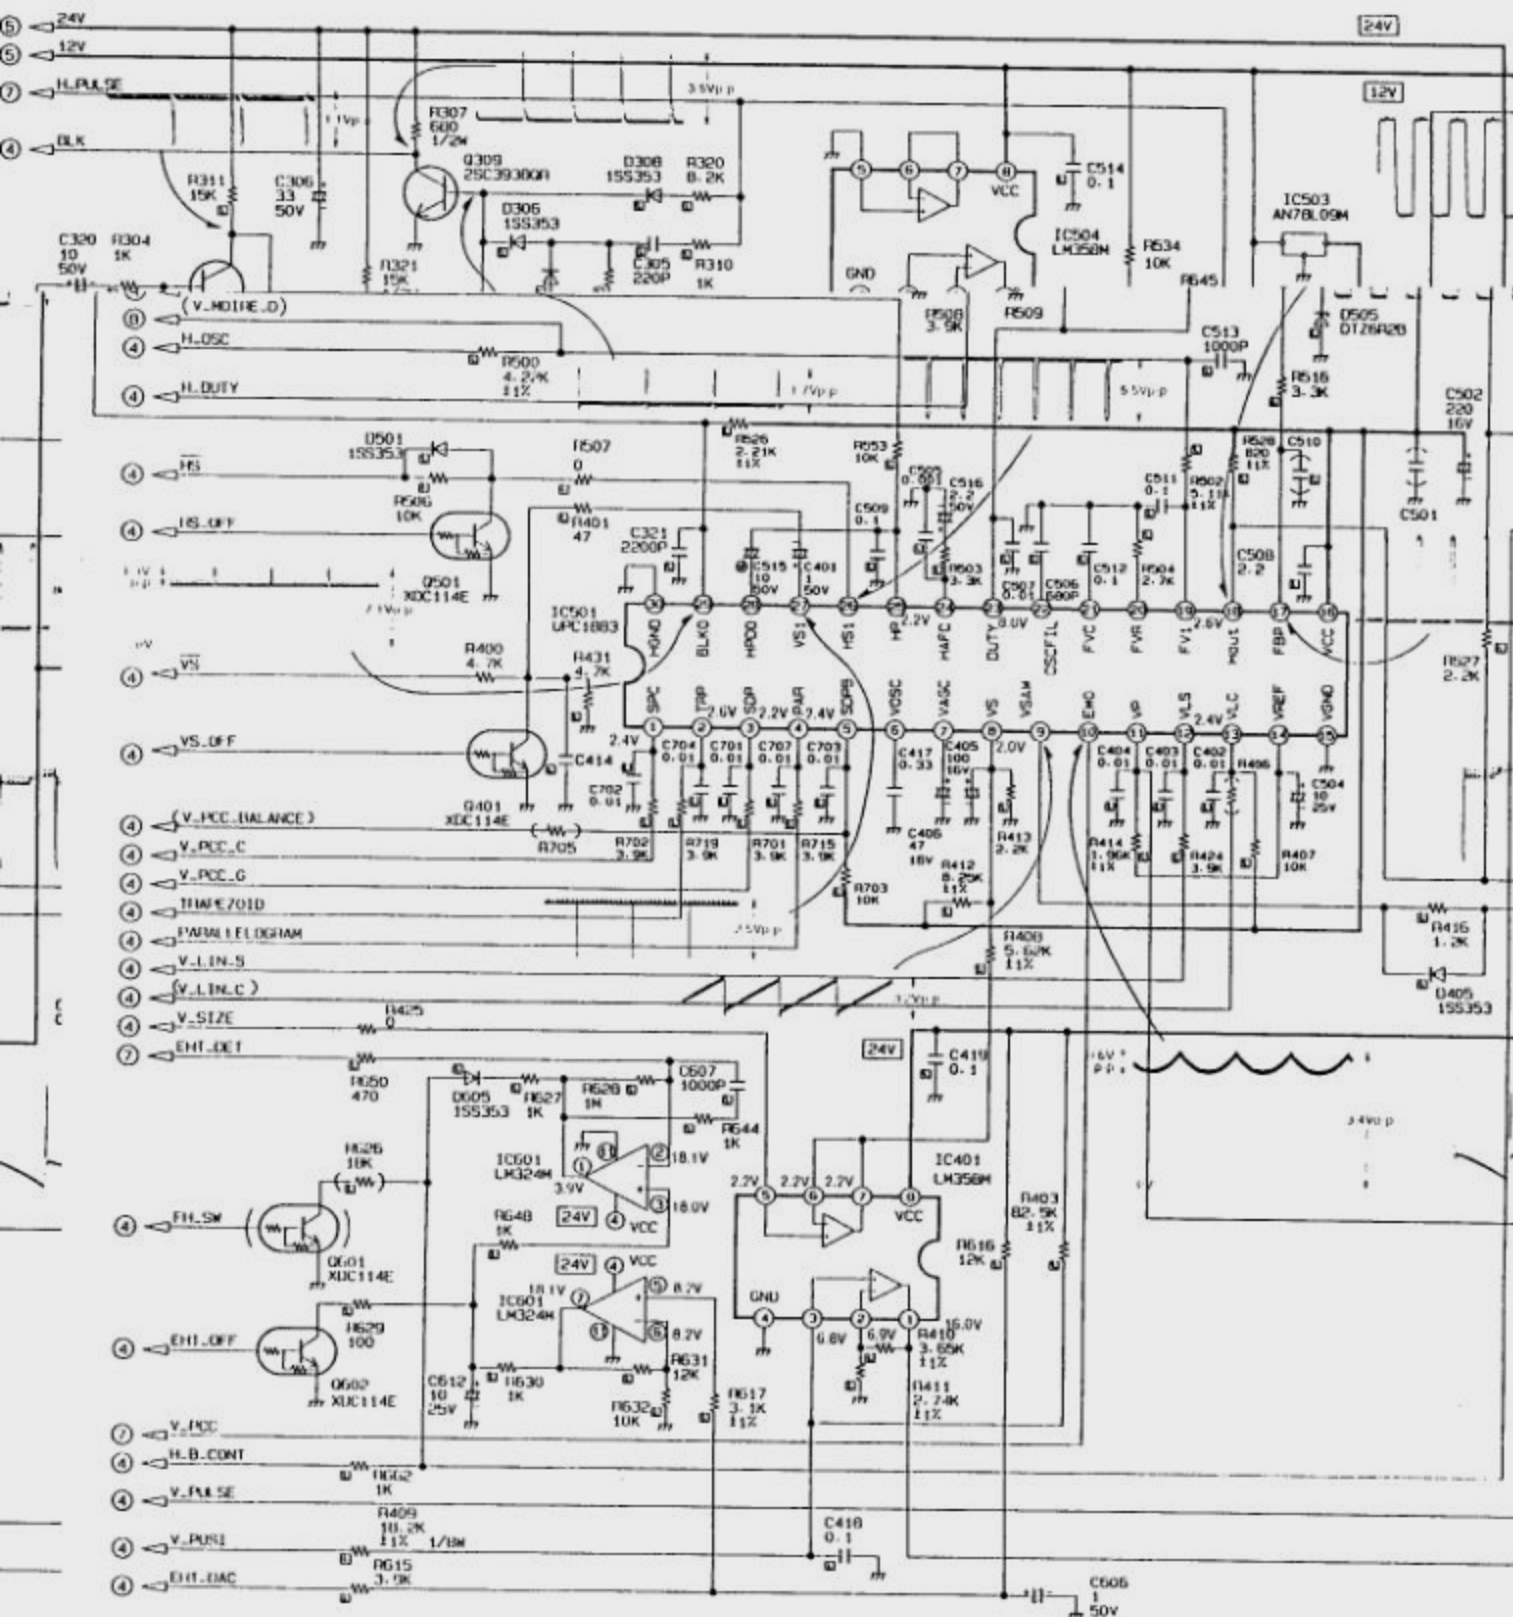


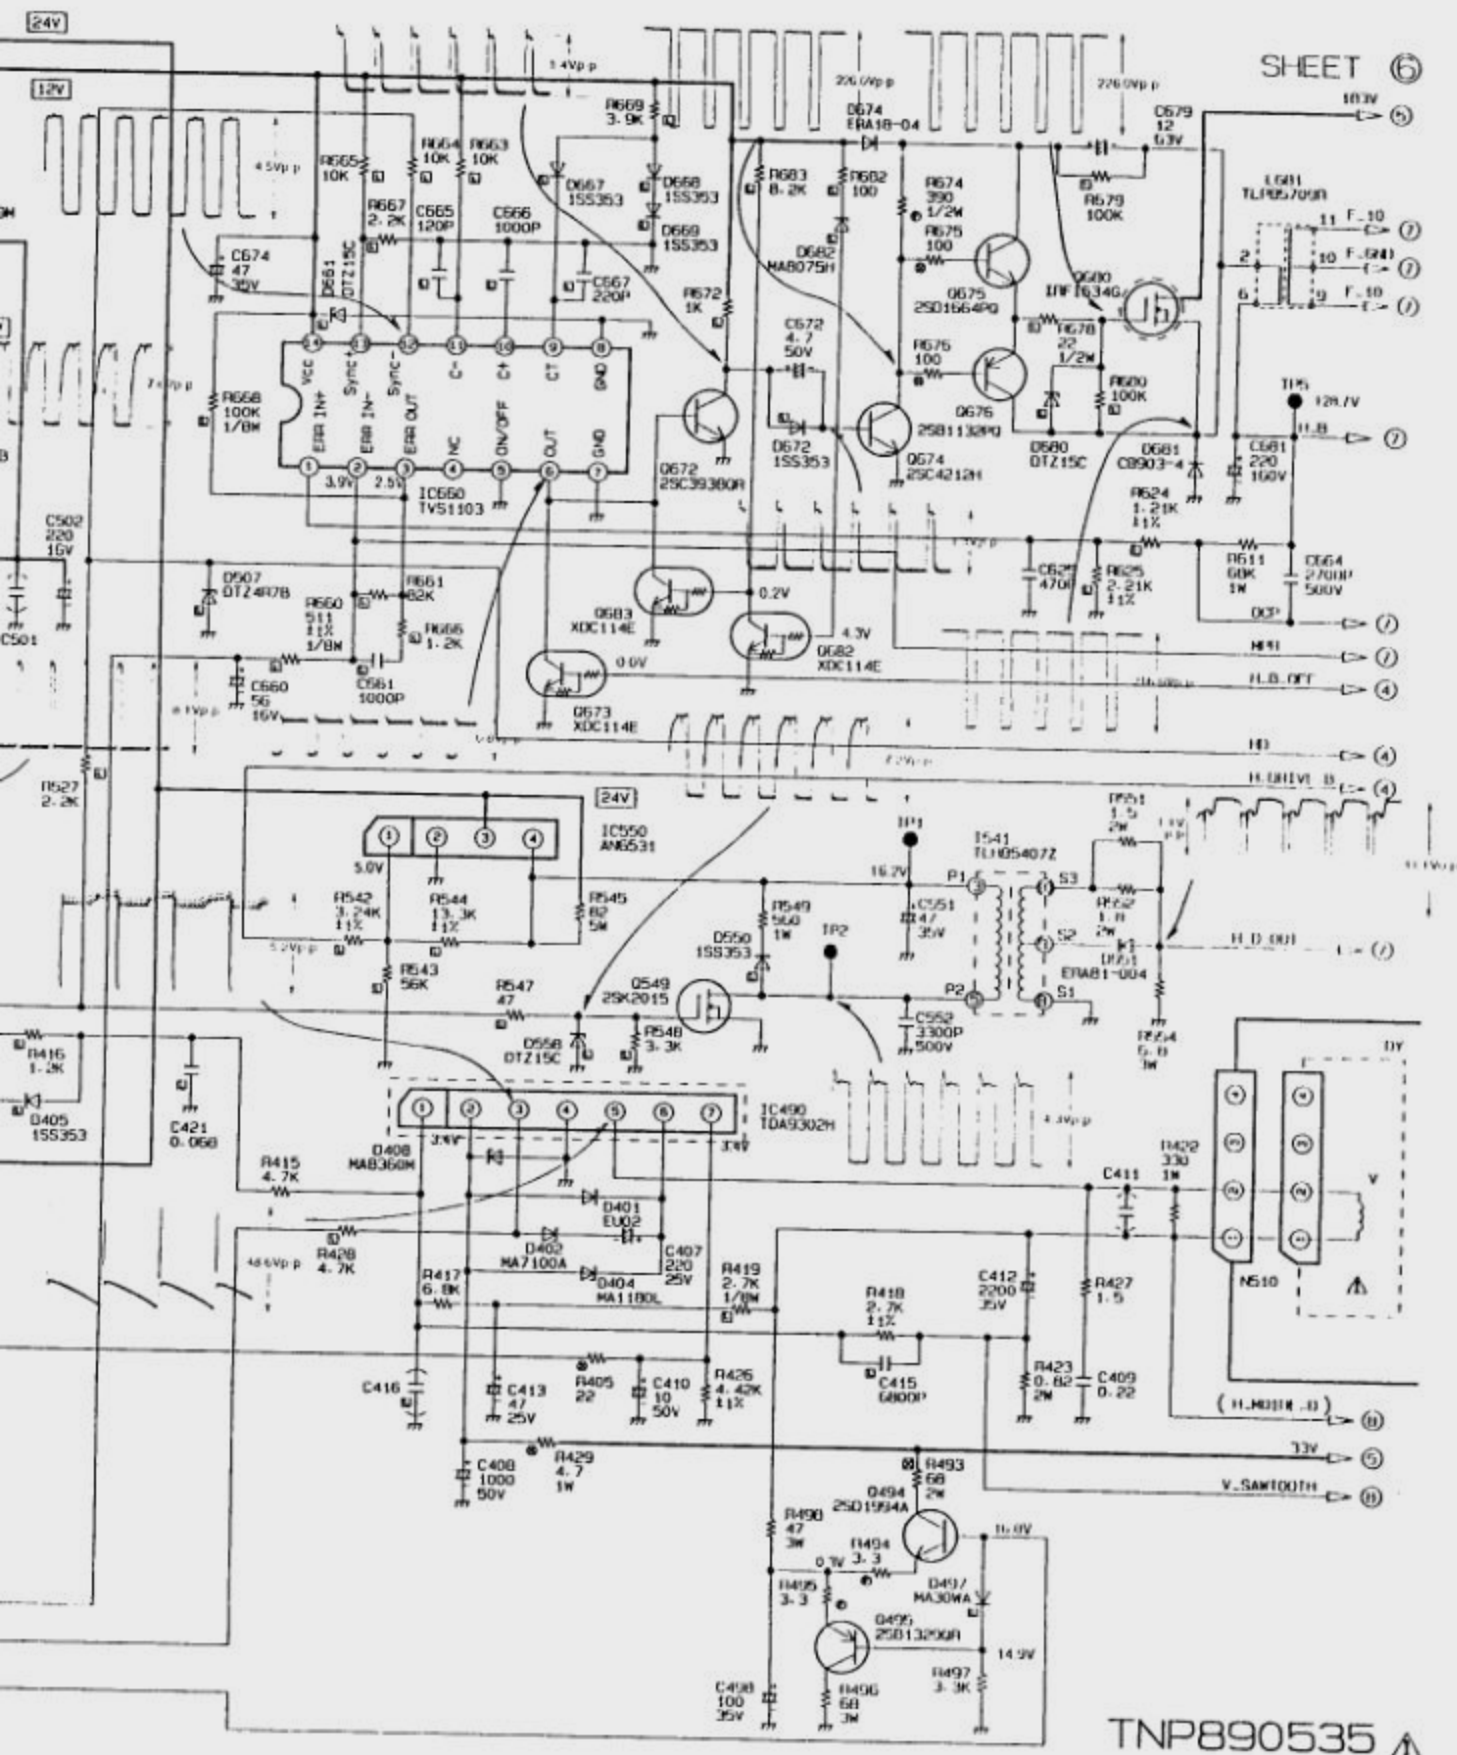


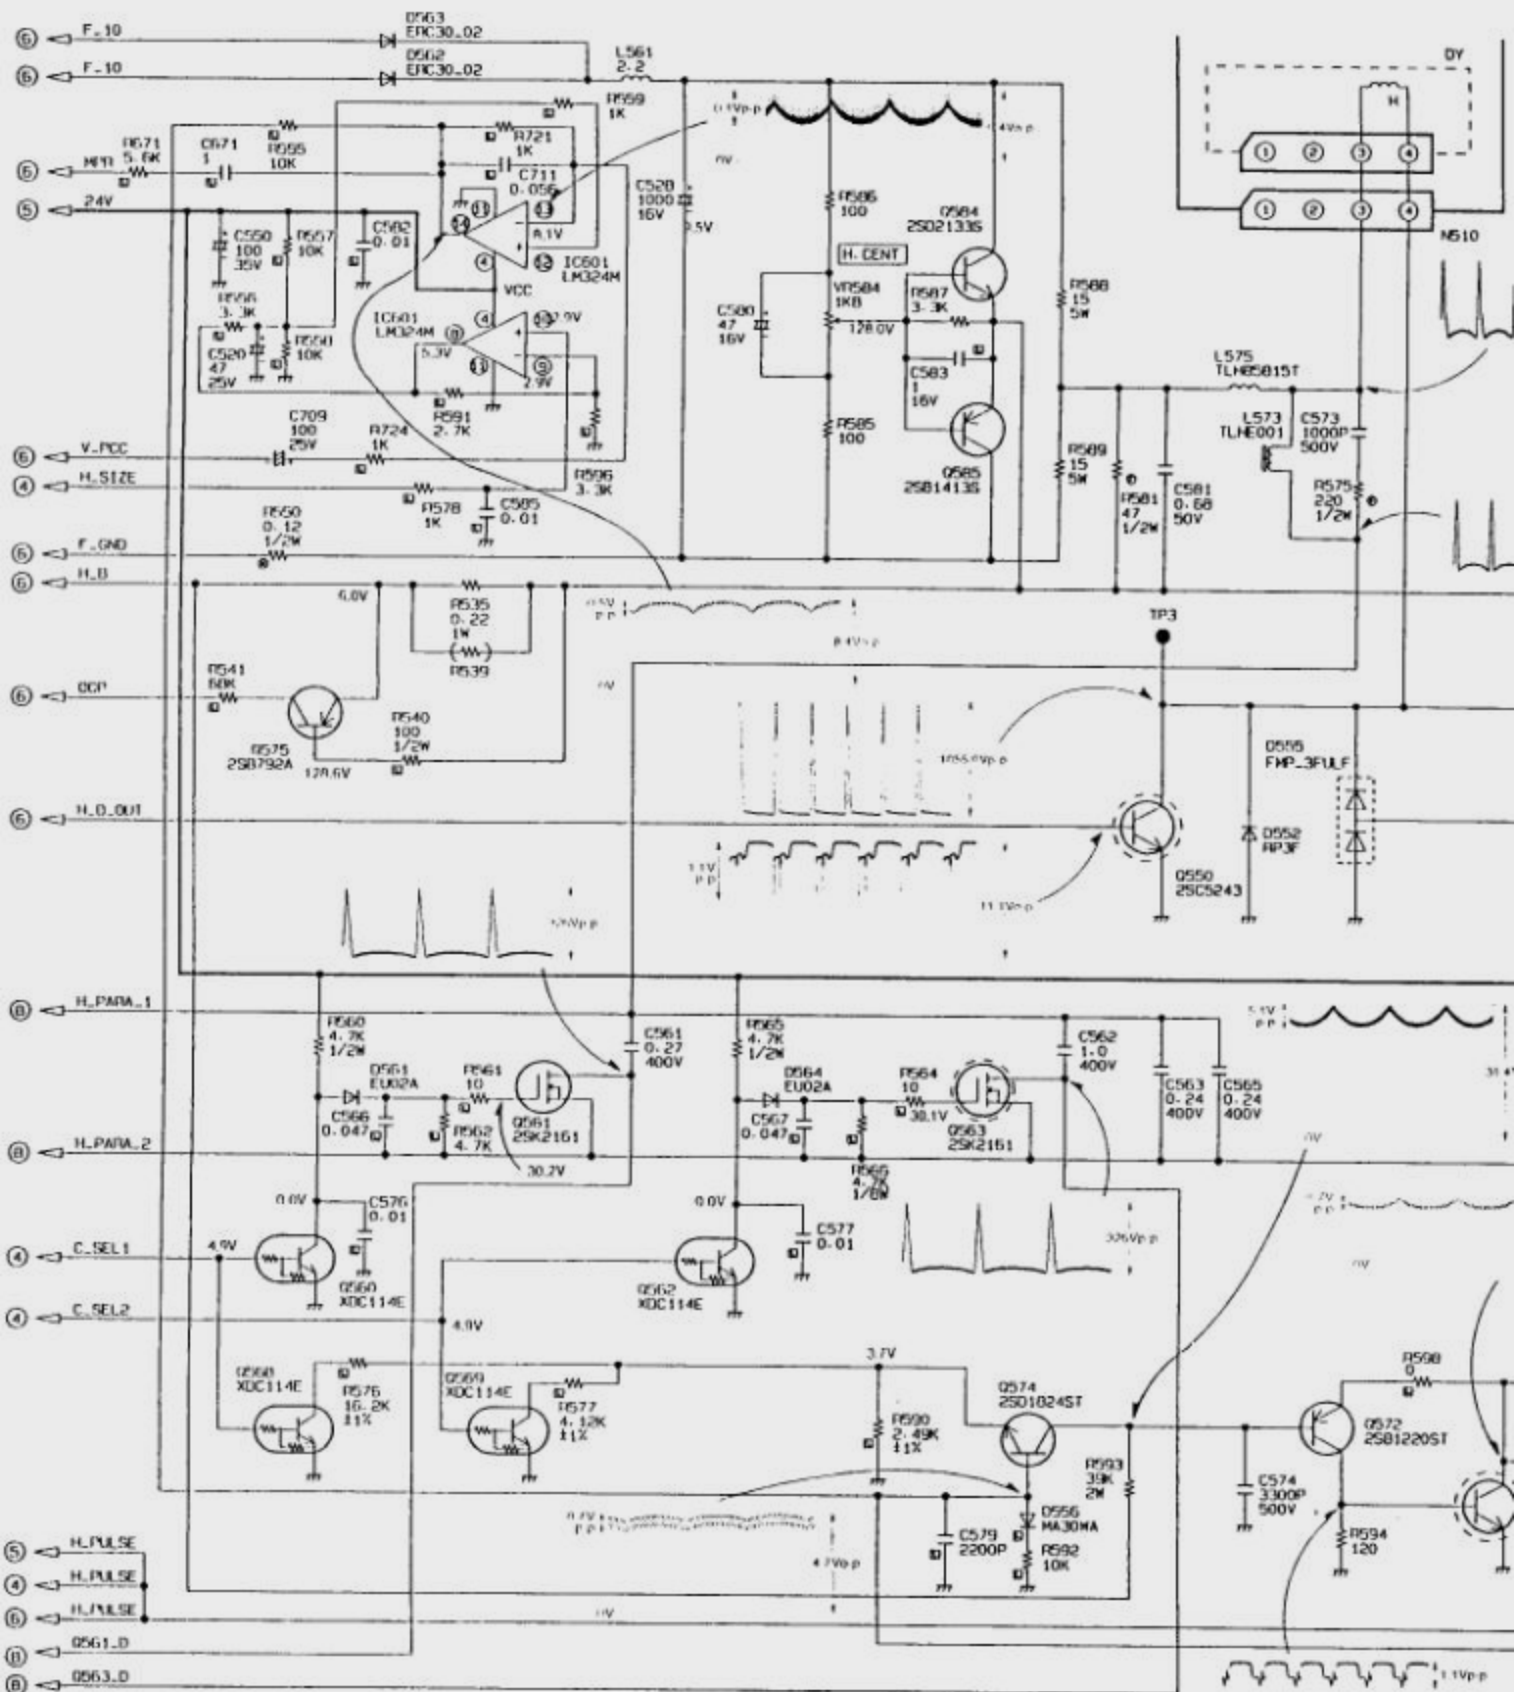

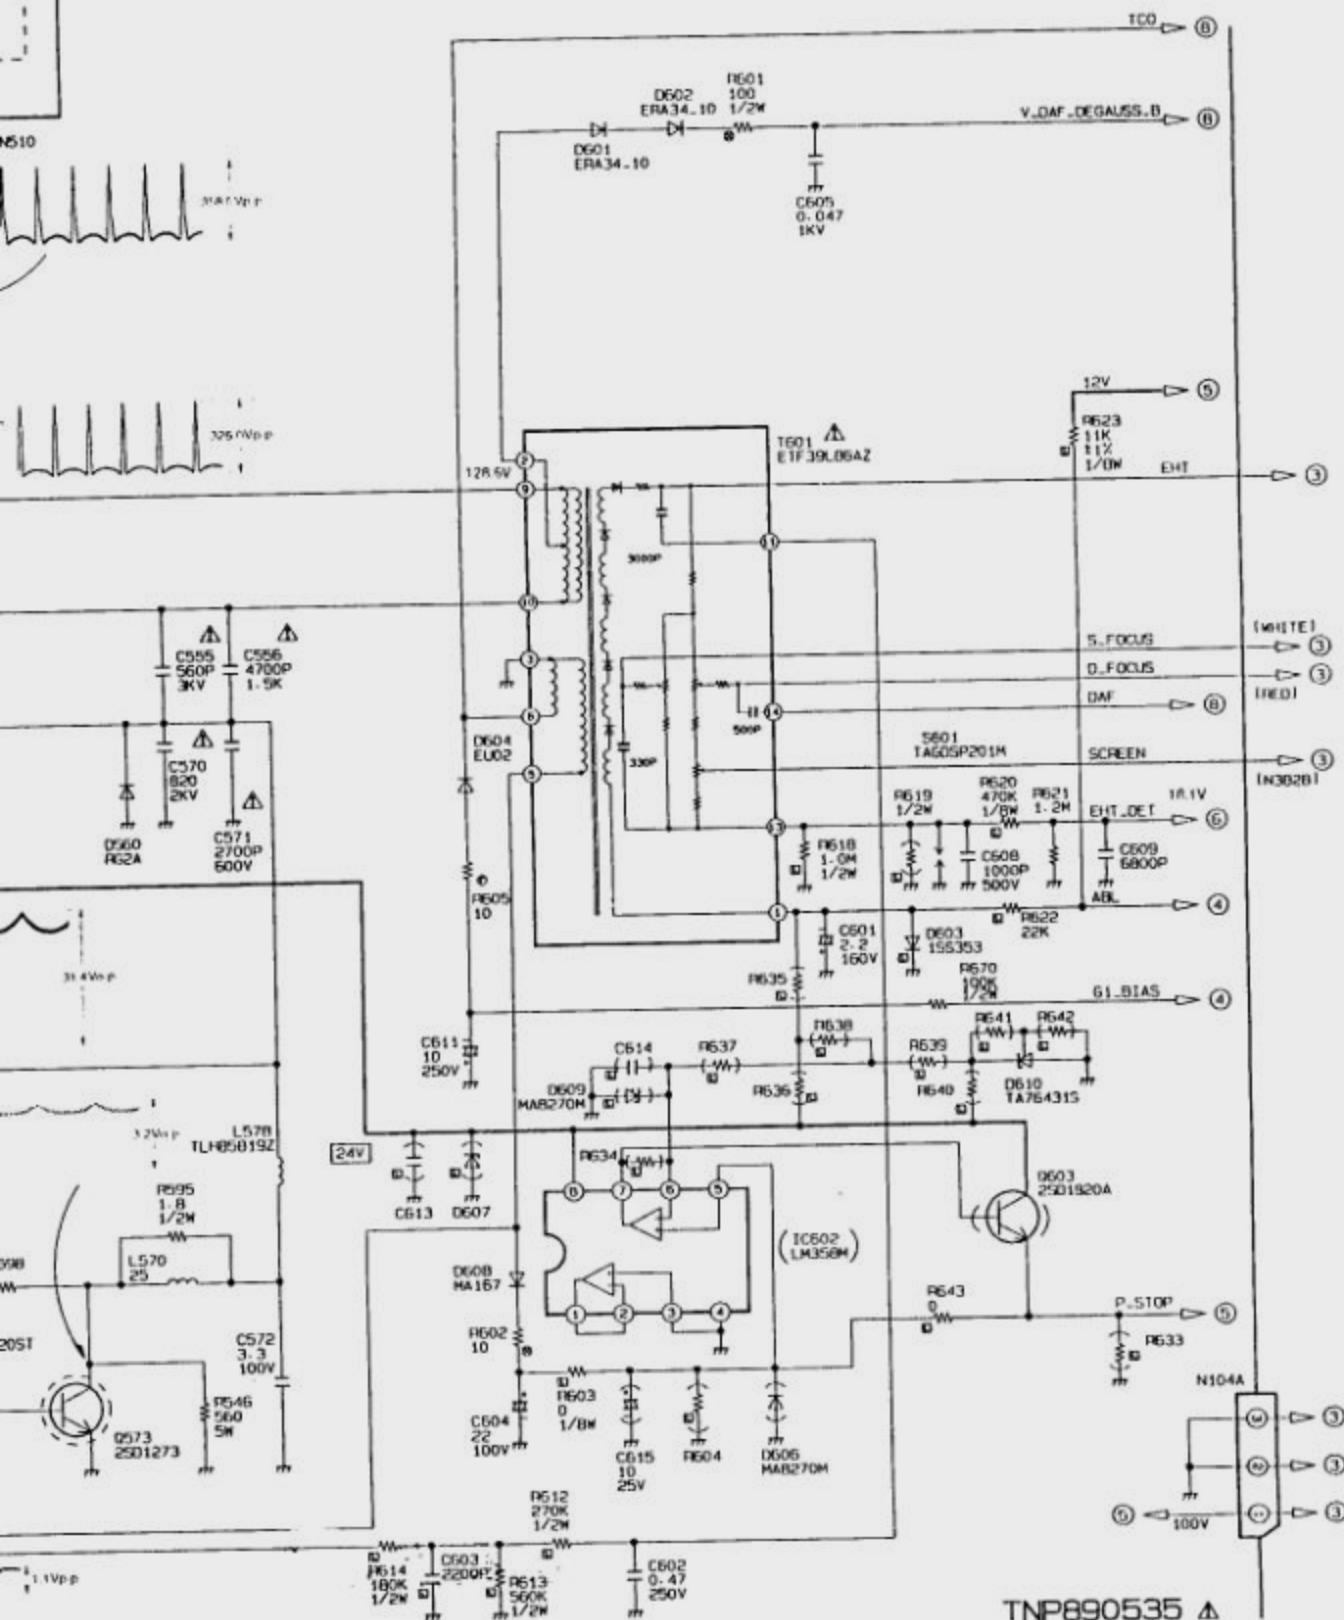


TNP890535 ▲

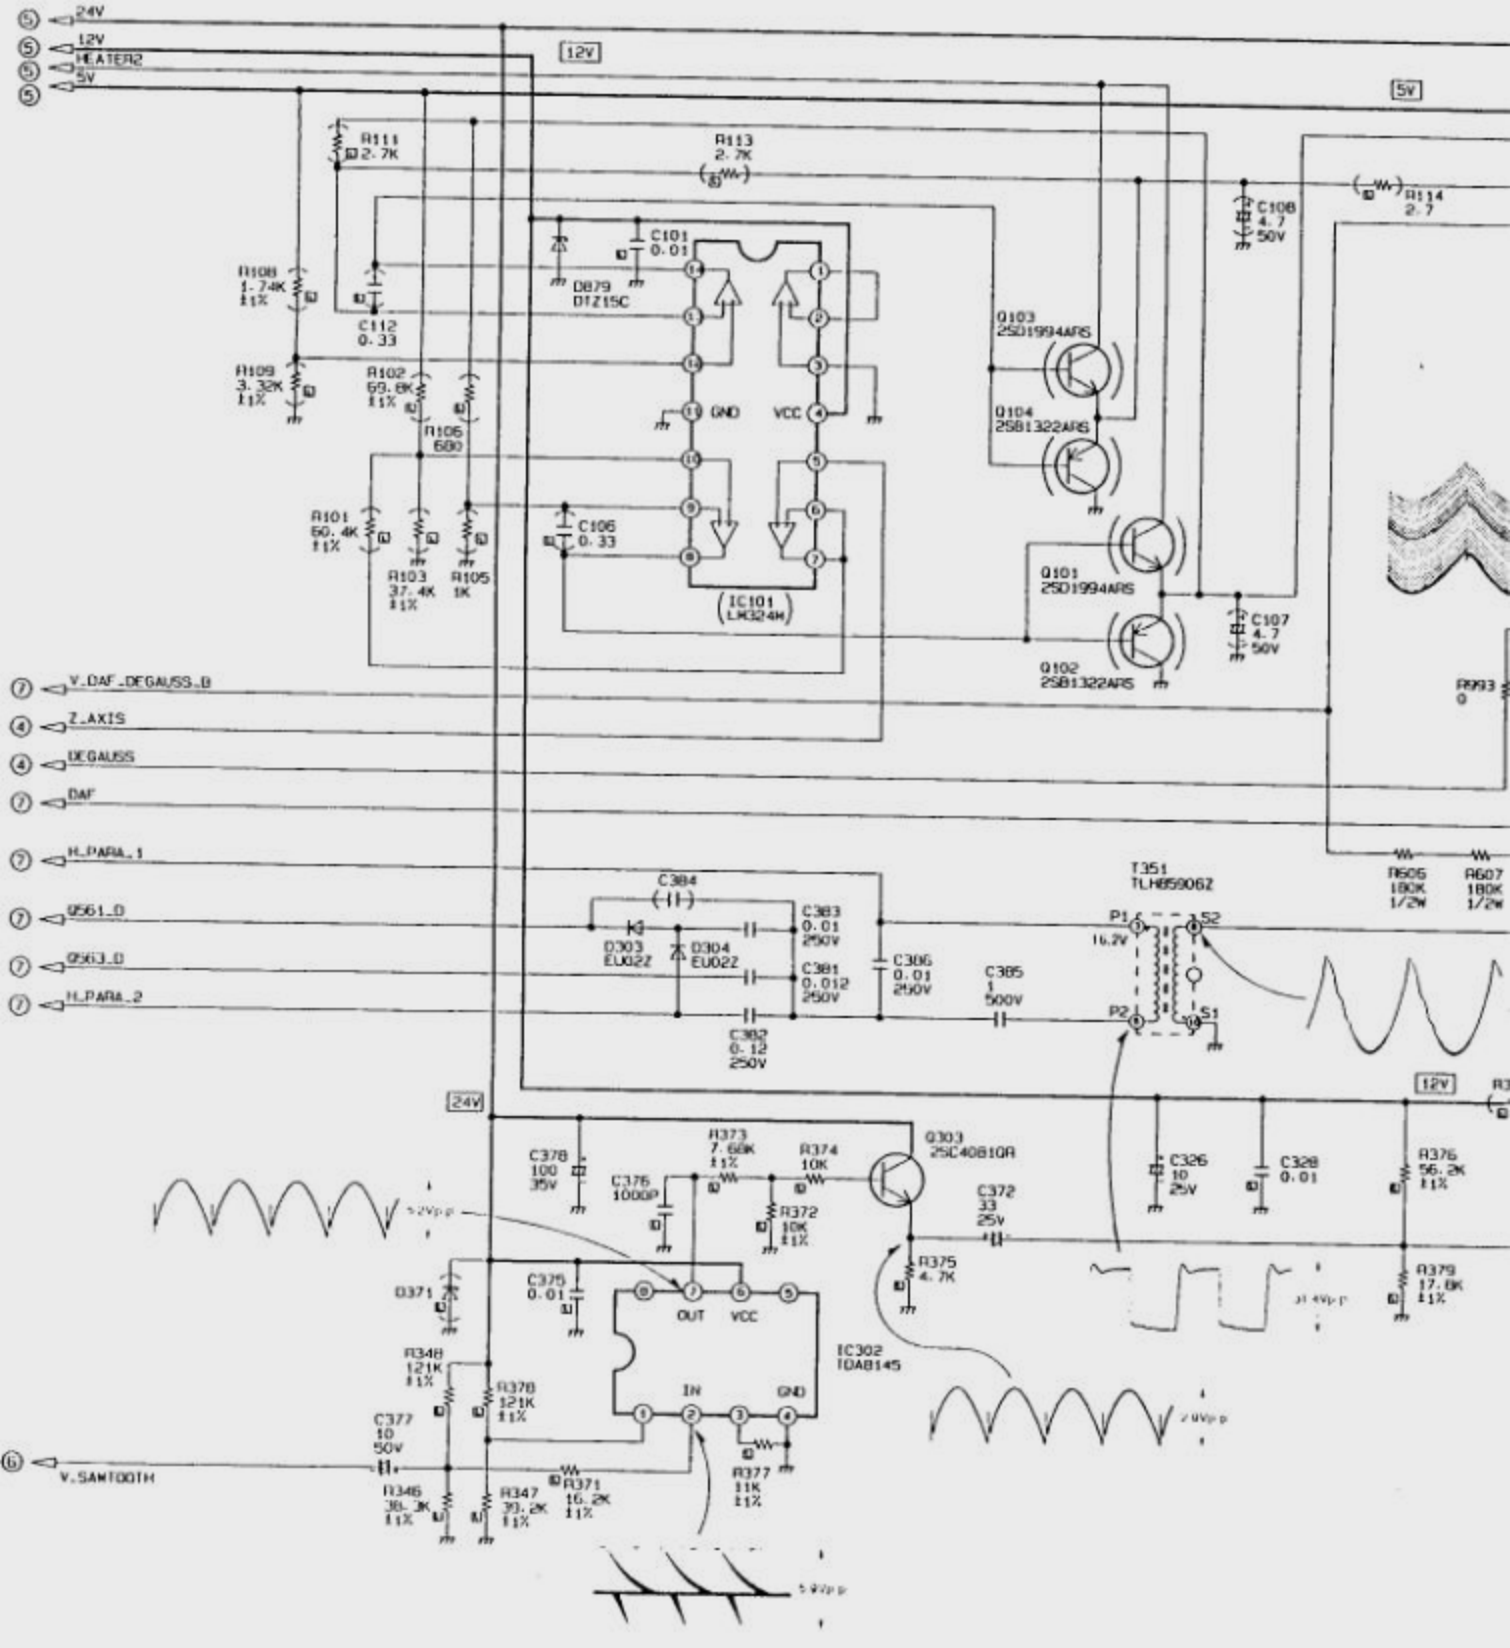

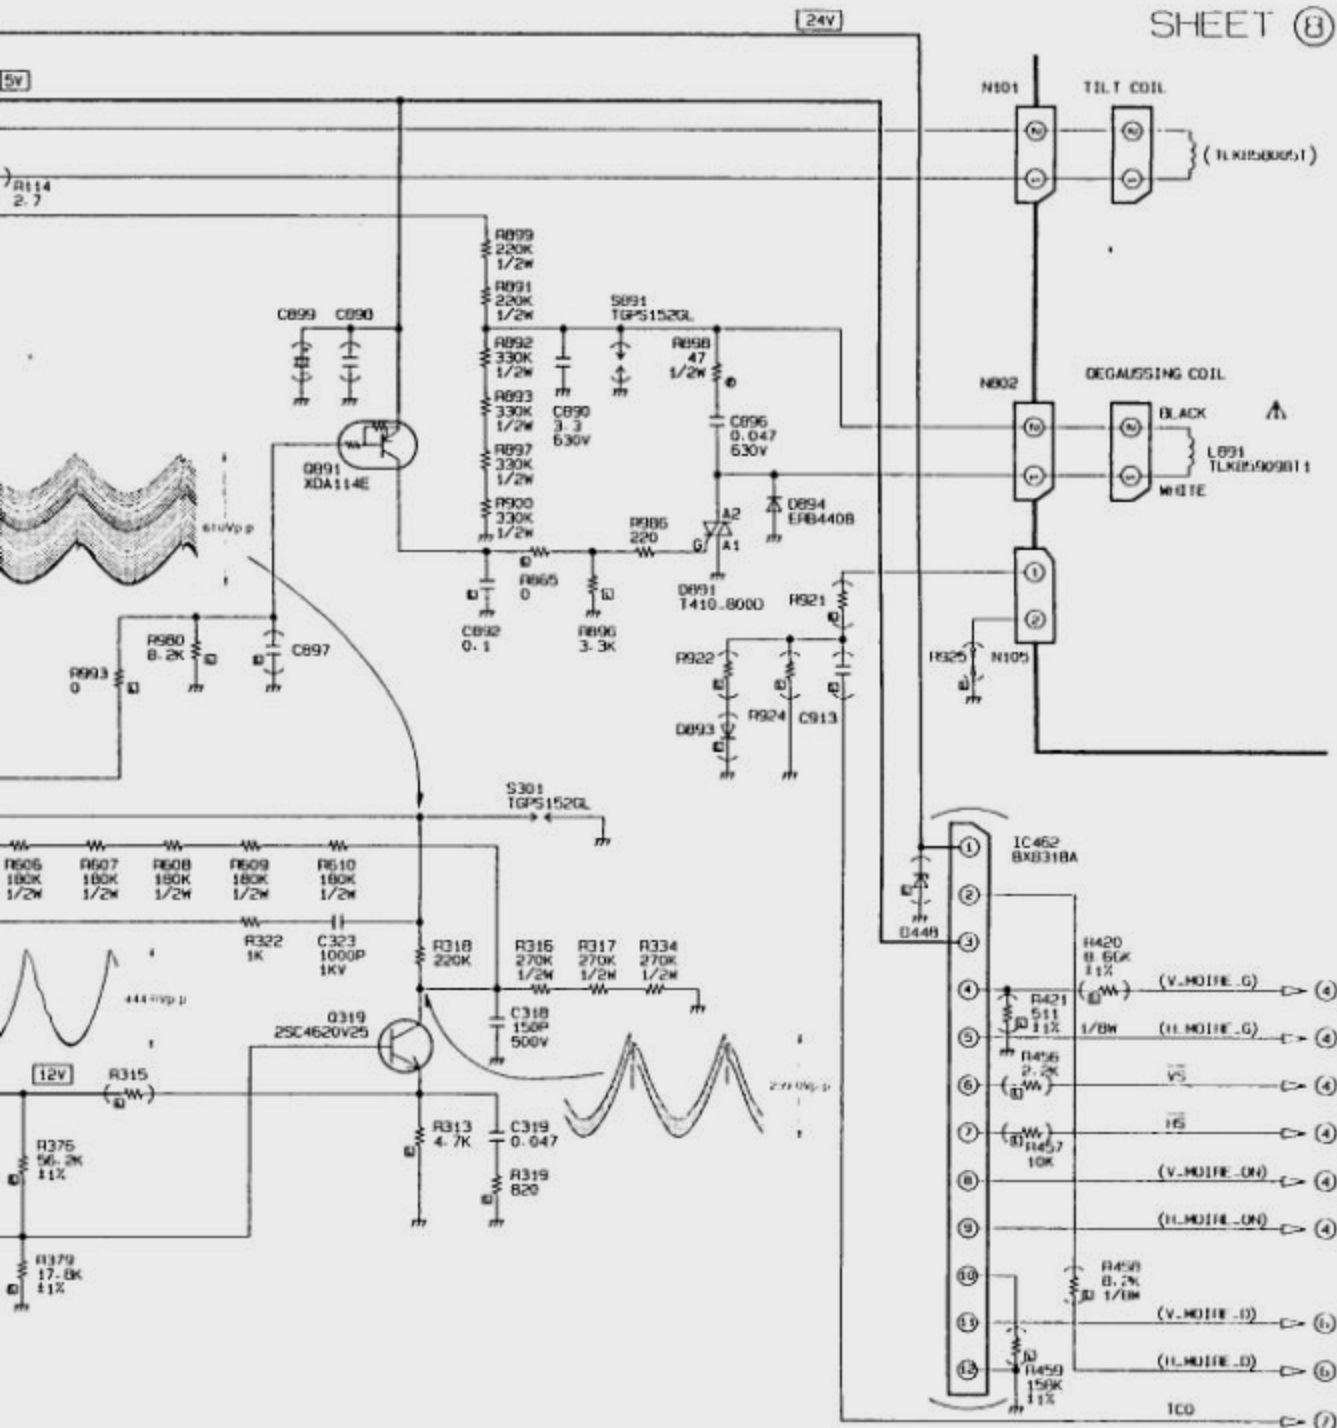

Sense
Capacitor

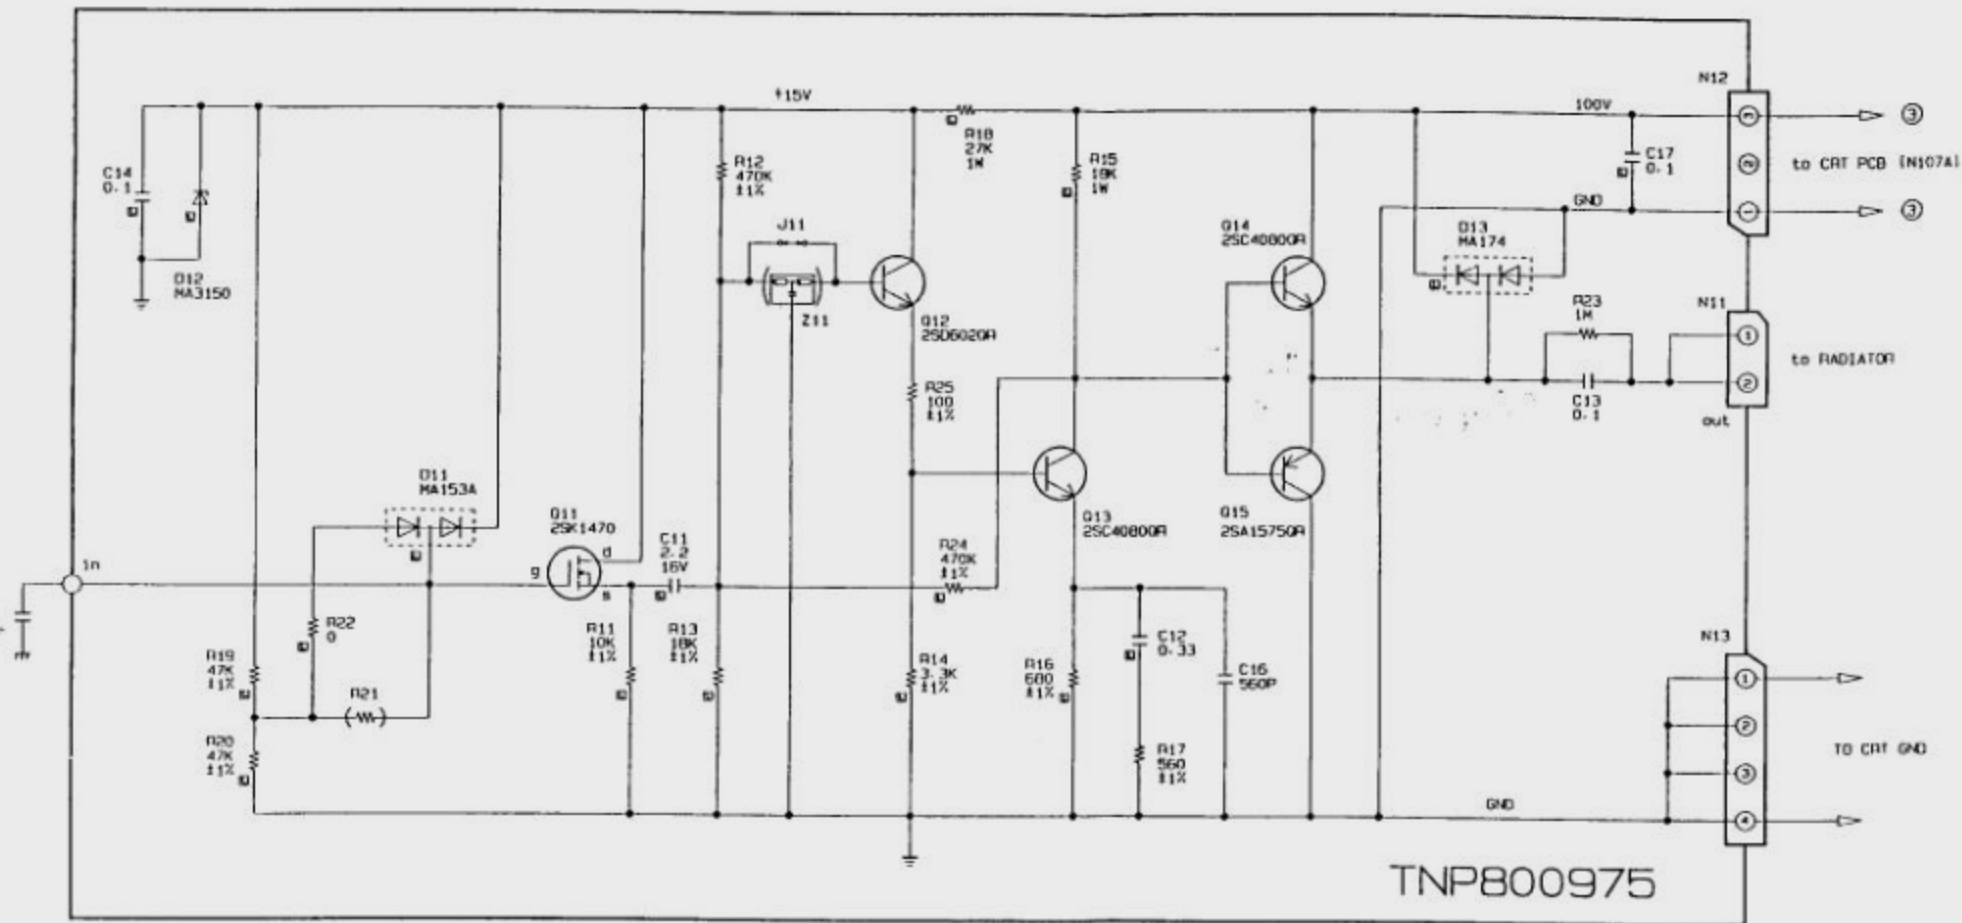

TNP800974

TNP800974X

