





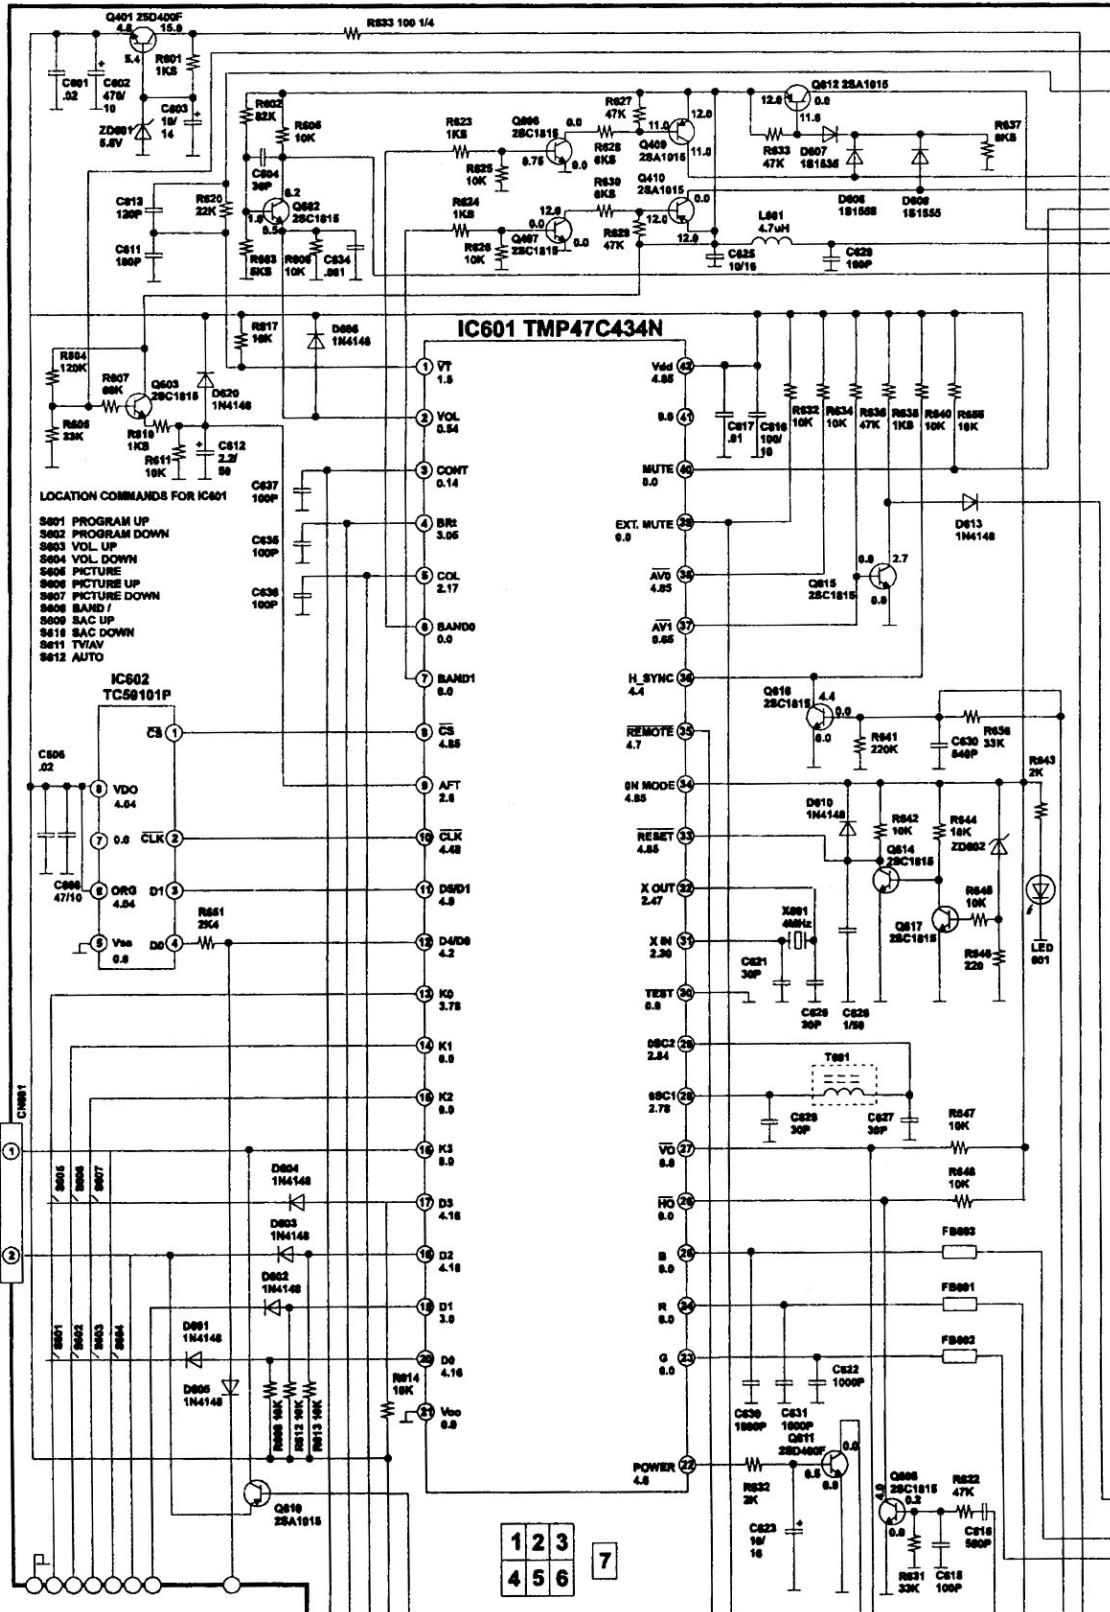

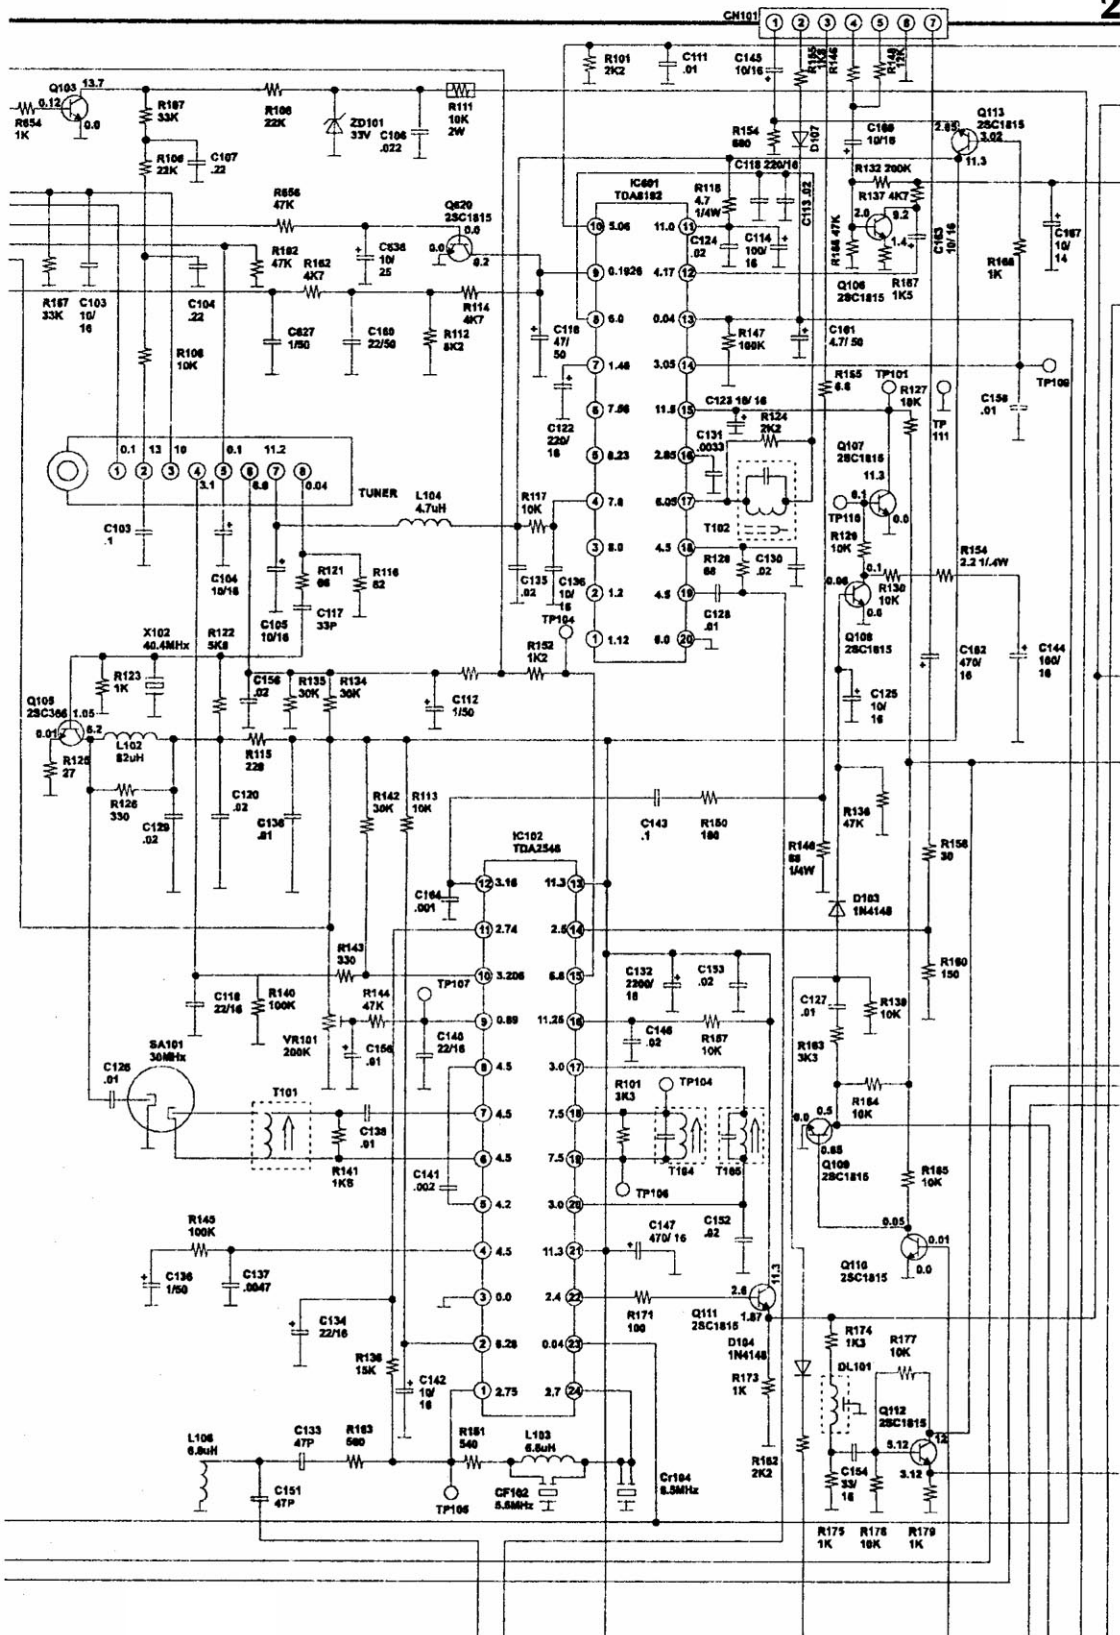

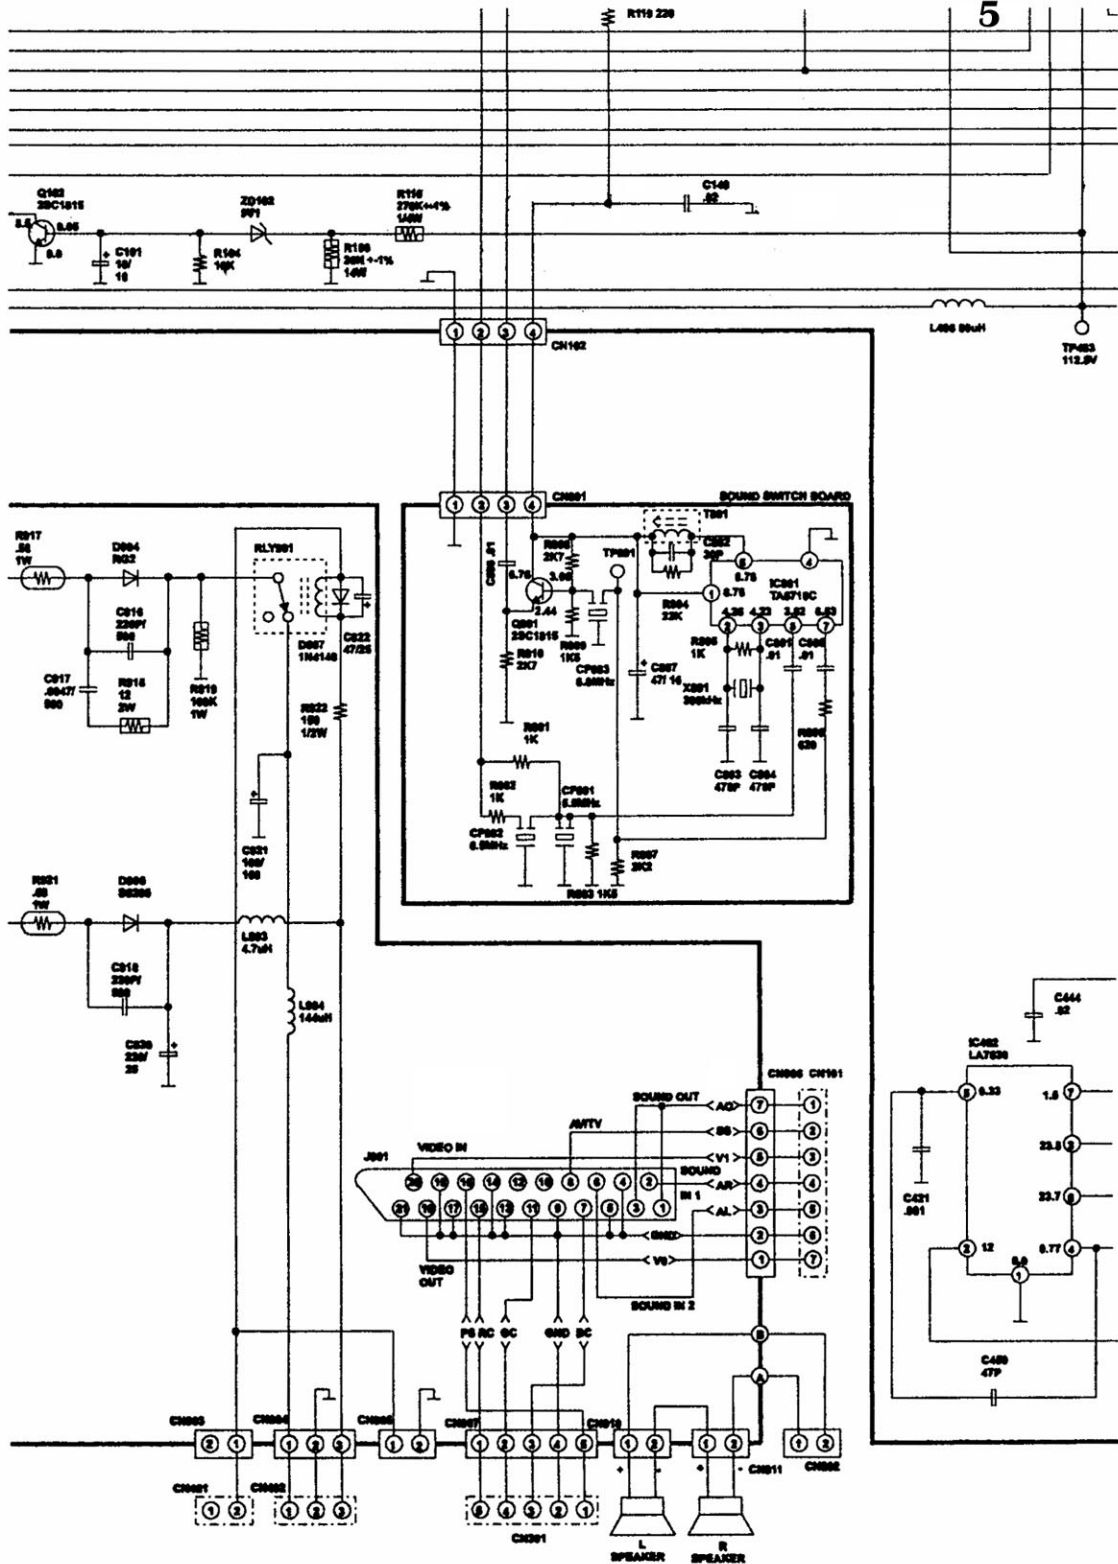

IC302
AN5601K

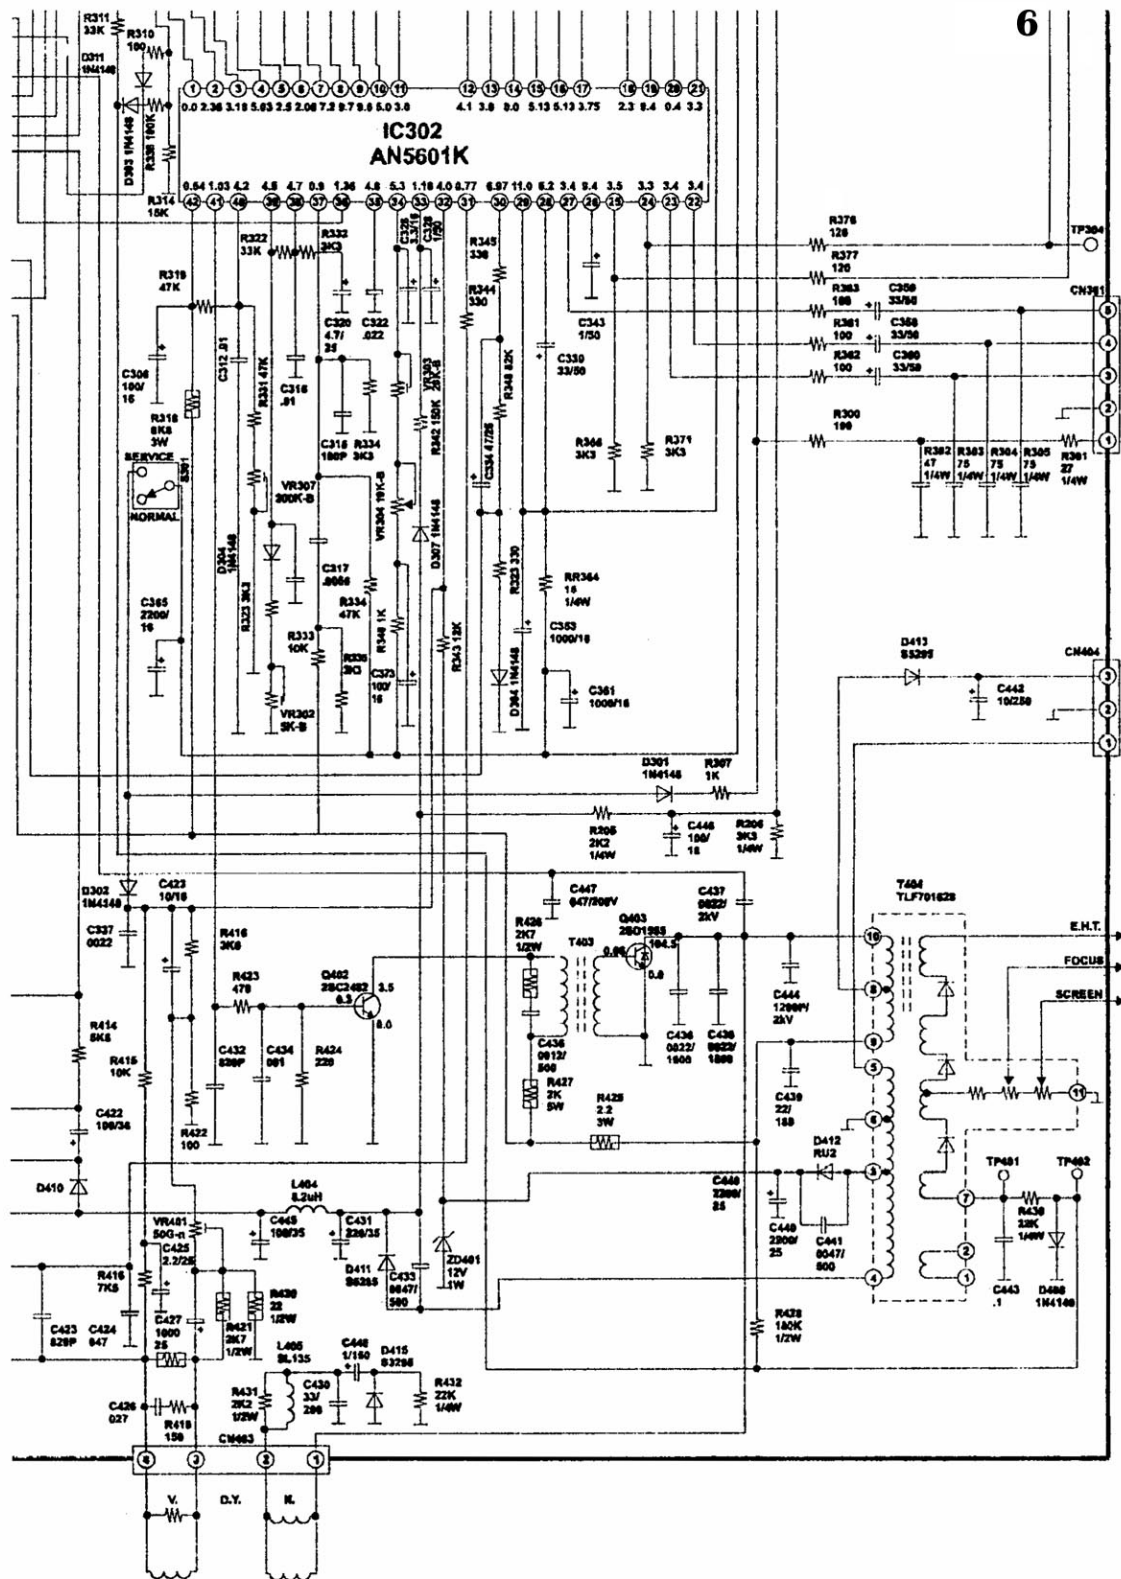

IC701 TC9012F

Q701
28C2901L

R701
2.2

LED701

DC 5V

C703
47

CF701
465kHz

C701
100P

C702
100P

LOCATION COMMANDS

- 1. 1
- 2. 2
- 3. 3
- 4. 4
- 5. 5
- 6. 6
- 7. 7
- 8. 8
- 9. 9
- 10. 0
- 11. -
- 12. -
- 13. -
- 14. -
- 15. -
- 16. -
- 17. CHANNEL UP
- 18. CHANNEL DOWN
- 19. VOLUME UP
- 20. VOLUME DOWN
- 21. STAND BY
- 22. MUTE
- 23. TV/AV
- 24. -
- 25. SLEEP
- 26. RECALL
- 27. -
- 28. -
- 29. (+)
- 30. (-)
- 31. PIC TUBE