





MAIN PWB, CRT SOCKET PWB CIRCUIT DIAGRAMS

TURUTA



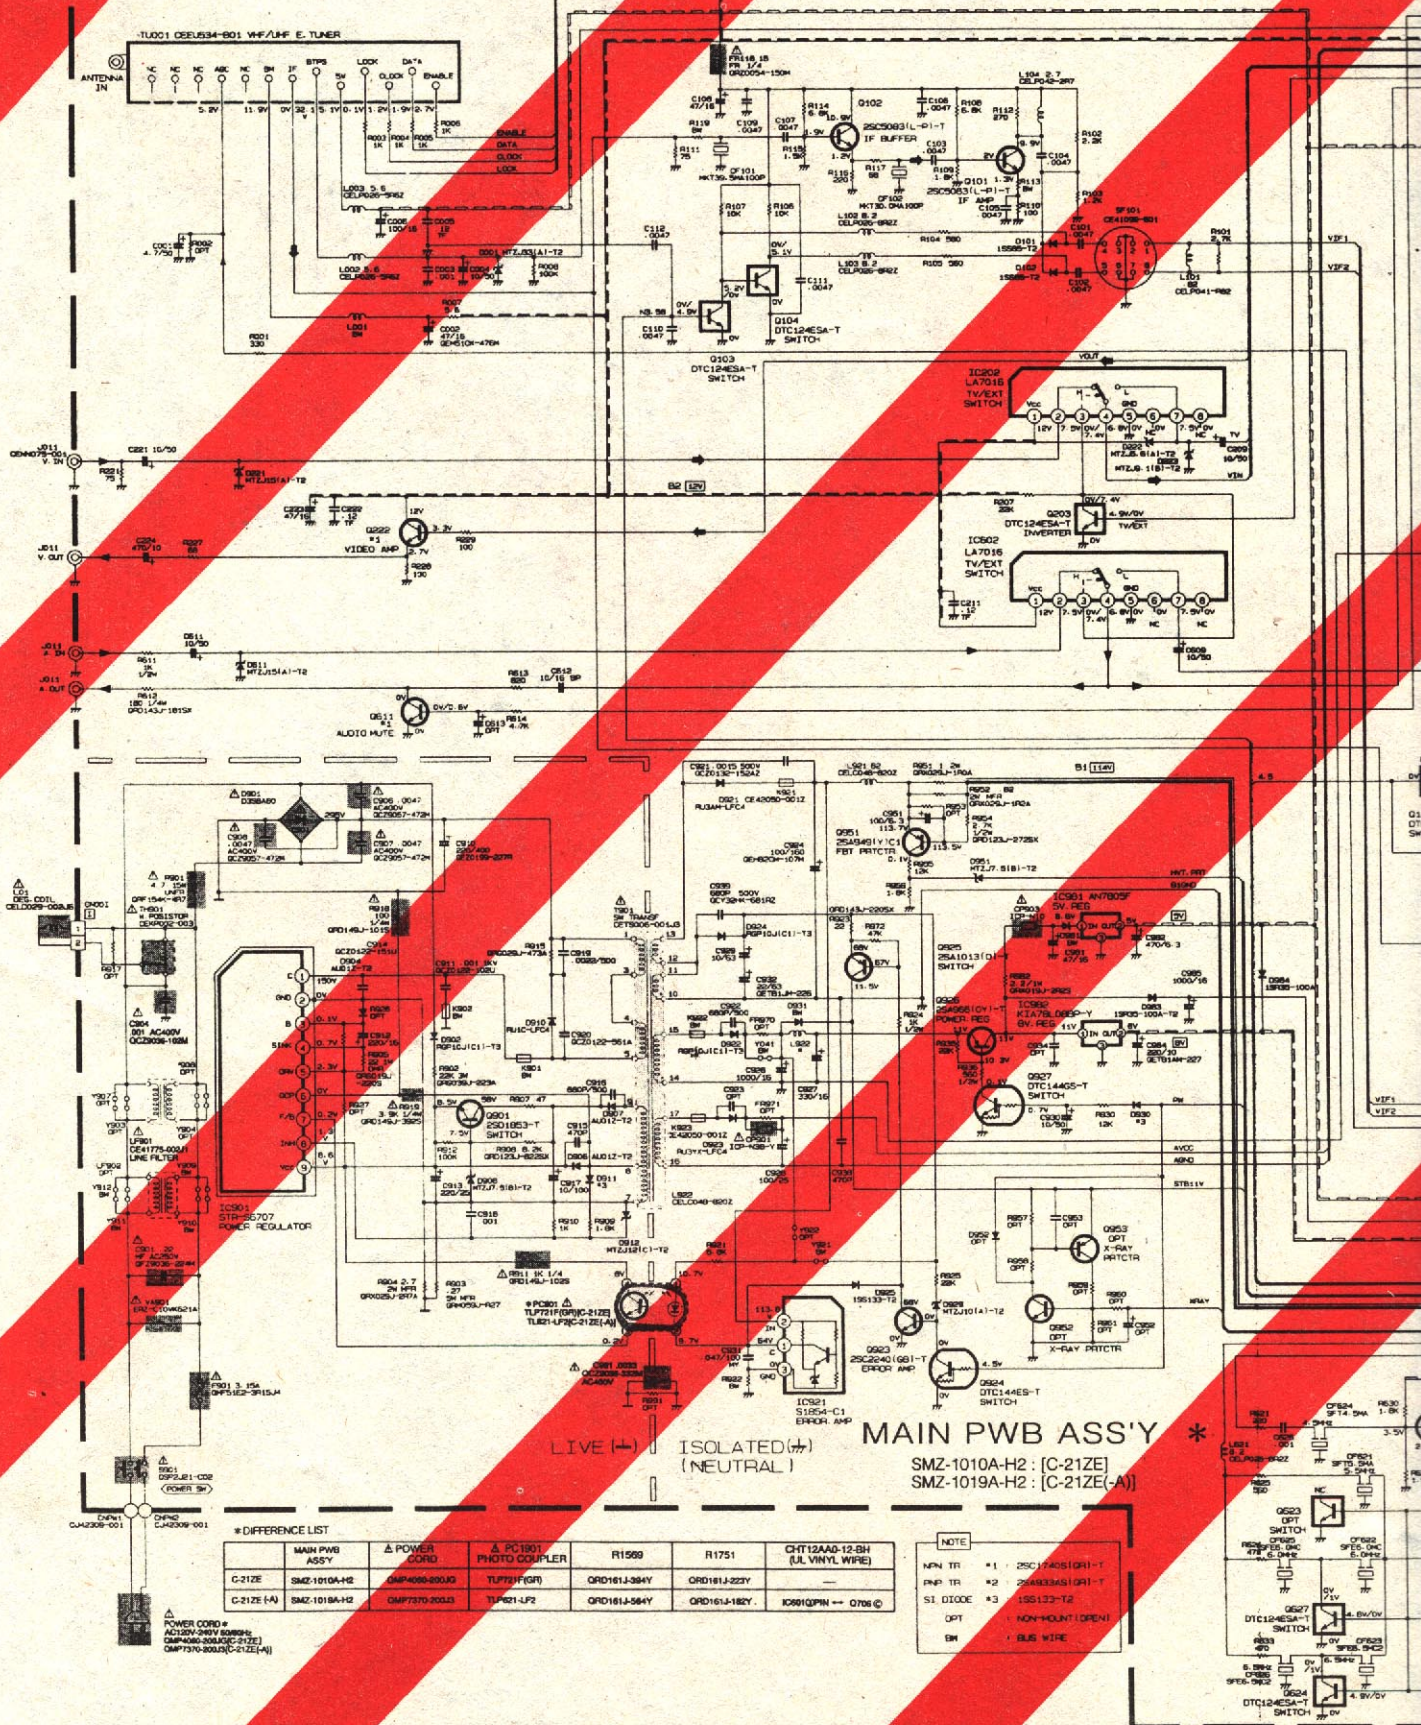

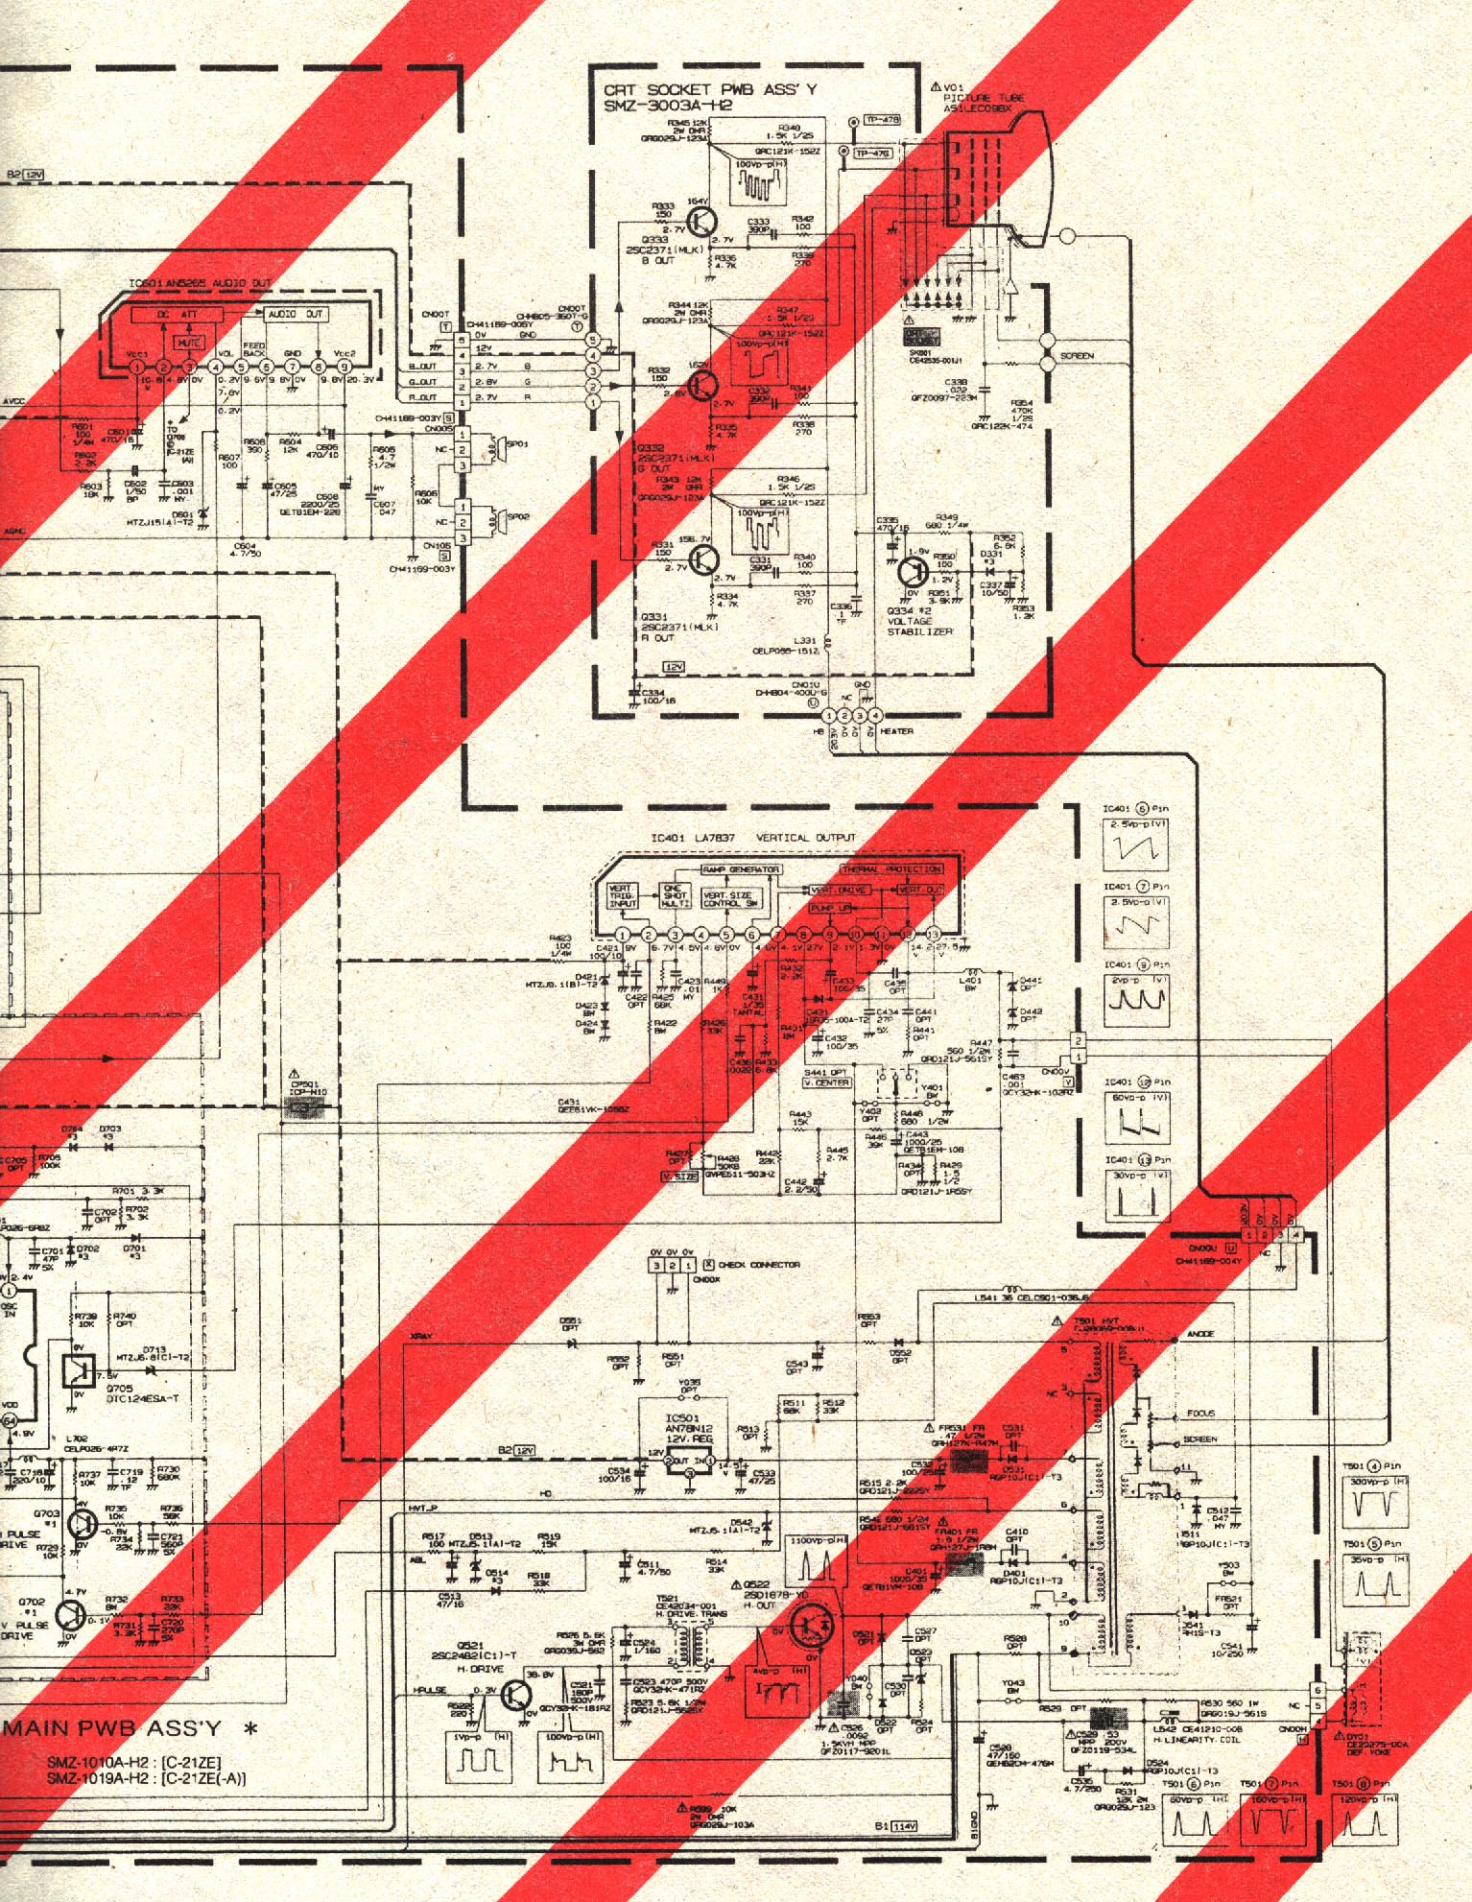

CRT SOCKET PWB ASS'Y
SMZ-3003A-H2


V01
PICTURE TUBE
ASSEMBLY

TO501AN5205 AUDIO OUT

IC401 LA7837 VERTICAL OUTPUT

MAIN PWB ASS'Y *

SMZ-1010A-H2 : [C-21ZE]
SMZ-1019A-H2 : [C-21ZE(A)]

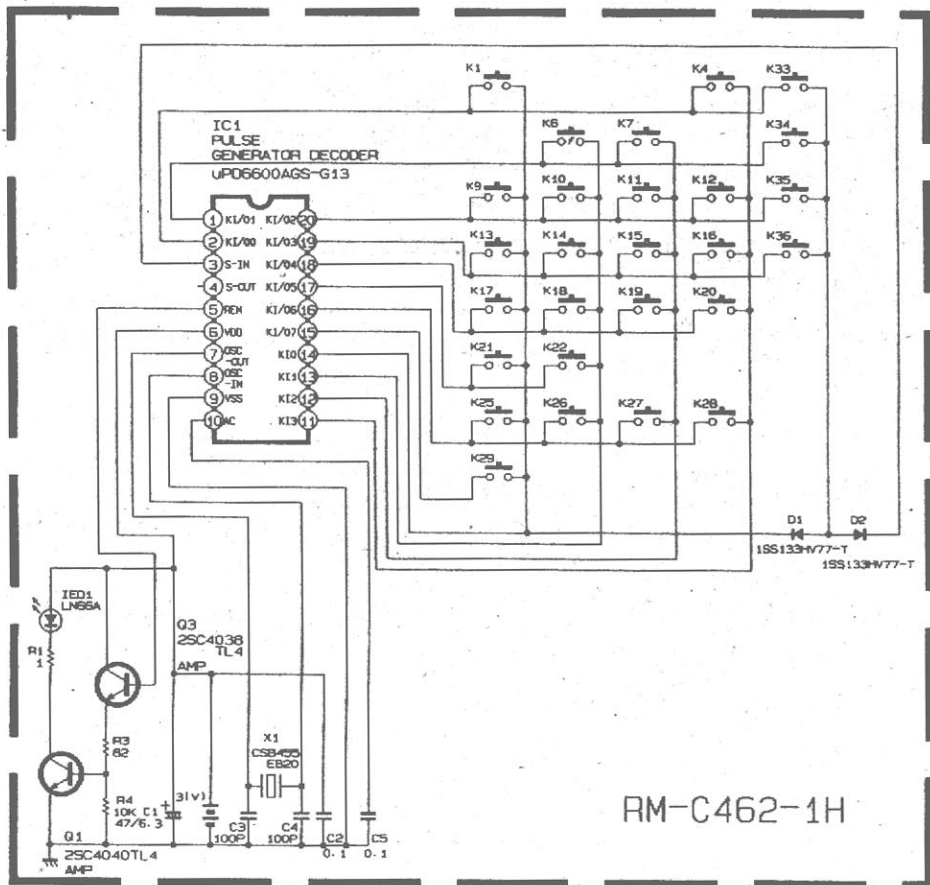

KEY NO.	FUNCTION	KEY NO.	FUNCTION	KEY NO.	FUNCTION	KEY NO.	FUNCTION
1	POWER	10	2	19	7	28	PICTURE MODE
2		11	1	20	OFF TIMER	29	MUTE
3		12	DISPLAY	21	- / - -	30	
4	TV/VIDEO	13	6	22	0	31	
5		14	5	23		32	
6	SOUND SYSTEM	15	4	24		33	VOLUME +
7	COLOUR SYSTEM	16	CH PRESET	25	+ (FUNCTION)	34	VOLUME -
8		17	9	26	PICTURE ADJUST	35	CHANNEL +
9	3	18	8	27	- (FUNCTION)	36	CHANNEL -