




Gesamtschaltplan Netz-Chassis / General Circuit Diagram Mains Chassis

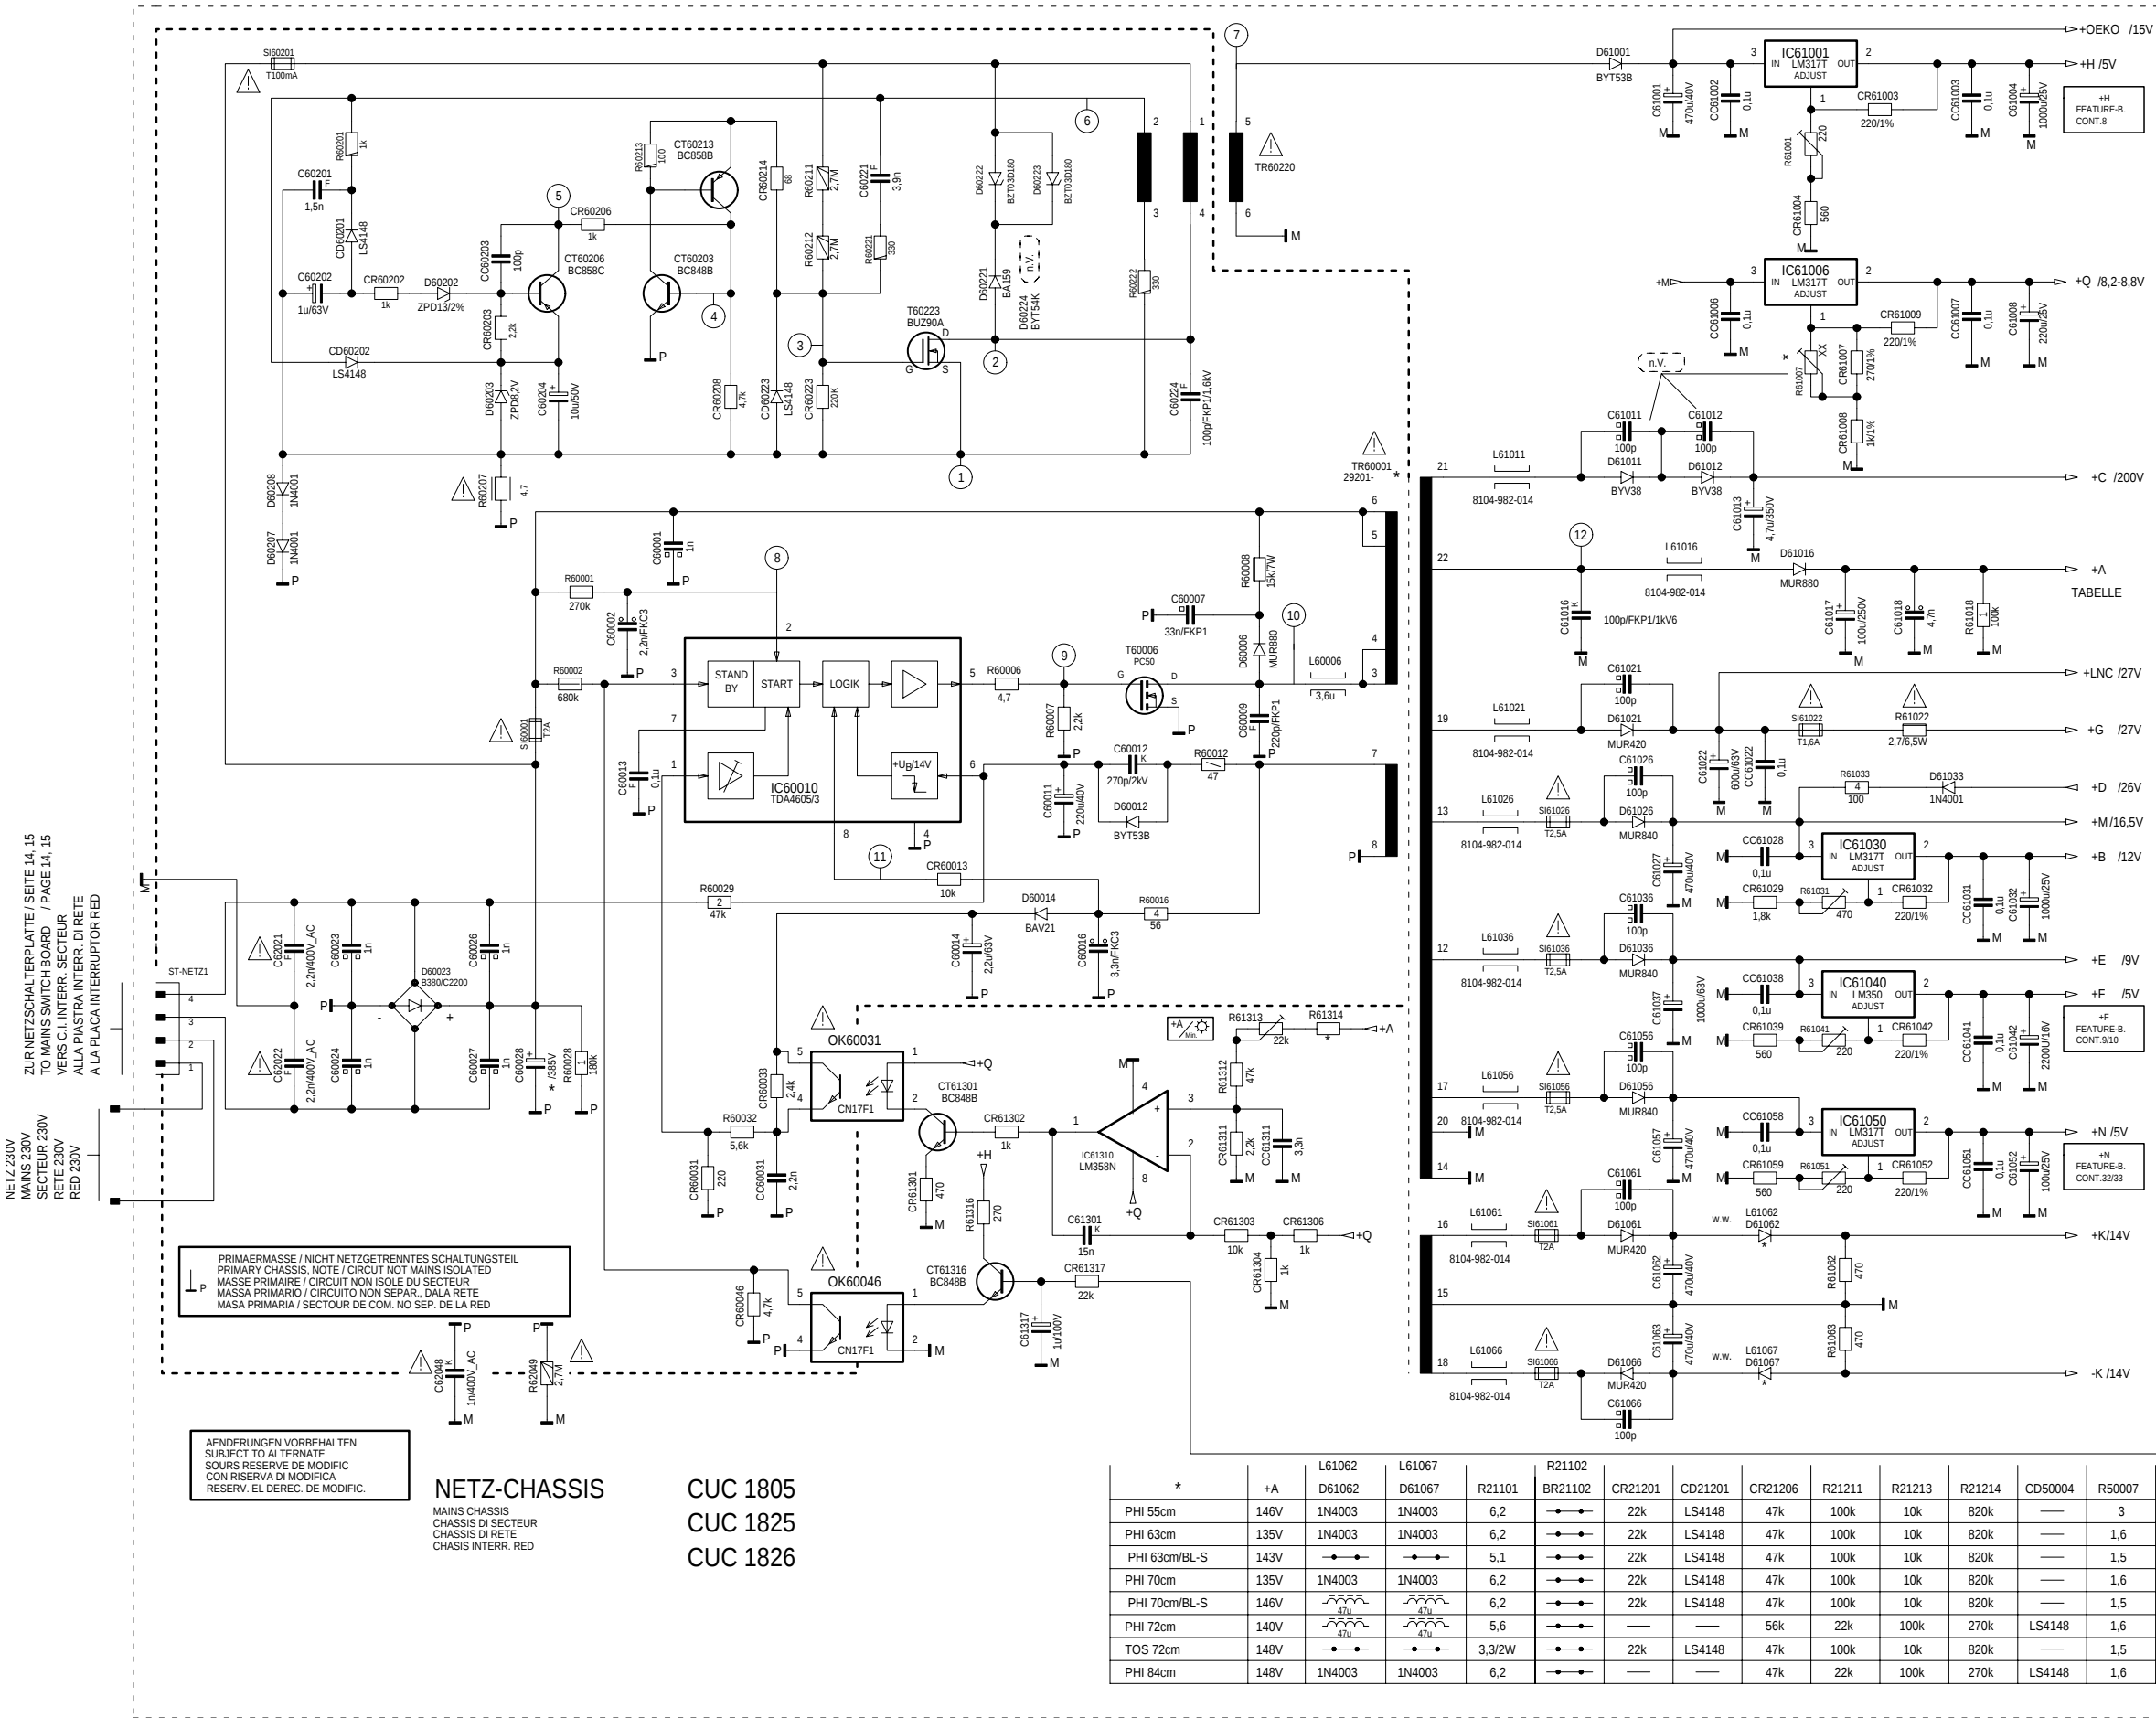


ZUM COLOR CHASSIS / SEITE 9... 12
TO COLOUR CHASSIS / PAGE 9... 12
VERS COLOUR CHASSIS
ALLA CHASSIS COLORE
A LA CHASSIS COLOR

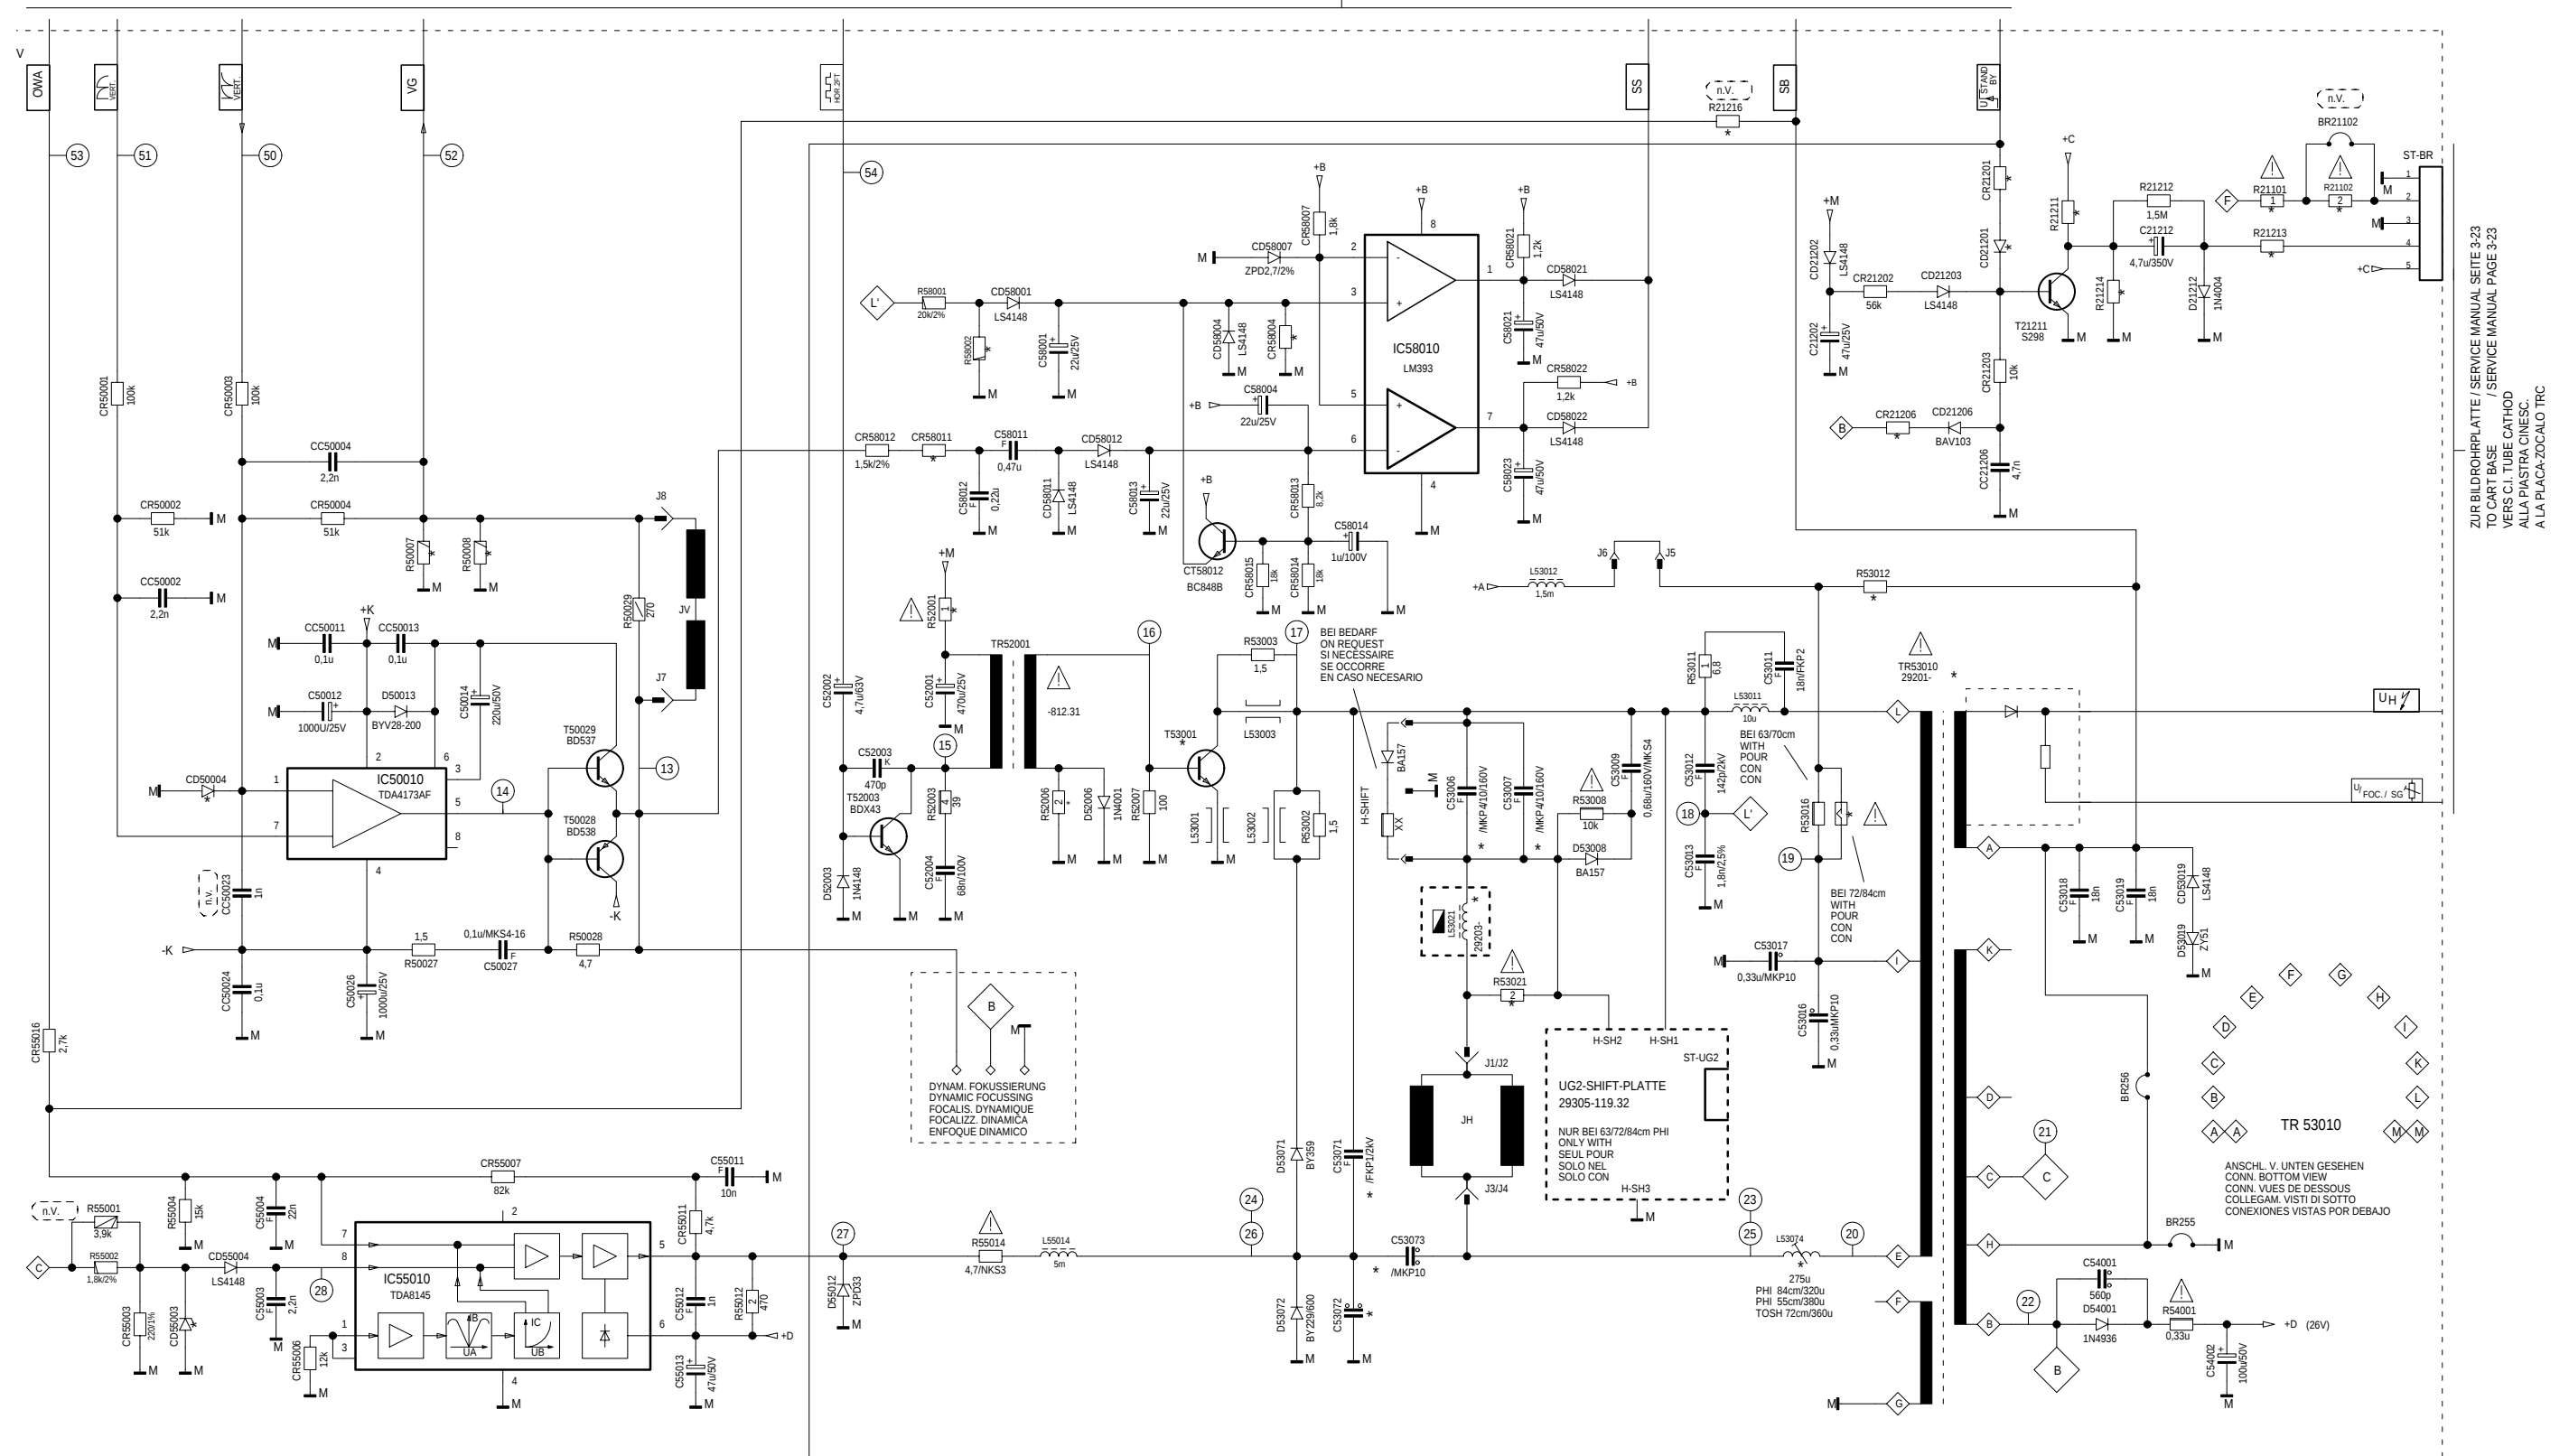


R50008	R52006	T53001	C53006	C53007	TR53010	BR255	BR256	R53012	R53016	R53021	C53071	C53072	C53073	L53074	R58002	CR58004	CR58011	TR60001	R52001	L53021	CD55003	R61314	C60028
3	3,3	25C4542	0,25u	0,25u	-680.02	—	—	—	6,8/11W	390	6,8n	27n	0,47u	859.65	3k/2%	13k/2%	1,5k/2%	-569.97	33/2W	-119	ZPD3.9V/2%	10k	220u
1,6	1,8	25C4542	0,3u	0,3u	-033.01	—	—	1M/1%	6,8/11W	220	9n	20n	0,47u	859.55	3,9k/2%	13k/2%	1,5k/2%	-566.97	4,7/1W	-122	ZPD3.9V/2%	10k	300u
1,5	1	25C4288A	0,3u	0,3u	-680.02	—	—	560k/1%	6,8/7W/RSI	220	11n	27n	0,47u	859.63	3,3k/2%	13k/2%	1,2k/2%	-573.97	8,2/1W	-122	ZPD3.9V/2%	10k	300u
1,6	1,5	25C4542	0,41u	0,41u	-033.01	—	—	560k/1%	6,8/11W	220	10n	20n	0,47u	859.55	3,9k/2%	13k/2%	1,5k/2%	-566.97	4,7/1W	-122	ZPD3.9V/2%	10k	300u
1,5	1	25C4288A	0,41u	0,41u	-680.01	—	—	560k/1%	6,8/7W/RSI	390	13n	27n	0,47u	859.64	3,6k/1%	12k/2%	1,2k/2%	-569.97	4,7/1W	-122	ZPD3.9V/2%	10k	300u
1,6	1	25C4288A	0,41u	0,41u	-680.01	—	—	560k/1%	6,8/7W/RSI	390	13n	27n	0,47u	859.55	3,9k/2%	12k/2%	1,8k/2%	-568.97	4,7/1W	-122	ZPD3.9V/2%	10k	300u
1,5	1	25C4288A	0,25u	0,25u	-680.01	—	—	560k/1%	6,8/7W/RSI	390	13n	27n	0,68u	859.64	3k/2%	13k/2%	3,3k/2%	-568.97	4,7/1W	-122	ZPD4.3V/2%	15k	300u
1,6	1	25C4288A	0,41u	0,3u	-680.02	—	—	560k/1%	6,8/7W/RSI	220	11,5n	27n	0,68u	859.63	3,3k/2%	12k/2%	1,5k/2%	-569.97	4,7/1W	-122	ZPD3.9V/2%	15k	300u

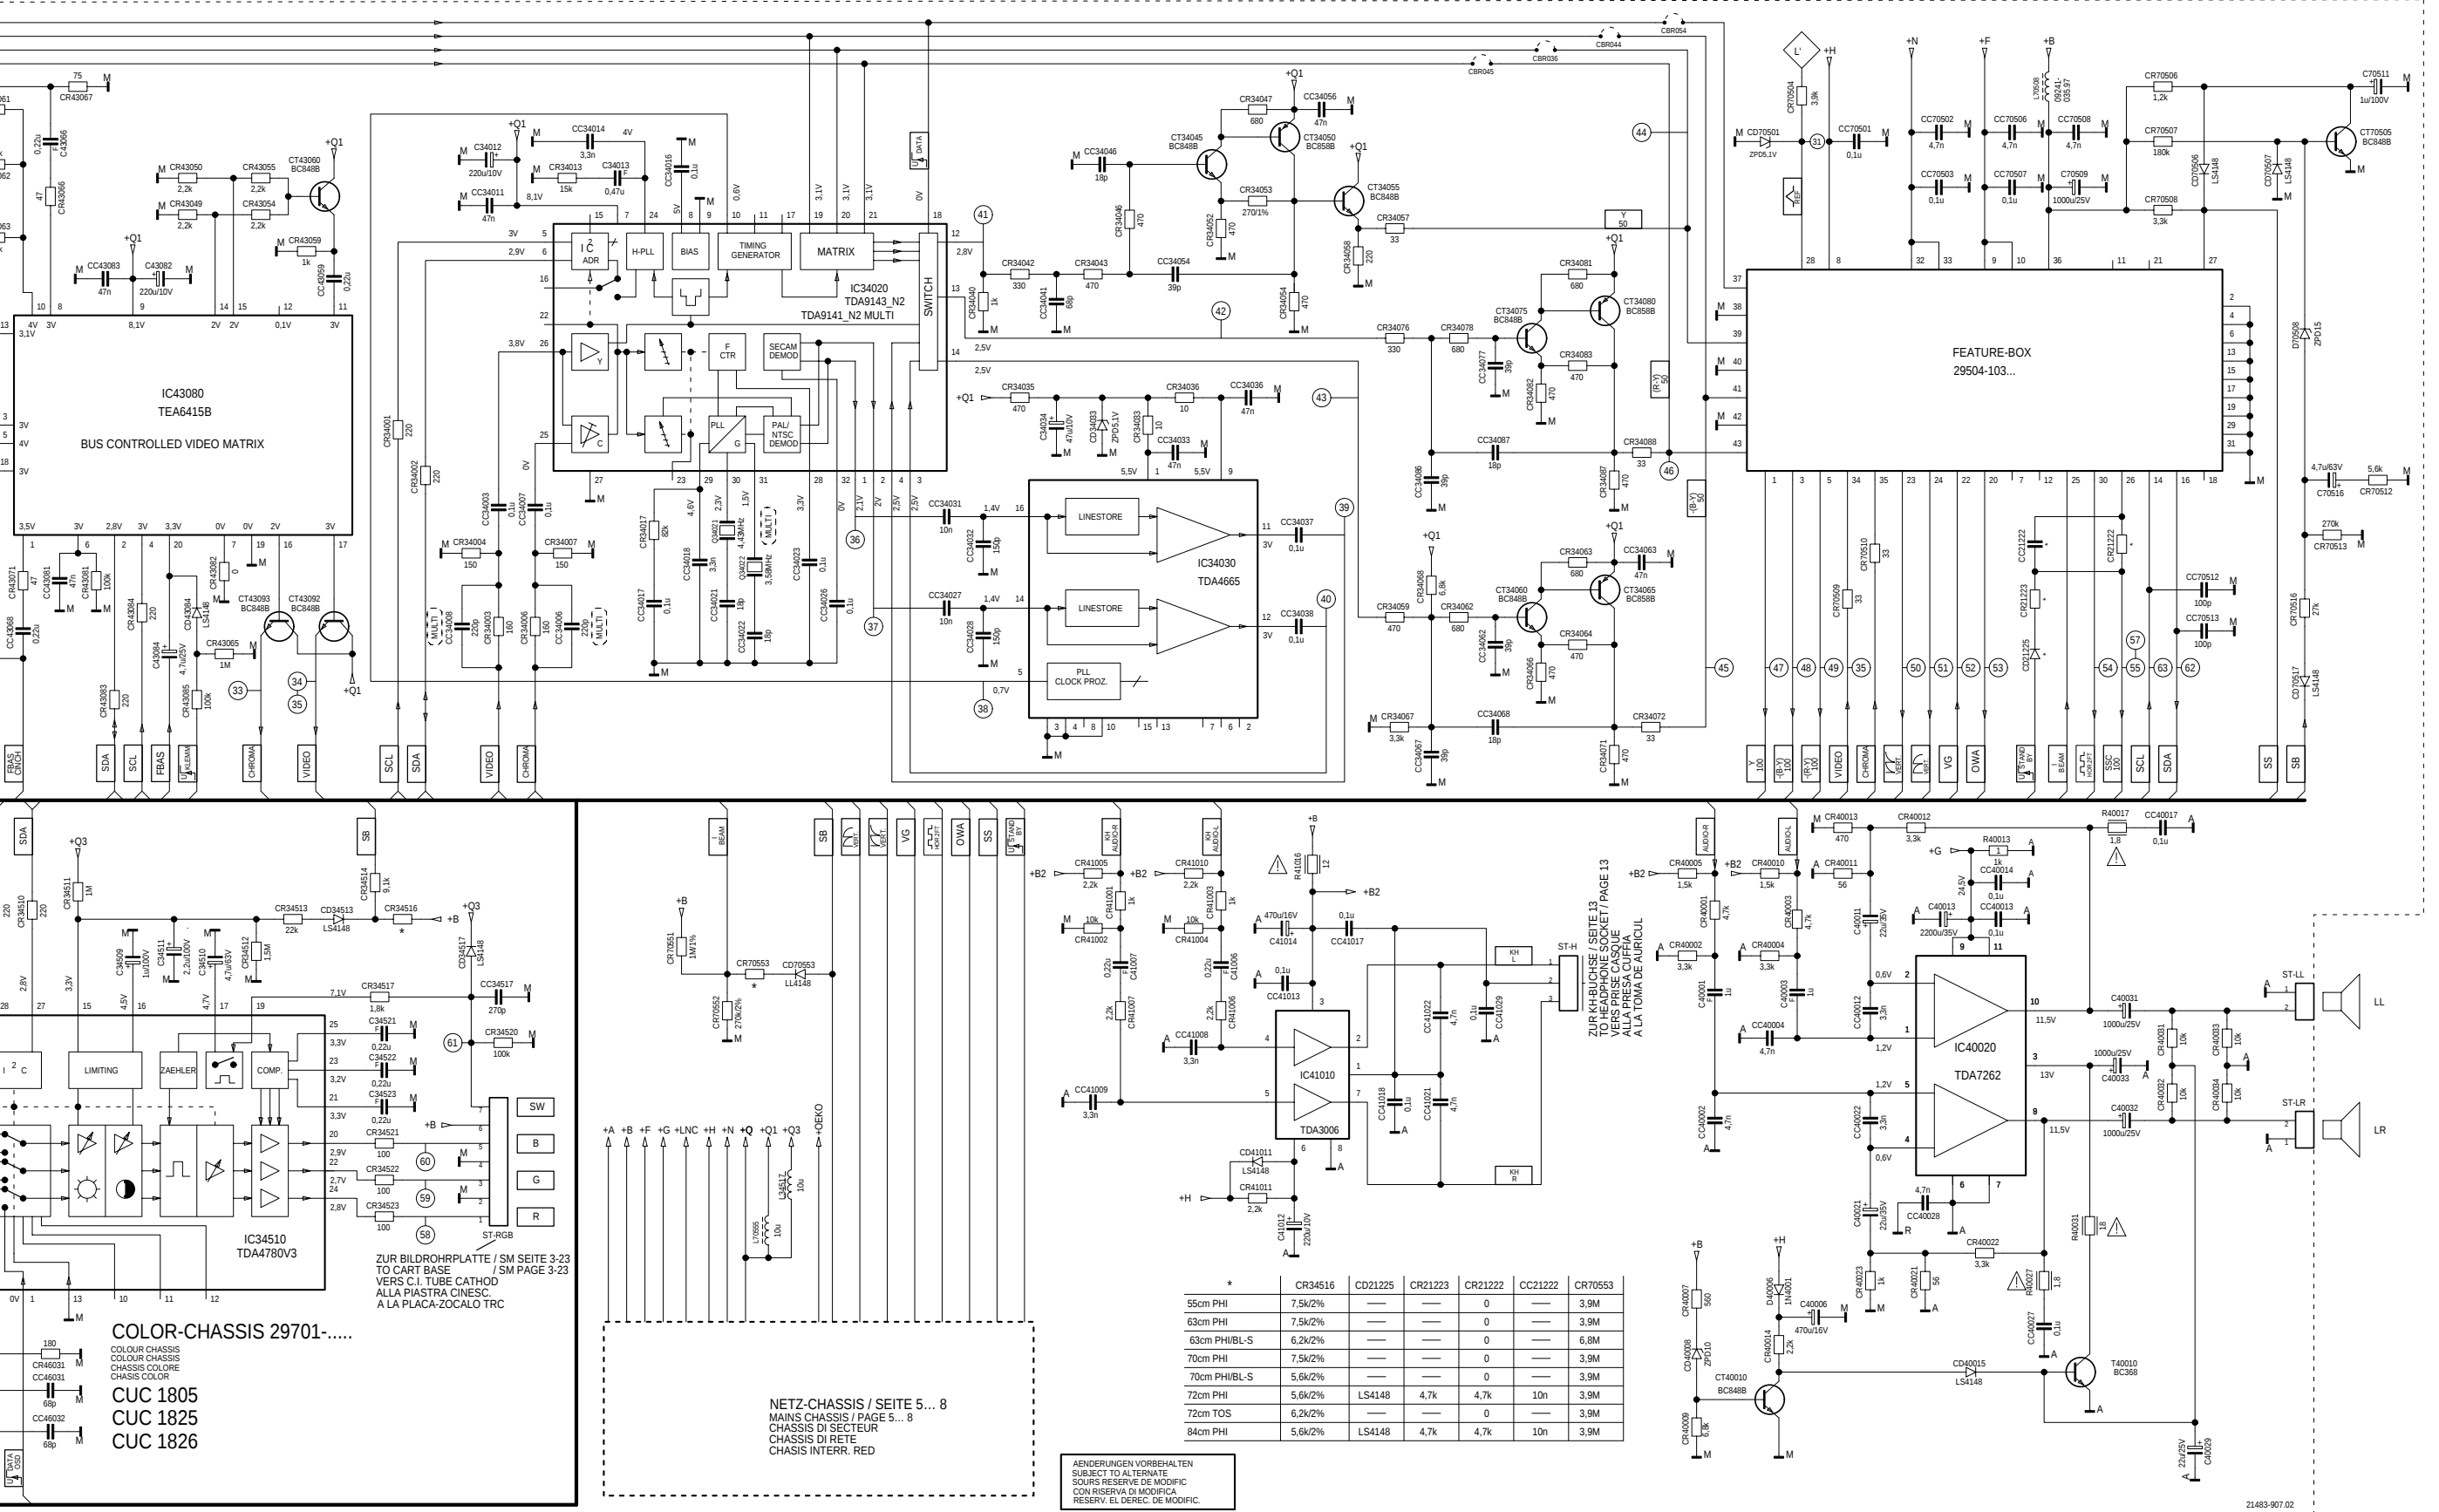


Bedieneinheit / Control Unit 29501-082.52

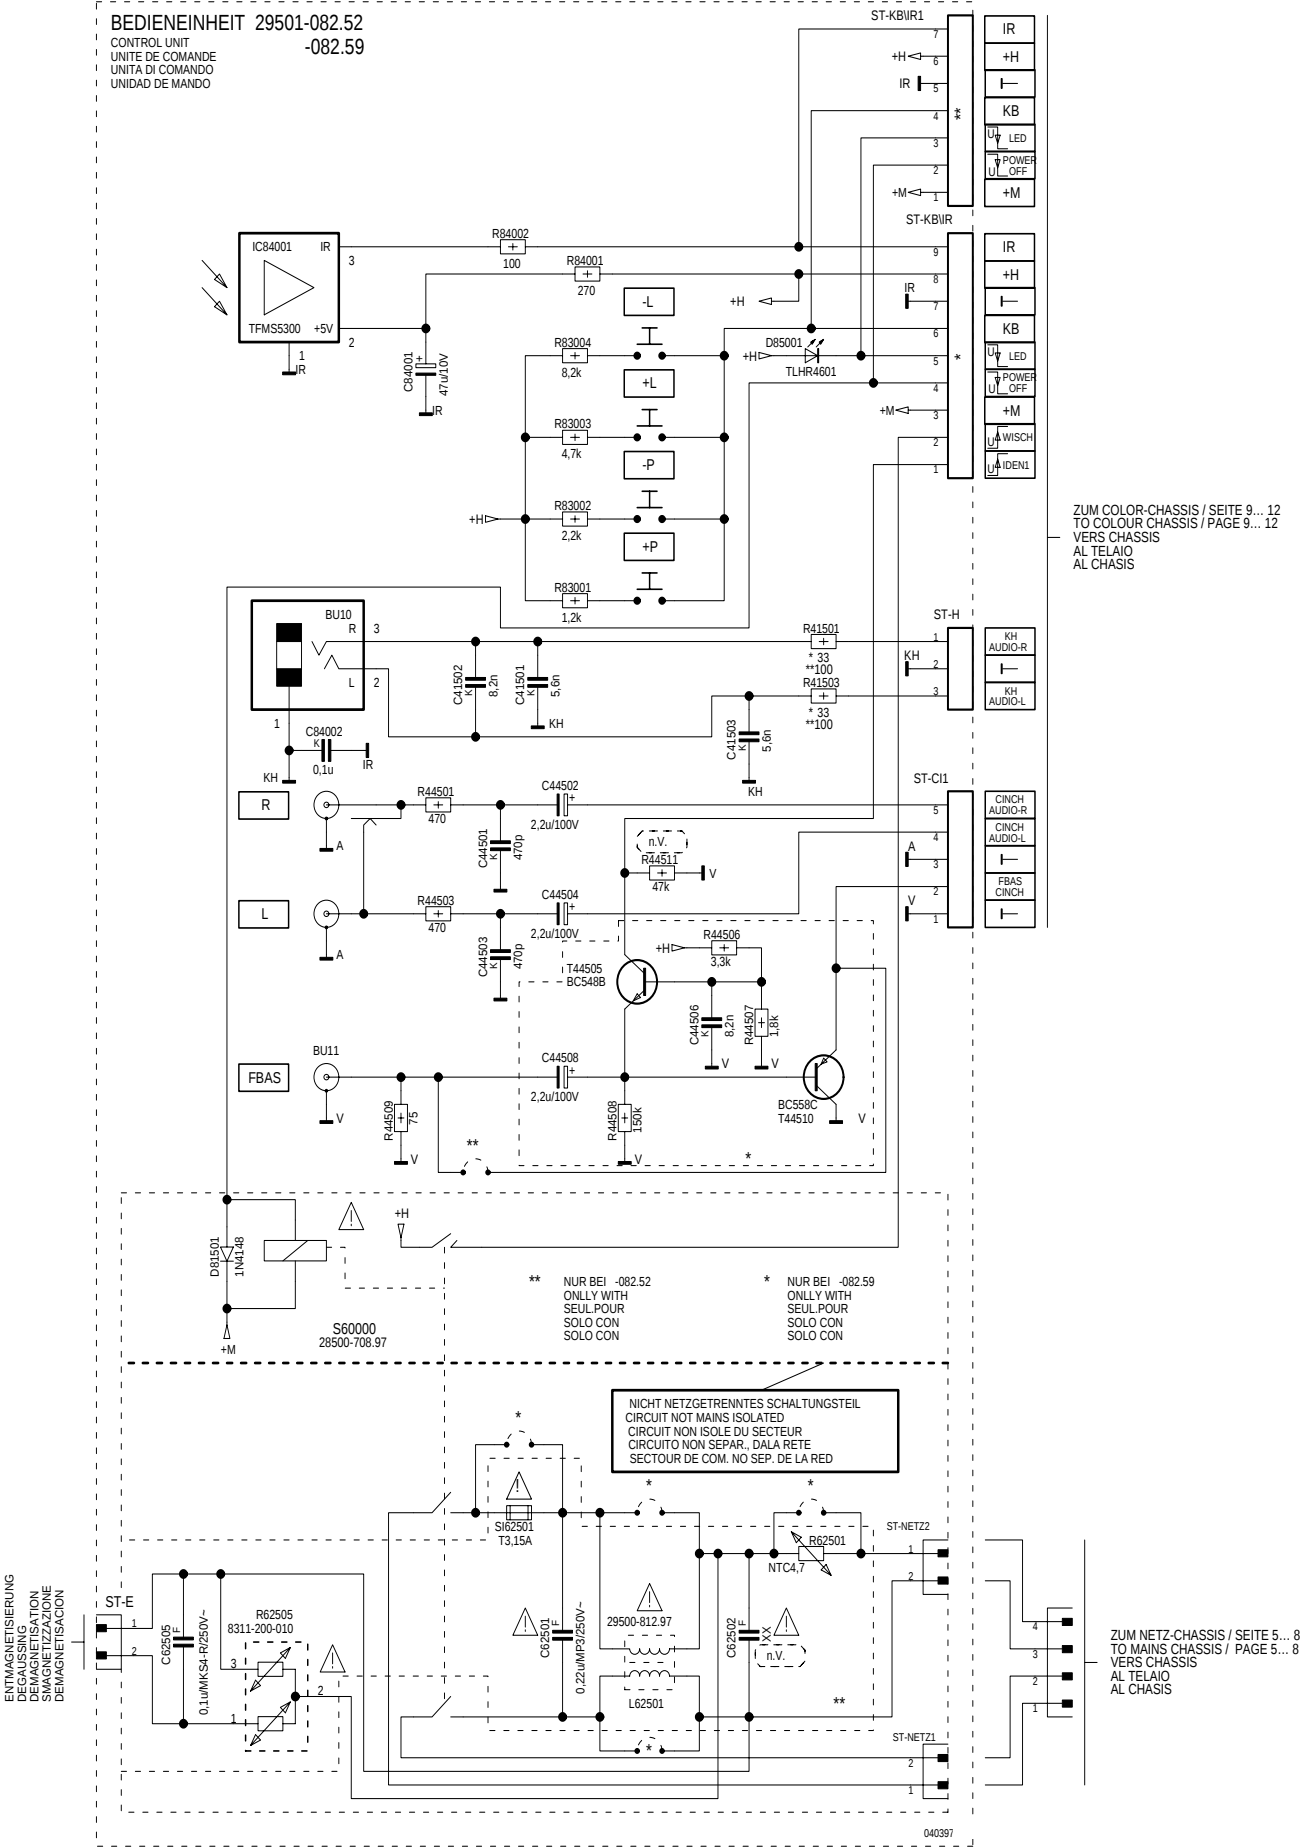


Netzschalterplatte / Mains Switch Panel 29305-165.68

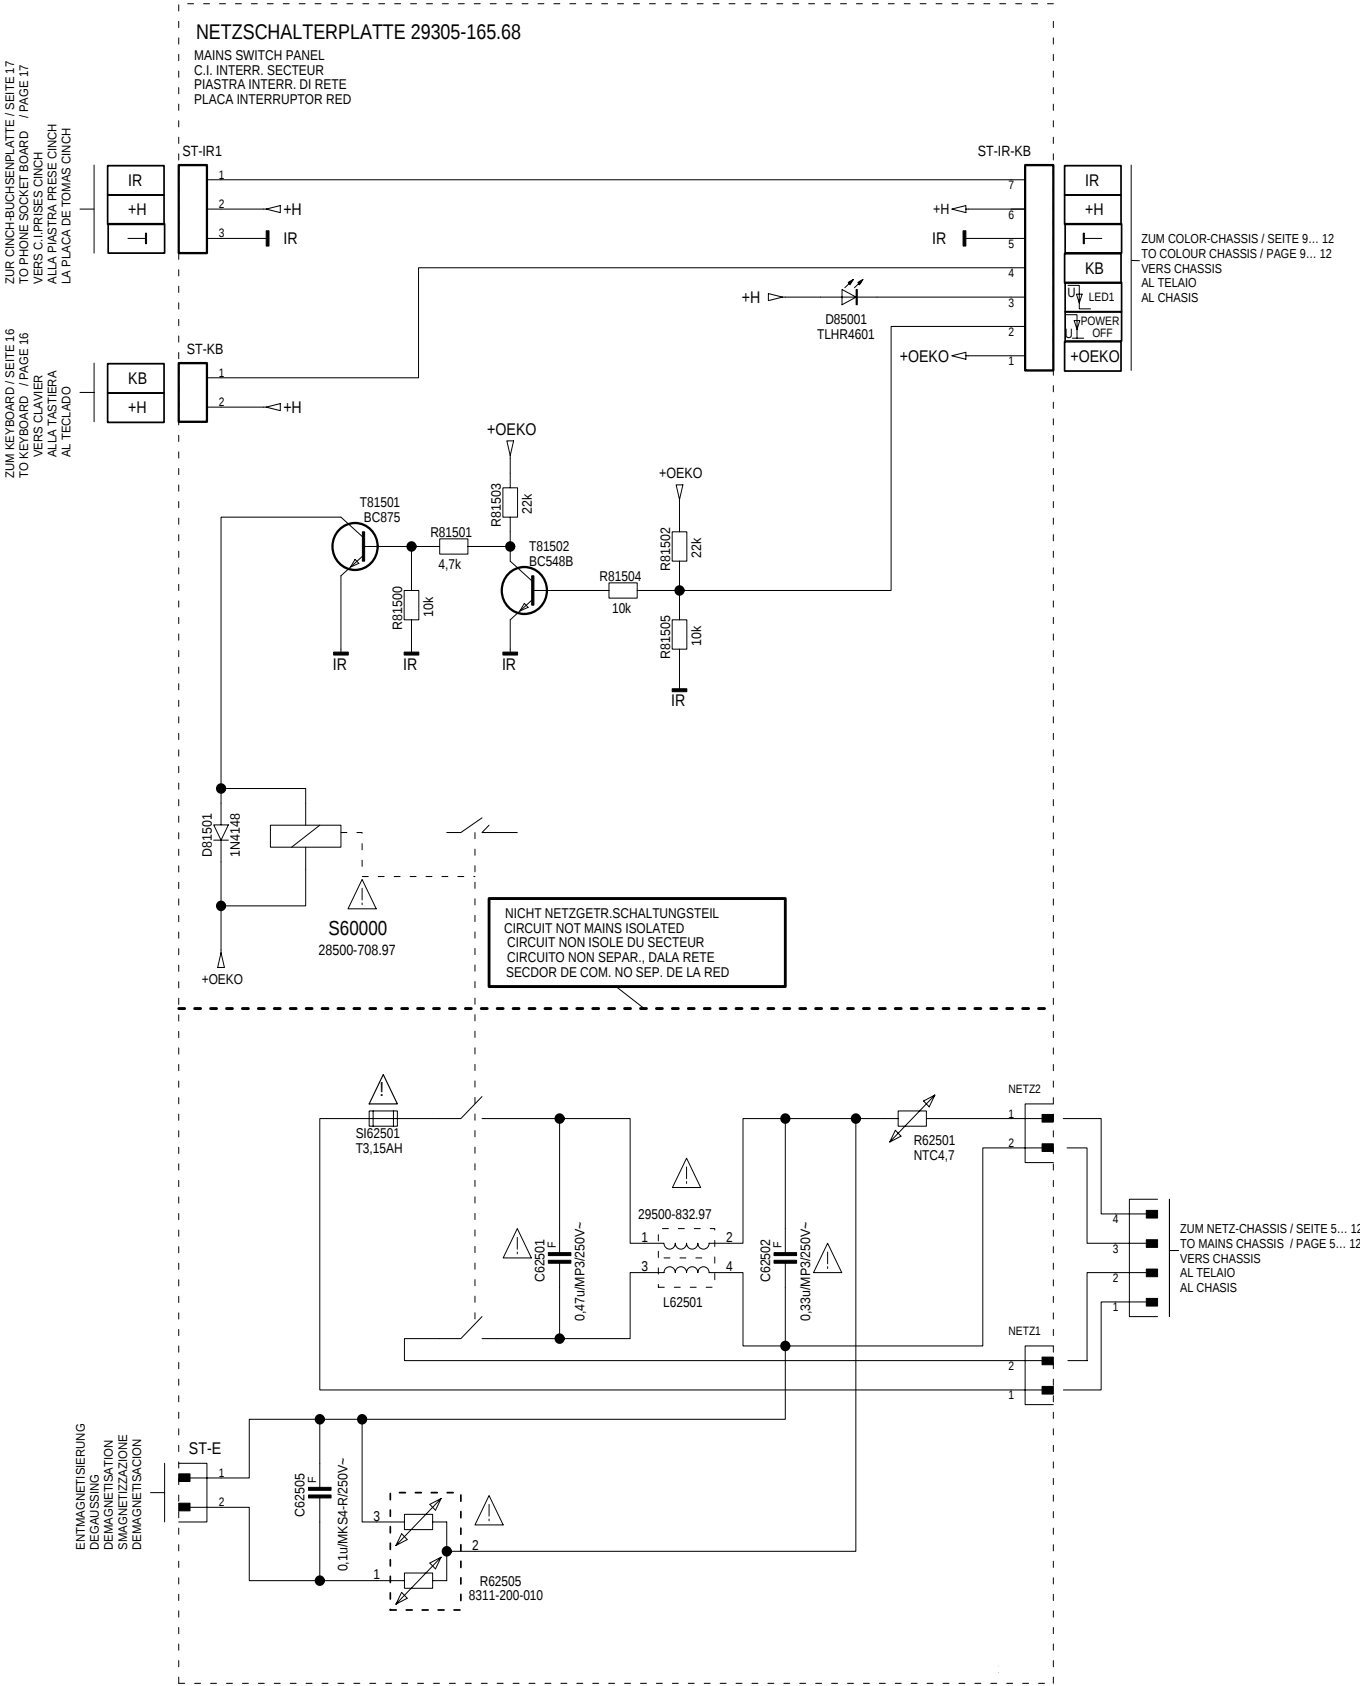


Netzschalterplatte / Mains Switch Panel 29305-165.69

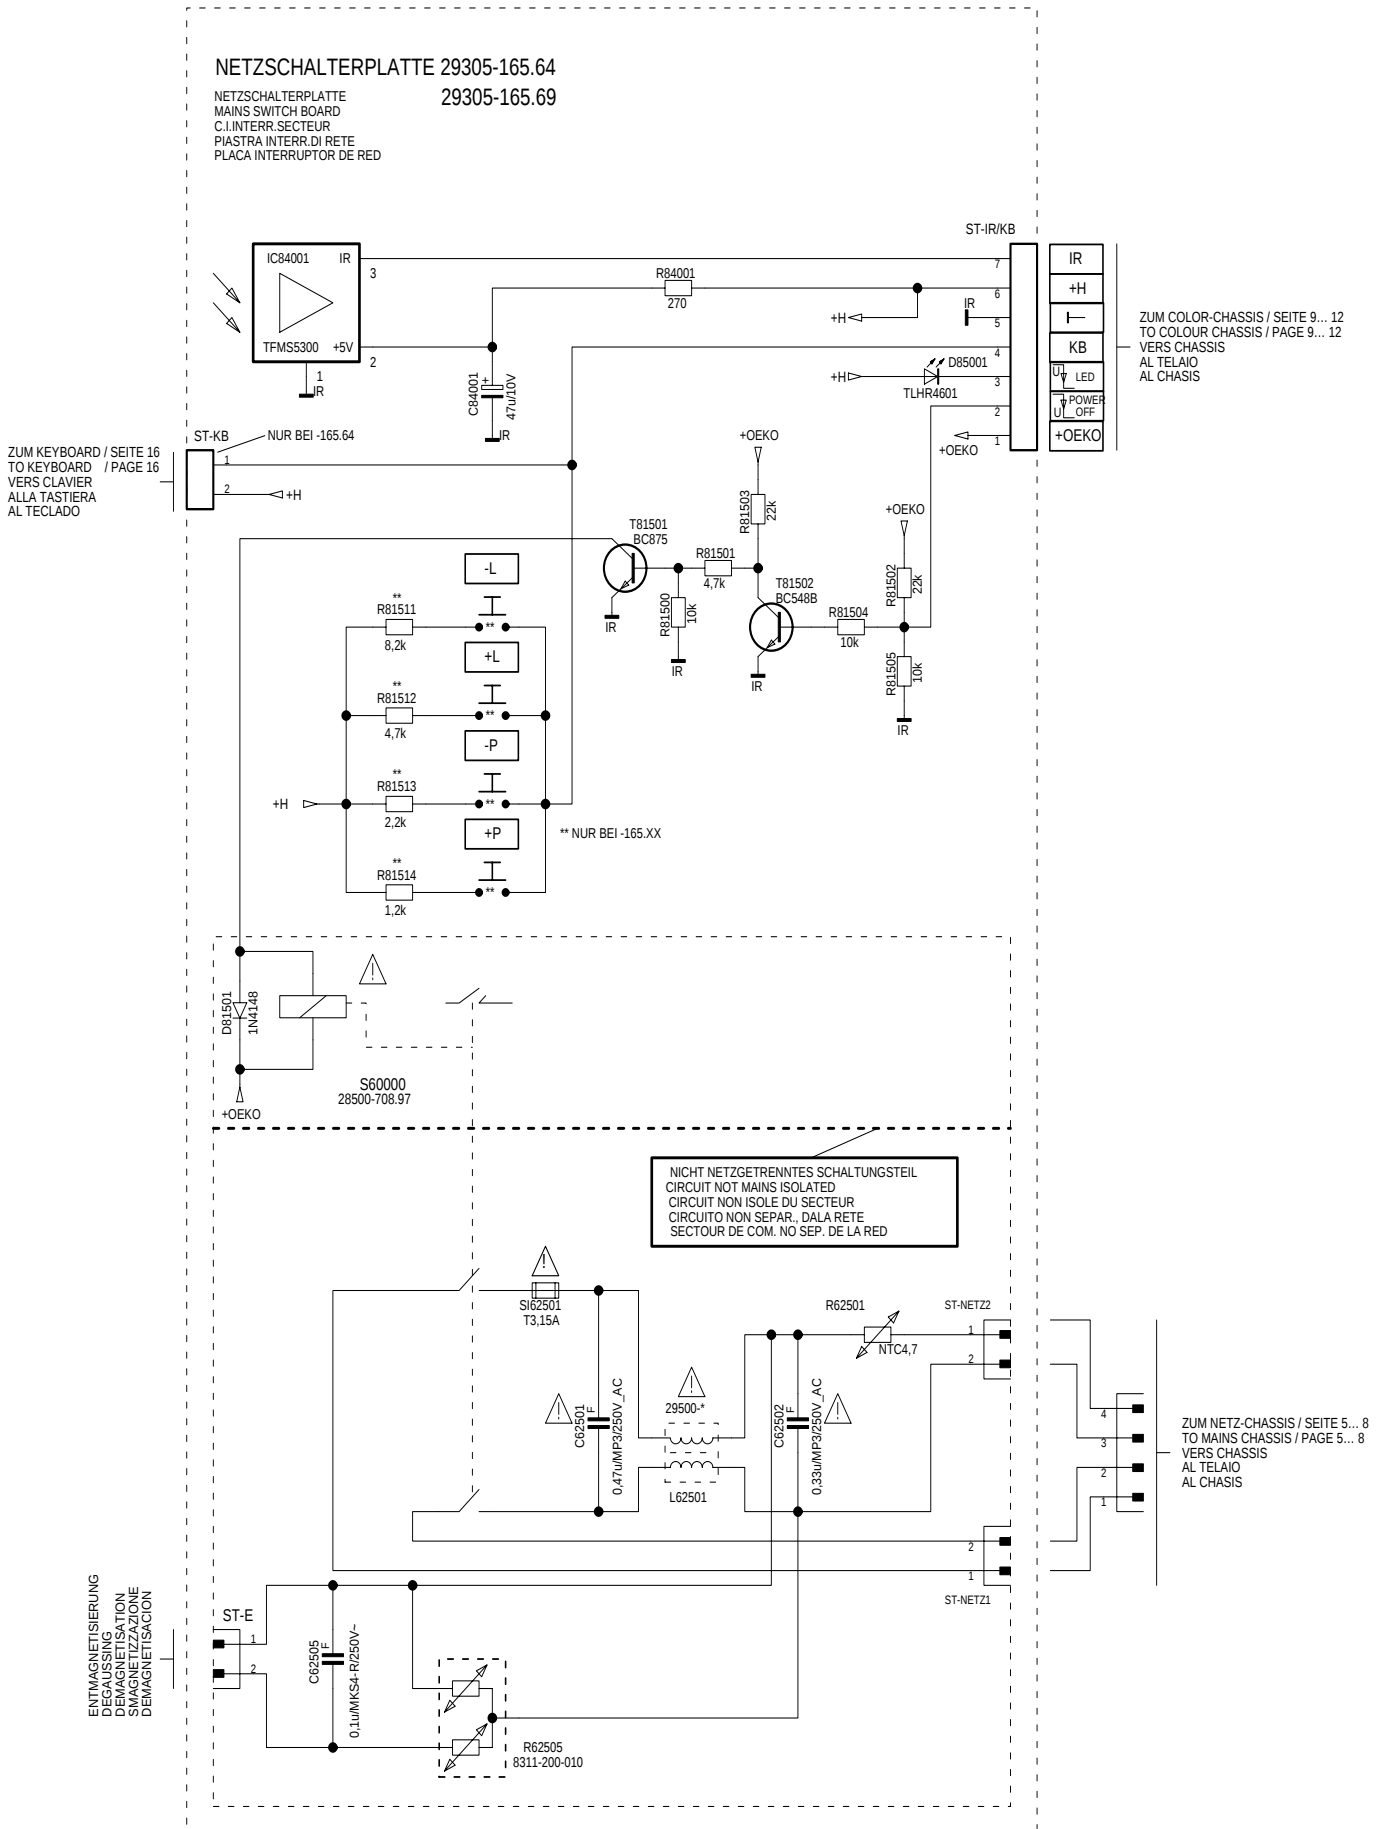

Keyboard 29501-083.02/24

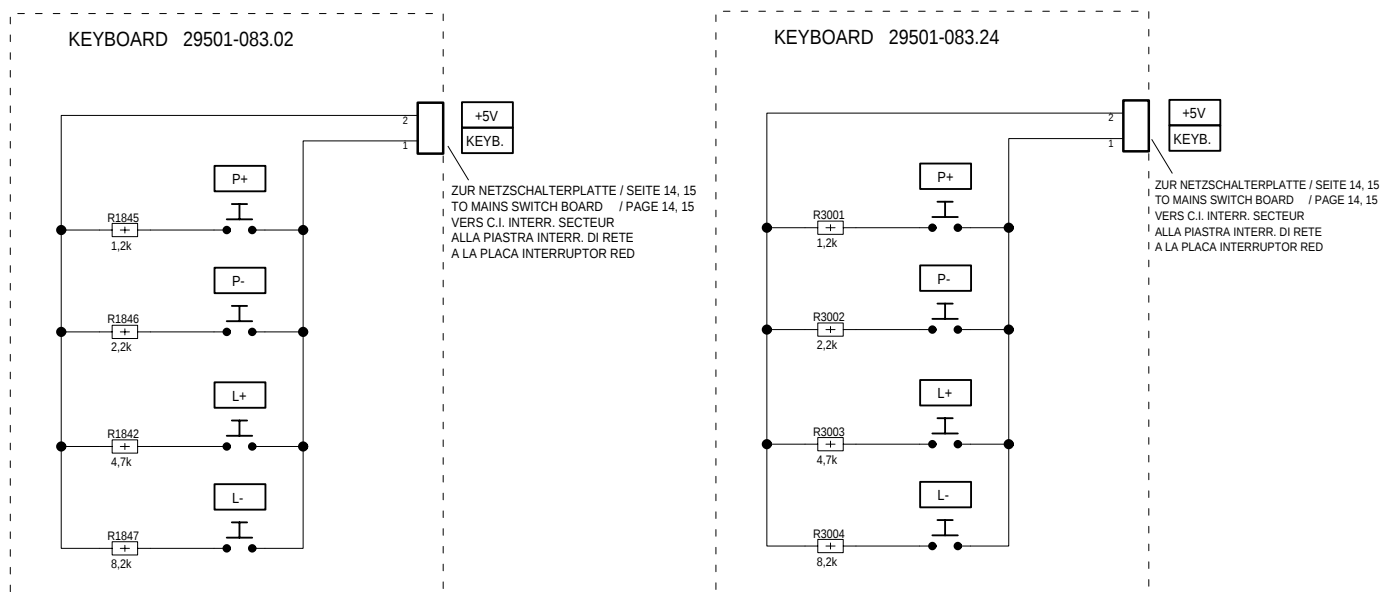


Buchsenplatte / Socket Board 29305-008.34

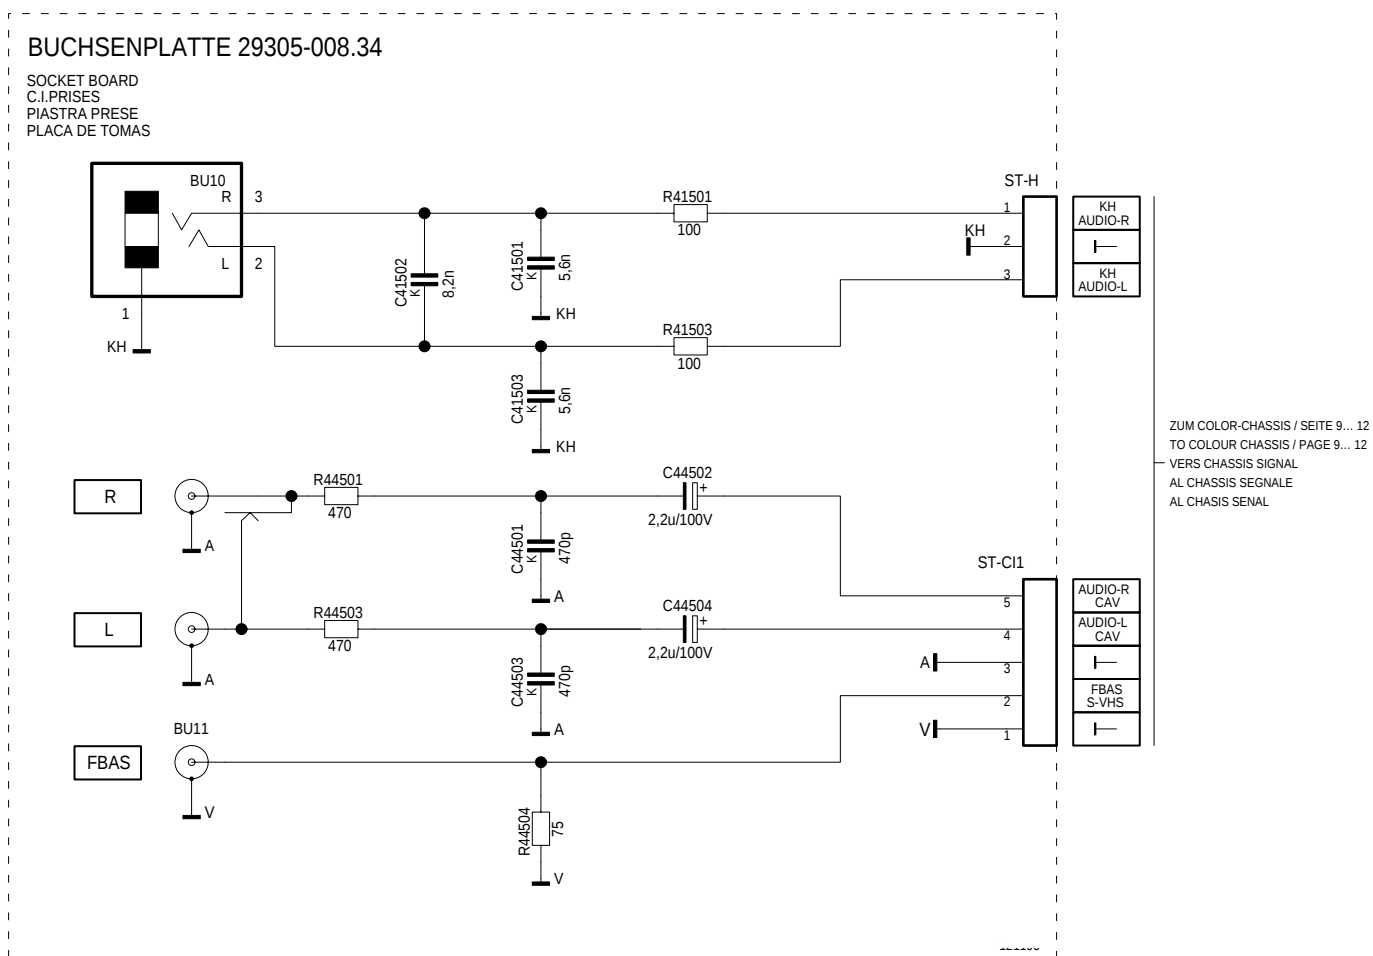

Buchsenplatte / SocketBoard 29305-008.35

CINCH-BUCHSENPLATTE 29305-008.35
 PHONE SOCKET BOARD
 C.I. PRISES CINCH
 PIASTRA PRESE CINCH
 PLACA DE TOMAS CINCH

29305-008.37

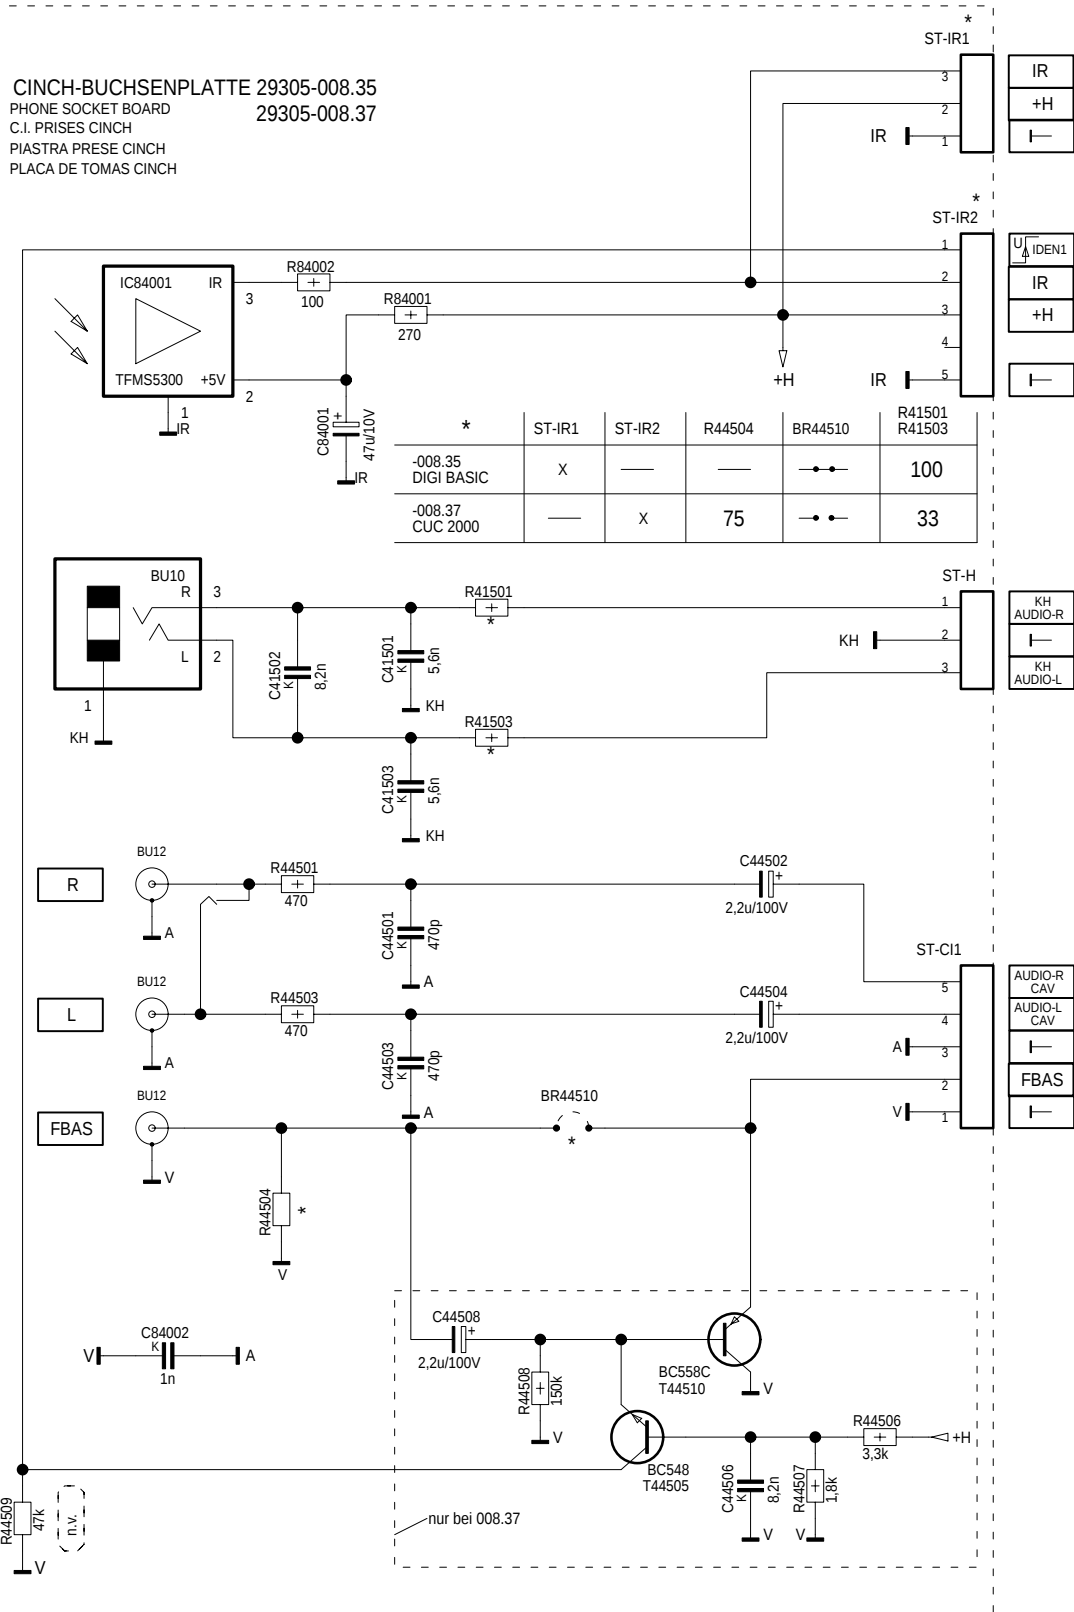

ZUR NETZSCHALTERPLATTE / SEITE 14
 TO MAINS SWITCH BOARD / PAGE 14
 VERS C.I. INTERR. SECTEUR
 ALLA PIASTRA INTERR. DI RETE
 A LA PLACA INTERRUPTOR RED

ZUM COLOR-CHASSIS / SEITE 9... 12
 TO COLOUR CHASSIS / SEITE 9... 12
 VERS CHASSIS SIGNAL
 AL CHASSIS SEGNALE
 AL CHASSIS SENAL