




Verdrahtungsplan / Wiring Diagram

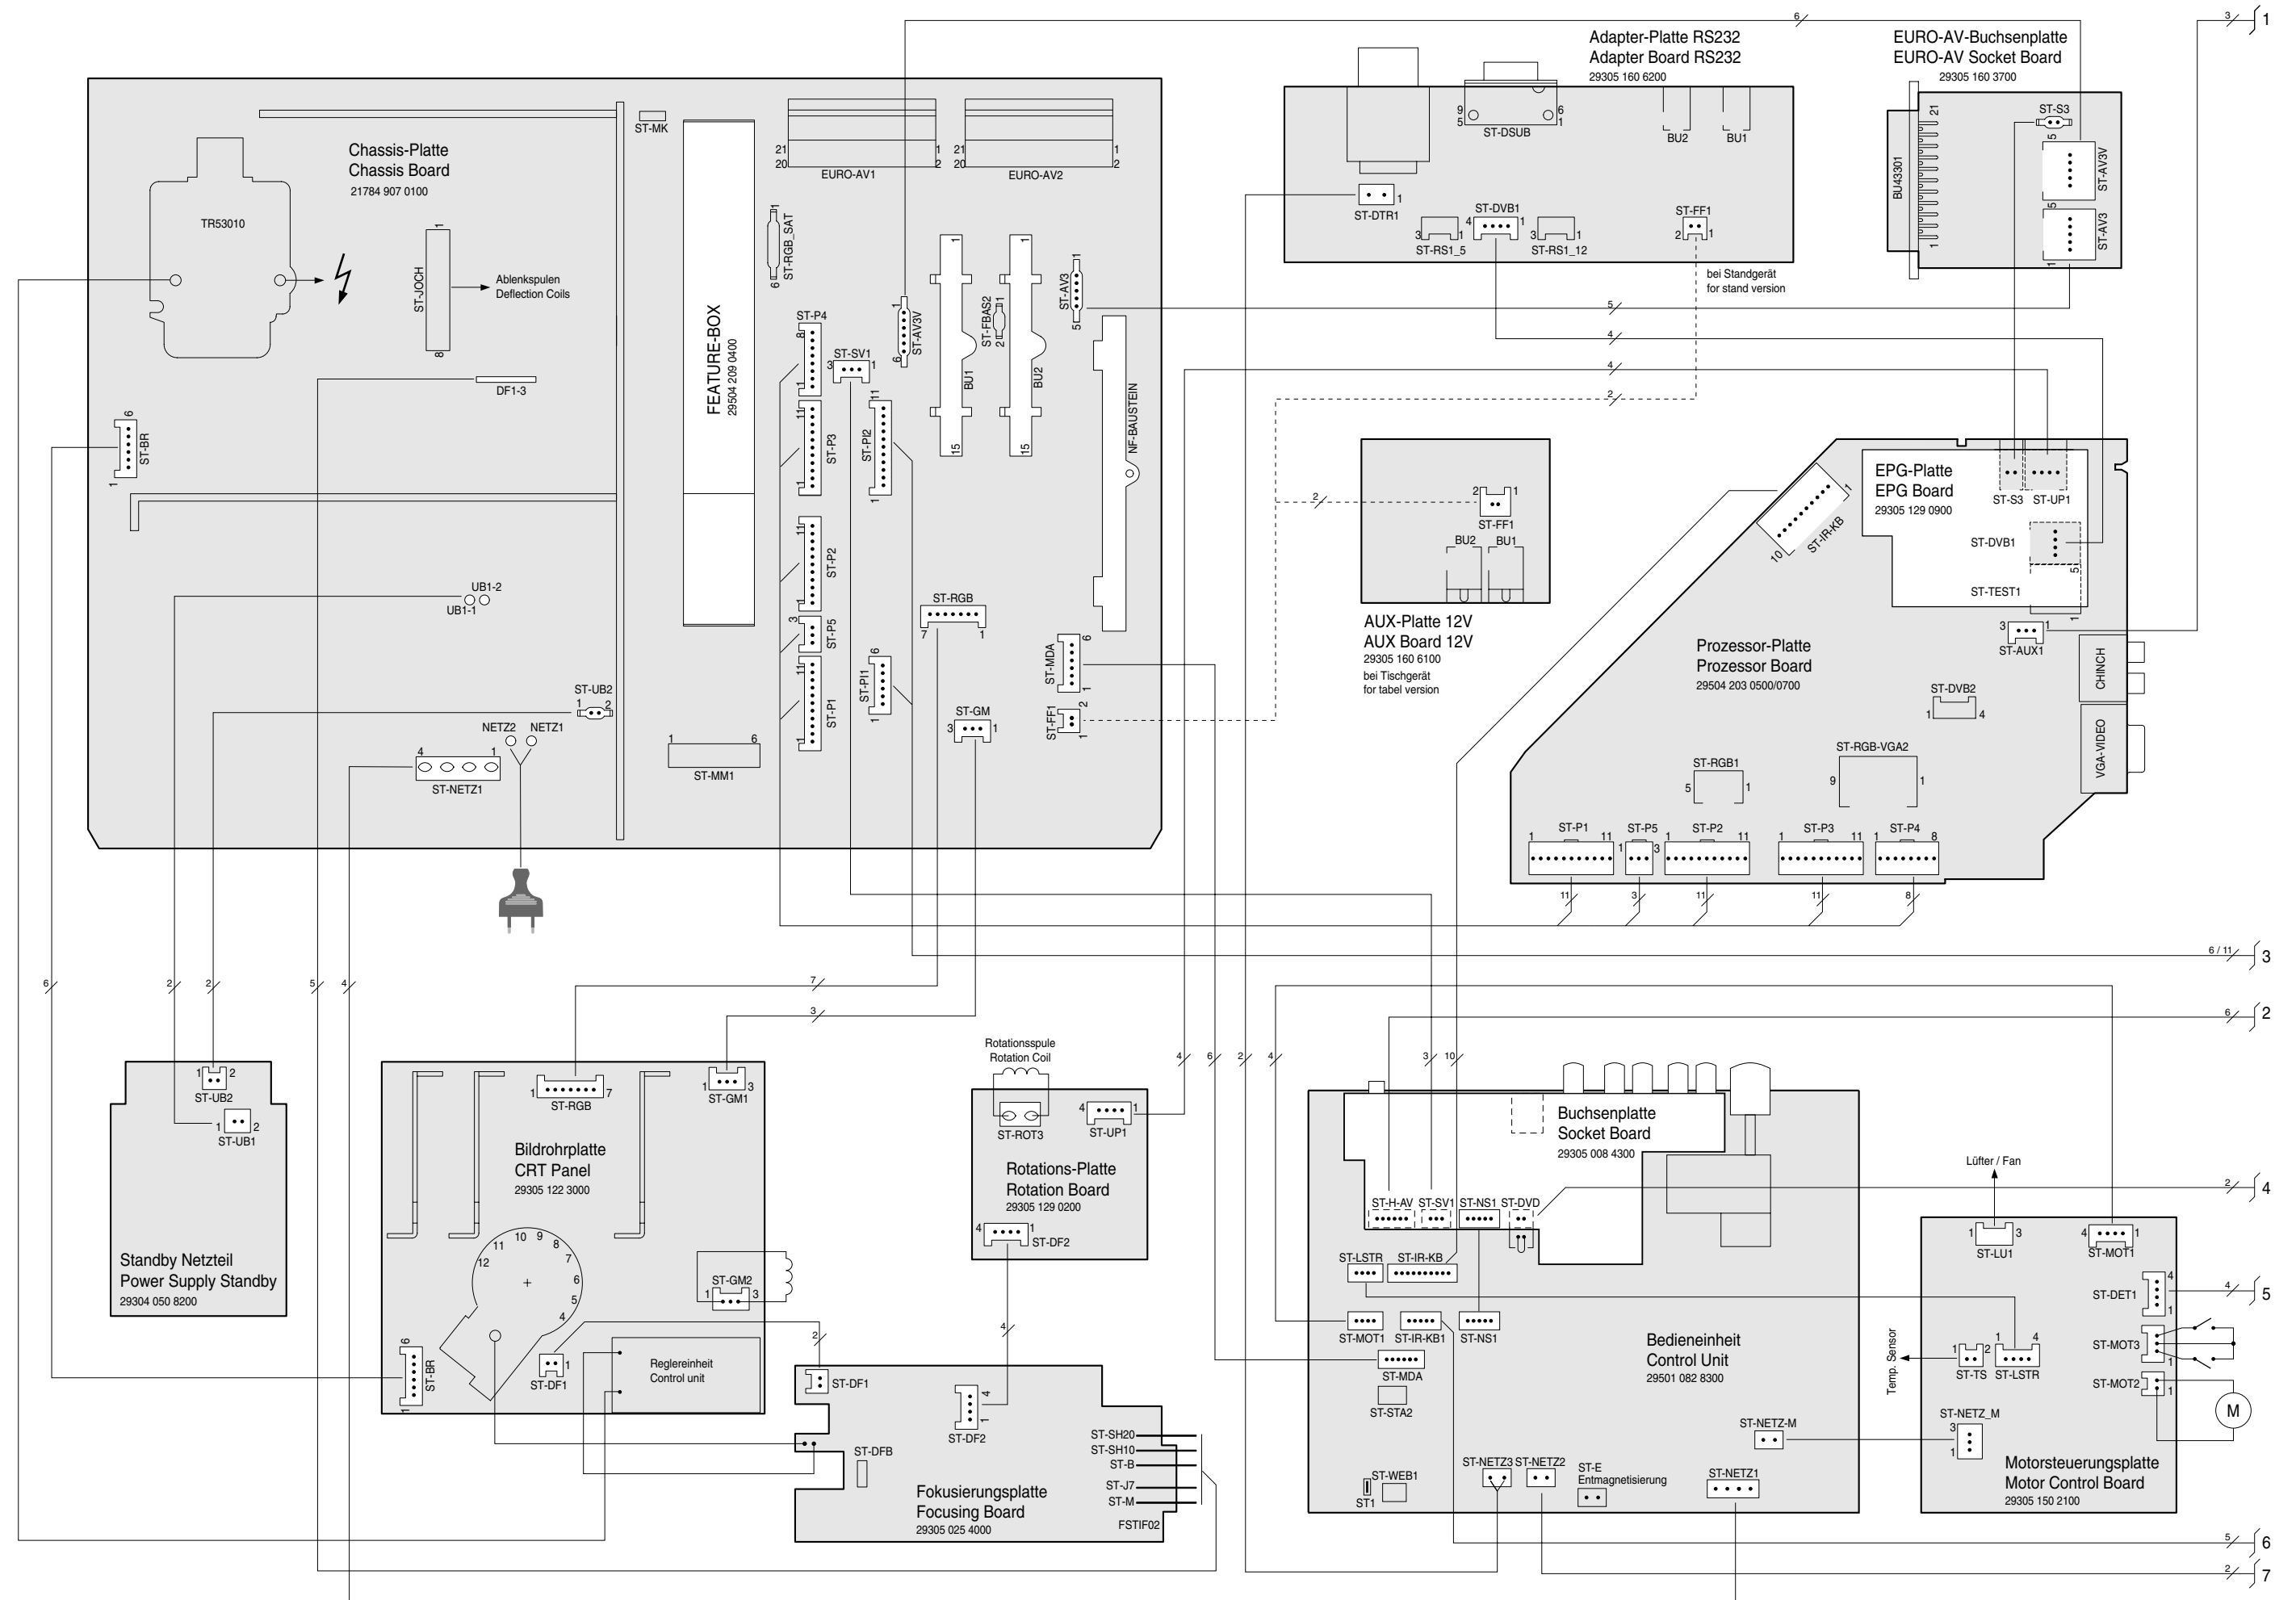

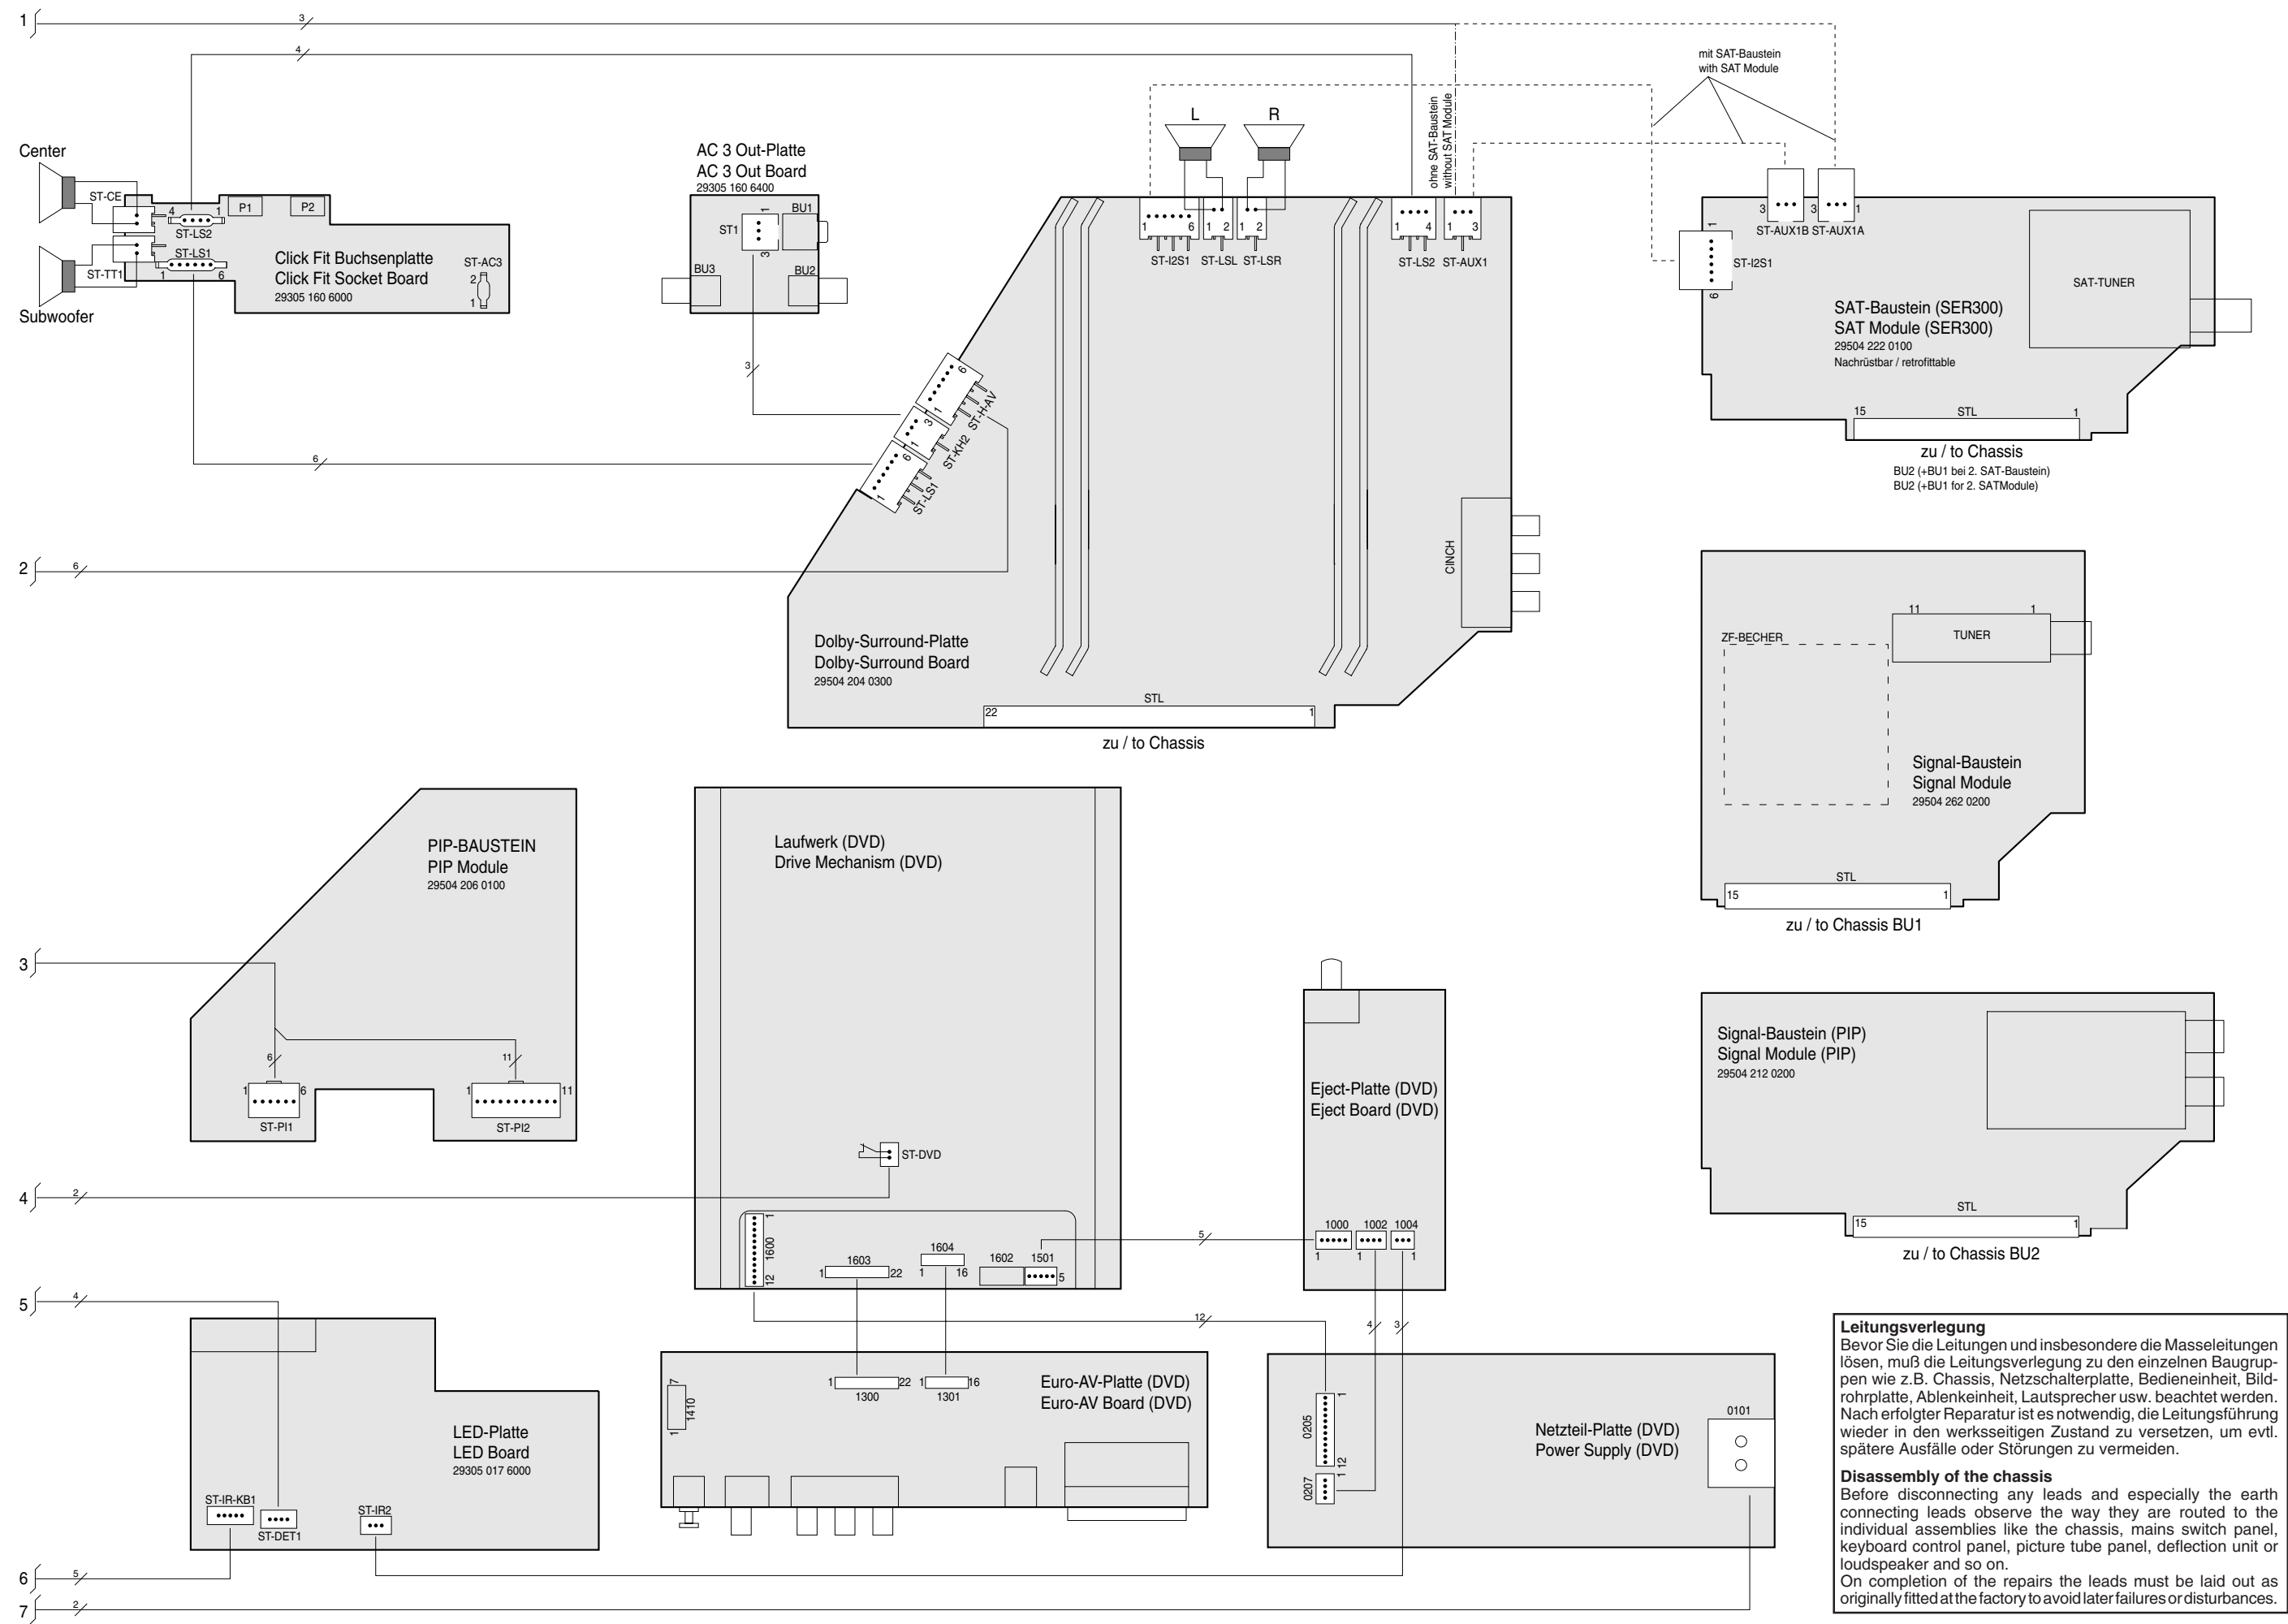

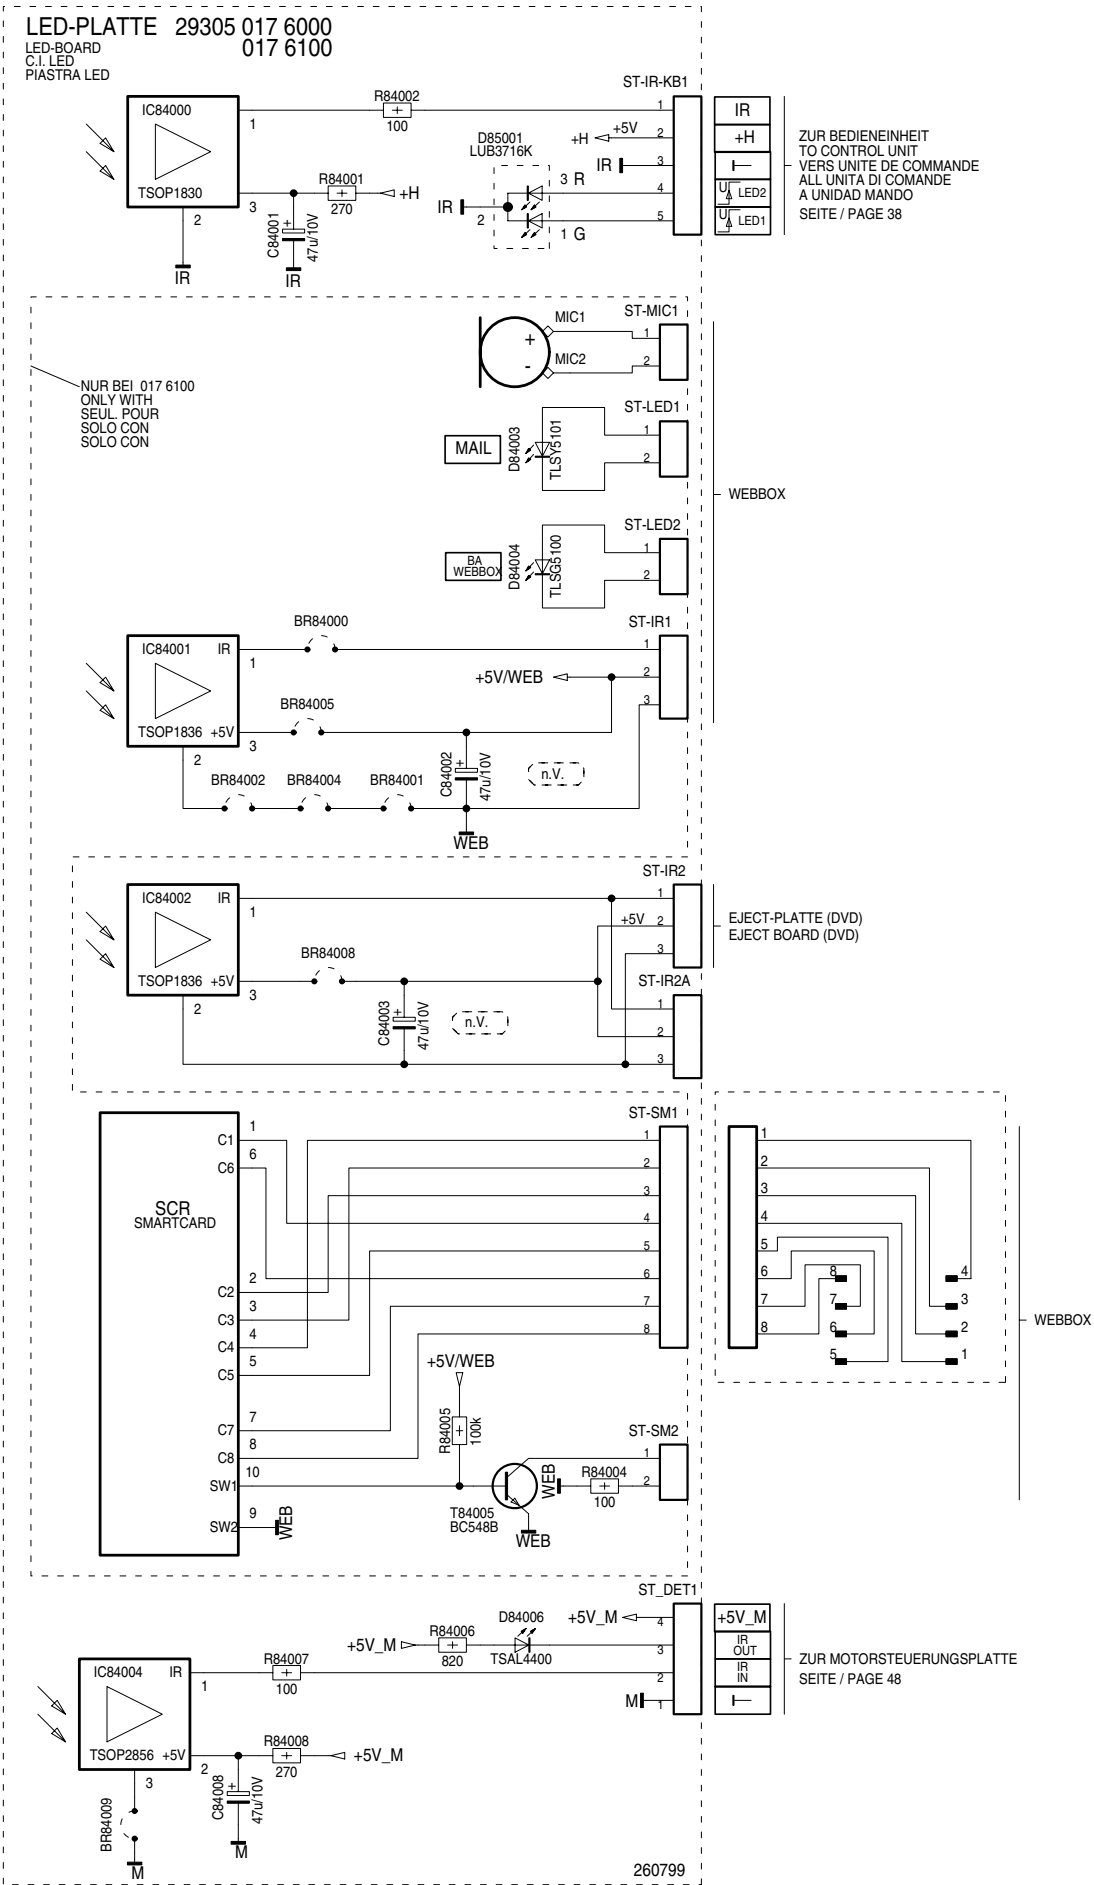







ZUM CHASSIS
TO CHASSIS
VERS CHASSIS
AL TELAIO
AL CHASIS

SEITE / PAGE 3-17

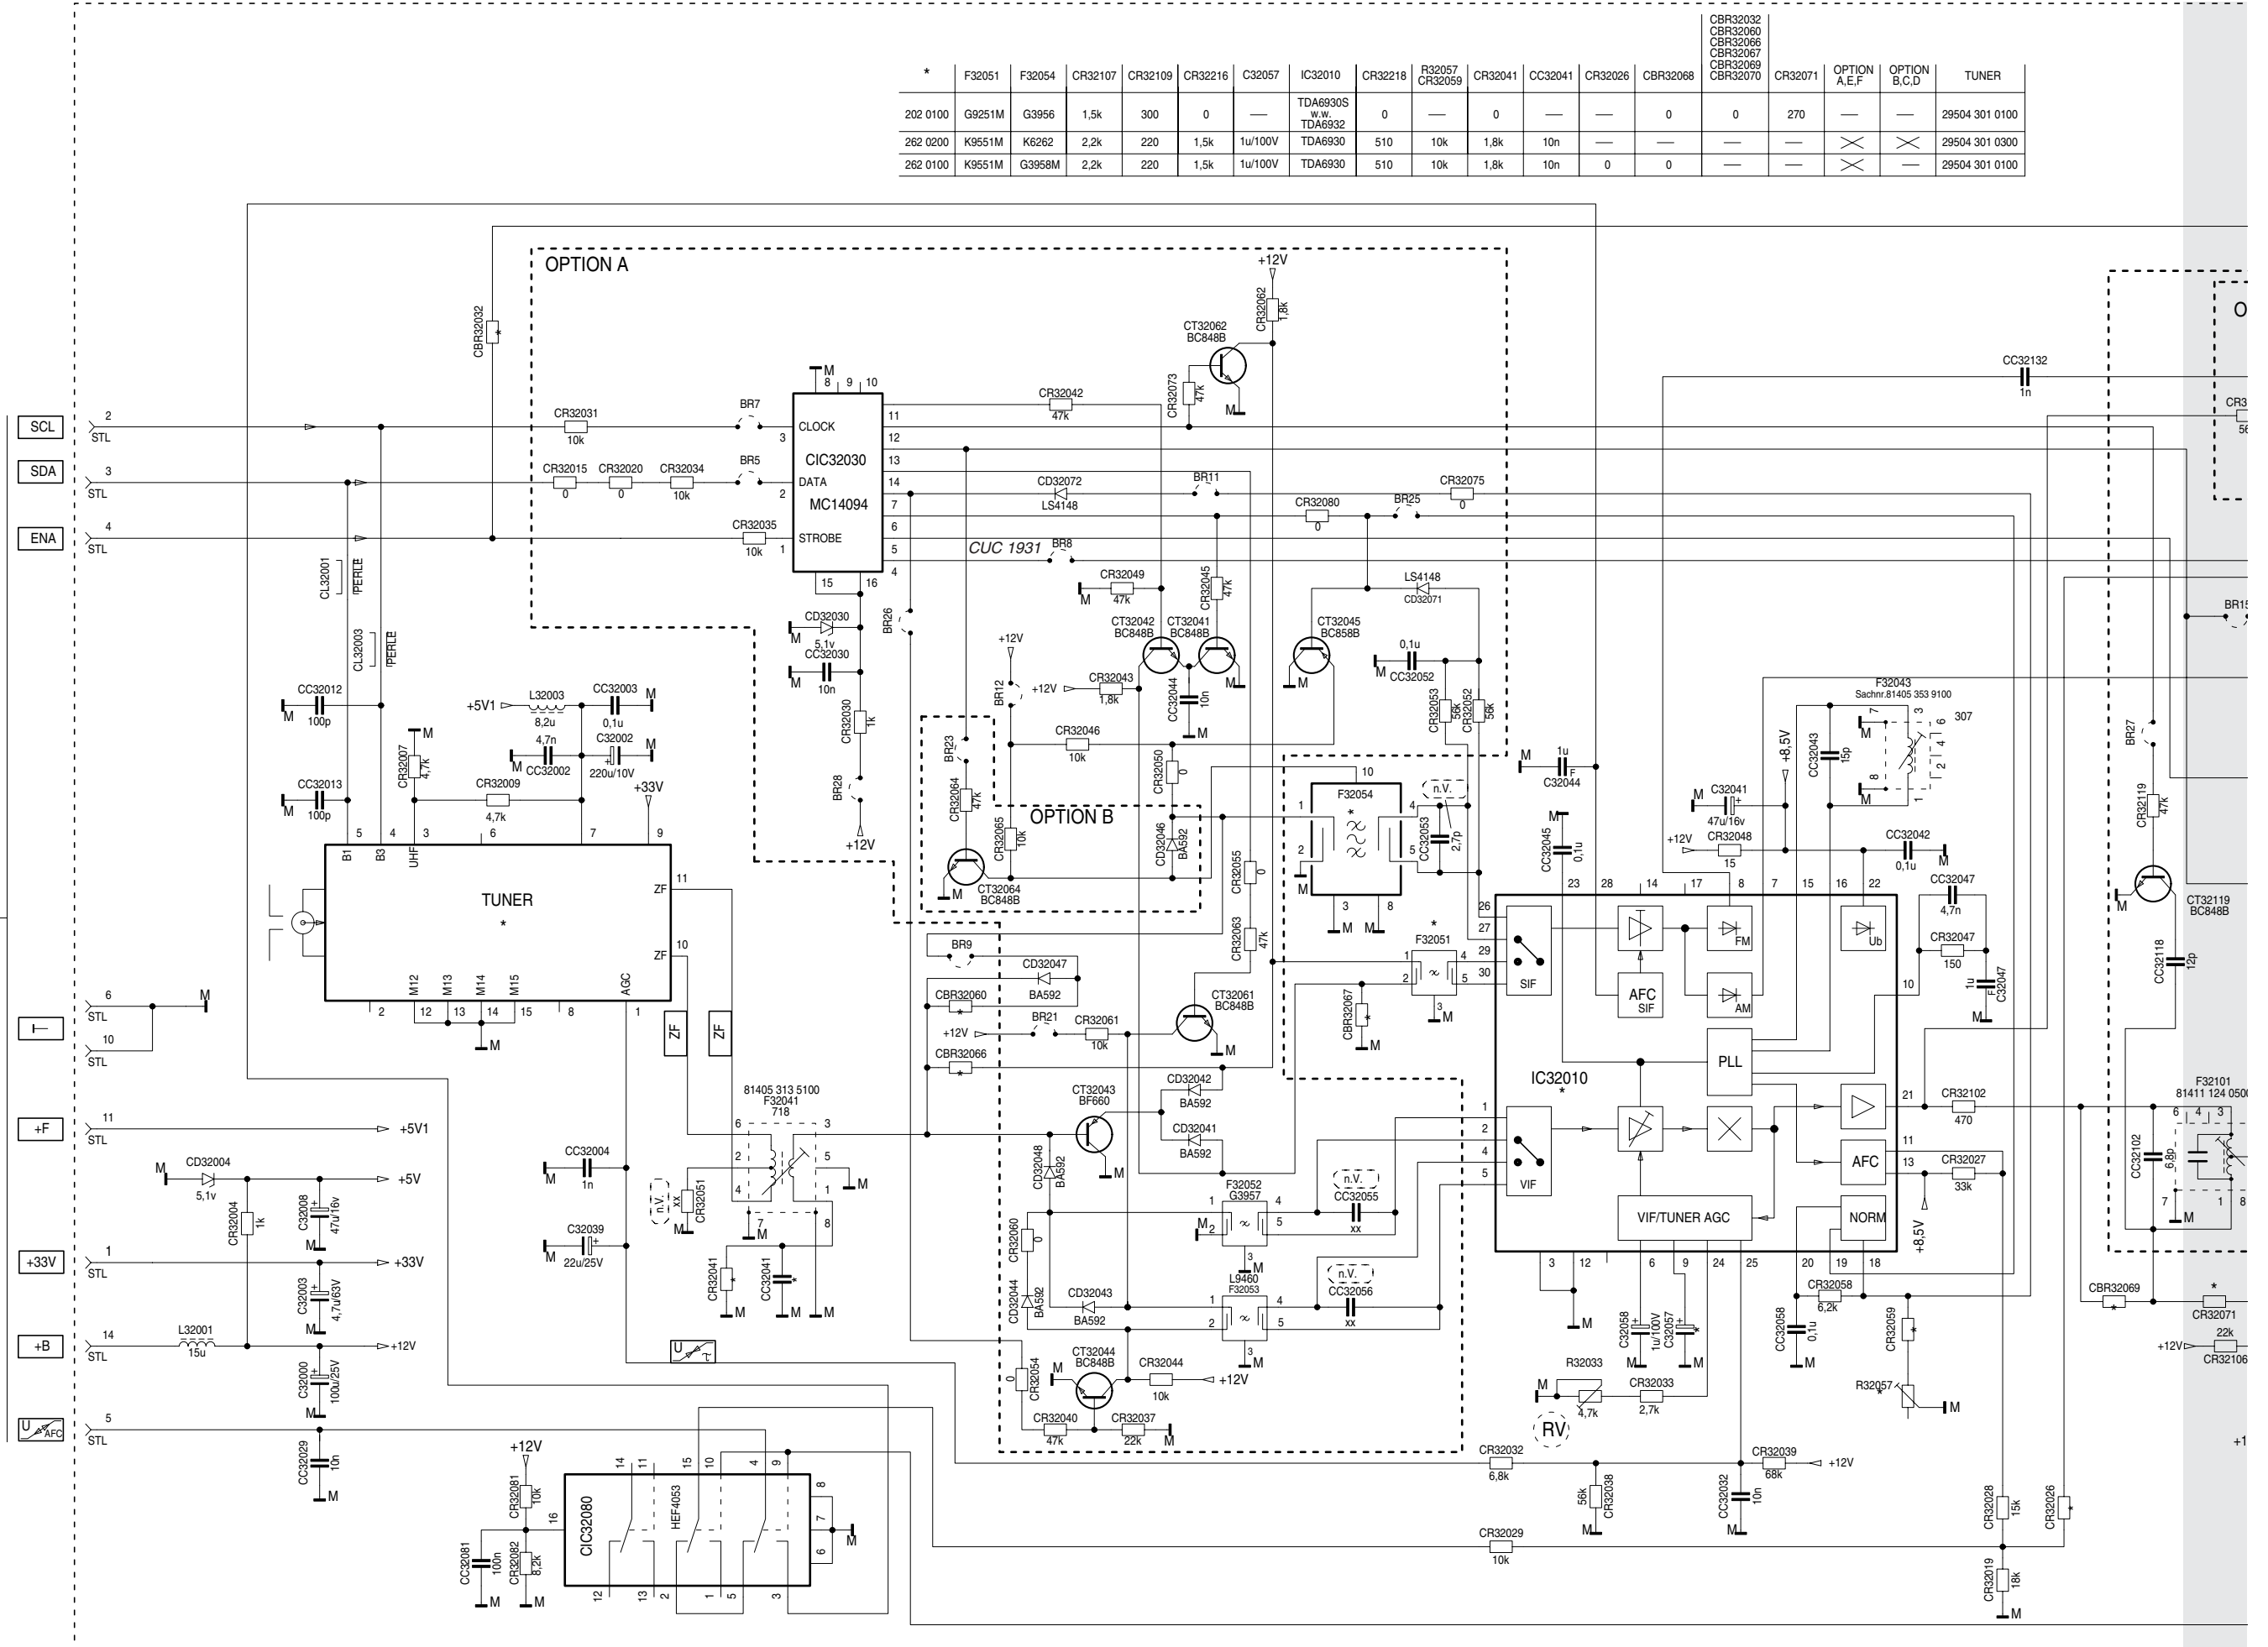

29504 202 0100 INLAND
262 0100 MULTI 8
262 0200 MULTI 9

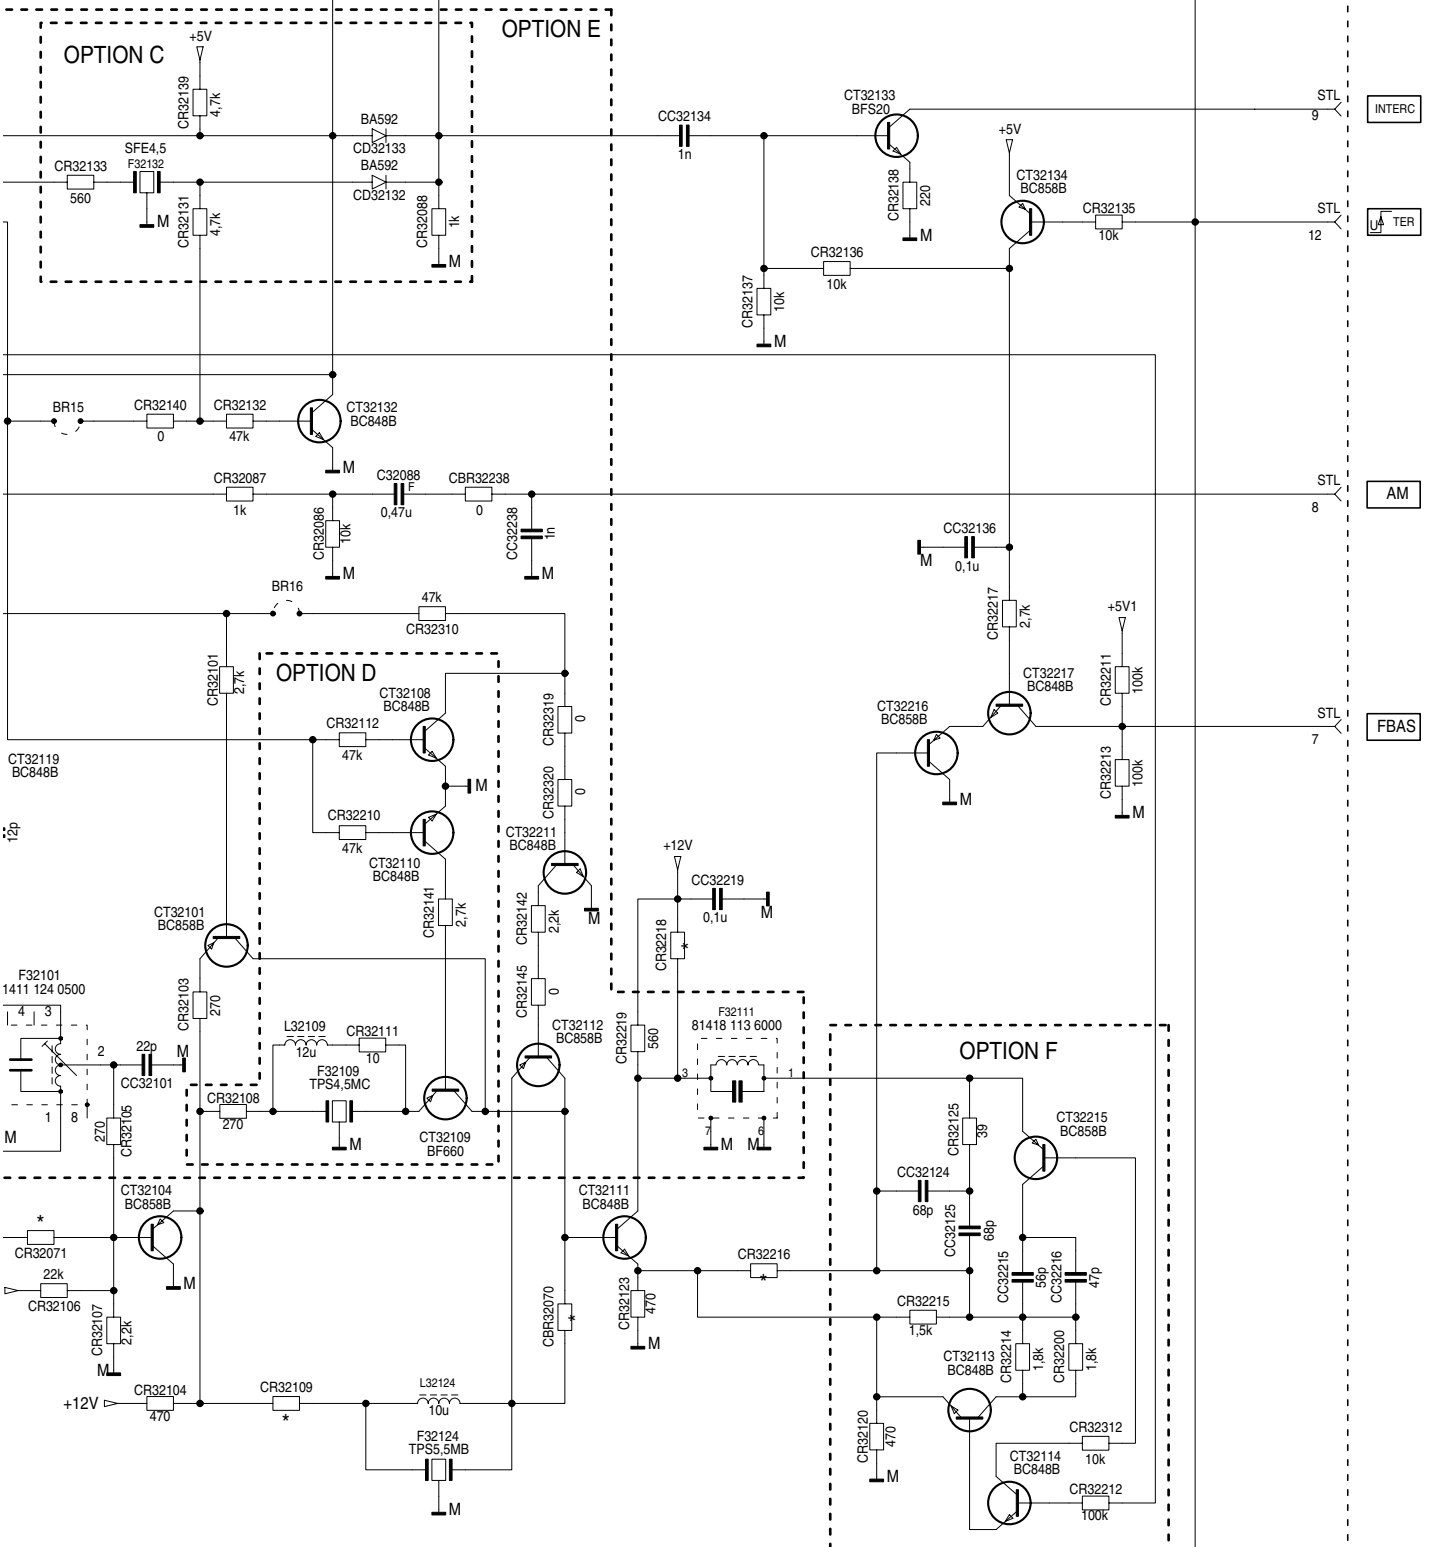


SEITE / PAGE 3-17


SEITE / P
ZUM CHASSIS
TO CHASSIS
VERS CHASSIS
AL TELAIO
AL CHASSIS

080799


Spannungstabelle Table of Voltages															
+1	+12V	+4A	+5V	+B1	+12V	+E1	+8.5V	+F/3	+5V	-G	-16.5V -13V CUC 1931 STATUS	+K	+13V	+Q	+8.5V
+2	+5V	+5	+5V	+C	+200V	+F	+5V	+G	+16.5V +13V CUC 1931 STATUS	-G/1	-16.5V -13V CUC 1931 STATUS	-K	-13V	+Q/1	+8.5V
+3	+3.3V PAL/PLUS +5V LFR	+7	+12V	+D	+26V	+F/1	+5V	+G/1	+16.5V +13V CUC 1931 STATUS	-G/2	-15.5V -12V CUC 1931 STATUS	+M	+16V	+Q/3	+8.5V
+4	+5V	+B	+12V	+E	+8.5V	+F/2	+5V	+G/2	+15.5V +12V CUC 1931 STATUS	+H	+5V	+N	+5V +3.3V PAL/PLUS	+OEKO	+9.5V - +14V

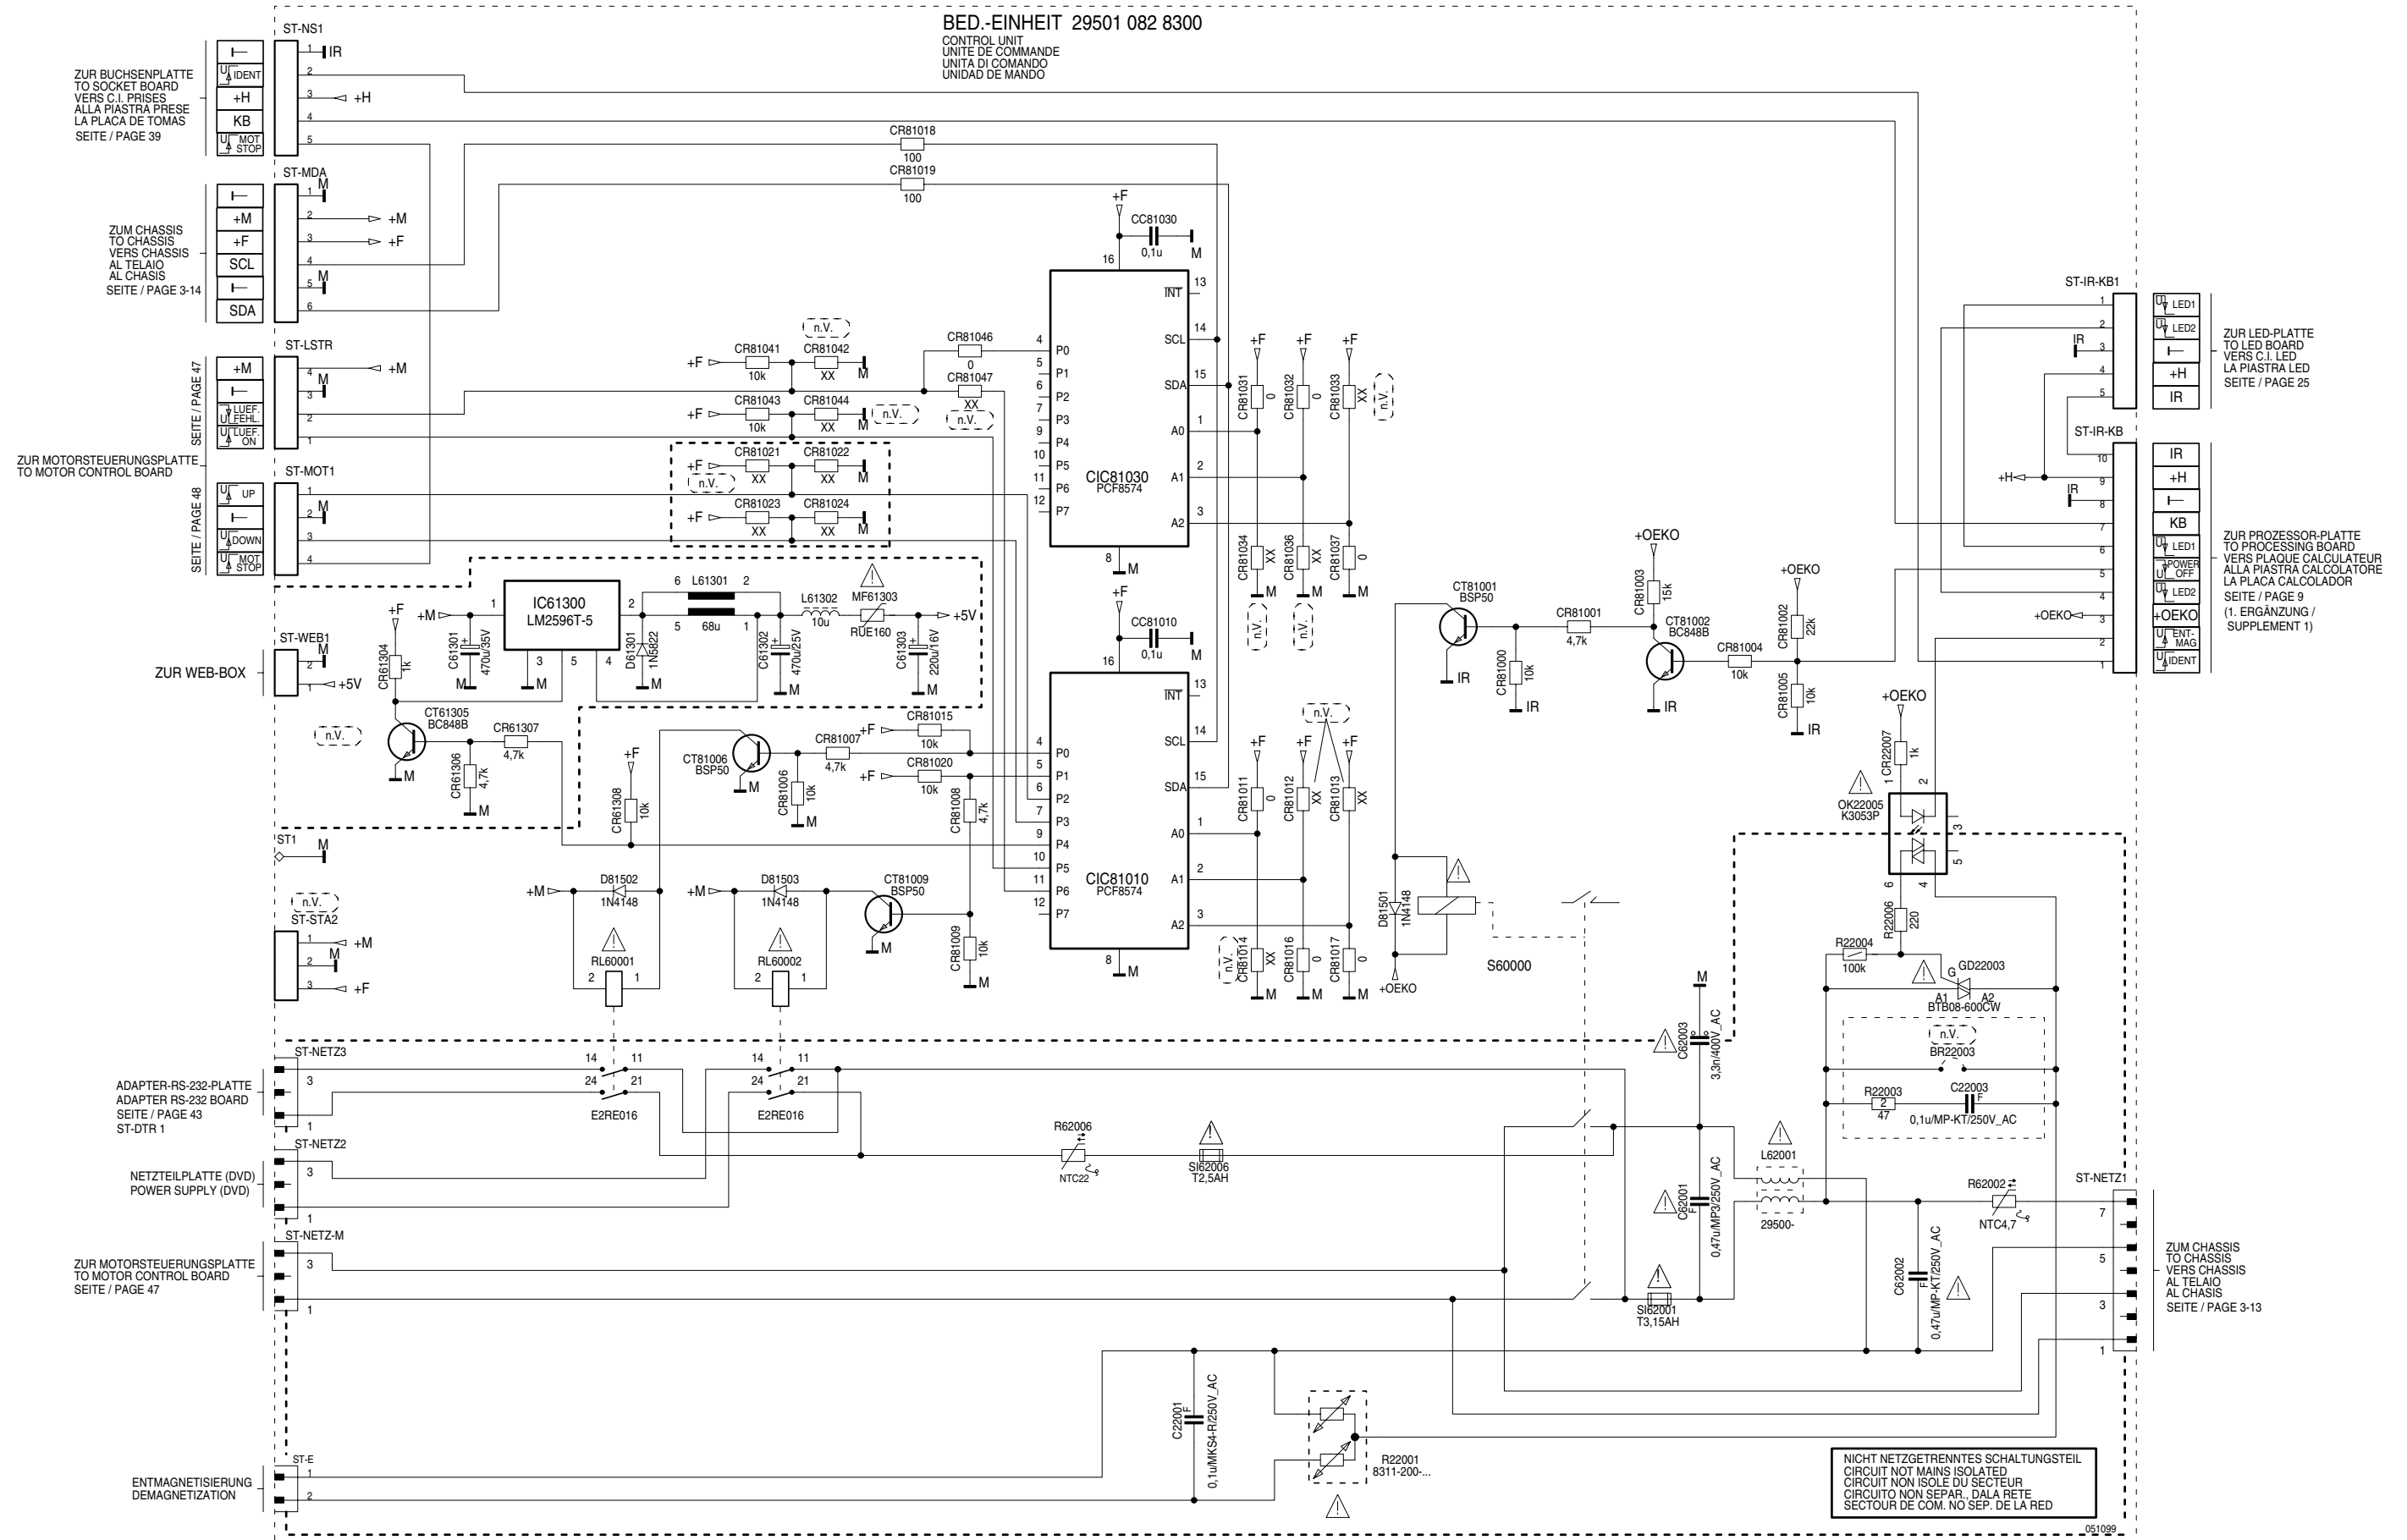


Buchsenplatte Click Fit / Socket Board Click Fit

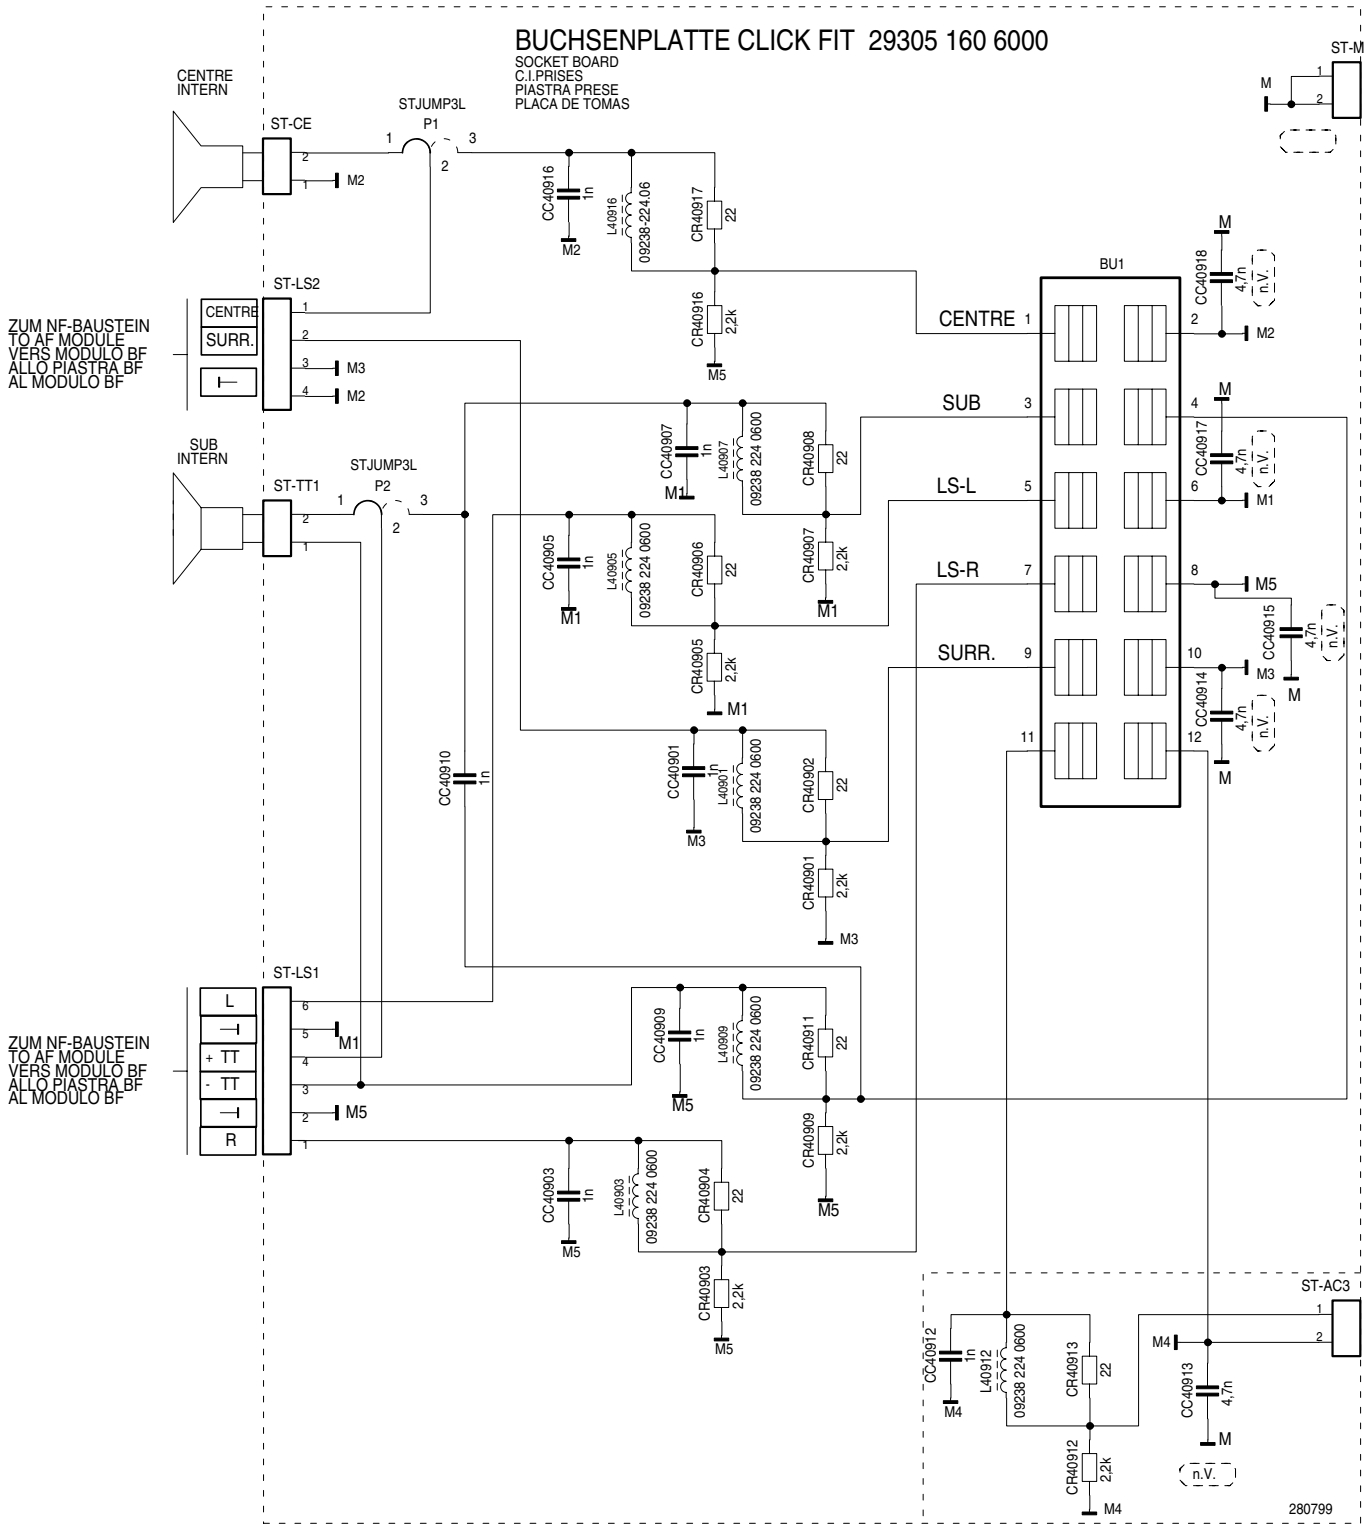



Adapter-RS-232-Platte / Adapter RS-232 Board

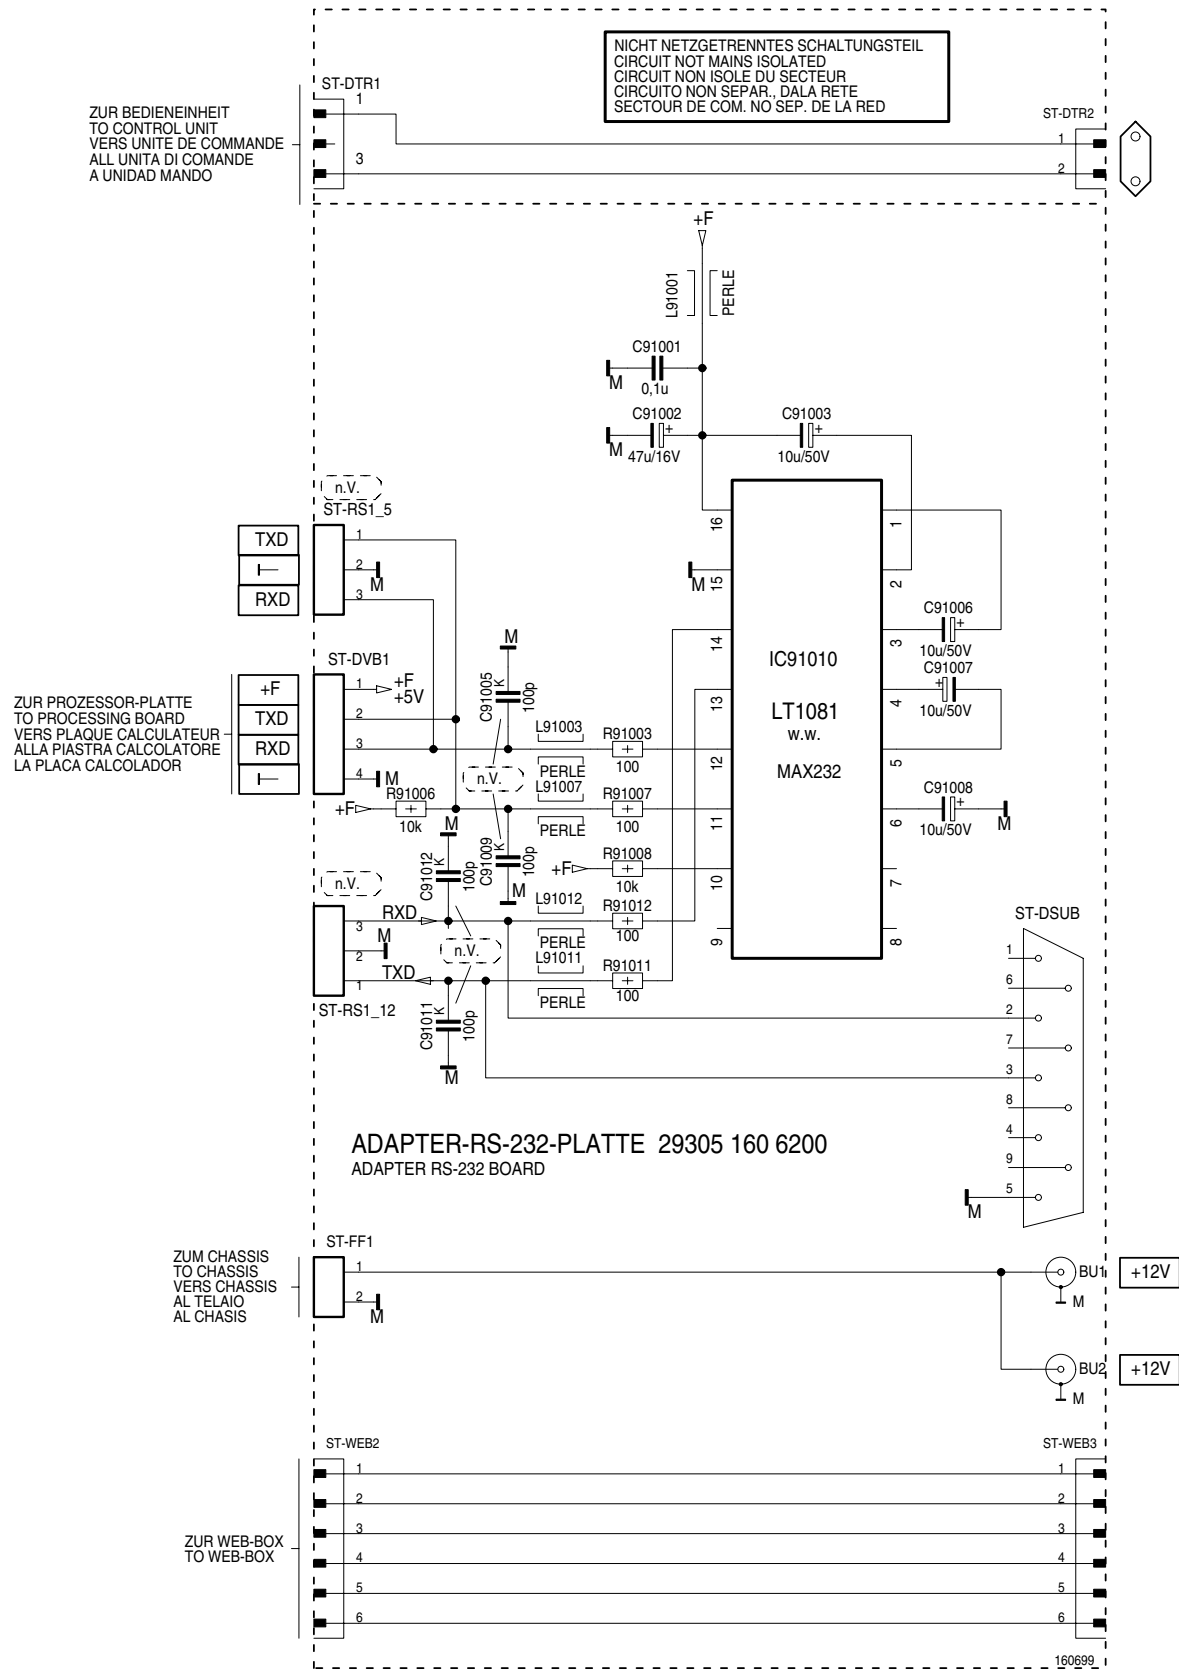

AUX-Platte 12V / AUX Board 12V

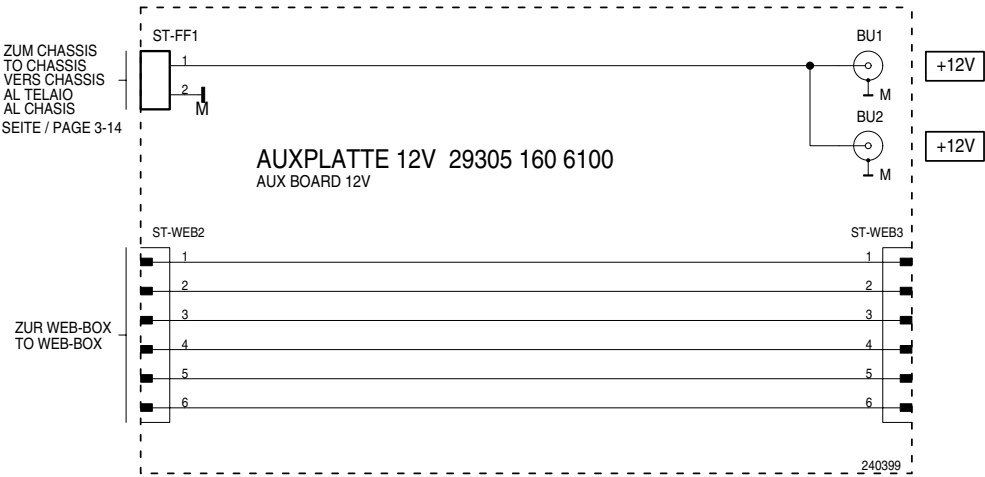


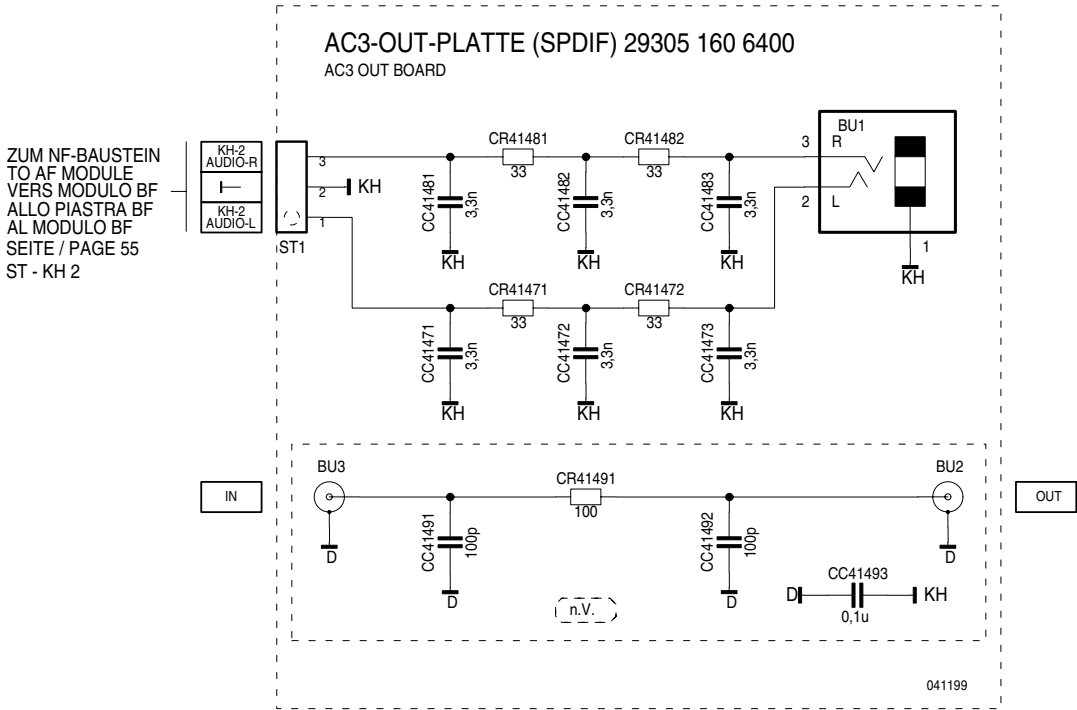

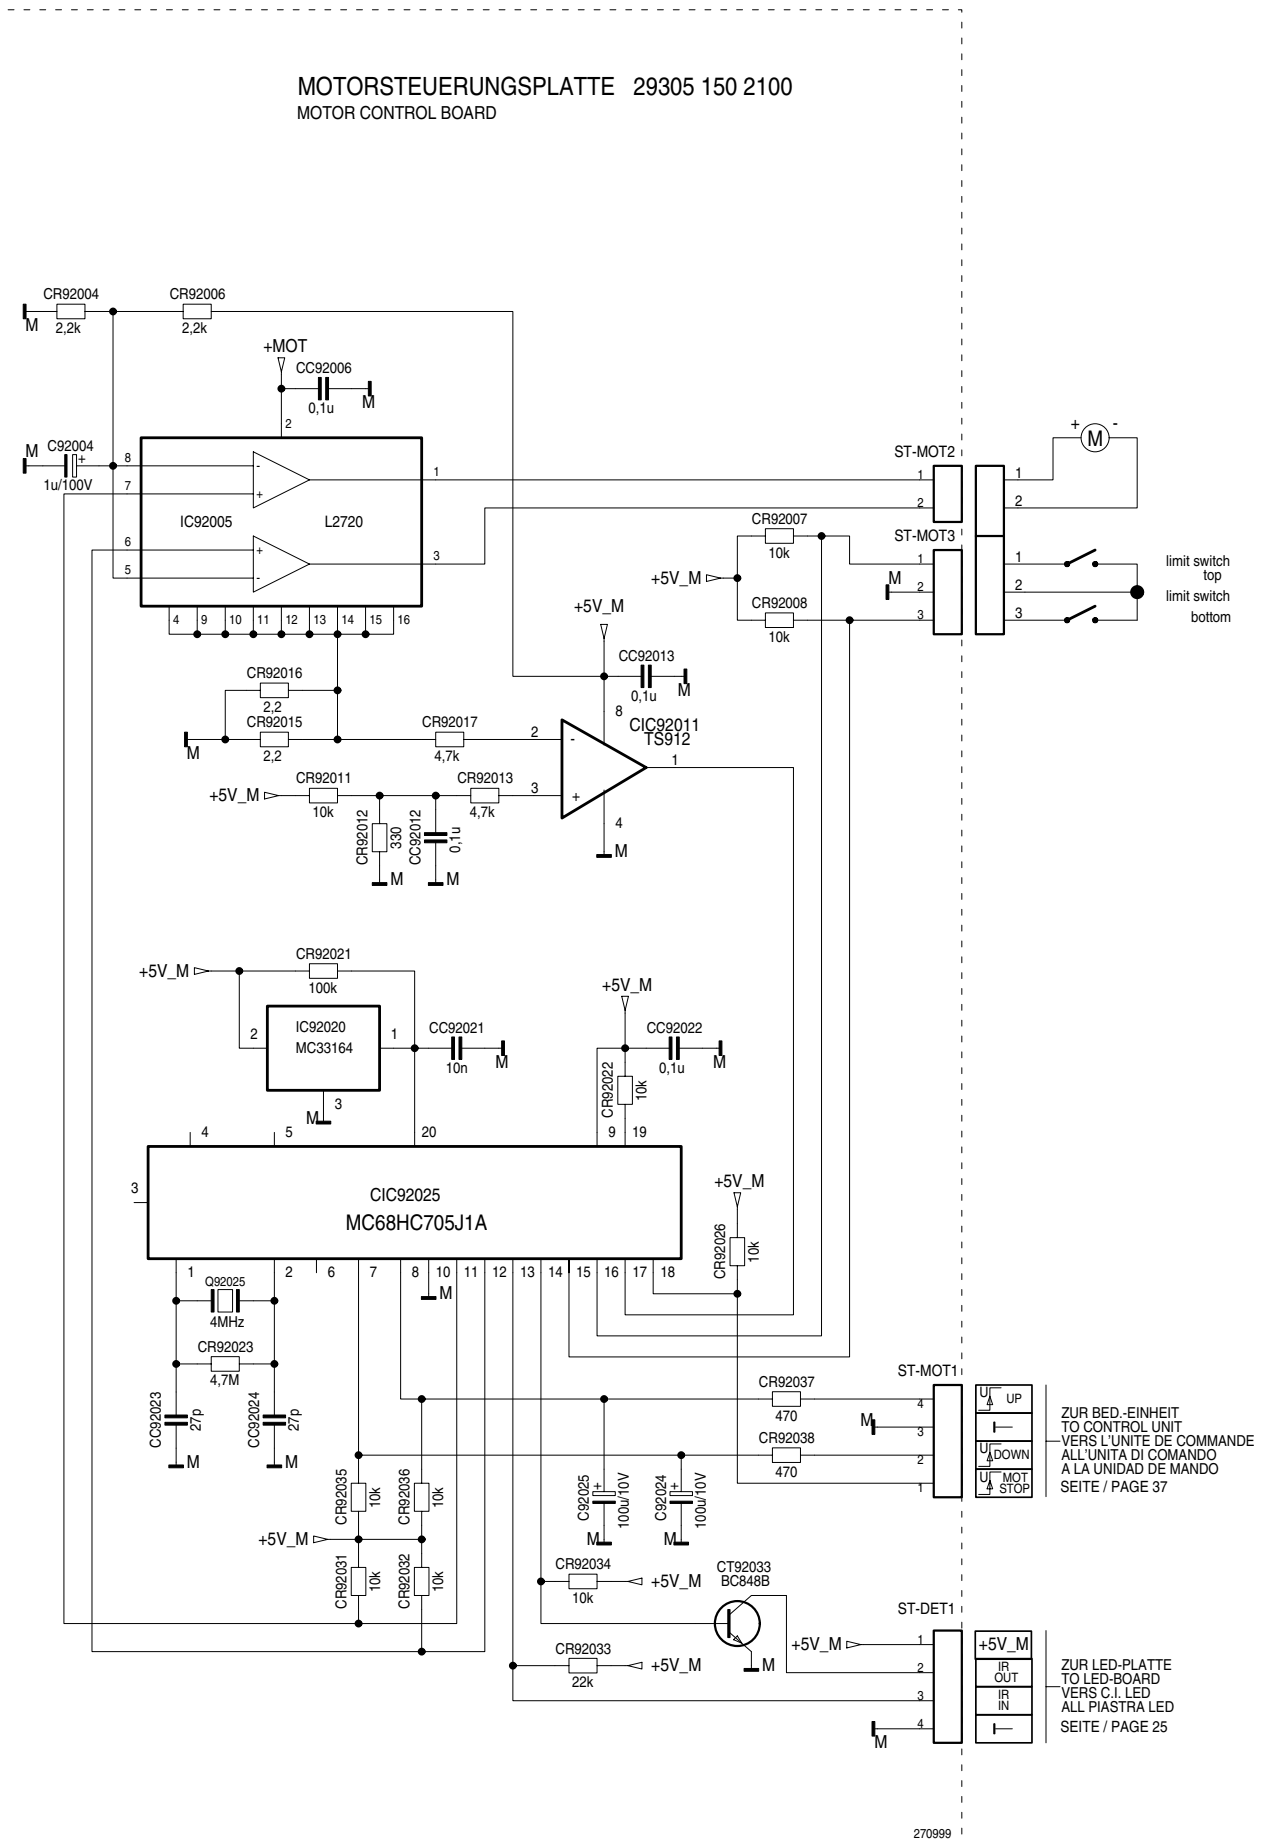

GRUNDIG Service



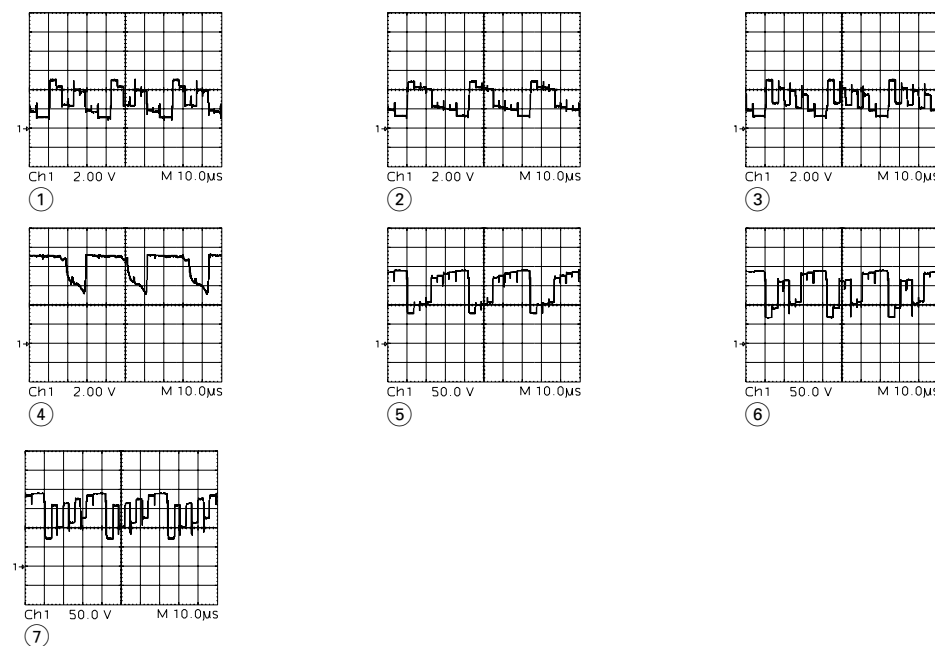

ZUM CHASSIS
TO CHASSIS
VERS CHASSIS -
AL TELAIO
AL CHASSIS

SEITE / PAGE 3-18

