


# TX-28/32W100T

## Remote Control Transmitter TNQE095

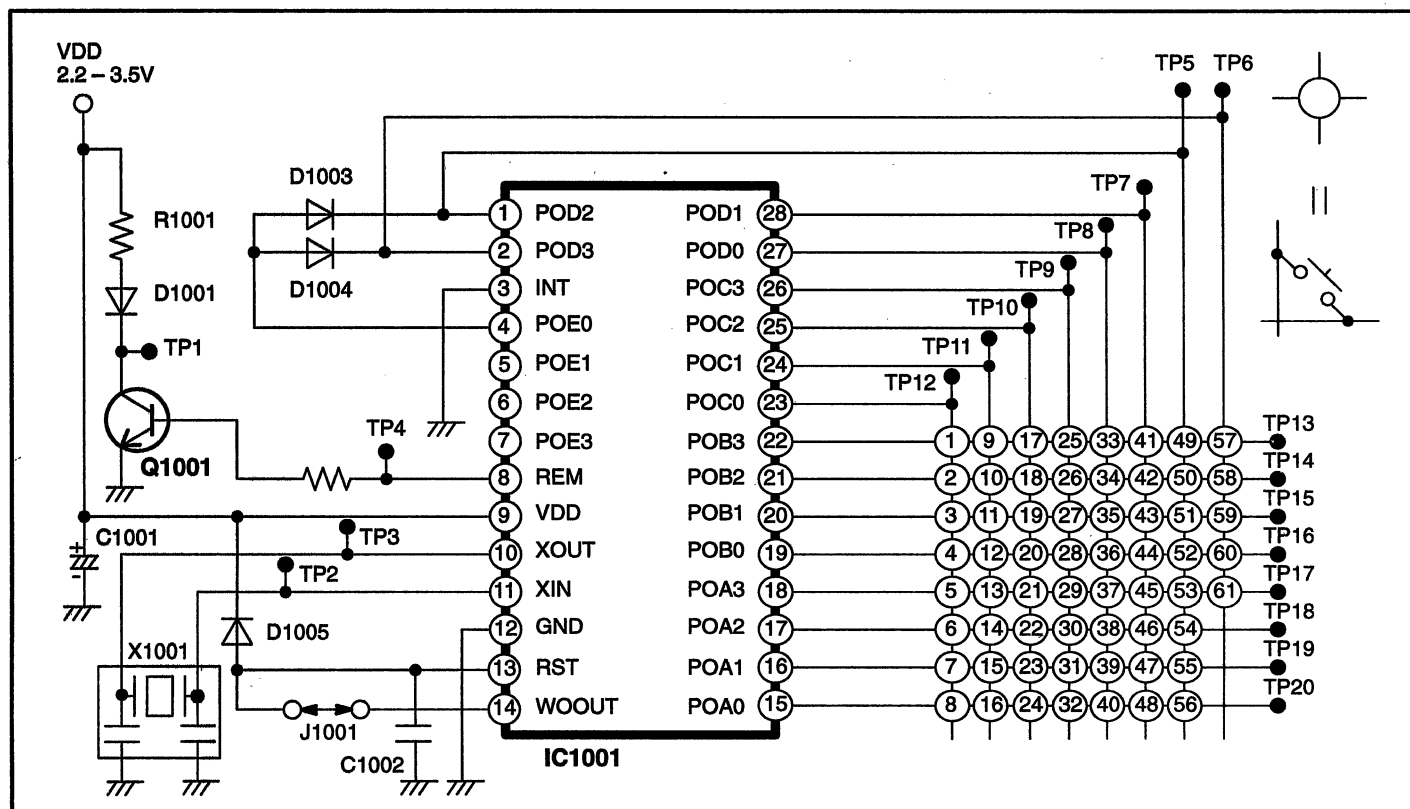

Key Function Table


| Key No. | Function              | Key No. | Function            | Key No. | Function     |
|---------|-----------------------|---------|---------------------|---------|--------------|
| 1       | MUTE                  | 23      | CUSTOM MENU         | 45      | INDEX        |
| 2       | DSP                   | 24      | 4                   | 46      | HOLD         |
| 3       | TV/AV                 | 25      | 9                   | 47      | STEREO       |
| 4       | VCR/LD-REW            | 26      | 8                   | 48      | ASPECT       |
| 5       | VCR/LD-STOP           | 27      | VOL. UP             | 49      | CHANGE       |
| 6       | VCR/LD-FF             | 28      | N (NORMAL)          | 50      | STROBE       |
| 7       | VCR/LD-PLAY           | 29      | ▶                   | 51      | PIP ACTION   |
| 8       | VCR/LD-POWER ON/OFF   | 30      | VCR-CH UP/LD-SKIP + | 52      | LIST STORE   |
| 9       | 3                     | 31      | ◀                   | 53      | F/T/B        |
| 10      | 2                     | 32      | 7                   | 54      | REVEAL       |
| 11      | POS. UP               | 33      | 2 DIGIT             | 55      | FP           |
| 12      | LD-FUNCTION           | 34      | 0                   | 56      | MULTI WINDOW |
| 13      | VCR-ADVANCE/LD-DISC A | 35      | VOL. DOWN           | 57      | -----        |
| 14      | VCR-REC/LD-DISC B     | 36      | ▼                   | 58      | -----        |
| 15      | VCR-FUNCTION          | 37      | OFF TIMER           | 59      | -----        |
| 16      | 1                     | 38      | VCR-CH DOWN/LD-SKIP | 60      | GREEN        |
| 17      | 6                     | 39      | BASIC MENU          | 61      | YELLOW       |
| 18      | 5                     | 40      | RECALL              | 62      | BLUE         |
| 19      | POS. DOWN             | 41      | STILL               | 63      | RED          |
| 20      | ▲                     | 42      | CH SERCH            | 64      | POWER        |
| 21      | VCR/LD-PAUSE          | 43      | PIP                 | 65      | -----        |
| 22      | VCR-REC               | 44      | TV/TEXT             | 66      | -----        |




L-BOARD

TNPA0754 (For TX-32W100T)

TNPA0754AB (For TX-28W100T)

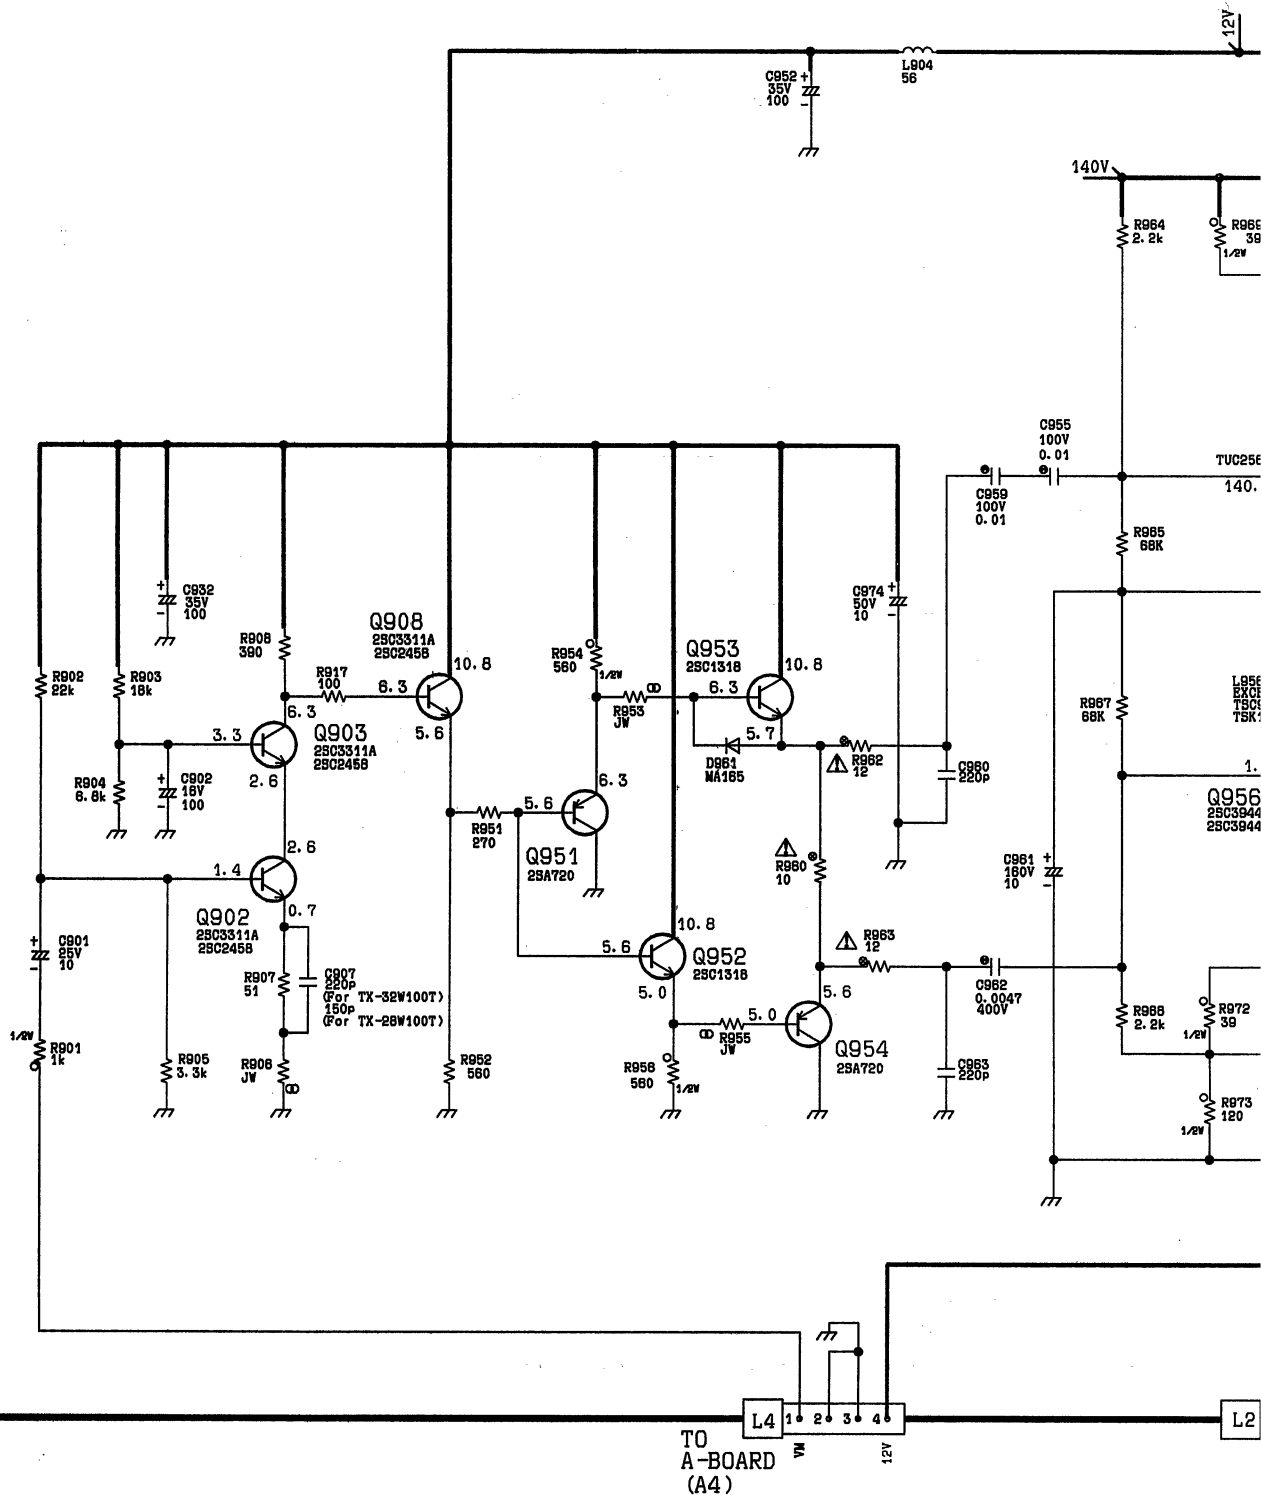




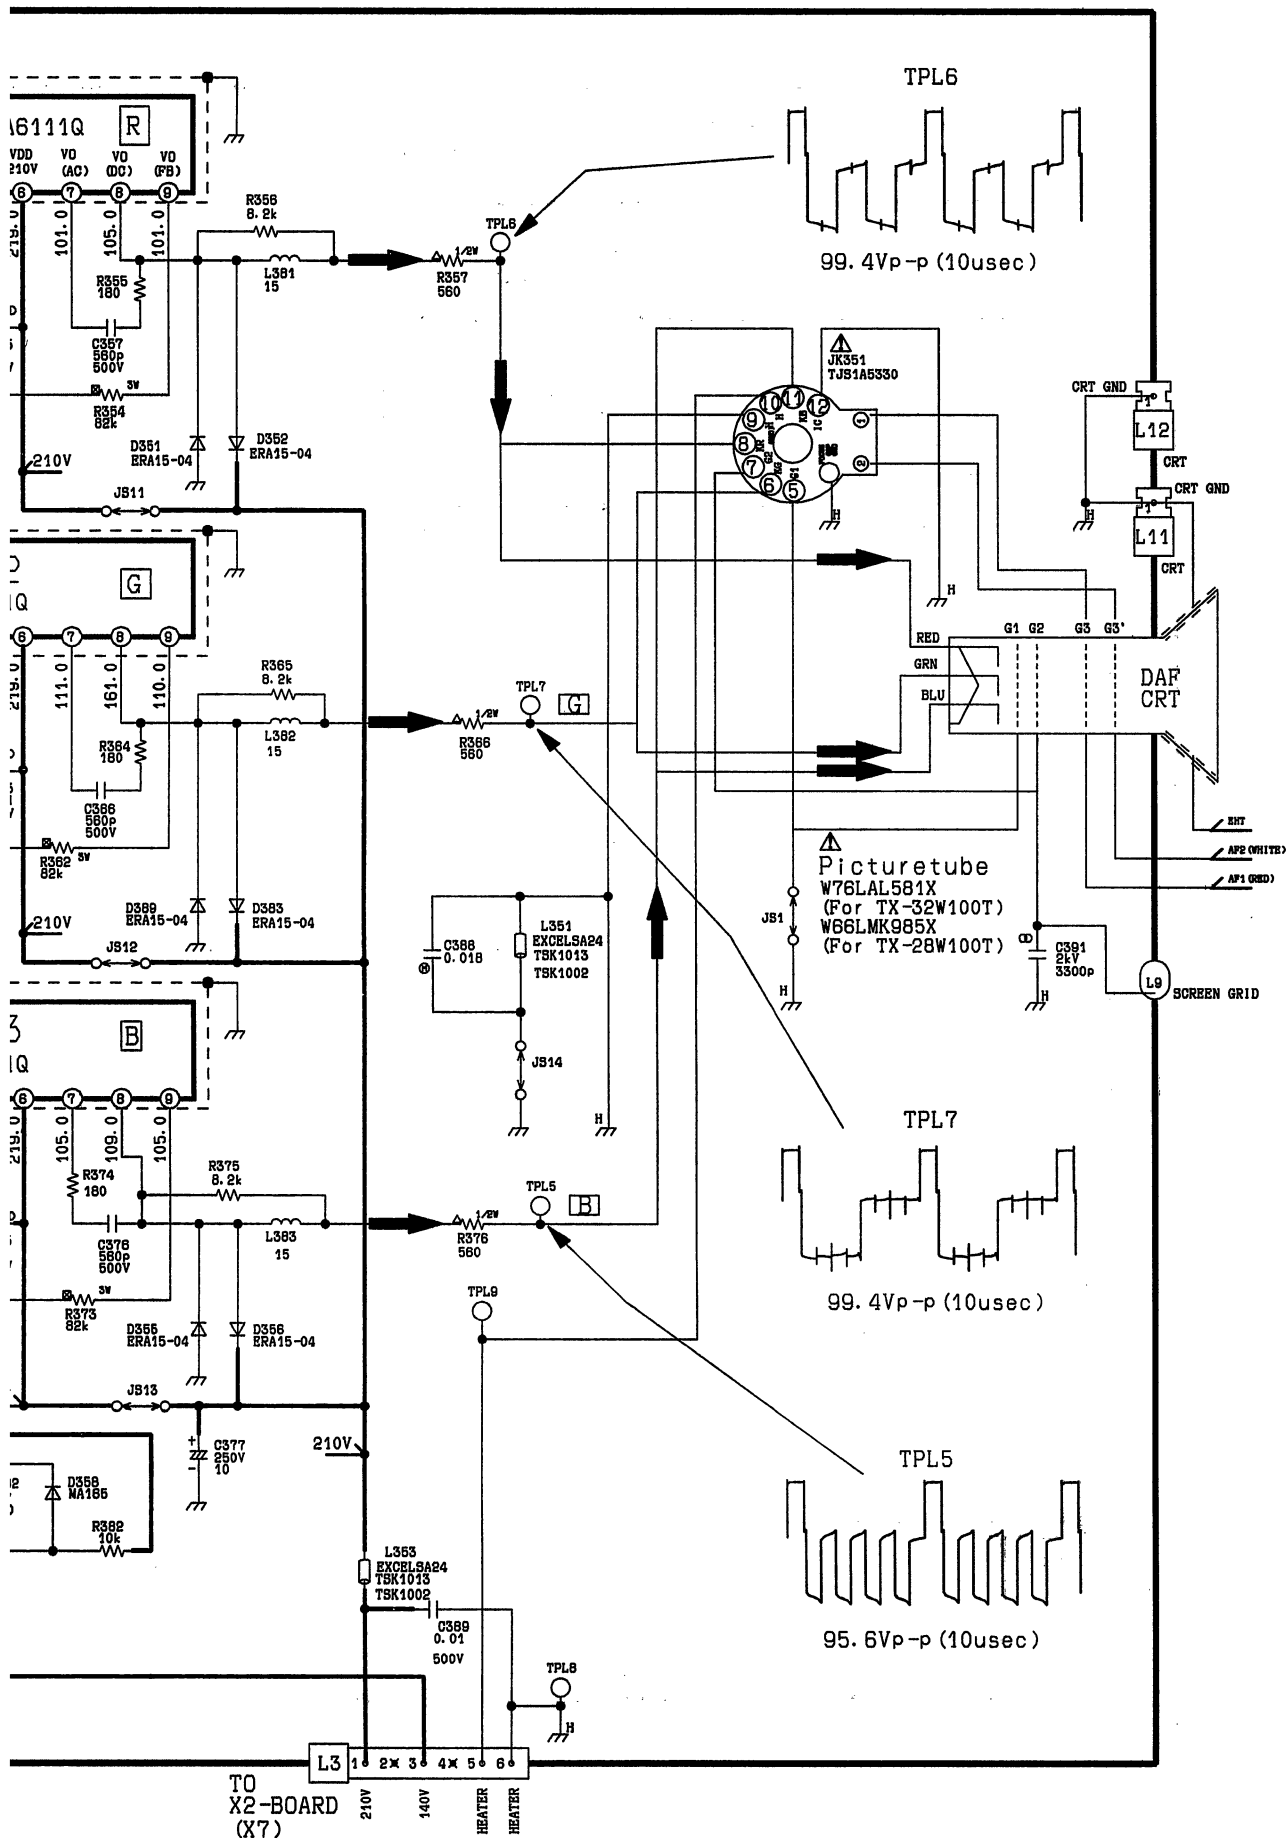

TX-28/32W100T




P2-BOARD TNPA1082

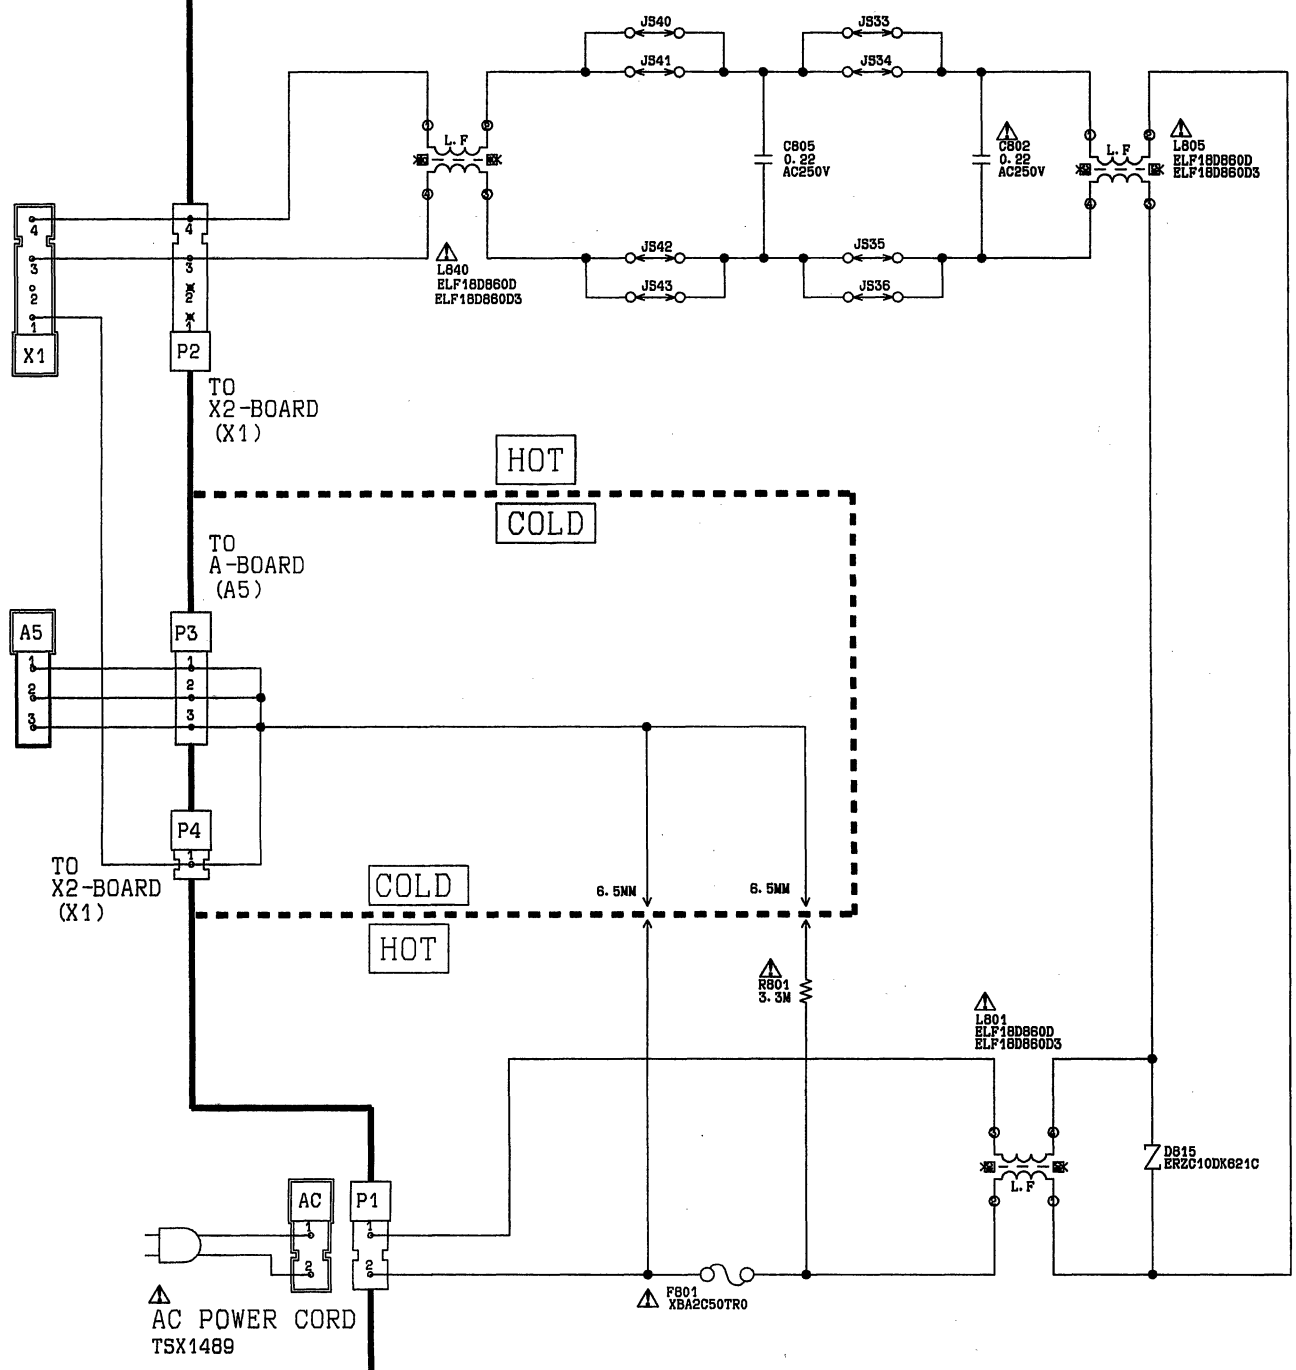


# TX-28/32W100T


# TX-

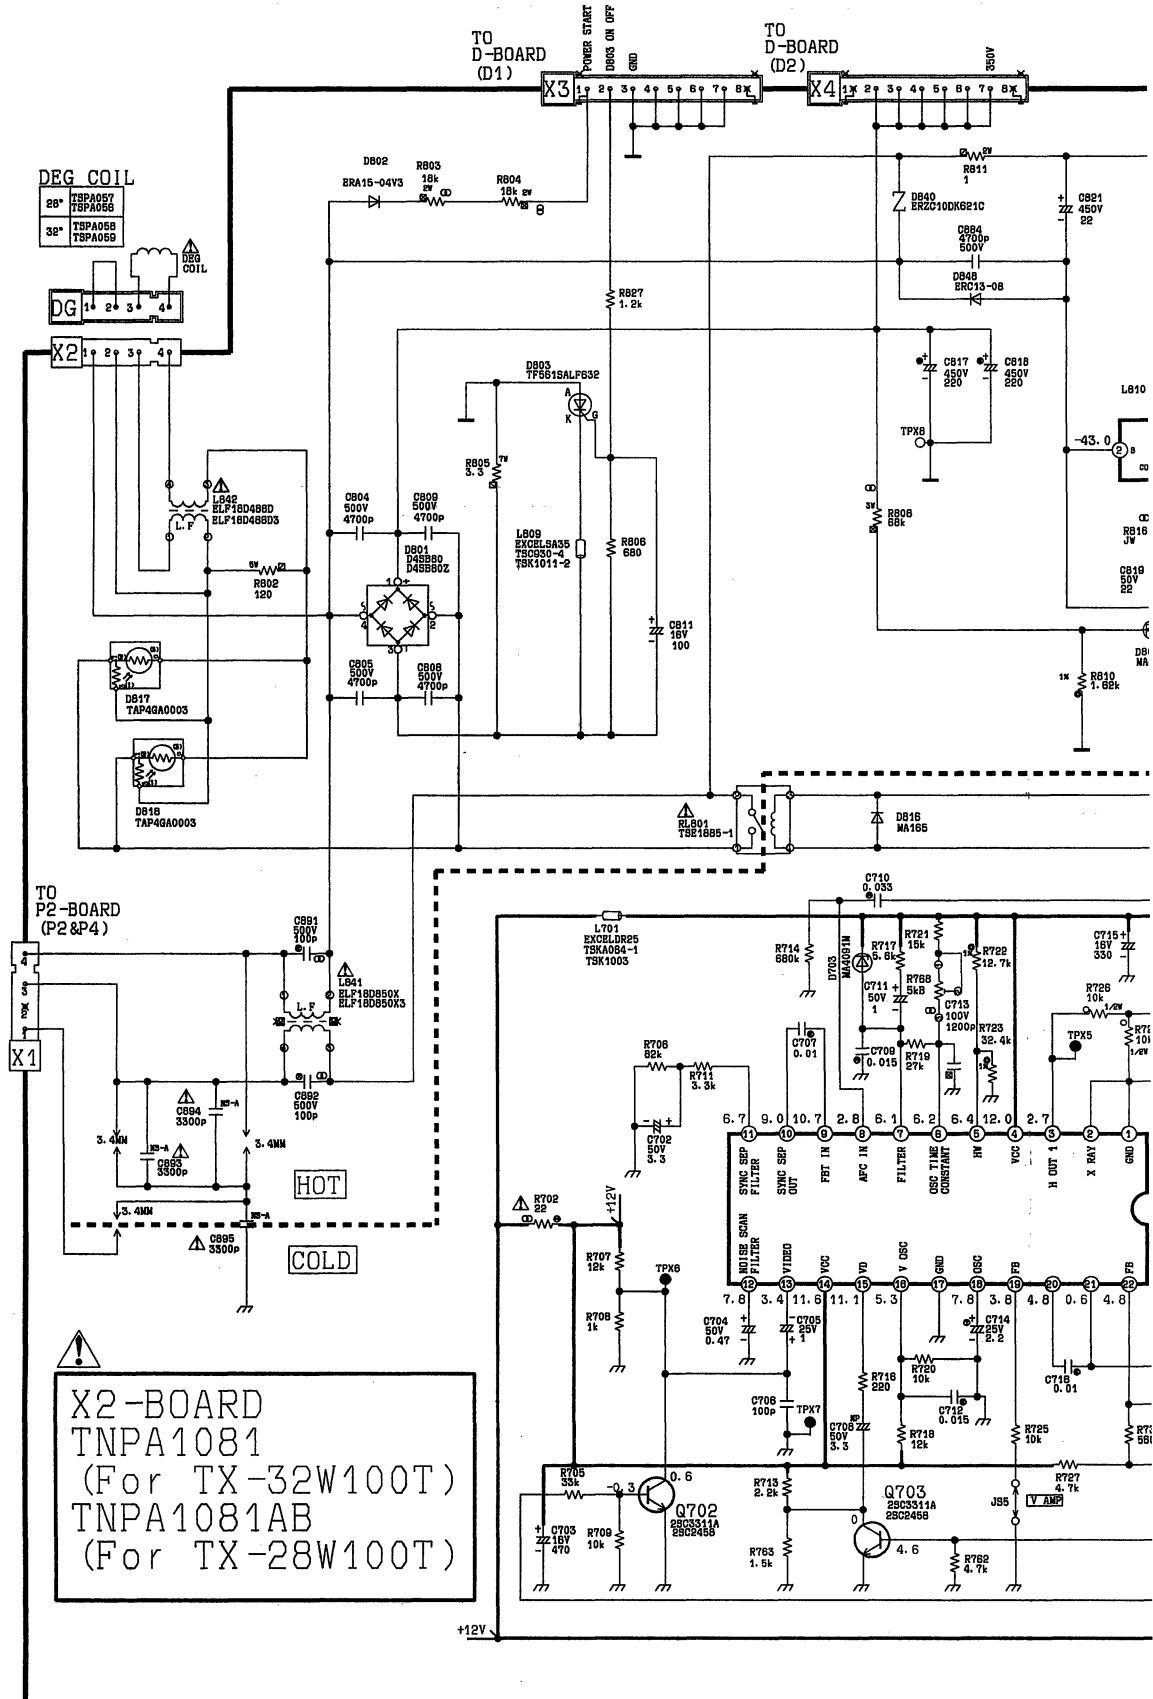


X2-BOARD  
TNPA1081  
(For TX-32W100T)  
TNPA1081AB  
(For TX-28W100T)

# TX-28/32W100T

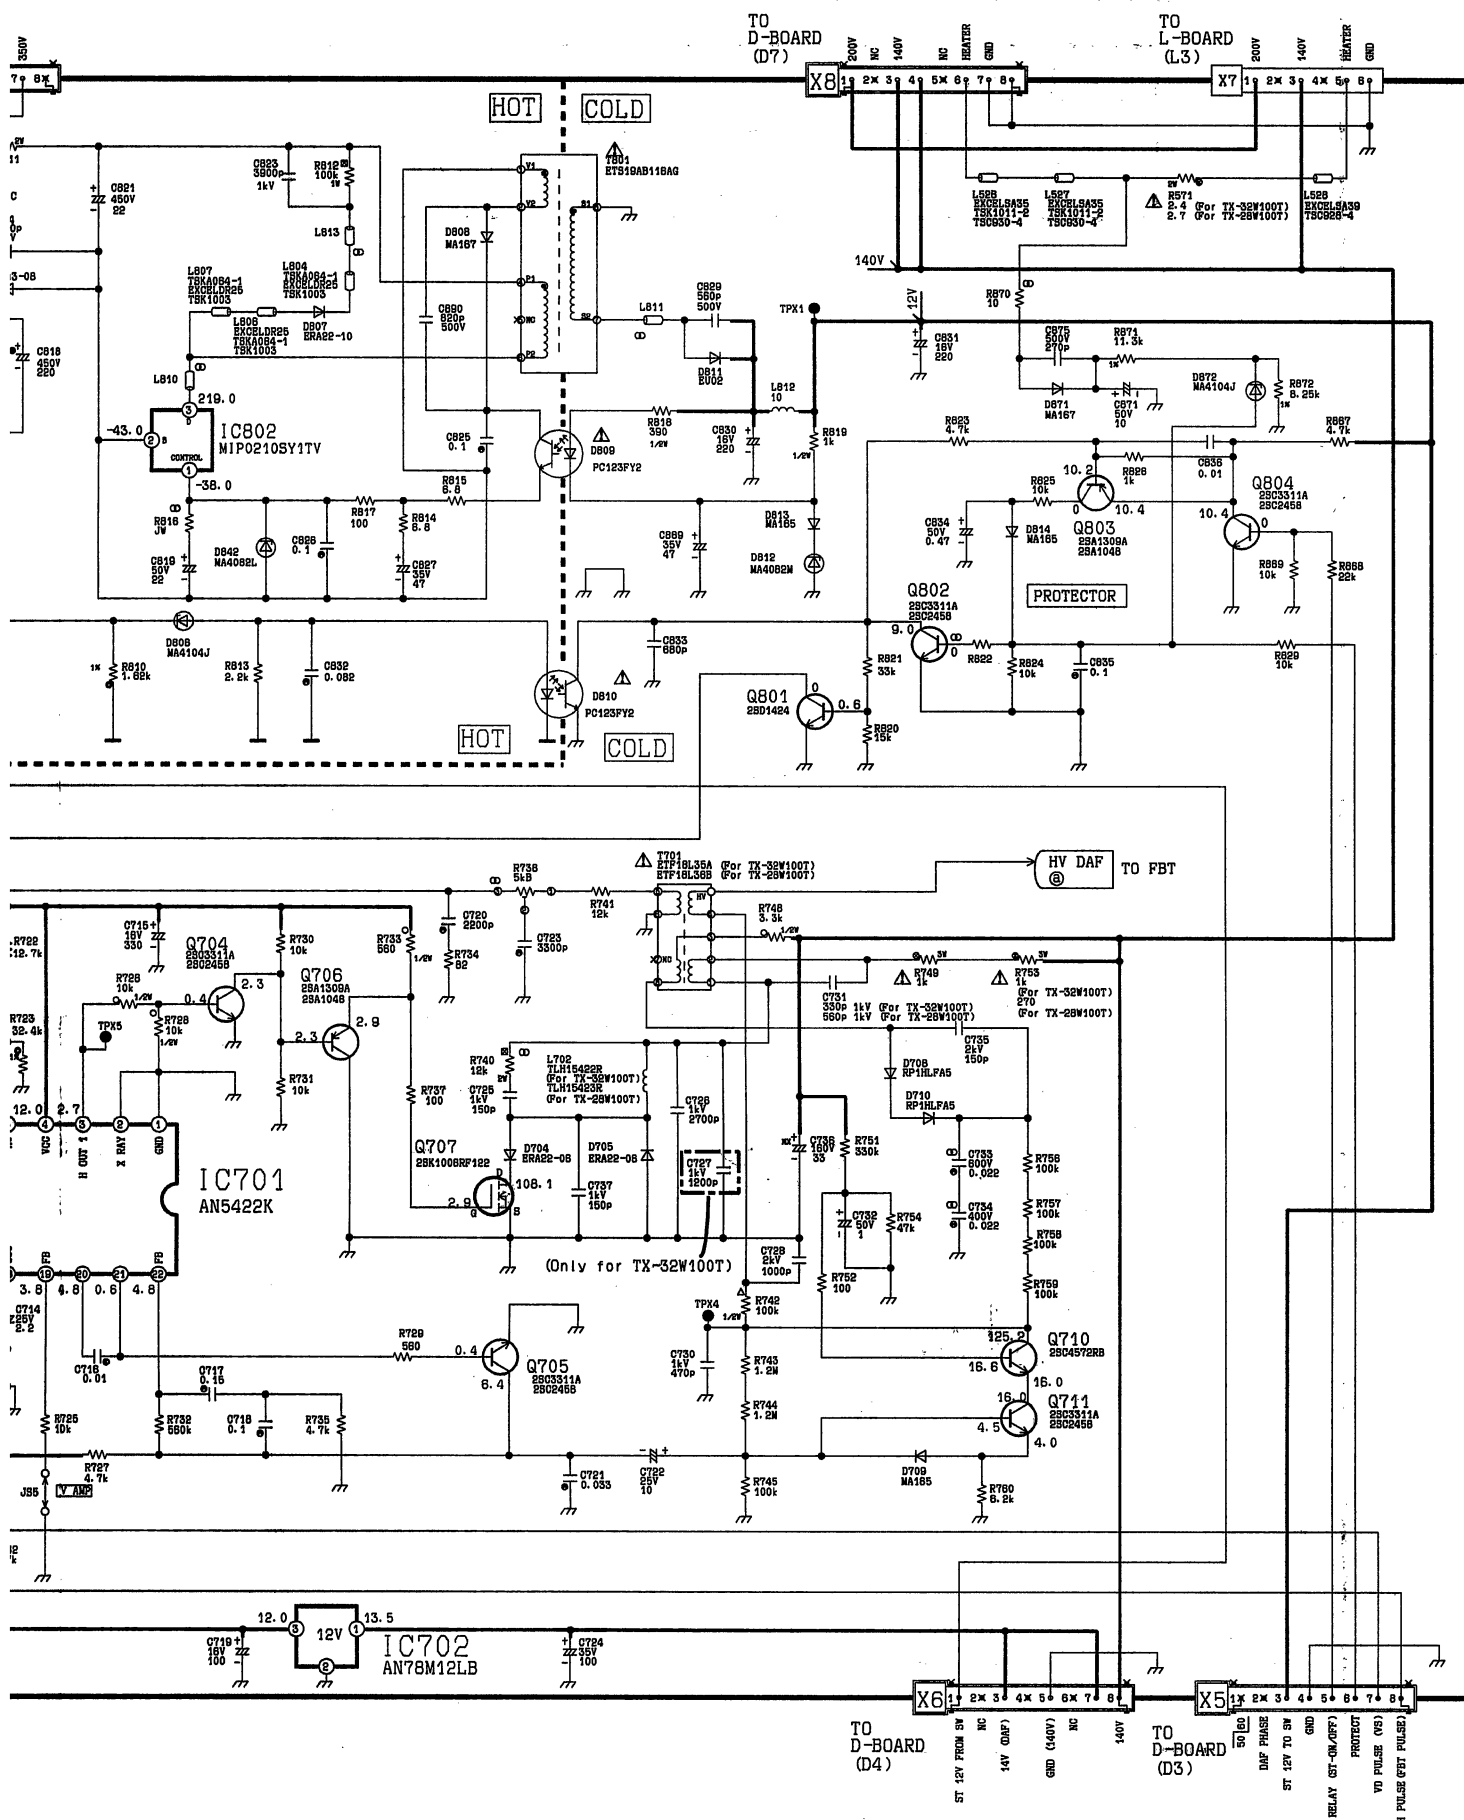


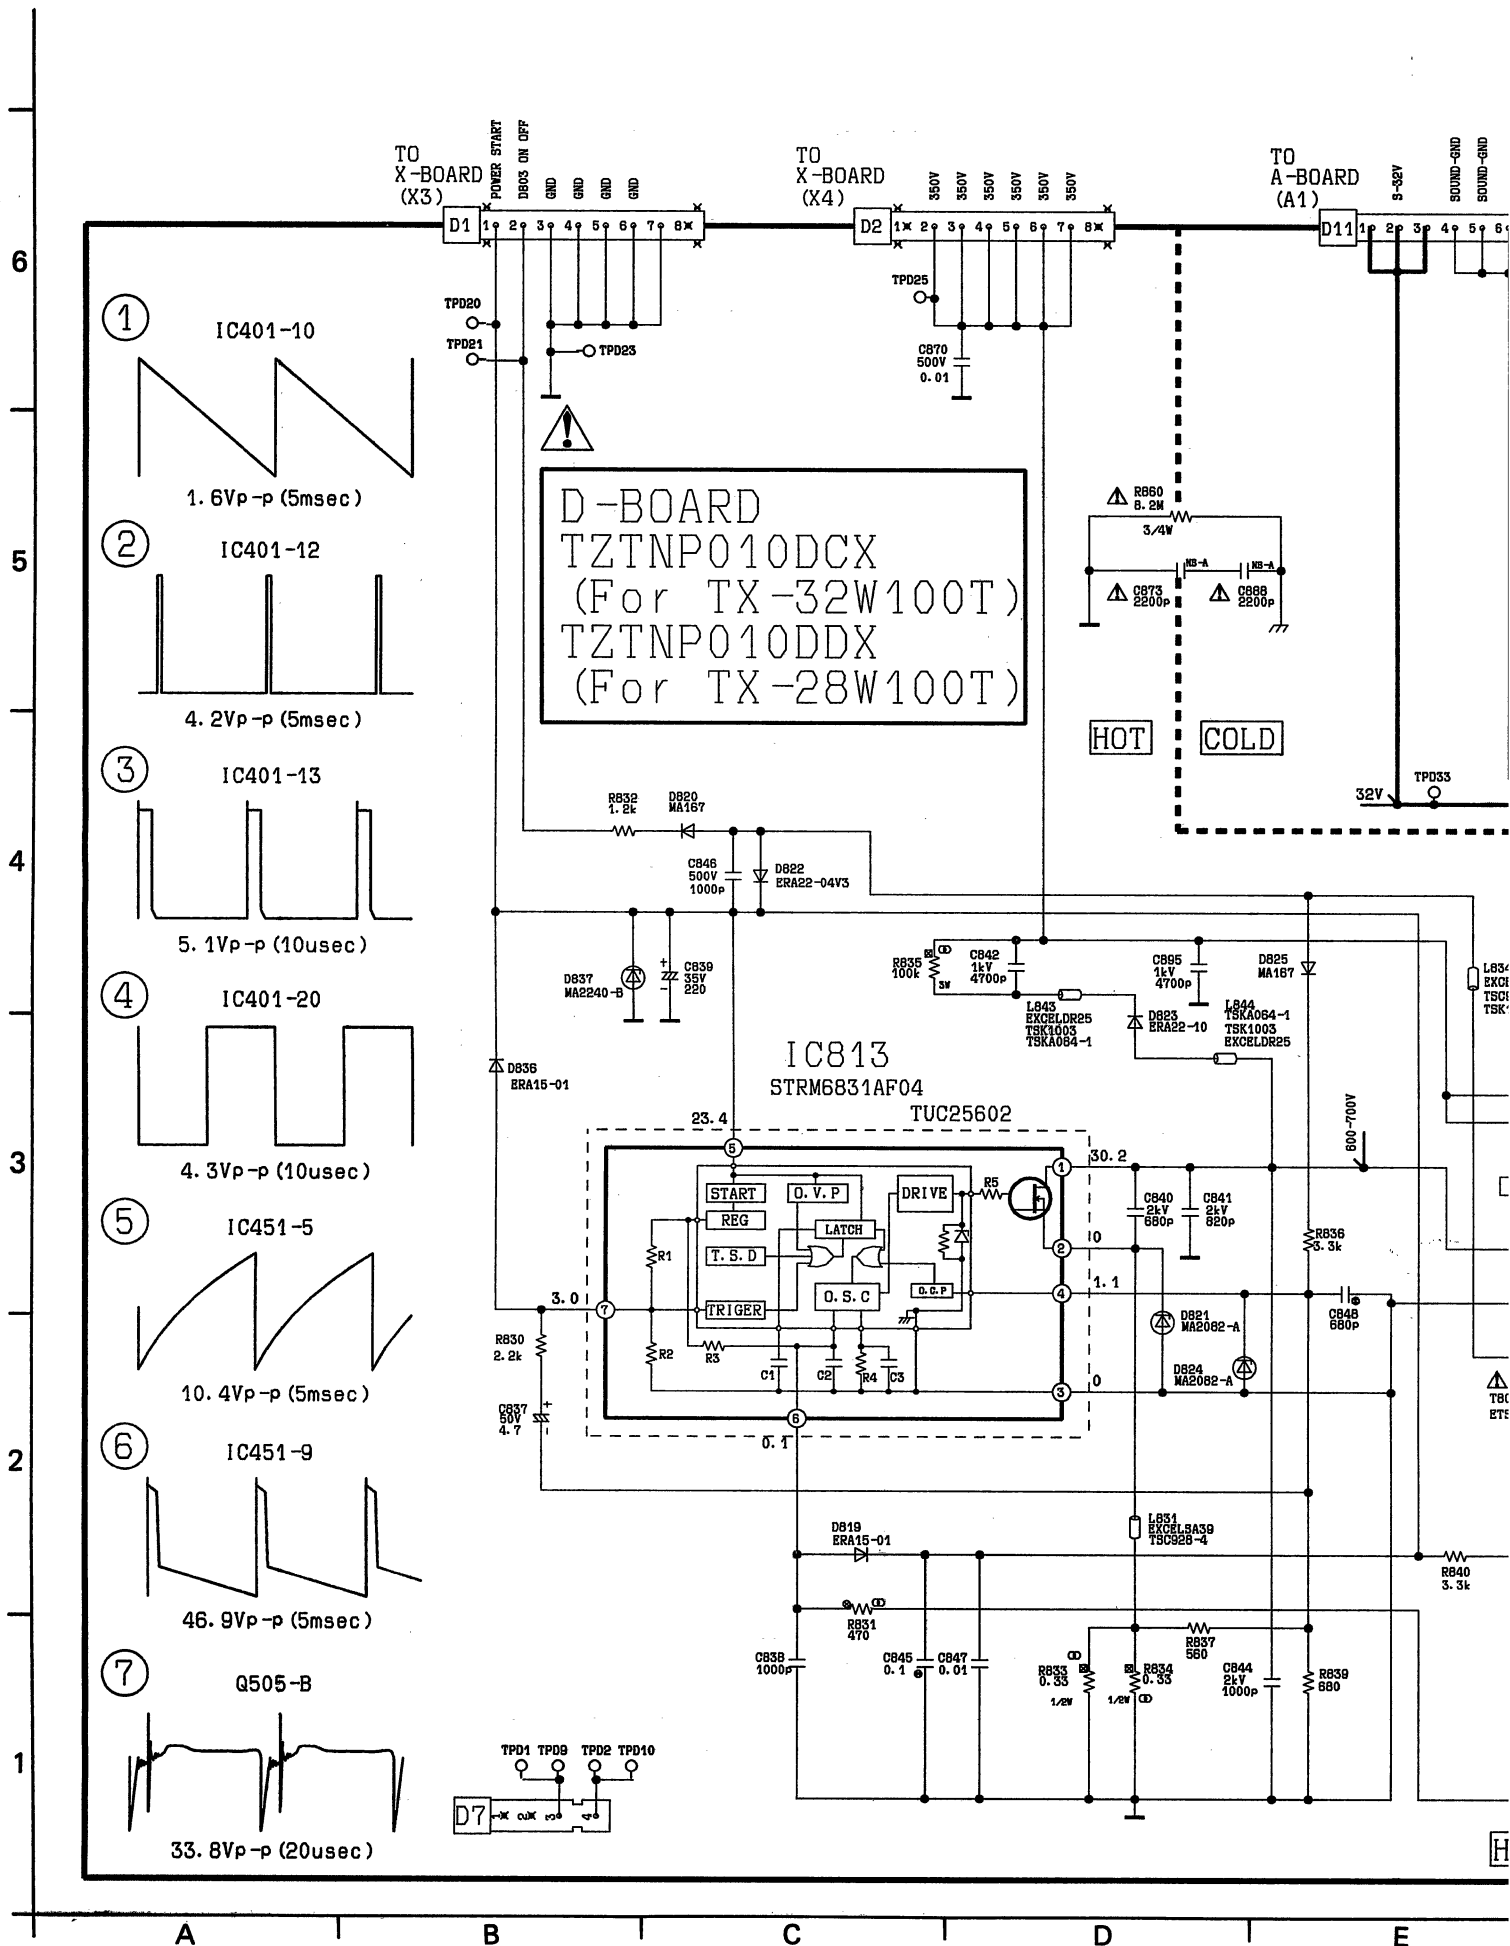

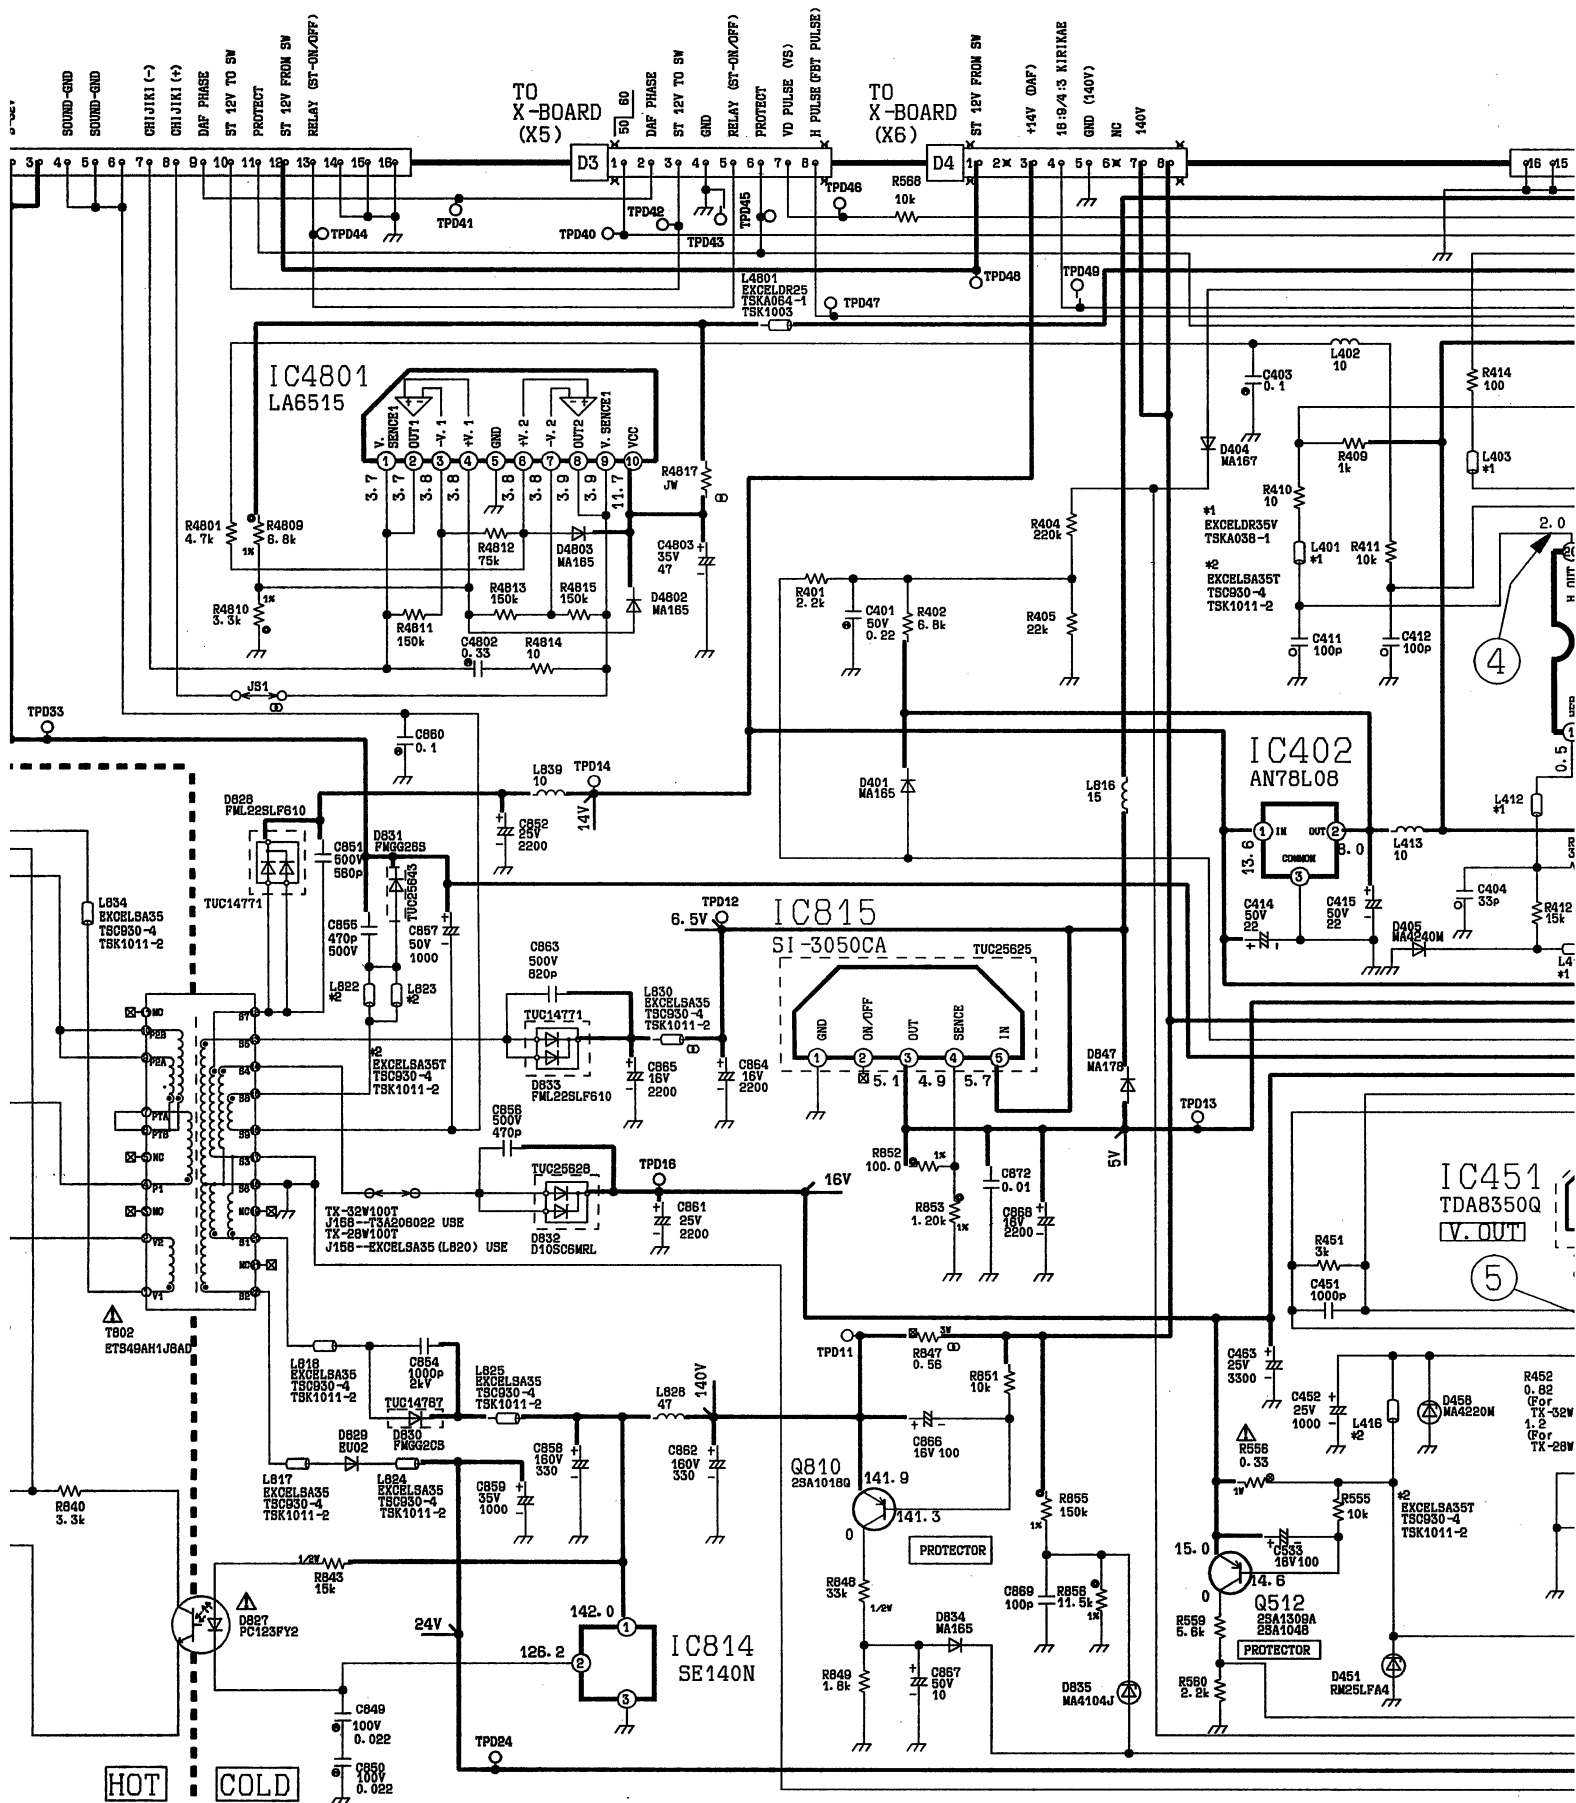




# TX-28/32W100T

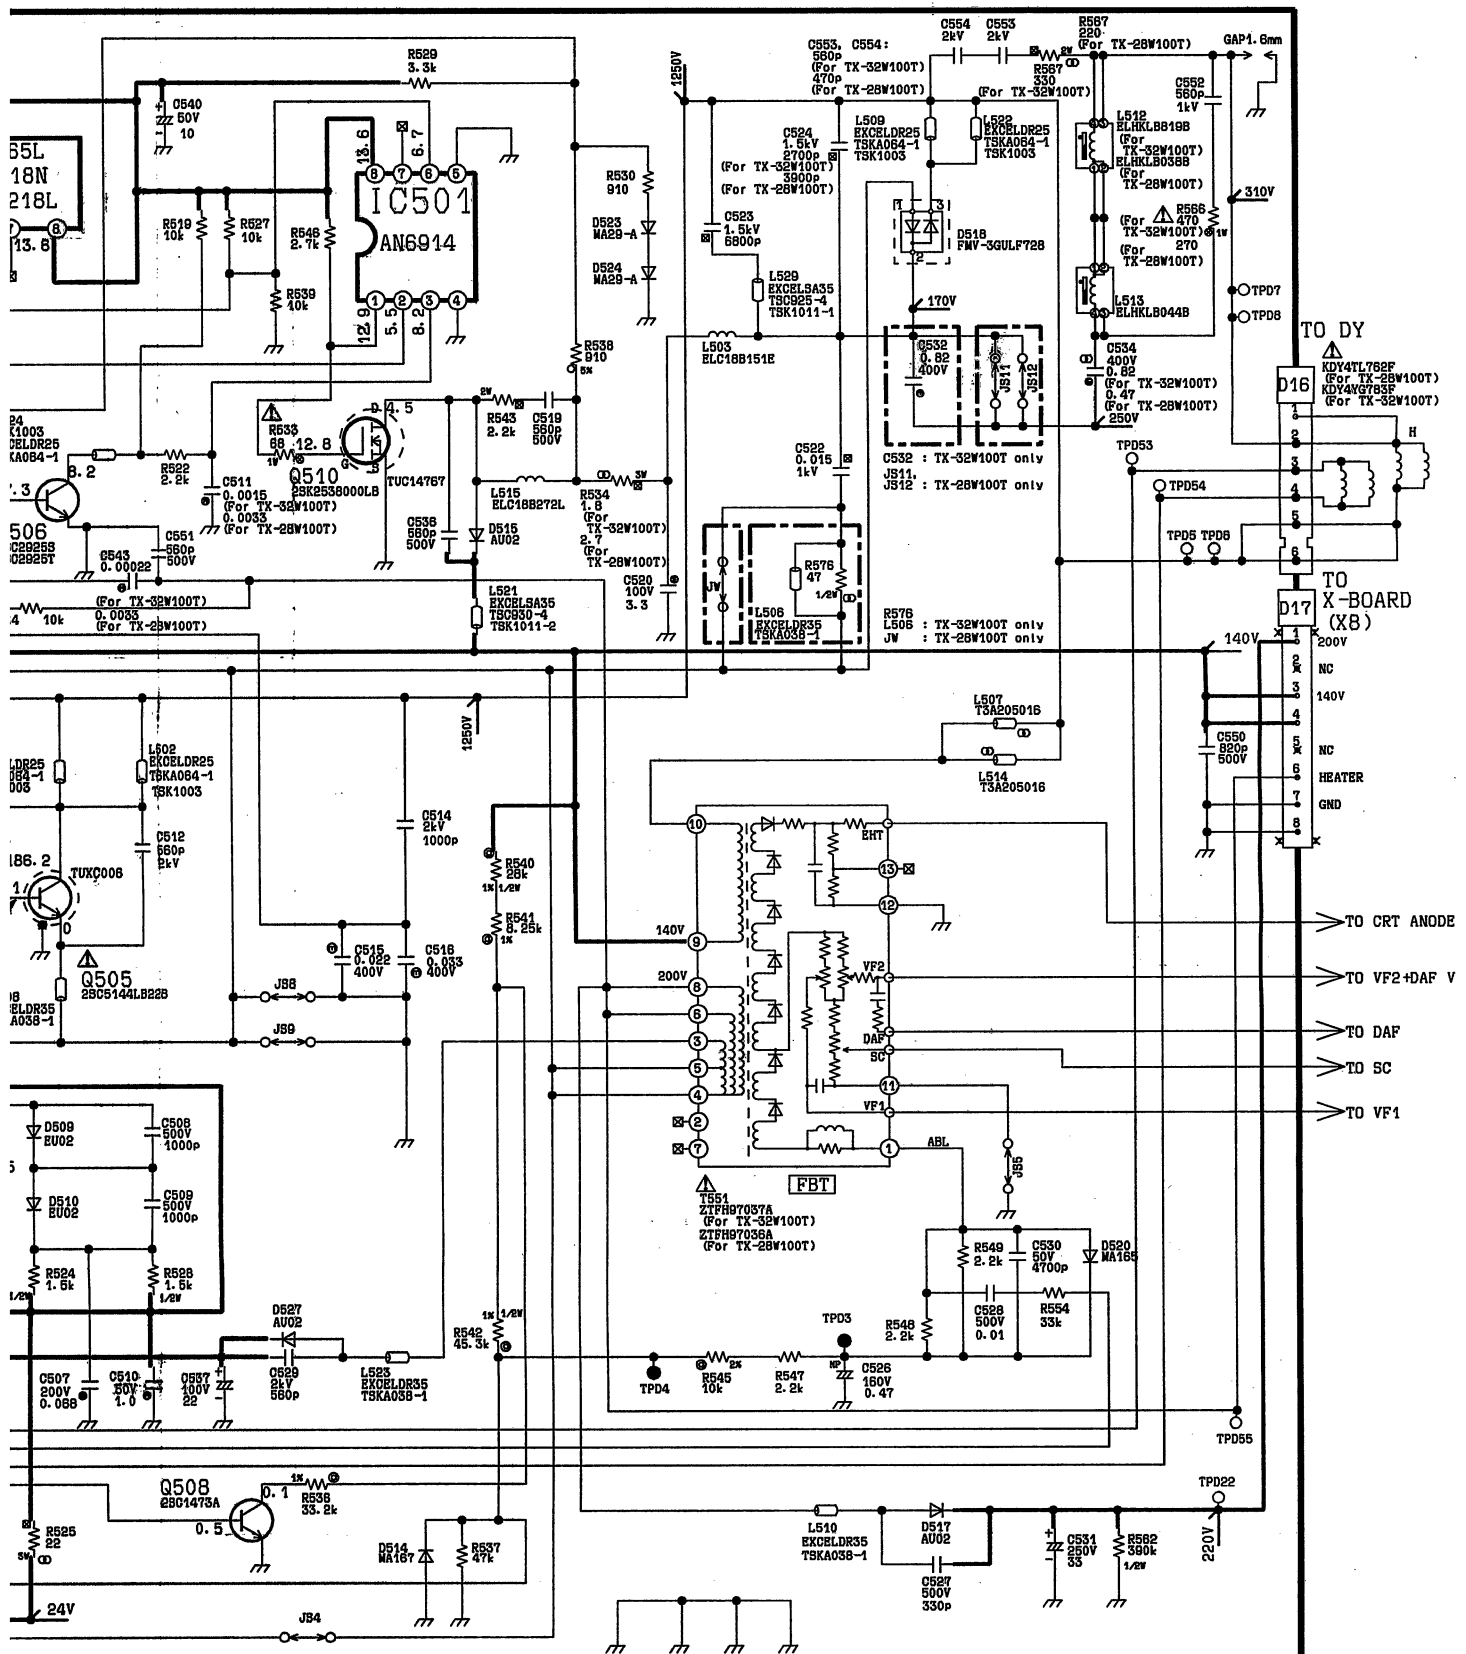

**S**



# TX-28/32W100T

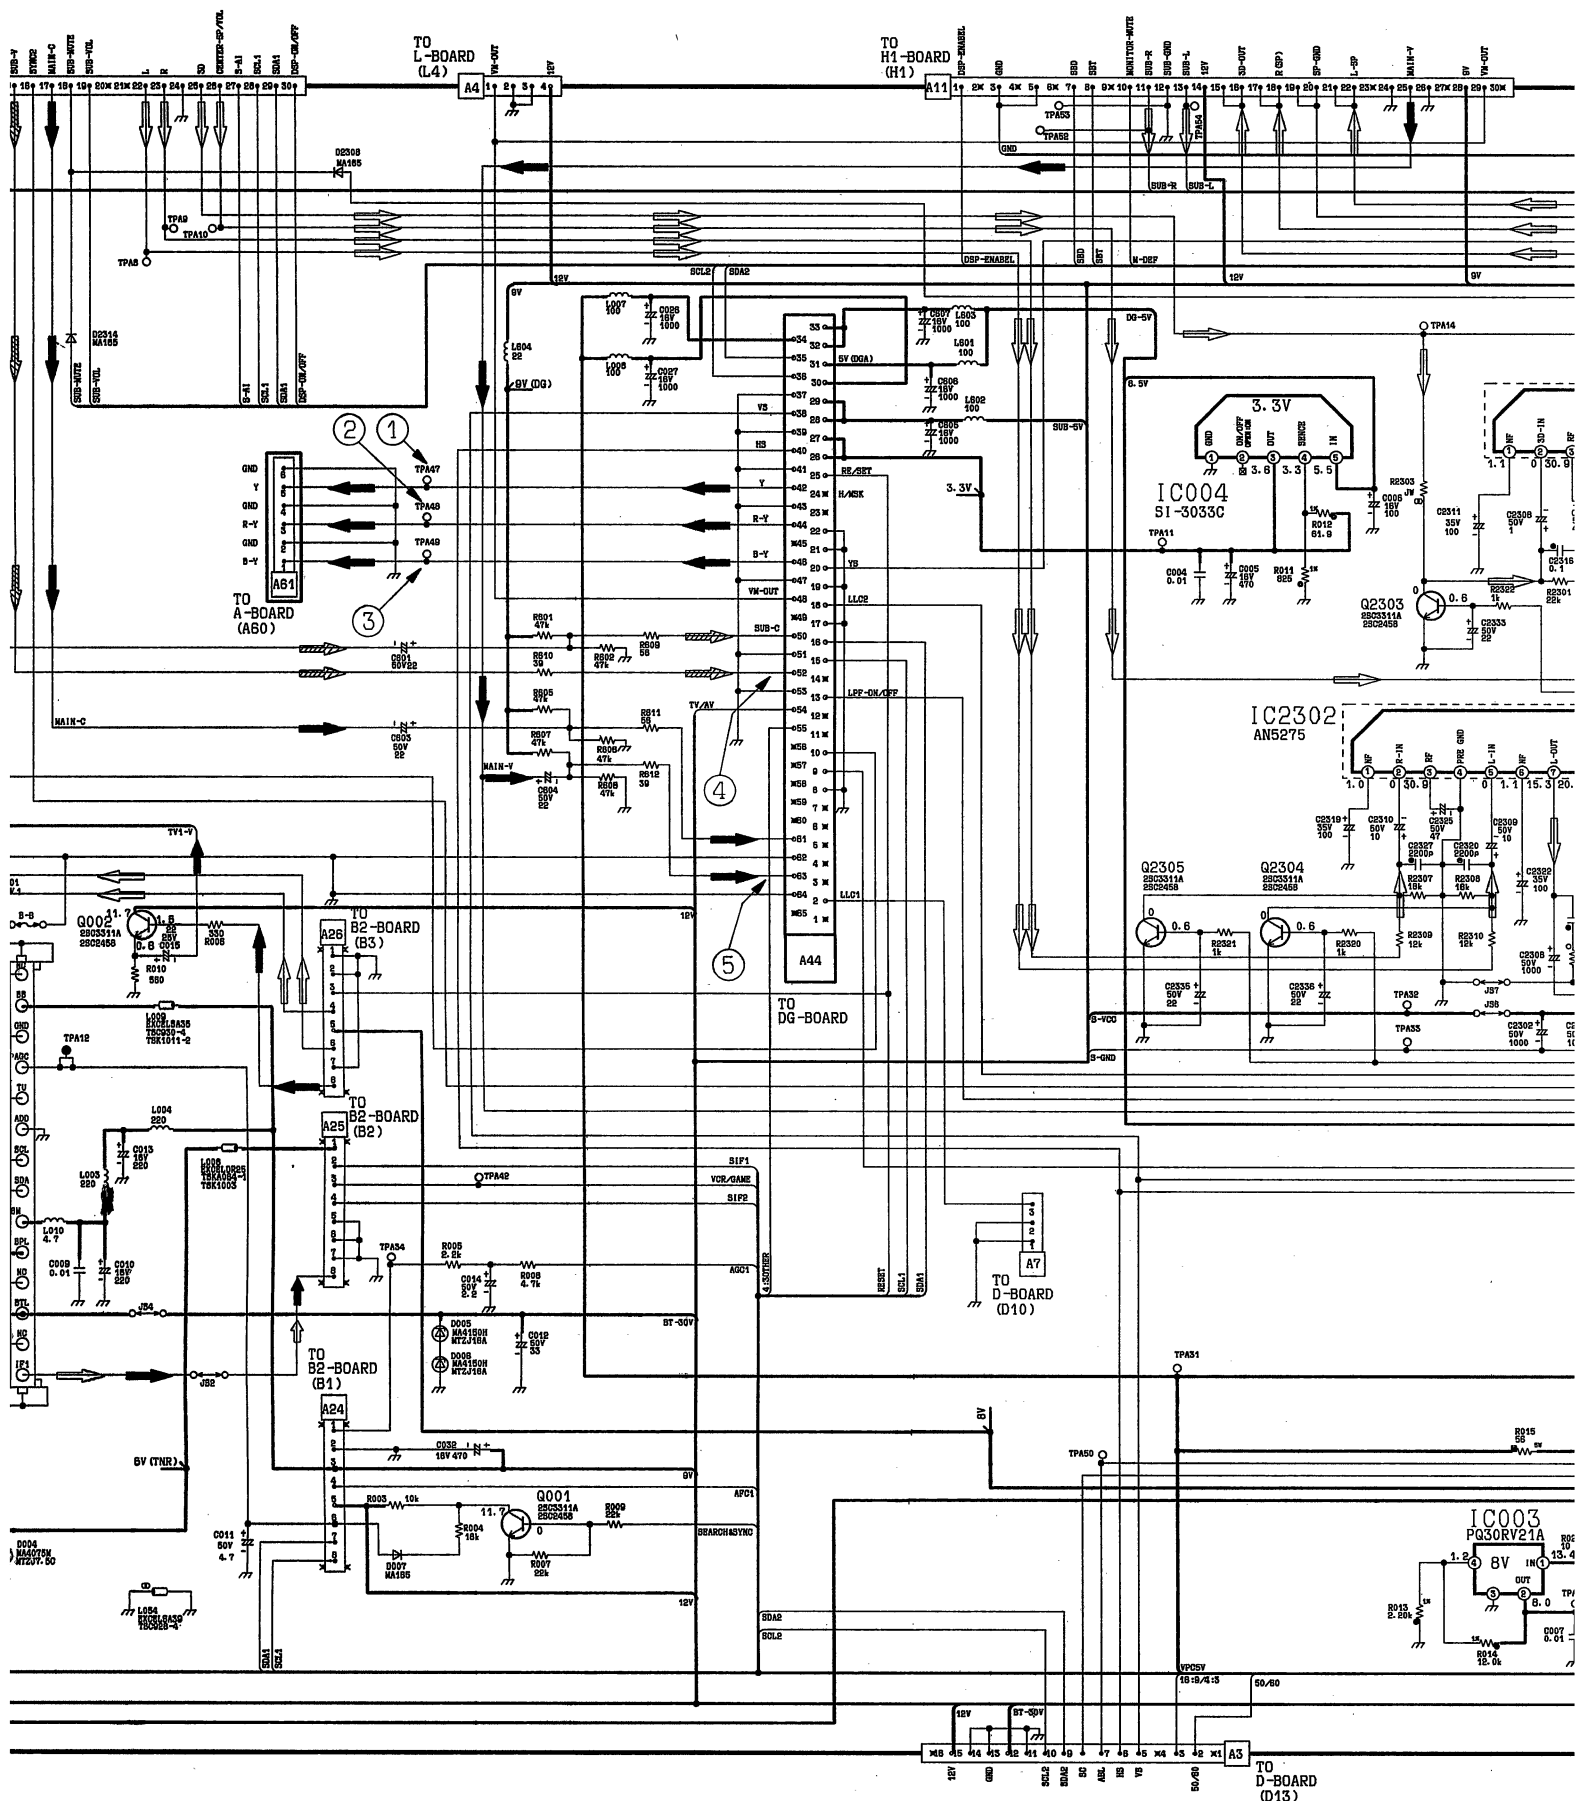

**E**


**F**

**G**


H

I

1

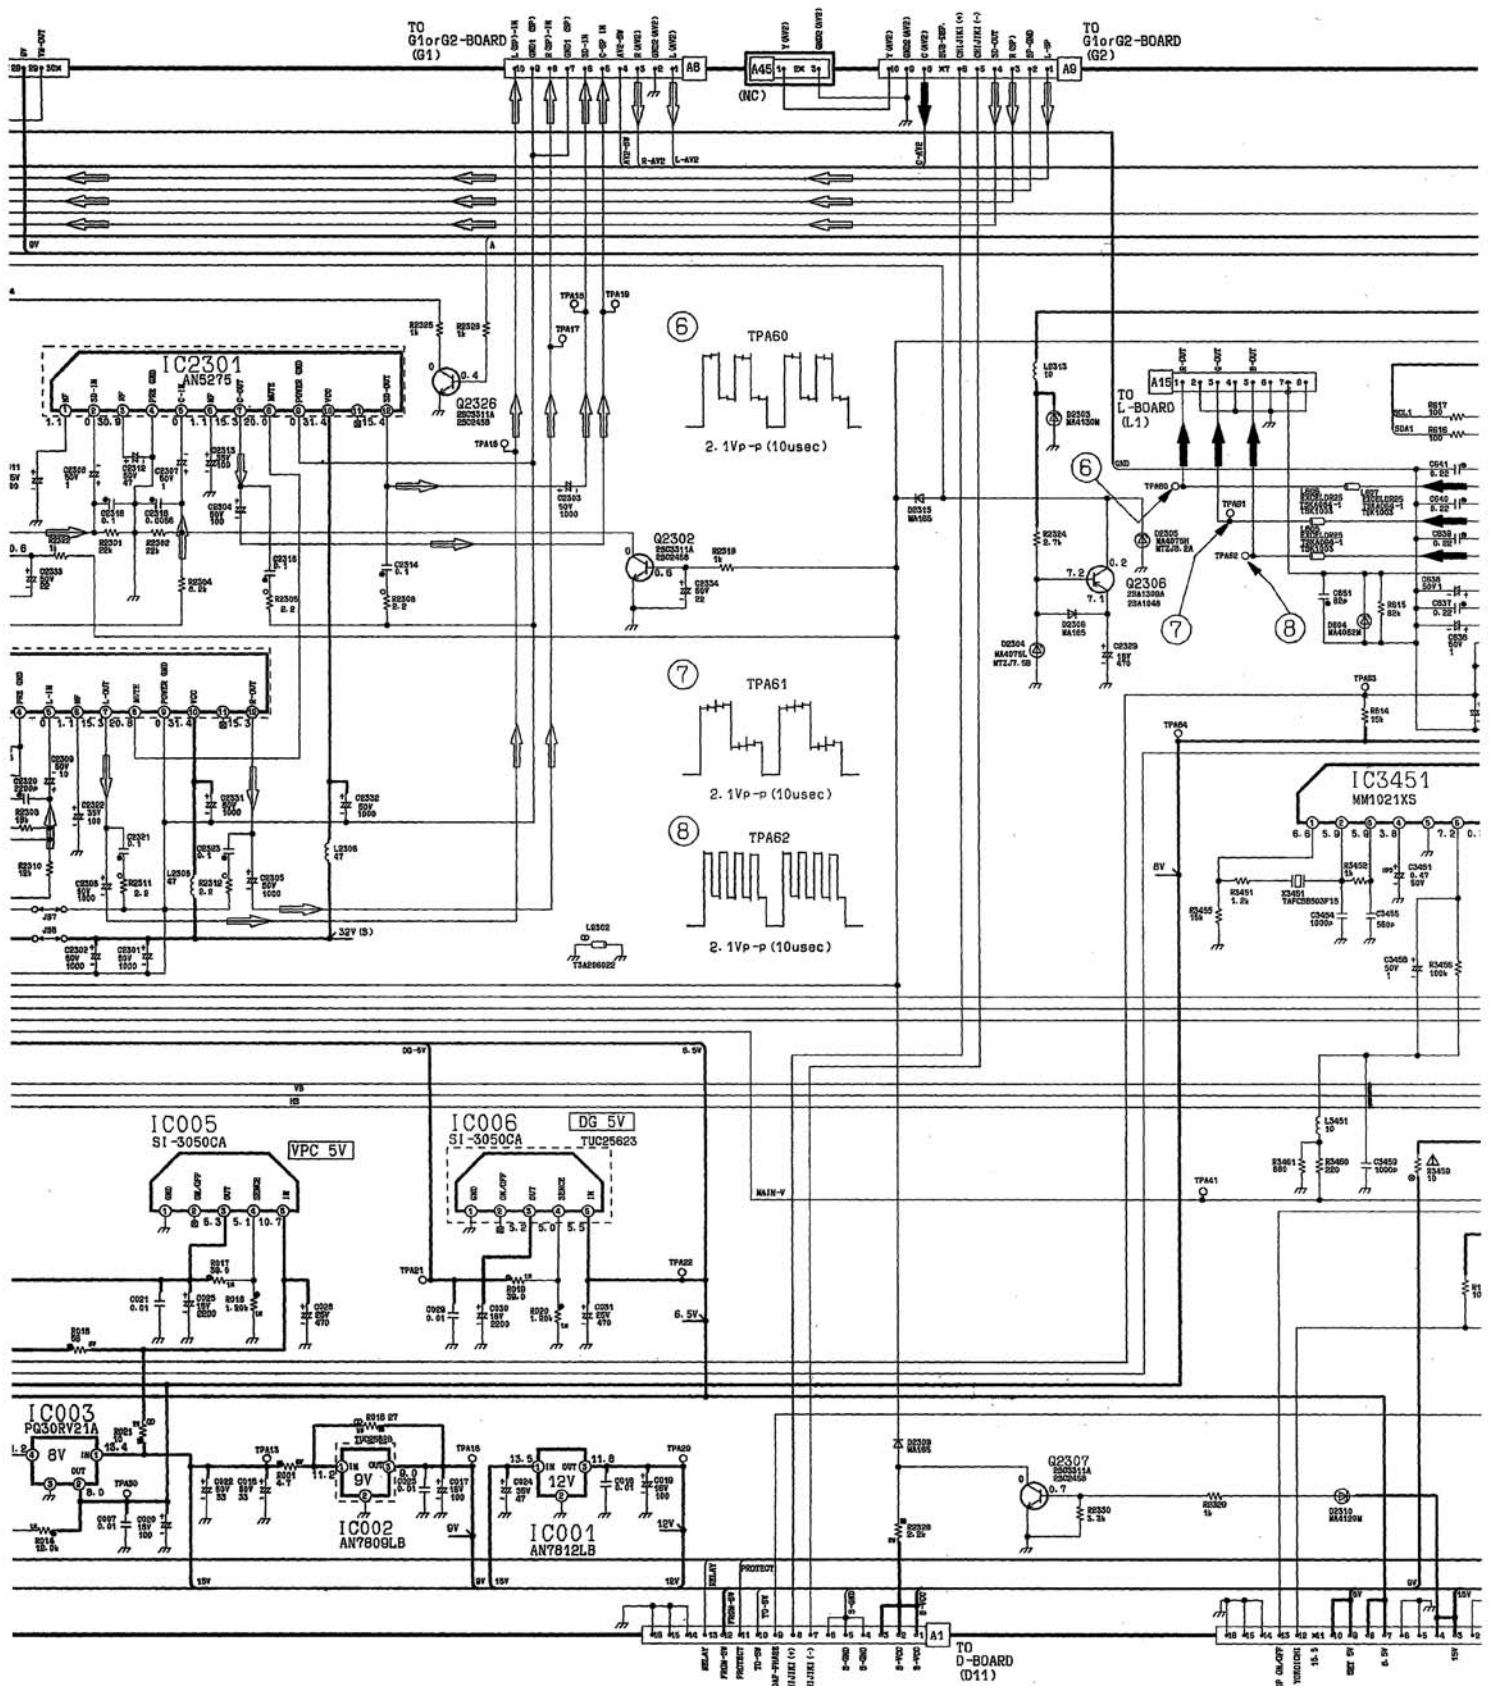


# TX-28/32W100T

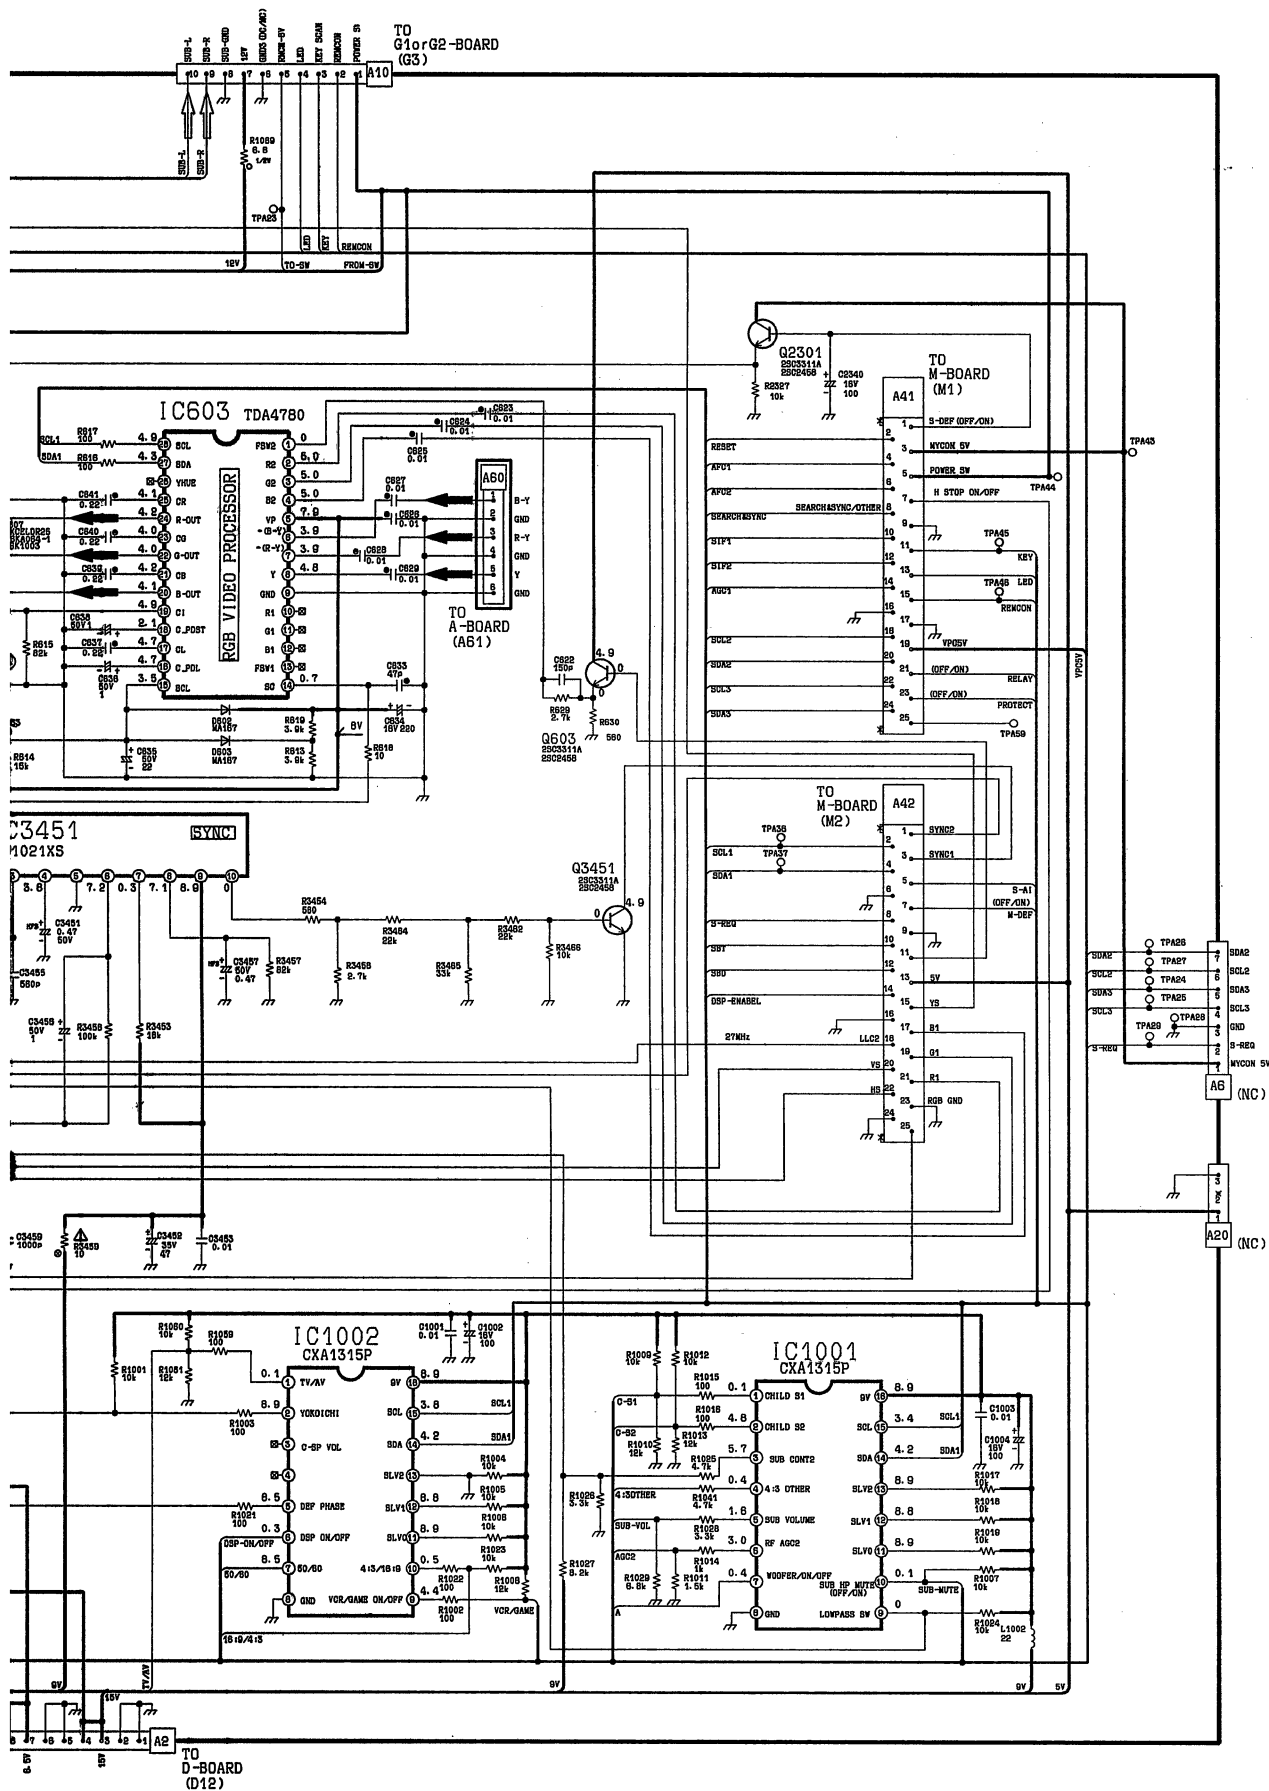





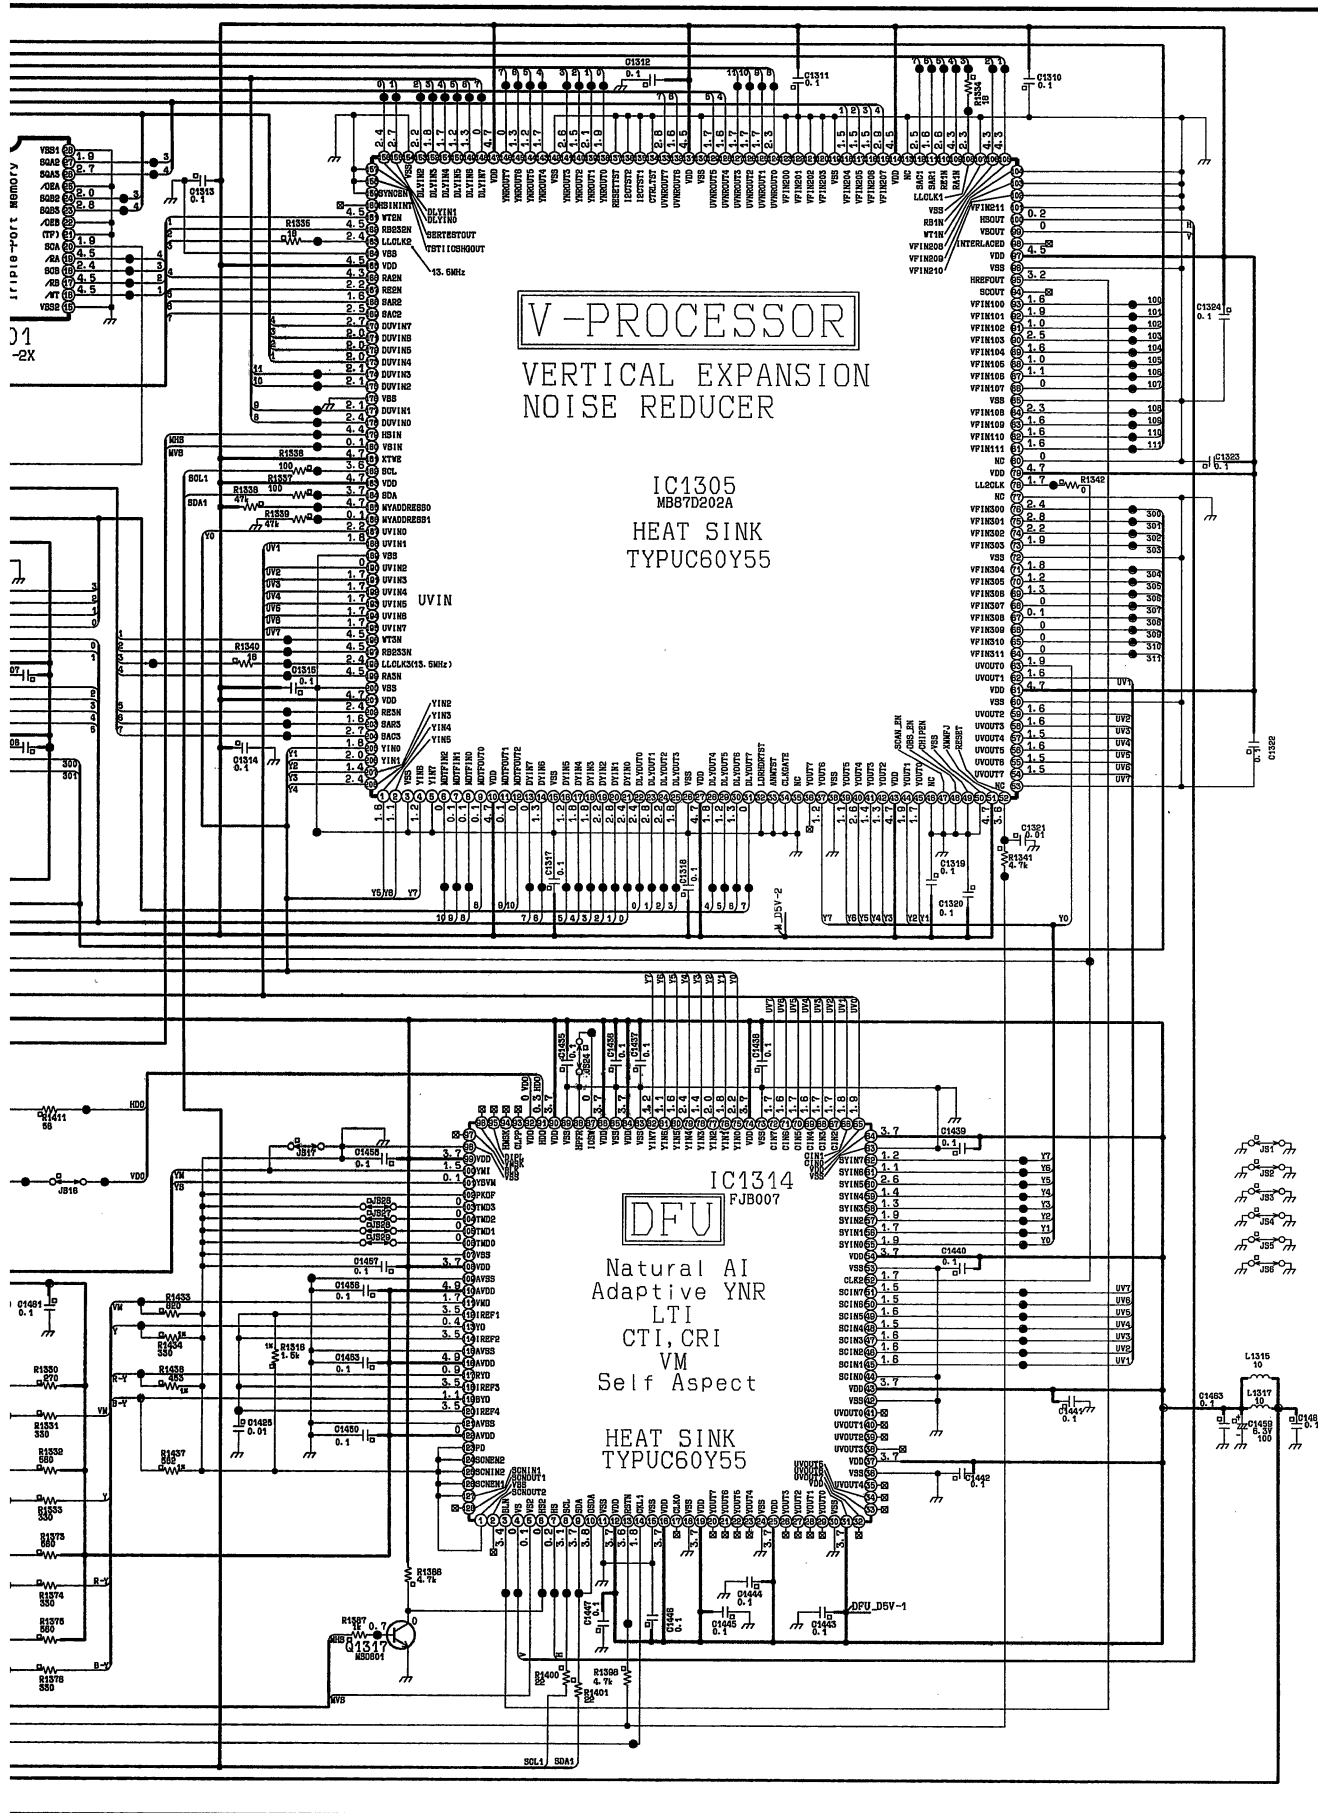

# TX-28/32W100T

6


5

4

3


2

1

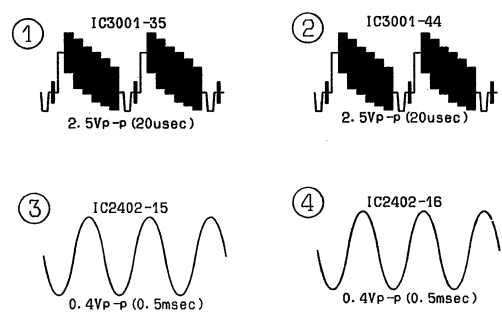

TO  
L-BD  
(L1)

V  
V

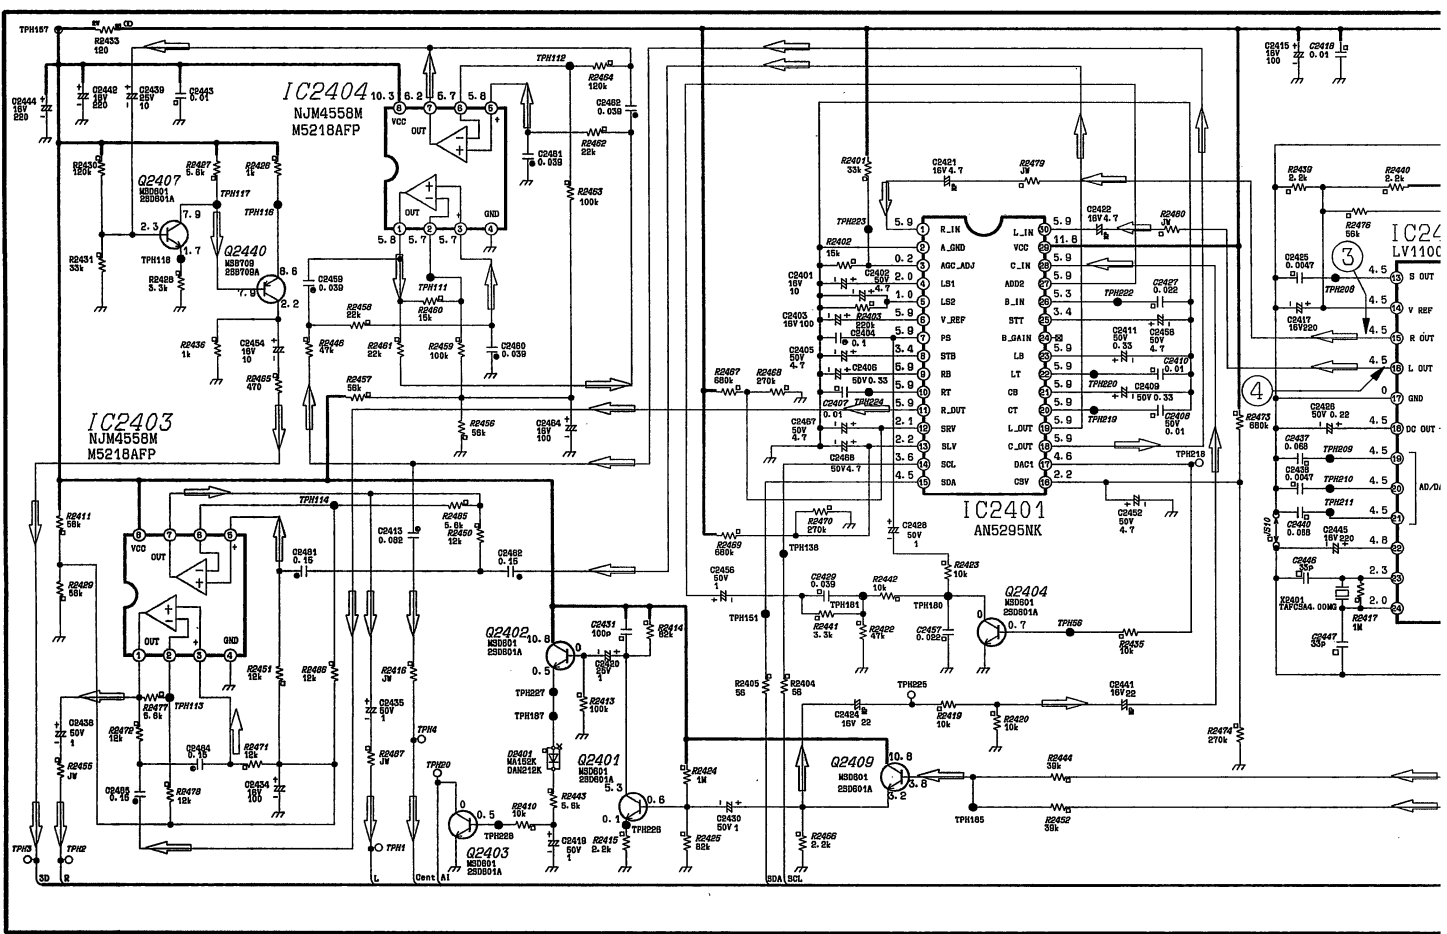

A


B

C

D


E

**TX-**

 

# TX-28/32W100T


⚠ H1-BOARD TNPA0830 JK3152 TJBA089 TJBA090

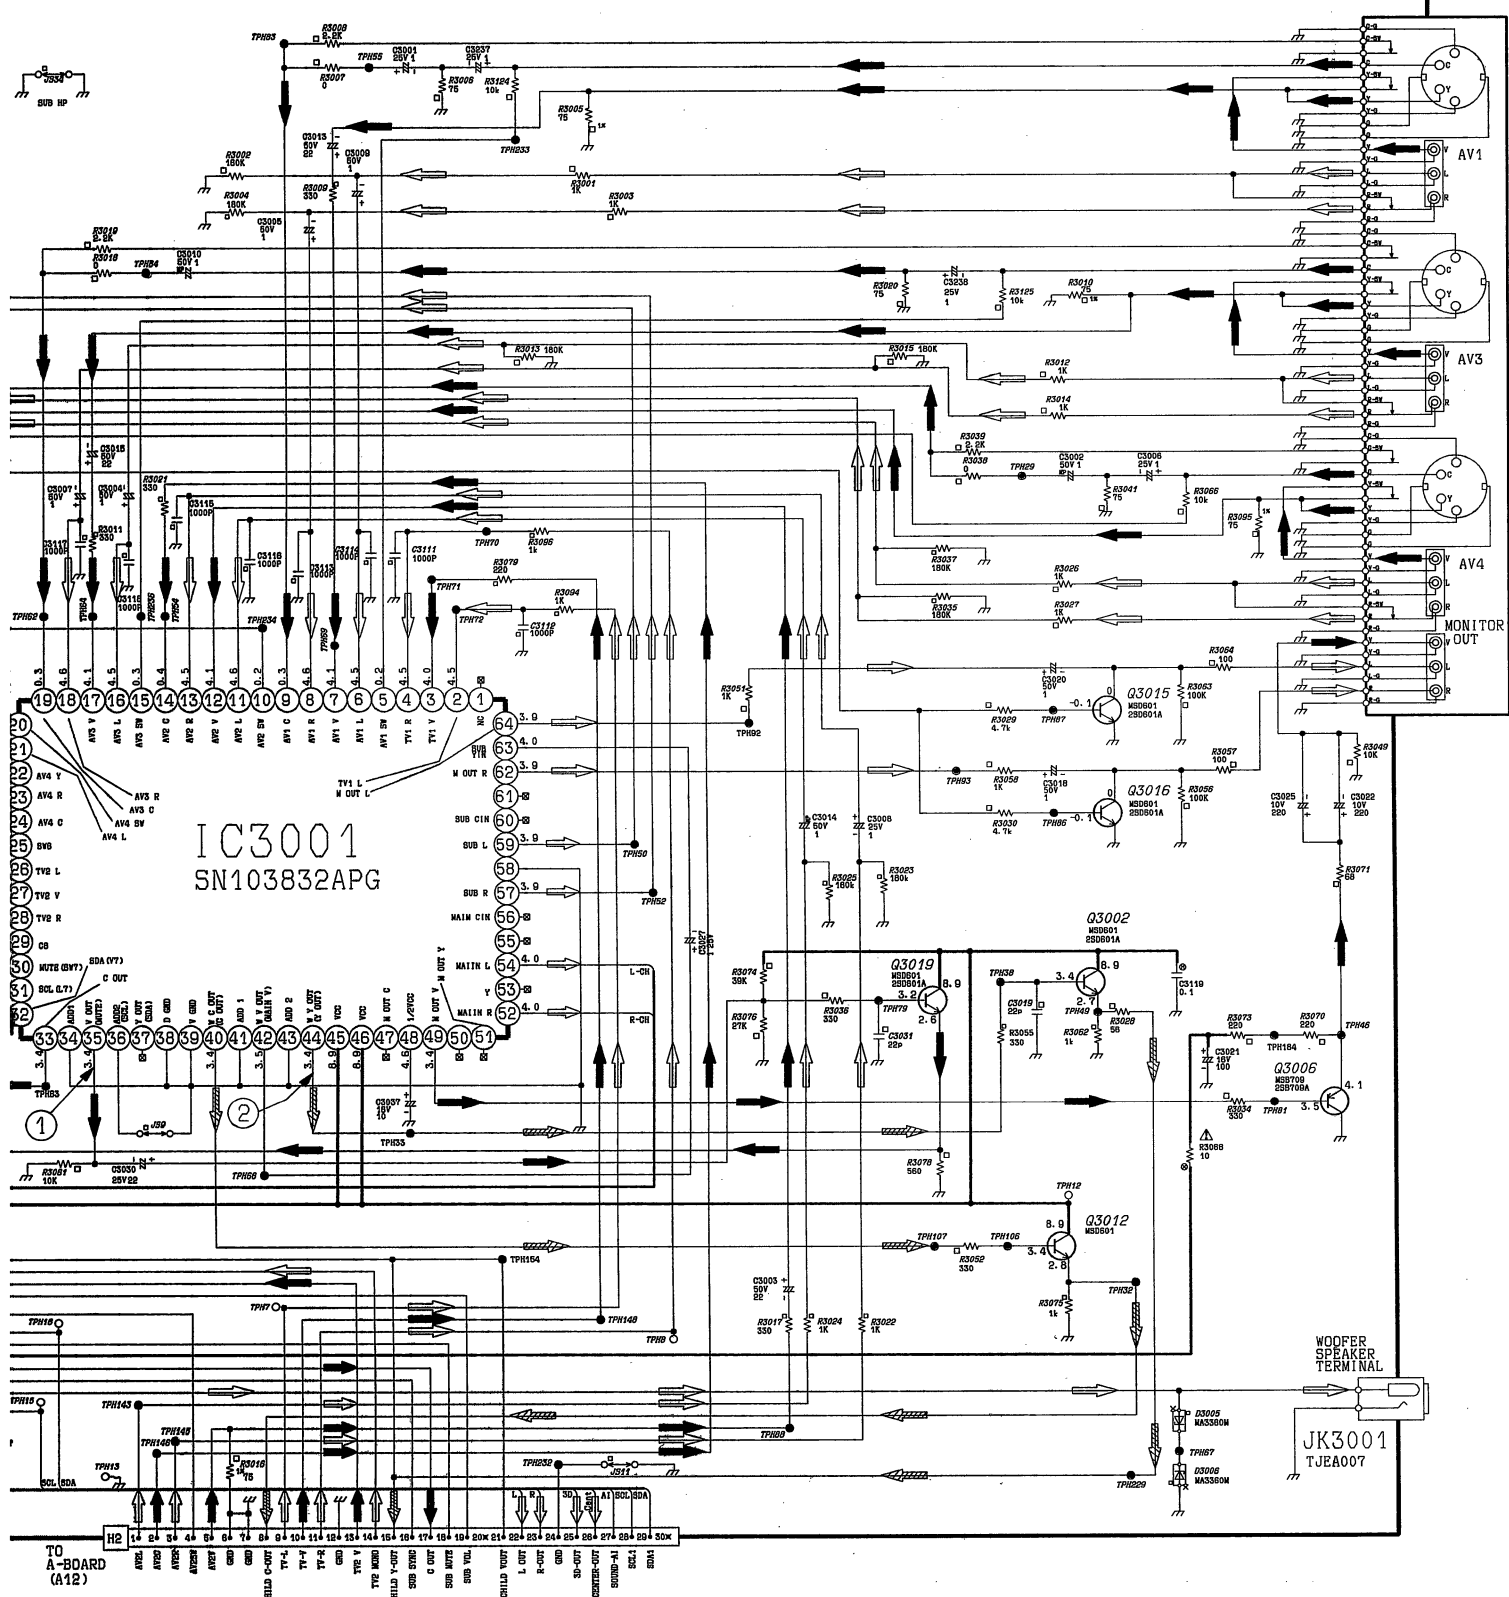




M-BOARD

TNPA0750

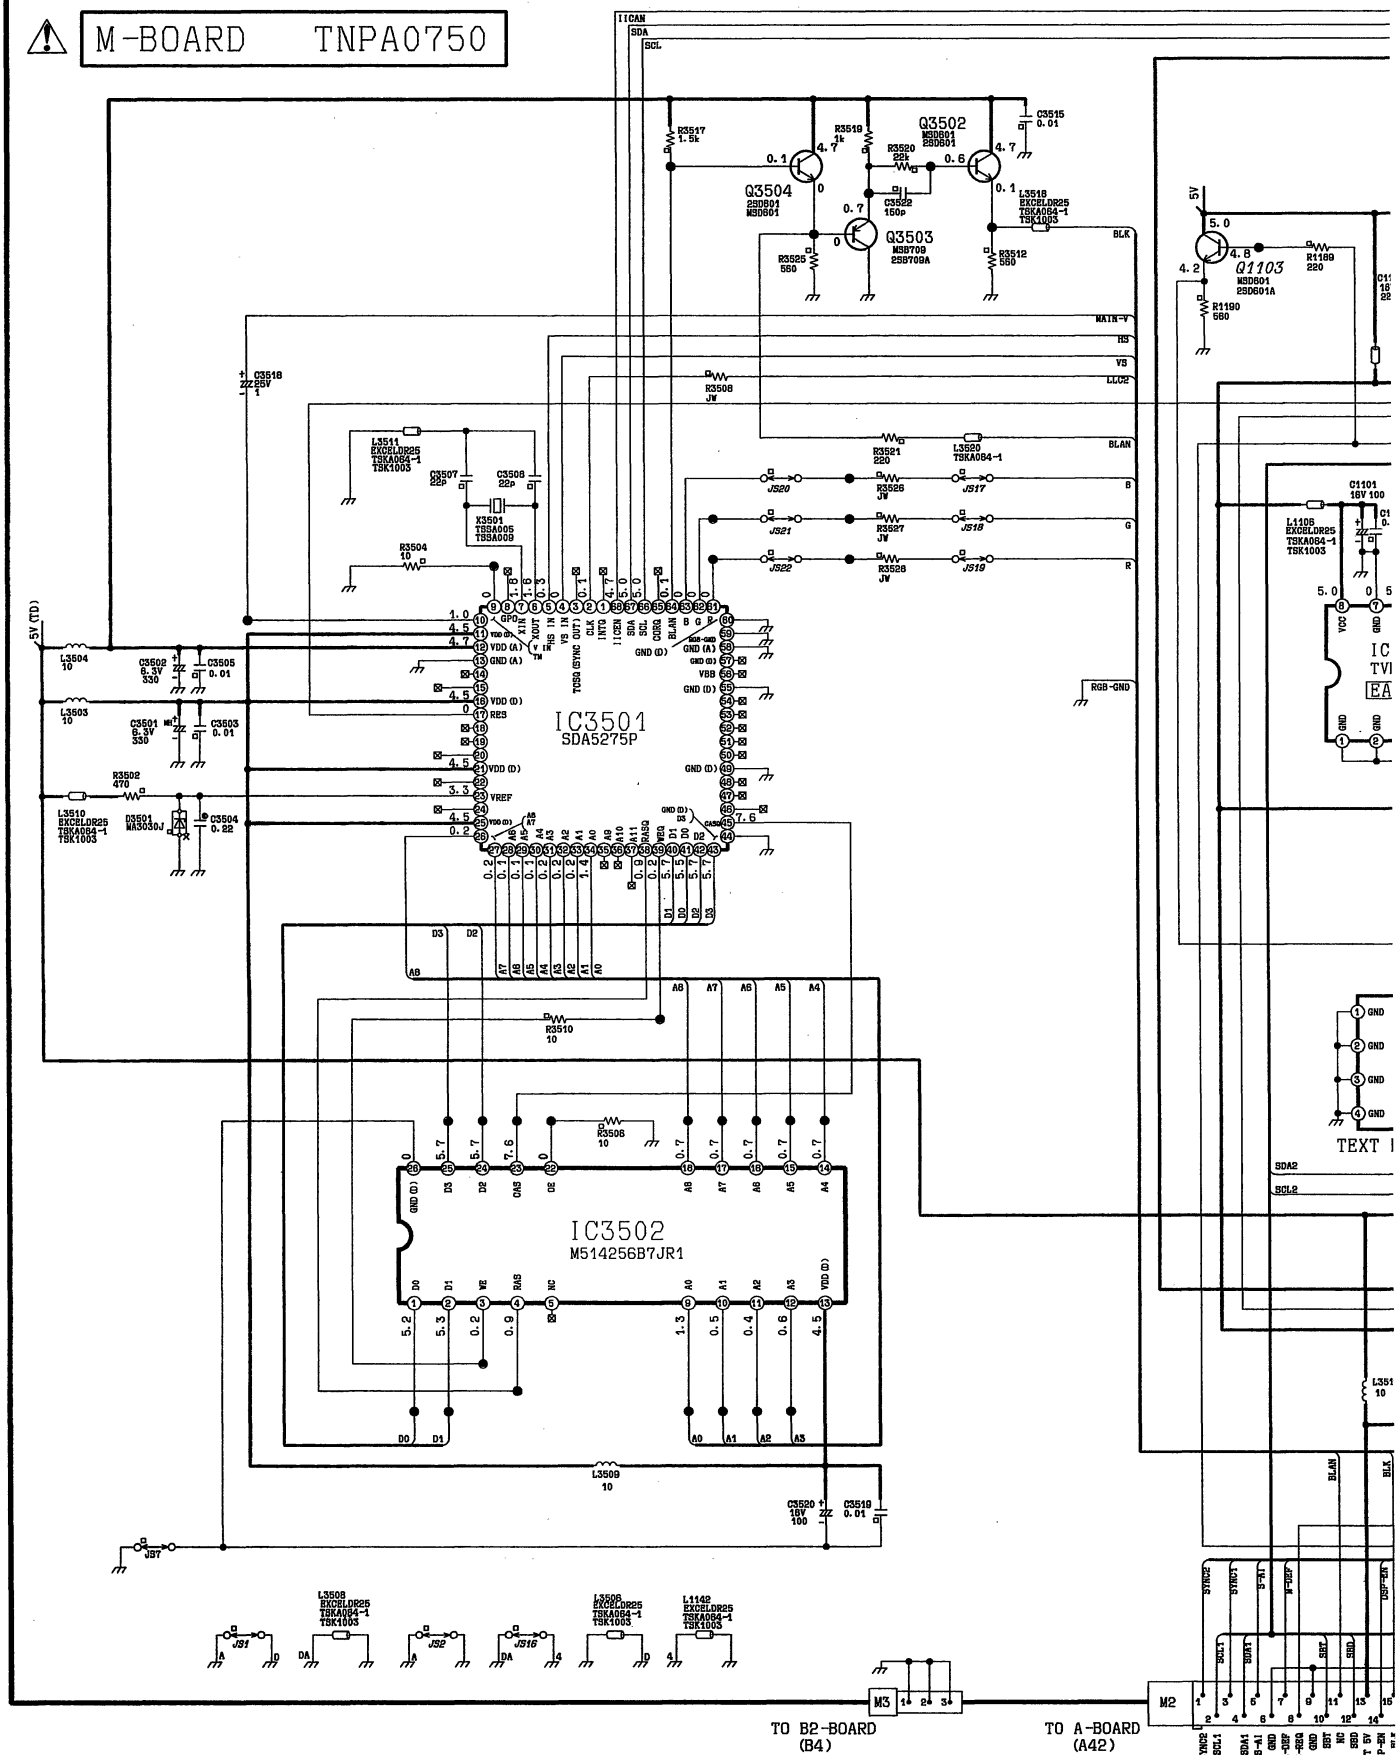

TX-28/32W100T

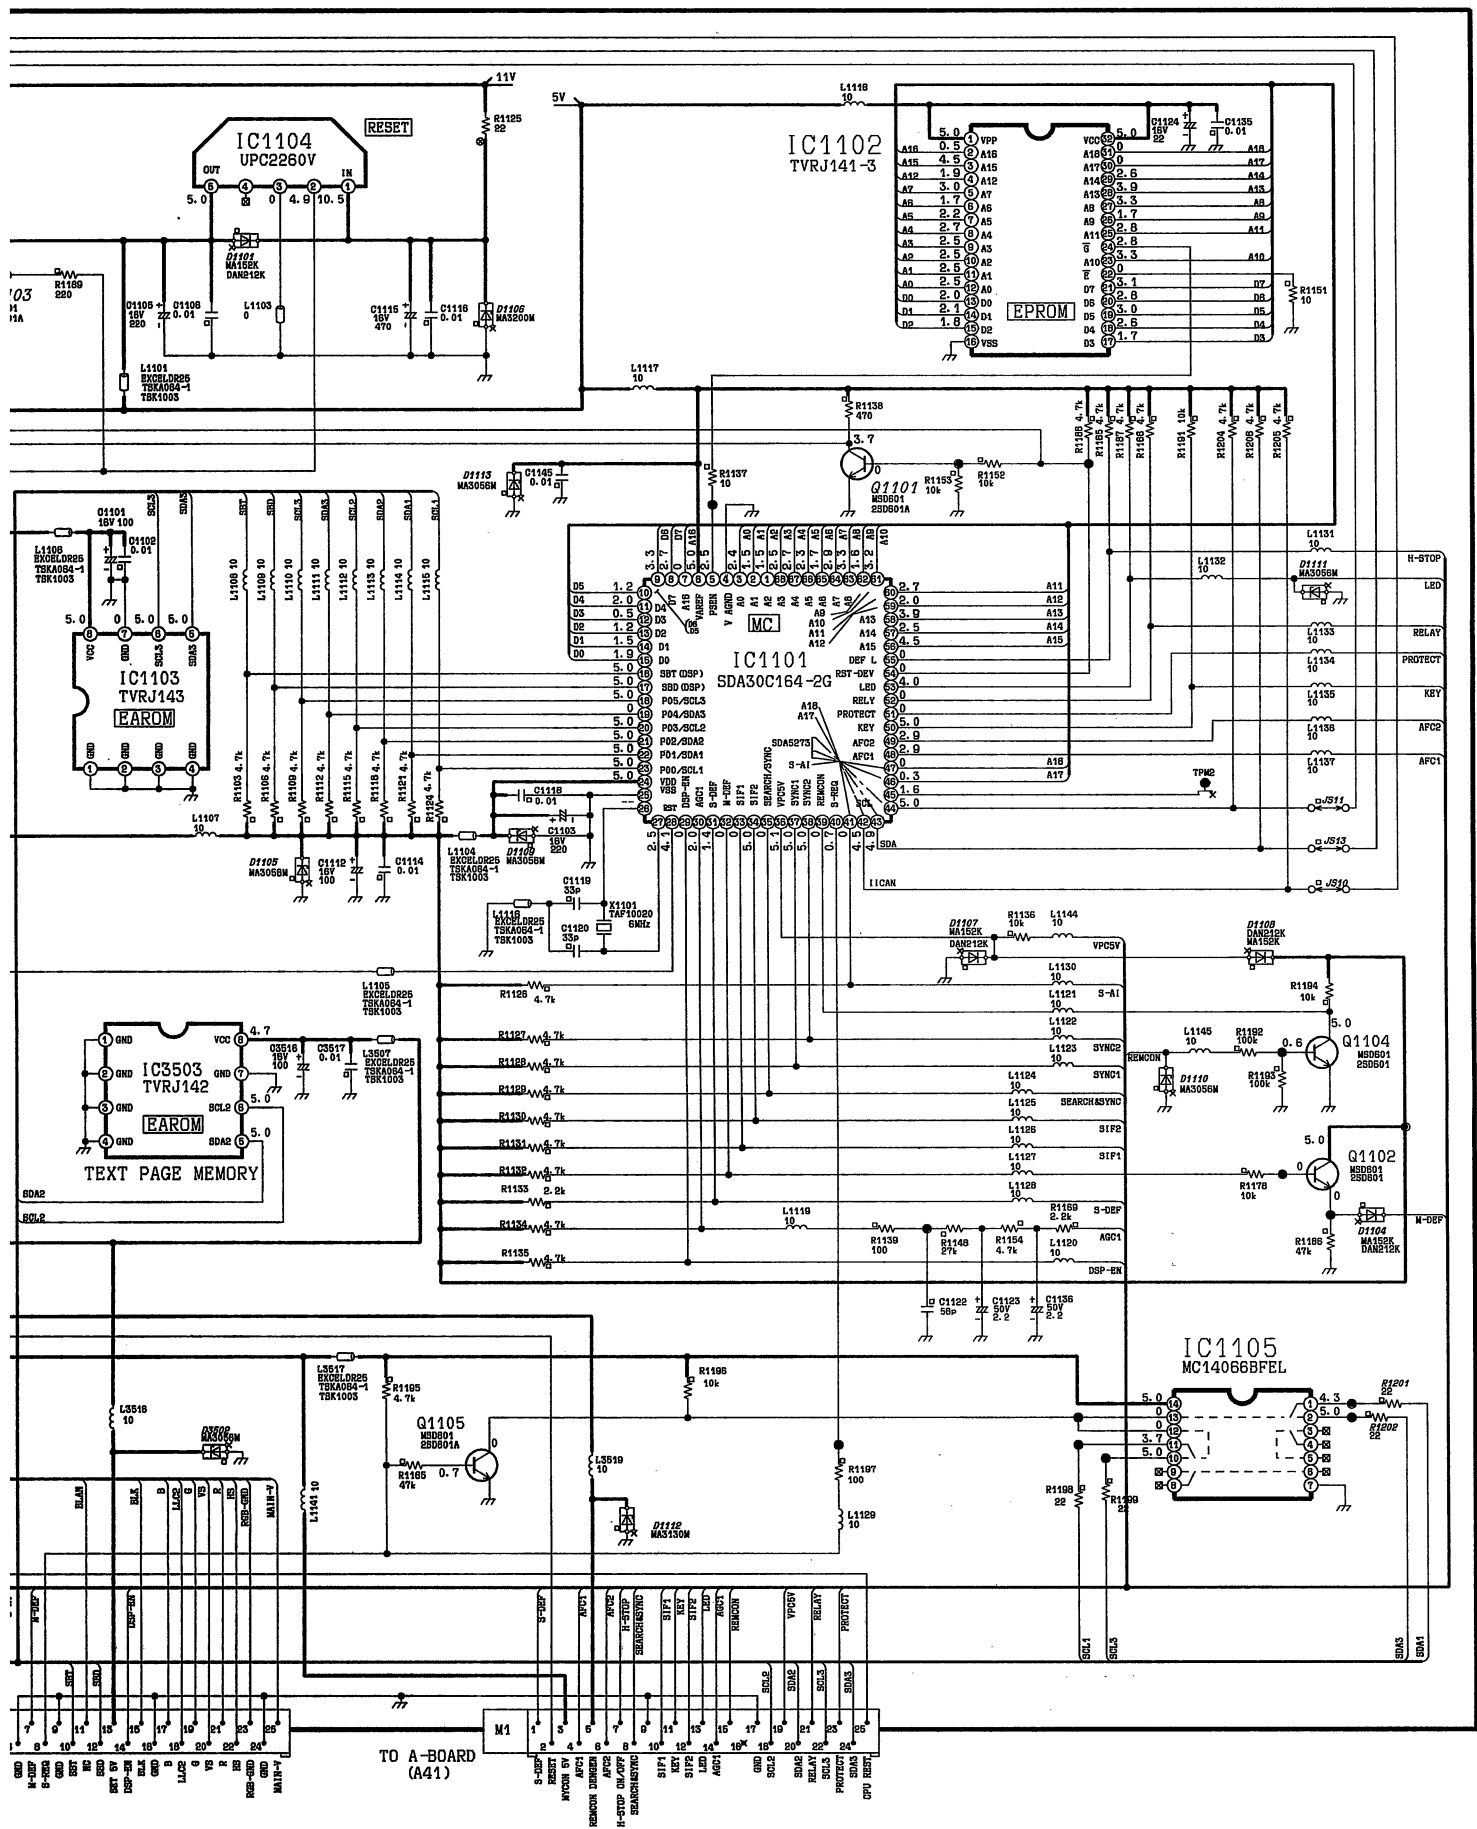

6


5

4

3


2

1

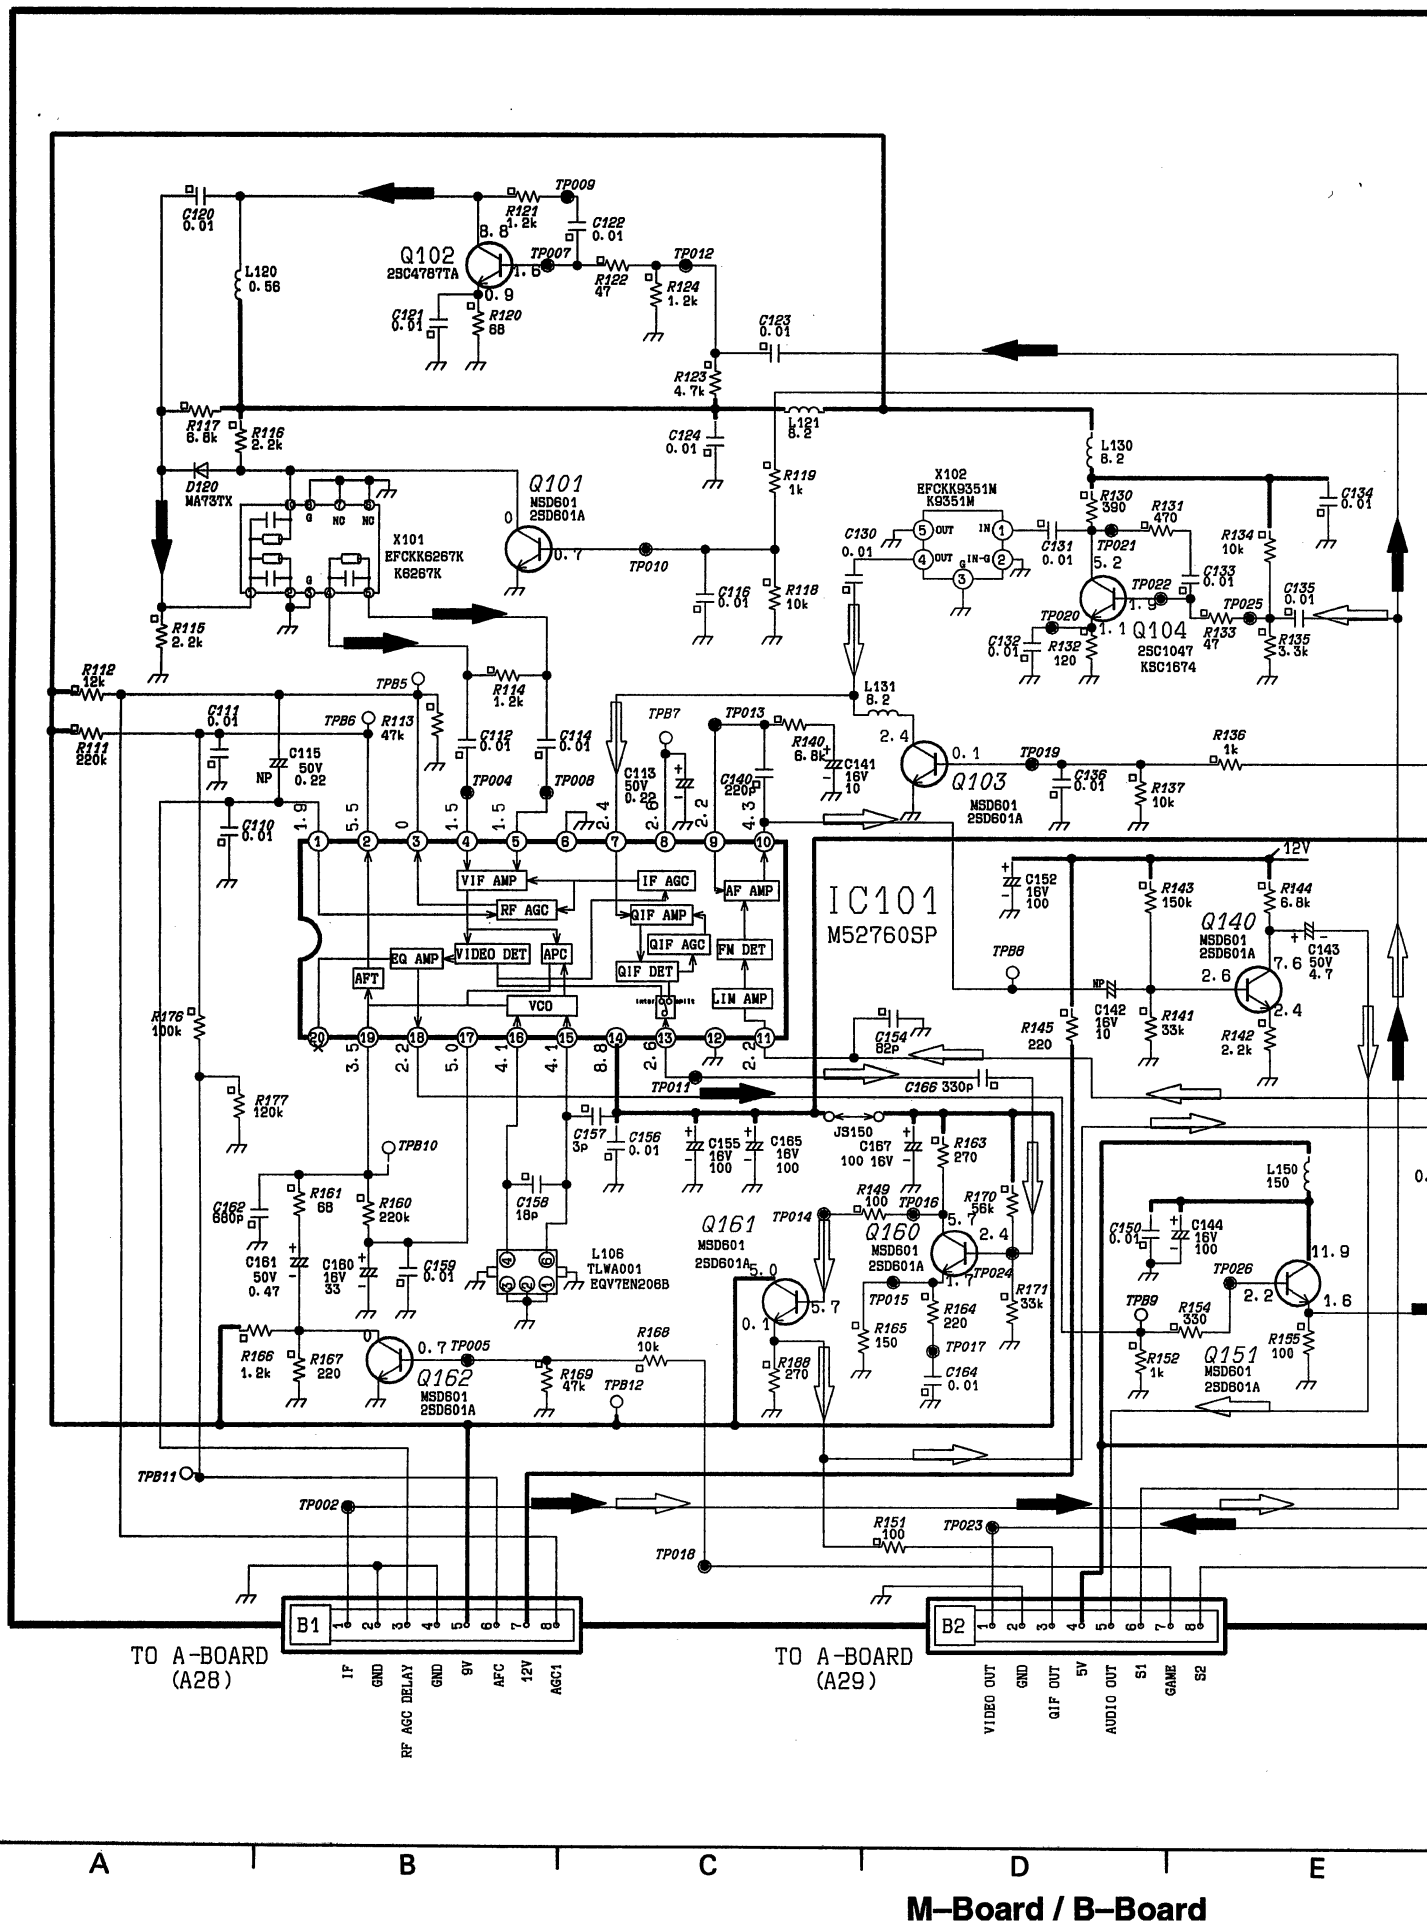


# TX-28/32W100T

B - BOARD

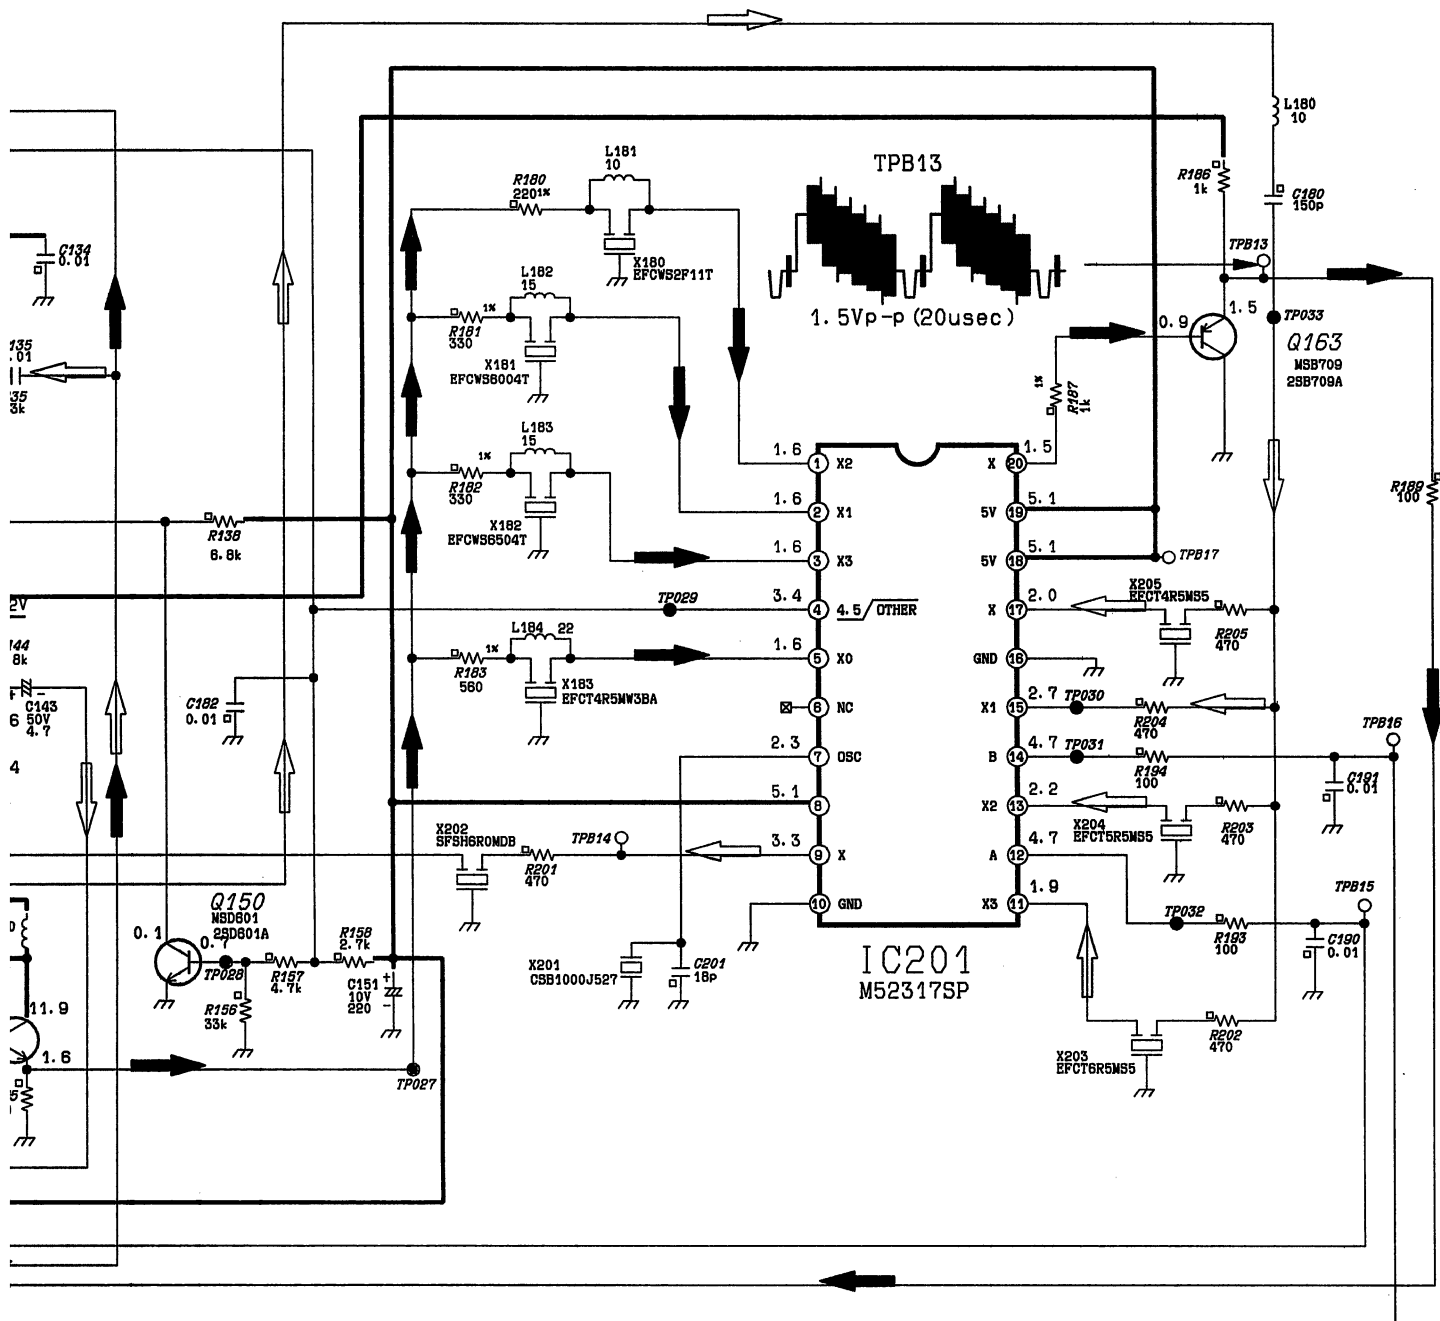


B2-BOARD TNPA0796

 




JK3151  
TJBA094

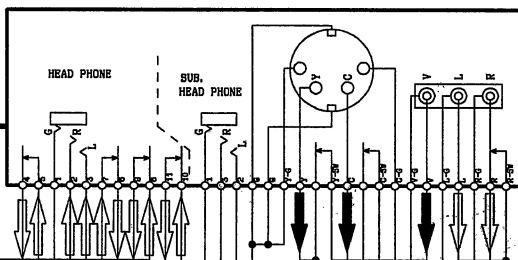




G1-BOARD  
TNPA0746  
(For TX-28W100T)  
G2-BOARD  
TNPA0747  
(For TX-32W100T)

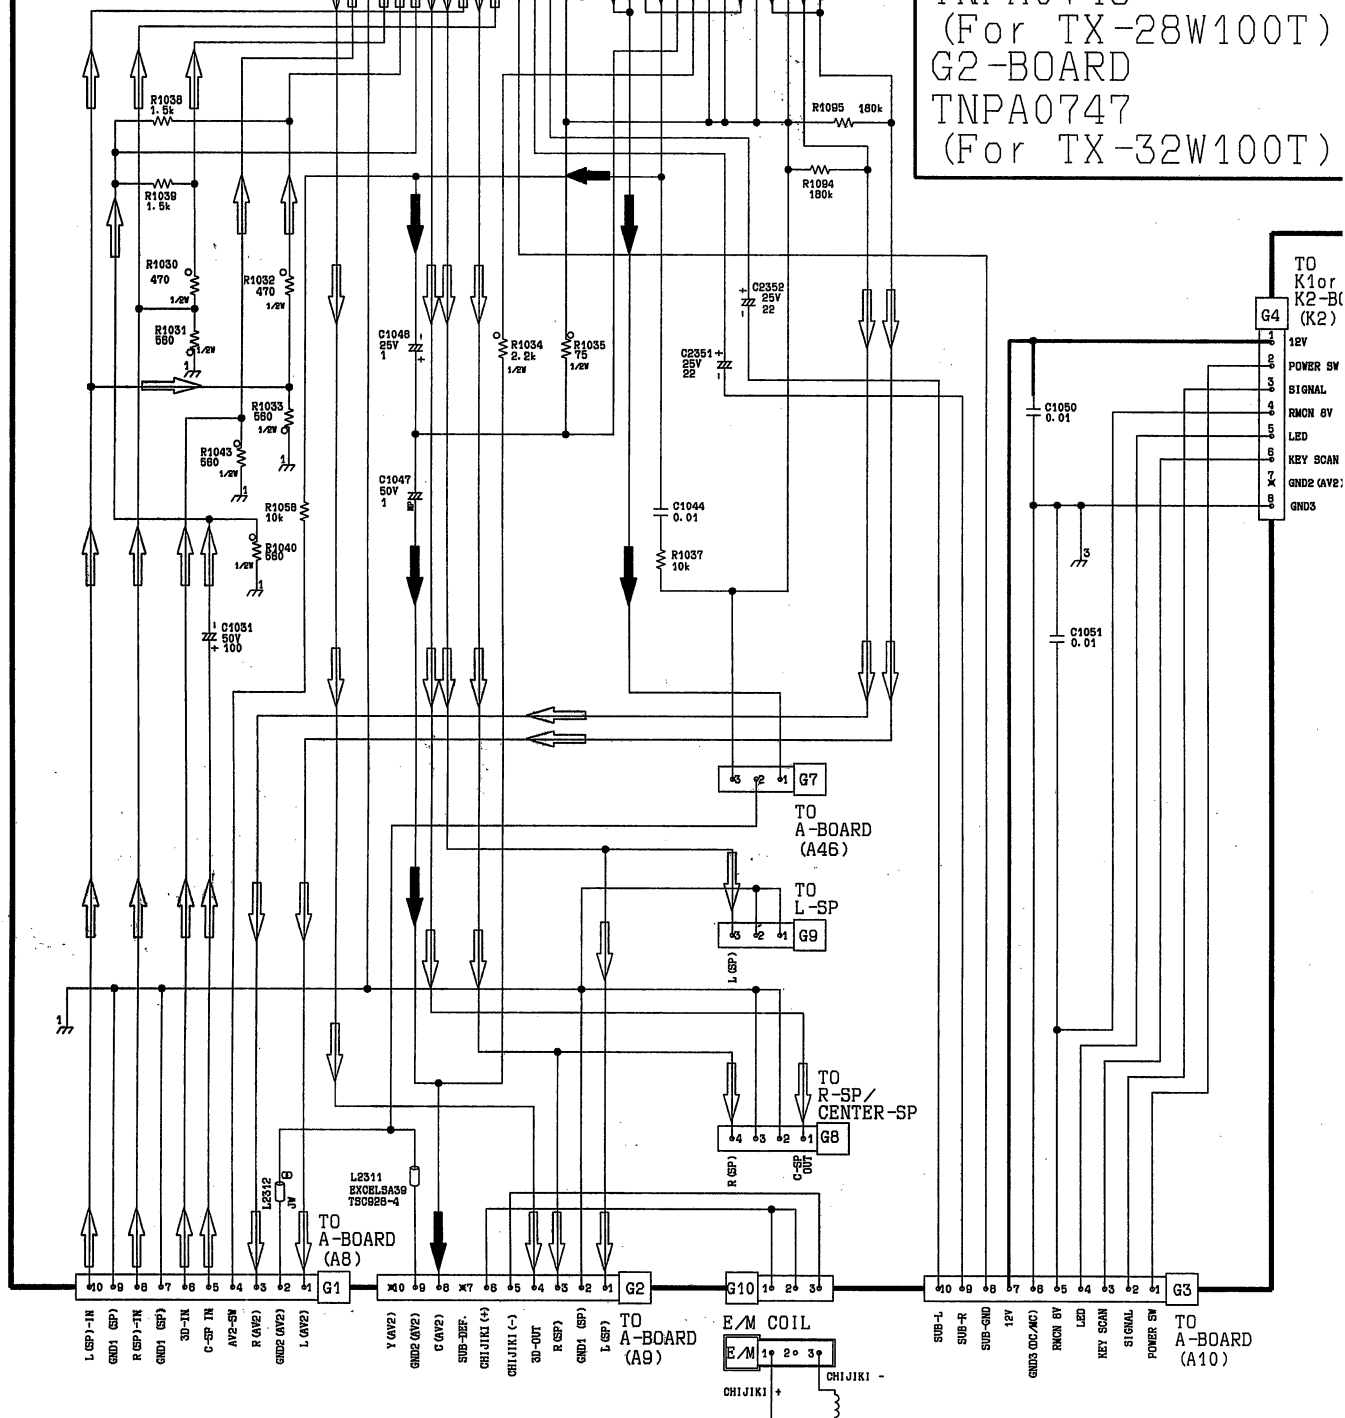

J K L M N

# TX-28/32W100T

(100T)  
(100T)

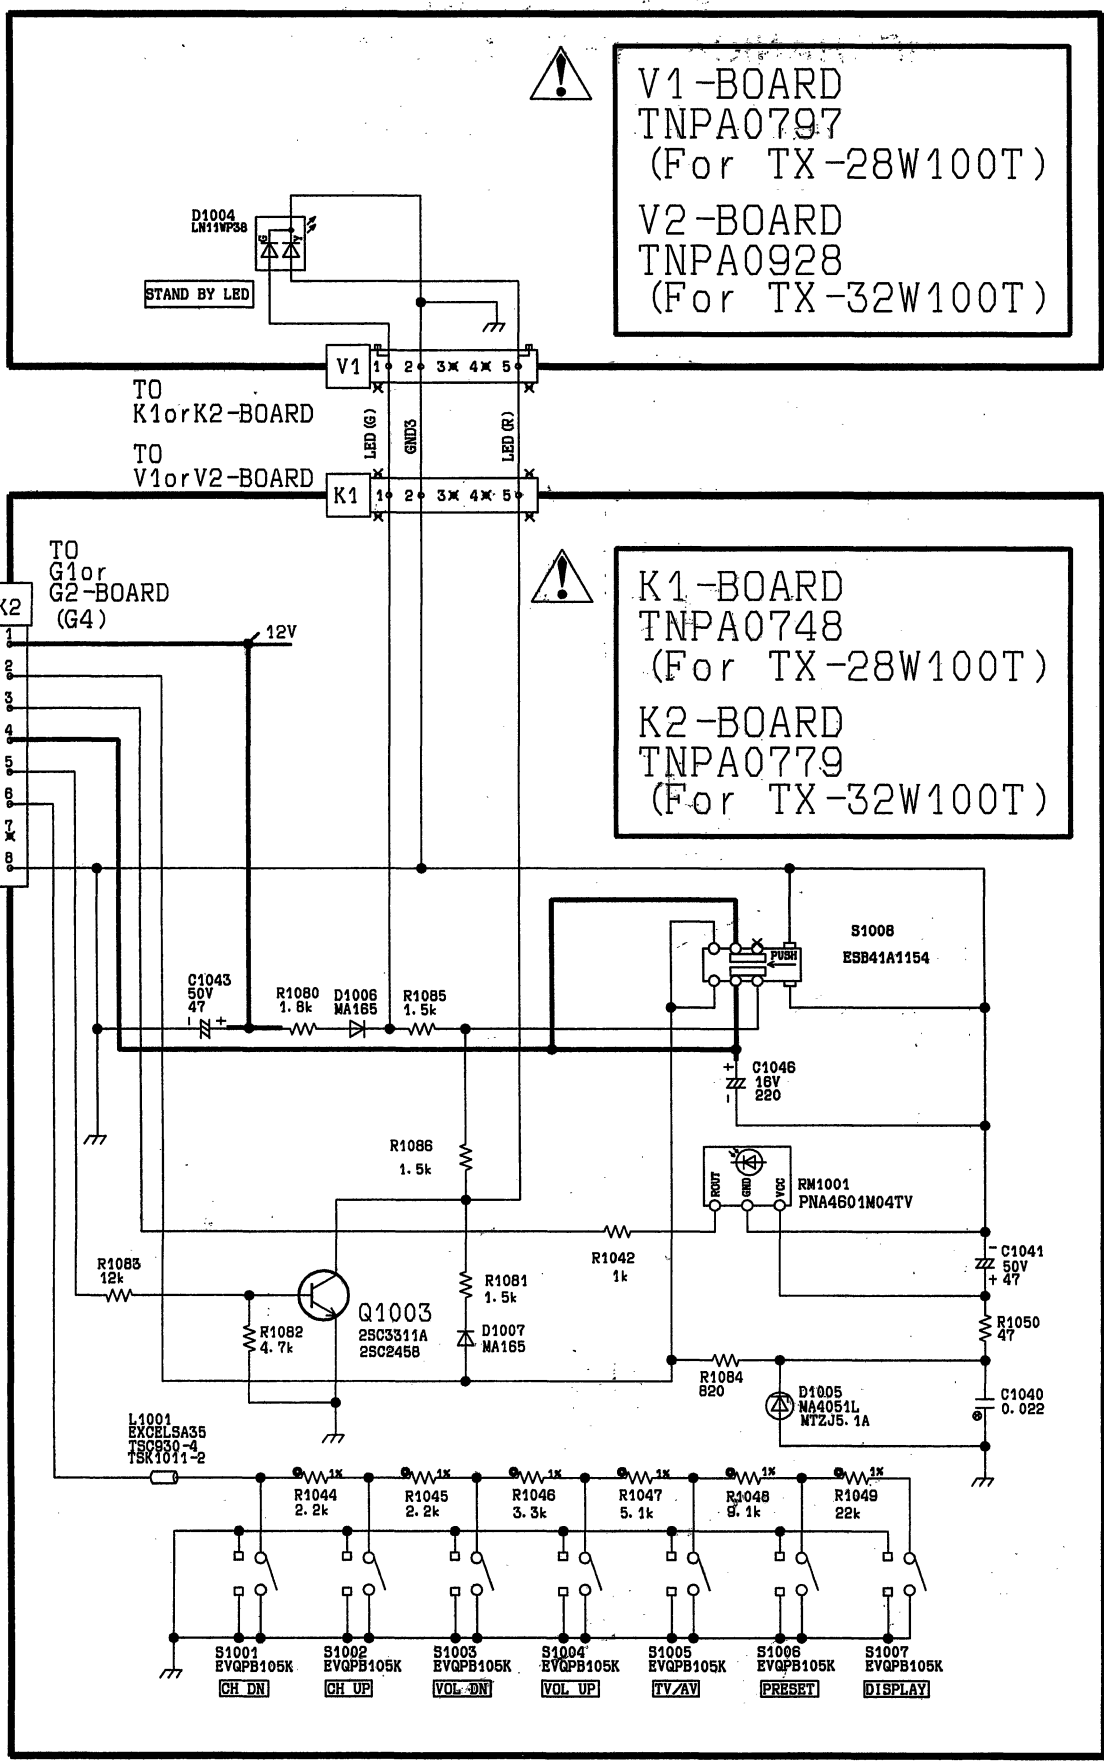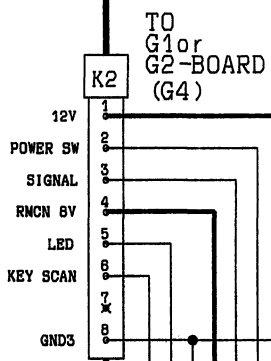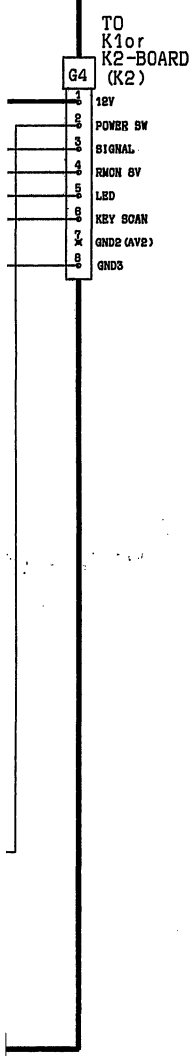

BOARD  
10)