




Main Chassis 110°

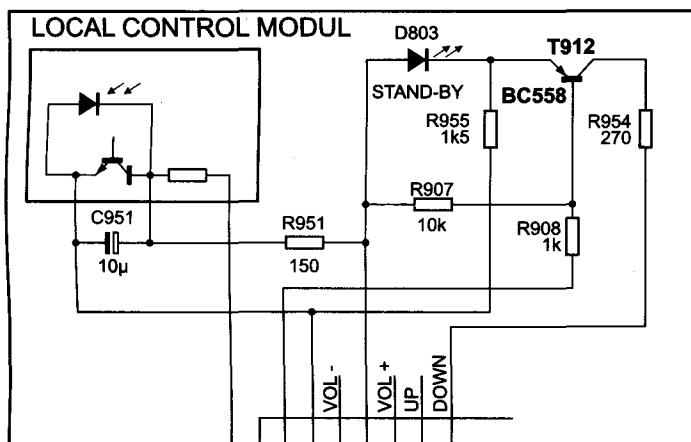



TFK 3402
TECC2989PA19E

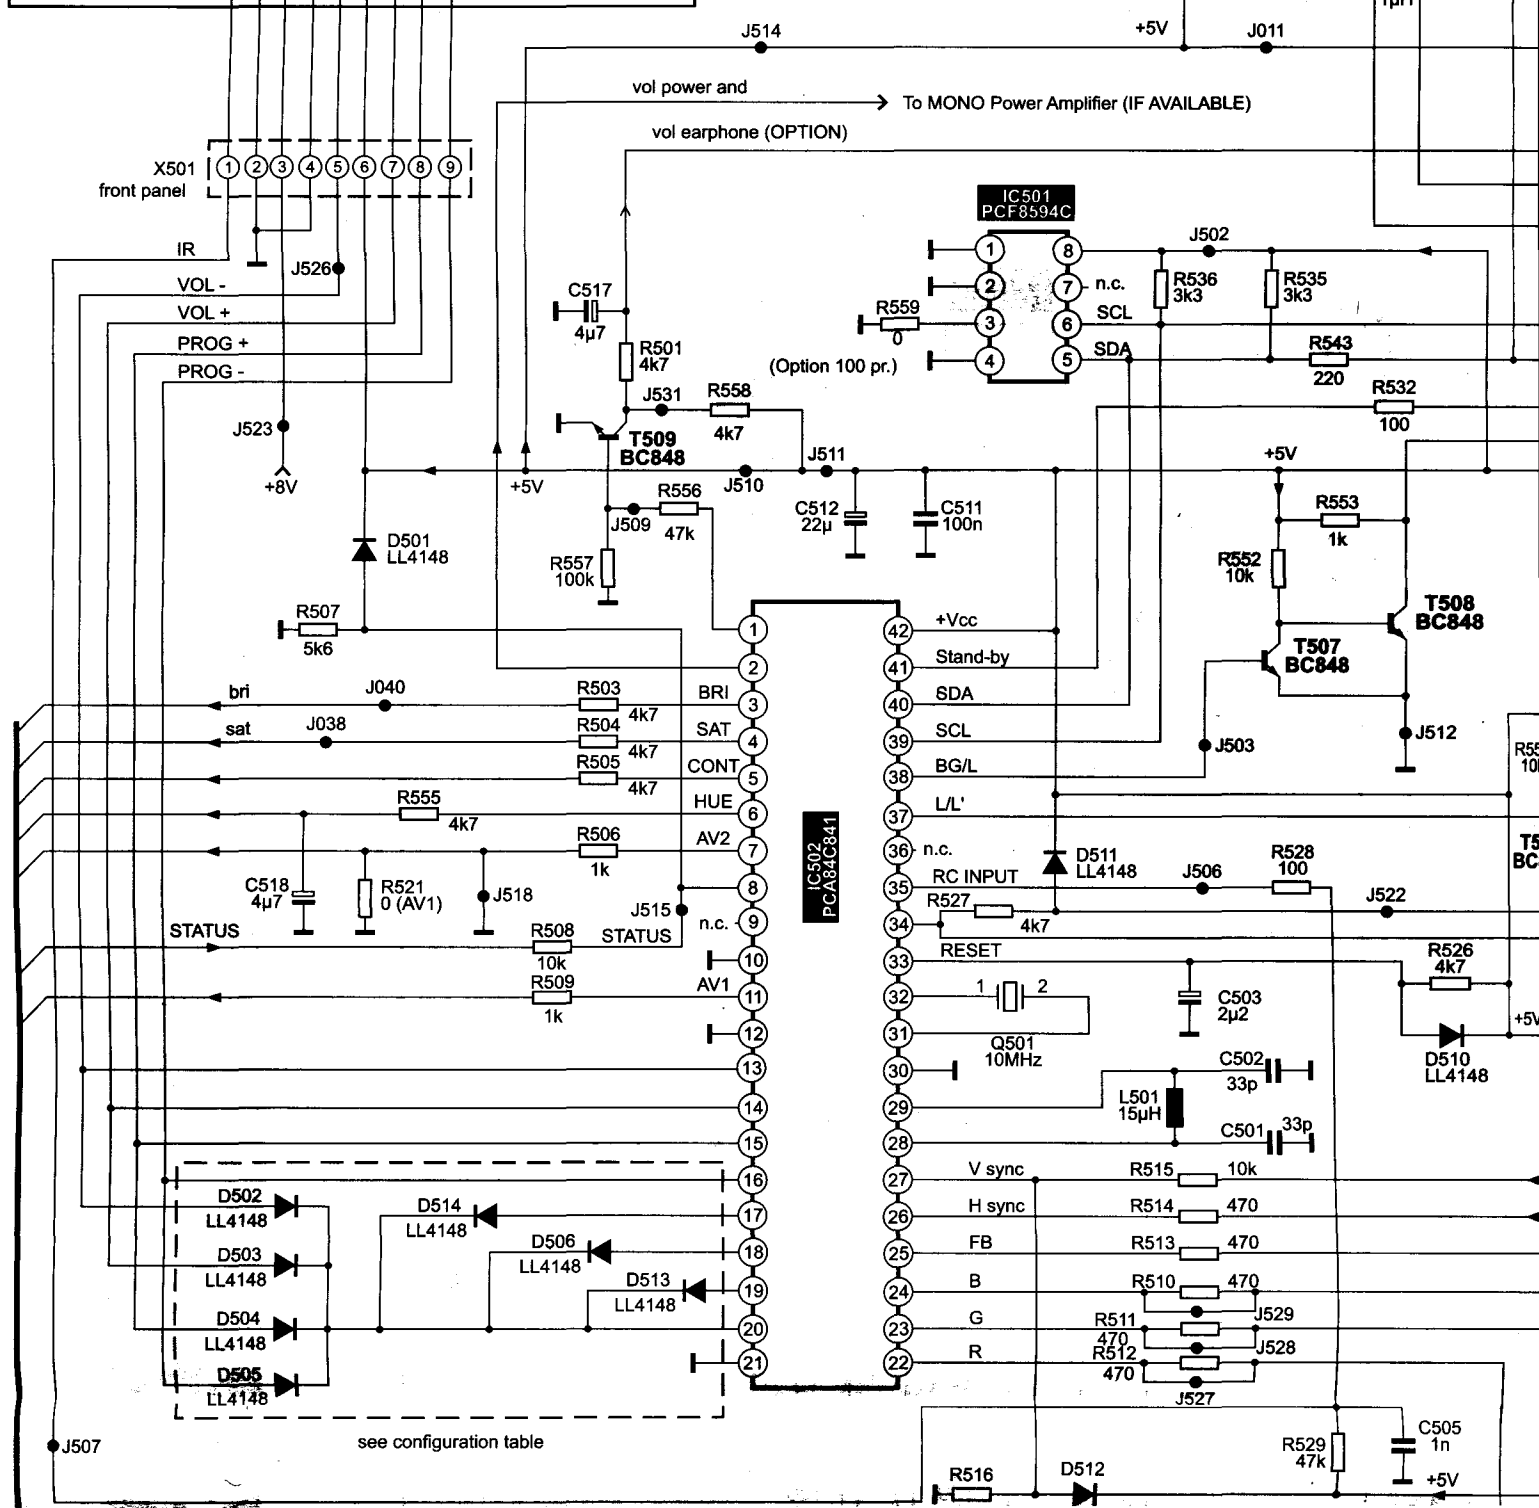

TU1 TUNER

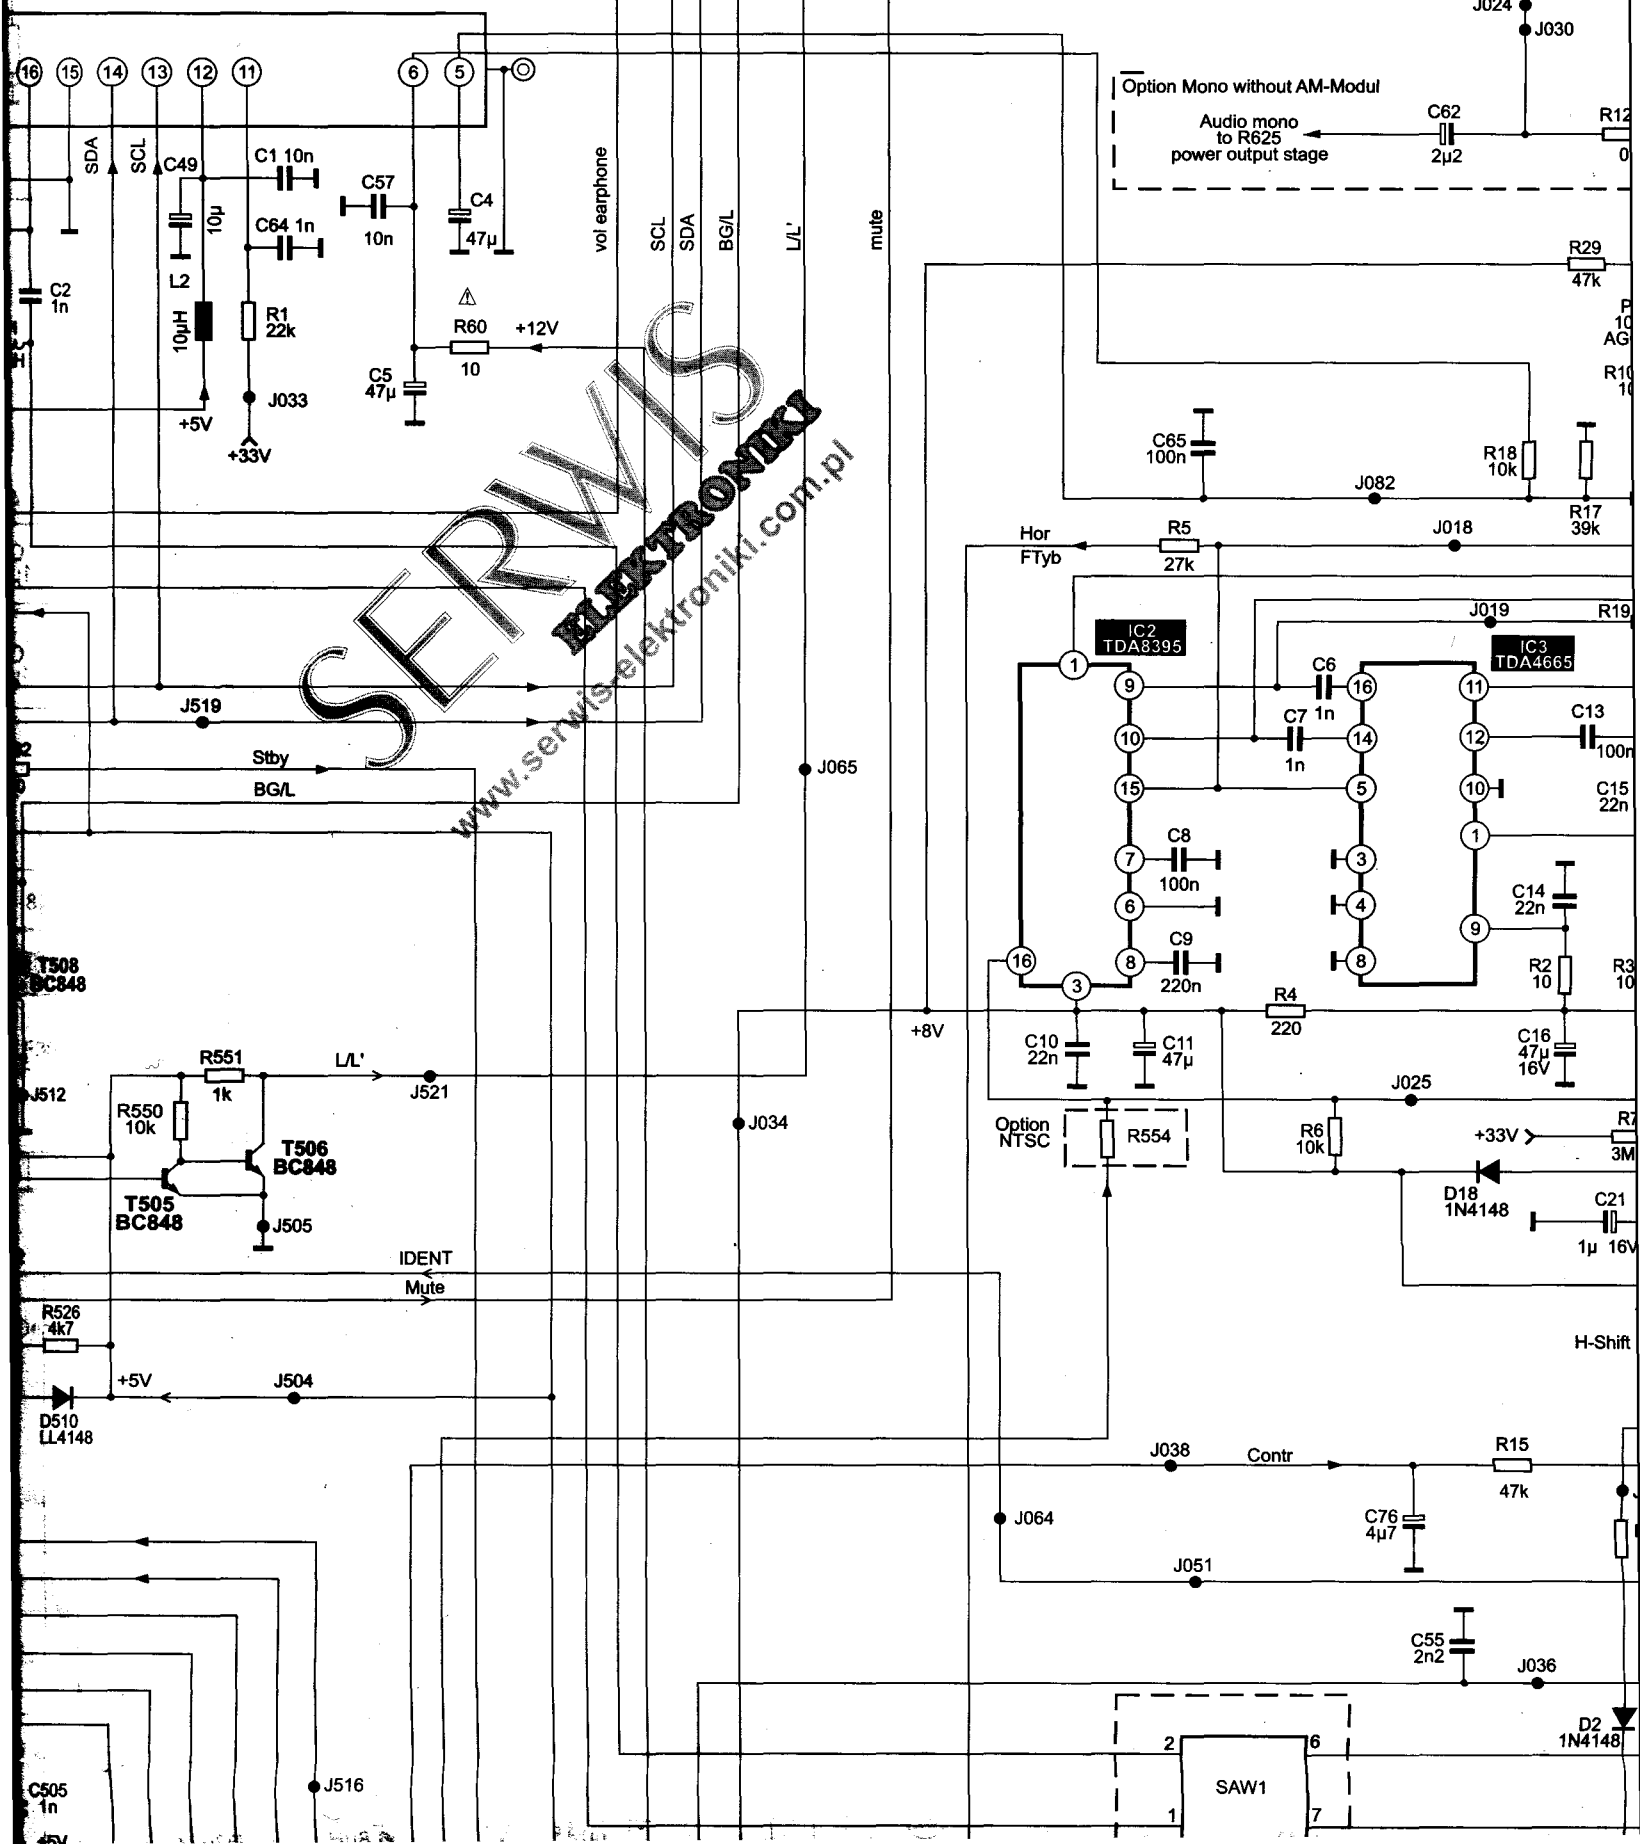

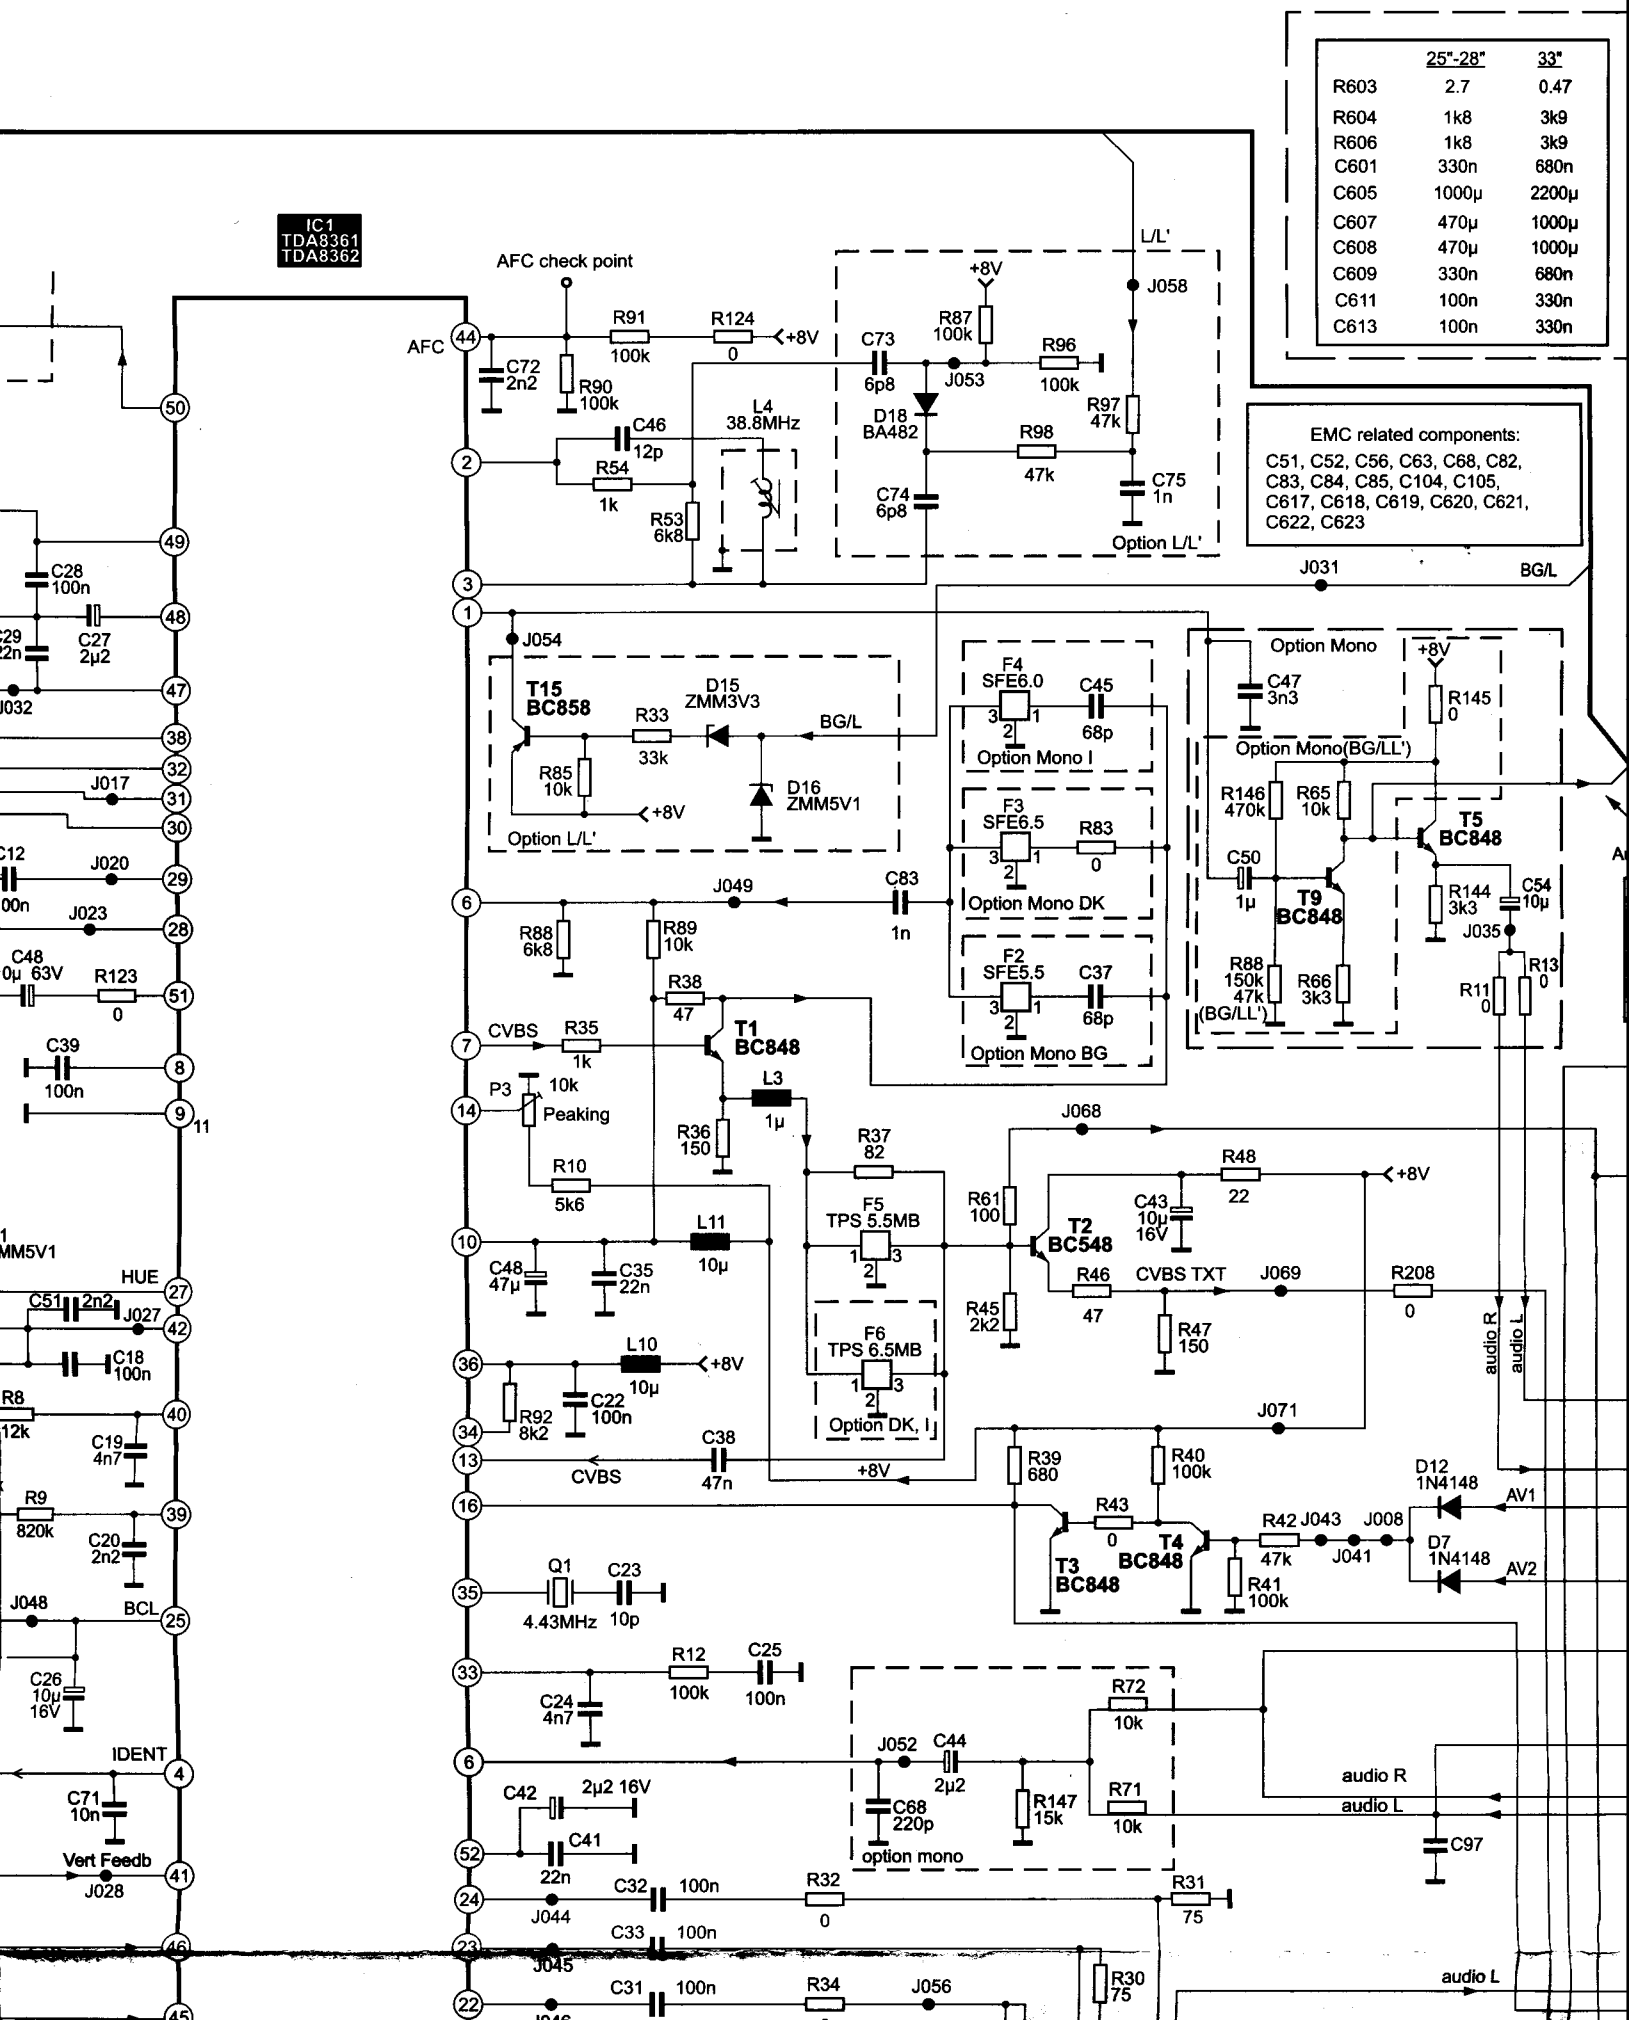

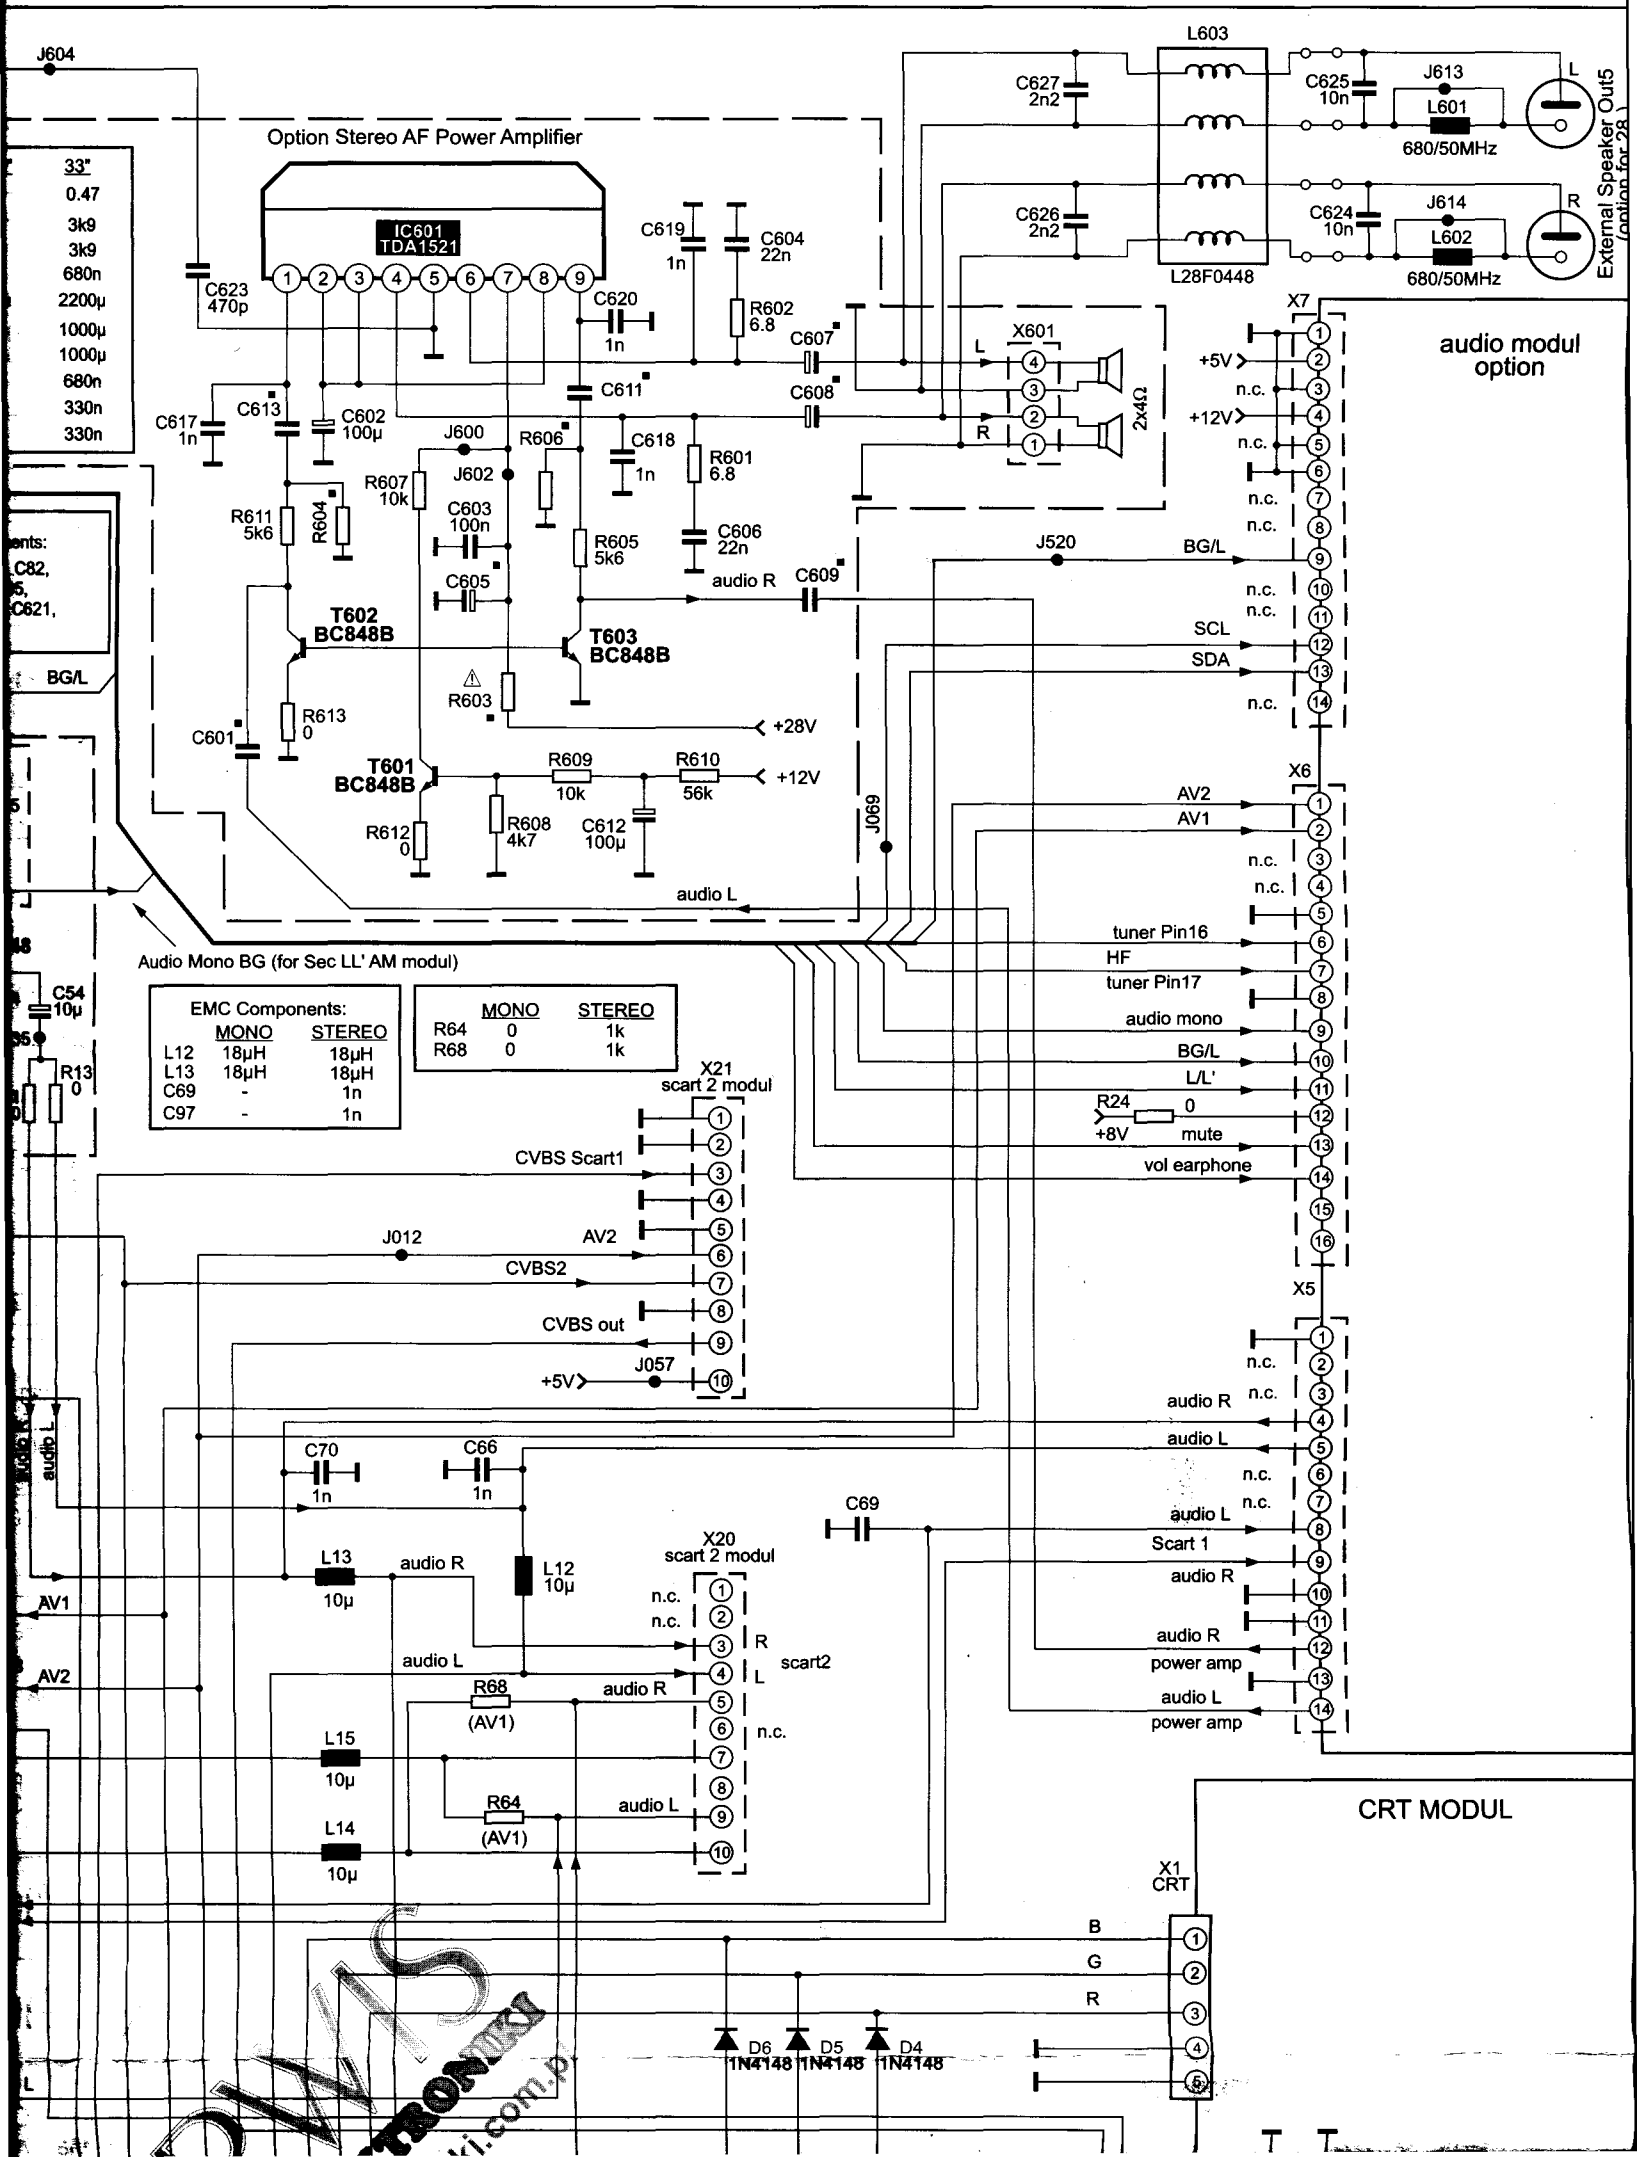

see configuration table

	BG	DK	LL'	I
D502	●	●	—	—
D503	●	—	●	—
Stand. sel. key	Inactive	Active<BG/DK>	Active<BG/LL'>	Inactive

[illegible]

TR401

IC403 LM317

IC402 7805


T402 BC637


Option Stereo

Option Mono


SIZE	C.P.T.
25"	Panason
25"	Videocor

<u>SIZE</u>	<u>C.P.T.</u>
25"	Panasonic
25"	Videocassette
28"	Panasonic
28"	Panasonic
28"	Panasonic
28"	Videocassette
33"	Philips

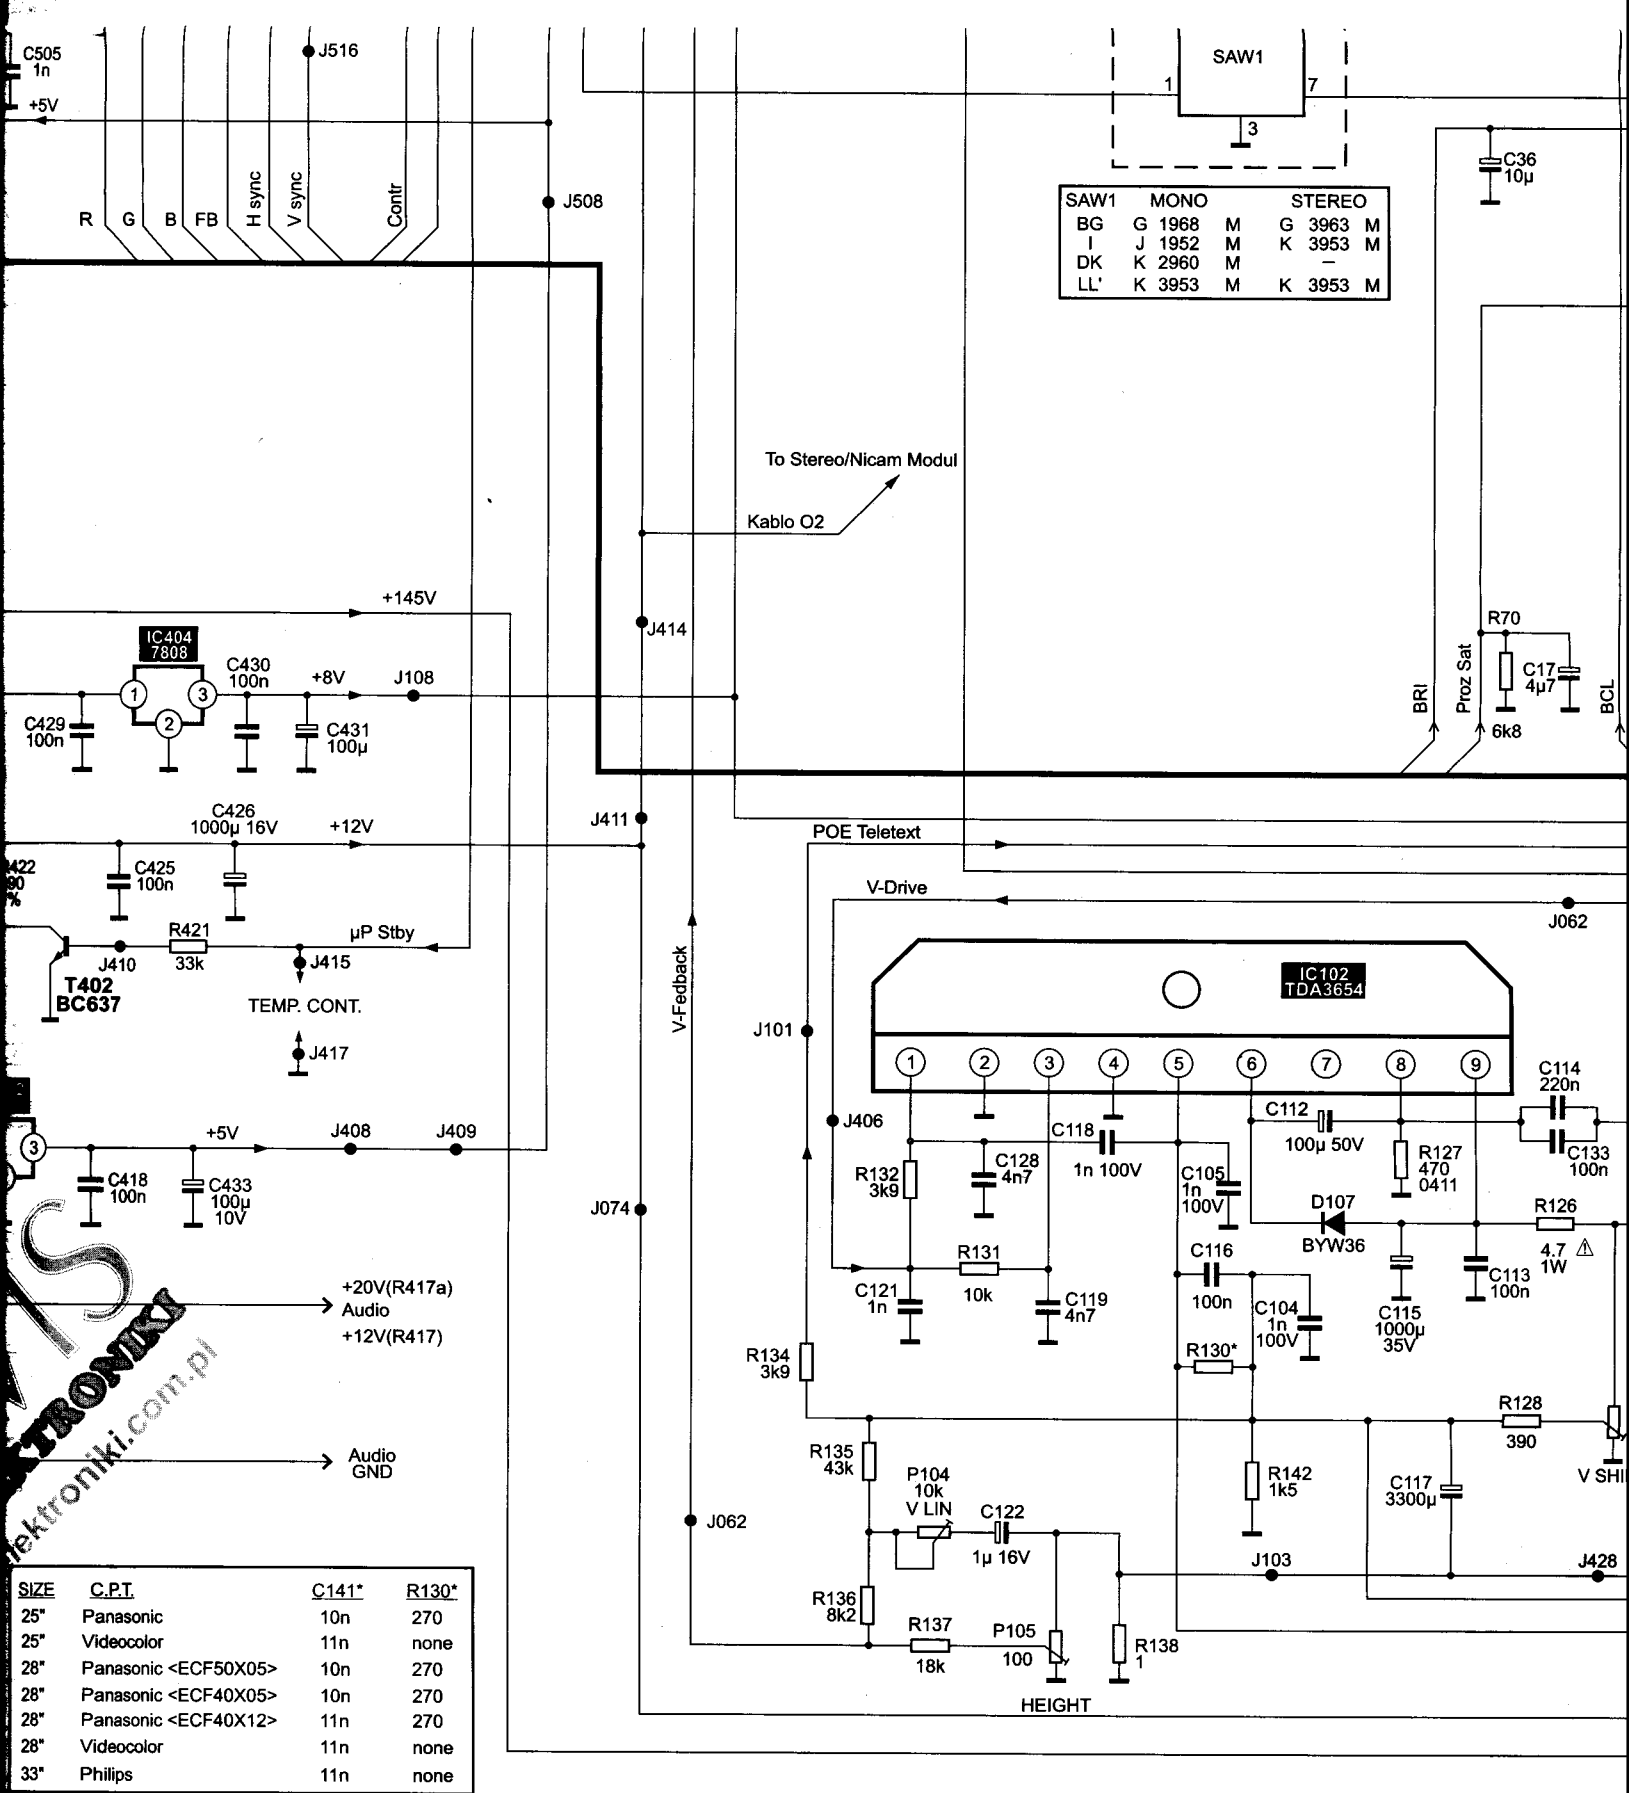

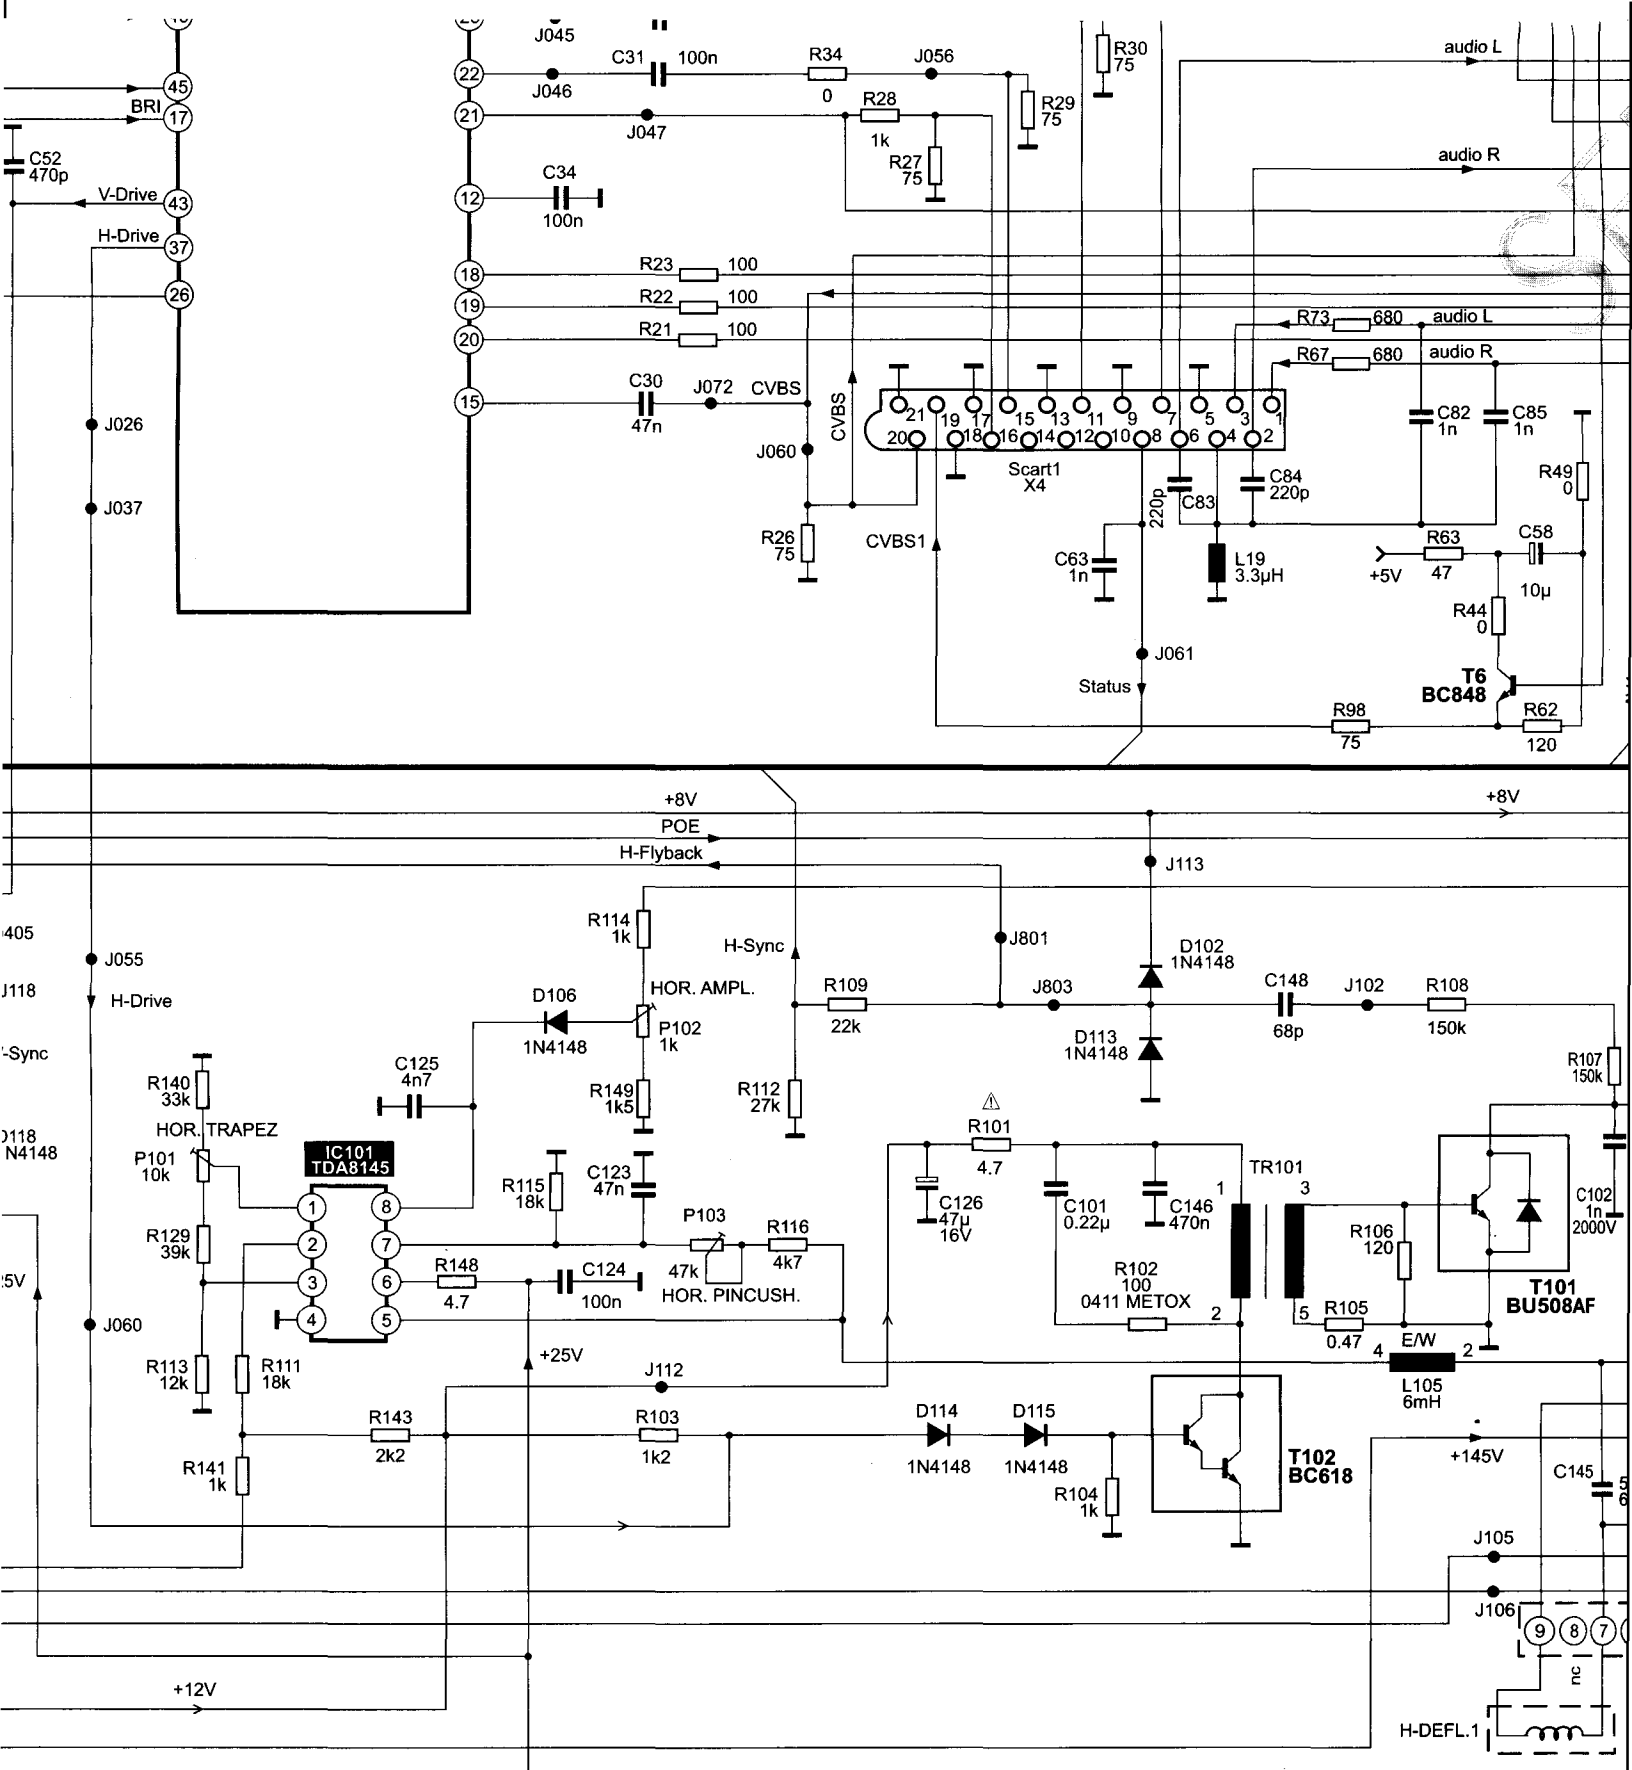





OTVC Crown 25B3/1, 25B4, 25B4STN

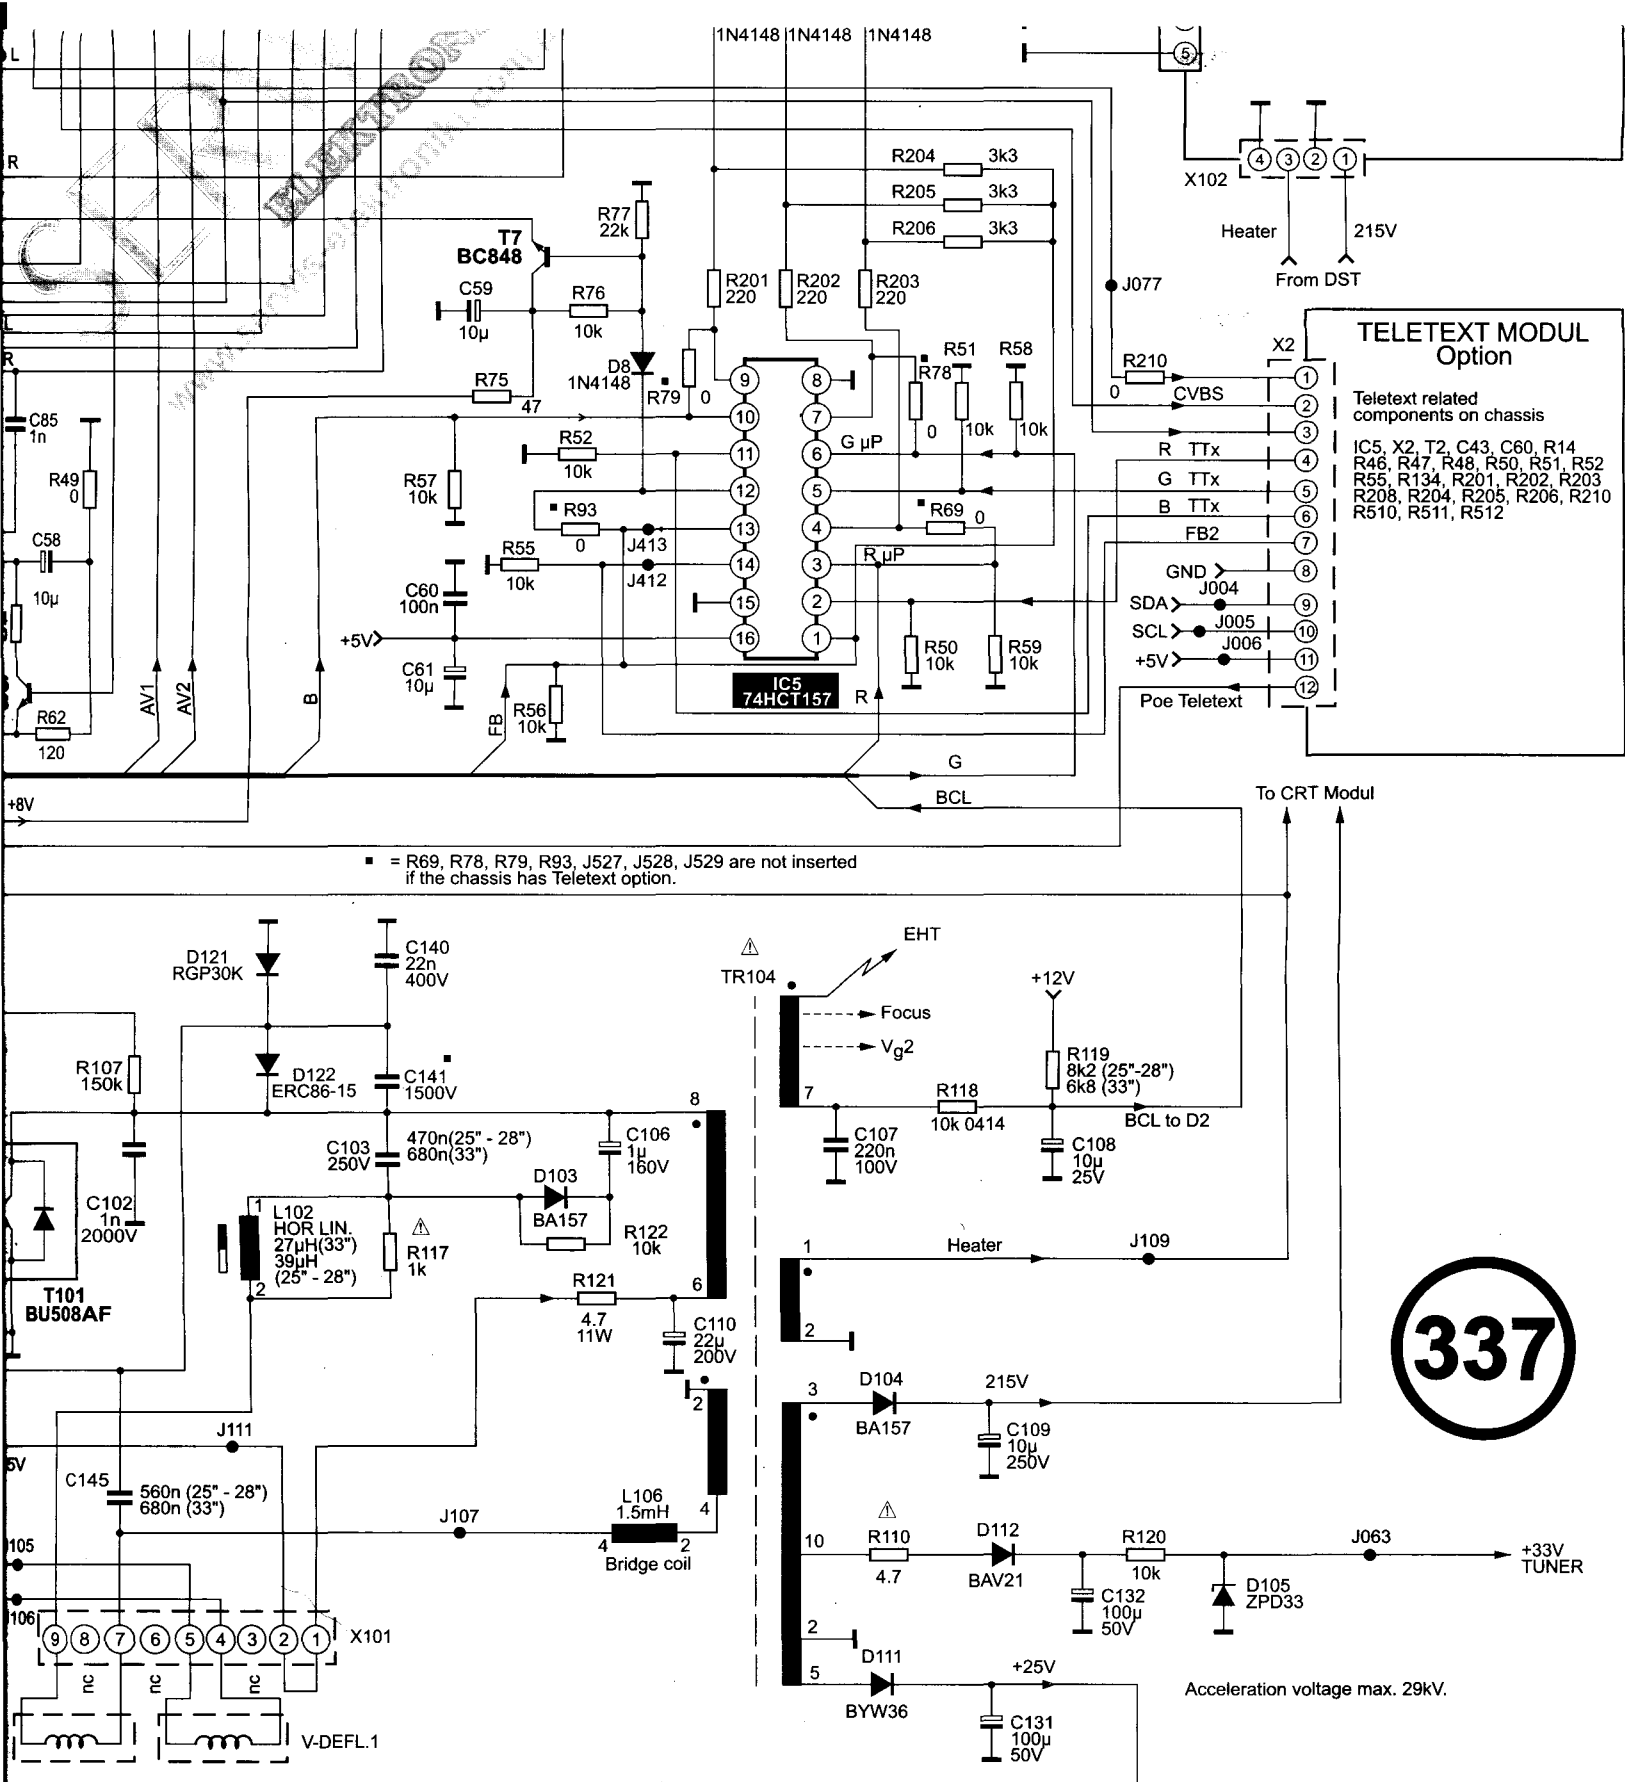

DW_SE1/2007

TN, 28B3/1, 28B4, 28B4STN (strona 1/2)

	SAW FILTERS		
	F302	F203	F308
BG	G9353M	-	G3963M
I	K9453M	-	K3953M
LL'	K9354M	L9453M	K3953M
DK			

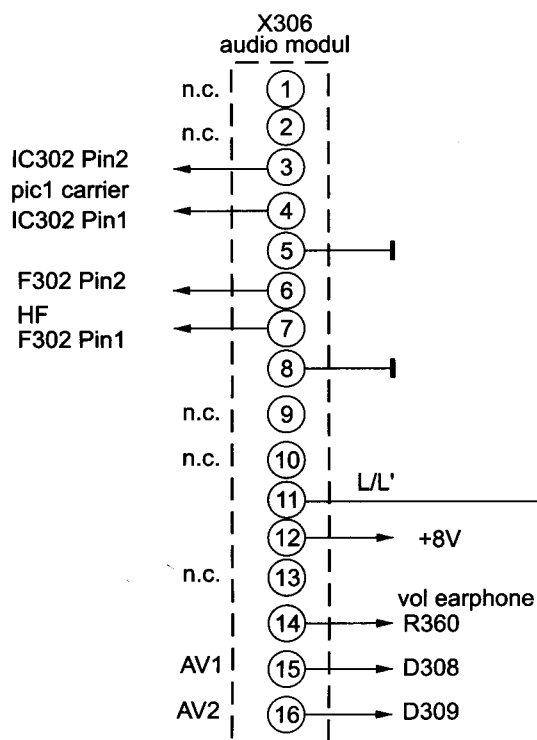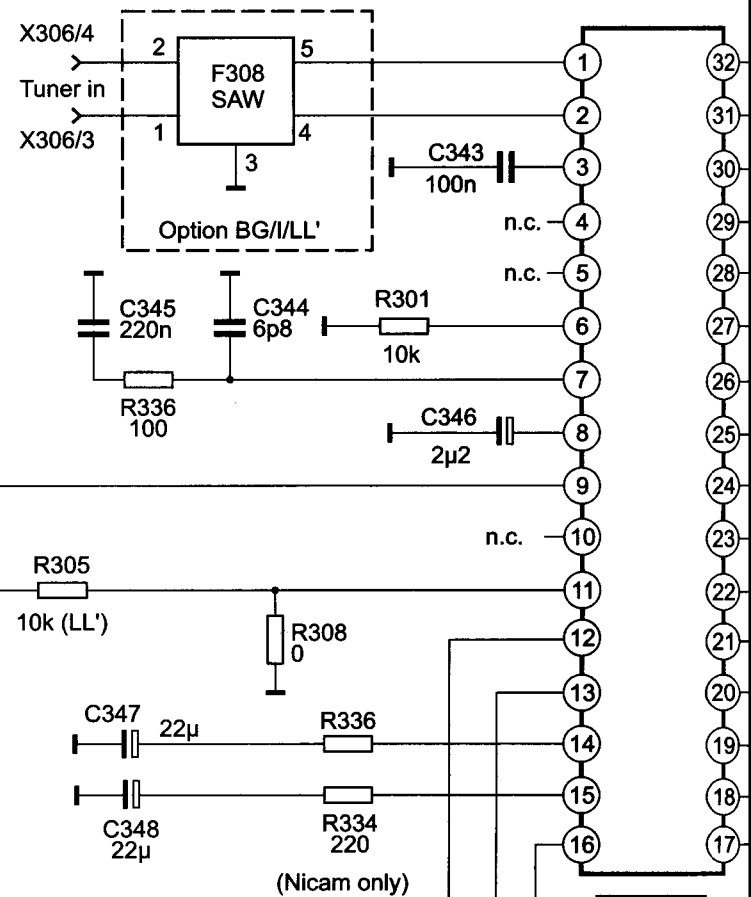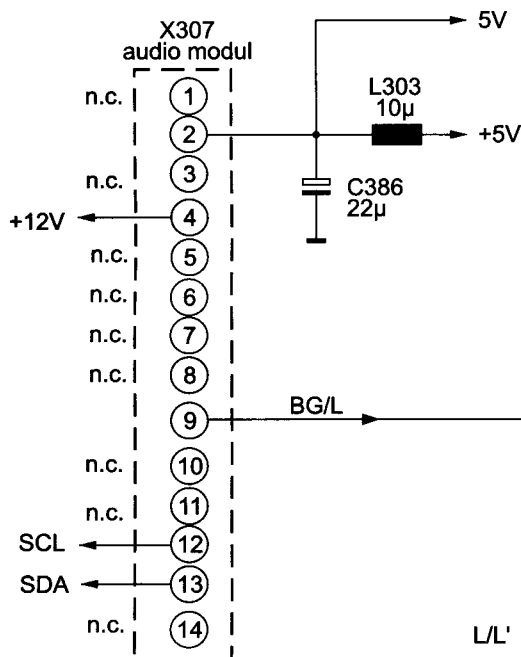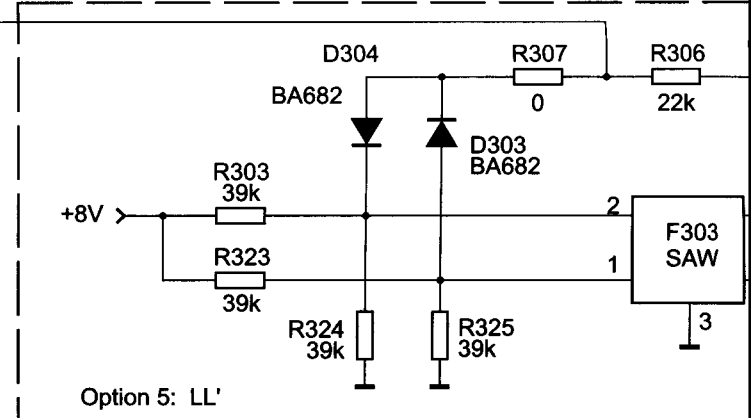

	R334	R335
BG	470	470
LL'	47	47

R380
0
5k6 (NICAM only)

Option 1: BG-Stereo-Decoder

IC302
TDA9815

F307
SFT5.74

4 1 3 2 5

to earphone

ST

C35

10

C36


100n


C362

100n

C36

1n

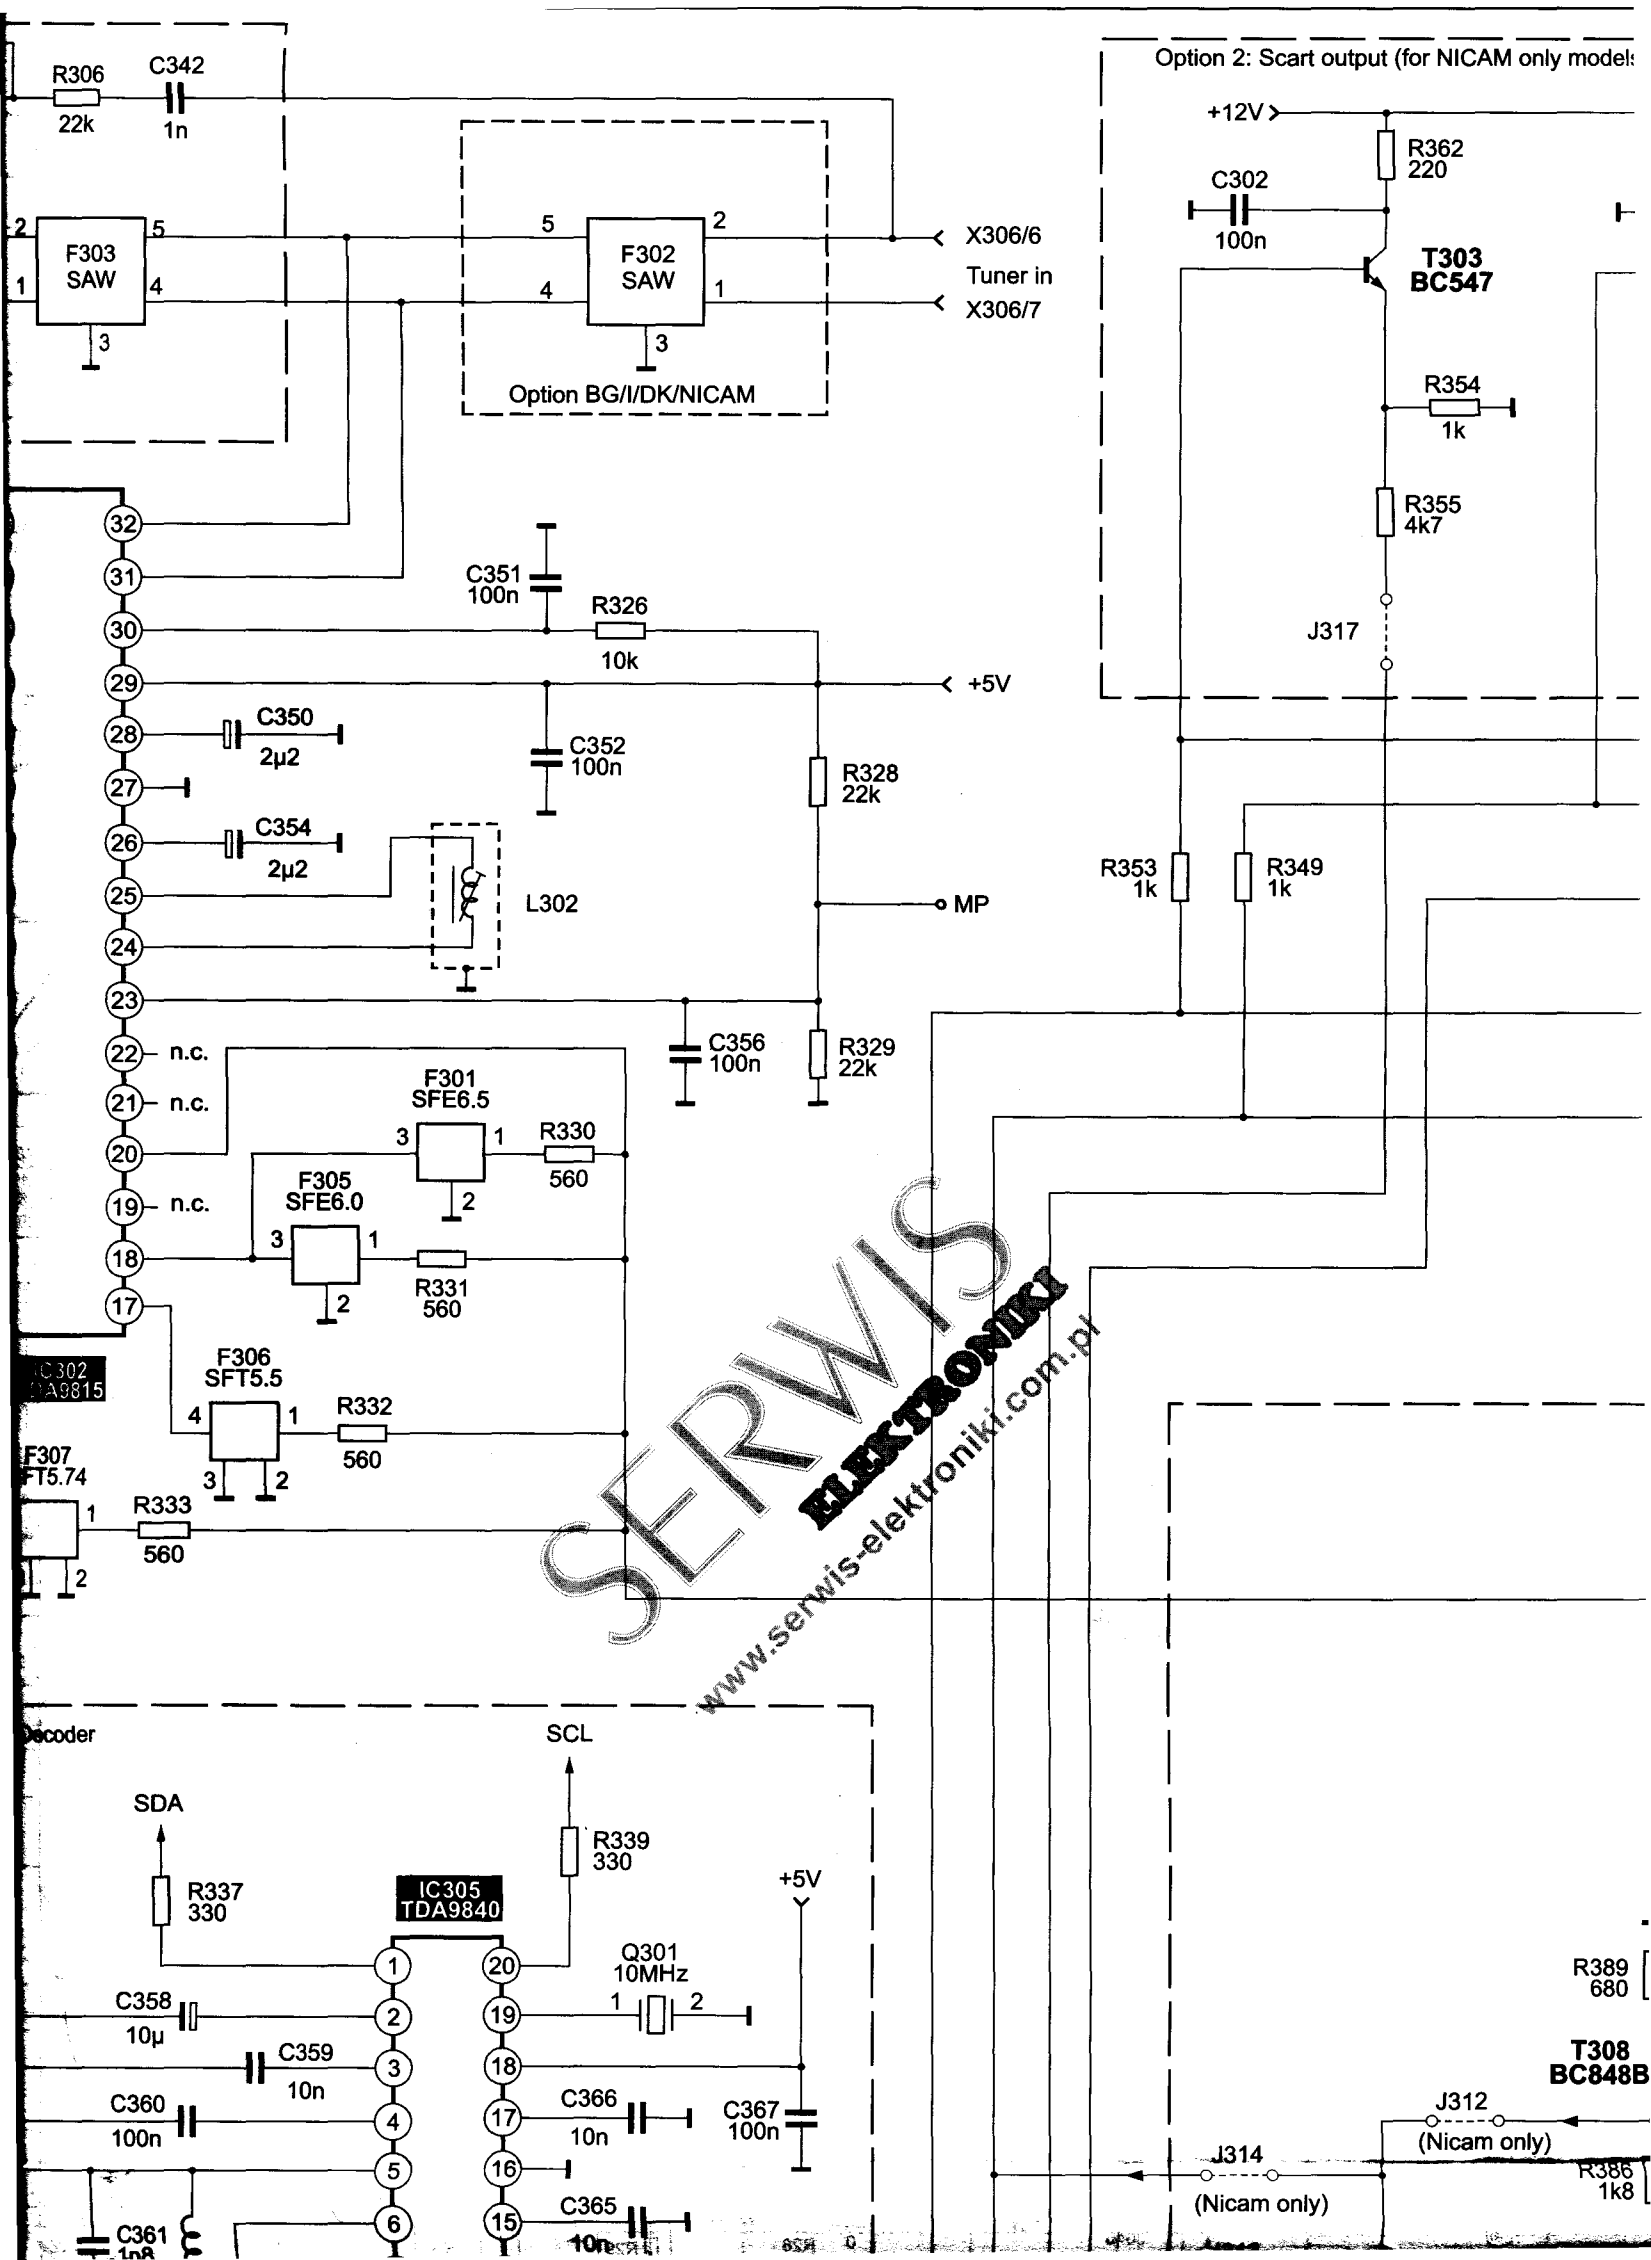


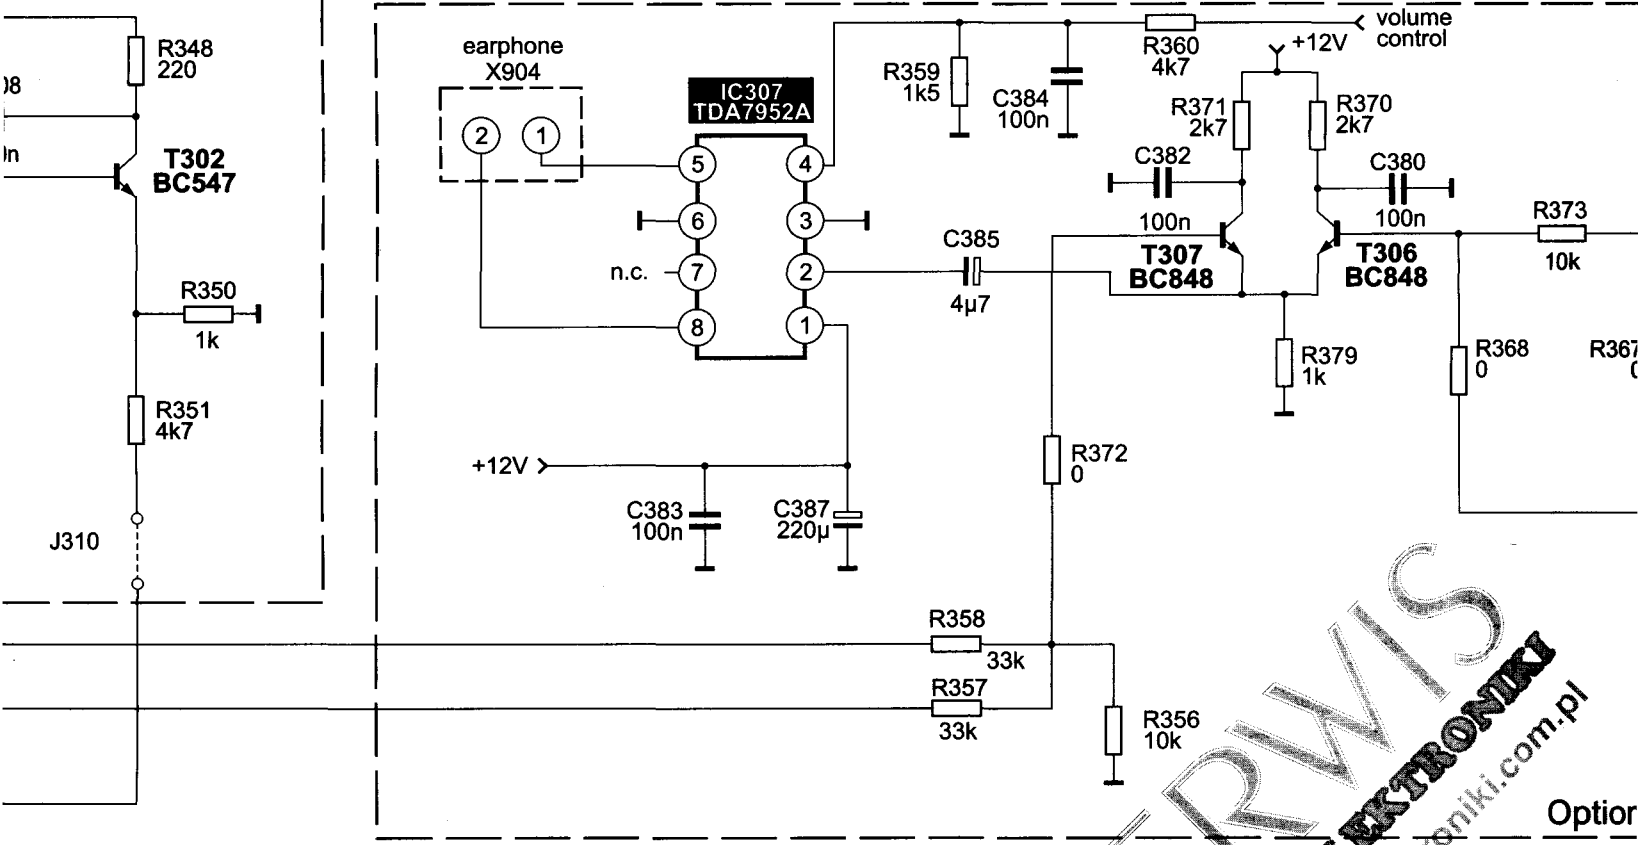


SERWIS ELEKTRONIKI
 www.serwis-elektroniki.com.pl



Option

audio L

 
audio R

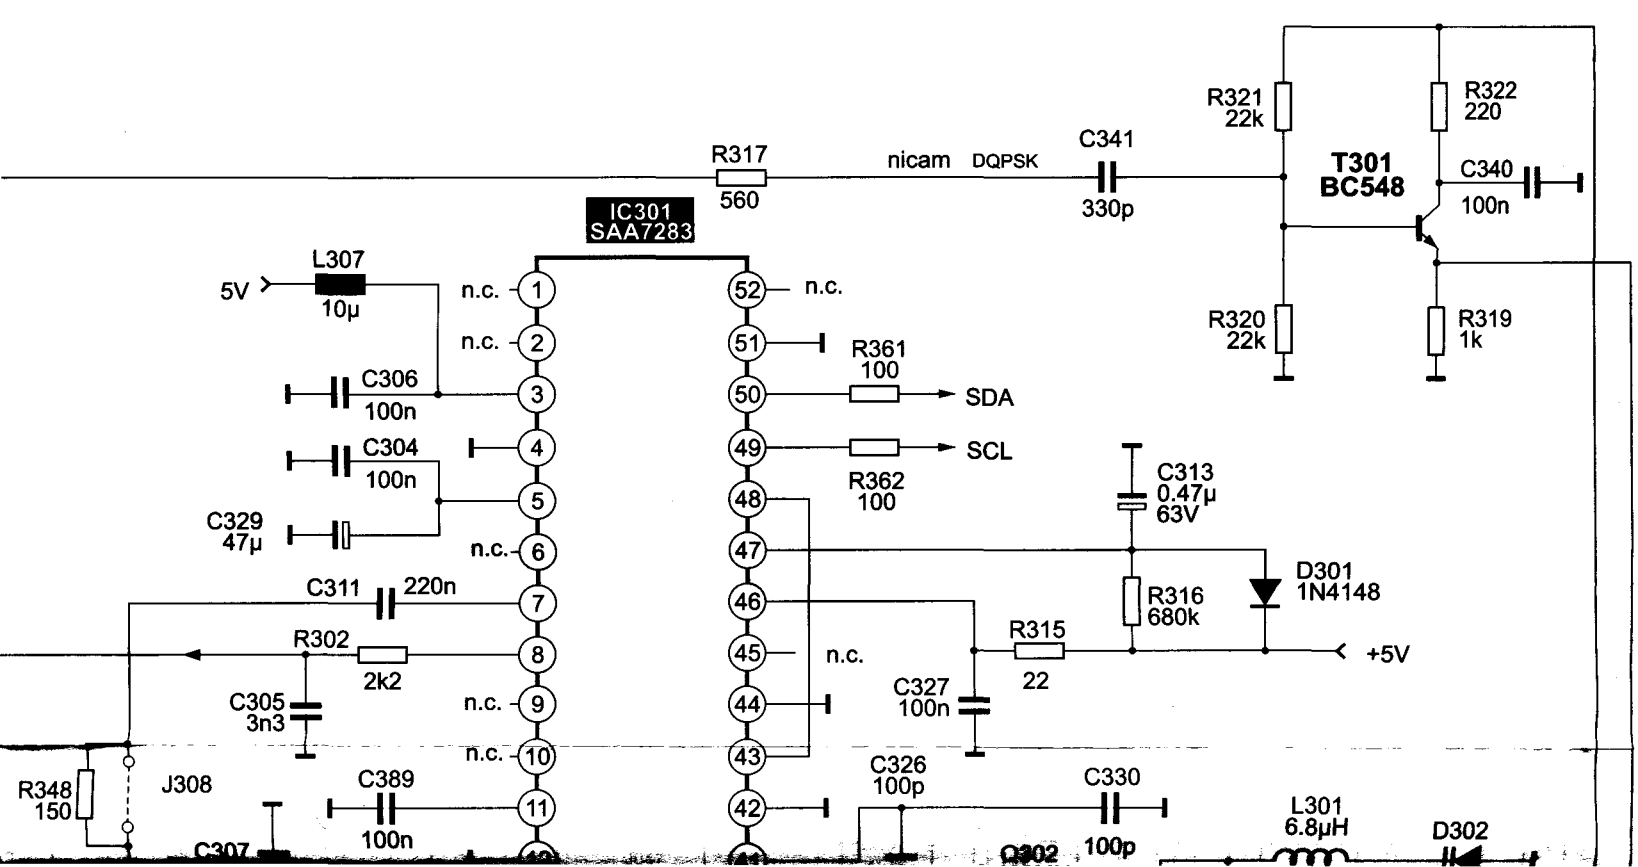


STEREO / NICAM MODUL (OPTIONAL)

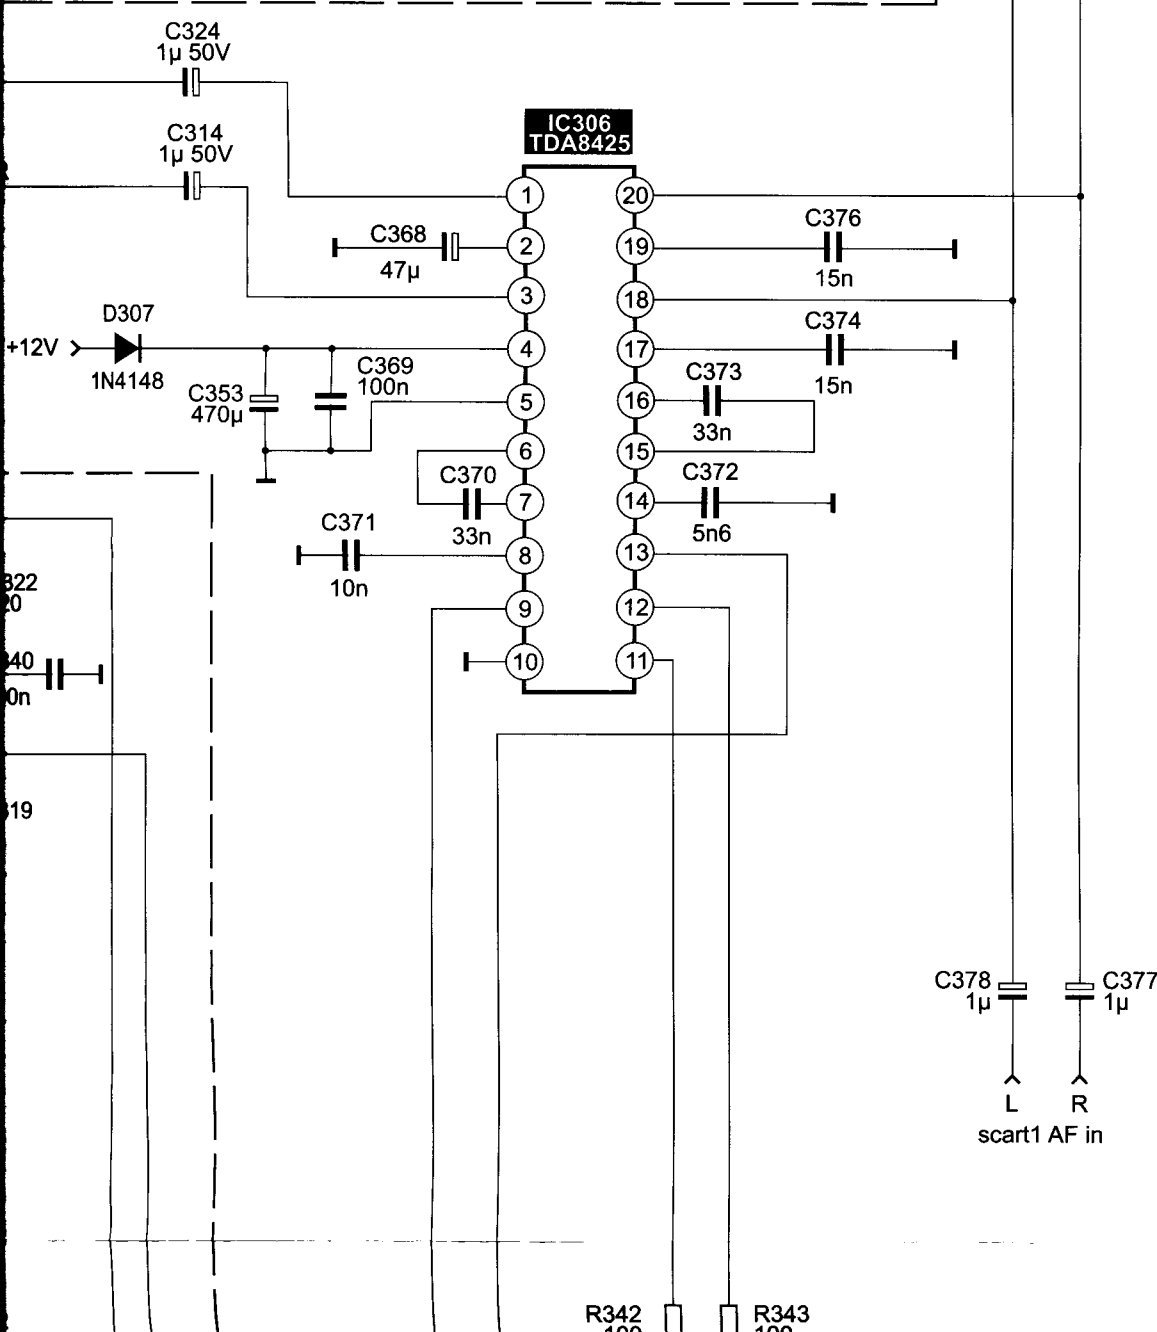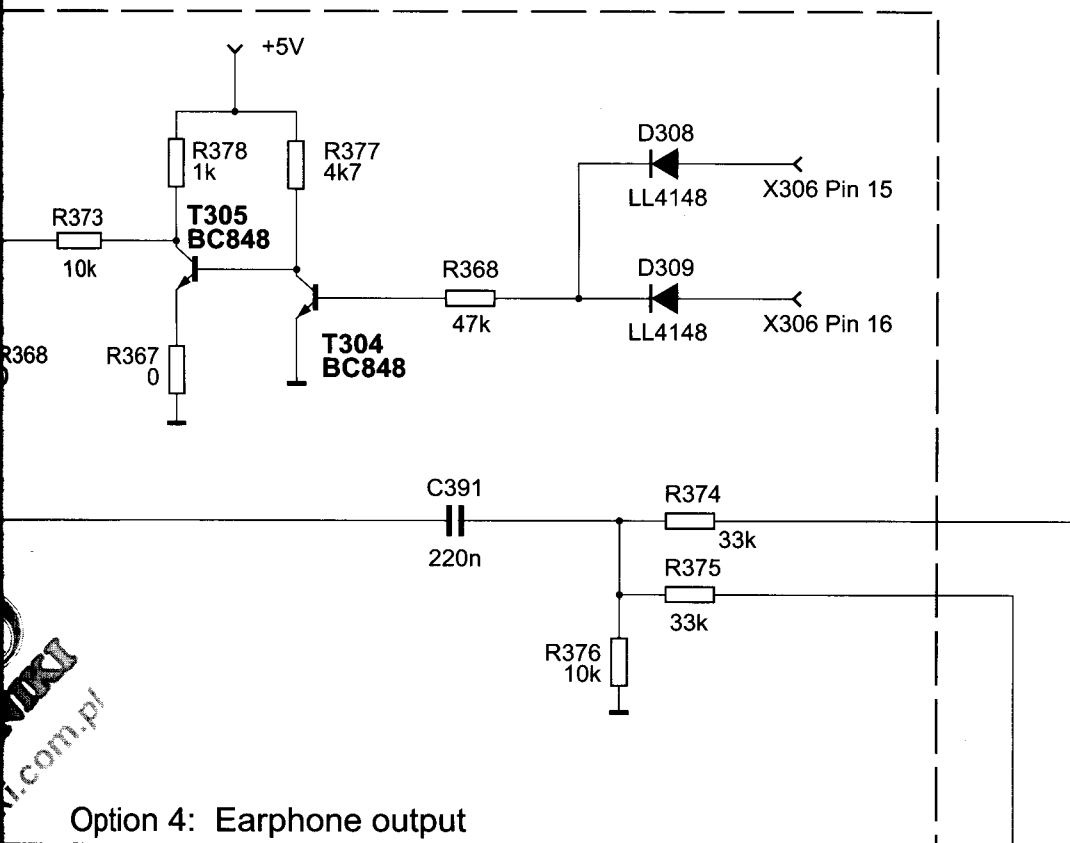

B4, 28B4STN (strona 2/2)

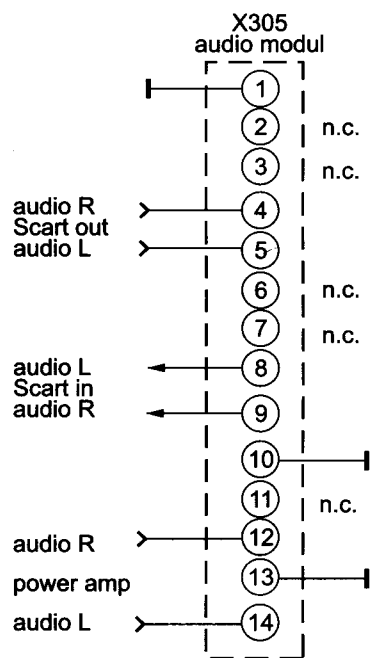


C356
10n NICAM only

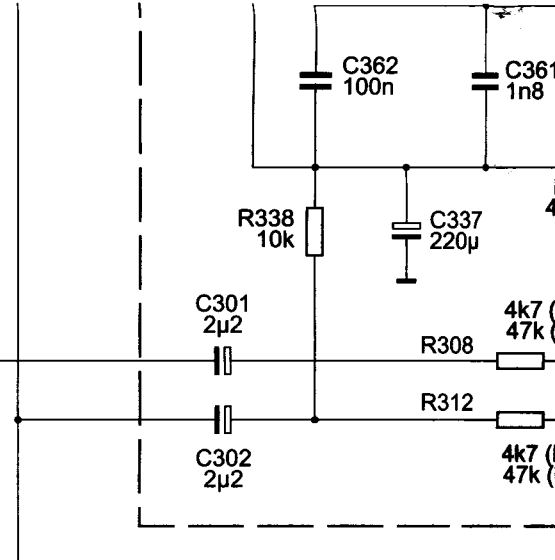




**SERWIS
ELEKTRONIKI**
www.serwis-elektroniki.com.pl


R348, R349, R382, R383, C306, J313, J314 are inserted in case of NICAM ONLY.

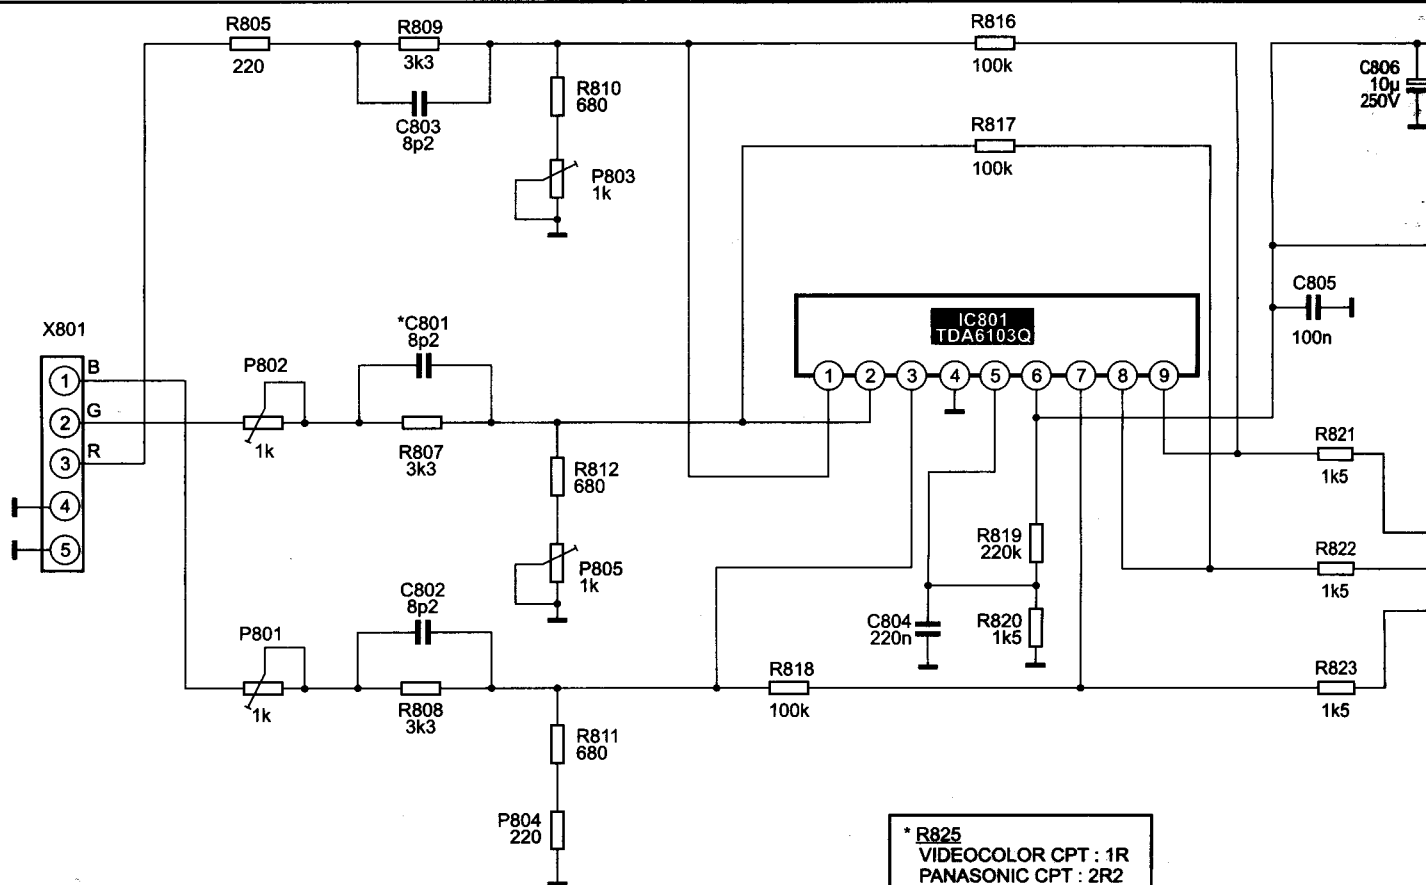


CRT MODUL


* = The value of R825 and C801 differs with the type of CRT

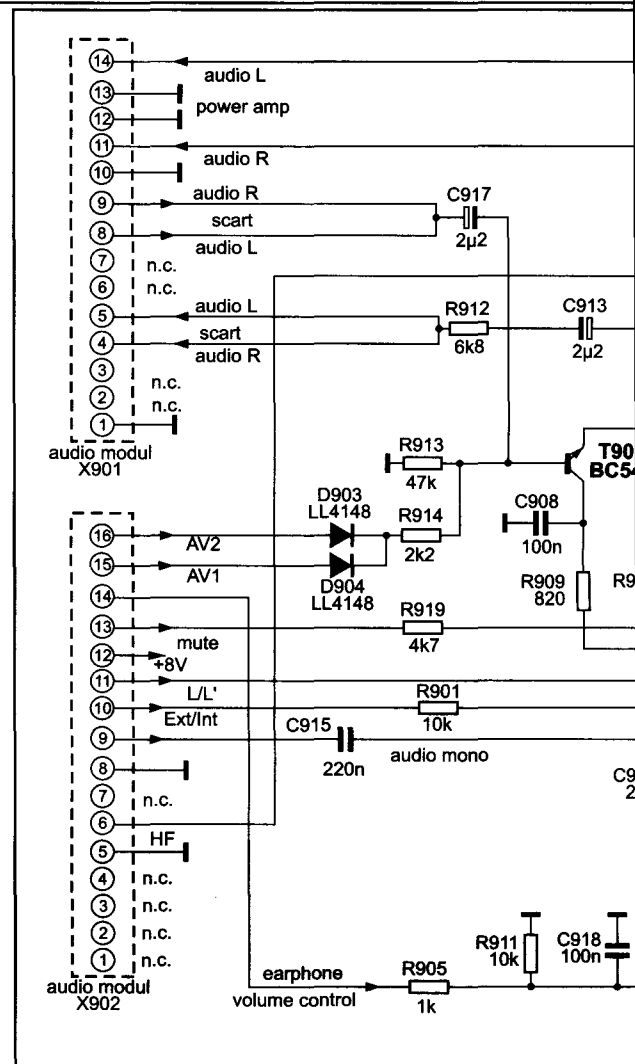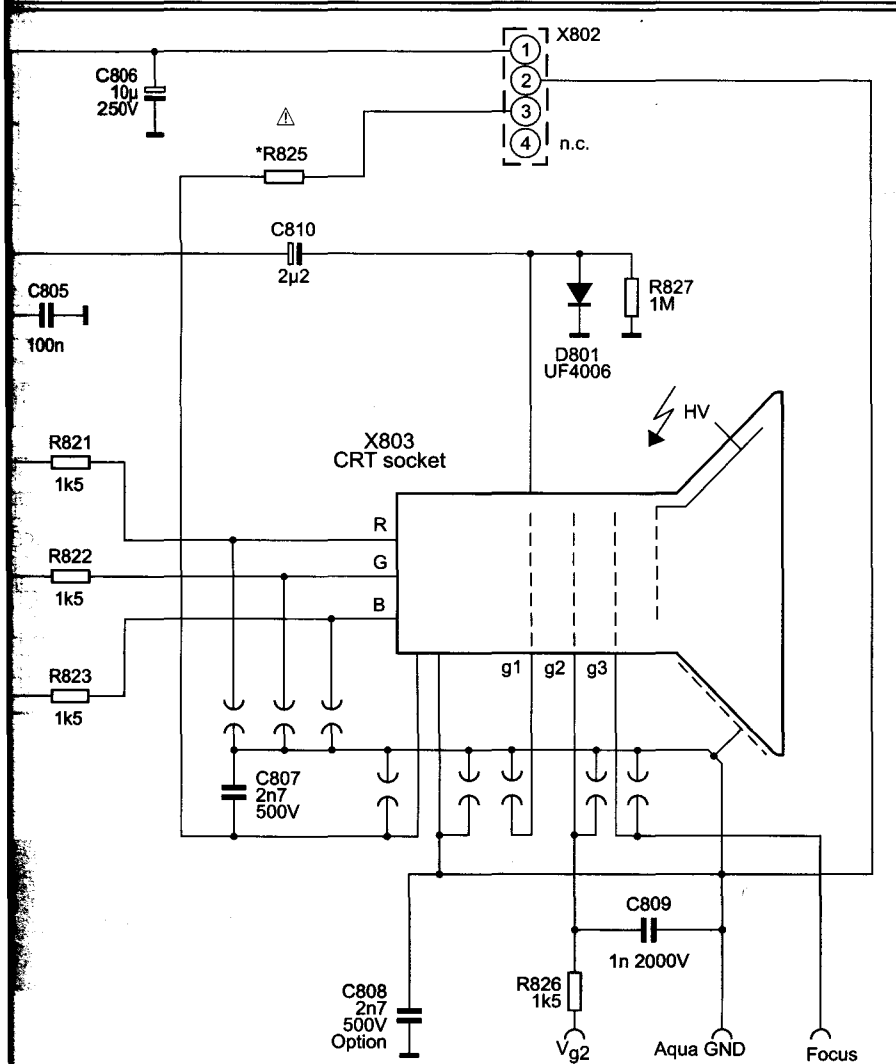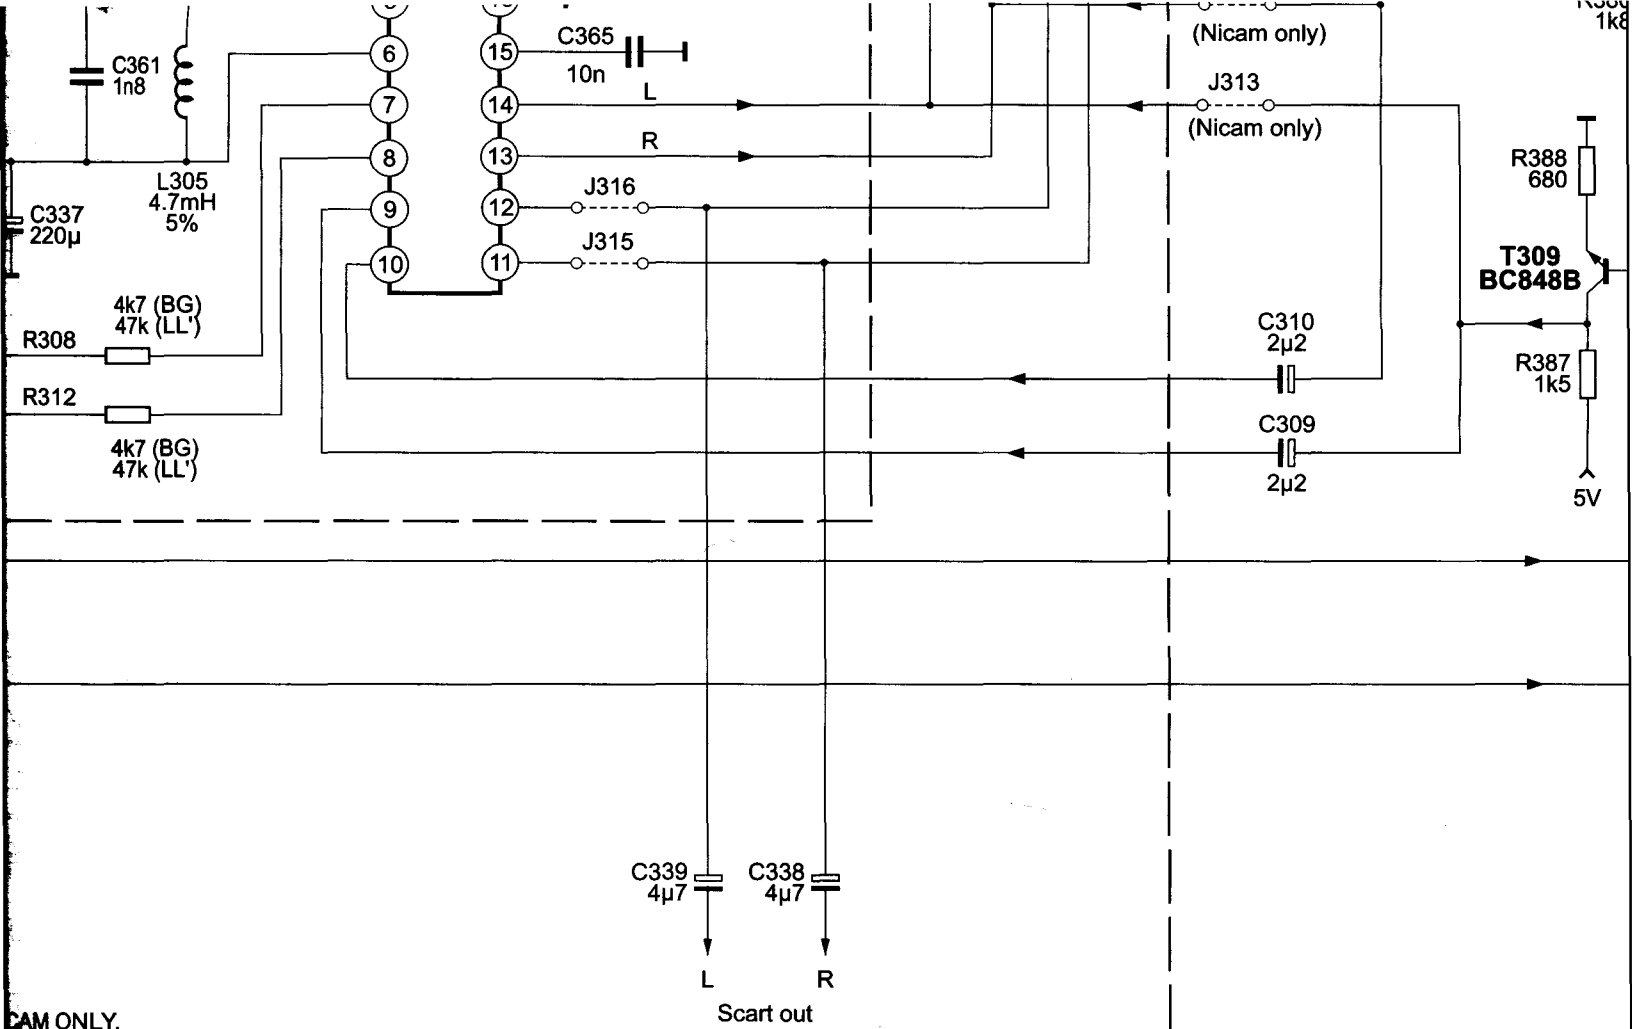

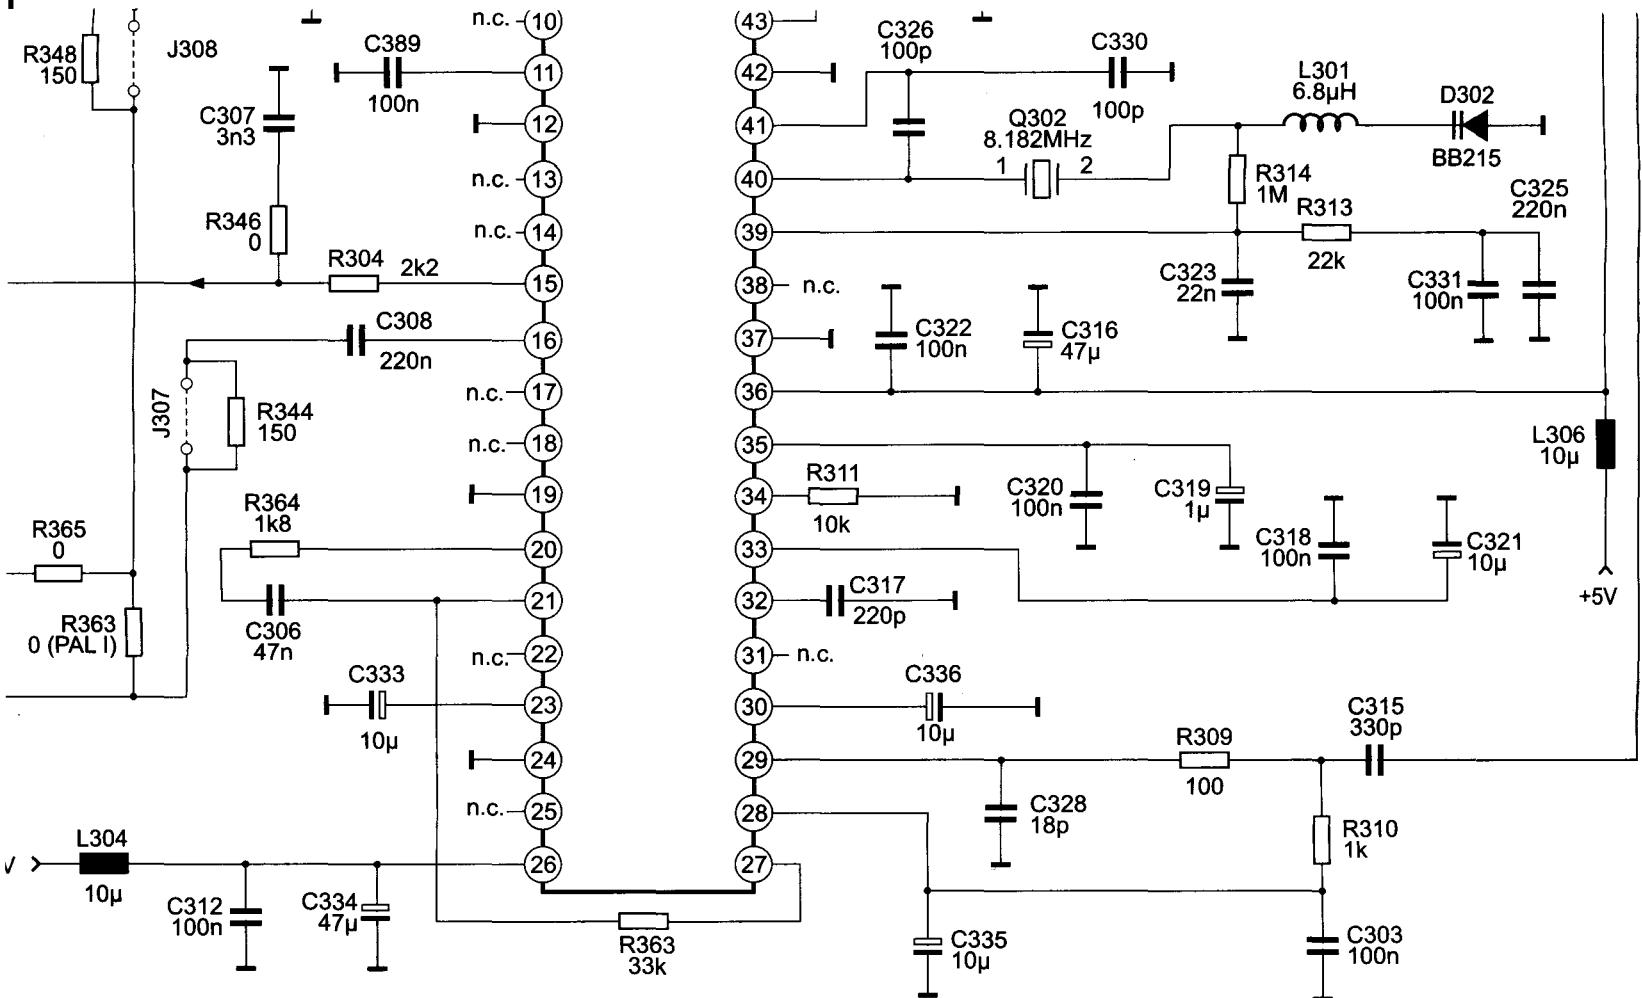


SECAM L' AM MODUL

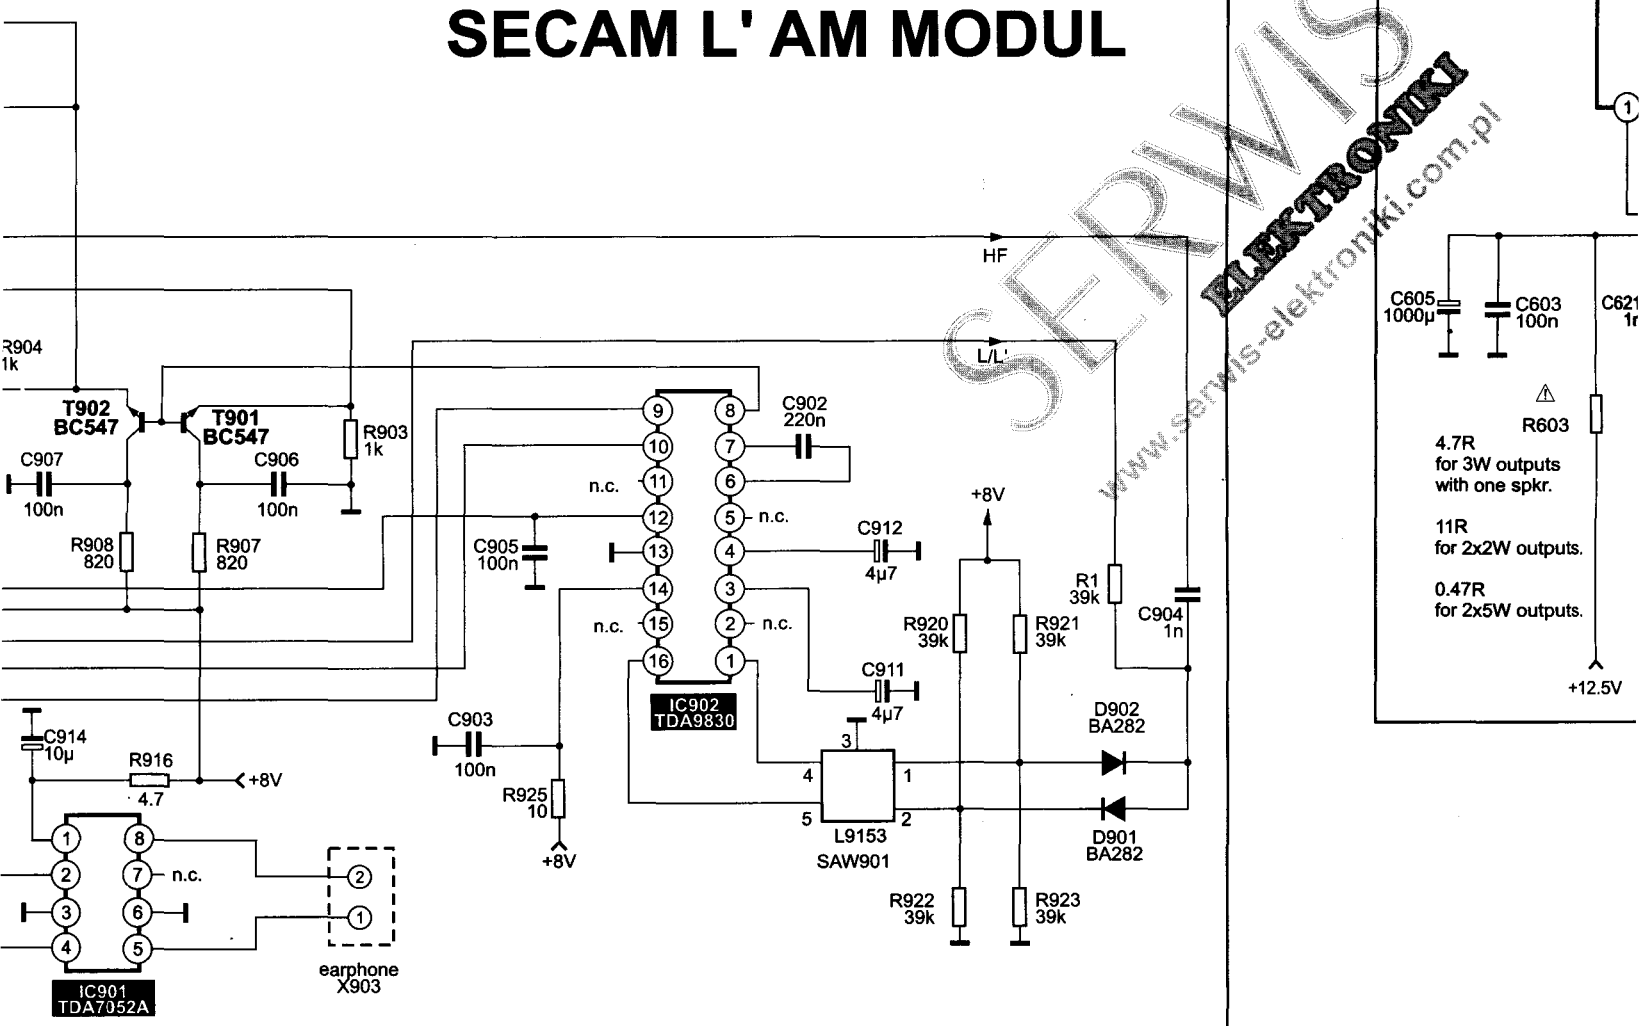

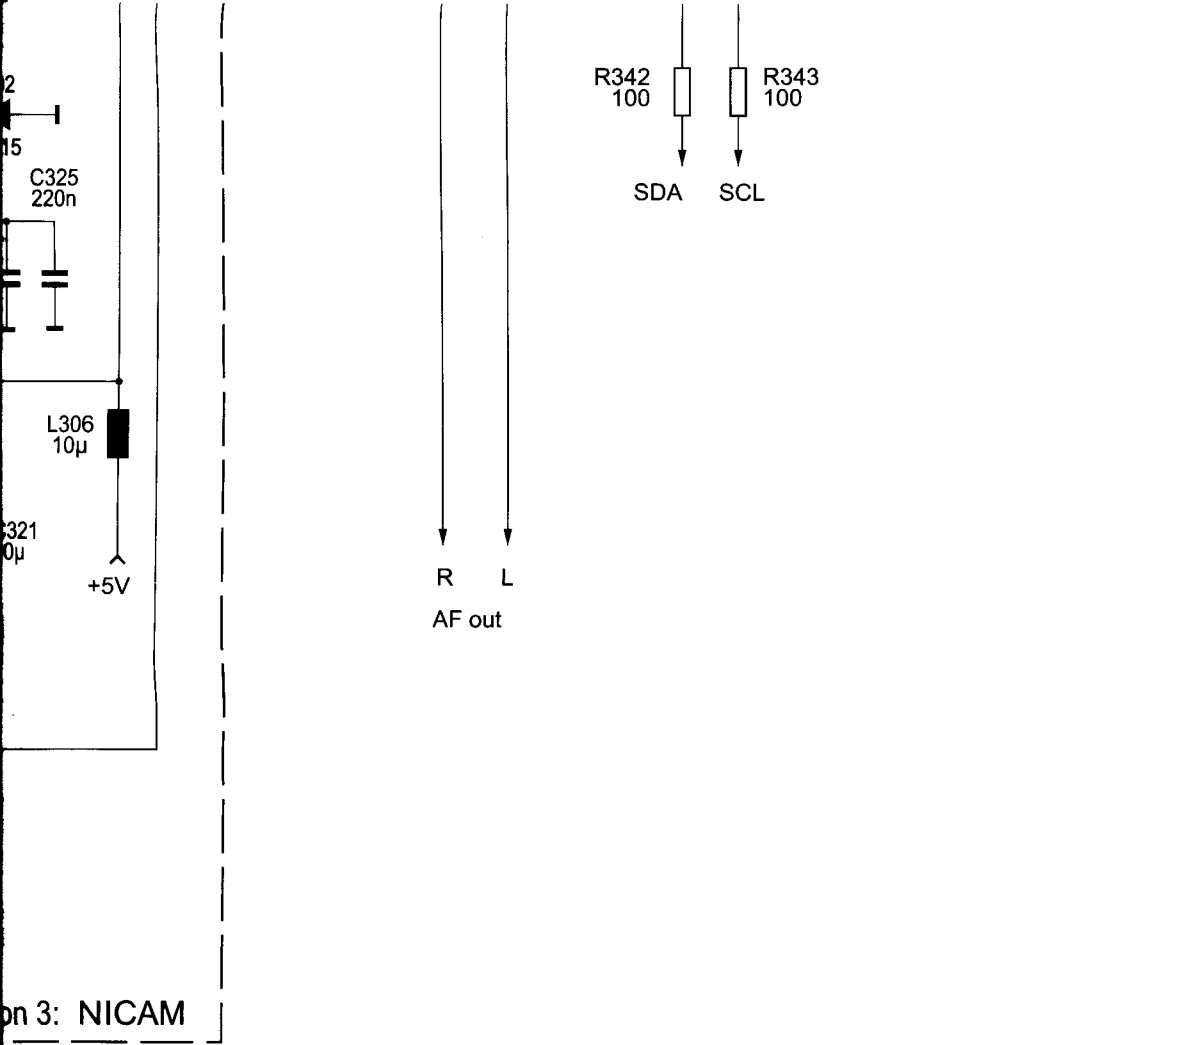

pin 3: NICAM

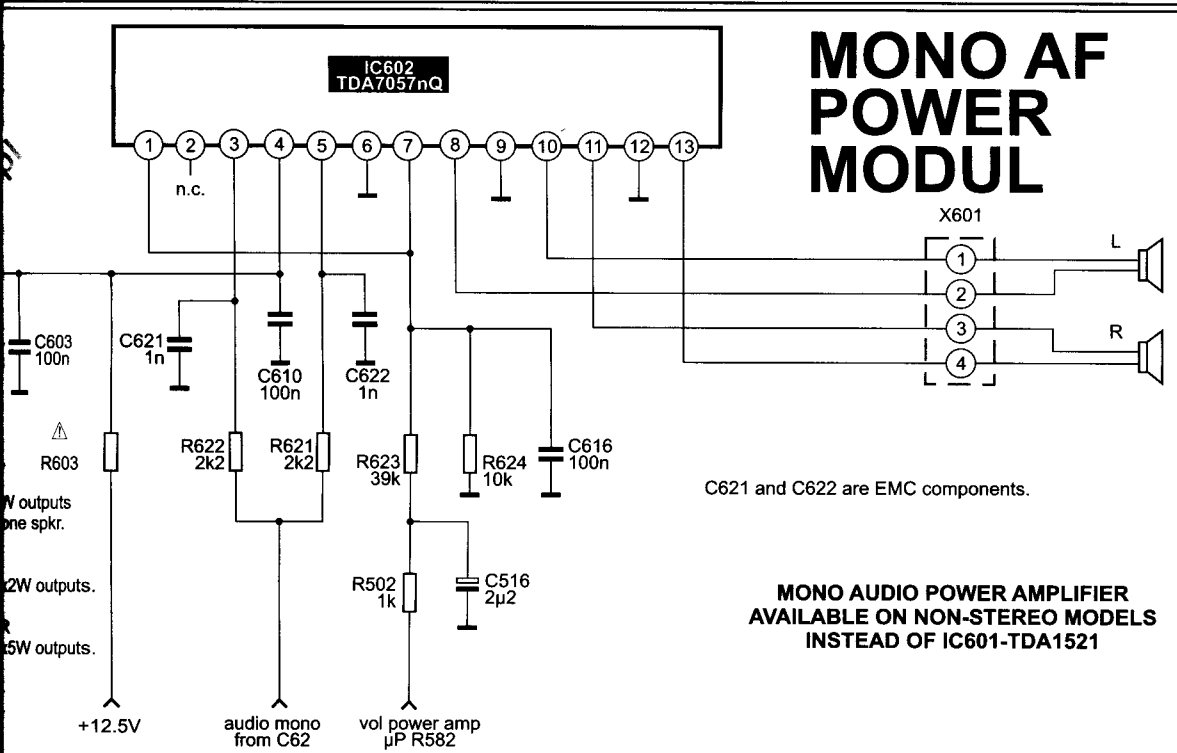

DW_SE1/2007

OTVC Crown 25B3/1, 25B4, 25B4STN, 28B3/1, 28B4