


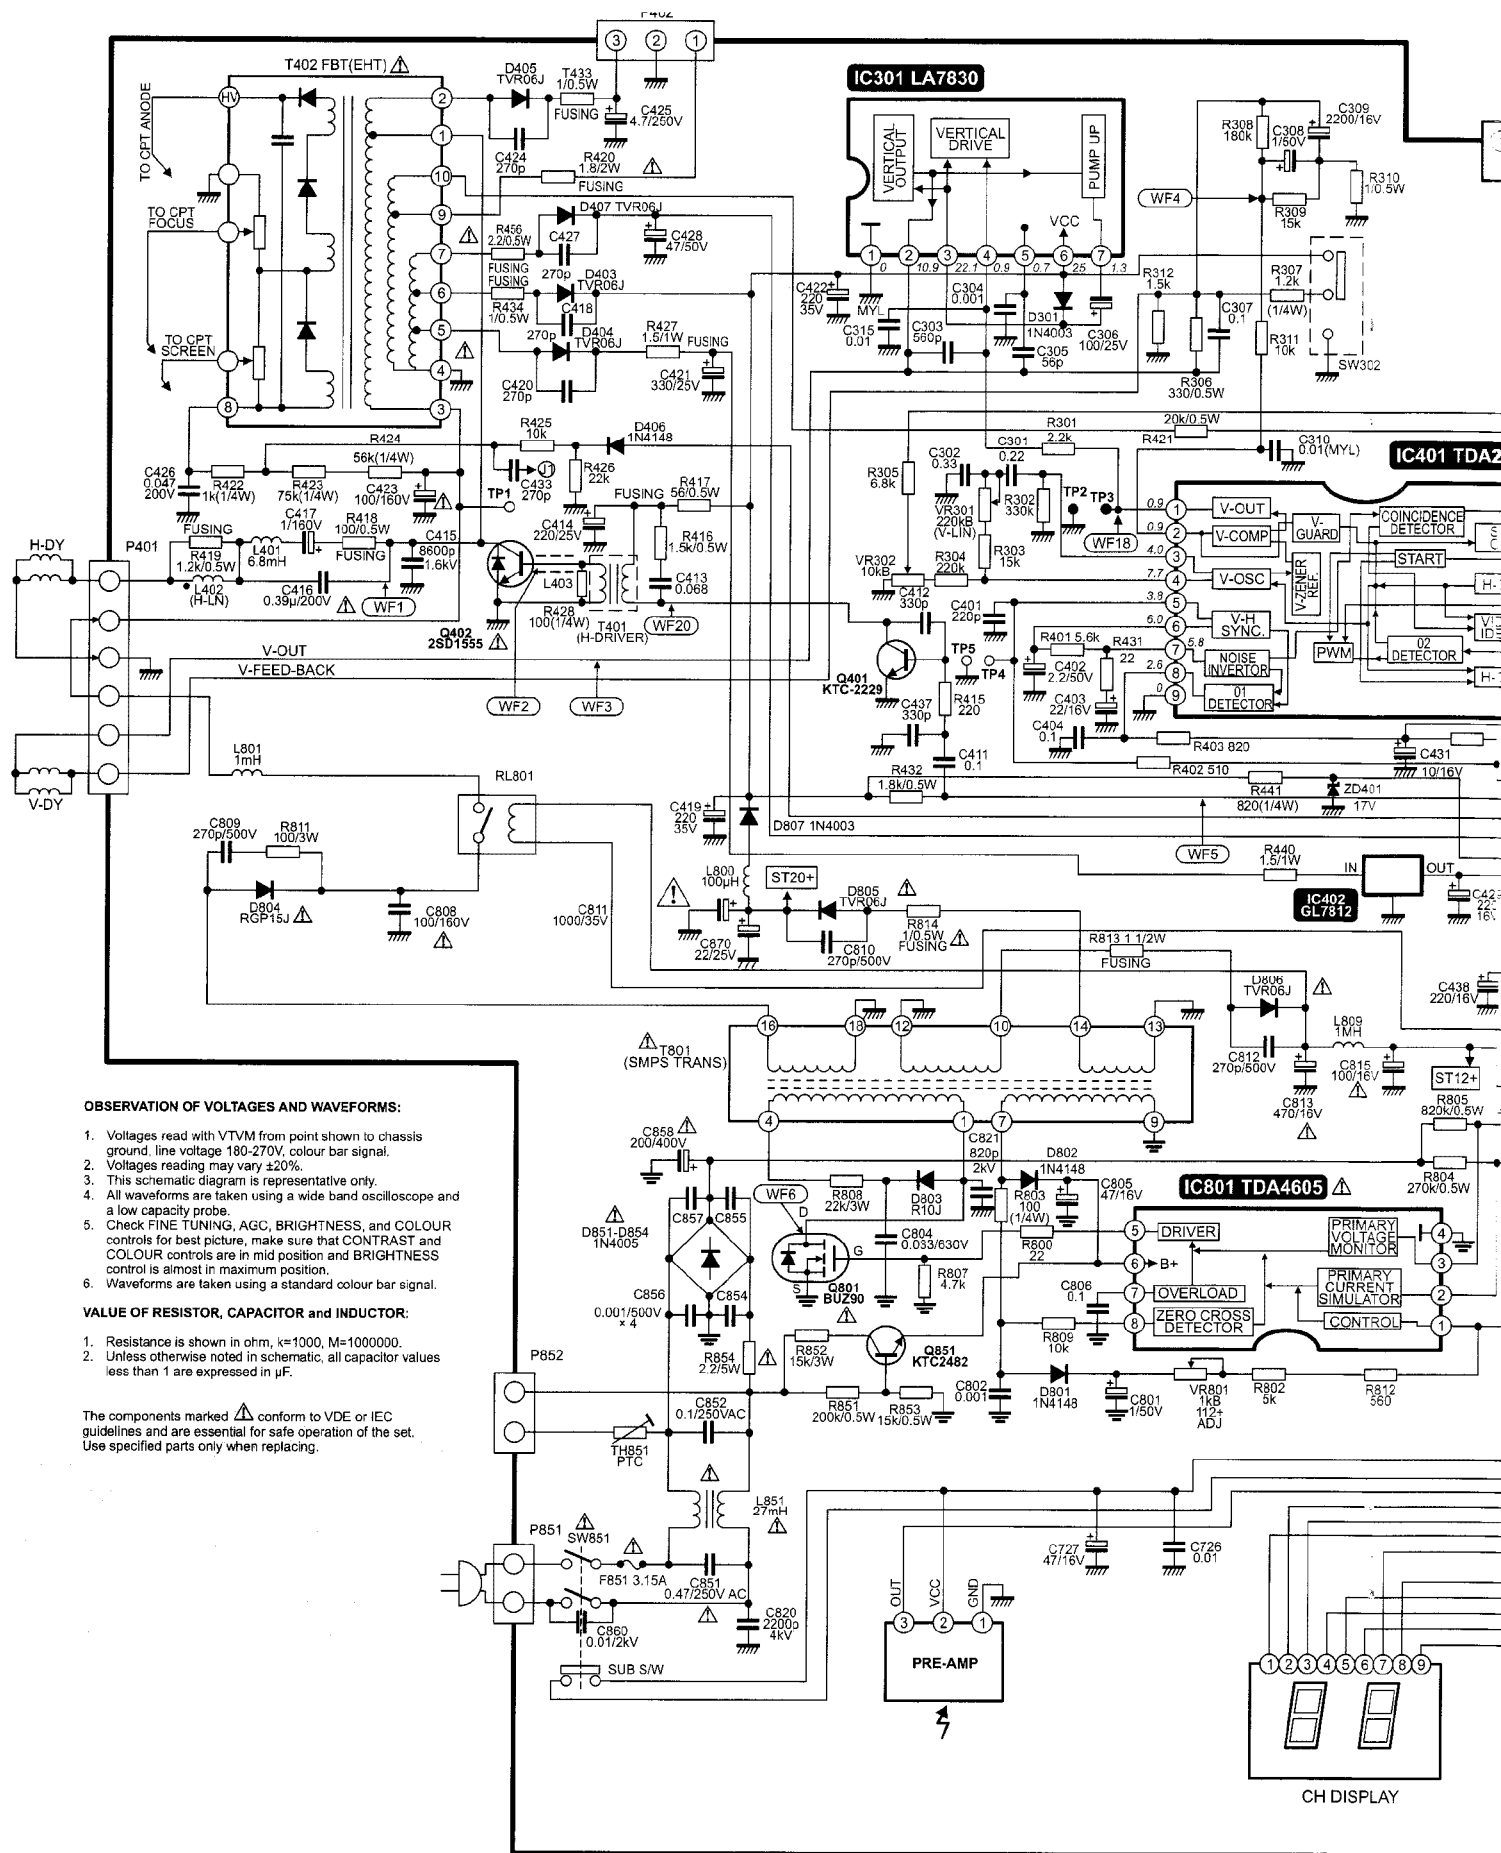


OBSERVATION OF VOLTAGES AND WAVEFORMS:


1. Voltages read with VTVM from point shown to chassis ground, line voltage 180-270V, colour bar signal.
2. Voltages reading may vary $\pm 20\%$.
3. This schematic diagram is representative only.
4. All waveforms are taken using a wide band oscilloscope and a low capacity probe.
5. Check FINE TUNING, AGC, BRIGHTNESS, and COLOUR controls for best picture, make sure that CONTRAST and COLOUR controls are in mid position and BRIGHTNESS control is almost in maximum position.
6. Waveforms are taken using a standard colour bar signal.



VALUE OF RESISTOR, CAPACITOR and INDUCTOR:

1. Resistance is shown in ohm, k=1000, M=1000000.
2. Unless otherwise noted in schematic, all capacitor values less than 1 are expressed in μF .


The components marked Δ conform to VDE or IEC guidelines and are essential for safe operation of the set. Use specified parts only when replacing.

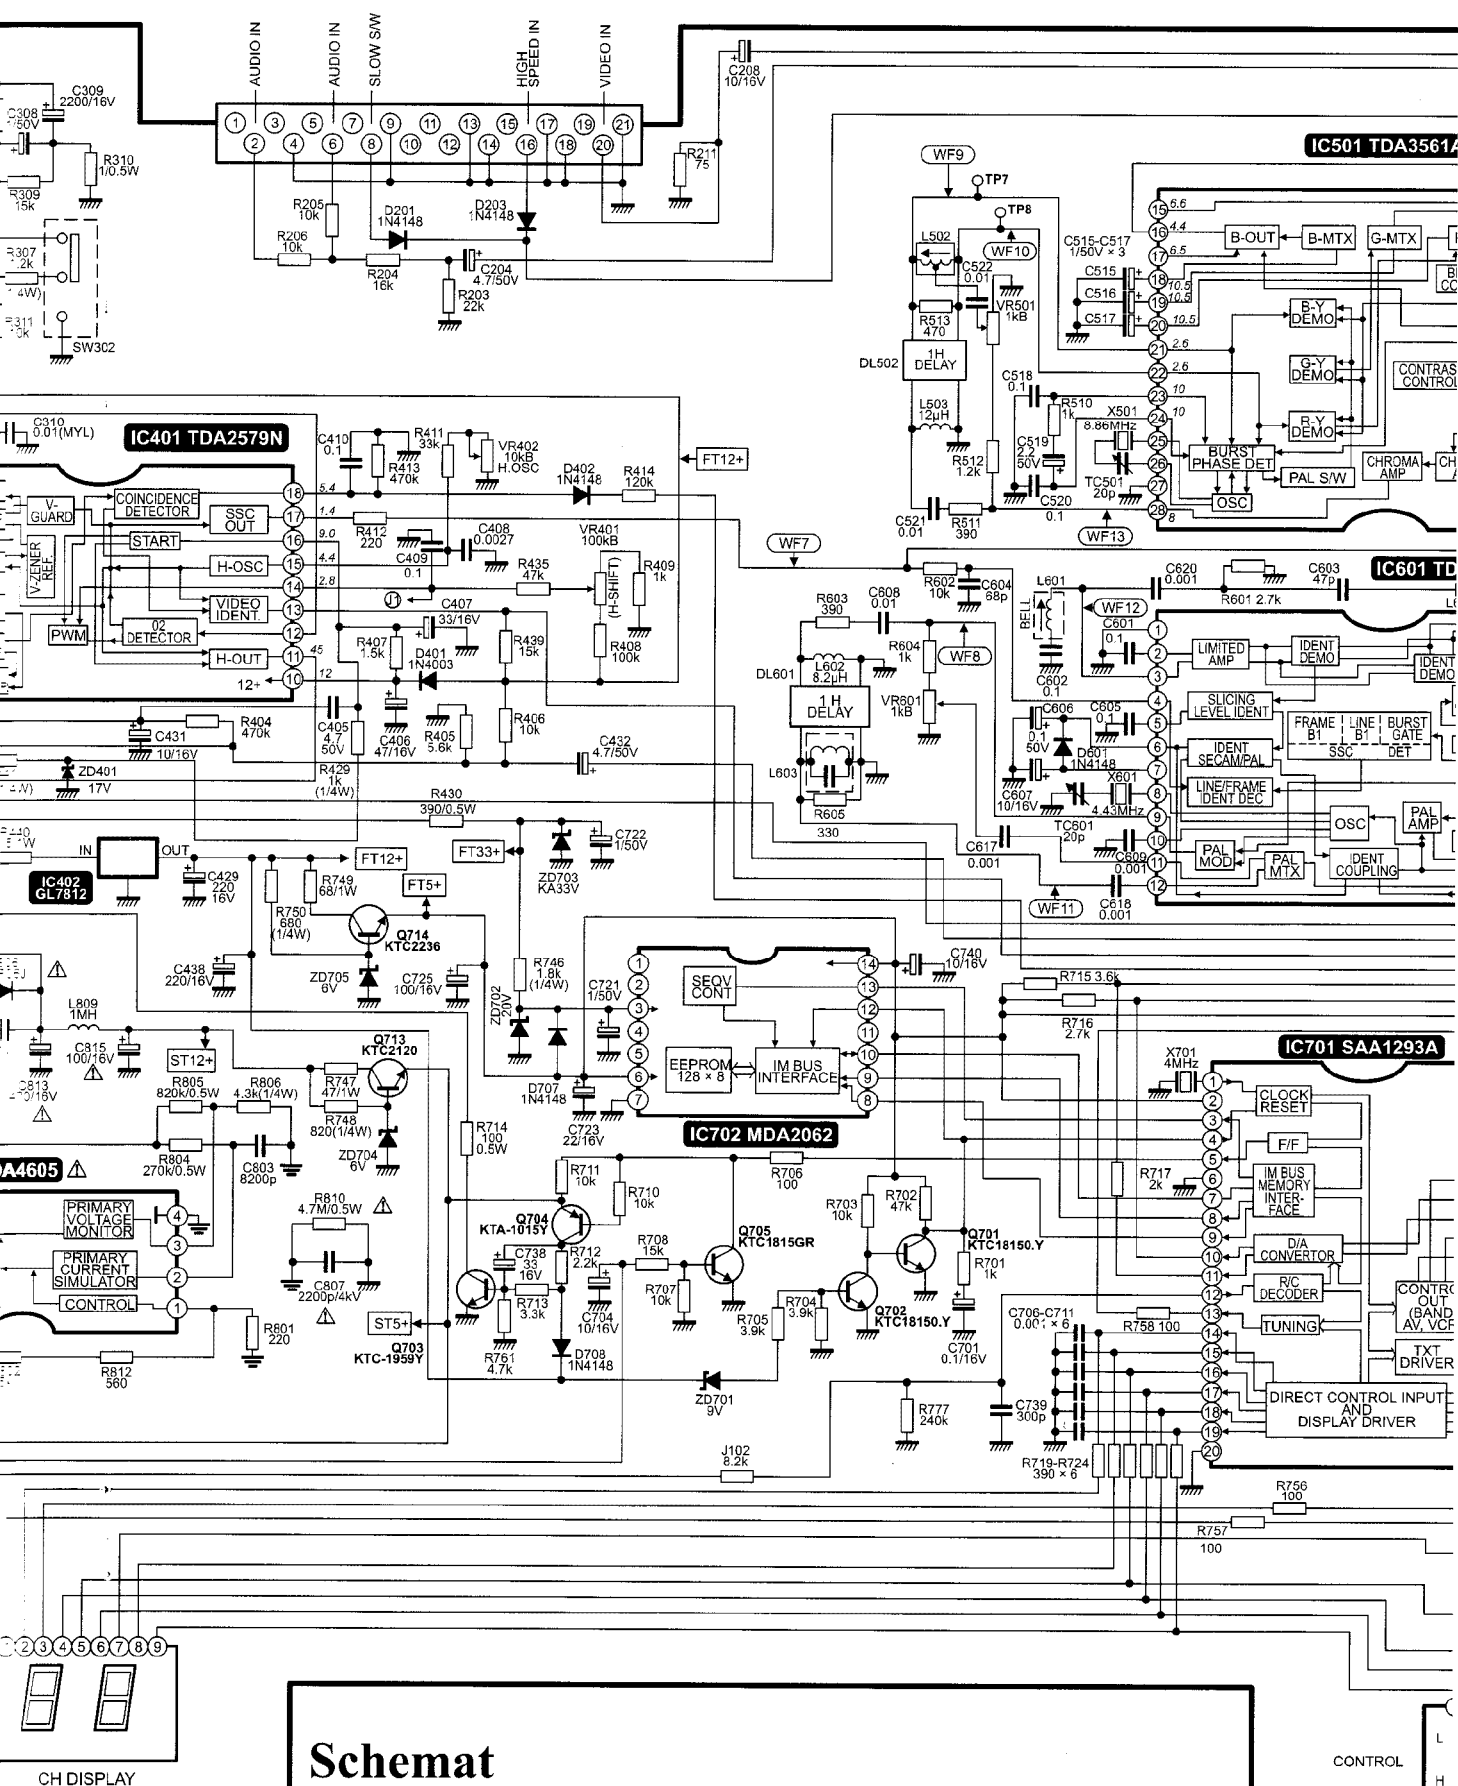

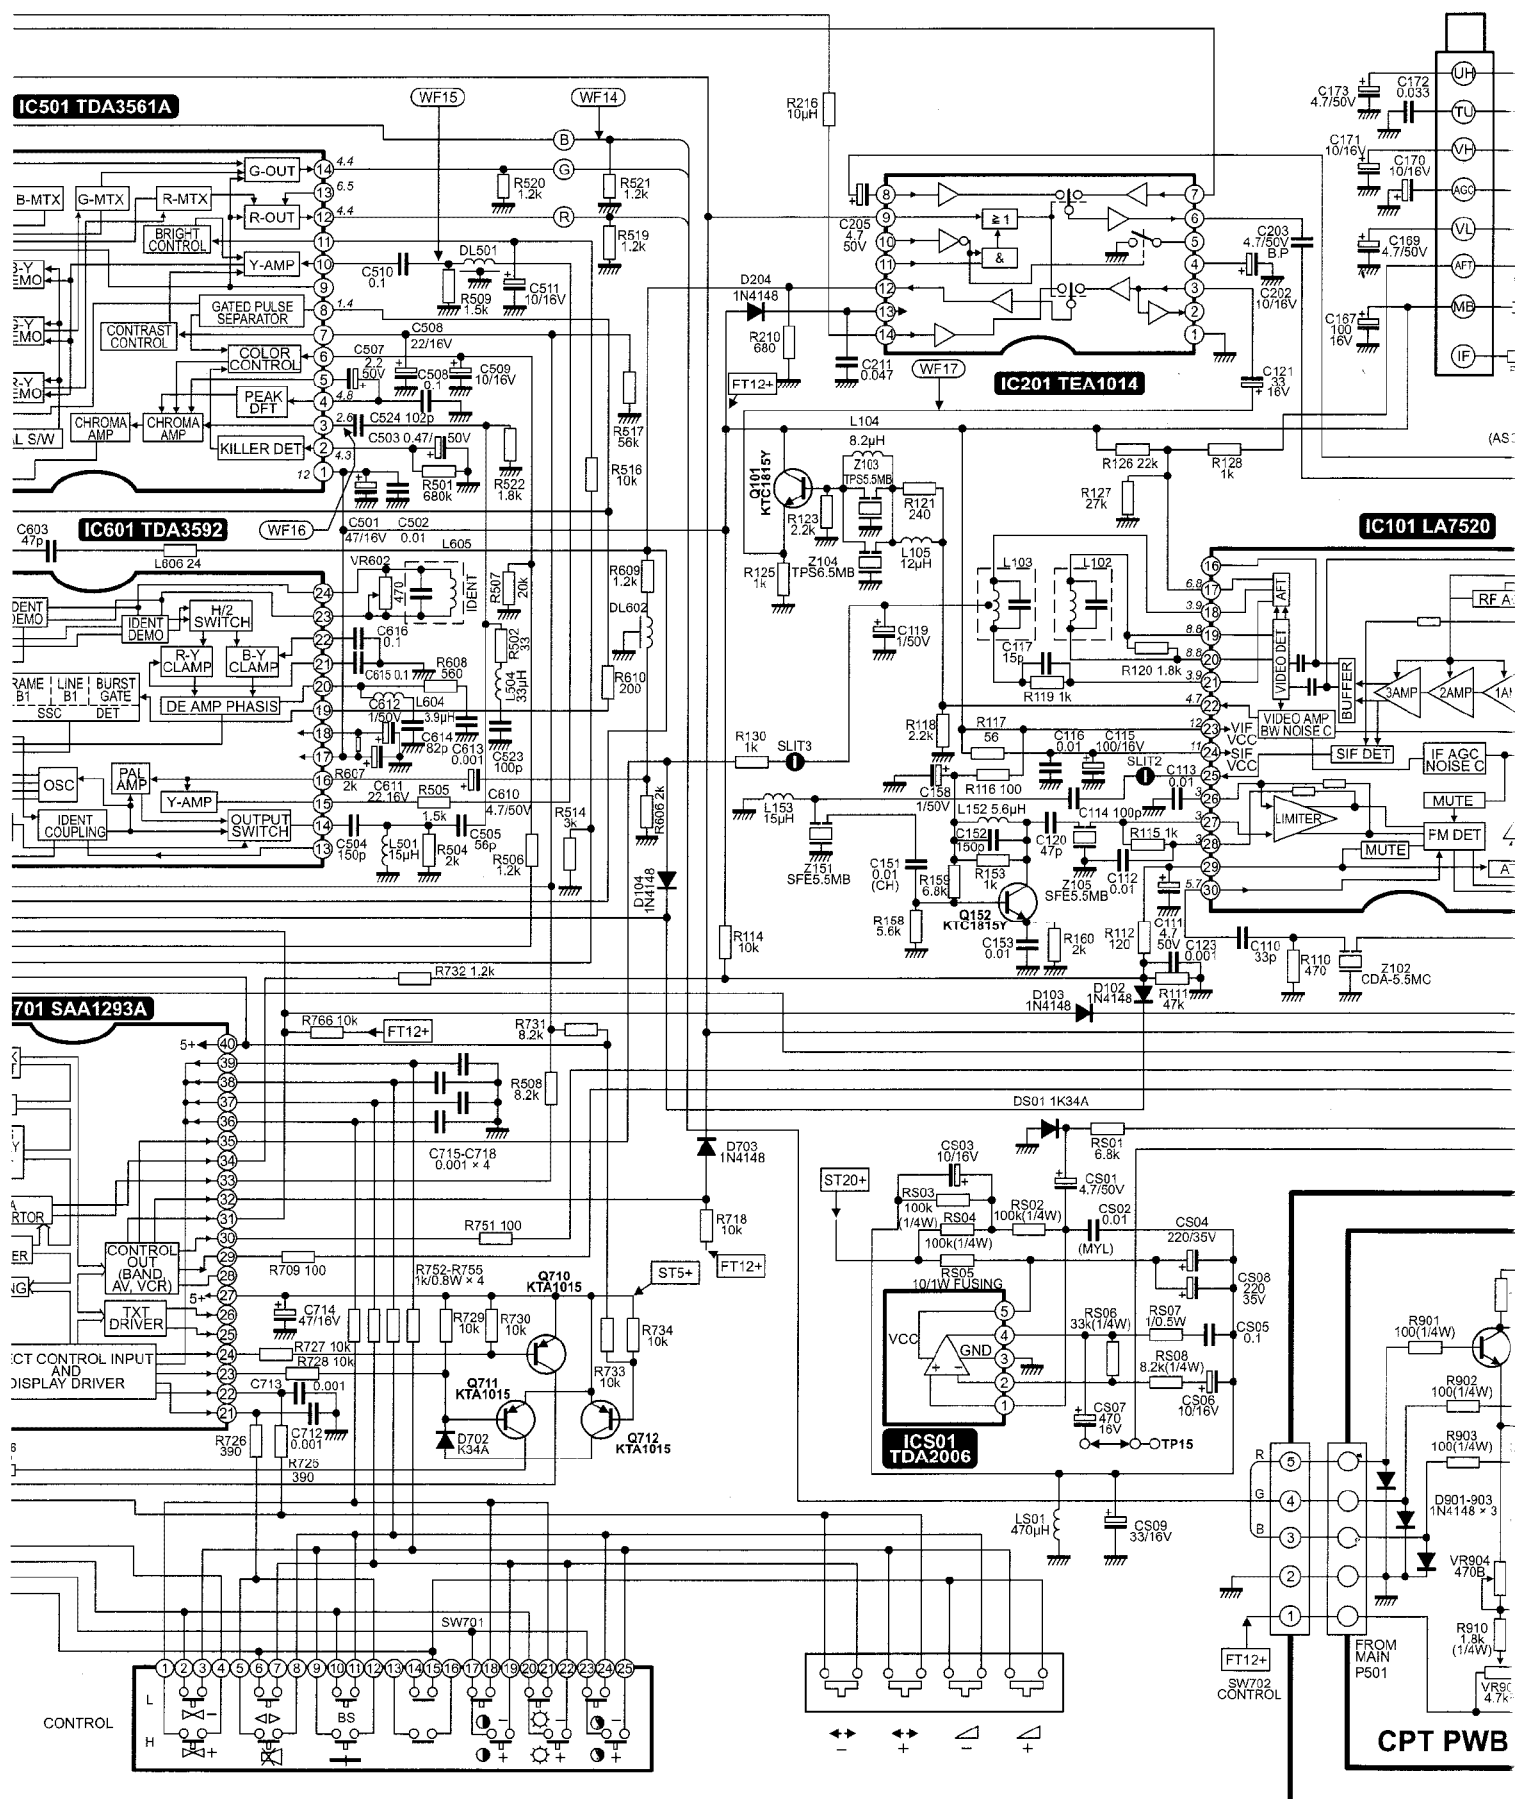

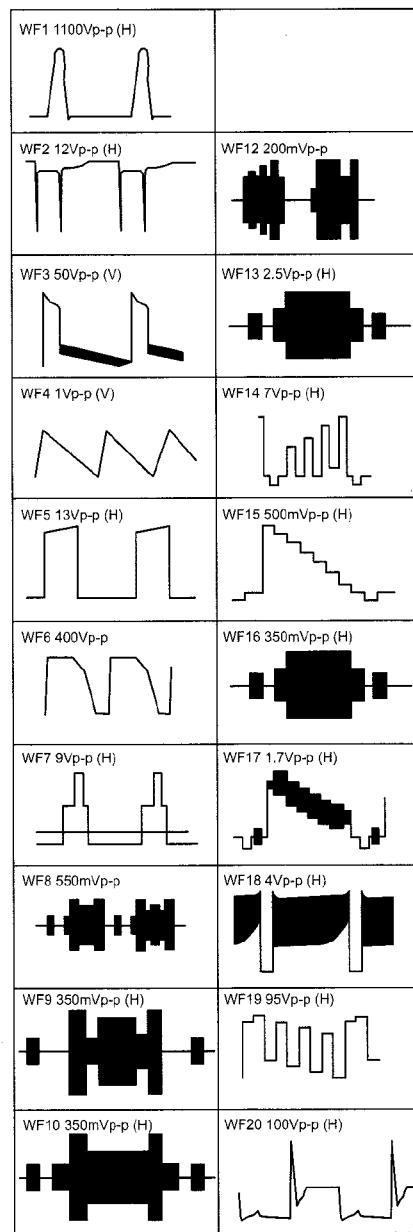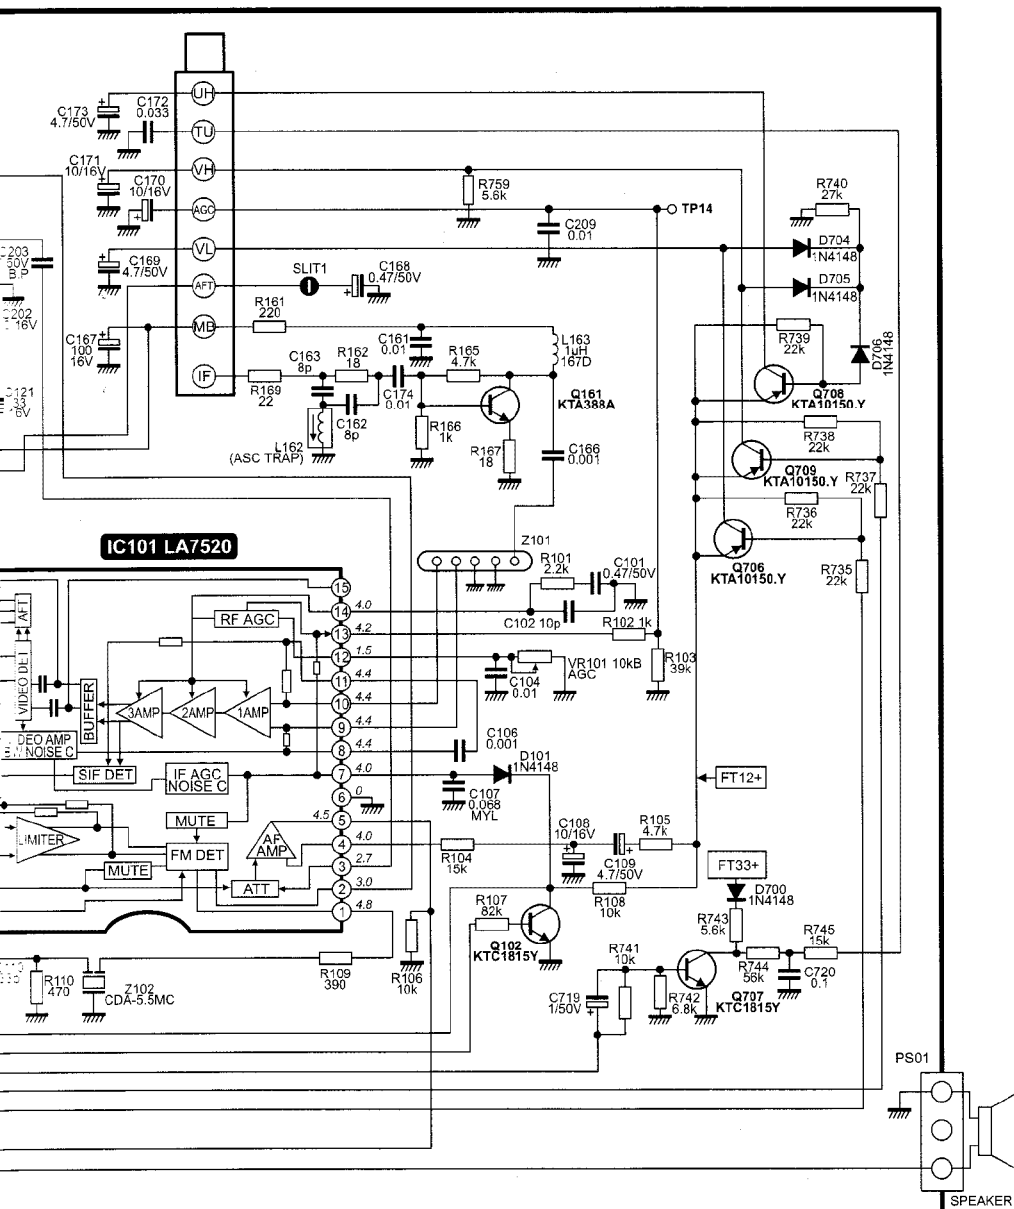

P / N : 484-721F

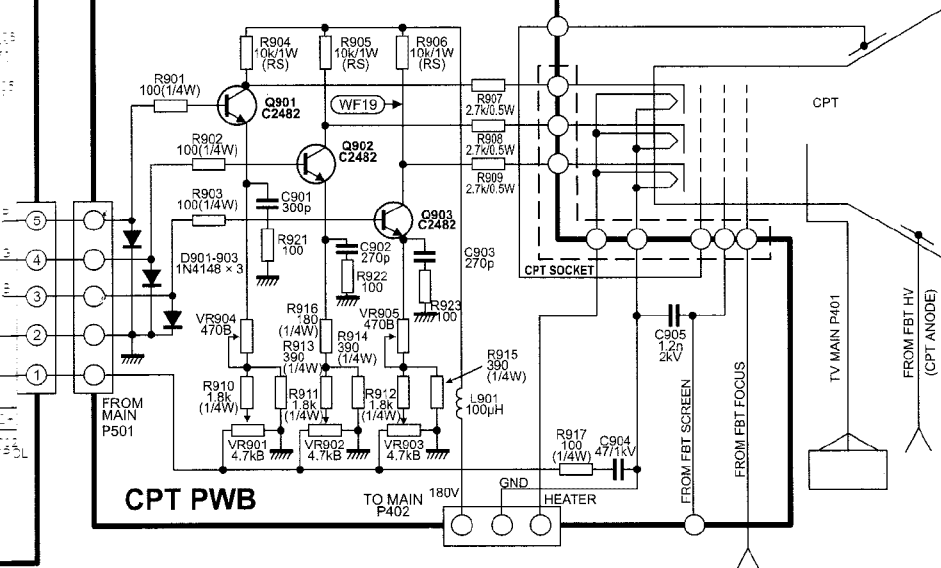

Schemat OTVC GoldStar CKT4822 chassis PC91A