

## SECTION 2


### ADJUSTMENTS

#### 2-1. FUNCTIONAL ALIGNMENT (1)

##### • Procedures of how to go to service mode.

1. Hold “+” and “-” key power on, SDM-M81 goes into service mode.
2. Press “MENU” key-----ODS display.
3. Press “-” key to go to second page’s late icon.
4. Press “OK” key-----service menu display.
5. Select one of features.
6. Press “MENU” key to exit OSD.
7. Power OFF then ON again, monitor go to normal mode.

If you would like to enter service mode again, performing the above procedures cycle.

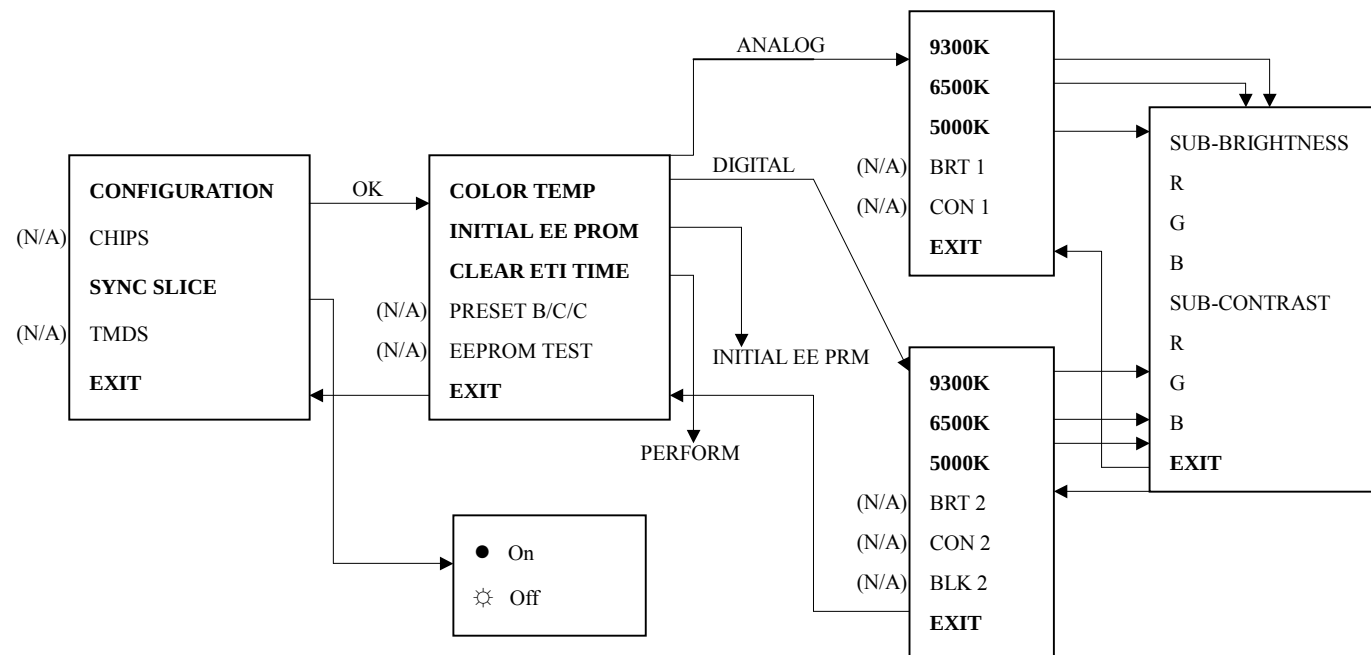


##### Note

1. N/A means “Not applied”.
2. This service menu only provides both Configuration & Sync slice functions.  
This other were used for design engineering. There is no guarantee of using those N/A functions.


**SDM-M51D(E)**

### 3-2 BLOCK DIAGRAM

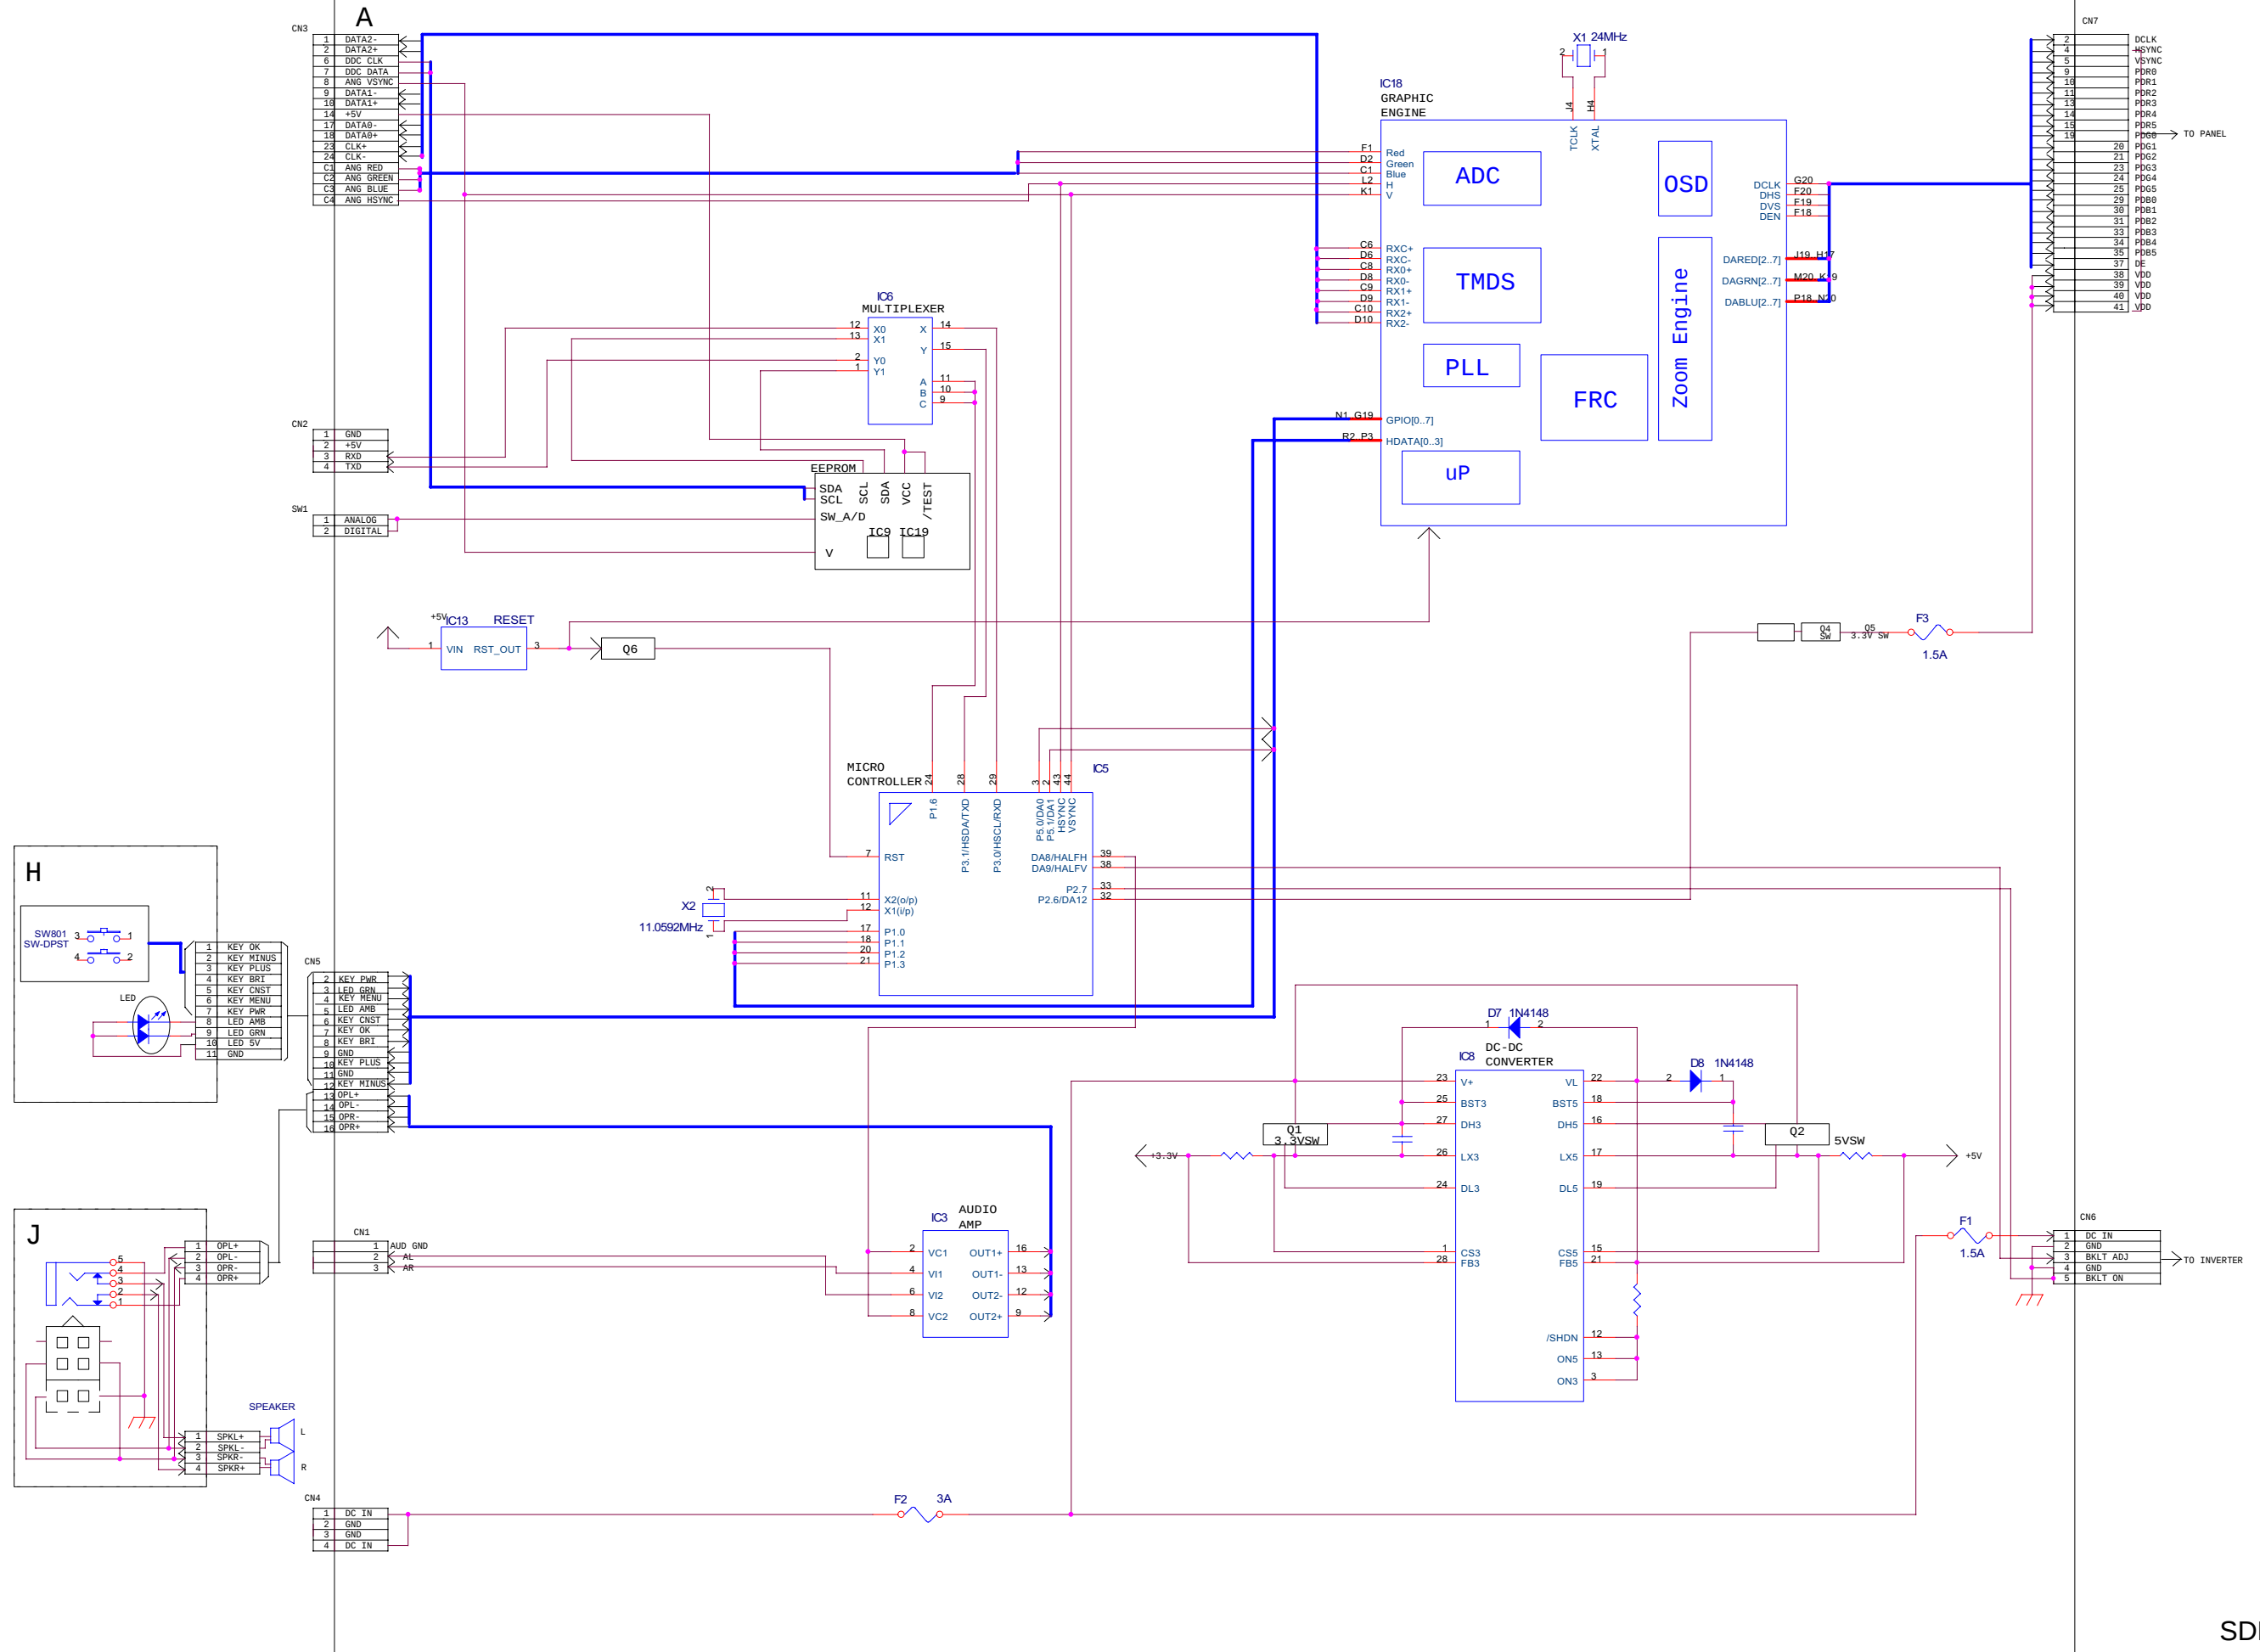


SDM-M51D(E)


A-a

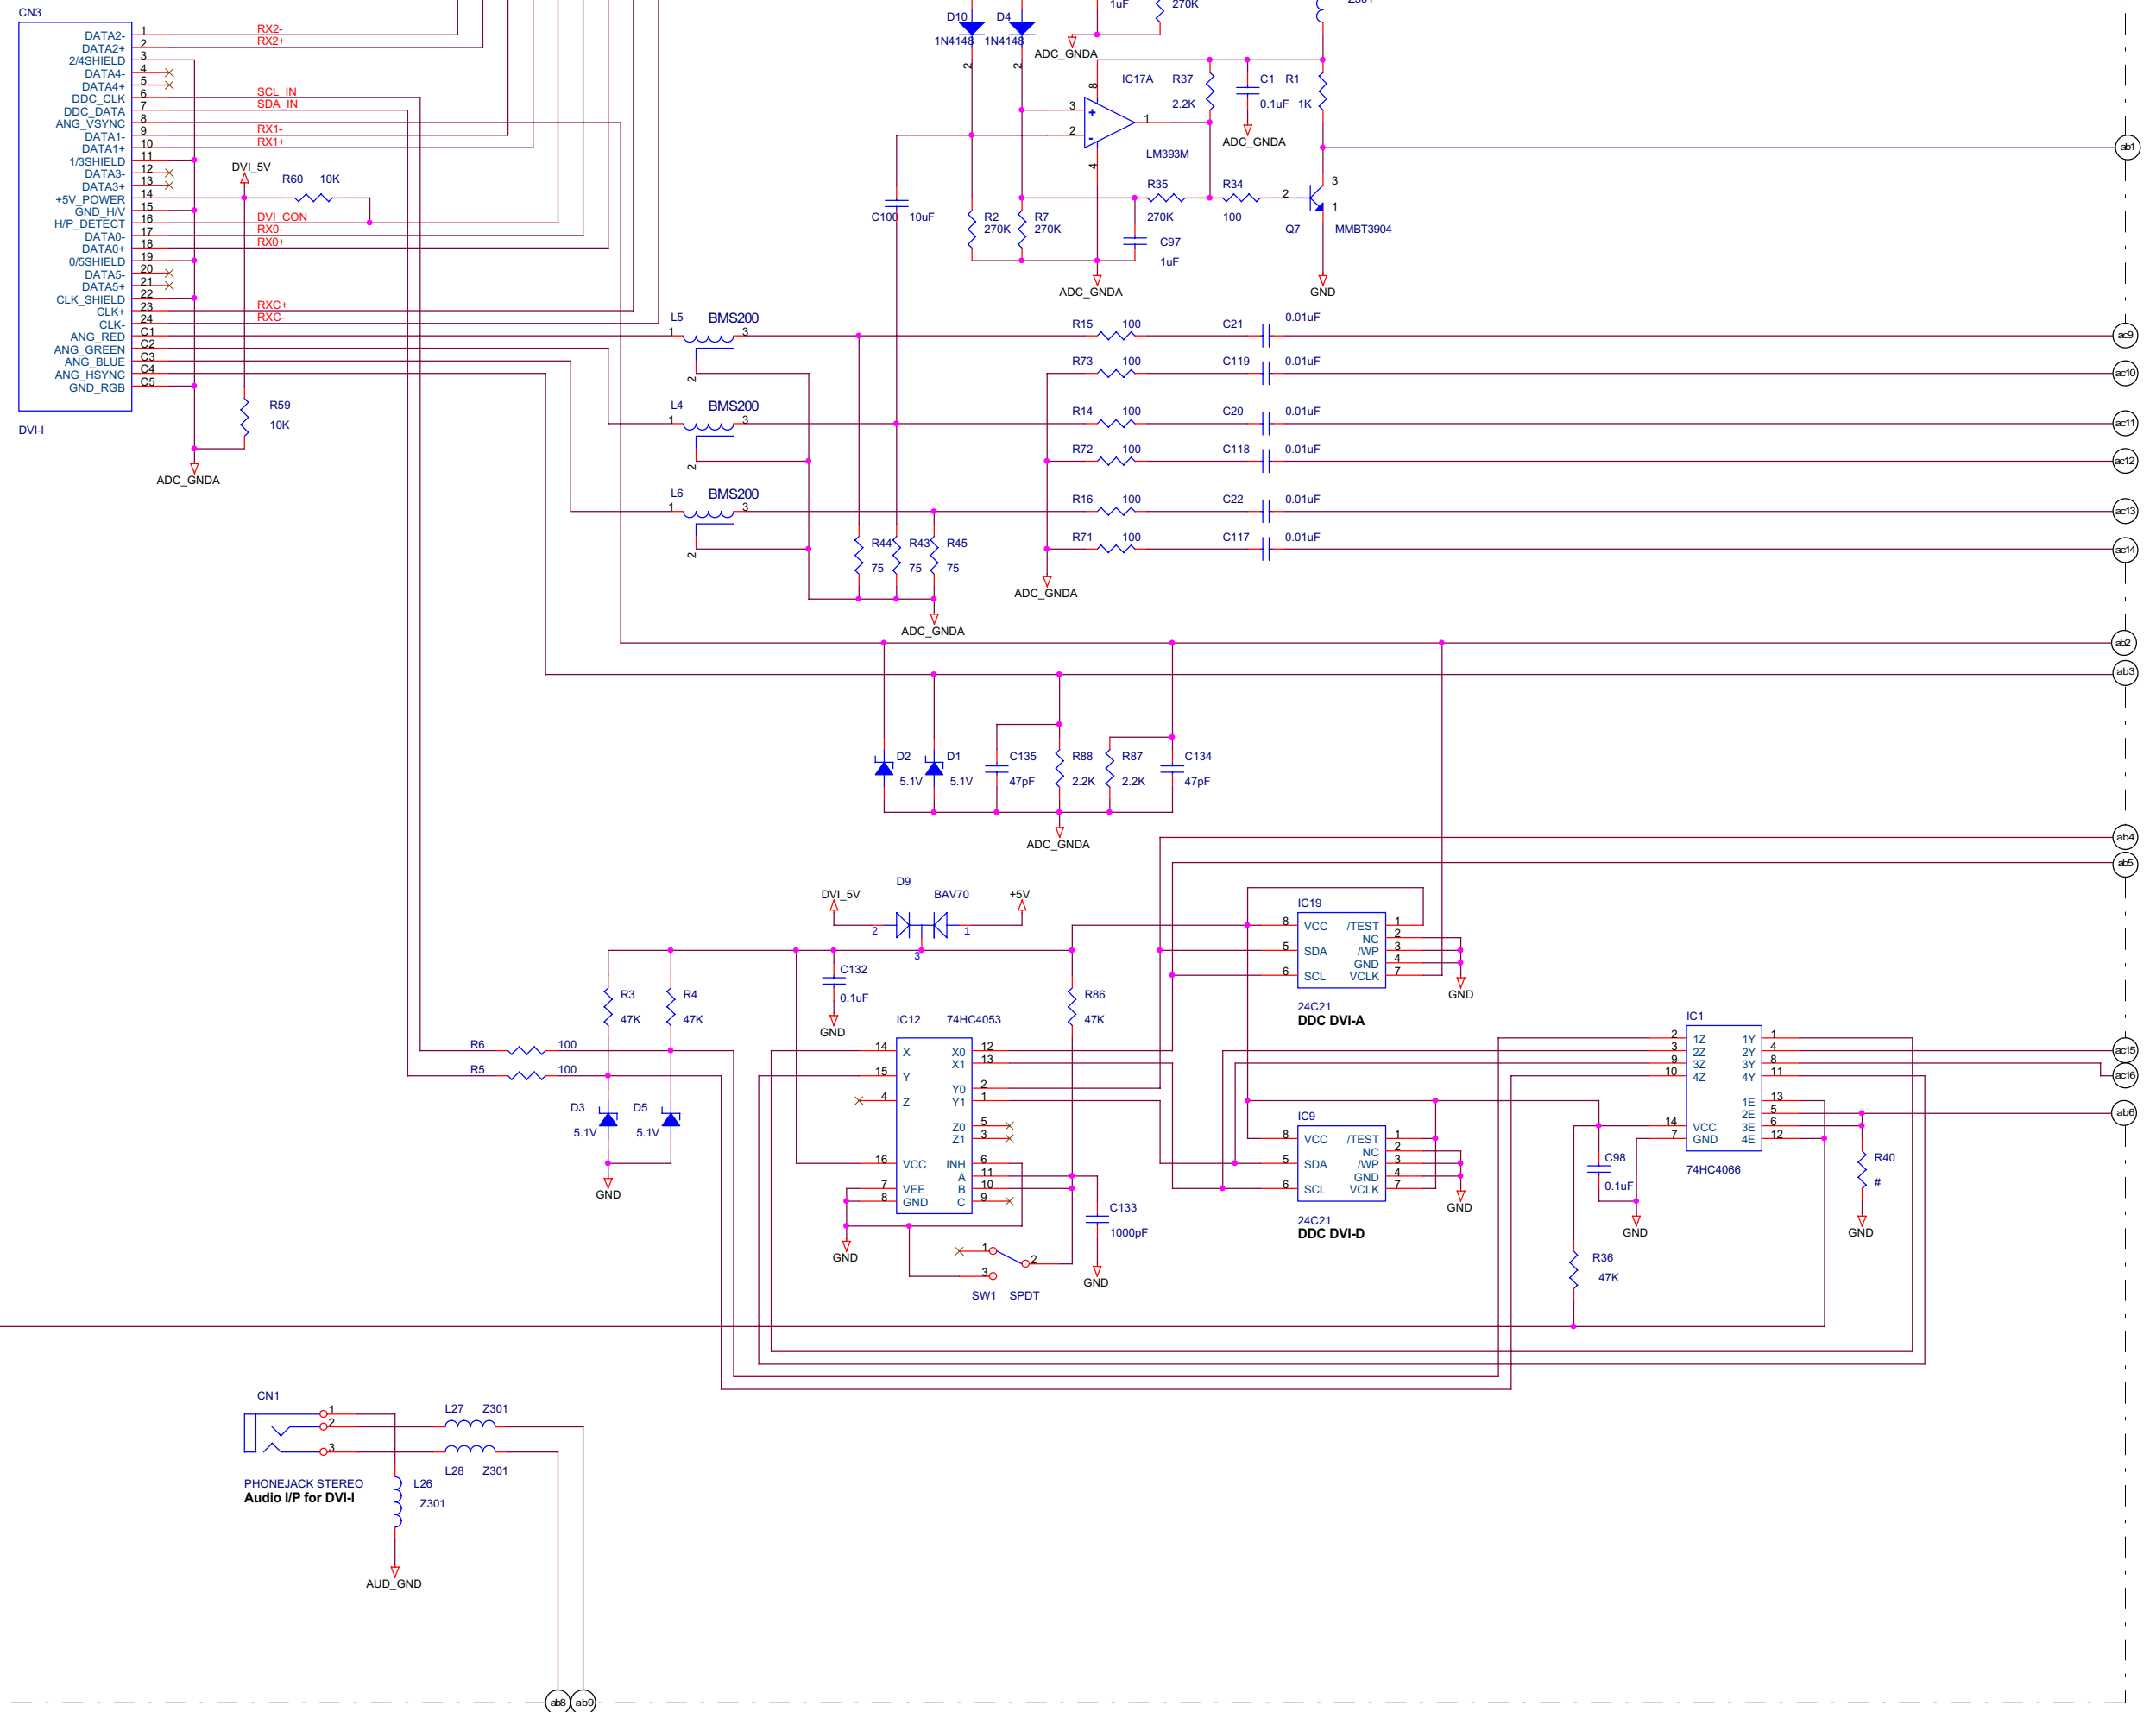


A-b

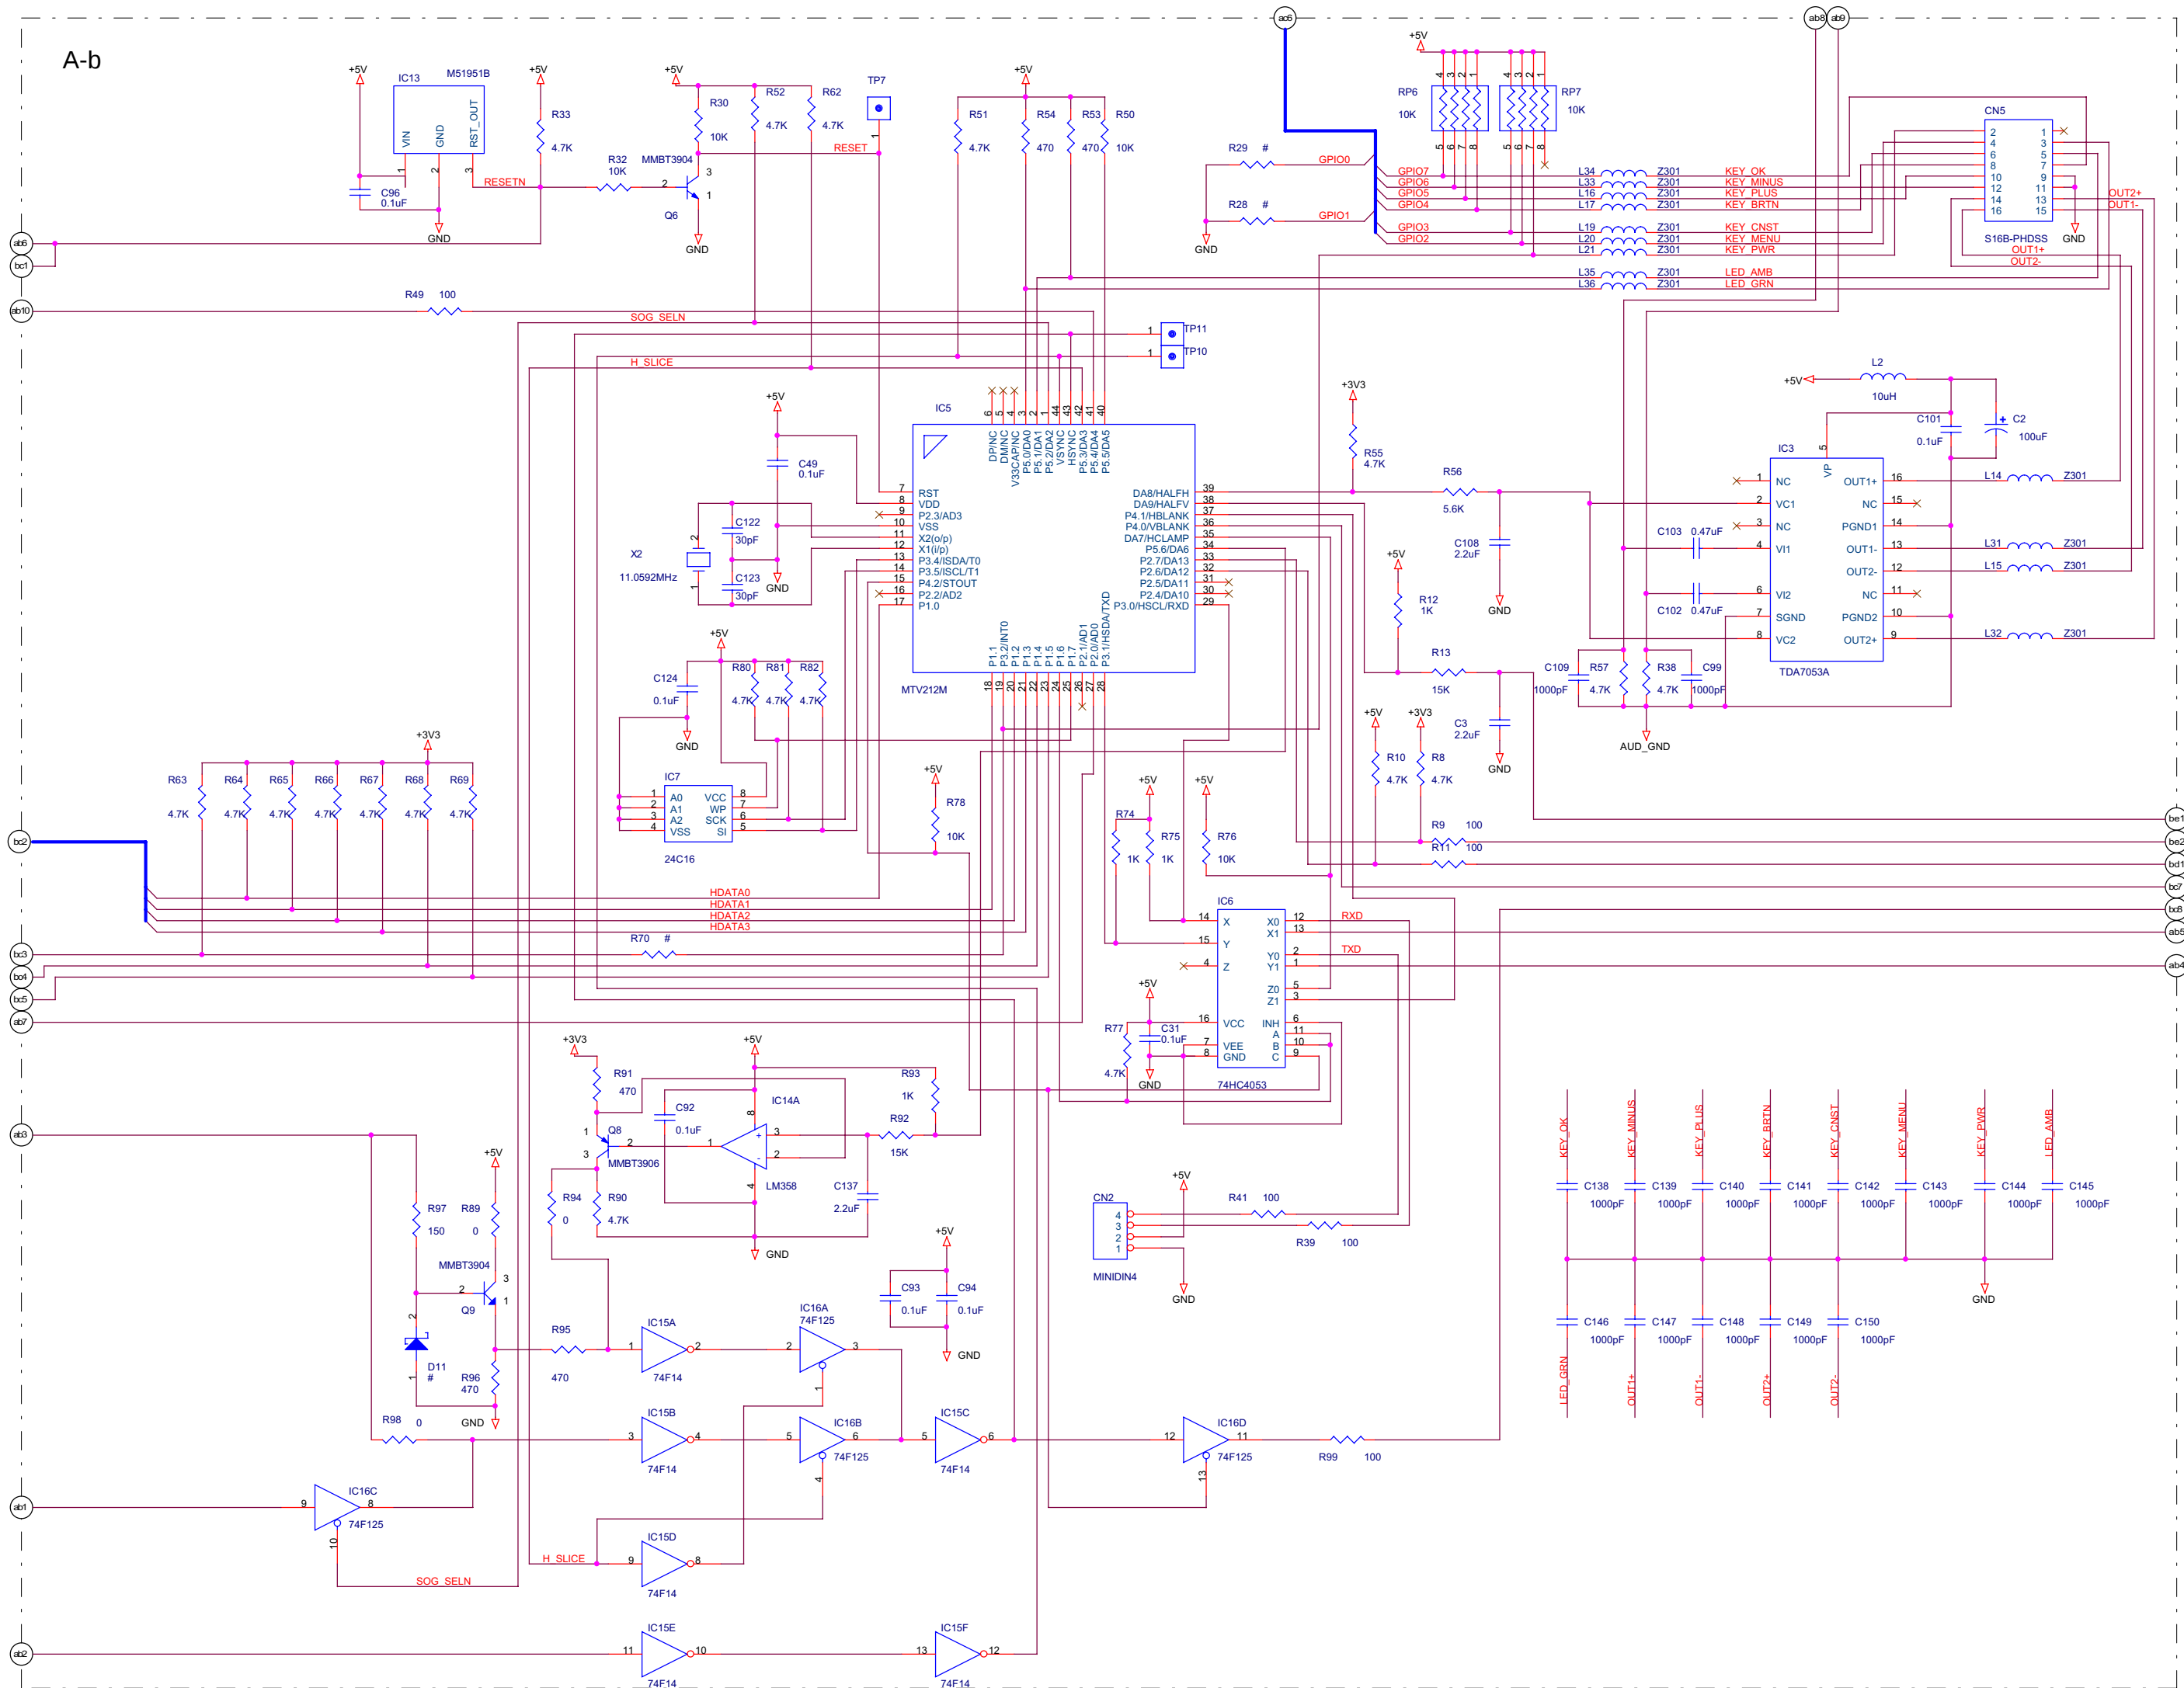


A-C

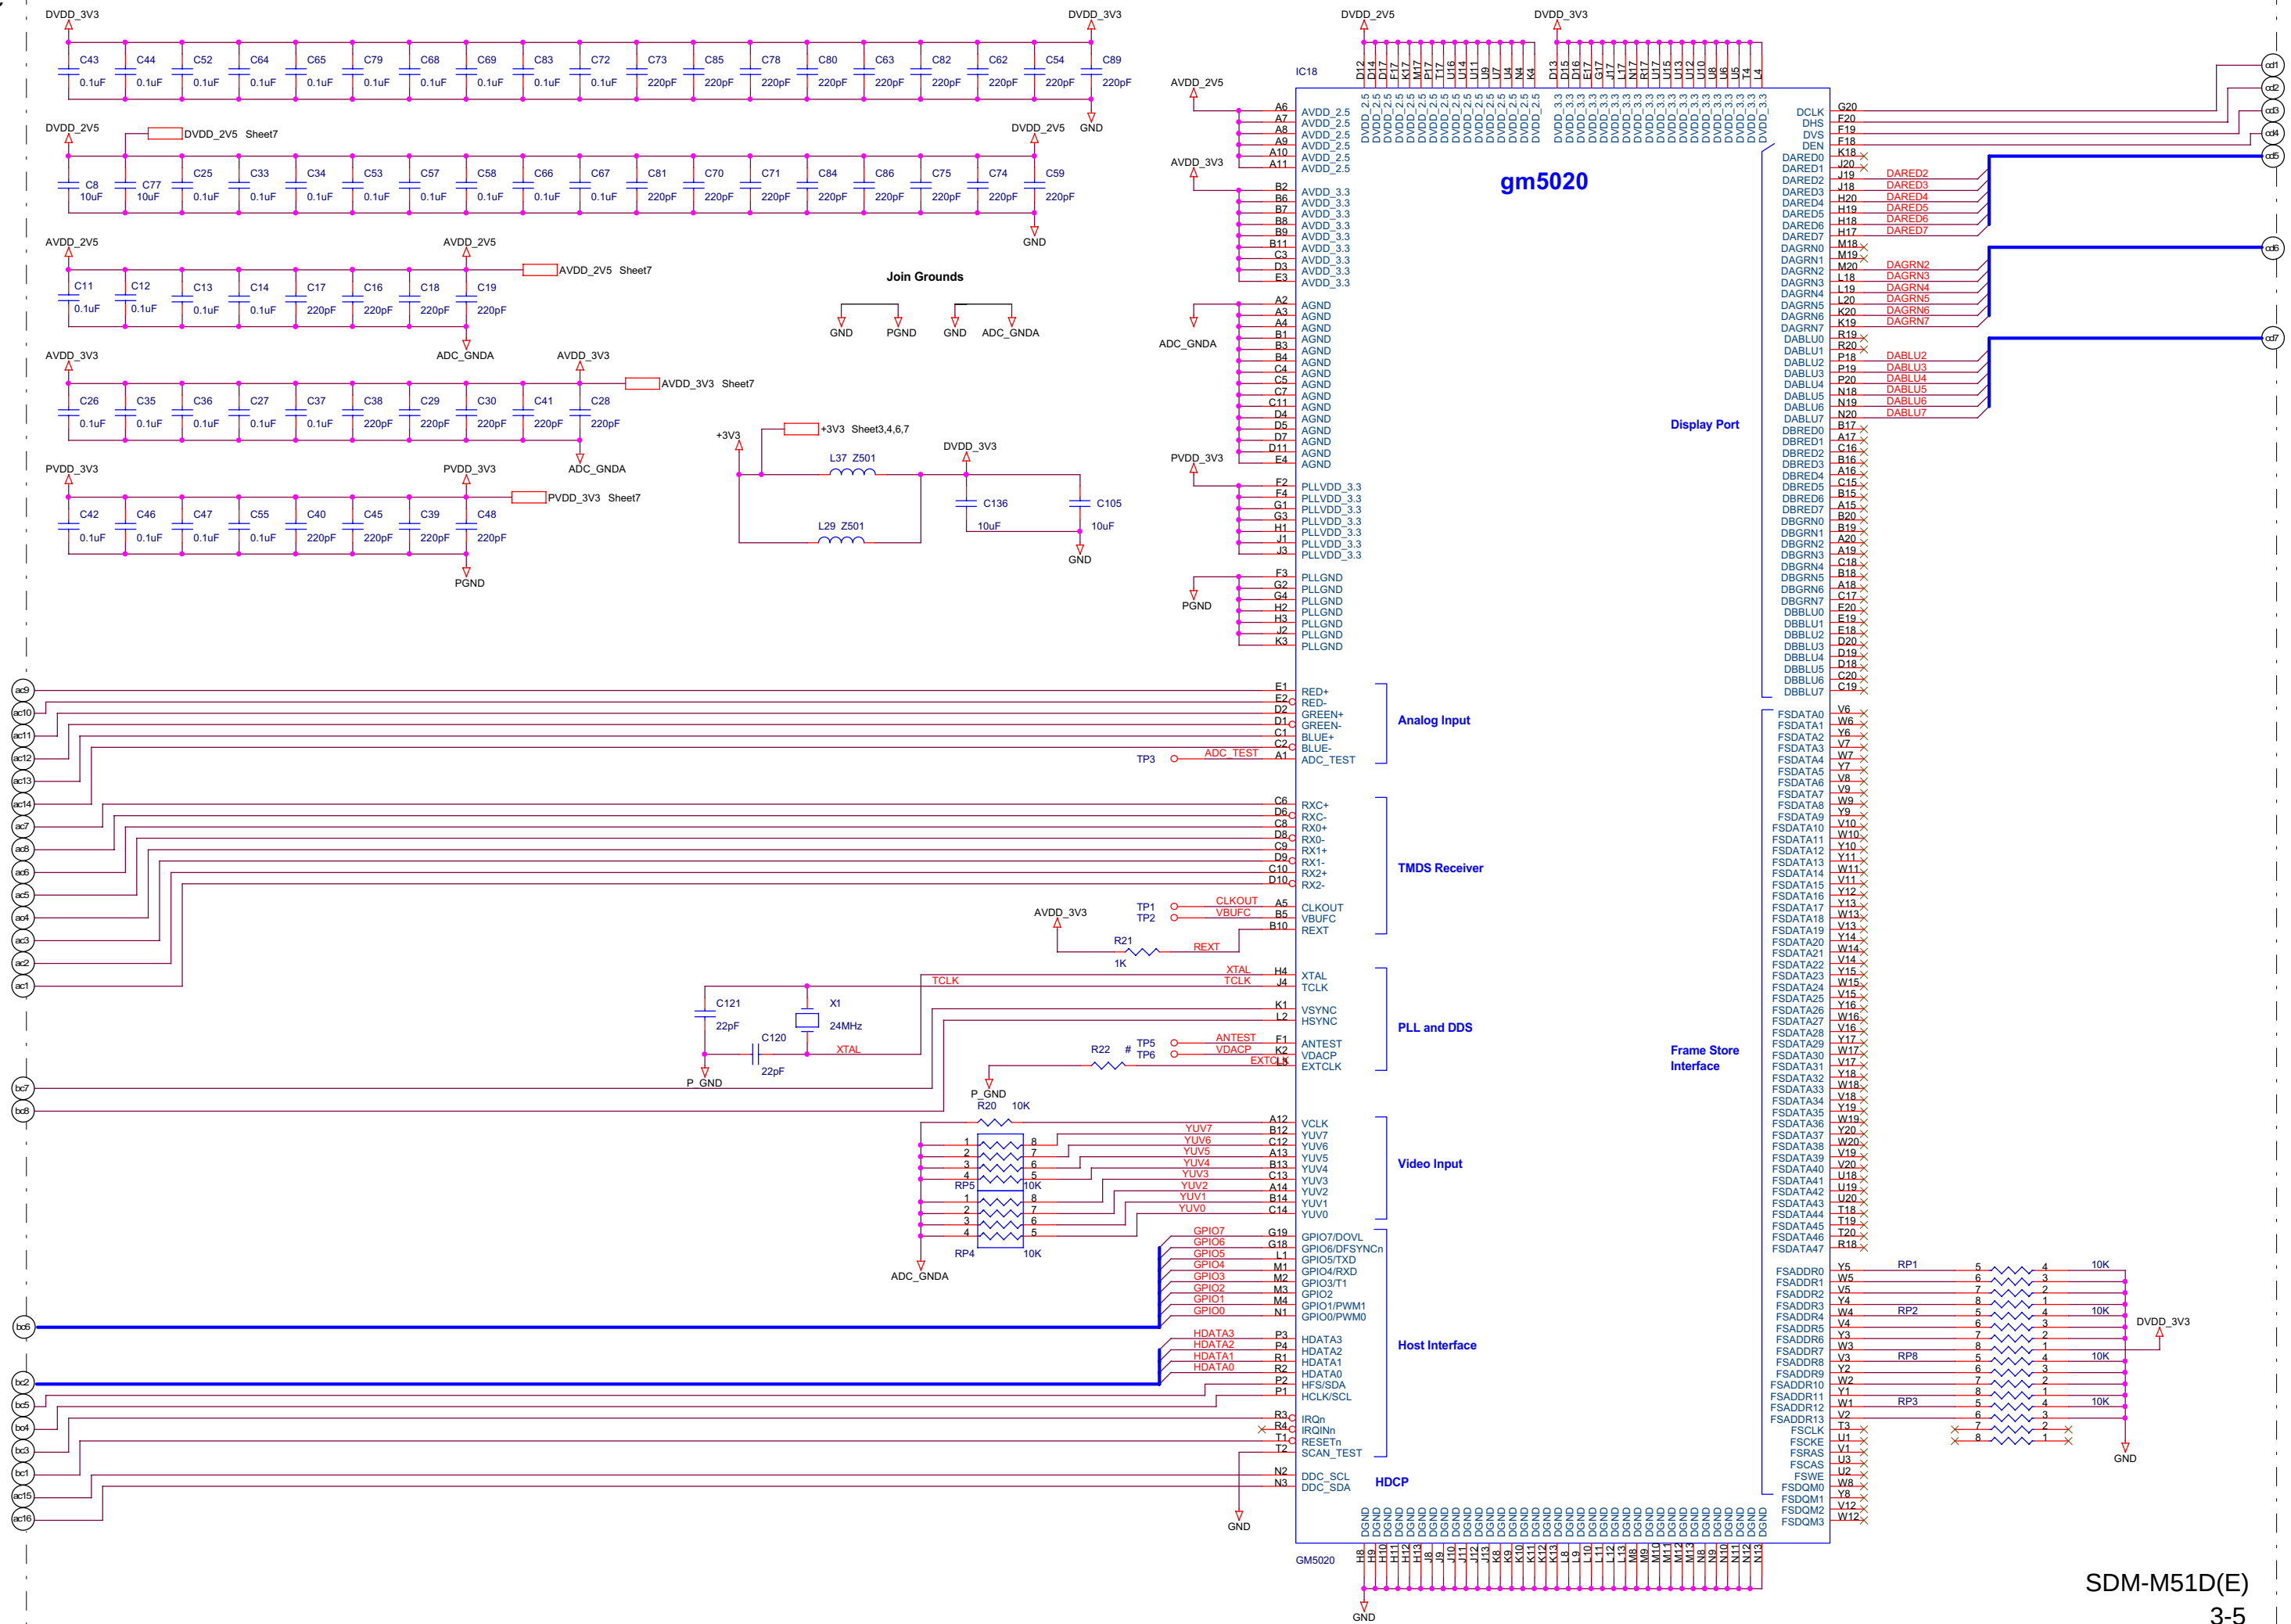


SDM-M51D(E)

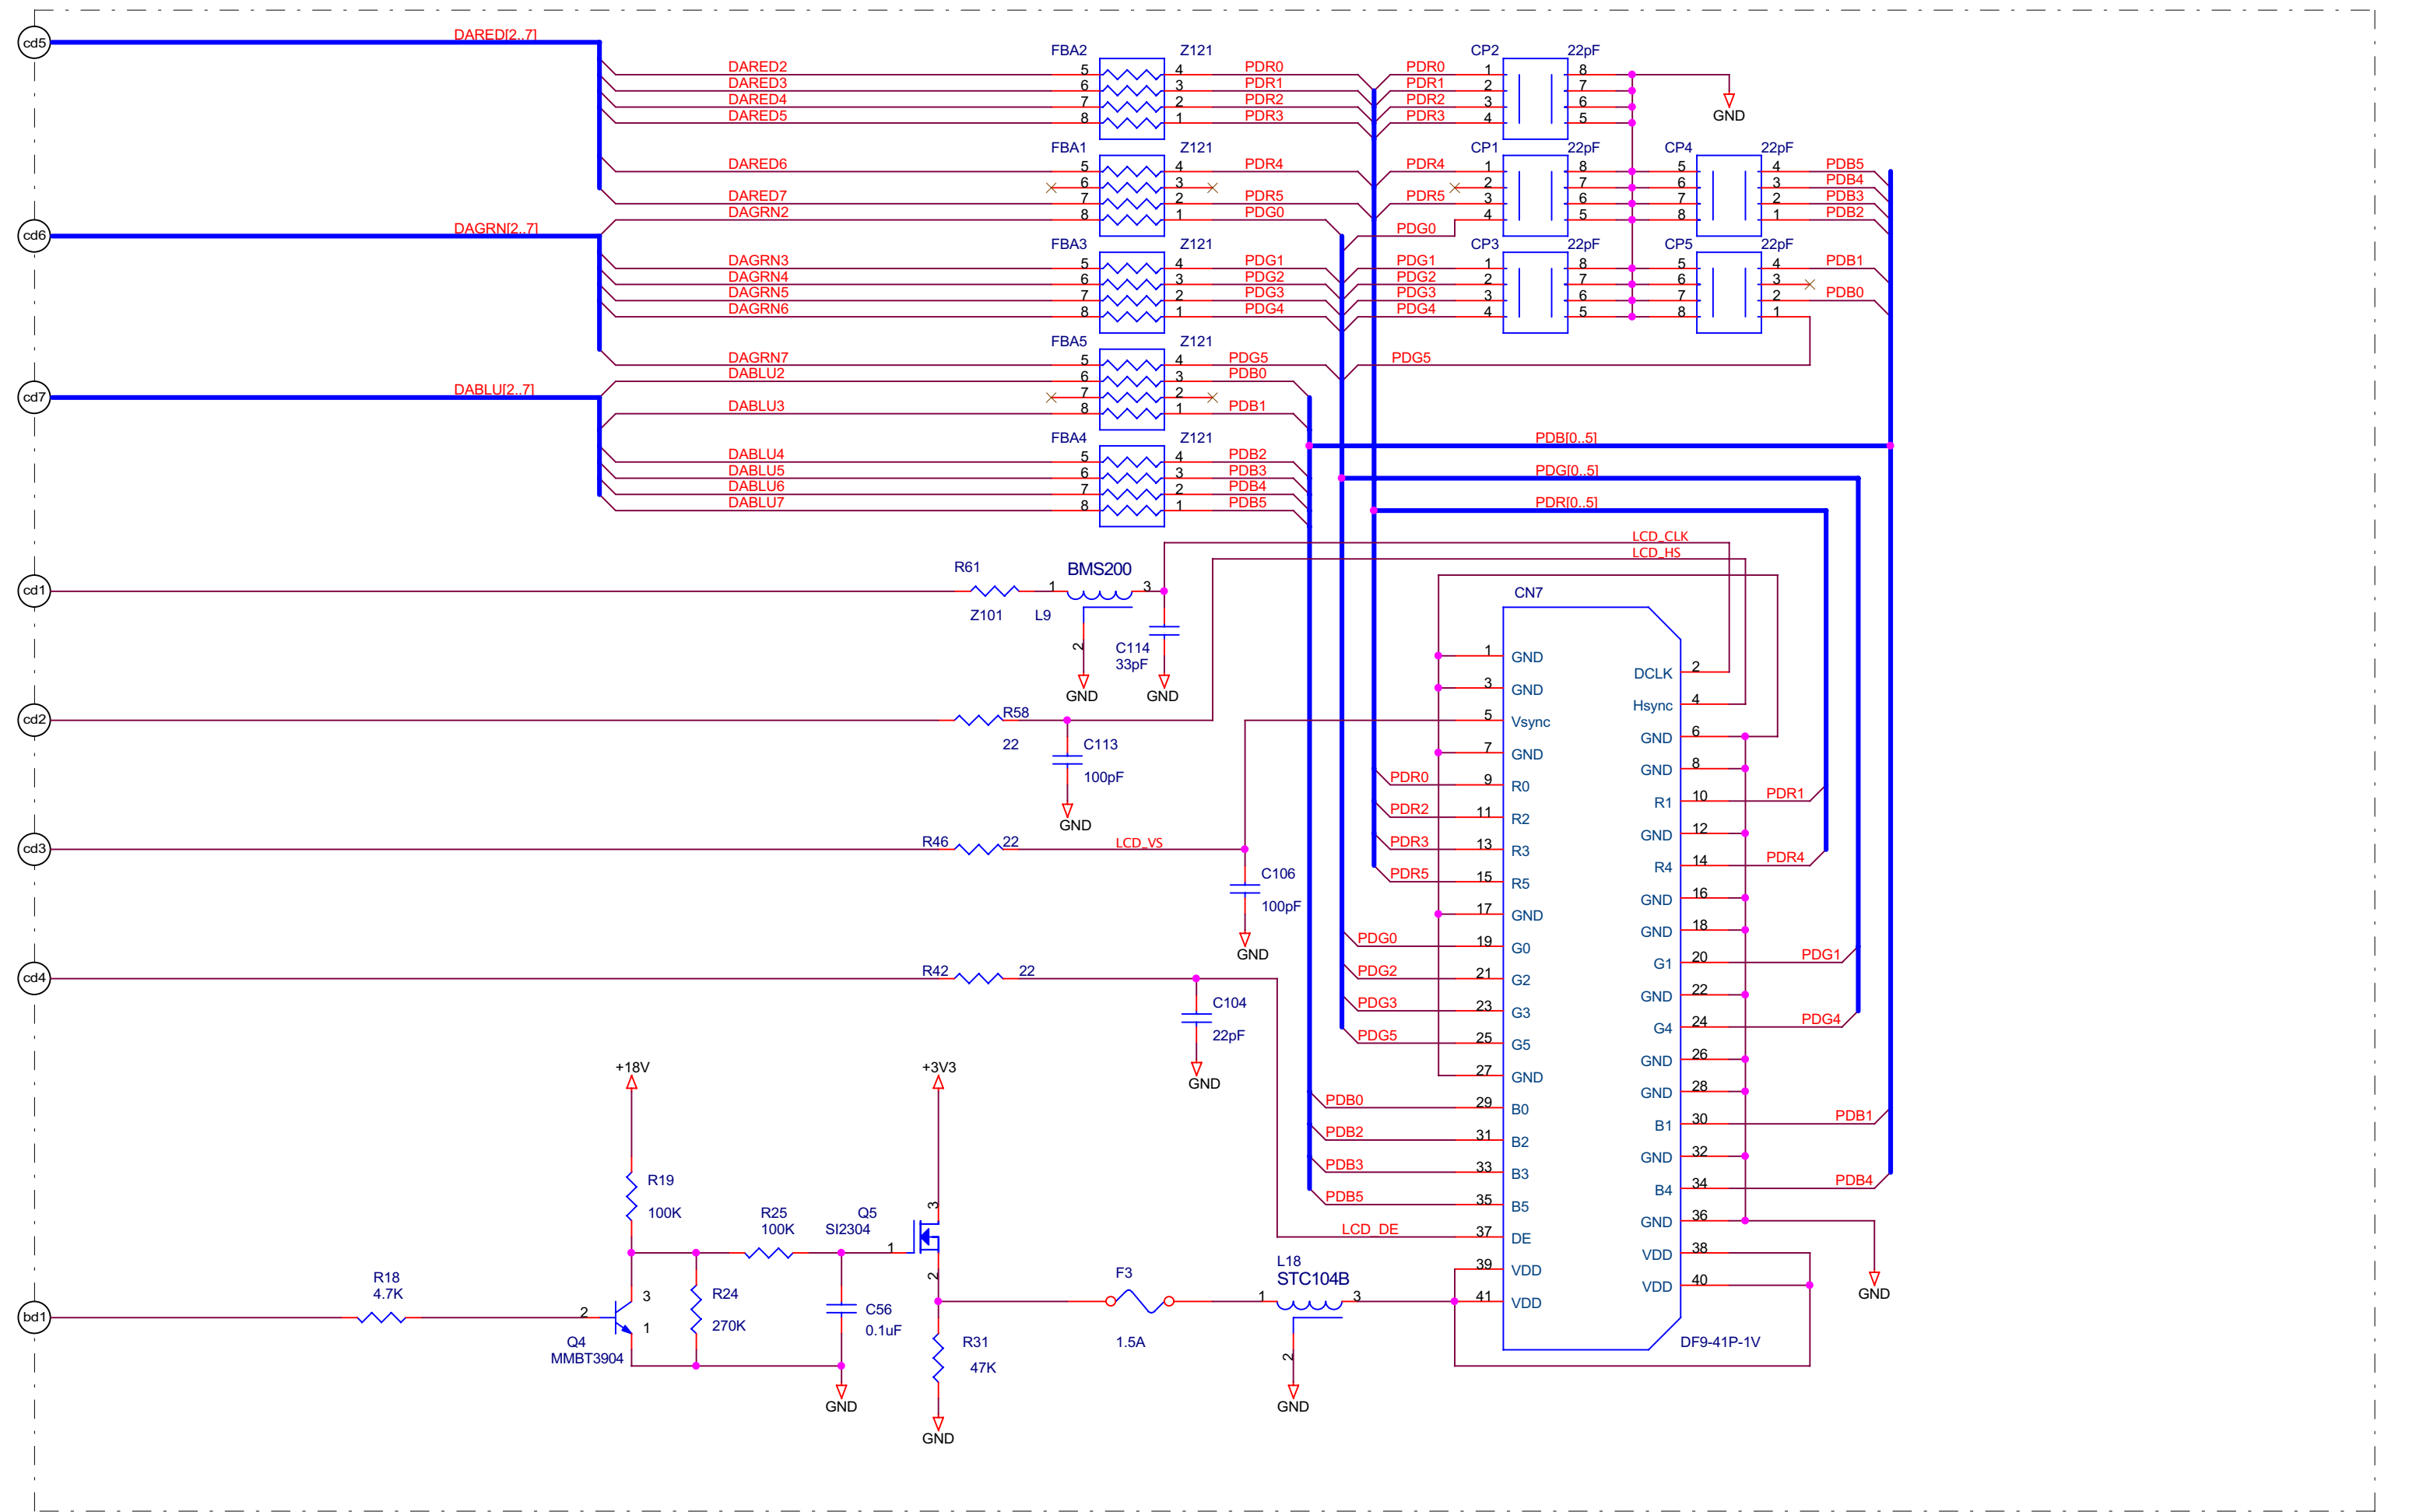

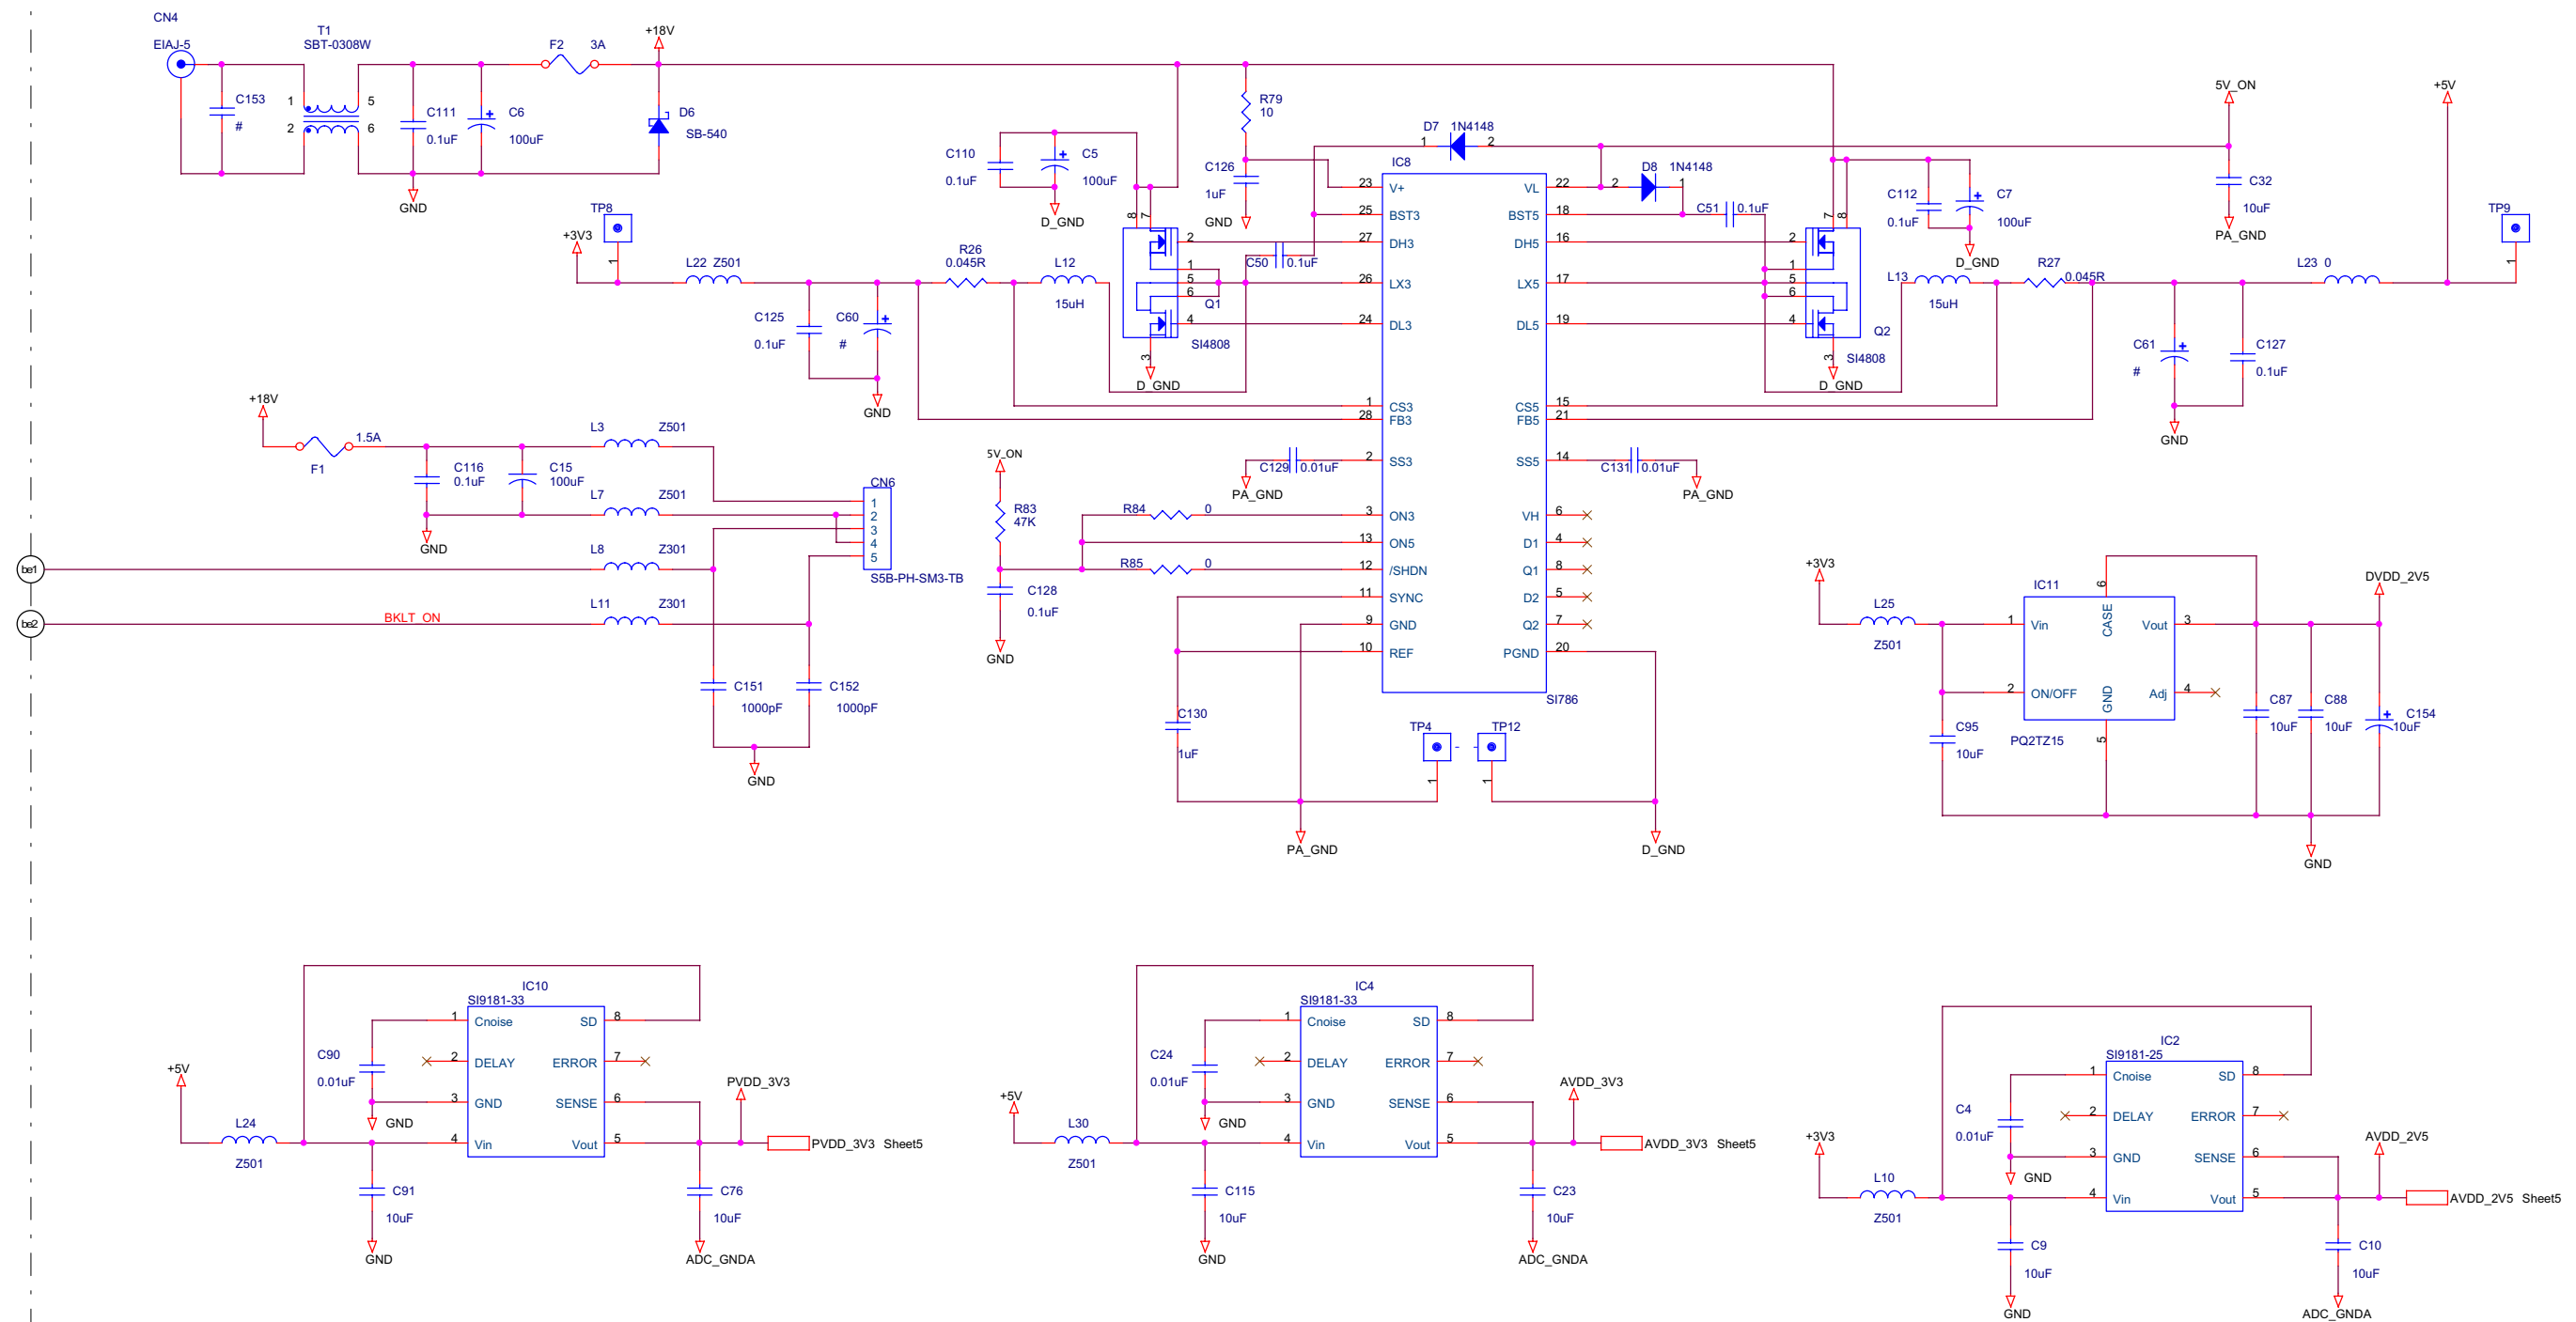

-- Schematic Diagram of H Board --

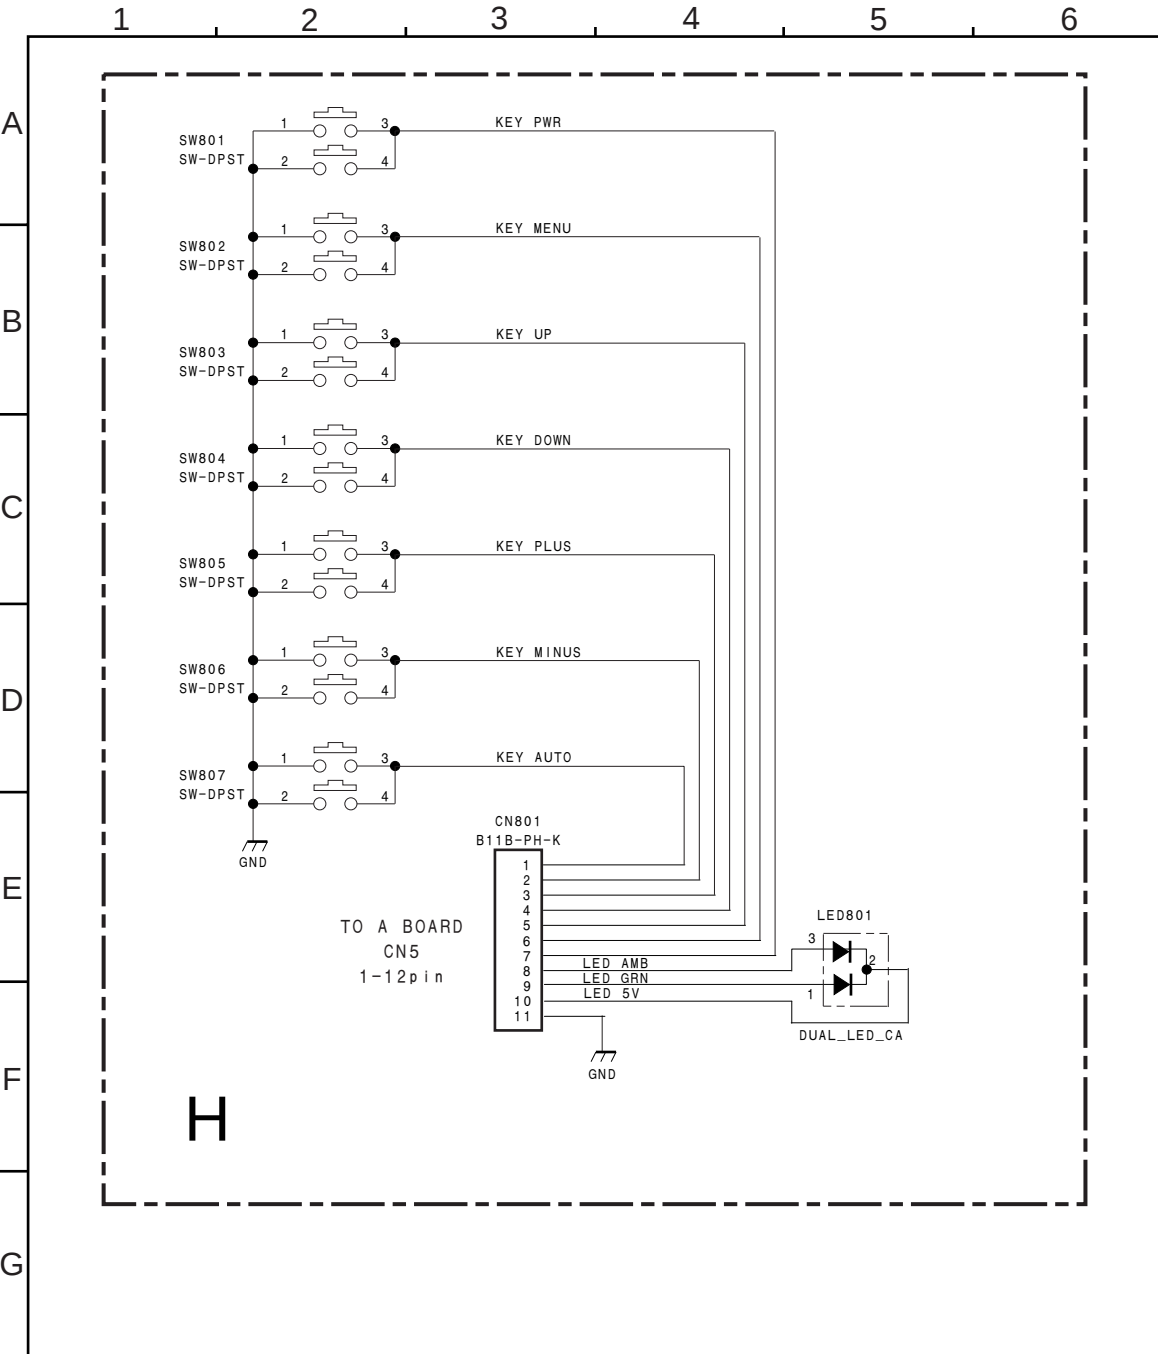

-- Schematic Diagram of J Board --

