


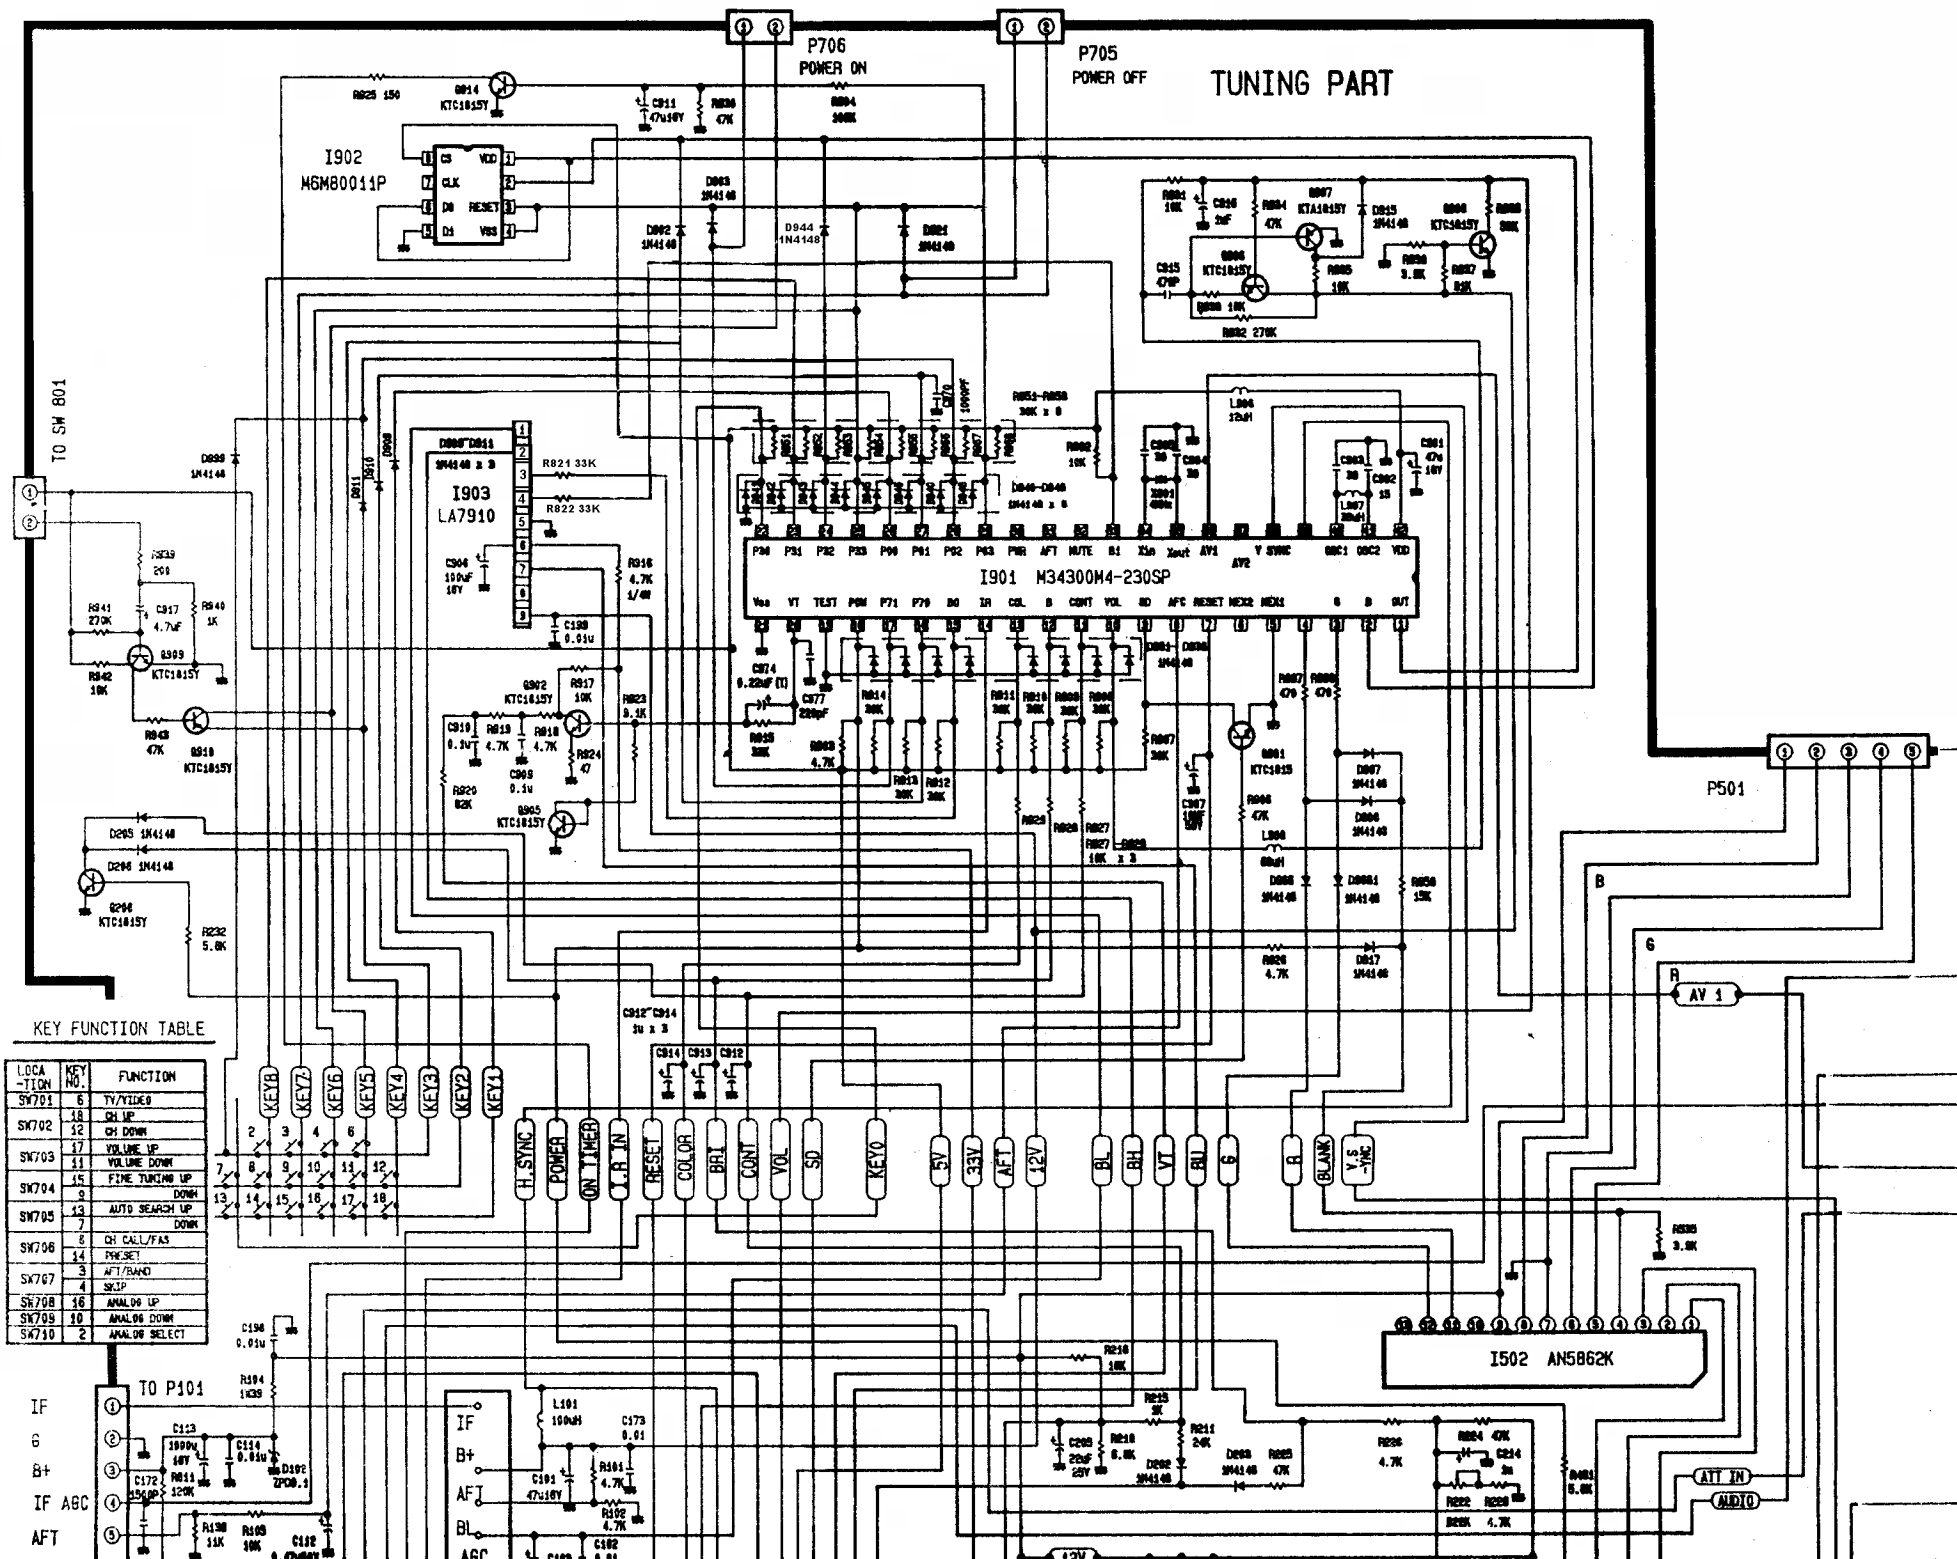

KEY FUNCTION TABLE

LOCAL- TION	KEY NO.	FUNCTION
SW701	6	TV/VIDEO
SW702	18	CH UP
	12	CH DOWN
SW703	17	VOLUME UP
	11	VOLUME DOWN
SW704	15	FINE TUNING UP
	9	FINE TUNING DOWN
SW705	13	AUTO SEARCH UP
	7	AUTO SEARCH DOWN
SW706	8	CH CAL/FAS
	14	PRESET
SW707	3	MT/STAND
	4	SCIP
SW708	16	ANALOG UP
SW709	10	ANALOG DOWN
SW710	2	ANALOG SELECT

IF
G
B+
IF AGC
AFT


P501


AV 1

I502 AN5862K


ATT IN

AUDIO

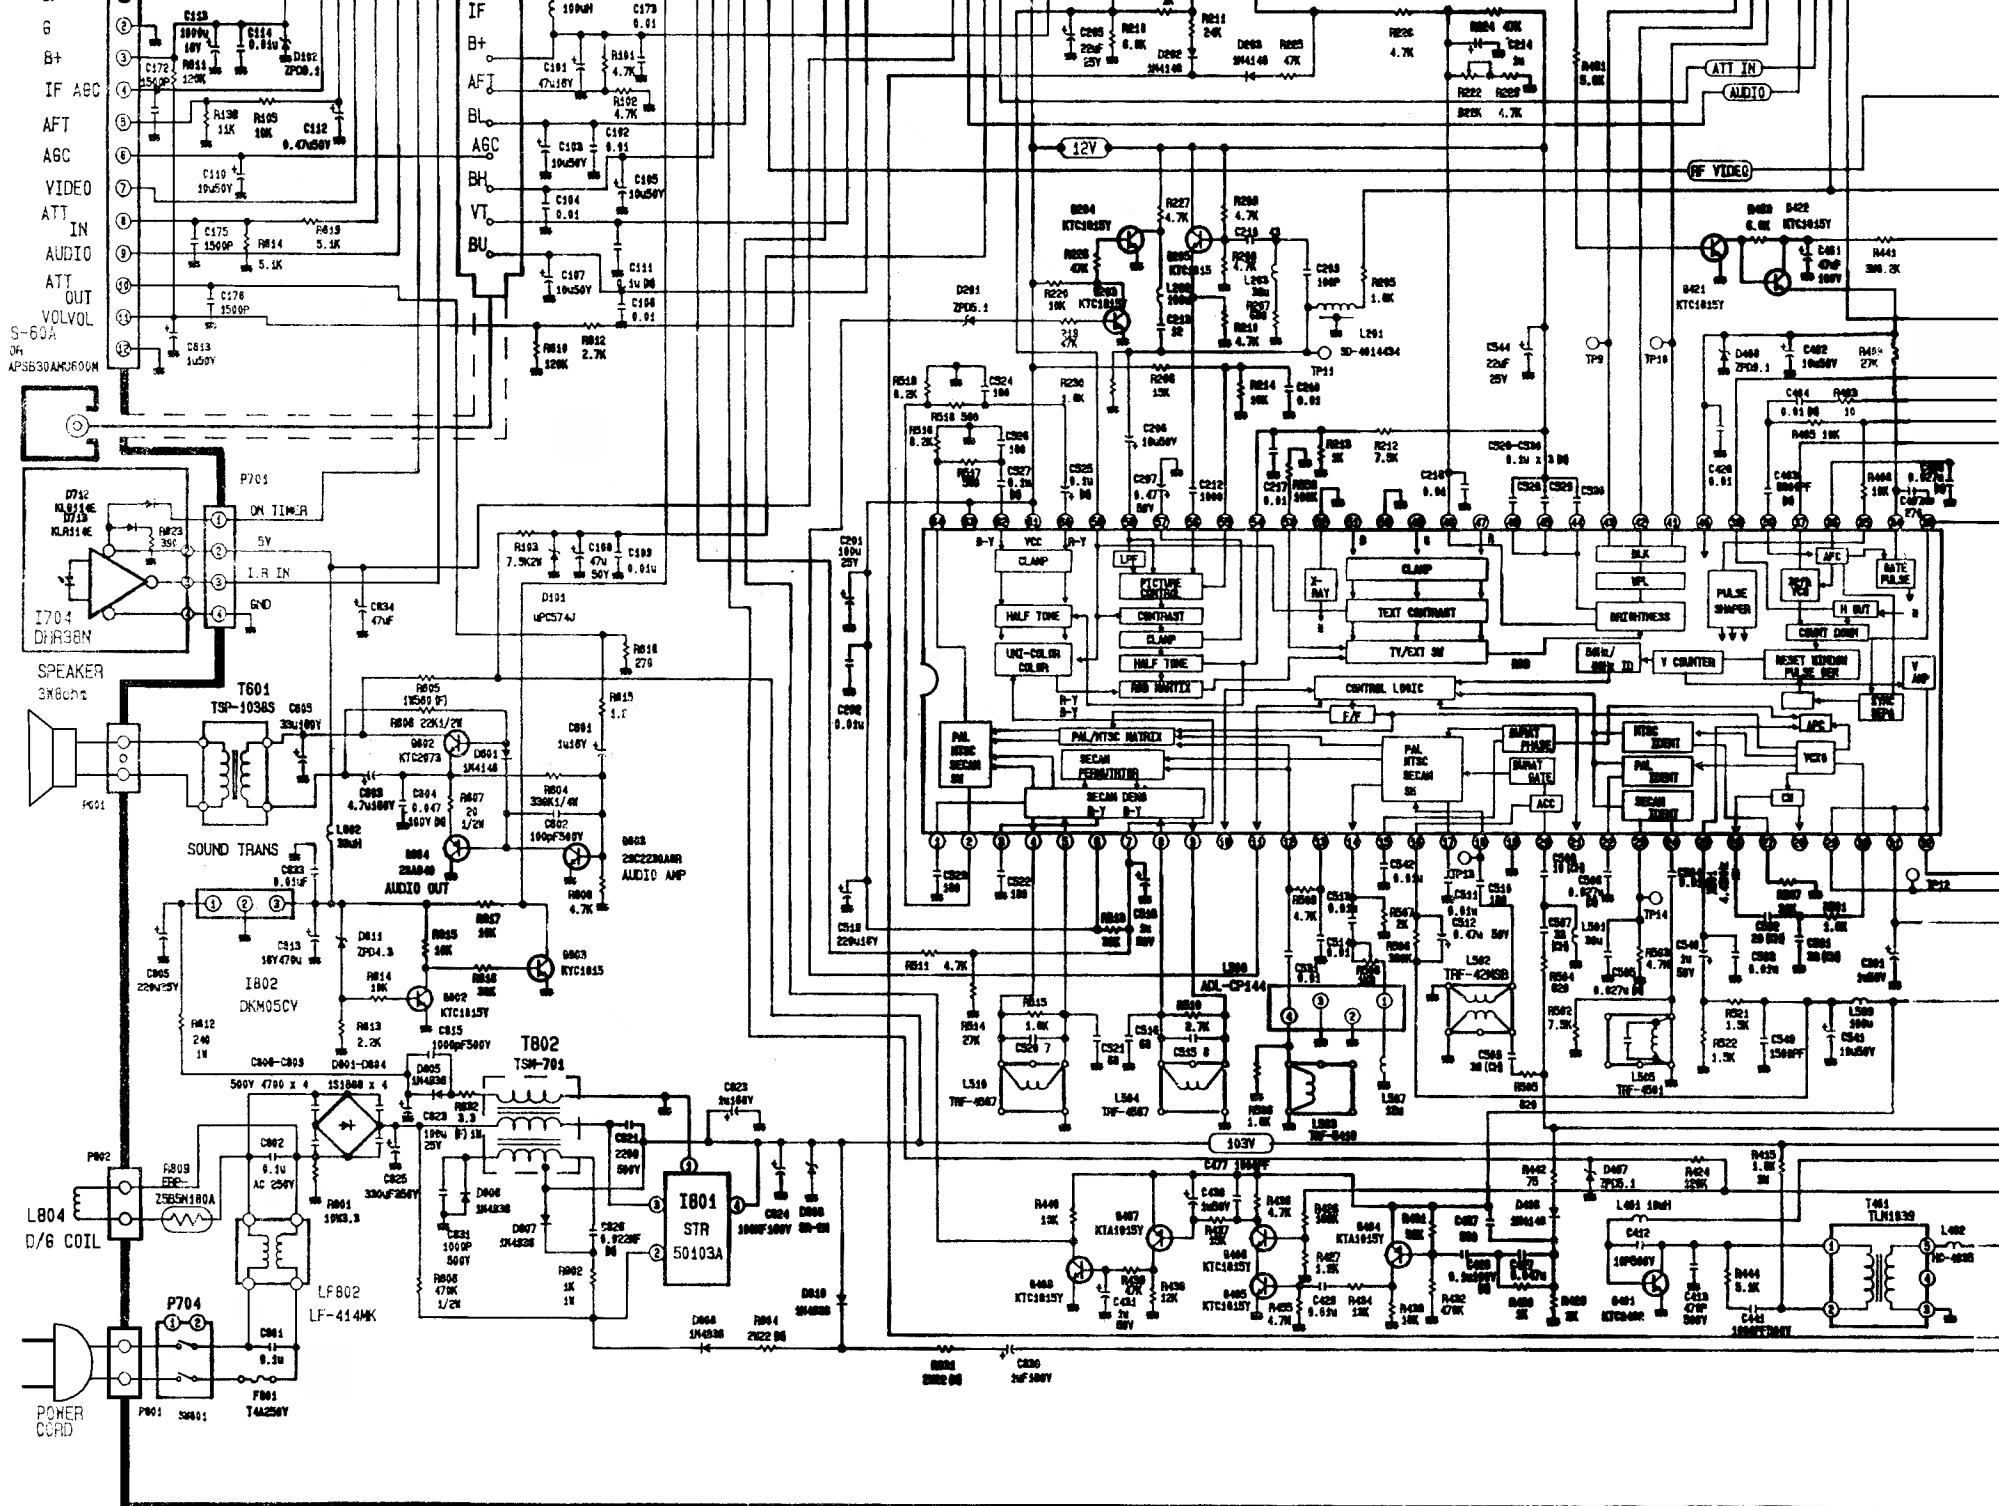

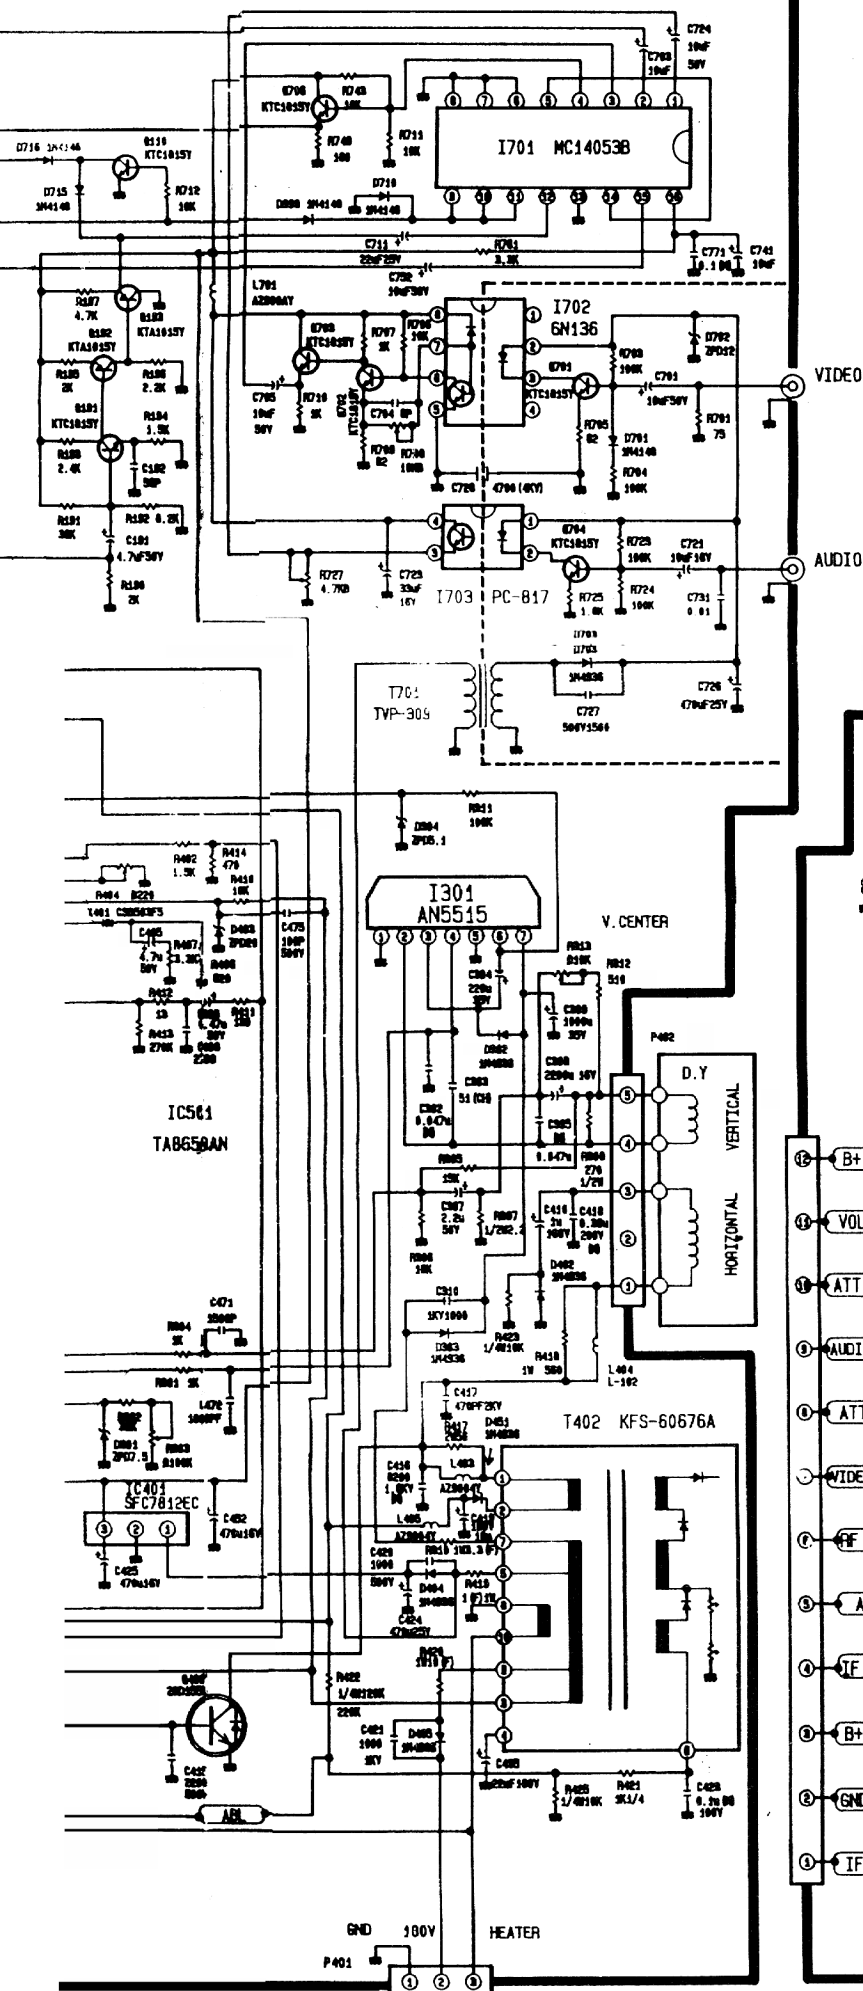

LOCATION	PART NAME	14"	16"	20"	21"
	CRT	A34JLL92X	A38JLL90X	A48JLL90X	A48JLL90X
T402	FBT	DCF-1577A	DCF-1577A	DCF-2077A	KFS-60676
C416	C MYLAR	1.6KV 6200pF	1.6KV 6900pF	1.6KV 8200pF	1.6KV 8200pF
C417	C CERA				2KV 470pF
C418	C MYLAR	200V 0.36uF	200V 0.36uF	200V 0.51uF	200V 0.36uF
L404	COIL	L-125	L-125	L-102	L-102
R422	R CARBON	1/4W 220K	1/4W 220K	1/4W 120K	1/4W 120K
R542	R METAL	1W 3.6ohm	1W 3.6ohm	1W 4.7ohm	1W 6.2ohm
R615	R CARBON	1/6W 1.6K	1/6W 1.6K	1/6W 1.6K	1/6W 1.2K
Q402	H TR	2SD1554	2SD1555	2SD1555	2SD1555

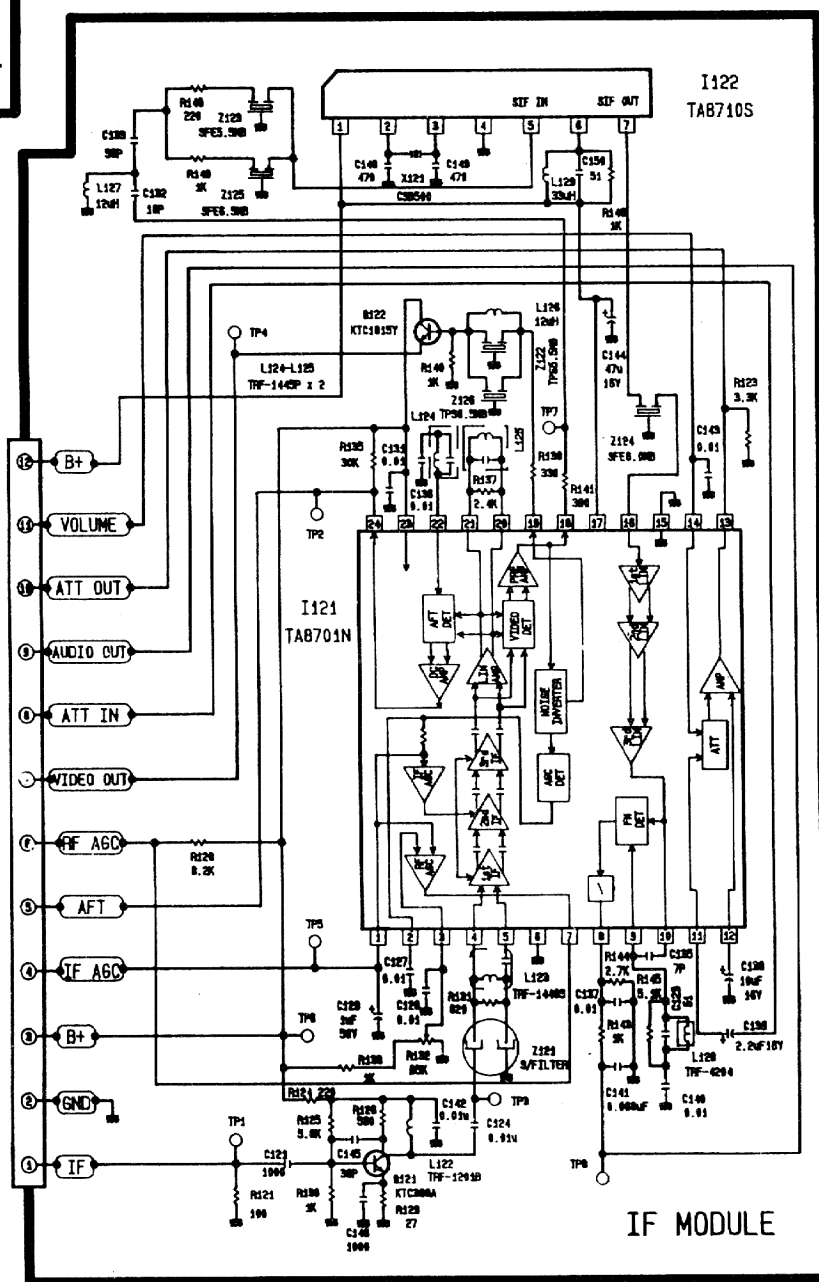

CRT BOARD

