


# Service Manual

Colour Television EURO 2 Chassis

## TX-28LD1

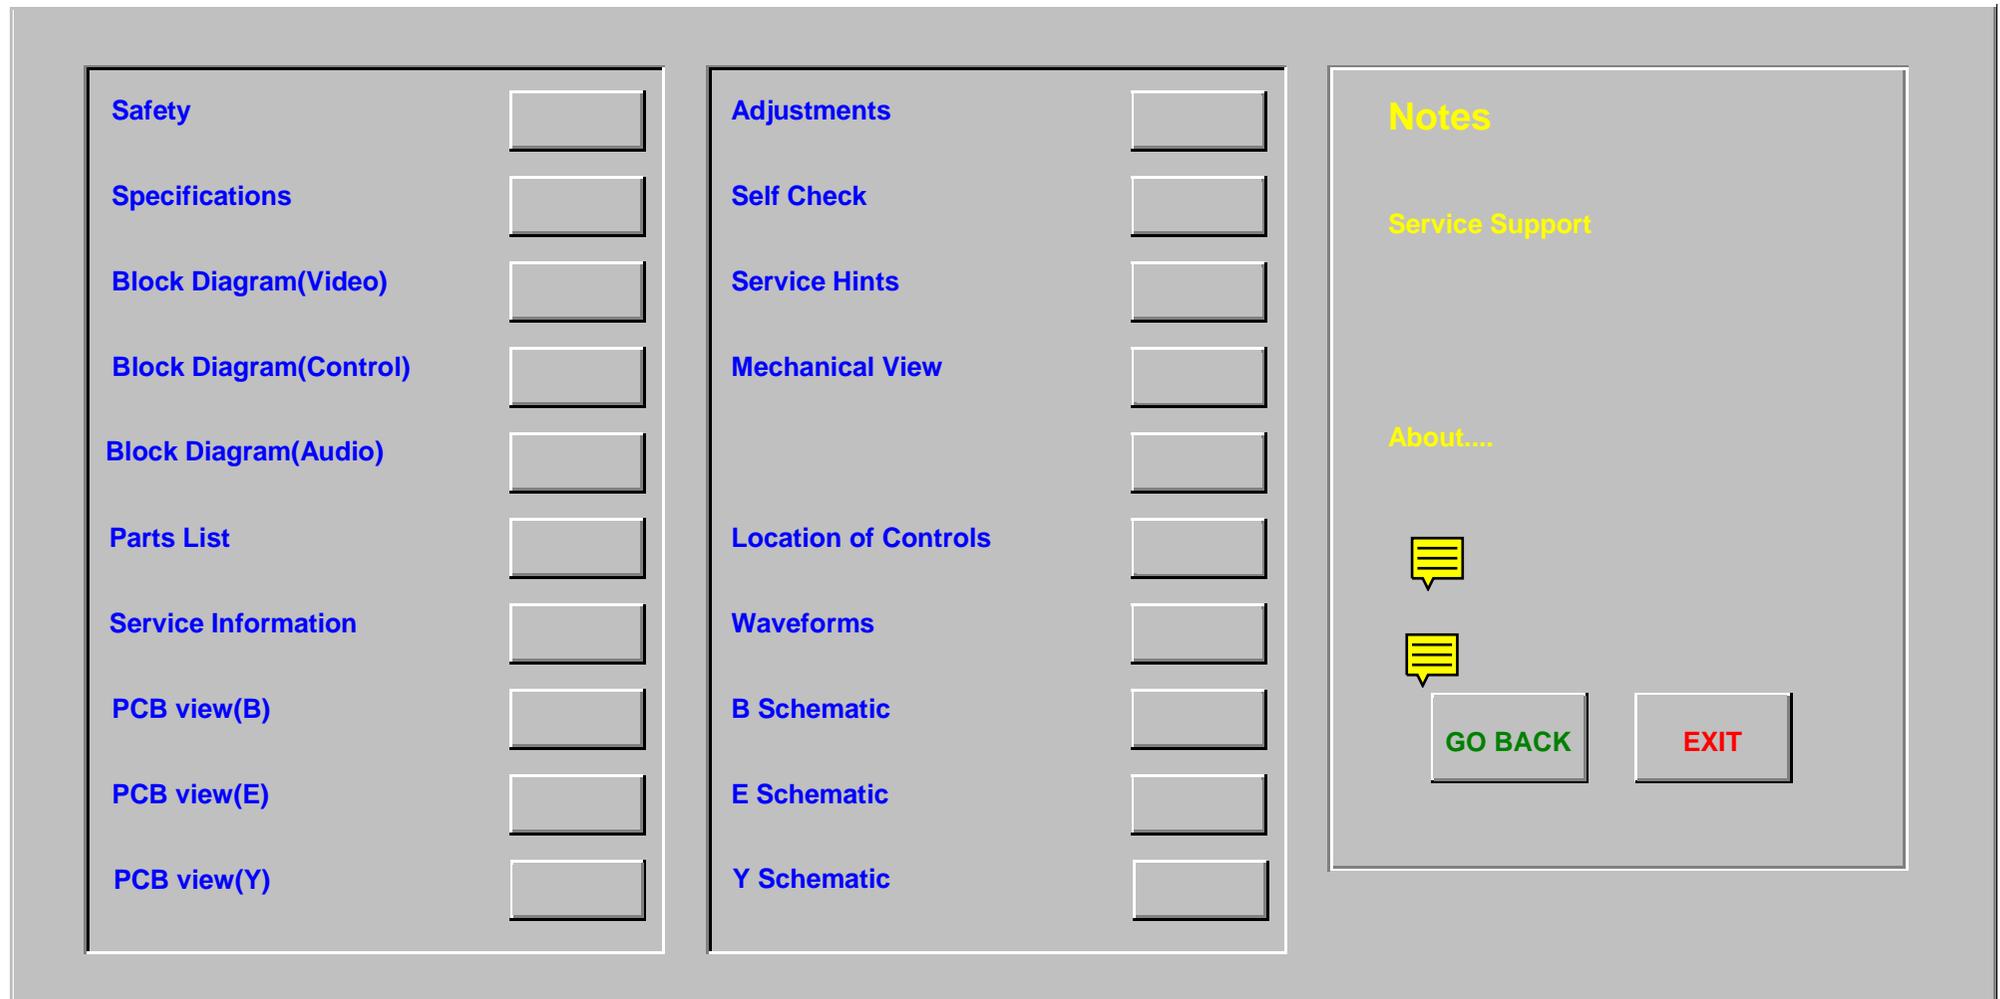

# Service Manual

## Colour Television TX-28LD1 EURO-2 Chassis

### Specifications

<b>Power Source :</b>	220-240V AC, 50Hz	<b>AV3 IN</b>	S-Video IN (4-pin)	Y : 1V p-p 75Ω C : 0.3V p-p 75Ω
<b>Power Consumption :</b>	97W		Audio (RCA x 2)	500mV rms 10kΩ
<b>Aerial Impedance :</b>	75Ω unbalanced, Coaxial Type	<b>High Voltage :</b>	Video (RCA x 1)	1V p-p 75Ω
<b>Receiving System :</b>	PAL-I (UHF), PAL-60	<b>Picture Tube :</b>		28 kV ±1kV at zero beam current
<b>Receiving Channels :</b>	UHF E21 - E69	<b>Visible screen size:</b>	A66ECF40X12	110° Deflection
<b>Intermediate Frequency :</b>		<b>Audio Output :</b>		66 cm Measured Diagonally
Video	39.5 MHz	Internal Speaker		2 x 15 W (Music Power) 4-8 Ω Impedance
Sound	33.5 MHz	Headphones		1 x 8 Ω Impedance
Colour	35.07 MHz	<b>Accessories supplied :</b>		Remote Control R6 (UM3) Battery TV Stand
<b>Video / Audio Terminals :</b>		<b>Dimensions :</b>		Height : 582mm Width : 752mm Depth : 462mm
AV1 IN	Video (21 pin) 1V p-p 75Ω Audio (21 pin) 500mV rms 10kΩ RGB (21 pin)	<b>Net Weight</b>		32kg
AV1 OUT	Video (21 pin) 1V p-p 75Ω Audio (21 pin) 500mV rms 1kΩ			
AV2 IN	Video (21 pin) 1V p-p 75Ω Audio (21 pin) 500mV rms 10 kΩ S-Video IN (21 pin) Y : 1V p-p 75Ω C : 0.3V p-p 75Ω			
AV2 OUT	Video (21 pin) 1V p-p 75Ω Audio (21 pin) 500mV rms 1kΩ Selectable output (21 pin)			

Specifications are subject to change without notice.  
Weight and dimensions shown are approximate.

## Panasonic

**Panasonic CS (U.K.) Ltd.**  
WILLOUGHBY ROAD,  
BRACKNELL  
BERKS,  
RG12 8FT.

## CONTENTS

Safety Precautions .....	2 ..
Location of Controls .....	3 ..
Service Position .....	4 ..
Adjustment Procedure .....	5 ..
Self Check .....	6 ..
Alignment Settings .....	7 ..
Block Diagrams .....	8 ..
Conductor Views .....	11 ..
Waveform Pattern Table .....	13 ..
Schematic Diagrams .....	14 ..
Parts Location .....	17 ..
Replacement Parts List .....	18 ..

## SAFETY PRECAUTIONS

### GENERAL GUIDE LINES

1. It is advisable to insert an isolation transformer in the AC supply before servicing a hot chassis.
  2. When servicing, observe the original lead dress in the high voltage circuits. If a short circuit is found, replace all parts which have been overheated or damaged by the short circuit.
  3. After servicing, see that all the protective devices such as insulation barriers, insulation papers, shields and isolation R-C combinations are correctly installed.
  4. When the receiver is not being used for a long period of time, unplug the power cord from the AC outlet.
  5. Potentials as high as 29kV are present when this receiver is in operation. Operation of the receiver without the rear cover involves the danger of a shock hazard from the receiver power supply. Servicing should not be attempted by anyone who is not familiar with the precautions necessary when working on high voltage equipment. Always discharge the anode of the picture to the chassis before handling the tube.
  6. After servicing make the following leakage current checks to prevent the customer from being exposed to shock hazards.
4. Check each exposed Metallic part and check the voltage at each point.
  5. Reverse the AC plug at the outlet and repeat each of the above measurements.
  6. The potential at any point should not exceed 1.4 Vrms. In case a measurement is outside the limits specified, there is a possibility of a shock hazard, and the receiver should be repaired and rechecked before it is returned to the customer.

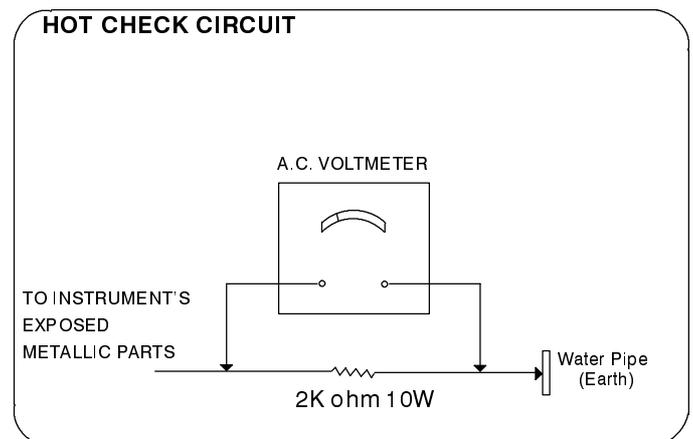


Fig.1

### LEAKAGE CURRENT COLD CHECK

1. Unplug the AC cord and connect a jumper between the two prongs of the plug.
2. Turn on the receiver's power switch.
3. Measure the resistance value with an ohmmeter, between the jumpered AC plug and each exposed metallic cabinet part on the receiver, such as screw heads, aerials, connectors, control shafts etc. When the exposed metallic part has a return path to the chassis the reading should be between 4M ohm and 20M ohm. When the exposed metal does not have a return path to the chassis the reading must be infinite.

### LEAKAGE CURRENT HOT CHECK

1. Plug the AC cord directly into the AC outlet. Do not use an isolation transformer for this check.
2. Connect a 2kΩ 10W resistor in series with an exposed metallic part on the receiver and an earth such as a water pipe.
3. Use an AC voltmeter with high impedance to measure the potential across the resistor.

## X-RADIATION WARNING

1. The potential sources of X-Radiation in TV sets are the high voltage section and the picture tube.
2. When using a picture tube test jig for service ensure that the jig is capable of handling 29kV without causing X-Radiation.

**NOTE :** It is important to use an accurate periodically calibrated high voltage meter

1. Set the brightness to minimum.
2. Measure the high voltage. The meter should indicate 28kV  $\pm$  1kV if the meter indication is out of tolerance, immediate service and correction is required to prevent the possibility of premature component failure.
3. To prevent any X-Radiation possibility, it is essential to use the specified tube.

## LOCATION OF CONTROLS

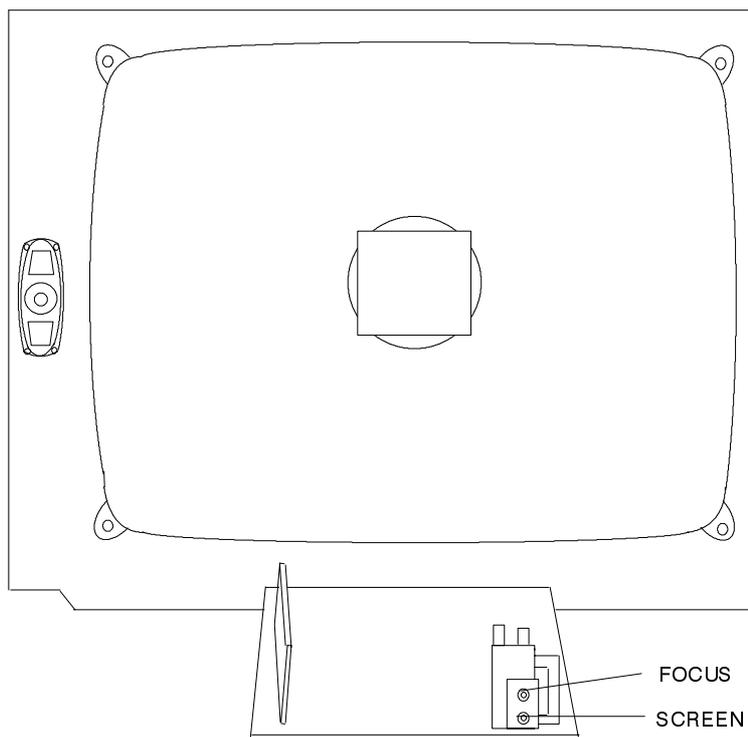


Fig.2

## SERVICE HINTS

### HOW TO REMOVE THE REAR COVER

1. Remove the 6 screws (A) as shown in Fig.3/Fig.4.




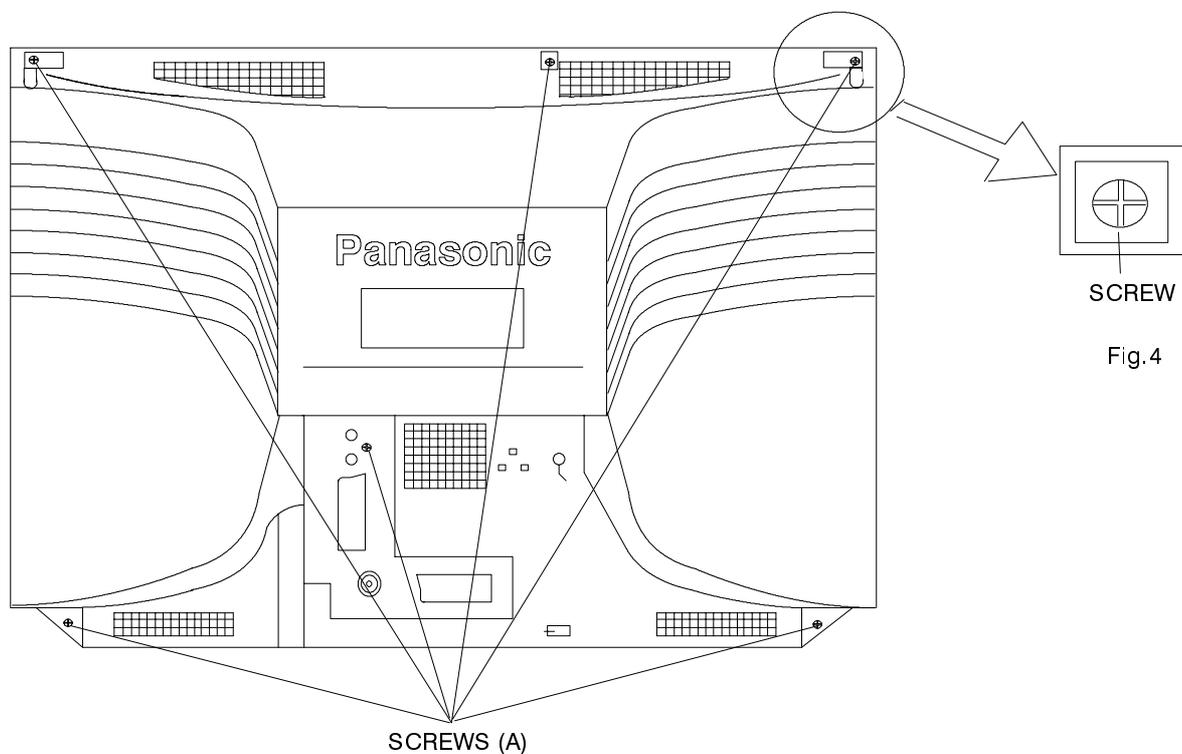


Fig.4

Fig.3.

## SERVICE POSITION

1. Remove chassis by pulling in the direction of the arrows in Fig.5.
2. Rotate the chassis 90° anti-clockwise as shown in Fig.6.
3. Locate the corner of the chassis marked 'A' into the bottom right hand corner of the cabinet marked 'B' as shown in Fig.5, ensuring that the angled section of the chassis frame is flush with the cabinet as shown in Fig.7.
4. Locate service slot 'C' as shown in Fig.8 to the service bracket 'D' of the chassis frame as shown in Fig.9.
5. After servicing ensure all wiring is returned to its original position before returning the receiver to the customer.

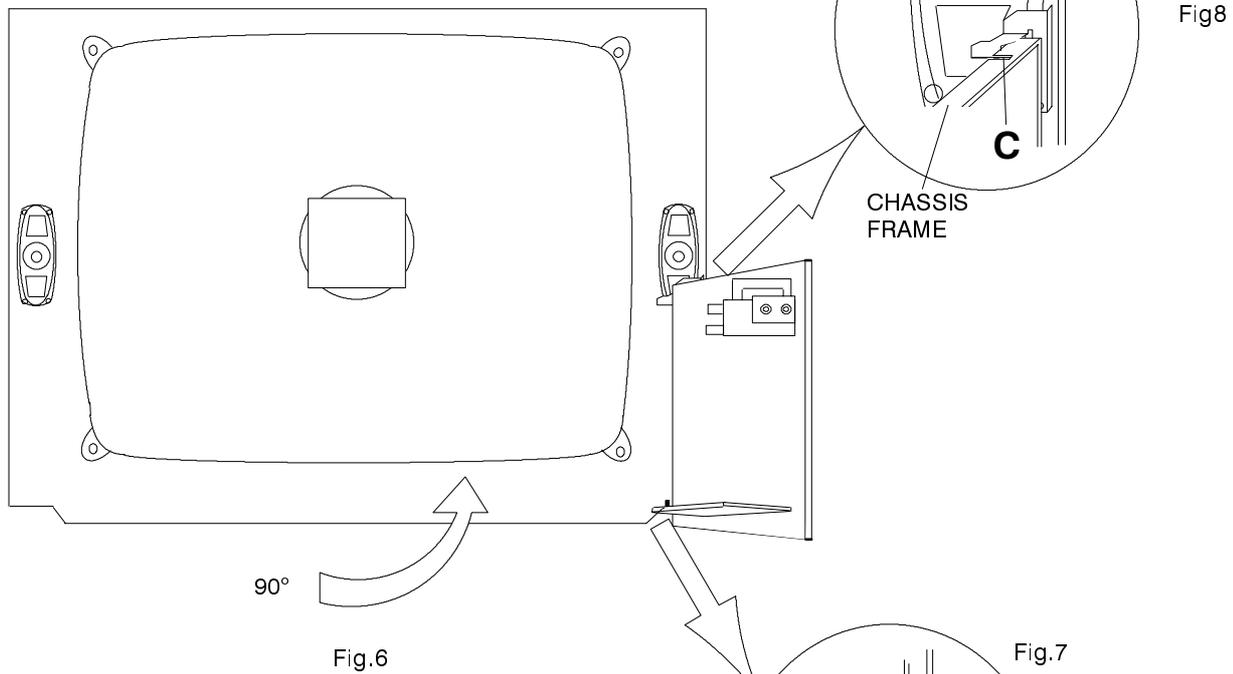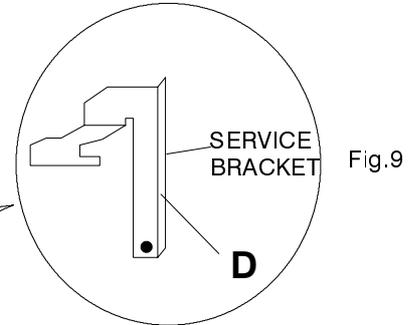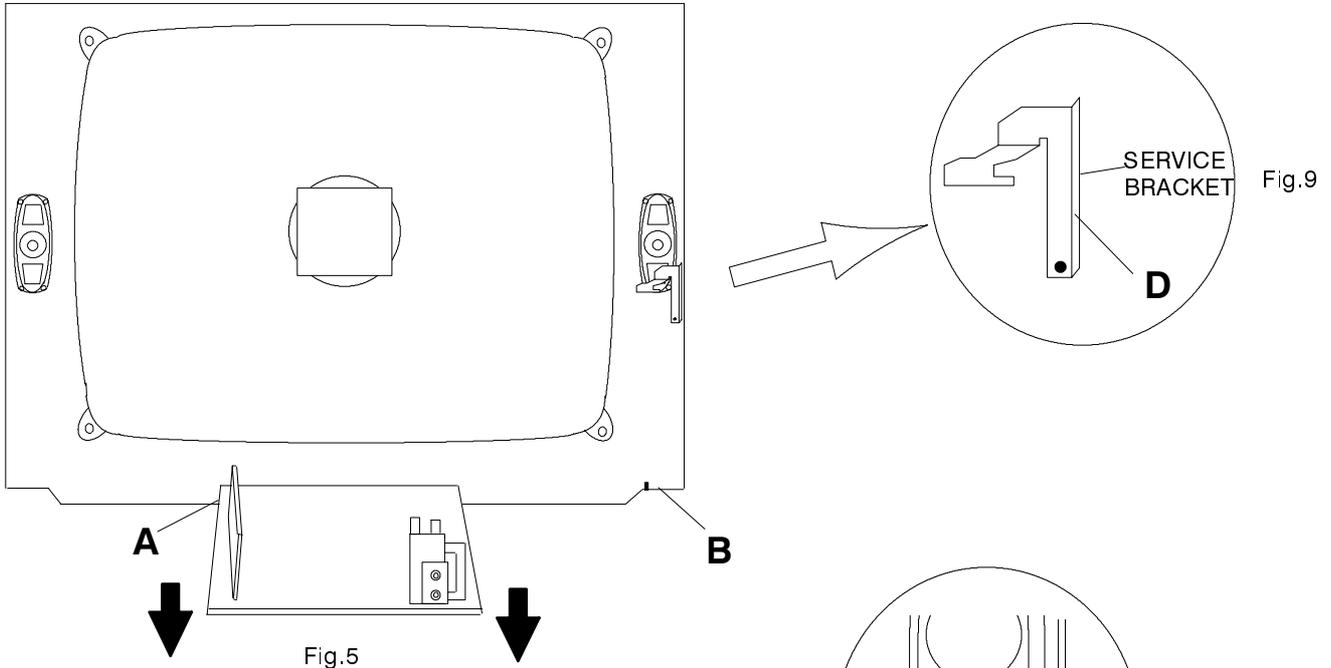

## ADJUSTMENT PROCEDURE

The remote control is used for entering and storing adjustments, with the exception of cut-off adjustments which must always be done prior to service adjustment. Perform adjustments in accordance with screen display. The display on the screen also specifies the CCU variants as well as the approx. setting values. The adjustment sequence for the service mode is indicated below.

1. Set the Bass to maximum position, set the Treble to minimum position, press the F button followed by the volume down button on the customer controls at the front of the TV and at the same time press the Reveal button on the remote control, this will place the TV into the Service Mode.
2. Press the RED / GREEN buttons to step up / down through the functions.
3. Press the YELLOW / BLUE buttons to alter the function values.
4. Press the STORE button after each adjustment has been made to store the required values.
5. To exit the Service Mode press the Normalisation button..

**NOTE:** This TV also has the option of using a Memory Pack which enables you to copy the preset TV channels into the Memory Pack and then download them onto this or any other EURO-2 TV set.

### TV to Memory Pack process

1. Plug the memory pack into the lower of the two 21 pin terminals at the back of the TV and switch the TV on. If the TV has only one 21 pin connector then this will be able to accept the memory pack.
2. Go into the Service Mode as explained above. The screen will show: –

Program  
External >> TV

3. Press the blue button on the remote control. The screen will show: –

Program  
TV >> External

4. Press the STORE button on the TV. The screen will show: –

Storing

5. All the tuning information stored inside the TV will now be transferred to the Memory Pack. This process will take 2–3 minutes to complete and when finished the screen will show: –

OK!

### Memory Pack to TV Process

## Errors

If an error occurs while using the Memory Pack the TV will detect this and the screen will show: –

Program  
Error!

If this happens then press the Normalisation button and repeat the process that was being used. If the errors continue to occur then check the connectors between the TV and the memory pack and check the 9V battery inside the memory pack.

1. Plug the memory pack into the lower of the two 21 pin terminals at the back of the TV and switch the TV on. If the TV has only one 21 pin connector then this will be able to accept the memory pack.
2. Go into the Service Mode as explained above. The screen will show: –

Program  
External >> TV

3. Press the STORE button on the TV. The screen will show: –

Loading

4. All the tuning information stored inside the Memory Pack will now be transferred to the TV. This process will take 2–3 minutes to complete and when finished the screen will show: –

OK!

5. The tuning information from the Memory Pack has now been copied into the TV
6. To exit from the Service Mode press the Normalisation button.
7. The process has now been completed and the Memory Pack can now be removed.

## ADJUSTMENT PROCEDURE

Item/Preparation	Adjustments
<b>+B SET-UP</b> 1. Recieve a window pattern 2. Set the controls: Brightness      minimum Contrast         minimum Volume            minimum	1. Set the +B voltage up as follows: Adjust <b>R811</b> so that <b>B2</b> shows $147V \pm 1V$ 2. Confirm the following voltages. <b>B1</b> $203 \pm 10V$ <b>B6</b> $12 \pm 0.5V$ <b>B3</b> $27 \pm 1V$ <b>B7</b> $5 \pm 0.1/-0.25V$ <b>B4</b> $35.5 \pm 1V$ <b>B8</b> $5 \pm 0.25V$ <b>B5</b> $15.5 \pm 1V$ <b>U33</b> $31 \pm 1V$
<b>RF AGC</b> 1. Receive a test pattern. 2. Connect an oscilloscope between the tuner RF AGC and ground. 3. Set the oscilloscope gain range to 1V/div.	1. Check that the noise becomes large when the RF AGC VR <b>R126</b> is turned counterclockwise. After the check turn it clockwise 2. Gradually turn the RF AGC VR anti-clockwise, and set the RF AGC VR to the point where the RF AGC voltage is just falling to a point where this voltage drops by 0.2V from the maximum value.
<b>CUT OFF</b> 1. Receive a widow pattern. 2. Degauss the tube externally. 3. Set the TV into Service Mode 1. 4. Select Cutoff DC mode.	1. Confirm then value is 128 and select Ug2 mode noting colour with largest value 2. Turn the screen VR until a colour reaches 20~30. 3. Connect an oscilloscope to the cathode with the biggest value colour. 4. Select Cutoff DC mode and adjust Cutoff pulse to $159V \pm 5V$ . 5. Disconnect the oscilloscope and adjust the screen to whichever colour reaches 50 $\pm 10$ first.

## SELF CHECK

Self check is used to automatically check the Bus Lines and Hexadecimal code of the TV set.

To get into the Self Check mode press the F button followed by the volume down button on the customer controls at the front of the TV at the same time pressing the Status button, on the Remote Control, and the screen will show: -

1 — ok	Tuner	11 — — —	Dolby IC for C/R
2 — ok	VIF	12 — ok	P S MODE
3 — ok	EEPROM	13 — ok	P TA0
4 — — —	Sound AV switch 1	14 — ok	P TA1
5 — ok	Video AV switch 1	15 — ok	P TA2
6 — ok	VDP	16 — ok	P TA3
7 — ok	TPU	17 — ok	P SDA
8 — ok	MSP	18 — ok	P SCL1
9 — — —	Dolby Sub	19 — ok	P SCL3
10 — — —	Dolby IC for L/R	20 — ok	P SCL4

If the CCU ports have been checked and found to be incorrect then "—" will appear in place of "OK".

21 — ok	P SBLED
22 — ok	P OFF
23 — ok	P DEFL
24 — ok	P RAM


Hex codes

06
CE
34
94
85

## ALIGNMENT SETTINGS (The figures used below are nominal and used for representative purposes only)

Alignment Function		Settings / Special features
1. Vertical amplitude	V-AMP 054	Optimum setting
2. Vertical symmetry	V-SYM 002	
3. Vertical linearity	V-LIN 006	
4. Vert. DC.	Vert. D.C. 000	Not to be adjusted.
5. V-Pos	V. Pos. 005	Optimum setting
6. Horizontal amplitude	H-AMP 055	Optimum setting
7. Horizontal position	H-POS 061	
8. Text Position	TEXT POSITION 048	Optimum setting
9. EW-amplitude	E-W-AMP 1 -128	Optimum setting
10. EW-amplitude	E-W-AMP 2 006	Optimum setting
11. Trapezium-comp	TRAPEZ-1 047	Optimum setting
12. Trapezium-comp	TRAPEZ-2 -128	Optimum setting
13. Colour VCO	Colour VCO -005	Press either Blue or Yellow buttons to effect automatic adjustment
14. Cut-off DC	Cut-off DC 171	Not to be adjusted.
15. Ug2 Test	Ug 2 Test 006    055    059	Select Cutoff DC in Service Mode mode and confirm the value is 128. Select Ug 2 Test noting colour with largest value, adjust on FBT until a colour reaches 20 ~ 30. Connect an oscilloscope to the cathode of the biggest value colour, select Cutoff DC mode and adjust get Cutoff pulse voltage to 159±5V. Disconnect the oscilloscope and adjust the screen to whichever colour reaches 50±10 first.
16. Cutoff	Cutoff 034    052    056	Press the GREEN button to step through the settings. Adjust for optimum.
17. White	White 216    255    216	Press the GREEN button to step through the settings. Adjust for optimum.

# WAVEFORM PATTERN TABLE

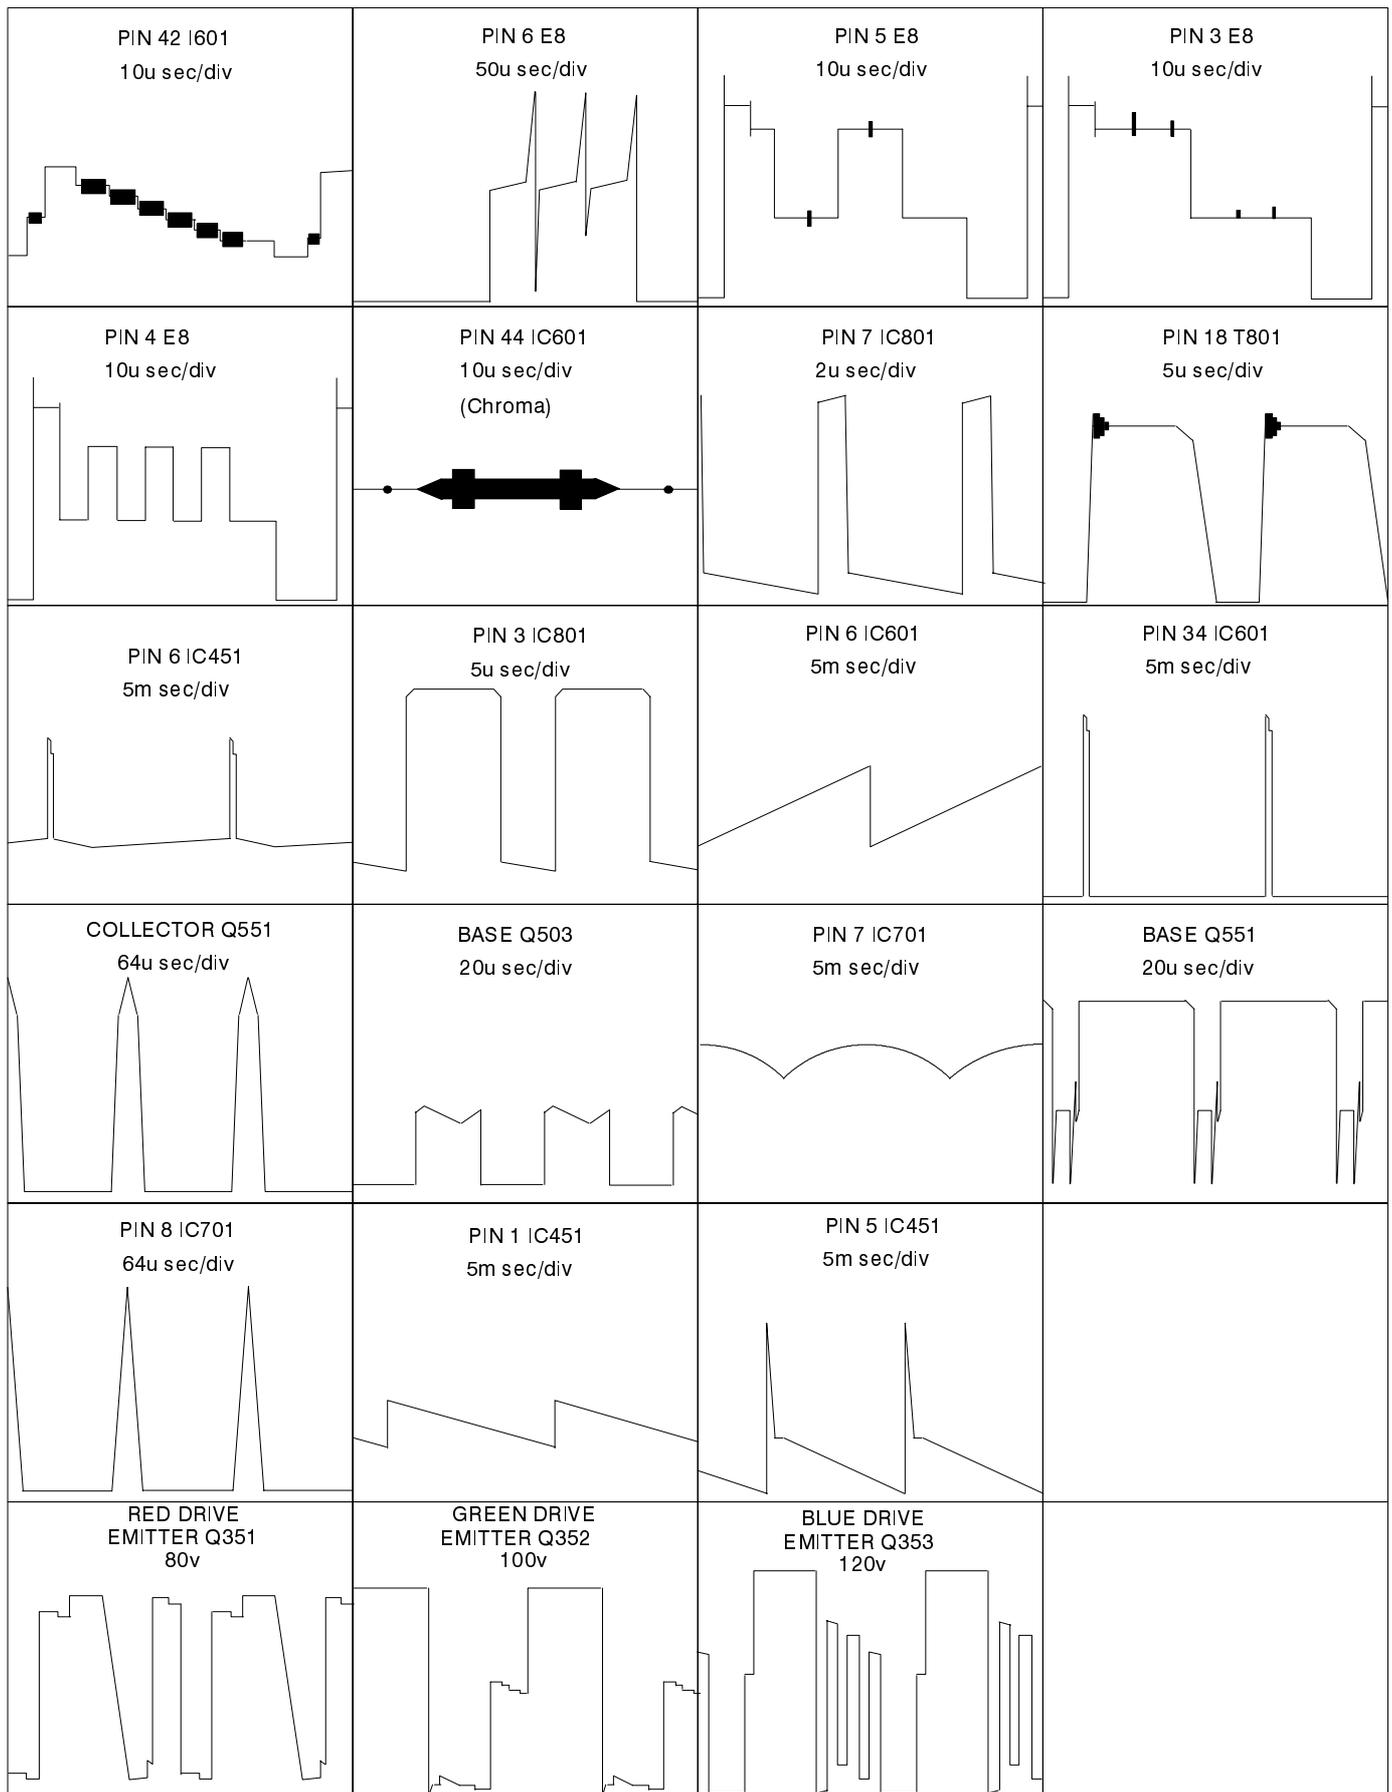

## SCHEMATIC DIAGRAM FOR MODELS TX-28LD1 (Euro-2 Chassis)

### IMPORTANT SAFETY NOTICE

Components identified by  mark have special characteristics important for safety. When replacing any of these components, use only manufacturer's specified parts.

### Notes

1. **RESISTOR**  
All resistors are carbon 1/4W resistor, unless marked as follows:  
Unit of resistance is OHM ( $\Omega$ ) (K=1,000, M=1,000,000).
2. **CAPACITORS**  
All capacitors are ceramic 50V, unless marked as follows: Unit of capacitance is  $\mu$ F, unless otherwise stated.
3. **COIL**  
Unit of inductance is  $\mu$ H, unless otherwise stated.
4. Components marked 'L' on the schematic diagram shows leadless parts.
5. **TEST POINT**  
 : Test Point position
6. **EARTH SYMBOL**  
 : Chassis Earth (Cold)  
 : Line Earth (Hot)
7. **VOLTAGE MEASUREMENT**  
Voltage is measured by a DC voltmeter. Measurement conditions are as follows:  
Power source                      AC 220V-240V, 50Hz  
Receiving Signal                Colour Bar signal (RF)  
All customer controls        Maximum position
8.  : Indicates the Video signal path  
 : Indicates the Audio signal path  
 : Indicates the Vertical/Horizontal signal path
9. This schematic diagram is the latest at the time of printing and is subject to change without notice.


### Remarks

1. The Power Circuit contains a circuit area which uses a separate power supply to isolate the earth connection. The circuit is defined by HOT and COLD indications in the schematic diagram. All circuits, except the Power Circuit, are COLD. Take the following precautions:


### Precautions

- a. Do not touch the hot part, or the hot and cold parts at the same time, as you are liable to a shock hazard.
- b. Do not short-circuit the hot and cold circuits as electrical components may be damaged.
- c. Do not connect an instrument, such as an oscilloscope, to the hot and cold circuits simultaneously, as this may cause fuse failure. Connect the earth of the instruments to the earth connection of the circuit being measured.
- d. Make sure to disconnect the power plug before removing the chassis.


# POWER SUPPLY AND CONTROL BLOCK DIAGRAM

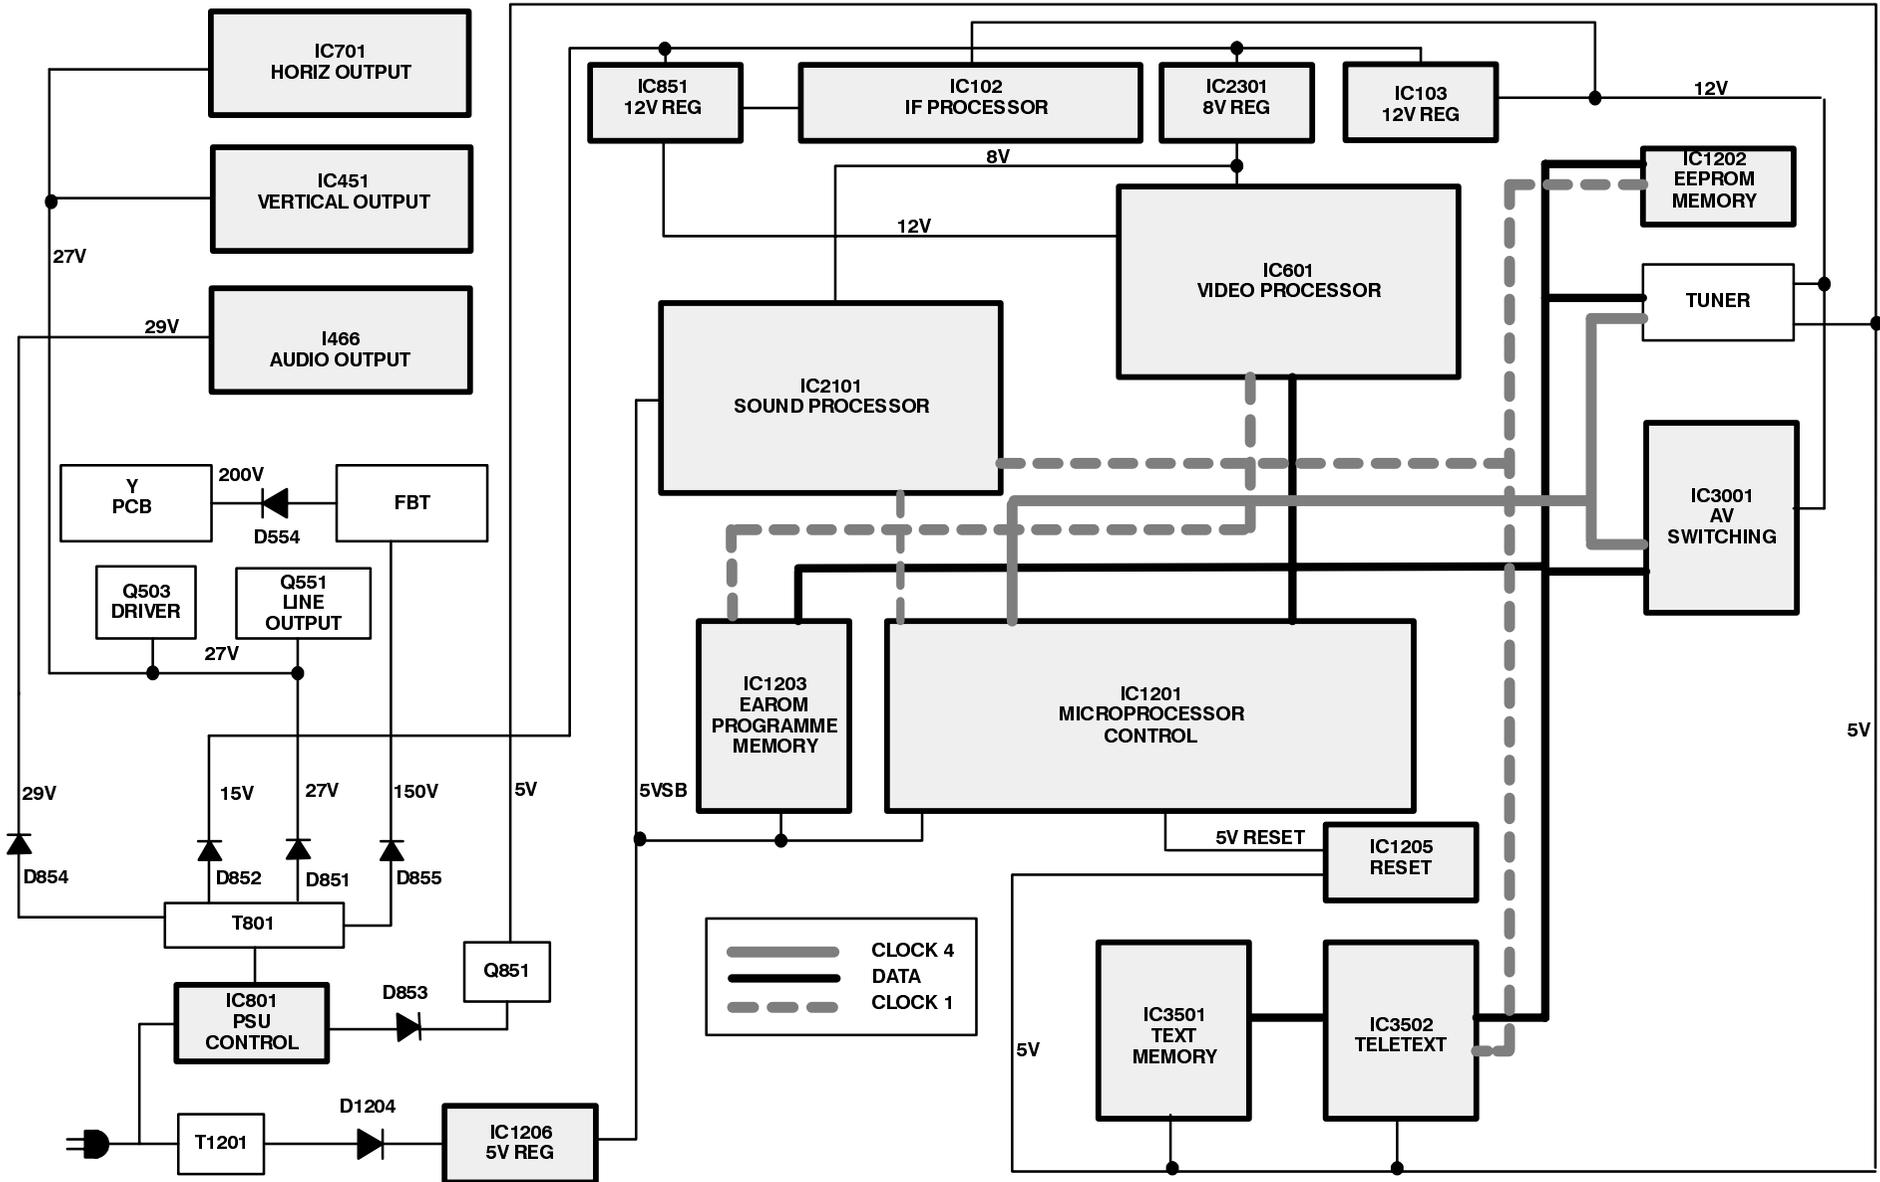


# VIDEO BLOCK DIAGRAM

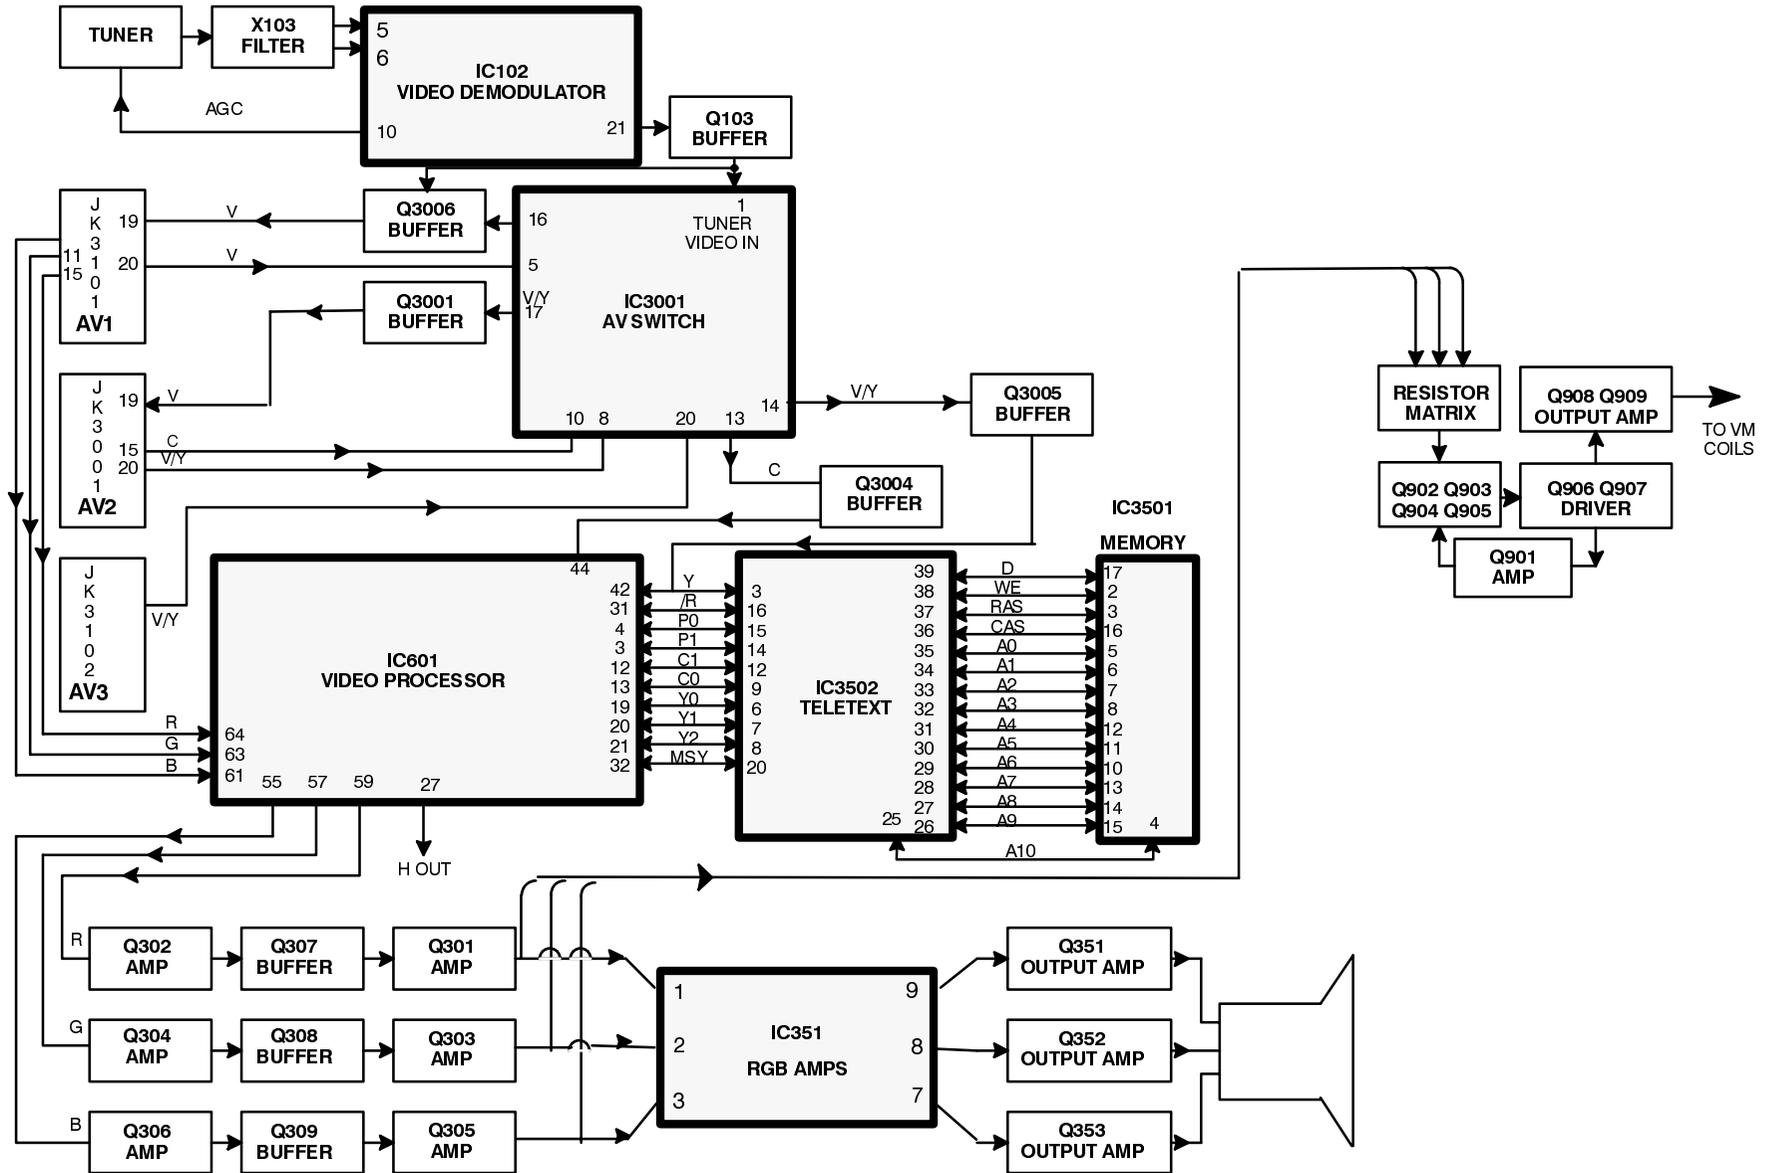

# AUDIO BLOCK DIAGRAM

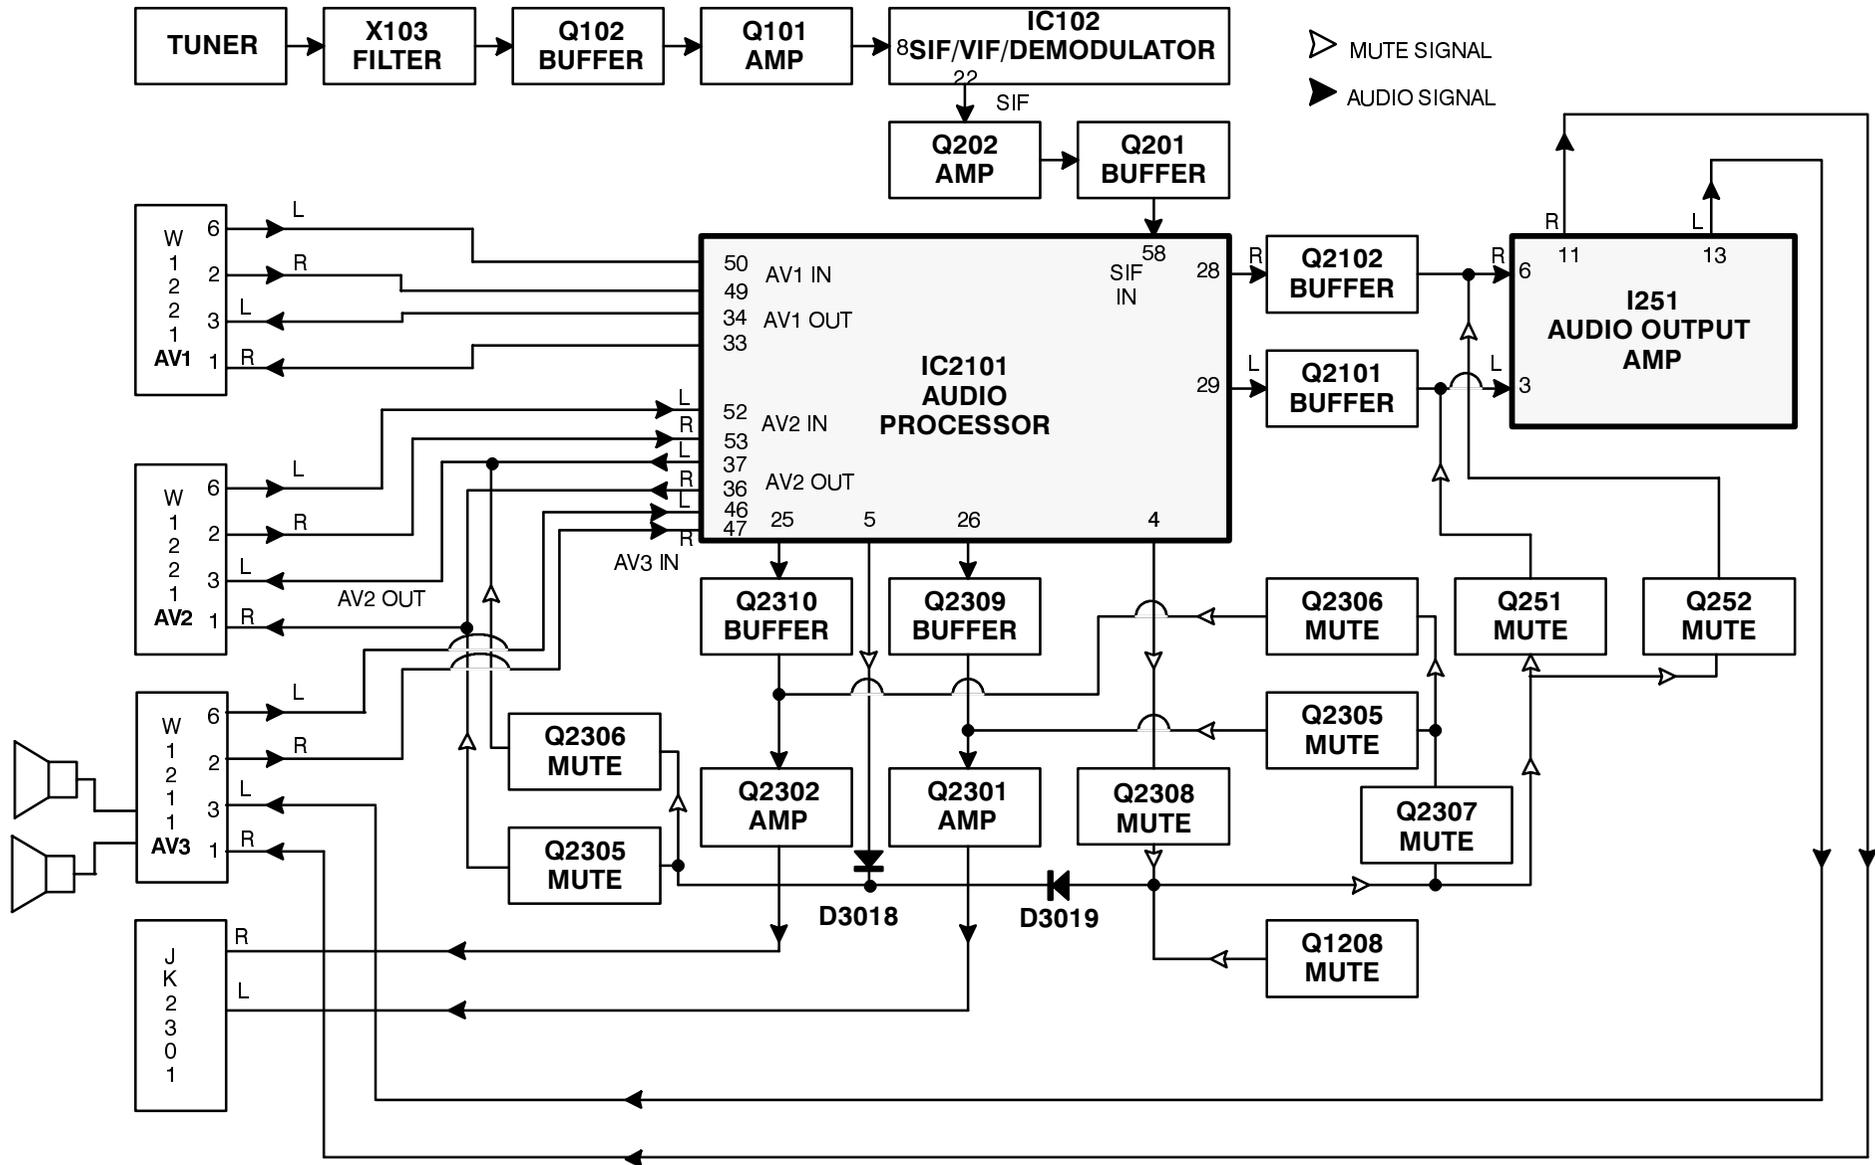

# PARTS LOCATION

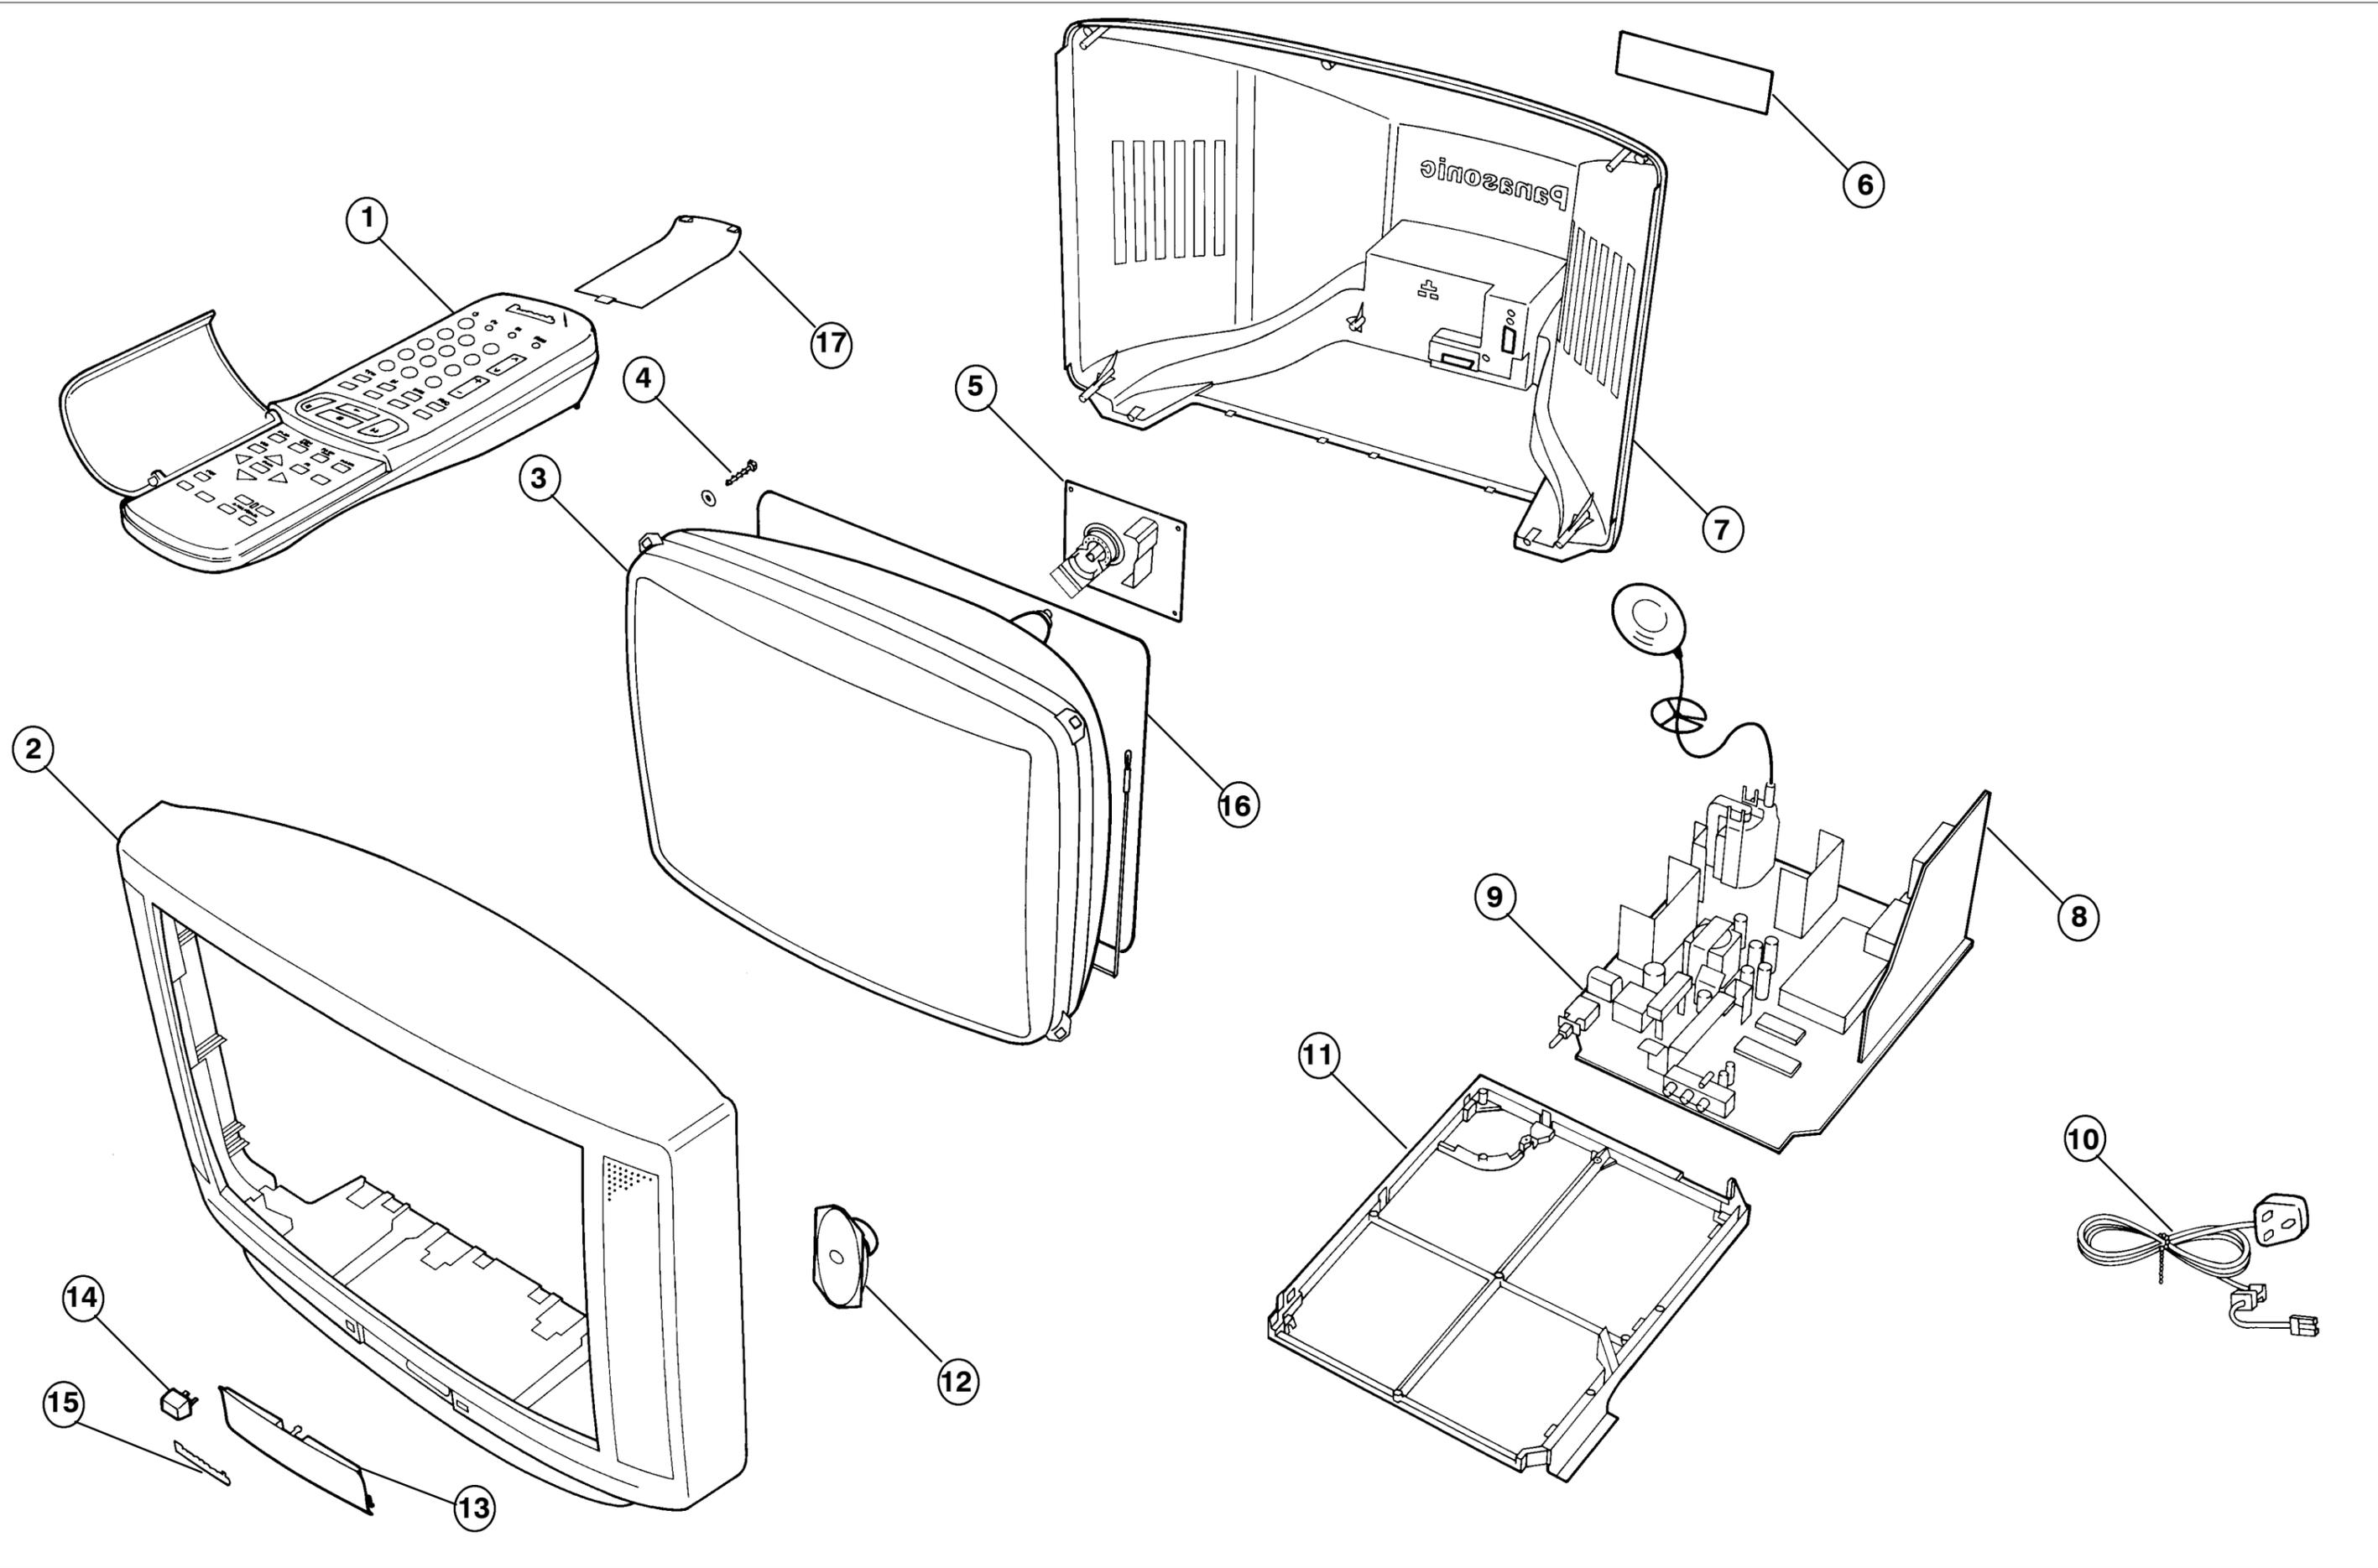

## REPLACEMENT PARTS LIST

**Important Safety Notice**

Components identified by  $\Delta$  mark have special characteristics important for safety.  
When replacing any of these components, use only manufacturer's specified parts.

Ref No.	Part No.	Description	
<b>MISCELLANEOUS COMPONENTS</b>			
1)	EUR51920	REMOTE CONTROL	
2)	TKY8E041	CABINET	$\Delta$
3)	A66ECF40X12	C.R.T.	$\Delta$
4)	THE492-4	CRT FIXING SCREW	
5)	TNP117070AB	Y P.C.B.	$\Delta$
6)	TBM8E1471	REAR COVER LABEL	
7)	TKU8E00200	REAR COVER	$\Delta$
8)	TNP117064AA	B P.C.B.	$\Delta$
9)	TNP197091AE	E P.C.B.	$\Delta$
10)	TSX8E0017	POWER CORD	$\Delta$
12)	EASG12D531F2	SPEAKER	
13)	TKP8E1129	LID	
14)	TBX8E027	POWER BUTTON	
15)	TBM173052	BADGE	
16)	TLK8E05116	DEGAUSS COIL	
17)	UR51EC780	BATTERY COVER (REMOTE)	
	ENV87880G3	TUNER	$\Delta$
	F9-4-220	RELAY	
	SVM100	COIL	
	TBM8E1451-1	PRESET LABEL	
	TEK6935	LID SWITCH	
	TES8E012	EARTH SPRING	
	TKP8E1130	LED COVER	
	TMW8E020	LED HOLDER	
	TPC8E4501	OUTER CARTON	
	TPC8E4515	PACKING PIECE	
	TPD8E562	CUSHION	
	TQB8E2007	INSTRUCTION SHEET	$\Delta$
	TQB8E2020	INSTRUCTION BOOK	$\Delta$
	TS2800	TV STAND	
	TUX8E026	SERVICE BRACKET	
	UM-3DEP-2P	BATTERY	
<b>CAPACITORS</b>			
C001	ECUV1H103ZFX S.M.CAP	50V 10nF	
C002	ECEA1HMR33GBELECT	50V R33 $\mu$ F	
C003	ECUV1H104ZFX S.M.CAP	50V 100nF	
C004	ECEA1CM221GBELECT	16V 220pF	
C006	ECEA1CM101GBELECT	16V 100pF	
C007	ECUV1H104ZFX S.M.CAP	50V 100nF	
C009	ECUV1H104ZFX S.M.CAP	50V 100nF	
C109	ECUV1H390JPX S.M.CAP	50V 39pF	
C110	ECUV1H102KBX S.M.CAP	50V 1nF	
C111	ECUV1H683ZFX S.M.CAP	50V 68nF	
C112	ECUV1H150JCX S.M.CAP	50V 15pF	
C113	ECEA1CM100GBELECT	16V 10pF	
C114	ECUV1H270JPX S.M.CAP	50V 27pF	
C115	ECUV1H103ZFX S.M.CAP	50V 10nF	
C116	ECEA1CM101GBELECT	16V 100pF	
C117	ECUV1H103ZFX S.M.CAP	50V 10nF	
C118	ECUV1H103ZFX S.M.CAP	50V 10nF	
C119	ECEA1HMR47GBELECT	50V R47 $\mu$ F	
C120	ECUV1H102KBX S.M.CAP	50V 1nF	
C121	ECUV1H103ZFX S.M.CAP	50V 10nF	
C122	ECUV1H151JX S.M.CAP	50V 150pF	
C123	ECUV1H102KBX S.M.CAP	50V 1nF	

Ref No.	Part No.	Description	
C124	ECEA1CM470GBELECT	16V 47pF	
C125	ECUV1H103ZFX S.M.CAP	50V 10nF	
C127	ECEA1CM470GBELECT	16V 47pF	
C128	ECUV1H103ZFX S.M.CAP	50V 10nF	
C130	ECEA1HMR47GBELECT	50V R47 $\mu$ F	
C131	ECEA1HM2R2GBELECT	50V 2R2 $\mu$ F	
C132	ECUV1H331KBX S.M.CAP	50V 330pF	
C133	ECUV1H102KBX S.M.CAP	50V 1nF	
C134	ECUV1H103ZFX S.M.CAP	50V 10nF	
C135	ECUV1H103ZFX S.M.CAP	50V 10nF	
C136	ECEA1CM100GBELECT	16V 10pF	
C137	ECEA1EM101GBELECT	25V 100pF	
C138	ECUV1H103ZFX S.M.CAP	50V 10nF	
C140	ECEA1HM010GBELECT	50V 1pF	
C141	ECUV1H102KBX S.M.CAP	50V 1nF	
C144	ECUV1H090DCX S.M.CAP	50V 90pF	
C145	ECEA1CM470GBELECT	16V 47pF	
C201	ECUV1H070DCX S.M.CAP	50V 7pF	
C202	ECUV1H070DCX S.M.CAP	50V 7pF	
C203	ECUV1H470JX S.M.CAP	50V 47pF	
C204	ECUV1H560JCX S.M.CAP	50V 56pF	
C205	ECUV1H100DCX S.M.CAP	50V 10pF	
C207	ECUV1H220JCX S.M.CAP	50V 22pF	
C209	ECUV1H103ZFX S.M.CAP	50V 10nF	
C210	ECUV1H103ZFX S.M.CAP	50V 10nF	
C211	ECUV1H103ZFX S.M.CAP	50V 10nF	
C251	ECEA1EU101 ELECT	25V 100 $\mu$ F	
C252	ECUV1H223KBX S.M.CAP	50V 22nF	
C253	ECEA1HU4R7 ELECT	50V 4.7 $\mu$ F	
C254	222236516684 FILM	160V 100nF	
C255	ECEA1EGE101 ELECT	25V 100 $\mu$ F	
C256	ECUV1H223KBX S.M.CAP	50V 22nF	
C257	ECEA1HU4R7 ELECT	50V 4.7 $\mu$ F	
C258	ECEA1EU101 ELECT	25V 100 $\mu$ F	
C259	222236516684 FILM	160V 100nF	
C260	ECEA1VU102 ELECT	35V 1000 $\mu$ F	
C261	ECEA1VU102 ELECT	35V 1000 $\mu$ F	
C262	ECQM1H474J FILM	50V 470nF	
C263	ECEA1HU010 ELECT	50V 1 $\mu$ F	
C264	ECEA1HGE222 ELECT	50V 2200 $\mu$ F	
C265	ECQM1H474J FILM	50V 470nF	
C266	ECEA1HU010 ELECT	50V 1 $\mu$ F	
C267	ECUV1H104ZFX S.M.CAP	50V 100nF	
C268	ECUV1H104ZFX S.M.CAP	50V 100nF	
C269	ECEA1CU100 ELECT	16V 10 $\mu$ F	
C271	ECUV1H561KBX S.M.CAP	50V 560pF	
C301	ECEA1CU470 ELECT	16V 47 $\mu$ F	
C302	ECUV1H104ZFX S.M.CAP	50V 100nF	
C303	ECUV1H104ZFX S.M.CAP	50V 100nF	
C310	ECUV1H104ZFX S.M.CAP	50V 100nF	
C351	ECUV1H270JCX S.M.CAP	50V 27pF	
C352	ECUV1H100CCX S.M.CAP	50V 10pF	
C353	ECUV1H180JCX S.M.CAP	50V 18pF	
C354	ECQM2104KZ FILM	250V 100nF	
C355	ECUV1H222JCX S.M.CAP	50V 2.2nF	
C356	ECUV1H222JCX S.M.CAP	50V 2.2nF	
C357	ECUV1H222JCX S.M.CAP	50V 2.2nF	
C358	ECQM1H224J FILM	50V 220nF	
C360	ECKC3D152J CERAMIC	2KV 1.5nF	$\Delta$
C361	ECEA1HUR47 ELECT	50V 0.47 $\mu$ F	
C364	ECUV1H103ZFX S.M.CAP	50V 10nF	
C366	ECEA1CU100 ELECT	16V 10 $\mu$ F	

Ref No.	Part No.	Description			
C451	ECUV1H102JX	S.M.CAP	50V	1nF	
C452	ECUV1H473ZFX	S.M.CAP	50V	47nF	
C453	ECUV1H472KBX	S.M.CAP	50V	4.7nF	
C454	ECUV1H104ZFX	S.M.CAP	50V	100nF	
C455	ECEA1VGE222	ELECT	35V	2200 $\mu$ F	
C456	ECEA1HGE221	ELECT	50V	220 $\mu$ F	
C457	ECUV1H223KBX	S.M.CAP	50V	22nF	
C458	ECQM1H154J	FILM	50V	150nF	
C459	ECQM1H224J	FILM	50V	220nF	
C460	ECQV1H105JZ	FILM	50V	1 $\mu$ F	
C461	ECQM1H684J	FILM	50V	680nF	
C462	ECEA1VGE332	ELECT	35V	3300 $\mu$ F	
C501	ECEA1AU330	ELECT	10V	33 $\mu$ F	
C506	ECUV1H103ZFX	S.M.CAP	50V	10nF	
C508	ECQV1H105JZ	FILM	50V	1 $\mu$ F	
C509	ECEA1HGE101	ELECT	50V	100 $\mu$ F	
C510	ECUV1H104ZFX	S.M.CAP	50V	100nF	
C511	ECQM2683JZ	FILM	250V	68nF	
C551	ECWH15H472J	FILM	1500V	4.7nF	△
C552	ECWH15H102J	FILM	1500V	1.0nF	△
C554	ECWF2H514J	FILM	500V	510nF	△
C555	ECWH12H103J	FILM	1250V	10nF	△
C556	ECQM4333JC	FILM	400V	33nF	
C559	ECWF2H684J	FILM	500V	680nF	△
C560	ECEA2GGE2R2	ELECT	400V	2R2 $\mu$ F	
C562	ECKC2H101J	CERAMIC	500V	100pF	△
C563	ECEA2EU220	ELECT	250V	22 $\mu$ F	
C564	ECEA2AU2R2	ELECT	100V	2.2 $\mu$ F	
C565	ECQP1H273J	FILM	50V	27nF	
C601	ECUV1H271JCX	S.M.CAP	50V	270pF	
C602	ECUV1H121JCX	S.M.CAP	50V	120pF	
C603	ECUV1H471JCX	S.M.CAP	50V	470pF	
C604	ECEA0JU102	ELECT	6.3V	1000 $\mu$ F	
C605	ECUV1H103ZFX	S.M.CAP	50V	10nF	
C608	ECUV1H683ZFX	S.M.CAP	50V	68nF	
C609	ECEA1CU470	ELECT	16V	47 $\mu$ F	
C610	ECUV1H683ZFX	S.M.CAP	50V	68nF	
C611	ECUV1H104ZFX	S.M.CAP	50V	100nF	
C612	ECUV1H103ZFX	S.M.CAP	50V	10nF	
C613	ECUV1H102JCX	S.M.CAP	50V	1nF	
C614	ECUV1H104ZFX	S.M.CAP	50V	100nF	
C615	ECUV1H103ZFX	S.M.CAP	50V	10nF	
C616	ECUV1H103ZFX	S.M.CAP	50V	10nF	
C618	ECUV1H473ZFX	S.M.CAP	50V	47nF	
C619	ECUV1H104ZFX	S.M.CAP	50V	100nF	
C620	ECUV1H104ZFX	S.M.CAP	50V	100nF	
C621	ECEA1CU100	ELECT	16V	10 $\mu$ F	
C622	ECEA1CU100	ELECT	16V	10 $\mu$ F	
C623	ECUV1H104ZFX	S.M.CAP	50V	100nF	
C624	ECUV1H103ZFX	S.M.CAP	50V	10nF	
C625	ECEA1HNR22	ELECT	50V	0.22 $\mu$ F	
C626	ECEA0JU102	ELECT	6.3V	1000 $\mu$ F	
C627	ECUV1H100DCX	S.M.CAP	50V	10pF	
C628	ECUV1H470JCX	S.M.CAP	50V	47pF	
C629	ECUV1H101JCX	S.M.CAP	50V	100pF	
C630	ECUV1H104ZFX	S.M.CAP	50V	100nF	
C631	ECUV1H104ZFX	S.M.CAP	50V	100nF	
C632	ECUV1H104ZFX	S.M.CAP	50V	100nF	
C633	ECUV1H102JCX	S.M.CAP	50V	1nF	
C636	ECUV1H101JCX	S.M.CAP	50V	100pF	
C637	ECUV1H102KBX	S.M.CAP	50V	1nF	
C638	ECUV1H181JCX	S.M.CAP	50V	180pF	
C639	ECUV1H561KBX	S.M.CAP	50V	560pF	
C701	ECEA1HGE101	ELECT	50V	100 $\mu$ F	
C702	ECUV1H103KBX	S.M.CAP	50V	10nF	
C703	ECEA1HGE100	ELECT	50V	10 $\mu$ F	
C704	ECQB1H223K	FILM	50V	22nF	
C705	ECQB1H102J	FILM	50V	1nF	
C801	ECUV1H101JCX	S.M.CAP	50V	100pF	
C802	ECQE6104K	FILM	600V	100nF	△

Ref No.	Part No.	Description			
C803	ECUV1H560JX	S.M.CAP	50V	56pF	
C804	ECEA1CU101	ELECT	16V	100 $\mu$ F	
C805	ECUV1H104ZFX	S.M.CAP	50V	100nF	
C806	ECEA1HU101	ELECT	50V	100 $\mu$ F	
C807	ECEA1EGE101	ELECT	25V	100 $\mu$ F	
C808	ECQB1H103J	FILM	50V	10nF	
C809	ECQB1H103J	FILM	50V	10nF	
C810	ECQU2A224MN	FILM	250V	220nF	
C811	ECEA1HN010	ELECT	50V	1 $\mu$ F	
C815	ECKC2H472J	CERAMIC	500V	4.7nF	△
C816	ECKC3D222JB	CERAMIC	2KV	2200pF	△
C817	ECQB1H223K	FILM	50V	22nF	
C818	ECKC2H472J	CERAMIC	500V	4.7nF	△
C820	ECOS2GG181NGELECT		400V	180 $\mu$ F	△
C821	ECKCNS332J	CERAMIC	1.2KV	3.3nF	△
C851	ECKC2H681J	CERAMIC	500V	680pF	△
C852	ECEA1HU102	ELECT	50V	1000 $\mu$ F	
C853	ECEA1EGE222	ELECT	25V	2200 $\mu$ F	
C854	ECEA1HGE102	ELECT	50V	1000 $\mu$ F	
C855	ECKC3D471JB	CERAMIC	2KV	470pF	△
C856	ECEA1EGE222	ELECT	25V	2200 $\mu$ F	
C857	ECEA2EU101	ELECT	250V	100 $\mu$ F	
C858	ECUV1H103ZFX	S.M.CAP	50V	10nF	
C859	ECUV1H103ZFX	S.M.CAP	50V	10nF	
C860	ECEA1CU471	ELECT	16V	470 $\mu$ F	
C861	ECOS2EA221AB	ELECT	400V	220 $\mu$ F	
C862	ECEA1CU471	ELECT	16V	470 $\mu$ F	
C901	ECUV1H030CCX	S.M.CAP	50V	30pF	
C902	ECEA1VM101GB	ELECT	35V	100pF	
C903	ECEA1CU470	ELECT	16V	47 $\mu$ F	
C904	ECUV1H103ZFX	S.M.CAP	50V	10nF	
C905	ECEA1HU4R7	ELECT	50V	4.7 $\mu$ F	
C906	ECUV1H471KBX	S.M.CAP	50V	470pF	
C907	ECUV1H271JCX	S.M.CAP	50V	270pF	
C908	ECUV1H151JCX	S.M.CAP	50V	150pF	
C909	ECKC2H472J	CERAMIC	500V	4.7nF	△
C910	ECKC2H472J	CERAMIC	500V	4.7nF	△
C911	ECUV1H151JCX	S.M.CAP	50V	150pF	
C912	ECEA2CU100	ELECT	160V	10 $\mu$ F	
C913	ECEA1CU101	ELECT	16V	100 $\mu$ F	
C914	ECEA1CU101	ELECT	16V	100 $\mu$ F	
C915	ECEA1CU471	ELECT	16V	470 $\mu$ F	
C916	ECEA2CU100	ELECT	160V	10 $\mu$ F	
C1051	ECEA0JU101	ELECT	6.3V	100 $\mu$ F	
C1052	ECUV1H104ZFX	S.M.CAP	50V	100nF	
C1201	ECUV1H332KBX	S.M.CAP	50V	3.3nF	
C1202	ECUV1H332KBX	S.M.CAP	50V	3.3nF	
C1203	ECUV1H332KBX	S.M.CAP	50V	3.3nF	
C1204	ECUV1H332KBX	S.M.CAP	50V	3.3nF	
C1205	ECUV1H103ZFX	S.M.CAP	50V	10nF	
C1206	ECEA1HU4R7	ELECT	50V	4.7 $\mu$ F	
C1207	ECUV1H472KBX	S.M.CAP	50V	4.7nF	
C1208	ECUV1H390JCX	S.M.CAP	50V	39pF	
C1209	ECUV1H390JCX	S.M.CAP	50V	39pF	
C1210	ECUV1H103ZFX	S.M.CAP	50V	10nF	
C1211	ECUV1H470JCX	S.M.CAP	50V	47pF	
C1212	ECEA1CU470	ELECT	16V	47 $\mu$ F	
C1213	ECUV1H103ZFX	S.M.CAP	50V	10nF	
C1214	ECEA1CU470	ELECT	16V	47 $\mu$ F	
C1215	ECUV1H103ZFX	S.M.CAP	50V	10nF	
C1217	ECUV1H104ZFX	S.M.CAP	50V	100nF	
C1219	ECEA1CU471	ELECT	16V	470 $\mu$ F	
C1220	ECUV1H103ZFX	S.M.CAP	50V	10nF	
C1221	ECEA0JU102	ELECT	6.3V	1000 $\mu$ F	
C1222	ECUV1H104ZFX	S.M.CAP	50V	100nF	
C1223	ECEA1CU101	ELECT	16V	100 $\mu$ F	
C1224	ECEA0JU222	ELECT	6.3V	2200 $\mu$ F	
C1225	ECEA0JM472GE	ELECT	6.3V	4.7nF	

Ref No.	Part No.	Description
C2102	ECUV1H391KBX S.M.CAP	50V 390pF
C2103	ECUV1H102KBX S.M.CAP	50V 1nF
C2104	ECUV1H102KBX S.M.CAP	50V 1nF
C2107	ECUV1H391KBX S.M.CAP	50V 390pF
C2108	ECEA1CM101GBELECT	16V 100pF
C2109	ECUV1H223KBX S.M.CAP	50V 22nF
C2110	ECEA1CM100GBELECT	16V 10pF
C2111	ECUV1H104ZFX S.M.CAP	50V 100nF
C2112	ECEA1CM100GBELECT	16V 10pF
C2113	ECUV1H102KBX S.M.CAP	50V 1nF
C2114	ECUV1H104ZFX S.M.CAP	50V 100nF
C2115	ECUV1H471KBX S.M.CAP	50V 470pF
C2116	ECEA1HM3R3GBELECT	50V 3R3 $\mu$ F
C2117	ECUV1H471KBX S.M.CAP	50V 470pF
C2118	ECUV1H104ZFX S.M.CAP	50V 100nF
C2119	ECEA1CM100GBELECT	16V 10pF
C2120	ECUV1H104ZFX S.M.CAP	50V 100nF
C2121	ECUV1H104ZFX S.M.CAP	50V 100nF
C2122	ECUV1H104ZFX S.M.CAP	50V 100nF
C2123	ECEA1CM100GBELECT	16V 10pF
C2124	ECUV1H104ZFX S.M.CAP	50V 100nF
C2125	ECUV1H030CCX S.M.CAP	50V 30pF
C2126	ECUV1H030CCX S.M.CAP	50V 30pF
C2127	ECEA1CM100GBELECT	16V 10pF
C2307	ECEA1CM470GBELECT	16V 47pF
C2308	ECEA1CM470GBELECT	16V 47pF
C2309	ECEA1CM101GBELECT	16V 100pF
C2310	ECEA1CM470GBELECT	16V 47pF
C2312	ECUV1H104ZFX S.M.CAP	50V 100nF
C2313	ECUV1H103KBX S.M.CAP	50V 10nF
C2314	ECUV1H104ZFX S.M.CAP	50V 100nF
C2315	ECUV1H103KBX S.M.CAP	50V 10nF
C2316	ECUV1H103ZFX S.M.CAP	50V 10nF
C2317	ECEA1CM470GBELECT	16V 47pF
C2318	ECUV1H222KBX S.M.CAP	50V 2.2nF
C2319	ECUV1H222KBX S.M.CAP	50V 2.2nF
C2651	ECUV1H103KBX S.M.CAP	50V 10nF
C2652	ECUV1H103KBX S.M.CAP	50V 10nF
C3001	ECEA1HUR47 ELECT	50V 0.47 $\mu$ F
C3002	ECEA1HUR47 ELECT	50V 0.47 $\mu$ F
C3003	ECEA1EM4R7GBELECT	25V 4R7 $\mu$ F
C3004	ECEA1HU4R7 ELECT	50V 4.7 $\mu$ F
C3005	ECEA1HM4R7GBELECT	50V 4R7 $\mu$ F
C3006	ECUV1H473ZFX S.M.CAP	50V 47nF
C3007	ECEA1HM470GBELECT	50V 47pF
C3011	ECUV1H473ZFX S.M.CAP	50V 47nF
C3012	ECEA1CM470GBELECT	16V 47pF
C3013	ECUV1H104ZFX S.M.CAP	50V 100nF
C3014	ECUV1H104ZFX S.M.CAP	50V 100nF
C3017	ECEA1CN470 ELECT	16V 47 $\mu$ F
C3018	ECUV1H102KBX S.M.CAP	50V 1nF
C3019	ECUV1H102KBX S.M.CAP	50V 1nF
C3021	ECUV1H102KBX S.M.CAP	50V 1nF
C3023	ECEA1CM470GBELECT	16V 47pF
C3024	ECUV1H473ZFX S.M.CAP	50V 47nF
C3025	ECUV1H102KBX S.M.CAP	50V 1nF
C3026	ECEA1HUR47 ELECT	50V 0.47 $\mu$ F
C3027	ECEA1HUR47 ELECT	50V 0.47 $\mu$ F
C3028	ECUV1H221JX S.M.CAP	50V 220pF
C3029	ECUV1H221JX S.M.CAP	50V 220pF
C3030	ECUV1H221JX S.M.CAP	50V 220pF
C3031	ECUV1H221JX S.M.CAP	50V 220pF
C3032	ECEA1HUR47 ELECT	50V 0.47 $\mu$ F
C3033	ECEA1HUR47 ELECT	50V 0.47 $\mu$ F
C3034	ECUV1H221JX S.M.CAP	50V 220pF
C3035	ECUV1H221JX S.M.CAP	50V 220pF
C3036	ECUV1H222KBX S.M.CAP	50V 2.2nF
C3037	ECUV1H561JCX S.M.CAP	50V 560pF
C3038	ECEA1CM470GBELECT	16V 47pF
C3039	ECEA1CM470GBELECT	16V 47pF
C3040	ECEA1HMR47GBELECT	50V R47 $\mu$ F

Ref No.	Part No.	Description
C3041	ECEA1HMR47GBELECT	50V R47 $\mu$ F
C3043	ECEA1HM4R7GBELECT	50V 4R7 $\mu$ F
C3045	ECUV1H104ZFX S.M.CAP	50V 100nF
C3050	ECUV1H222KBX S.M.CAP	50V 2.2nF
C3051	ECUV1H222KBX S.M.CAP	50V 2.2nF
C3052	ECUV1H561JCX S.M.CAP	50V 560pF
C3053	ECUV1H561JCX S.M.CAP	50V 560pF
C3054	ECUV1H222KBX S.M.CAP	50V 2.2nF
C3055	ECUV1H561JCX S.M.CAP	50V 560pF
C3056	ECCR1H101J CERAMIC	50V 100pF
C3062	ECUV1H104ZFX S.M.CAP	50V 100nF
C3071	ECUV1H104ZFX S.M.CAP	50V 100nF
C3151	ECUV1H561JCX S.M.CAP	50V 560pF
C3152	ECUV1H561JCX S.M.CAP	50V 560pF
C3501	ECUV1H104ZFX S.M.CAP	50V 100nF
C3502	ECEA1CU101 ELECT	16V 100 $\mu$ F
C3503	ECUV1H103ZFX S.M.CAP	50V 10nF
C3504	ECUV1H102JCX S.M.CAP	50V 1nF
C3505	ECUV1H104ZFX S.M.CAP	50V 100nF
C3506	ECEA1CU470 ELECT	16V 47 $\mu$ F
C3507	ECEA1CU470 ELECT	16V 47 $\mu$ F
C3508	ECUV1H473ZFX S.M.CAP	50V 47nF
C3509	ECUV1H103ZFX S.M.CAP	50V 10nF
C3510	ECEA0JU102 ELECT	6.3V 1000 $\mu$ F
C3511	ECUV1H103ZFX S.M.CAP	50V 10nF

## DIODES

D251	MA2180TP	DIODE
D252	MA165TA5	DIODE
D253	MA700TA5	DIODE
D254	MA700TA5	DIODE
D310	MA165TA5	DIODE
D311	MA29TA5	DIODE
D312	MA29TA5	DIODE
D354	ERA22-04V1	DIODE
D355	ERA22-04V1	DIODE
D356	ERA22-04V1	DIODE
D357	MA165TA5	DIODE
D358	MA165TA5	DIODE
D359	MA165TA5	DIODE
D360	MA4150	DIODE
D451	MA165TA5	DIODE
D452	MA165TA5	DIODE
D454	ERA15-02V3	DIODE
D456	MA2160BLFS	DIODE
D501	MA165TA5	DIODE
D502	EU02	DIODE
D551	ERD07-15L7	DIODE
D552	TVSRU2AM	DIODE
D554	AU02V0	DIODE
D556	MA166TA5	DIODE
D601	MA165TA5	DIODE
D602	MA165TA5	DIODE
D604	MA165TA5	DIODE
D605	MA165TA5	DIODE
D606	MA165TA5	DIODE
D609	MA167TA5	DIODE
D701	MA165TA5	DIODE
D702	MA4056	DIODE
D801	MA165TA5	DIODE
D802	MA165TA5	DIODE
D803	MA165TA5	DIODE
D804	ERA15-02V3	DIODE
D805	EU02	DIODE
D806	RBV4-08	DIODE
D807	EU02	DIODE
D808	PC120FY	DIODE
D809	MA165TA5	DIODE
D851	EU02	DIODE

Ref No.	Part No.	Description	
D852	ERD32-02L7	DIODE	
D853	FML22SLF610	DIODE	
D854	RU4AMLF-M1	DIODE	
D855	RU4BLF-L1	DIODE	
D856	MA4047	DIODE	
D857	MA4300	DIODE	
D858	MA29TA5	DIODE	
D901	MA165TA5	DIODE	
D902	MA165TA5	DIODE	
D1201	LN81RPHL	DIODE	
D1203	MA4082	DIODE	
D1204	TVSS1WBS10	DIODE	
D1205	MA165TA5	DIODE	
D1207	MA165TA5	DIODE	
D1208	MA165TA5	DIODE	
D1209	MA165TA5	DIODE	
D2303	MA165TA5	DIODE	
D2304	MA4091	DIODE	
D3001	MA4120	DIODE	
D3003	MA4082	DIODE	
D3004	MA4100	DIODE	
D3005	MA4120	DIODE	
D3006	MA4120	DIODE	
D3007	MA4120	DIODE	
D3008	MA4082	DIODE	
D3009	MA4082	DIODE	
D3010	MA4082	DIODE	
D3011	MA4082	DIODE	
D3012	MA4120	DIODE	
D3013	MA4120	DIODE	
D3014	MA4120	DIODE	
D3015	MA4120	DIODE	
D3016	MA4120	DIODE	
D3018	MA165TA5	DIODE	
D3019	MA165TA5	DIODE	
D3501	MA165TA5	DIODE	
<b>FUSES</b>			
F801	19181-3.15	FUSE	△
F851	TR5-T1250	FUSE	△
F852	TR5-T2000	FUSE	△
F853	TR5-T2000	FUSE	△
F8011	EYF52BC	FUSE HOLDER	
F8012	EYF52BC	FUSE HOLDER	
<b>SOCKETS</b>			
H1202	832AG11D-ESL	I.C. SOCKET	
<b>INTEGRATED CIRCUITS</b>			
IC102	LA7577N	V.I.F.	
IC103	L78M12MRB	12V REGULATOR	
IC1051	RPM-637CBRL	L.E.D. RECEIVER	
IC1201	CCU3000I-05	CENTRAL CONTROL UNIT	
IC1202	X24C16P-J1	EAROM	
IC1203	27C010-08AL1	EPROM	
IC1205	MN1280R	RESET	
IC1206	L78M05MRB	5V REGULATOR	
IC2101	MSP3410-15	AUDIO PROCESSOR	
IC2301	AN78L08TA	8V REGULATOR	
IC251	LA4280-TV	AUDIO OUTPUT	
IC3001	TEA6415C	A.V. SWITCHING	
IC3501	UD61256DC-08	DYNAMIC RAM	
IC3502	TPU3040-20	TEXT PROCESSOR	
IC351	TDA6103Q	R.G.B. AMPLIFIER	

Ref No.	Part No.	Description
IC451	TDA8175-3	VERTICAL OUTPUT
IC601	VDP3108-25	VIDEO PROCESSOR
IC701	TEA2031A	HORIZONTAL OUTPUT
IC801	TDA4601	POWER SUPPLY
IC851	L78M12MRB	12V REGULATOR
<b>TERMINALS AND LINKS</b>		
JA.1	ERJ6GEY0R00	WIRE LINK
JA.1	ERJ8GEY0R00	WIRE LINK
JA.10	ERJ6GEY0R00	WIRE LINK
JA.11	ERJ8GEY0R00	WIRE LINK
JA.12	ERJ8GEY0R00	WIRE LINK
JA.13	ERJ6GEY0R00	WIRE LINK
JA.14	ERJ8GEY0R00	WIRE LINK
JA.15	ERJ8GEY0R00	WIRE LINK
JA.16	ERJ8GEY0R00	WIRE LINK
JA.17	ERJ8GEY0R00	WIRE LINK
JA.18	ERJ6GEY0R00	WIRE LINK
JA.19	ERJ6GEY0R00	WIRE LINK
JA.2	ERJ6GEY0R00	WIRE LINK
JA.2	ERJ8GEY0R00	WIRE LINK
JA.20	ERJ6GEY0R00	WIRE LINK
JA.21	ERJ6GEY0R00	WIRE LINK
JA.22	ERJ8GEY0R00	WIRE LINK
JA.24	ERJ6GEY0R00	WIRE LINK
JA.25	ERJ8GEY0R00	WIRE LINK
JA.26	ERJ6GEY0R00	WIRE LINK
JA.27	ERJ6GEY0R00	WIRE LINK
JA.28	ERJ6GEY0R00	WIRE LINK
JA.29	ERJ6GEY0R00	WIRE LINK
JA.3	ERJ8GEY0R00	WIRE LINK
JA.30	ERJ6GEY0R00	WIRE LINK
JA.34	ERJ6GEY0R00	WIRE LINK
JA.35	ERJ6GEY0R00	WIRE LINK
JA.36	ERJ6GEY0R00	WIRE LINK
JA.37	ERJ6GEY0R00	WIRE LINK
JA.38	ERJ6GEY0R00	WIRE LINK
JA.4	ERJ8GEY0R00	WIRE LINK
JA.5	ERJ6GEY0R00	WIRE LINK
JA.6	ERJ8GEY0R00	WIRE LINK
JA.7	ERJ8GEY0R00	WIRE LINK
JA.8	ERJ6GEY0R00	WIRE LINK
JA.9	ERJ6GEY0R00	WIRE LINK
JA1	ERJ6GEY0R00	WIRE LINK
JA10	ERJ6GEY0R00	WIRE LINK
JA11	ERJ6GEY0R00	WIRE LINK
JA12	ERJ6GEY0R00	WIRE LINK
JA13	ERJ6GEY0R00	WIRE LINK
JA14	ERJ6GEY0R00	WIRE LINK
JA15	ERJ6GEY0R00	WIRE LINK
JA16	ERJ6GEY0R00	WIRE LINK
JA17	ERJ6GEY0R00	WIRE LINK
JA18	ERJ6GEY0R00	WIRE LINK
JA19	ERJ6GEY0R00	WIRE LINK
JA2	ERJ6GEY0R00	WIRE LINK
JA20	ERJ6GEY0R00	WIRE LINK
JA21	ERJ6GEY0R00	WIRE LINK
JA22	ERJ6GEY0R00	WIRE LINK
JA23	ERJ6GEY0R00	WIRE LINK
JA24	ERJ6GEY0R00	WIRE LINK
JA25	ERJ6GEY0R00	WIRE LINK
JA26	ERJ6GEY0R00	WIRE LINK
JA27	ERJ6GEY0R00	WIRE LINK
JA28	ERJ6GEY0R00	WIRE LINK
JA29	ERJ6GEY0R00	WIRE LINK
JA3	ERJ6GEY0R00	WIRE LINK
JA30	ERJ6GEY0R00	WIRE LINK
JA31	ERJ6GEY0R00	WIRE LINK
JA32	ERJ6GEY0R00	WIRE LINK

Ref No.	Part No.	Description
JA33	ERJ6GEY0R00	WIRE LINK
JA4	ERJ6GEY0R00	WIRE LINK
JA5	ERJ6GEY0R00	WIRE LINK
JA6	ERJ6GEY0R00	WIRE LINK
JA7	ERJ6GEY0R00	WIRE LINK
JA8	ERJ6GEY0R00	WIRE LINK
JA9	ERJ6GEY0R00	WIRE LINK
JK2301	TJB18644	AV TERMINAL
JK3001	TJS8E007	21PIN TERMINAL
JK3101	TJS8E007	21PIN TERMINAL
JSB.5	ERJ6GEY0R00	WIRE LINK
JSE.31	ERJ6GEY0R00	WIRE LINK
JS E011	ERJ6GEY0R00	WIRE LINK
JS E012	ERJ6GEY0R00	WIRE LINK
JS E013	ERJ6GEY0R00	WIRE LINK
JS E014	ERJ6GEY0R00	WIRE LINK
JS E015	ERJ6GEY0R00	WIRE LINK
JS E016	ERJ6GEY0R00	WIRE LINK
JS E032	ERJ6GEY0R00	WIRE LINK
J196	EXCELSA35T	COIL
<b>COILS</b>		
LC101	ELB5A077	COIL
L001	TLT100K991R	COIL
L002	TLT047K991R	COIL
L102	EIV7EN200B	COIL
L104	EIV7EN201B	COIL
L105	TLT100K991R	COIL
L106	TLT022K991R	COIL
L109	TLTR47K991R	COIL
L111	TLTR56K991R	COIL
L112	EXCELSA35T	COIL
L113	EXCELSA35T	COIL
L114	TLT100K991R	COIL
L202	TLT068K991R	COIL
L251	EXCELSA35T	COIL
L301	TLT047K991R	COIL
L302	EXCEMT101BT	COIL
L303	EXCEMT101BT	COIL
L304	EXCEMT101BT	COIL
L352	SDL-4101	COIL
L353	SDL-4101	COIL
L354	SDL-4101	COIL
L552	ELH5L421	COIL
L553	ELC08D055	COIL
L554	297-23293	COIL
L601	TLT047K991R	COIL
L602	EXCELD35V	COIL
L603	TLT047K991R	COIL
L604	EXCELD35V	COIL
L606	TLT015K991R	COIL
L607	EXCELSA35T	COIL
L701	ELC10D006	COIL
L801	298-19711	COIL
L802	TLT022K991R	COIL
L803	ELF18D490F	COIL
L804	ELESN4R7KA	COIL
L805	298-82858001	COIL
L851	EXCELD35V	COIL
L852	EXCELSA35T	COIL
L853	ELEIE470KA	COIL
L854	ELEIN470KA	COIL
L855	ELEIN470KA	COIL
L856	ELEIN470KA	COIL
L901	EXCELSA24T	COIL
L902	EXCELSA24T	COIL
L1051	TLT331K991R	COIL
L1201	TLT047K991R	COIL
L1202	TLT047K991R	COIL

Ref No.	Part No.	Description
L1203	TLT047K991R	COIL
L1204	EXCELD35V	COIL
L2101	TLT100K991R	COIL
L2102	TLT3R9K991R	COIL
L2103	EXCELSA35T	COIL
L2104	EXCELSA35T	COIL
L3151	EXCEMT101BT	COIL
L3152	EXCEMT101BT	COIL
L3153	EXCEMT101BT	COIL
L3154	EXCEMT101BT	COIL
L3155	ELEBT6R8KA	COIL
L3156	ELEBT6R8KA	COIL
L3158	EXCELSA39V	COIL
L3501	EXCELD35V	COIL
L3502	EXCELD35V	COIL
L3503	ELESN4R7KA	COIL
L3504	EXCELSA35T	COIL
<b>TRANSISTORS</b>		
Q101	BF370-126	TRANSISTOR
Q102	BF370-126	TRANSISTOR
Q103	BC847B	TRANSISTOR
Q201	BC847B	TRANSISTOR
Q202	BC847B	TRANSISTOR
Q251	2SD1328STX	TRANSISTOR
Q252	2SD1328STX	TRANSISTOR
Q253	BC847B	TRANSISTOR
Q301	BC857B	TRANSISTOR
Q302	BC847B	TRANSISTOR
Q303	BC857B	TRANSISTOR
Q304	BC847B	TRANSISTOR
Q305	BC857B	TRANSISTOR
Q306	BC847B	TRANSISTOR
Q307	BC847B	TRANSISTOR
Q308	BC847B	TRANSISTOR
Q309	BC847B	TRANSISTOR
Q310	BC847B	TRANSISTOR
Q311	BC847B	TRANSISTOR
Q351	2SA1767	TRANSISTOR
Q352	2SA1767	TRANSISTOR
Q353	2SA1767	TRANSISTOR
Q451	BC847B	TRANSISTOR
Q501	BC847B	TRANSISTOR
Q502	BC847B	TRANSISTOR
Q503	2SD836-AL	TRANSISTOR
Q504	BC847B	TRANSISTOR
Q551	2SD1577LB	TRANSISTOR
Q552	2SC1473-RN	TRANSISTOR
Q701	BC857B	TRANSISTOR
Q801	2SC1573	TRANSISTOR
Q802	S2000NLBMA	TRANSISTOR
Q851	2SD1273PLB	TRANSISTOR
Q852	TFD312SOF632	DIODE
Q901	BC847B	TRANSISTOR
Q902	BC847B	TRANSISTOR
Q903	BC847B	TRANSISTOR
Q904	BC857B	TRANSISTOR
Q905	BC847B	TRANSISTOR
Q906	BC847B	TRANSISTOR
Q907	BC857B	TRANSISTOR
Q908	2SA1535ARLB	TRANSISTOR
Q909	2SC3944ARLB	TRANSISTOR
Q1201	BC847B	TRANSISTOR
Q1202	BC847B	TRANSISTOR
Q1205	BC847B	TRANSISTOR
Q1206	BC847B	TRANSISTOR
Q1207	BC847B	TRANSISTOR
Q1208	BC857B	TRANSISTOR
Q2101	BC860B	TRANSISTOR

Ref No.	Part No.	Description
Q2102	BC860B	TRANSISTOR
Q2301	BC857B	TRANSISTOR
Q2302	BC857B	TRANSISTOR
Q2305	2SD1328STX	TRANSISTOR
Q2306	2SD1328STX	TRANSISTOR
Q2307	BC860B	TRANSISTOR
Q2308	BC857B	TRANSISTOR
Q2309	BC860B	TRANSISTOR
Q2310	BC860B	TRANSISTOR
Q3001	2SC1318-S	TRANSISTOR
Q3004	BC847B	TRANSISTOR
Q3005	BC847B	TRANSISTOR
Q3006	2SC1318-S	TRANSISTOR
Q3011	BC857B	TRANSISTOR
Q3012	2SD1328STX	TRANSISTOR
Q3013	2SD1328STX	TRANSISTOR

**RESISTOR**

R.378	ERJ6GEY0R00	WIRE LINK
R.379	ERJ6GEY0R00	WIRE LINK
R.380	ERJ6GEY0R00	WIRE LINK
R.604	ERJ6GEY0R00	WIRE LINK
R.622	ERJ6GEY0R00	WIRE LINK
R.925	ERJ6GEY0R00	WIRE LINK
R.926	ERJ6GEY0R00	WIRE LINK
R001	ERJ6GEYJ223	S.M.CARB 0.1W 5% 22KΩ
R002	ERJ6GEYJ101	S.M.CARB 0.1W 5% 100Ω
R003	ERJ6GEYJ101	S.M.CARB 0.1W 5% 100Ω
R004	ERJ6GEYJ101	S.M.CARB 0.1W 5% 100Ω
R107	ERJ6GEY0R00	WIRE LINK
R109	ERJ6GEY0R00	WIRE LINK
R113	ERJ6GEYJ153	S.M.CARB 0.1W 5% 15KΩ
R116	ERJ6GEYJ103	S.M.CARB 0.1W 5% 10KΩ
R117	ERJ6GEYJ683	S.M.CARB 0.1W 5% 68KΩ
R118	ERJ6ENF4701	S.M.CARB0.125W 1% 700Ω
R119	ERJ6ENF1202	S.M.CARB0.125W 1% 2KΩ
R120	ERJ6GEYJ102	S.M.CARB 0.1W 5% 1KΩ
R121	ERJ6GEYJ221	S.M.CARB 0.1W 5% 220Ω
R122	ERJ6GEYJ271	S.M.CARB 0.1W 5% 270Ω
R123	ERJ6GEY0R00	WIRE LINK
R124	ERJ6GEYJ682	S.M.CARB 0.1W 5% 6K8Ω
R125	ERJ6GEYJ102	S.M.CARB 0.1W 5% 1KΩ
R126	EVNDXAA03B53	CONTROL 5KΩ
R127	ERDS1TJ121	CARBON 0.5W 5% 120Ω
R128	ERJ6GEYJ271	S.M.CARB 0.1W 5% 270Ω
R129	ERJ6GEYJ332	S.M.CARB 0.1W 5% 3K3Ω
R130	ERJ6GEYJ101	S.M.CARB 0.1W 5% 100Ω
R131	ERJ6GEYJ102	S.M.CARB 0.1W 5% 1KΩ
R132	ERJ6GEYJ102	S.M.CARB 0.1W 5% 1KΩ
R133	ERJ6GEYJ682	S.M.CARB 0.1W 5% 6K8Ω
R134	ERJ6GEYJ222	S.M.CARB 0.1W 5% 2K2Ω
R136	ERJ6GEYJ473	S.M.CARB 0.1W 5% 47KΩ
R137	ERJ6GEYJ563	S.M.CARB 0.1W 5% 56KΩ
R138	ERJ6GEYJ101	S.M.CARB 0.1W 5% 100Ω
R139	ERJ6GEY0R00	WIRE LINK
R141	ERJ6GEYJ102	S.M.CARB 0.1W 5% 1KΩ
R142	ERJ6GEY0R00	WIRE LINK
R143	ERJ6GEY0R00	WIRE LINK
R145	ERJ6GEYJ122	S.M.CARB 0.1W 5% 1K2Ω
R146	ERJ6GEYJ471	S.M.CARB 0.1W 5% 470Ω
R148	ERJ6GEY0R00	WIRE LINK
R149	ERJ6GEY0R00	WIRE LINK
R201	ERJ6GEYJ471	S.M.CARB 0.1W 5% 470Ω
R203	ERJ6GEY0R00	WIRE LINK
R204	ERJ6GEYJ471	S.M.CARB 0.1W 5% 470Ω
R205	ERJ6GEYJ332	S.M.CARB 0.1W 5% 3K3Ω
R206	ERJ6GEYJ681	S.M.CARB 0.1W 5% 680Ω
R207	ERJ6GEYJ103	S.M.CARB 0.1W 5% 10KΩ
R208	ERJ6GEYJ222	S.M.CARB 0.1W 5% 2K2Ω

Ref No.	Part No.	Description
R209	ERJ6GEYJ332	S.M.CARB 0.1W 5% 3K3Ω
R210	ERJ6GEYJ471	S.M.CARB 0.1W 5% 470Ω
R251	ERJ6GEYJ101	S.M.CARB 0.1W 5% 100Ω
R252	ERJ6GEYJ272	S.M.CARB 0.1W 5% 2K7Ω
R253	ERJ6GEYJ103	S.M.CARB 0.1W 5% 10KΩ
R254	ERJ6GEYJ101	S.M.CARB 0.1W 5% 100Ω
R255	ERJ6GEYJ103	S.M.CARB 0.1W 5% 10KΩ
R256	ERJ6GEYJ471	S.M.CARB 0.1W 5% 470Ω
R257	ERJ6GEYJ330	S.M.CARB 0.1W 5% 33Ω
R258	ERJ6GEYJ272	S.M.CARB 0.1W 5% 2K7Ω
R259	ERJ6GEYJ330	S.M.CARB 0.1W 5% 33Ω
R260	ERJ6GEYJ103	S.M.CARB 0.1W 5% 10KΩ
R261	ERJ6GEYJ471	S.M.CARB 0.1W 5% 470Ω
R262	ERJ6GEYJ103	S.M.CARB 0.1W 5% 10KΩ
R263	ERJ6GEYJ104	S.M.CARB 0.1W 5% 100KΩ
R264	ERJ6GEYJ473	S.M.CARB 0.1W 5% 47KΩ
R265	ERD25TJ2R2	CARBON 0.25W 5% 2R2Ω
R266	ERD25TJ2R2	CARBON 0.25W 5% 2R2Ω
R267	ERF7ZK4R7	WOUND 7W 10% 4R7Ω ▲
R268	ERJ6GEYJ103	S.M.CARB 0.1W 5% 10KΩ
R269	ERJ6GEYJ273	S.M.CARB 0.1W 5% 27KΩ
R271	ERJ6GEYJ103	S.M.CARB 0.1W 5% 10KΩ
R272	ERF7ZK5R6	WOUND 7W 10% 5R6Ω ▲
R273	ERD25TJ273	CARBON 0.25W 5% 27KΩ
R301	ERJ6GEYJ750	S.M.CARB 0.1W 5% 75Ω
R302	ERJ6GEYJ391	S.M.CARB 0.1W 5% 390Ω
R303	ERJ6GEYJ471	S.M.CARB 0.1W 5% 470Ω
R304	ERJ6GEYJ471	S.M.CARB 0.1W 5% 470Ω
R305	ERJ6GEYJ750	S.M.CARB 0.1W 5% 75Ω
R306	ERJ6GEYJ391	S.M.CARB 0.1W 5% 390Ω
R307	ERJ6GEYJ471	S.M.CARB 0.1W 5% 470Ω
R308	ERJ6GEYJ471	S.M.CARB 0.1W 5% 470Ω
R309	ERJ6GEYJ750	S.M.CARB 0.1W 5% 75Ω
R310	ERJ6GEYJ391	S.M.CARB 0.1W 5% 390Ω
R311	ERJ6GEYJ471	S.M.CARB 0.1W 5% 470Ω
R312	ERJ6GEYJ471	S.M.CARB 0.1W 5% 470Ω
R313	ERJ6GEYJ101	S.M.CARB 0.1W 5% 100Ω
R314	ERJ6GEYJ332	S.M.CARB 0.1W 5% 3K3Ω
R315	ERJ6GEYJ332	S.M.CARB 0.1W 5% 3K3Ω
R316	ERJ6GEYJ332	S.M.CARB 0.1W 5% 3K3Ω
R321	ERJ6GEYJ473	S.M.CARB 0.1W 5% 47KΩ
R322	ERJ6GEYJ473	S.M.CARB 0.1W 5% 47KΩ
R323	ERJ6GEYJ103	S.M.CARB 0.1W 5% 10KΩ
R324	ERJ6GEYJ104	S.M.CARB 0.1W 5% 100KΩ
R351	ERJ6GEYJ102	S.M.CARB 0.1W 5% 1KΩ
R352	ERJ6GEYJ102	S.M.CARB 0.1W 5% 1KΩ
R353	ERJ6GEYJ102	S.M.CARB 0.1W 5% 1KΩ
R354	ERJ6GEYJ102	S.M.CARB 0.1W 5% 1KΩ
R355	ERJ6GEYJ102	S.M.CARB 0.1W 5% 1KΩ
R356	ERJ6GEYJ102	S.M.CARB 0.1W 5% 1KΩ
R357	ERG1SJ683	METAL 1W 5% 68KΩ ▲
R358	ERG1SJ683	METAL 1W 5% 68KΩ ▲
R359	ERG1SJ683	METAL 1W 5% 68KΩ ▲
R363	ERD25TJ103	CARBON 0.25W 5% 10KΩ
R364	ERD25TJ103	CARBON 0.25W 5% 10KΩ
R365	ERD25TJ103	CARBON 0.25W 5% 10KΩ
R366	ERDS1TJ152	CARBON 0.5W 5% 1K5Ω
R367	ERDS1TJ152	CARBON 0.5W 5% 1K5Ω
R368	ERDS1TJ152	CARBON 0.5W 5% 1K5Ω
R369	ERD25TJ203	CARBON 0.25W 5% 20KΩ
R370	ERJ6GEYJ822	S.M.CARB 0.1W 5% 8K2Ω
R372	ERQ12AJ121	FUSABLE 12W 5% 120Ω ▲
R373	ERJ6GEYJ220	S.M.CARB 0.1W 5% 22Ω
R374	ERD25TJ274	CARBON 0.25W 5% 270KΩ
R375	ERJ6GEYJ684	S.M.CARB 0.1W 5% 680KΩ
R376	ERJ6GEYJ183	S.M.CARB 0.1W 5% 18KΩ
R377	ERQ12HKB82	FUSABLE 12W 10% R82Ω ▲
R381	ERJ6GEYJ102	S.M.CARB 0.1W 5% 1KΩ
R382	ERJ6GEYJ102	S.M.CARB 0.1W 5% 1KΩ
R383	ERJ6GEYJ102	S.M.CARB 0.1W 5% 1KΩ

Ref No.	Part No.	Description				
R451	ERJ6GEYJ223	S.M.CARB	0.1W	5%	22KΩ	
R452	ERJ6GEYJ472	S.M.CARB	0.1W	5%	4K7Ω	
R453	ERJ6GEYJ104	S.M.CARB	0.1W	5%	100KΩ	
R455	ERJ6GEYJ472	S.M.CARB	0.1W	5%	4K7Ω	
R456	ERJ6GEYJ103	S.M.CARB	0.1W	5%	10KΩ	
R457	ERJ6GEYJ682	S.M.CARB	0.1W	5%	6K8Ω	
R458	ERD25TJ1R5	CARBON	0.25W	5%	1R5Ω	
R459	ERJ6GEYJ470	S.M.CARB	0.1W	5%	47Ω	
R460	ERJ6GEYJ183	S.M.CARB	0.1W	5%	18KΩ	
R461	ERDS1TJ471	CARBON	0.5W	5%	470Ω	
R462	ERJ6GEYJ472	S.M.CARB	0.1W	5%	4K7Ω	
R463	ERJ6GEYJ472	S.M.CARB	0.1W	5%	4K7Ω	
R464	ERW12PKR68	WIRE	12W	10%	R68Ω	
R465	ERJ6GEYJ101	S.M.CARB	0.1W	5%	100Ω	
R466	ERO25CKF1801	METAL	0.25W	1%	1K8Ω ▲	
R467	ERO25CKF1801	METAL	0.25W	1%	1K8Ω ▲	
R471	ERDS1TJ152	CARBON	0.5W	5%	1K5Ω	
R472	ERDS1TJ4R7	CARBON	0.5W	5%	4R7Ω	
R501	ERJ6GEYJ331	S.M.CARB	0.1W	5%	330Ω	
R502	ERJ6GEYJ560	S.M.CARB	0.1W	5%	56Ω	
R503	ERJ6GEYJ273	S.M.CARB	0.1W	5%	27KΩ	
R504	ERJ6GEYJ101	S.M.CARB	0.1W	5%	100Ω	
R506	ERD25TJ560	CARBON	0.25W	5%	56Ω	
R507	ERQ14AJ3R3	METAL	0.25W	5%	3R3Ω ▲	
R509	ERDS1TJ152	CARBON	0.5W	5%	1K5Ω	
R510	ERDS1TJ152	CARBON	0.5W	5%	1K5Ω	
R511	ERJ6GEYJ104	S.M.CARB	0.1W	5%	100KΩ	
R512	ERJ6GEYJ472	S.M.CARB	0.1W	5%	4K7Ω	
R513	ERJ6GEYJ123	S.M.CARB	0.1W	5%	12KΩ	
R514	ERJ6GEYJ123	S.M.CARB	0.1W	5%	12KΩ	
R551	ERW2PKR47	WIREWOUND2W		10%	OR47Ω ▲	
R553	ERG1SJ152	METAL	1W	5%	1.5KΩ ▲	
R554	ERQ14AJW101	FUSABLE	14W	5%	100Ω ▲	
R558	ERDS1TJ124	CARBON	0.5W	5%	120KΩ	
R561	ERJ6GEYJ563	S.M.CARB	0.1W	5%	56KΩ	
R562	ERJ6GEYJ155	S.M.CARB0.125W		5%	1.5MΩ	
R563	ERJ6GEYJ155	S.M.CARB0.125W		5%	1.5MΩ	
R564	ERJ6GEYJ104	S.M.CARB	0.1W	5%	100KΩ	
R566	ERJ6GEYJ273	S.M.CARB	0.1W	5%	27KΩ	
R567	ERJ6GEYJ274	S.M.CARB	0.1W	5%	270KΩ	
R601	ERJ6GEYJ151	S.M.CARB	0.1W	5%	150Ω	
R602	ERJ6GEYJ151	S.M.CARB	0.1W	5%	150Ω	
R603	ERJ6GEYJ750	S.M.CARB	0.1W	5%	75Ω	
R605	ERJ6GEYJ183	S.M.CARB	0.1W	5%	18KΩ	
R606	ERJ6GEYJ472	S.M.CARB	0.1W	5%	4K7Ω	
R607	ERJ6GEYJ103	S.M.CARB	0.1W	5%	10KΩ	
R608	ERJ6GEYJ101	S.M.CARB	0.1W	5%	100Ω	
R609	ERJ6GEYJ101	S.M.CARB	0.1W	5%	100Ω	
R610	ERJ6GEYJ473	S.M.CARB	0.1W	5%	47KΩ	
R611	ERJ6GEYJ102	S.M.CARB	0.1W	5%	1KΩ	
R612	ERJ6GEYJ123	S.M.CARB	0.1W	5%	12KΩ	
R613	ERJ6GEYJ271	S.M.CARB	0.1W	5%	270Ω	
R614	ERJ6GEYJ470	S.M.CARB	0.1W	5%	47Ω	
R615	ERJ6GEYJ333	S.M.CARB	0.1W	5%	33KΩ	
R616	ERJ6GEYJ153	S.M.CARB	0.1W	5%	15KΩ	
R618	ERJ6GEYJ151	S.M.CARB	0.1W	5%	150Ω	
R619	ERJ6GEYJ472	S.M.CARB	0.1W	5%	4K7Ω	
R623	ERJ6GEYJ821	S.M.CARB	0.1W	5%	820Ω	
R701	ERQ12AJ101	FUSABLE	0.5W	5%	100Ω ▲	
R702	ERQ12HJ220	METAL	0.5W	5%	22Ω ▲	
R703	ERG2FJ821	METAL	2W	5%	820Ω ▲	
R704	ERJ6GEYJ563	S.M.CARB	0.1W	5%	56KΩ	
R705	ERJ6GEYJ104	S.M.CARB	0.1W	5%	100KΩ	
R706	ERJ6GEYJ332	S.M.CARB	0.1W	5%	3K3Ω	
R707	ERJ6GEYJ122	S.M.CARB	0.1W	5%	1K2Ω	
R708	ERJ6GEYJ393	S.M.CARB	0.1W	5%	39KΩ	
R709	ERJ6GEYJ393	S.M.CARB	0.1W	5%	39KΩ	
R710	ERJ6GEYJ273	S.M.CARB	0.1W	5%	27KΩ	
R711	ERJ6GEYJ681	S.M.CARB	0.1W	5%	680Ω	
R712	ERJ6GEYJ472	S.M.CARB	0.1W	5%	4K7Ω	


Ref No.	Part No.	Description				
R713	ERG1SJ101	METAL	1W	5%	100Ω	
R801	ERG3FJ682H	METAL	3W	5%	6K8Ω ▲	
R802	ERG2FJ472	METAL	2W	5%	4.7KΩ ▲	
R803	ERX12SJWR47	RESISTOR	12W	5%	R47Ω	
R804	ERJ6GEYJ682	S.M.CARB	0.1W	5%	6K8Ω	
R805	ERJ6GEYJ221	S.M.CARB	0.1W	5%	220Ω	
R806	ERG1SJ823	METAL	1W	5%	82KΩ ▲	
R807	ERO25CKF1201	METAL	0.25W	1%	1K2Ω ▲	
R808	232266296706	THERMISTOR				
R809	ERO25CKF1332	METAL	25W	1%	13KΩ ▲	
R810	ERD25TJ103	CARBON	0.25W	5%	10KΩ	
R811	EVMESA00B33	CERMENT			25% 13KΩ	
R812	ERDS1TJ220	CARBON	0.5W	5%	22Ω	
R813	ERD50FJ334	CARBON	0.5W	5%	330KΩ	
R814	ERF7ZK2R7	WIRE	7W	10%	2R7Ω	
R817	ERG3FJ470	METAL	3W	5%	47Ω ▲	
R818	ERD50FJ564	CARBON	0.5W	5%	560KΩ	
R819	ERD50FJ564	CARBON	0.5W	5%	560KΩ	
R820	ERD75TAJ825	CARBON	0.75W	5%	8M2Ω ▲	
R852	ERJ6GEYJ271	S.M.CARB	0.1W	5%	270Ω	
R853	ERJ6GEYJ101	S.M.CARB	0.1W	5%	100Ω	
R854	ERDS1TJ474	CARBON	0.5W	5%	470KΩ	
R855	ERG2FJ223	METAL	2W	5%	22KΩ ▲	
R856	ERJ6GEYJ102	S.M.CARB	0.1W	5%	1KΩ	
R901	ERJ6GEYJ562	S.M.CARB	0.1W	5%	5K6Ω	
R902	ERJ6GEYJ562	S.M.CARB	0.1W	5%	5K6Ω	
R903	ERJ6GEYJ562	S.M.CARB	0.1W	5%	5K6Ω	
R904	ERJ6GEYJ102	S.M.CARB	0.1W	5%	1KΩ	
R905	ERJ6GEYJ681	S.M.CARB	0.1W	5%	680Ω	
R906	ERJ6GEYJ223	S.M.CARB	0.1W	5%	22KΩ	
R907	ERJ6GEYJ472	S.M.CARB	0.1W	5%	4K7Ω	
R908	ERJ6GEYJ471	S.M.CARB	0.1W	5%	470Ω	
R909	ERJ6GEYJ102	S.M.CARB	0.1W	5%	1KΩ	
R910	ERJ6GEYJ101	S.M.CARB	0.1W	5%	100Ω	
R911	ERJ6GEYJ152	S.M.CARB	0.1W	5%	1K5Ω	
R913	ERJ6GEYJ183	S.M.CARB	0.1W	5%	18KΩ	
R914	ERJ6GEYJ222	S.M.CARB	0.1W	5%	2K2Ω	
R915	ERJ6GEYJ182	S.M.CARB	0.1W	5%	1K8Ω	
R916	ERJ6GEYJ221	S.M.CARB	0.1W	5%	220Ω	
R917	ERJ6GEYJ121	S.M.CARB	0.1W	5%	120Ω	
R919	ERQ14AJ390	FUSABLE	14W	5%	39Ω ▲	
R920	ERQ14AJ390	FUSABLE	14W	5%	39Ω ▲	
R921	ERD25TJ471	CARBON	0.25W	5%	470Ω	
R922	ERD25TJ393	CARBON	0.25W	5%	39KΩ	
R923	ERD25TJ393	CARBON	0.25W	5%	39KΩ	
R924	ERDS1FJ390	CARBON	0.5W	5%	39Ω	
R927	ERD25TJ471	CARBON	0.25W	5%	470Ω	
R928	ERD25TJ2R7	CARBON	0.25W	5%	2R7Ω	
R929	ERDS1FJ471	CARBON	0.5W	5%	470Ω	
R930	ERD25TJ2R7	CARBON	0.25W	5%	2R7Ω	
R931	ERDS1FJ390	CARBON	0.5W	5%	39Ω	
R932	ERDS1FJ101	CARBON	0.5W	5%	100Ω ▲	
R933	ERJ6GEYJ103	S.M.CARB	0.1W	5%	10KΩ	
R934	ERJ6GEYJ222	S.M.CARB	0.1W	5%	2K2Ω	
R935	ERQ14AJ3R9	FUSIBLE	0.25W	5%	3R9Ω ▲	
R936	ERQ1CJP331	METAL	1W	5%	330Ω ▲	
R937	ERQ14AJ100	METAL	0.25W	5%	10Ω ▲	
R1201	ERJ6GEYJ271	S.M.CARB	0.1W	5%	270Ω	
R1202	ERJ6GEYJ101	S.M.CARB	0.1W	5%	100Ω	
R1203	ERJ6GEYJ101	S.M.CARB	0.1W	5%	100Ω	
R1204	ERJ6GEYJ101	S.M.CARB	0.1W	5%	100Ω	
R1205	ERJ6GEYJ101	S.M.CARB	0.1W	5%	100Ω	
R1206	ERJ6GEYJ101	S.M.CARB	0.1W	5%	100Ω	
R1207	ERD25TJ331	CARBON	0.25W	5%	330Ω	
R1208	ERJ6GEYJ223	S.M.CARB	0.1W	5%	22KΩ	
R1209	ERJ6GEYJ472	S.M.CARB	0.1W	5%	4K7Ω	
R1210	ERJ6GEYJ472	S.M.CARB	0.1W	5%	4K7Ω	
R1212	ERJ6GEYJ103	S.M.CARB	0.1W	5%	10KΩ	
R1213	ERJ6GEYJ103	S.M.CARB	0.1W	5%	10KΩ	

Ref No.	Part No.	Description				
R1214	ERJ6GEYJ472	S.M.CARB	0.1W	5%	4K7Ω	
R1215	ERJ6GEYJ101	S.M.CARB	0.1W	5%	100Ω	
R1216	ERJ6GEYJ101	S.M.CARB	0.1W	5%	100Ω	
R1217	ERJ6GEYJ101	S.M.CARB	0.1W	5%	100Ω	
R1218	ERJ6GEYJ472	S.M.CARB	0.1W	5%	4K7Ω	
R1219	ERJ6GEYJ472	S.M.CARB	0.1W	5%	4K7Ω	
R1220	ERJ6GEYJ472	S.M.CARB	0.1W	5%	4K7Ω	
R1221	ERJ6GEYJ103	S.M.CARB	0.1W	5%	10KΩ	
R1222	ERJ6GEYJ103	S.M.CARB	0.1W	5%	10KΩ	
R1224	ERJ6GEYJ103	S.M.CARB	0.1W	5%	10KΩ	
R1225	ERJ6GEYJ472	S.M.CARB	0.1W	5%	4K7Ω	
R1226	ERJ6GEYJ472	S.M.CARB	0.1W	5%	4K7Ω	
R1227	ERJ6GEYJ472	S.M.CARB	0.1W	5%	4K7Ω	
R1229	ERJ6GEY0R00	WIRE LINK				
R1230	ERJ6GEY0R00	WIRE LINK				
R1231	ERJ6GEYJ472	S.M.CARB	0.1W	5%	4K7Ω	
R1232	ERJ6GEYJ103	S.M.CARB	0.1W	5%	10KΩ	
R1233	ERJ6GEYJ472	S.M.CARB	0.1W	5%	4K7Ω	
R1235	ERJ6GEYJ103	S.M.CARB	0.1W	5%	10KΩ	
R1236	ERJ6GEYJ472	S.M.CARB	0.1W	5%	4K7Ω	
R1237	ERJ6GEYJ103	S.M.CARB	0.1W	5%	10KΩ	
R1238	ERJ6GEYJ393	S.M.CARB	0.1W	5%	39KΩ	
R1239	ERJ6GEYJ392	S.M.CARB	0.1W	5%	3K9Ω	
R1240	ERJ6GEYJ392	S.M.CARB	0.1W	5%	3K9Ω	
R1241	ERJ6GEYJ101	S.M.CARB	0.1W	5%	100Ω	
R1242	ERJ6GEYJ101	S.M.CARB	0.1W	5%	100Ω	
R1244	ERJ6GEY0R00	WIRE LINK				
R1245	ERJ6GEYJ222	S.M.CARB	0.1W	5%	2K2Ω	
R1246	ERJ6GEYJ103	S.M.CARB	0.1W	5%	10KΩ	
R1247	ERJ6GEYJ103	S.M.CARB	0.1W	5%	10KΩ	
R1249	ERJ6GEYJ472	S.M.CARB	0.1W	5%	4K7Ω	
R1250	ERJ6GEYJ103	S.M.CARB	0.1W	5%	10KΩ	
R1251	ERJ6GEYJ393	S.M.CARB	0.1W	5%	39KΩ	
R1252	ERX1SJ3R3	METAL	1W	5%	3R3Ω	
R1253	ERJ6GEYJ103	S.M.CARB	0.1W	5%	10KΩ	
R1254	ERJ6GEYJ104	S.M.CARB	0.1W	5%	100KΩ	
R1255	ERJ6GEYJ104	S.M.CARB	0.1W	5%	100KΩ	
R1256	ERJ6GEYJ102	S.M.CARB	0.1W	5%	1KΩ	
R1257	ERJ6GEYJ101	S.M.CARB	0.1W	5%	100Ω	
R1258	ERJ6GEYJ472	S.M.CARB	0.1W	5%	4K7Ω	
R1260	ERDS1FJ121	CARBON	0.5W	5%	120Ω	
R2101	ERJ6GEYJ471	S.M.CARB	0.1W	5%	470Ω	
R2102	ERJ6GEYJ222	S.M.CARB	0.1W	5%	2K2Ω	
R2103	ERJ6GEYJ471	S.M.CARB	0.1W	5%	470Ω	
R2104	ERJ6GEYJ471	S.M.CARB	0.1W	5%	470Ω	
R2105	ERJ6GEYJ222	S.M.CARB	0.1W	5%	2K2Ω	
R2106	ERJ6GEYJ183	S.M.CARB	0.1W	5%	18KΩ	
R2107	ERJ6GEYJ471	S.M.CARB	0.1W	5%	470Ω	
R2108	ERJ6GEYJ101	S.M.CARB	0.1W	5%	100Ω	
R2109	ERJ6GEYJ101	S.M.CARB	0.1W	5%	100Ω	
R2110	ERJ6GEYJ103	S.M.CARB	0.1W	5%	10KΩ	
R2111	ERJ6GEYJ473	S.M.CARB	0.1W	5%	47KΩ	
R2301	ERJ6GEYJ222	S.M.CARB	0.1W	5%	2K2Ω	
R2302	ERJ6GEYJ222	S.M.CARB	0.1W	5%	2K2Ω	
R2303	ERJ6GEYJ471	S.M.CARB	0.1W	5%	470Ω	
R2304	ERJ6GEYJ471	S.M.CARB	0.1W	5%	470Ω	
R2313	ERJ6GEYJ101	S.M.CARB	0.1W	5%	100Ω	
R2314	ERJ6GEYJ101	S.M.CARB	0.1W	5%	100Ω	
R2315	ERJ6GEYJ473	S.M.CARB	0.1W	5%	47KΩ	
R2316	ERJ6GEYJ104	S.M.CARB	0.1W	5%	100KΩ	
R2318	ERJ6GEYJ104	S.M.CARB	0.1W	5%	100KΩ	
R2321	ERJ6GEYJ103	S.M.CARB	0.1W	5%	10KΩ	
R2322	ERJ6GEYJ471	S.M.CARB	0.1W	5%	470Ω	
R2323	ERJ6GEYJ103	S.M.CARB	0.1W	5%	10KΩ	
R2324	ERJ6GEYJ471	S.M.CARB	0.1W	5%	470Ω	
R2325	ERJ6GEYJ273	S.M.CARB	0.1W	5%	27KΩ	
R2326	ERJ6GEYJ471	S.M.CARB	0.1W	5%	470Ω	
R2327	ERJ6GEYJ471	S.M.CARB	0.1W	5%	470Ω	
R2328	ERJ6GEYJ473	S.M.CARB	0.1W	5%	47KΩ	
R2329	ERJ6GEYJ222	S.M.CARB	0.1W	5%	2K2Ω	
R2330	ERJ6GEYJ222	S.M.CARB	0.1W	5%	2K2Ω	

Ref No.	Part No.	Description				
R2331	ERJ6GEYJ223	S.M.CARB	0.1W	5%	22KΩ	
R2332	ERJ6GEYJ471	S.M.CARB	0.1W	5%	470Ω	
R2333	ERJ6GEYJ471	S.M.CARB	0.1W	5%	470Ω	
R2334	ERJ6GEY0R00	WIRE LINK				
R2335	ERJ6GEY0R00	WIRE LINK				
R2651	ERG2FJ221	METAL	2W	5%	220Ω ▲	
R2652	ERG2FJ221	METAL	2W	5%	220Ω ▲	
R2653	ERDS1TJ151	CARBON	0.5W	5%	150Ω	
R2654	ERDS1TJ151	CARBON	0.5W	5%	150Ω	
R3001	ERJ6GEYJ153	S.M.CARB	0.1W	5%	15KΩ	
R3002	ERJ6GEYJ101	S.M.CARB	0.1W	5%	100Ω	
R3003	ERJ6GEYJ101	S.M.CARB	0.1W	5%	100Ω	
R3004	ERJ6GEYJ153	S.M.CARB	0.1W	5%	15KΩ	
R3005	ERJ6GEYJ470	S.M.CARB	0.1W	5%	47Ω	
R3006	ERJ6GEYJ470	S.M.CARB	0.1W	5%	47Ω	
R3007	ERJ6GEYJ750	S.M.CARB	0.1W	5%	75Ω	
R3008	ERJ6GEYJ104	S.M.CARB	0.1W	5%	100KΩ	
R3009	ERJ6GEYJ104	S.M.CARB	0.1W	5%	100KΩ	
R3010	ERJ6GEYJ101	S.M.CARB	0.1W	5%	100Ω	
R3011	ERJ6GEYJ101	S.M.CARB	0.1W	5%	100Ω	
R3012	ERJ6GEYJ101	S.M.CARB	0.1W	5%	100Ω	
R3013	ERJ6GEYJ101	S.M.CARB	0.1W	5%	100Ω	
R3015	ERJ6GEY0R00	WIRE LINK				
R3016	ERJ6GEYJ103	S.M.CARB	0.1W	5%	10KΩ	
R3017	ERJ6GEYJ102	S.M.CARB	0.1W	5%	1KΩ	
R3019	ERJ6GEYJ471	S.M.CARB	0.1W	5%	470Ω	
R3020	ERJ6GEYJ103	S.M.CARB	0.1W	5%	10KΩ	
R3022	ERD2FCG560	CARBON	2W	2%	56Ω	
R3024	ERJ6GEYJ471	S.M.CARB	0.1W	5%	470Ω	
R3025	ERJ6GEYJ103	S.M.CARB	0.1W	5%	10KΩ	
R3026	ERJ6GEYJ471	S.M.CARB	0.1W	5%	470Ω	
R3027	ERJ6GEYJ680	S.M.CARB	0.1W	5%	68Ω	
R3029	ERJ6GEYJ680	S.M.CARB	0.1W	5%	68Ω	
R3030	ERJ6GEYJ103	S.M.CARB	0.1W	5%	10KΩ	
R3032	ERJ6GEYJ680	S.M.CARB	0.1W	5%	68Ω	
R3034	ERJ6GEYJ103	S.M.CARB	0.1W	5%	10KΩ	
R3036	ERJ6GEYJ220	S.M.CARB	0.1W	5%	22Ω	
R3037	ERJ6GEYJ750	S.M.CARB	0.1W	5%	75Ω	
R3038	ERD2FCG100	CARB	2W	2%	10Ω	
R3039	ERJ6GEYJ101	S.M.CARB	0.1W	5%	100Ω	
R3040	ERJ6GEYJ101	S.M.CARB	0.1W	5%	100Ω	
R3041	ERJ6GEYJ153	S.M.CARB	0.1W	5%	15KΩ	
R3042	ERJ6GEYJ472	S.M.CARB	0.1W	5%	4K7Ω	
R3043	ERD2FCG100	CARB	2W	2%	10Ω	
R3044	ERJ6GEYJ101	S.M.CARB	0.1W	5%	100Ω	
R3045	ERJ6GEYJ471	S.M.CARB	0.1W	5%	470Ω	
R3046	ERJ6GEYJ101	S.M.CARB	0.1W	5%	100Ω	
R3047	ERJ6GEYJ680	S.M.CARB	0.1W	5%	68Ω	
R3048	ERJ6GEYJ102	S.M.CARB	0.1W	5%	1KΩ	
R3049	ERJ6GEYJ750	S.M.CARB	0.1W	5%	75Ω	
R3050	ERJ6GEYJ101	S.M.CARB	0.1W	5%	100Ω	
R3051	ERJ6GEYJ101	S.M.CARB	0.1W	5%	100Ω	
R3052	ERJ6GEYJ101	S.M.CARB	0.1W	5%	100Ω	
R3053	ERJ6GEYJ101	S.M.CARB	0.1W	5%	100Ω	
R3054	ERJ6GEYJ101	S.M.CARB	0.1W	5%	100Ω	
R3055	ERJ6GEYJ101	S.M.CARB	0.1W	5%	100Ω	
R3056	ERJ6GEYJ101	S.M.CARB	0.1W	5%	100Ω	
R3057	ERJ6GEYJ101	S.M.CARB	0.1W	5%	100Ω	
R3058	ERJ6GEYJ153	S.M.CARB	0.1W	5%	15KΩ	
R3059	ERJ6GEYJ153	S.M.CARB	0.1W	5%	15KΩ	
R3060	ERJ6GEYJ470	S.M.CARB	0.1W	5%	47Ω	
R3062	ERJ6GEYJ750	S.M.CARB	0.1W	5%	75Ω	
R3063	ERJ6GEYJ750	S.M.CARB	0.1W	5%	75Ω	
R3064	ERJ6GEYJ103	S.M.CARB	0.1W	5%	10KΩ	
R3065	ERJ6GEYJ104	S.M.CARB	0.1W	5%	100KΩ	
R3066	ERJ6GEYJ104	S.M.CARB	0.1W	5%	100KΩ	
R3067	ERJ6GEYJ273	S.M.CARB	0.1W	5%	27KΩ	
R3068	ERJ6GEYJ103	S.M.CARB	0.1W	5%	10KΩ	
R3069	ERJ6GEYJ103	S.M.CARB	0.1W	5%	10KΩ	
R3070	ERJ6GEYJ750	S.M.CARB	0.1W	5%	75Ω	

Ref No.	Part No.	Description			
R3071	ERJ6GEYJ470	S.M.CARB	0.1W	5%	47Ω
R3150	ERJ6GEYJ750	S.M.CARB	0.1W	5%	75Ω
R3151	ERJ6GEYJ750	S.M.CARB	0.1W	5%	75Ω
R3152	ERJ6GEYJ750	S.M.CARB	0.1W	5%	75Ω
R3153	ERJ6GEYJ750	S.M.CARB	0.1W	5%	75Ω
R3154	ERJ6GEYJ153	S.M.CARB	0.1W	5%	15KΩ
R3155	ERJ6GEYJ101	S.M.CARB	0.1W	5%	100Ω
R3156	ERJ6GEYJ101	S.M.CARB	0.1W	5%	100Ω
R3157	ERJ6GEYJ153	S.M.CARB	0.1W	5%	15KΩ
R3158	ERJ6GEYJ750	S.M.CARB	0.1W	5%	75Ω
R3502	ERJ6GEYJ101	S.M.CARB	0.1W	5%	100Ω
R3504	ERJ6GEYJ101	S.M.CARB	0.1W	5%	100Ω
R3505	ERJ6GEY0R00	WIRE LINK			
R3508	ERJ6GEYJ183	S.M.CARB	0.1W	5%	18KΩ
R3511	ERJ6GEYJ103	S.M.CARB	0.1W	5%	10KΩ
R3512	ERJ6GEYJ472	S.M.CARB	0.1W	5%	4K7Ω
 <b>SWITCHES</b>					
S801	ESB91232A	SWITCH			△
S1201	EVQ23405R	SWITCH			
S1202	EVQ23405R	SWITCH			

Ref No.	Part No.	Description	
S1203	EVQ23405R	SWITCH	
S1204	EVQ23405R	SWITCH	
S1205	EVQ23405R	SWITCH	
 <b>TRANSFORMERS</b>			
T501	5270103200	TRANSFORMER	
T551	ZTFH65008A	TRANSFORMER	△
T801	TLP8E1002	TRANSFORMER	△
T1201	ETP35KAN61ZU	TRANSFORMER	
 <b>FILTERS</b>			
X101	EFCS6R0MW5	FILTER	
X103	J3352K	SAW FILTER	
X105	EFCV4155A3	CERAMIC FILTER	
X601	TSS2169-B	CRYSTAL	
X1201	TSS120M2	CRYSTAL	
X2101	TSS4004-B	CRYSTAL	

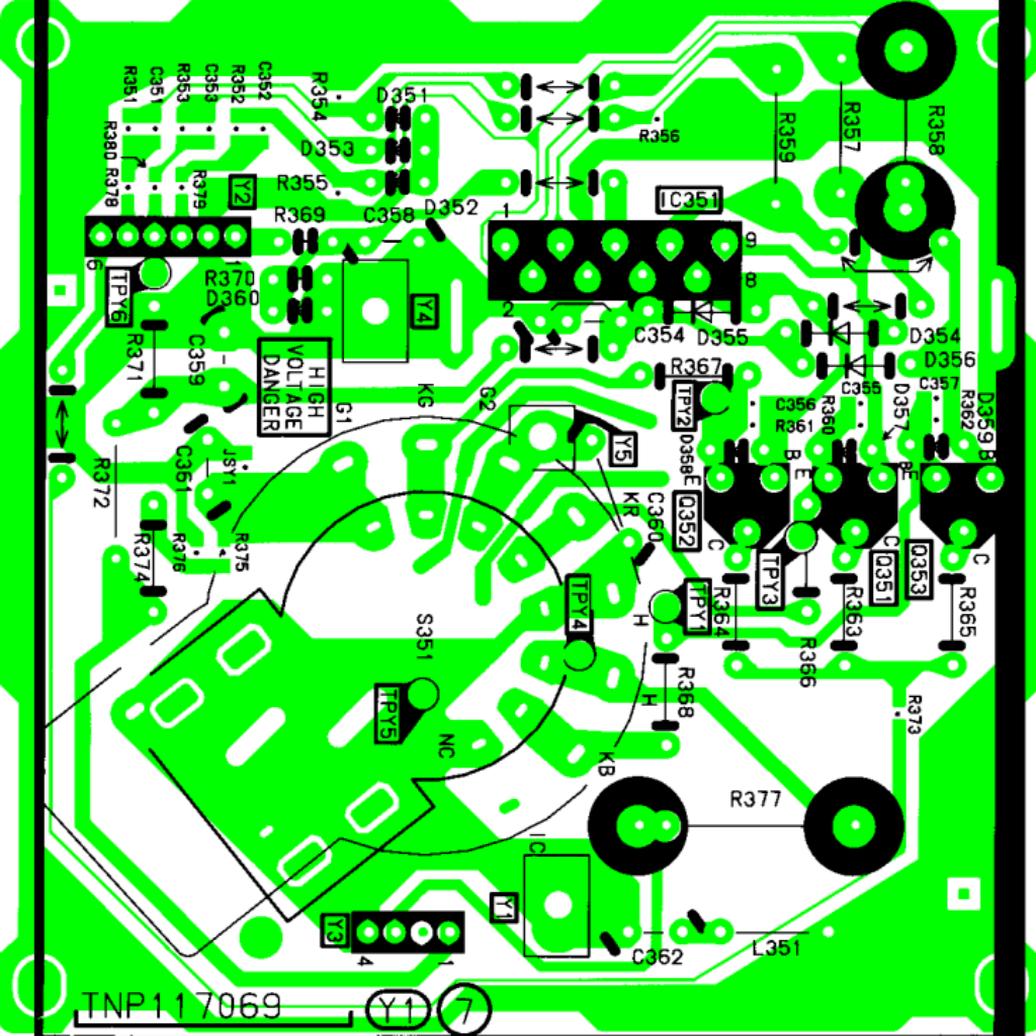

TNP117069


(Y1) (7)




TP117064

R0071

SEE REVERSE FOR ORDER NO.

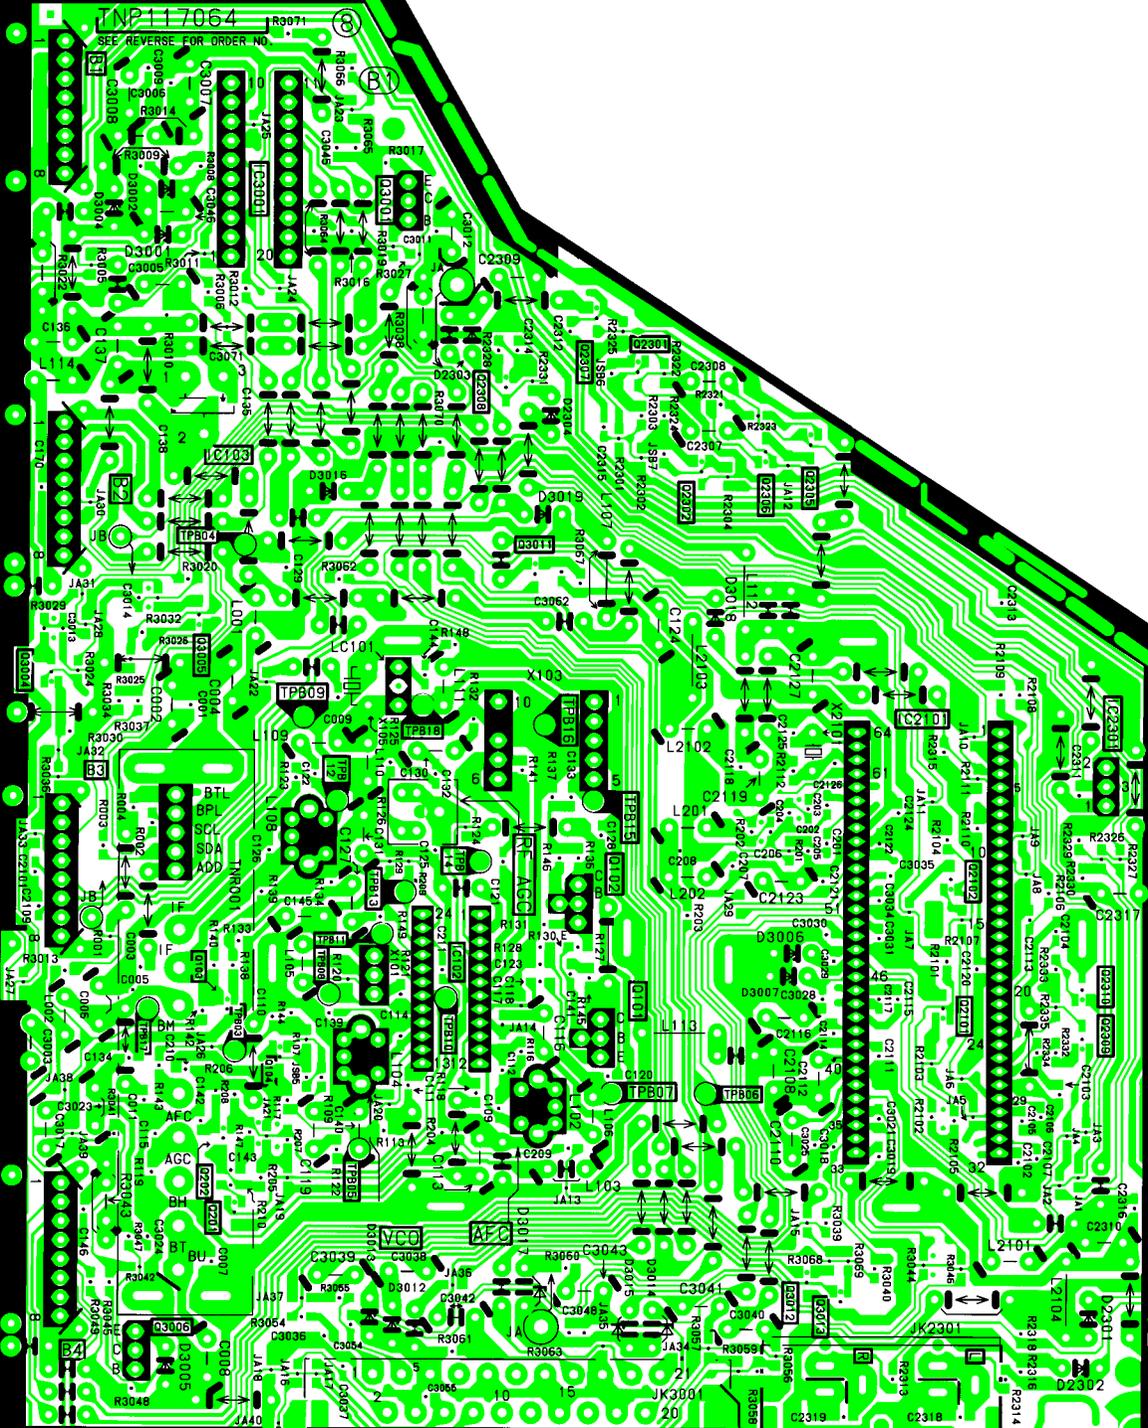

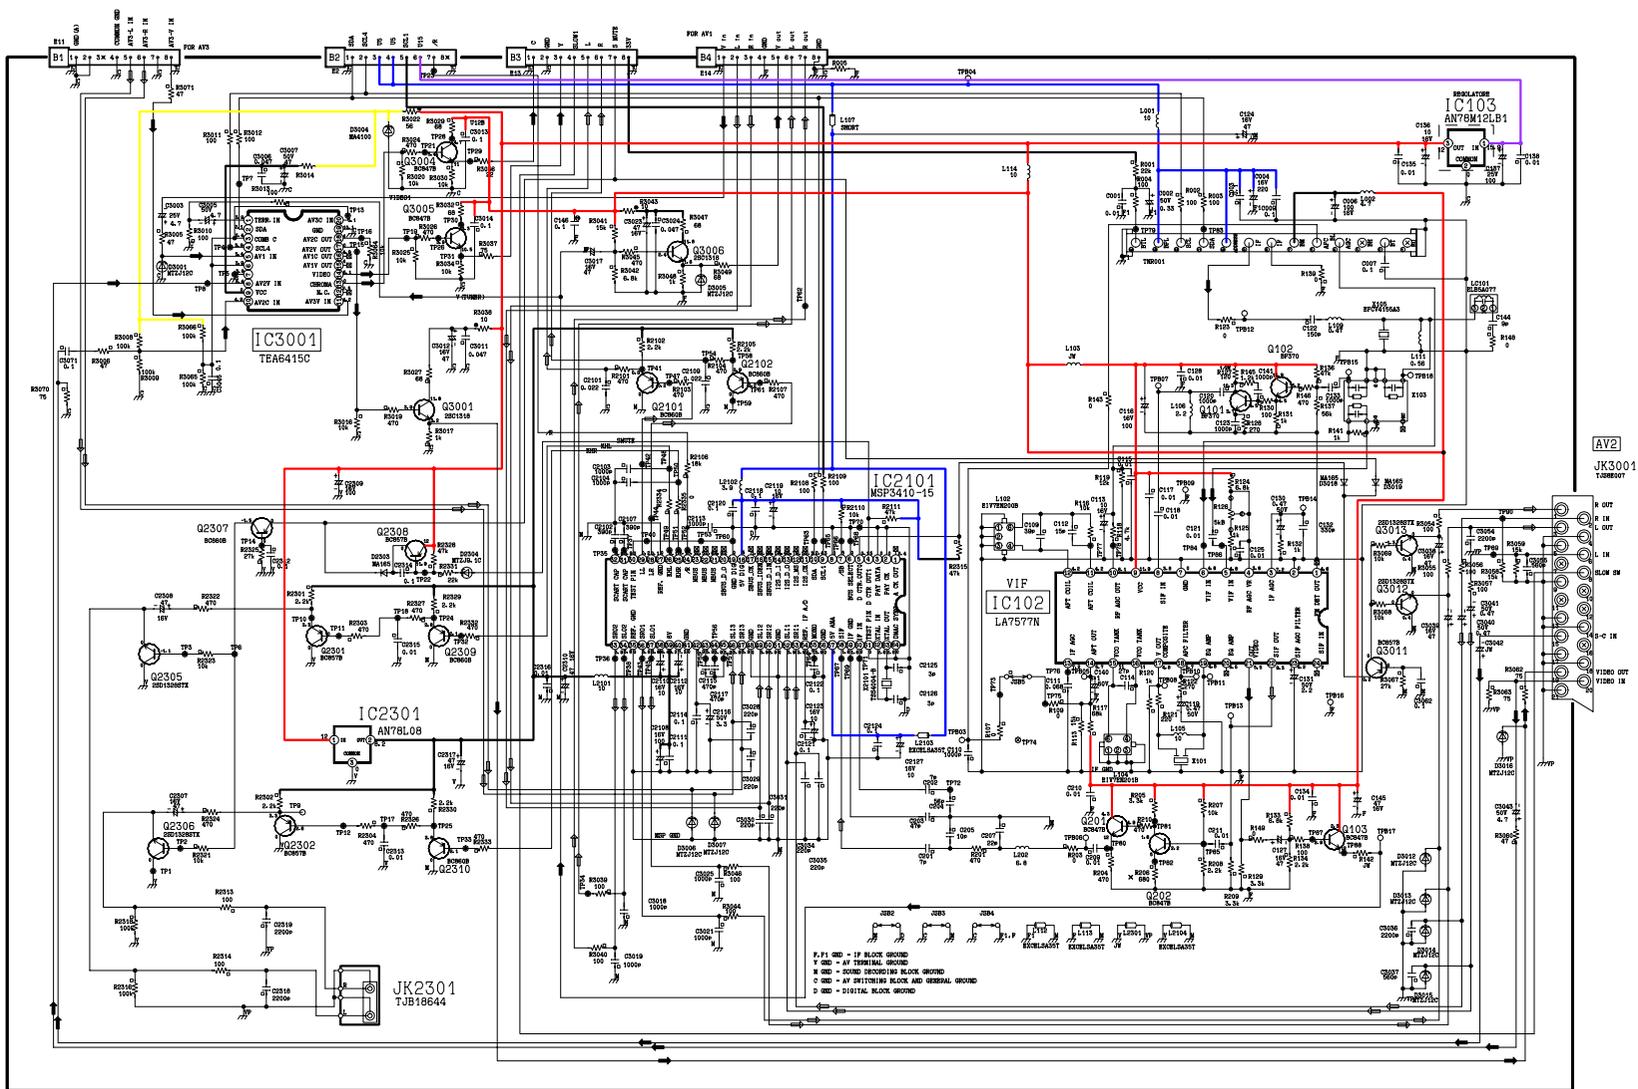

AV2  
JK3001

- F, F1 GND - IF BLOCK GROUND  
 V GND - AT TERMINAL GROUND  
 M GND - SOUND SIGNAL IN BLOCK GROUND  
 C GND - AT FEEDBACK BLOCK AND SIGNAL GROUND  
 D GND - DIGITAL BLOCK GROUND

JK3102  
TJB16673

AV3

JKS101  
TJBB607

AV1

AC\_CORD  
TSXB0017 (UK)

