




SERVICE MANUAL

**21" COLOR TELEVISION
MS-21A MKII**

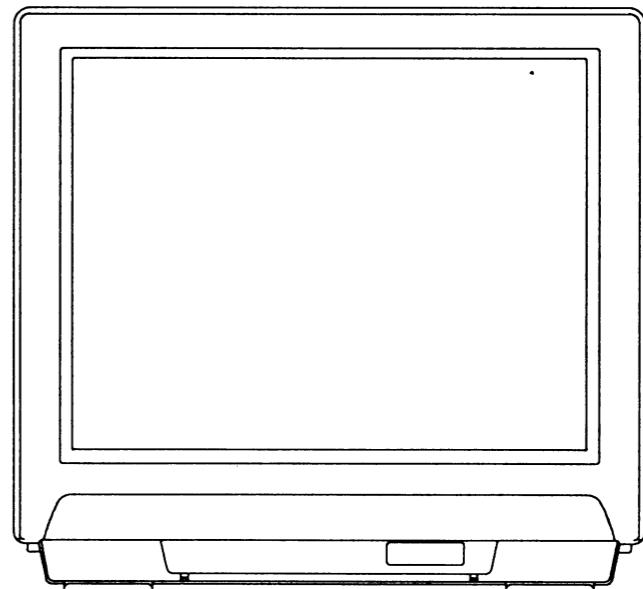

IMPORTANT SAFETY NOTICE

Proper service and repair is important to the safe, reliable operation of all Funai Equipment. The service procedures recommended by Funai and described in this service manual are effective methods of performing service operations. Some of these service special tools should be used when and as recommended.

It is important to note that this service manual contains various CAUTIONS and NOTICES which should be carefully read in order to minimize the risk of personal injury to service personnel. The possibility exists that improper service methods may damage the equipment. It also is important to understand that these CAUTIONS and NOTICES ARE NOT EXHAUSTIVE. Funai could not possibly know, evaluate and advise the service trade of all conceivable ways in which service might be done or of the possible hazardous consequences of each way. Consequently, Funai has not undertaken any such broad evaluation. Accordingly, a servicer who uses a service procedure or tool which is not recommended by Funai must first use all precautions thoroughly so that neither his safety nor the safe operation of the equipment will be jeopardized by the service method selected.

TABLE OF CONTENTS

General Specifications	1-1
Performance Specifications	2-1
Important Safety Precautions.....	3-1
Disassembly Instructions	4-1
Electrical Adjustment Instructions	5-1
Block Diagram.....	6-1
Schematic Diagrams / PCB's and Test Points.....	7-1
Waveforms	8-1
Wiring Diagram	9-1
Exploded View	10-1
Mechanical Parts List	11-1
Electrical Parts List.....	12-1

GENERAL SPECIFICATIONS *

FEATURE and SPECIFICATIONS

Color System:	PAL - B/G, SECAM - B/G, D/K NTSC 3.58/4.43MHz (Video Playback)
Tuning System:	Voltage Synthesizer
Receivable Channels:	VHF-L; R1~R5 / E2~E4 ch (X~S2) (CATV ch)
	VHF-H; R6~R12 / E5~E12 ch (S3~S10)
Number of Preset:	UHF; 21~69
Antenna Impedance:	Up to 50
	UHF/VHF 75Ω, Unbalanced
Picture Tube:	20", Tinted
Picture Control:	Color, Brightness, Contrast and Video mode (Sharp/Soft)
Picture Control Memory:	Standard Select
Speaker:	77mm Round, 8Ω × 2
Output Power:	1W × 2
Other Features:	Automatic Channel Preset Automatic Degaussing
Power Source:	110~240V, 50/60Hz AC (Auto Voltage)
Power Consumption:	90W
Cabinet Size:	500(W) × 462(D) × 426(H) mm (Approx.)
Weight:	17kg (Approx.)
Regulations:	SASO Passable

CONTROL and SWITCHES

Power:	Push (Front)
Channel Up/Down:	Push (Front)
Volume Up/Down:	Push (Front)
Tuning Up/Down:	Push (Front)
Program:	Push (Front)
Auto Memo / Band:	Push (Front)
REMOTE CONTROL:	Standby (20keys)
Mute	Mute
Channel Up/Down	Control/Volume Up/Down
Control/Volume Up/Down	0/Avg
0/Avg	Sleep
Sleep	1~9
1~9	Picture Select (Bright / Contrast / Color / Video Mode)
Picture Select (Bright / Contrast / Color / Video Mode)	Previous
Previous	Display

DISPLAY

LED Indicator:	Stand-by
* When turning on the power button stand-by	LED is put off.
On Screen Display:	Channel Volume Brightness Color Contrast Sharp-Soft Sleep Timer (10~90 Minute) Tuning Indicator Band Position

JACKS and TERMINALS

UHF/VHF Antenna:	IEC (75Ω)
Video In/Out:	BNC × 2
Audio In/Out:	RCA × 2
A/V In/Out:	21pin Euro Scart (W/O R.G.B.)

ACCESSORIES

Remote Control Unit	
Battery:	UM3 × 2
Owner's Manual	
Rod Antenna	

* Specifications are subject to change without notice.

PERFORMANCE SPECIFICATIONS

< Tuner >

ANT. Input ----- 75Ω Unbalanced, IEC connector
 Reference Level ----- 300mVp-p at Video Output
 Test Input Signal ----- 400Hz 30% modulation

<u>Description</u>	<u>Condition</u>	<u>Unit</u>	<u>Nominal</u>	<u>Limit</u>
1. Peak Picture Sens	VHF	dBμV	20	30
	UHF	dBμV	30	40
2. AFT Pull In Range (80dBμ input)	—	MHz	± 1.0	± 0.7
3. Intermediate Freq.	Picture	MHz	38.0	—
	Sound	MHz	31.5 (D/K)	—
	Sound	MHz	32.5 (B/G)	—
4. Intercarrier Freq.	—	MHz	6.5 (D/K)	—
	—	MHz	5.5 (B/G)	—

< Video & Chroma >

<u>Description</u>	<u>Condition</u>	<u>Unit</u>	<u>Nominal</u>	<u>Limit</u>
1. Misconvergence	Center Side Corner	mm	—	0.4
2. Over Scan	Horizontal Vertical	%	10	—
3. Color Temperature	—	K	8000K-10MPCD	—
4. Resolution	Horizontal Vertical	Line	300	—
5. Brightness	APL 100%	Ft-L	35	25

< Deflection >

<u>Description</u>	<u>Condition</u>	<u>Unit</u>	<u>Nominal</u>	<u>Limit</u>
1. Deflection Freq.	Horizontal (PAL/SECAM) (NTSC)	KHz	15.625	—
		KHz	15.75	—
	Vertical (PAL/SECAM) (NTSC)	Hz	50	—
		Hz	60	—
2. Linearity	Horizontal Vertical	%	—	± 15
3. High Voltage	—	KV	25	—

< Audio >

All items are measured across 16Ω resistor at speaker output terminal.

<u>Description</u>	<u>Condition</u>	<u>Unit</u>	<u>Nominal</u>	<u>Limit</u>
1. Audio Output Power	10% THD	W	1.2	0.8
2. Audio Distortion	500mW	%	2	5
3. Audio Freq. Response	-6dB	Hz	—	100~6K

IMPORTANT SAFETY PRECAUTIONS

Prior to shipment from the factory, our products are strictly inspected for recognized product safety and electrical codes of the countries in which they are to be sold. However, in order to maintain such compliance, it is equally important to implement the following precautions when a set is being serviced.

Safety Precautions for TV Circuit

1. Before returning an instrument to the customer, always make a safety check of the entire instrument, including, but not limited to, the following items:


a. Be sure that no built-in protective devices are defective and have been defeated during servicing. (1) Protective shields are provided on this chassis to protect both the technician and the customer. Correctly replace all missing protective shields, including any removed for servicing convenience. (2) When reinstalling the chassis and/or other assembly in the cabinet, be sure to put back in place all protective devices, including but not limited to, nonmetallic control knobs, insulating fishpapers, adjustment and compartment covers/shields, and isolation resistor/capacitor networks. **Do not operate this instrument or permit it to be operated without all protective devices correctly installed and functioning. Servicers who defeat safety features or fail to perform safety checks may be liable for any resulting damage.**

b. Be sure that there are no cabinet openings through which an adult or child might be able to insert their fingers and contact a hazardous voltage. Such openings include, but are not limited to, (1) spacing between the picture tube and the cabinet mask, (2) excessively wide cabinet ventilation slots, and (3) an improperly fitted and/or incorrectly secured cabinet back cover.

c. **Antenna Cold Check** - With the instrument AC plug removed from any AC source, connect an electrical jumper across the two AC plug prongs. Place the instrument AC switch in the on position. Connect one lead of an ohmmeter to the AC plug prongs tied together and touch the other ohmmeter lead in turn to each tuner antenna input exposed terminal screw and, if applicable, to the coaxial connector. If the measured resistance is less than 1.0 megohm or greater than 5.2 megohm, an abnormality exists that must be corrected

before the instrument is returned to the customer. Repeat this test with the instrument AC switch in the off position.

d. **Leakage Current Hot Check** - With the instrument completely reassembled, plug the AC line cord directly into a AC outlet. (Do not use an isolation transformer during this test.) Use a leakage current tester. With the instrument AC switch first in the on position and then in the off position, measure from a known earth ground (metal water pipe, conduit, etc.) to all exposed metal parts of the instrument (antennas, handle brackets, metal cabinet, screw heads, metallic overlays, control shafts, etc.), especially any exposed metal parts that offer an electrical return path to the chassis. Any current measured must not exceed 0.5 milliampere. Reverse the instrument power cord plug in the outlet and repeat the test.

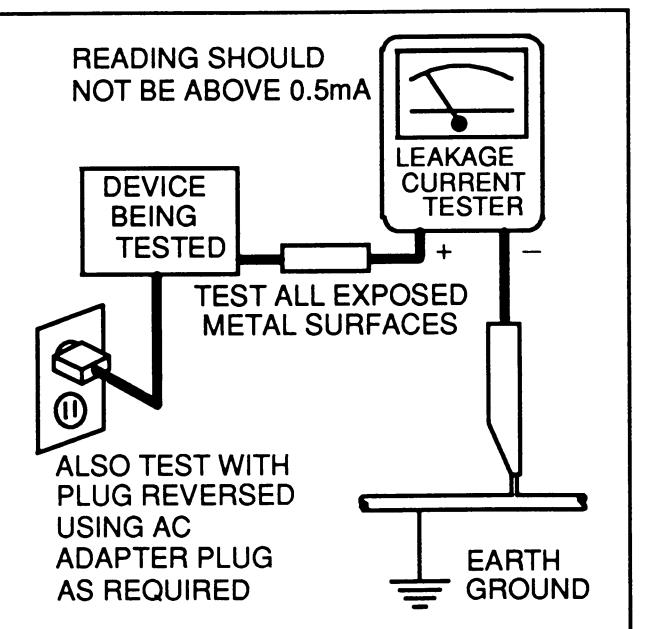

ANY MEASUREMENTS NOT WITHIN THE LIMITS SPECIFIED HEREIN INDICATE A POTENTIAL SHOCK HAZARD THAT MUST BE ELIMINATED BEFORE RETURNING THE INSTRUMENT TO THE CUSTOMER OR BEFORE CONNECTING THE ANTENNA OR ACCESSORIES.

e. **X-Radiation and High Voltage Limits** - Because the picture tube is the primary potential source of X-radiation in solid-state TV receivers, it is specially constructed to prohibit X-radiation emissions. For continued X-radiation protection, the replacement picture tube must be the same type as the original. Also, because the picture tube shields and mounting hardware perform an X-radiation protection function, they must be correctly in place. High voltage must be measured each time servicing is performed that involves B+, horizontal deflection or high voltage. Correct operation of the X-radiation protection circuits also must be reconfirmed each time they are serviced. (X-radiation protection circuits also may be called "horizontal disable" or "hold down.") Read and apply the high voltage limits and, if the chassis is so equipped, the X-radiation protection circuit specifications given on instrument labels and in the Product Safety & X-Radiation Warning note on the service data chassis schematic. High voltage is maintained within specified limits by close tolerance safety-related components/adjustments in the high-voltage circuit. If high voltage exceeds specified limits, check each component specified on the chassis schematic and take corrective action.

2. Read and comply with all caution and safety-related notes on or inside the receiver cabinet, on the receiver chassis, or on the picture tube.

3. **Design Alteration Warning** - Do not alter or add to the mechanical or electrical design of this TV receiver. Design alterations and additions, including, but not limited to circuit modifications and the addition of items such as auxiliary audio and/or video output connections, might alter the safety characteristics of this receiver and create a hazard to the user. Any design alterations or additions will void the manufacturer's warranty and may make you, the servicer, responsible for personal injury or property damage resulting therefrom.

4. **Picture Tube Implosion Protection Warning** - The picture tube in this receiver employs integral implosion protection. For continued implosion protection, replace the picture tube only with one of the same type number. Do not remove, install, or otherwise handle the picture tube in any manner without first putting on shatterproof goggles equipped with side shields. People not so equipped must be kept safely away while picture tubes are handled. Keep the picture tube away from your body. Do not handle

the picture tube by its neck. Some "in-line" picture tubes are equipped with a permanently attached deflection yoke; because of potential hazard, do not try to remove such "permanently attached" yokes from the picture tube.

5. Hot Chassis Warning -

a. Some TV receiver chassis are electrically connected directly to one conductor of the AC power cord and may be safety-serviced without an isolation transformer only if the AC power plug is inserted so that the chassis is connected to the ground side of the AC power source. To confirm that the AC power plug is inserted correctly, with an AC voltmeter, measure between the chassis and a known earth ground. If a voltage reading in excess of 1.0V is obtained, *remove and reinsert the AC power plug in the opposite polarity and again measure the voltage potential between the chassis and a known earth ground.

b. Some TV receiver chassis have a circuit which obtain voltage about 70% of AC voltage between chassis and earth ground regardless of the AC plug polarity. This chassis can be safety-serviced only with an isolation transformer inserted in the power line between the receiver and the AC power source, for both personnel and test equipment protection.

c. Some TV receiver chassis have a secondary ground system in addition to the main chassis ground. This secondary ground system is not isolated from the AC power line. The two ground systems are electrically separated by insulation material that must not be defeated or altered.

Note: * In case unit has no polarity AC plug only.

6. Observe original lead dress. Take extra care to assure correct lead dress in the following areas: a. near sharp edges, b. near thermally hot parts-be sure that leads and components do not touch thermally hot parts, c. the AC supply, d. high voltage, and e. antenna wiring. Always inspect in all areas for pinched, out of place, or frayed wiring. Check AC power cord for damage.

7. Components, parts, and/or wiring that appear to have overheated or are otherwise damaged should be replaced with components, parts, or wiring that meet original specifications. Additionally, determine the cause of overheating and/or damage and, if necessary, take corrective action to remove any potential safety hazard.

8. **Product Safety Notice** - Some electrical and mechanical parts have special safety-related characteristics which are often not evident from visual

inspection, nor can the protection they give necessarily be obtained by replacing them with components rated for higher voltage, wattage, etc.. Parts that have special safety characteristics are identified by a (Δ) on schematics and in parts lists. Use of a substitute replacement that does not have the same safety characteristics as the recommended replacement part might create shock, fire, and/or other hazards. The Product's Safety is under review continu-

ously and new instructions are issued whenever appropriate. Prior to shipment from the factory, our products are strictly inspected to confirm with the recognized product safety and electrical codes of the countries in which they are to be sold. However, in order to maintain such compliance, it is equally important to implement the following precautions when a set is being serviced.

Precautions during Servicing

- A.** Parts identified by the (Δ) symbol are critical for safety.
Replace only with part number specified.
- B.** In addition to safety, other parts and assemblies are specified for conformance with regulations applying to spurious radiation. These must also be replaced only with specified replacements.
Examples: RF converters, RF cables, noise blocking capacitors, and noise blocking filters, etc.
- C.** Use specified internal wiring. Note especially:
 - 1) Wires covered with PVC tubing
 - 2) Double insulated wires
 - 3) High voltage leads
- D.** Use specified insulating materials for hazardous live parts. Note especially:
 - 1) Insulation Tape
 - 2) PVC tubing
 - 3) Spacers
 - 4) Insulators for transistors.
- E.** When replacing AC primary side components (transformers, power cord, etc.), wrap ends of wires securely about the terminals before soldering.
- F.** Observe that the wires do not contact heat producing parts (heatsinks, oxide metal film resistors, fusible resistors, etc.)
- G.** Check that replaced wires do not contact sharp edged or pointed parts.

- H.** When a power cord has been replaced, check that 10-15 kg of force in any direction will not loosen it.
 - I. Also check areas surrounding repaired locations.
 - J. Use care that foreign objects (screws, solder droplets, etc.) do not remain inside the set.
 - K. Crimp type wire connector

When replacing the power transformer in sets where the connections between the power cord and power transformer primary lead wires are performed using crimp type connectors, in order to prevent shock hazards, perform carefully and precisely the following steps.

Replacement procedure

- 1) Remove the old connector by cutting the wires at a point close to the connector.
- Important: Do not re-use a connector (discard it).
- 2) Strip about 15 mm of the insulation from the ends of the wires. If the wires are stranded, twist the strands to avoid frayed conductors.
- 3) Align the lengths of the wires to be connected. Insert the wires fully into the connector.
- 4) Use the crimping tool to crimp the metal sleeve at the center position. Be sure to crimp fully to the complete closure of the tool.

- L.** When connecting or disconnecting the VCR connectors, first, disconnect the AC plug from AC supply socket.

Safety Check after Servicing

Examine the area surrounding the repaired location for damage or deterioration. Observe that screws, parts and wires have been returned to original positions. Afterwards, perform the following tests and confirm the specified values in order to verify compliance with safety standards.

1. Clearance Distance

When replacing primary circuit components, confirm specified clearance distance (d) and (d') between soldered terminals, and between terminals and surrounding metallic parts. (See Fig. 1)

Table 1 : Ratings for selected area

AC Line Voltage	Region	Clearance Distance (d) (d')
110 to 240 V	Middle East	$\geq 4\text{mm}$ (d) $\geq 6\text{mm}$ (d')

Note: This table is unofficial and for reference only.
Be sure to confirm the precise values.

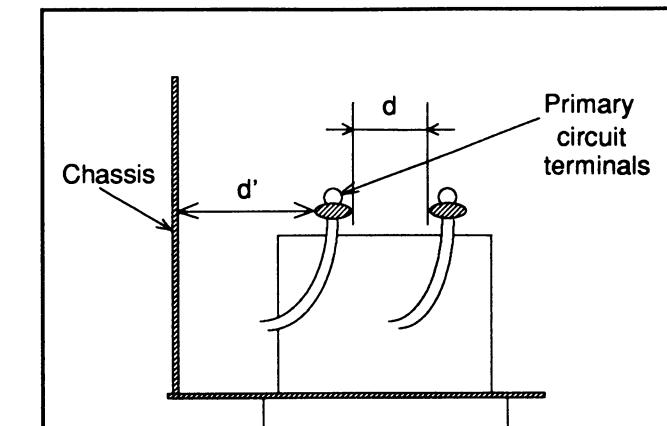


Fig. 1

2. Leakage Current Test

Confirm specified (or lower) leakage current between B (earth ground, power cord plug prongs) and externally exposed accessible parts (RF terminals, antenna terminals, video and audio input and output terminals, microphone jacks, earphone jacks, etc.).

Measuring Method : (Power ON)

Insert load Z between B (earth ground, power cord plug prongs) and exposed accessible parts. Use an AC voltmeter to measure across both terminals of load Z. See Fig. 2 and following table.

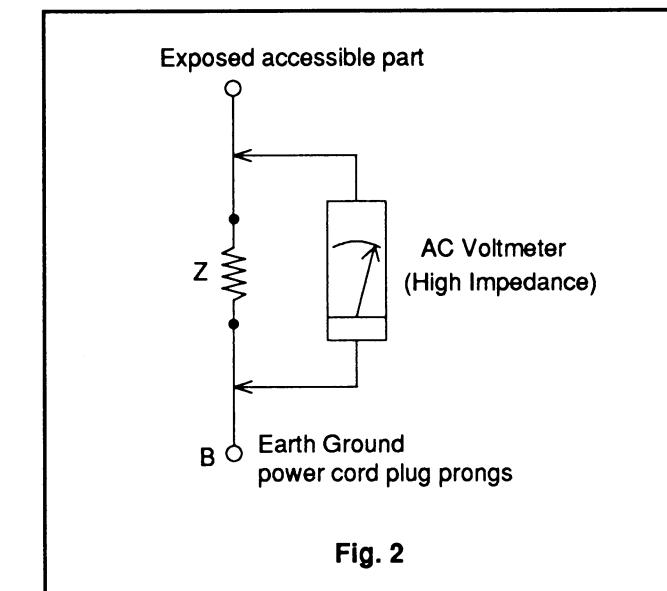


Fig. 2

Table 2 : Leakage current ratings for selected areas

AC Line Voltage	Region	Load Z	Leakage Current (i)	Earth Ground (B) to:
110 to 240 V	Middle East	2k Ω RES. in connected	i $\leq 0.7\text{mA rms}$ i $\leq 2\text{mA dc}$	Antenna terminals
		50k Ω RES. in connected	i $\leq 0.7\text{mA rms}$ i $\leq 2\text{mA dc}$	Other terminals


Note: This table is unofficial and for reference only.
Be sure to confirm the precise values.

DISASSEMBLY INSTRUCTIONS

1. DISASSEMBLY FLOW CHART

This flow chart indicates the disassembly steps of the cabinet parts and PCB in order to gain access to item(s) to be serviced. When reassembling, perform the step(s) in the reverse order. Bend, route and dress the cables as they were originally.

CAUTION ! : When removing the CRT, make sure to discharge Anode Lead of the CRT.
Use the CRT Ground Wire to discharge the CRT before removing the Anode Cap.

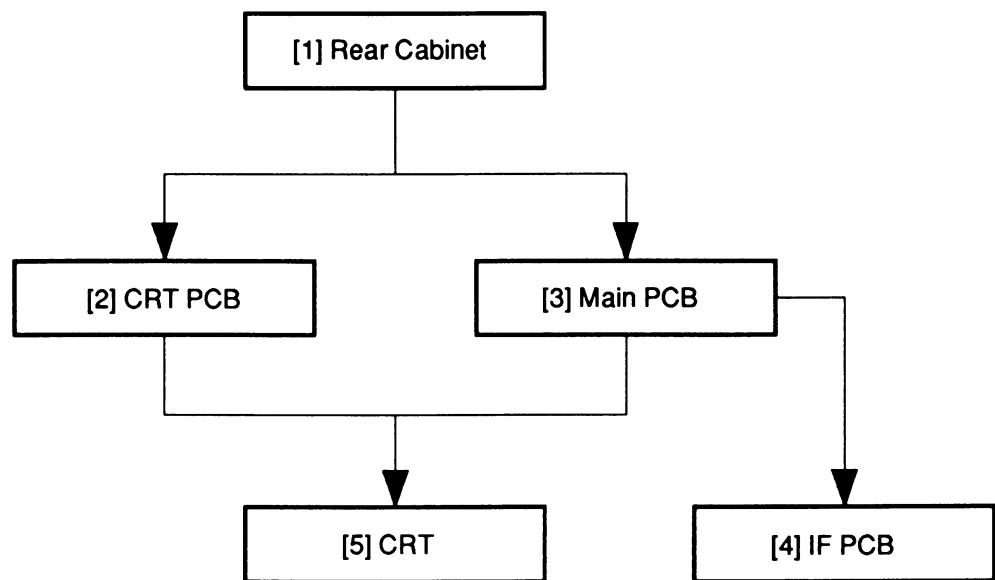

2. DISASSEMBLY METHOD

STEP / LOC. NO.	PART	REMOVAL		
		FIG. NO.	REMOVE / *UNLOCK / RELEASE / UNPLUG / UNCLAMP / DESOLDER	NOTE
[1]	Rear Cabinet	CAB1 CAB2	L2 (4pcs), L3, L4	1
[2]	CRT PCB	CAB4 CAB5	CN602, CN603, CN604 FOCUS WIRE, SCREEN WIRE	2
[3]	Main PCB	CAB3 CAB5	CN201, CN202, CN203, CN204, CN208, CN501 ANODE CAP, FOCUS WIRE, SCREEN WIRE	3
[4]	IF PCB	CAB3	CN101, CN102	4
[5]	CRT	CAB4	B2 (4pcs)	5

Reference <Notes> in Table

- (1) Remove 6 screws (L2, L3, L4) and slide the Rear Cabinet backward.
- (1) If not already removed, first remove the Rear Cabinet.
(2) Remove all relative wires, then pull the CRT PCB backward.
- (1) If not already removed, first remove the Rear Cabinet.
(2) Remove all relative wires on the Main PCB and remove the Anode Cap, then slide the main PCB backward.
- (1) If not already removed, first remove the Rear Cabinet.
(2) Desolder CN101 and CN102, then remove the IF PCB from the Main PCB.

Caution !

Discharge Anode Lead of the CRT with the CRT Ground Wire before removing the Anode Cap.

- (1) If not already removed, first remove the Rear Cabinet and Main PCB.
(2) Remove 4 screws (B2), then the CRT can be removed.





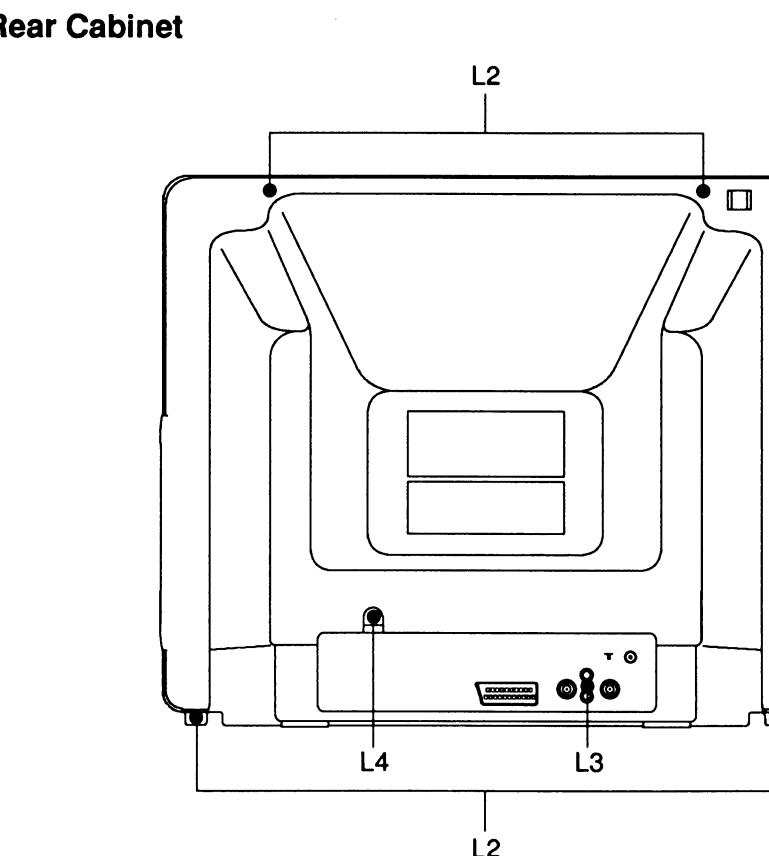


Fig. CAB 1

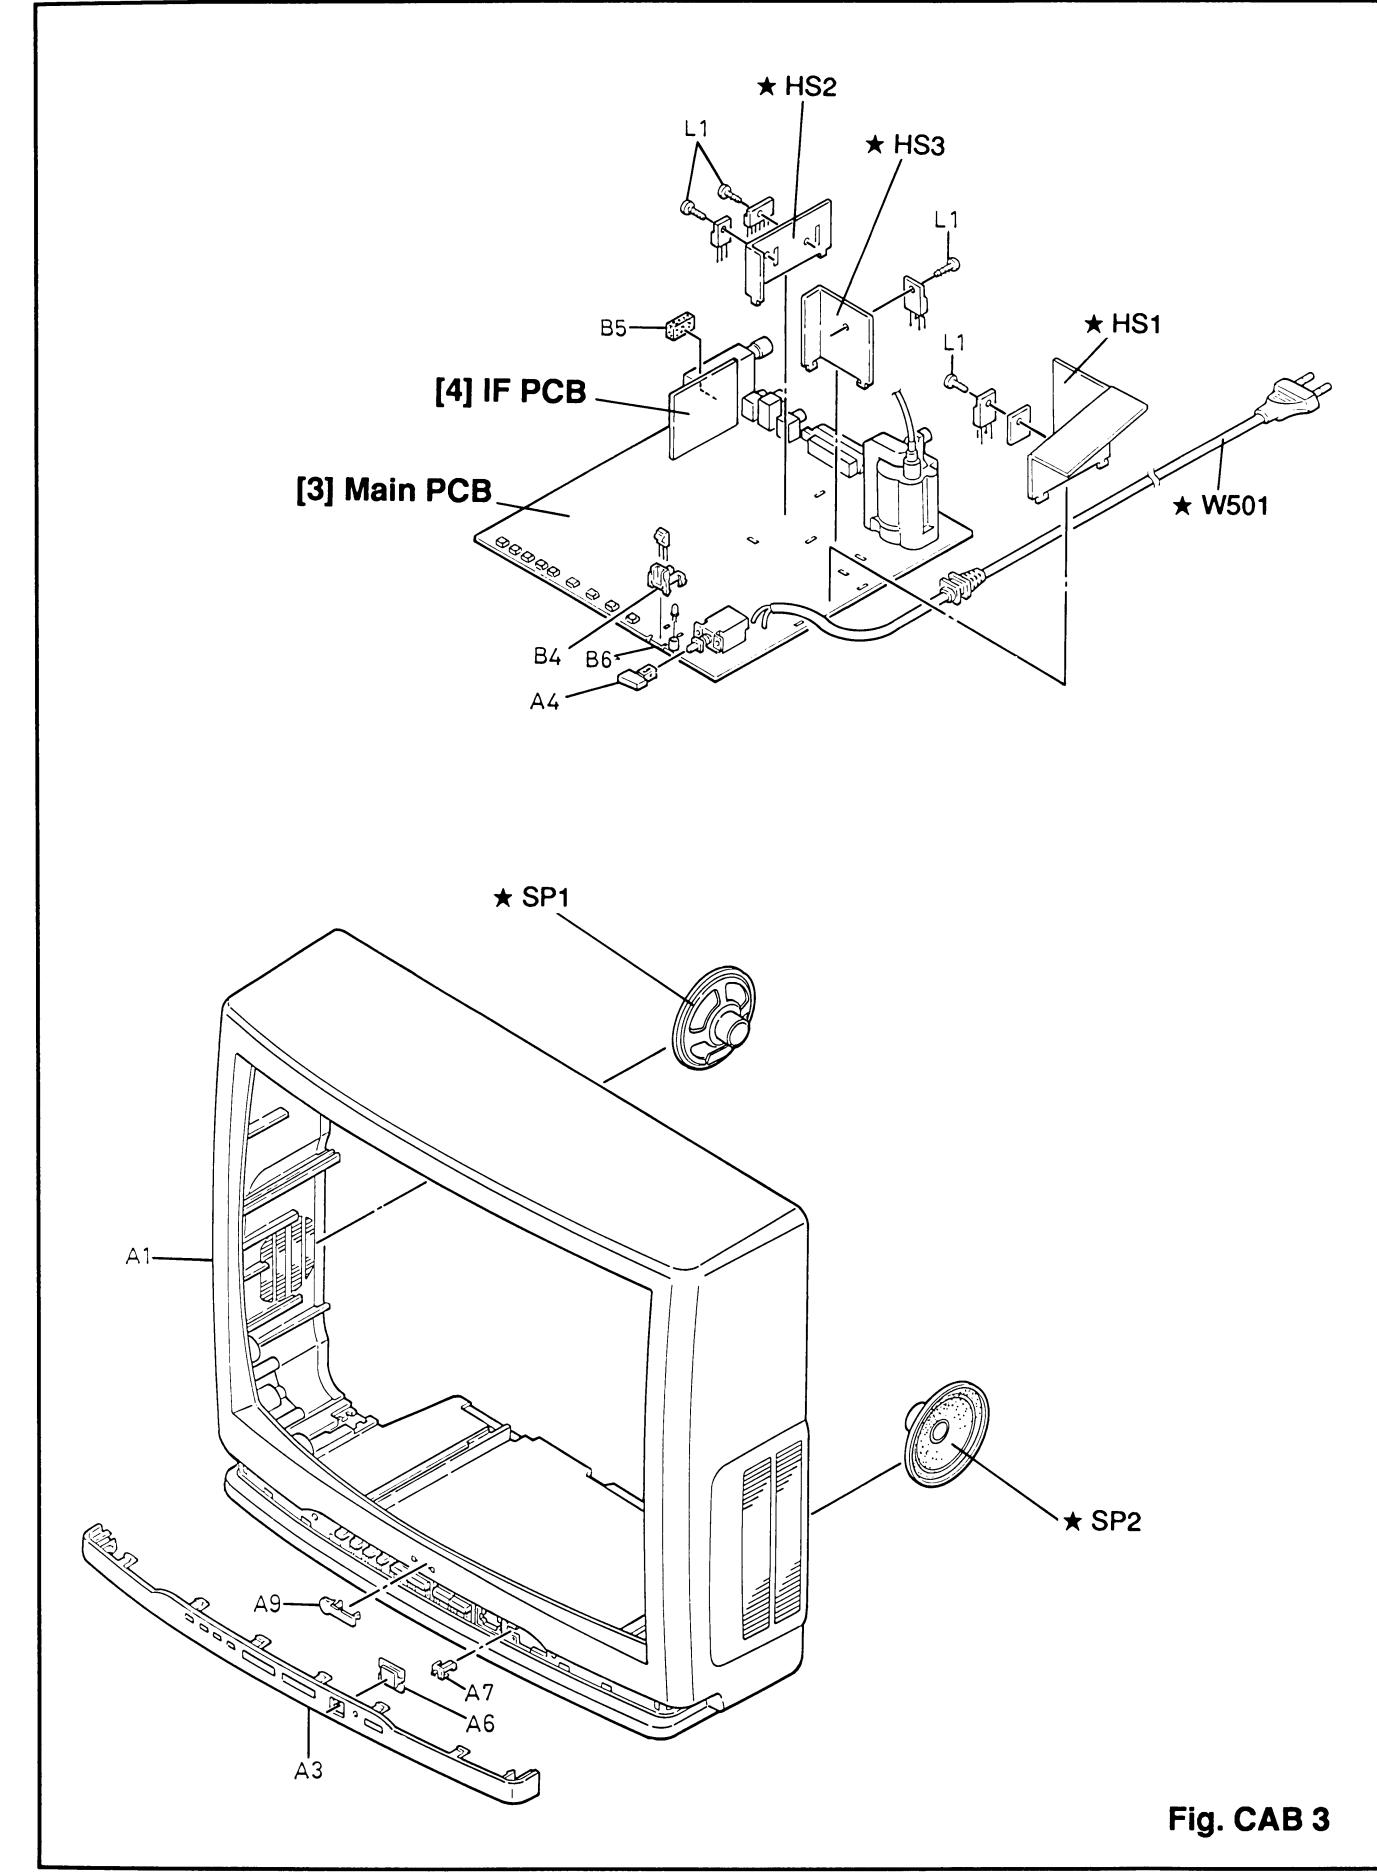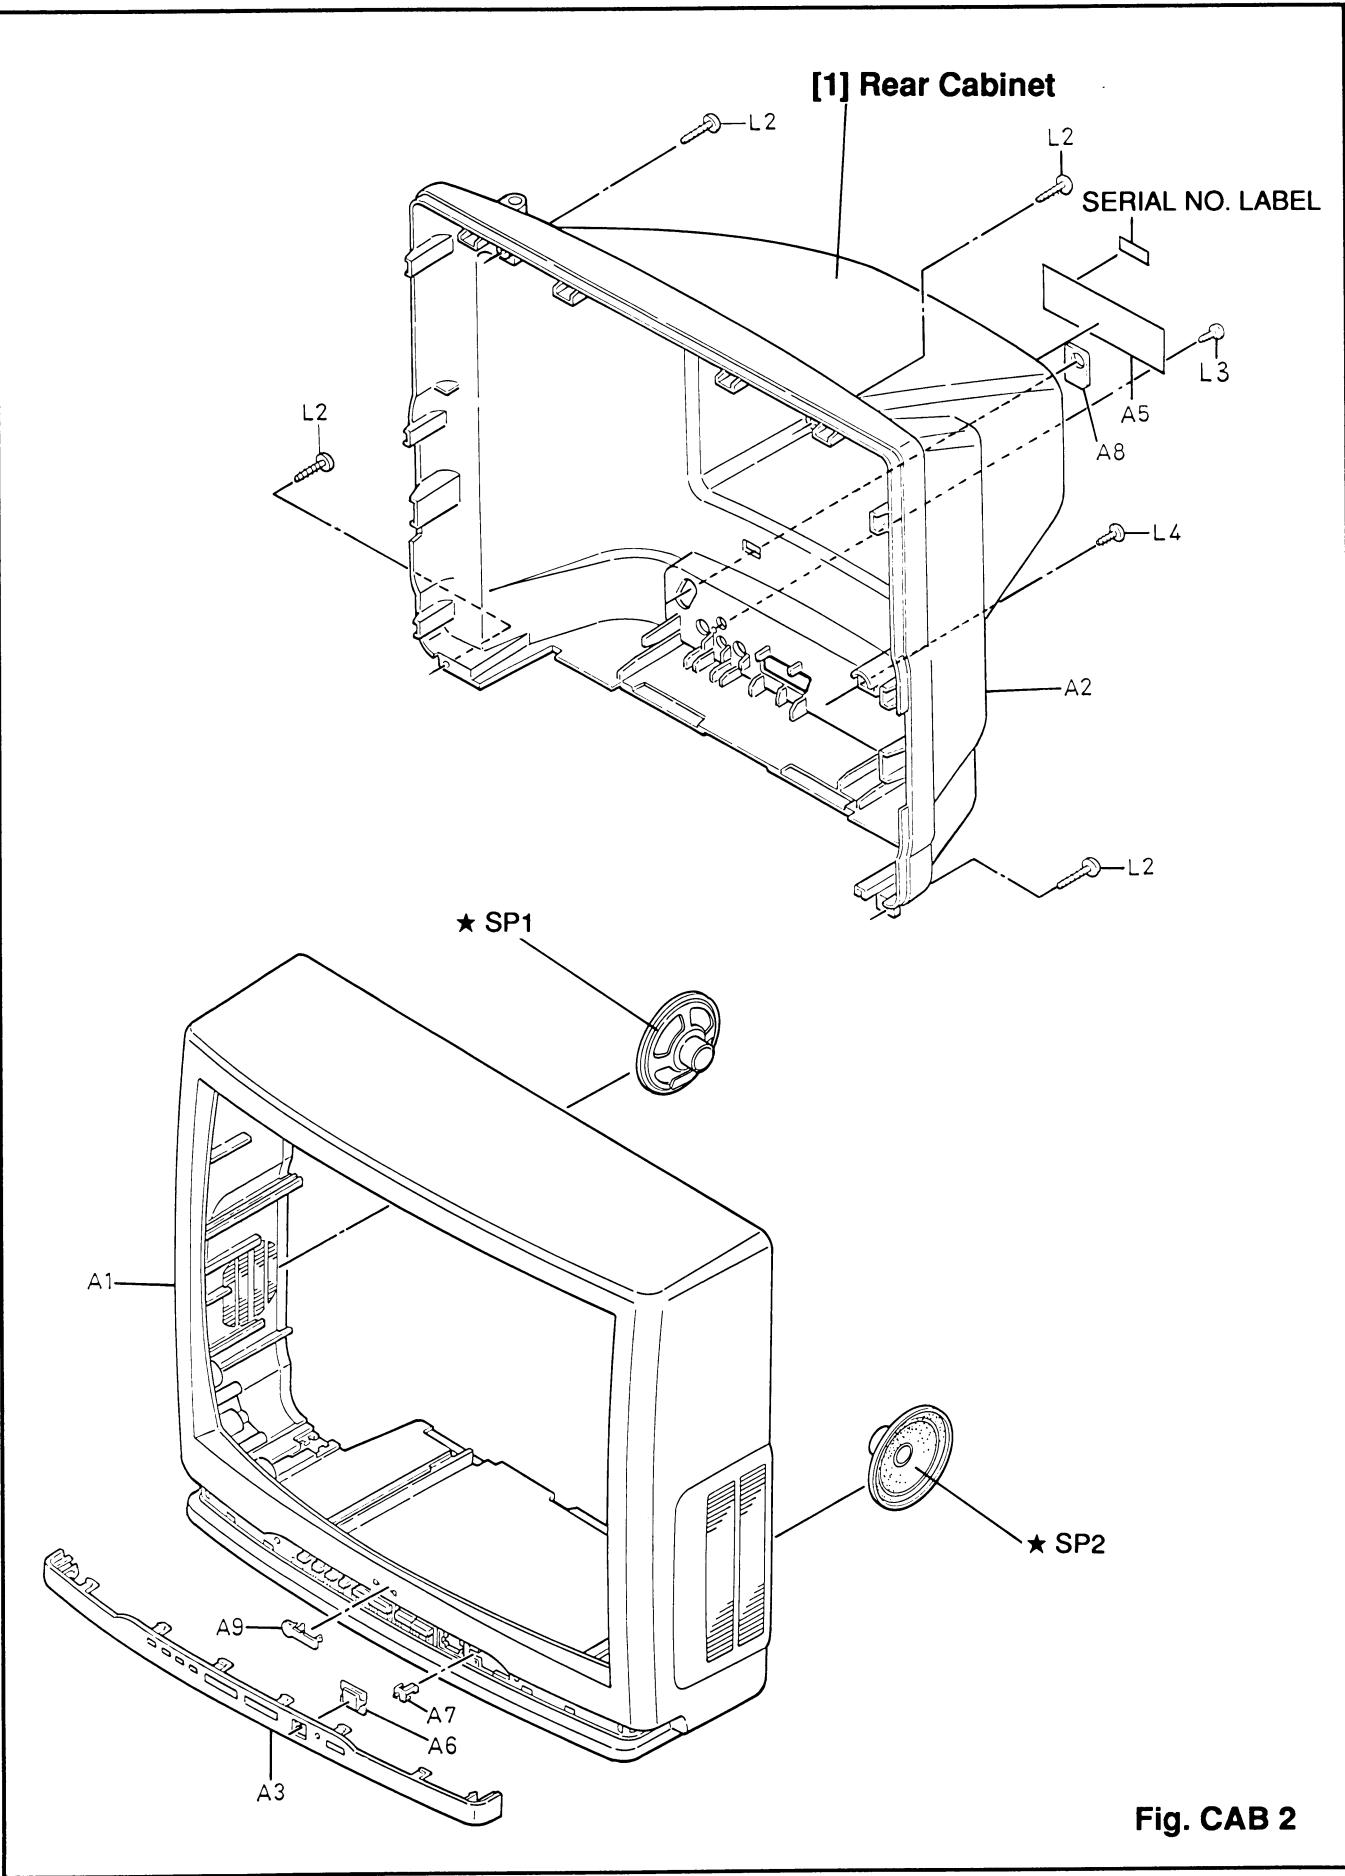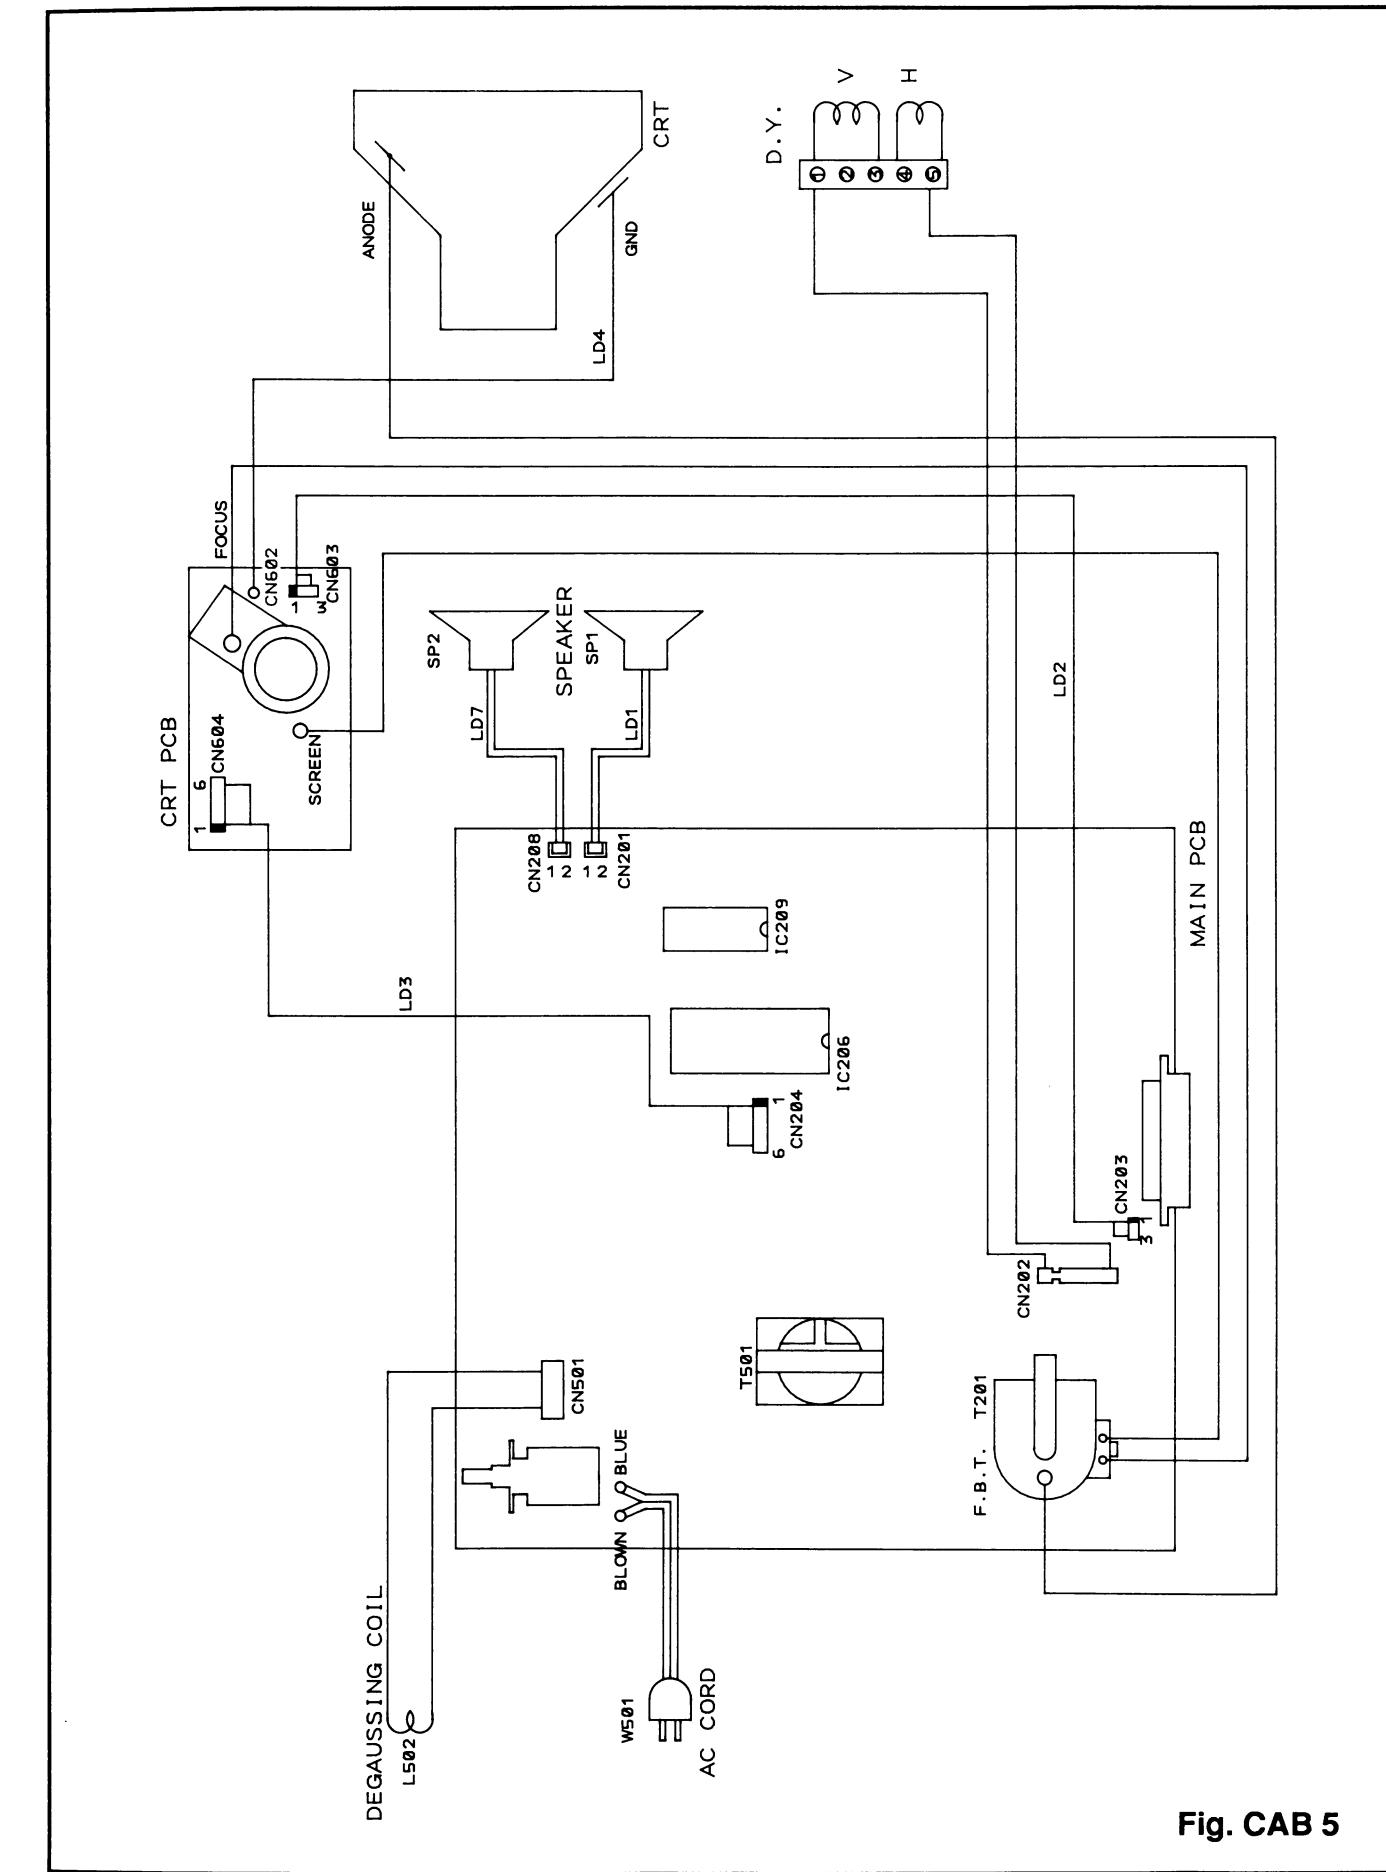

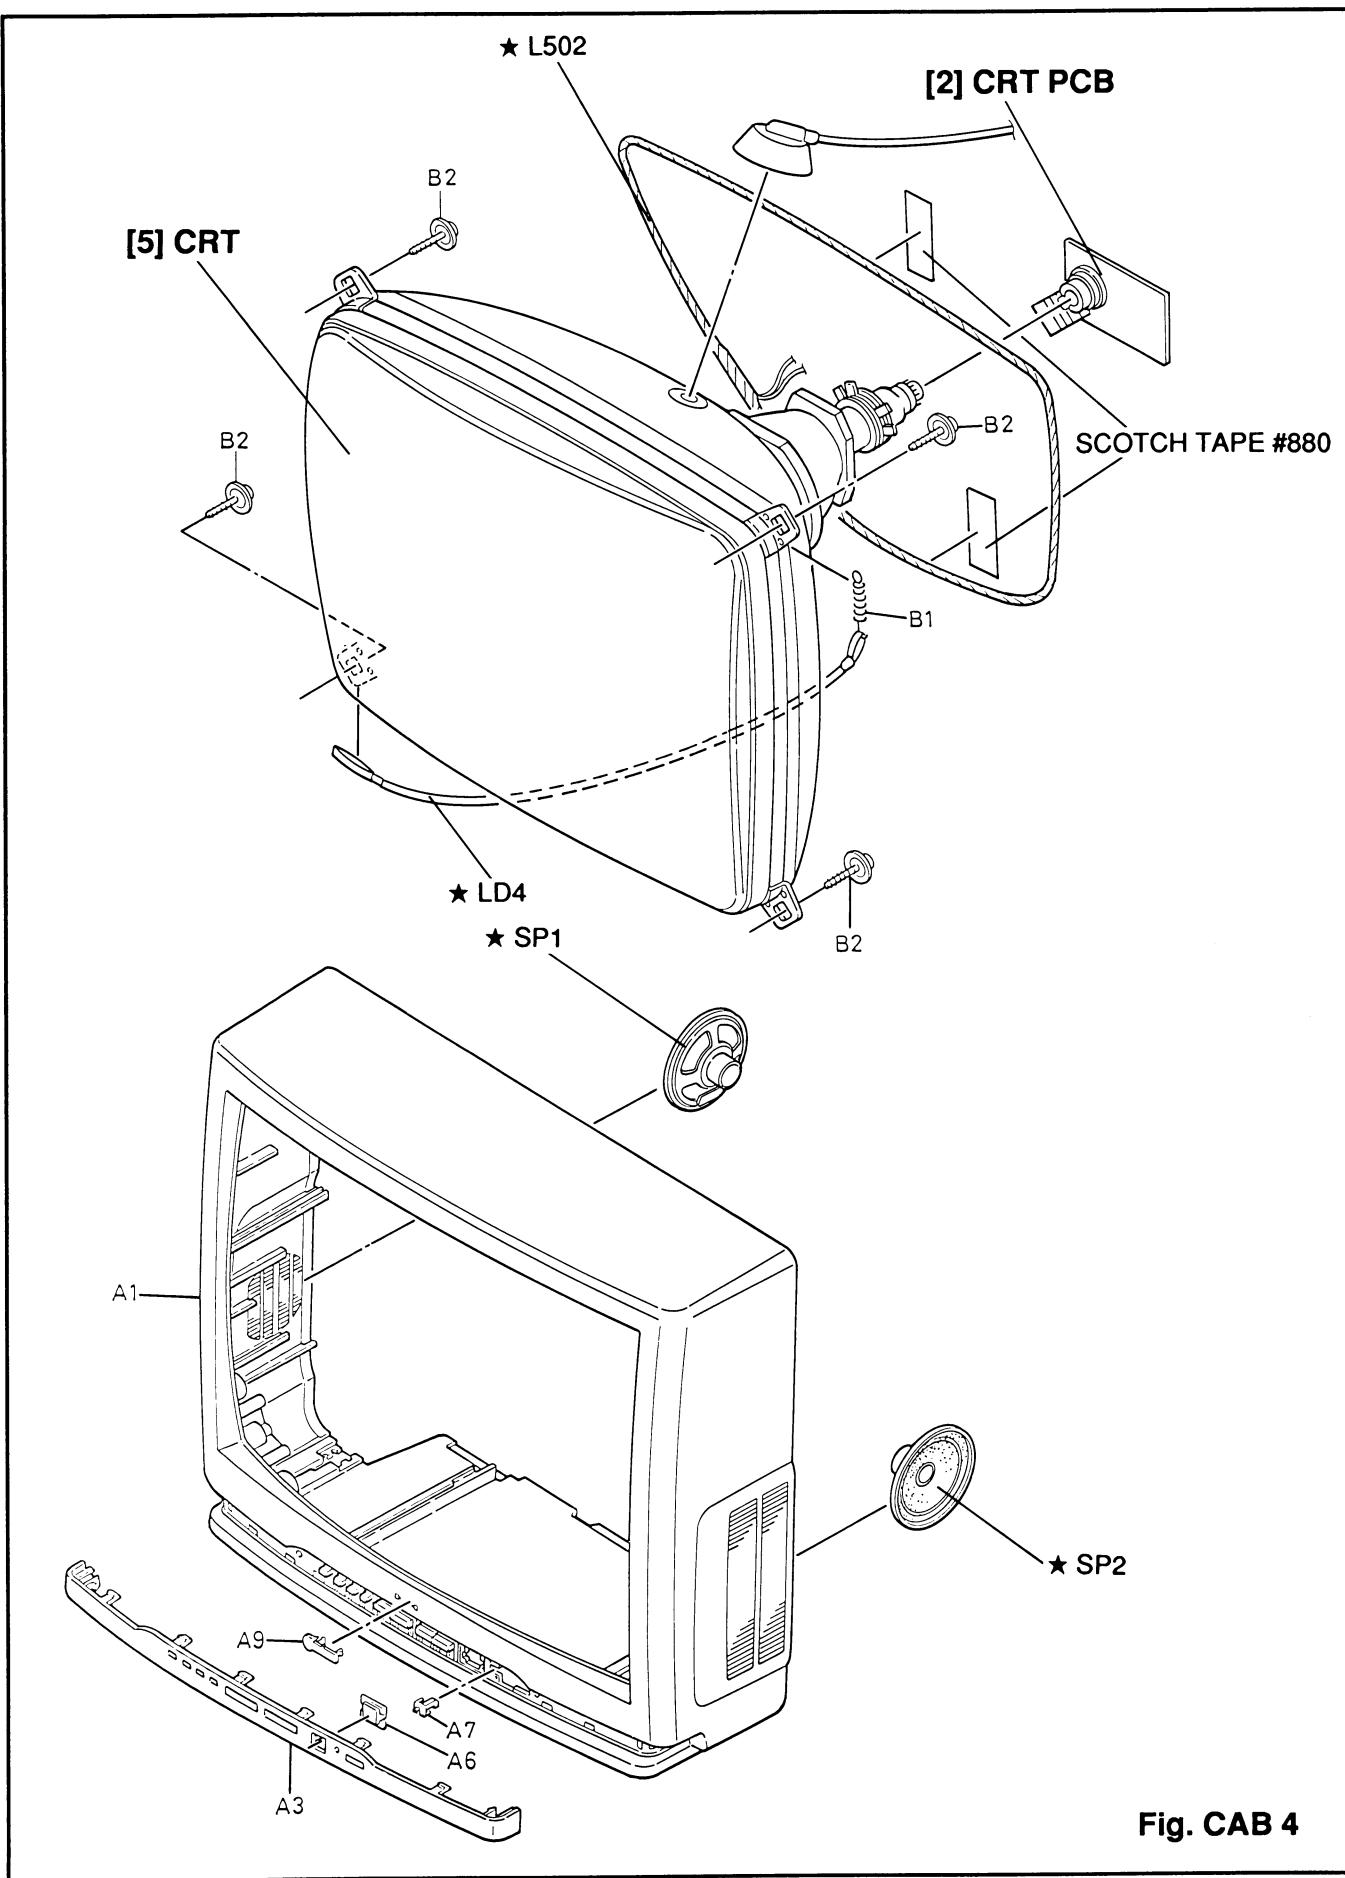

ELECTRICAL ADJUSTMENT INSTRUCTIONS

NOTE:

Electrical adjustments are required after replacing circuit components. It is important to perform these adjustments only after all repairs and replacements have been completed. Also, do not attempt these adjustments unless the proper equipment is available.


TEST EQUIPMENT REQUIRED:

1. IF Sweeper
2. DC Volt Meter
3. Oscilloscope: Dual Trace with 10:1 probe
4. PAL, SECAM and NTSC Pattern Generator
5. Monoscope
6. Color Analyzer

HOW TO SET UP THE ADJUSTMENT MODE:

Preset Mode: Press picture select button on the remote control unit, then press the number "1" button.

Brightness ----- Center
Color ----- Center
Contrast ----- Approx 70%

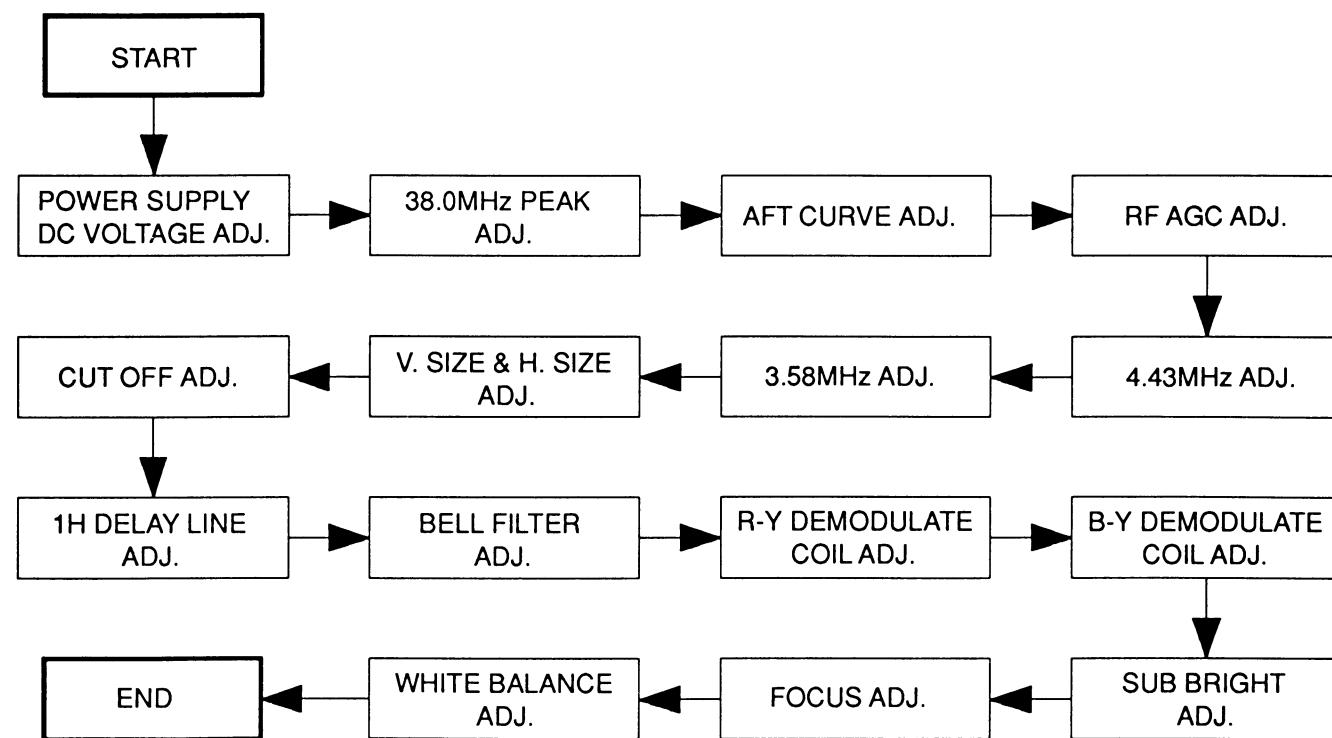

1. POWER SUPPLY DC VOLTAGE ADJUSTMENT

Purpose: To get correct voltage.

Symptom of Misadjustment: If voltage is incorrect, picture is dark.

Test Point	Adjustment Point	Input
D245	VR205	---
Equipment		Spec.
DC Volt Meter		DC +116±0.5V
Connections of M. EQ.		

Reference Notes: D245, VR205 --- MAIN PCB

1. To inactivate FBT, ground the base of Q220.
2. Connect both terminal of C343 by 1KΩ (60W~80W).
3. Connect the equipment as shown in the above table.
4. Adjust VR205 for reading +116±0.5V on the DC Volt Meter.

2. 38.0MHz PEAK ADJUSTMENT (for TUNER)

Purpose: To adjust PIF (Picture Intermediate Frequency).

Symptom of Misadjustment: Beat may appear on the picture and buzz may sound.

Test Point	Adjustment Point	Input
IC101 6pin, 16pin	L106	---
Equipment		Spec.
IF Sweeper, Oscilloscope		See below
Figure		

Reference Notes: IC101, L106 --- IF PCB

1. Connect Output of sweeper to 6pin of IC101.
Frequency set of sweeper are below:
(1) 31.5MHz (2) 32.4MHz (3) 33.57MHz (4) 35.8MHz (5) 38.0MHz (6) 39.45MHz
2. Connect the oscilloscope to 16pin of IC101.
3. Load DC Voltage to 4pin of IC101 as the wave of oscilloscope not to clip.
4. Adjust L106 as the marker for 38.0MHz to be peak.


3. AFT CURVE ADJUSTMENT (for TUNER)

Purpose: To operate AFT correctly.

Symptom of Misadjustment: AFT does not work correctly and/or synchronism will be faulty.

Test Point	Adjustment Point	Input
IC101 6pin, 11pin	L107	---
Equipment		Spec.
IF Sweeper, Oscilloscope		See below

Figure

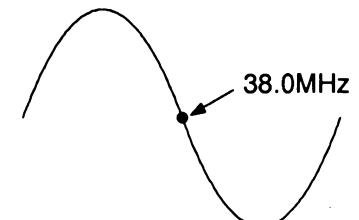

Reference Notes: SW206 --- MAIN PCB IC101, L107 --- IF PCB

1. Connect output of sweeper to 6pin of IC101.
Frequency set is the same as for 38.0MHz Peak Adjustment.
2. Connect the oscilloscope to 11pin of IC101.
3. Push SW206 to disengage AFT action.
4. Adjust L107 as the marker for 38.0MHz to the center of AFT curve.


4. RF AGC ADJUSTMENT (for TUNER)

Purpose: Set AGC (Auto Gain Control) Level.

Symptom of Misadjustment: AGC does not synchronize correctly when RF Input Level is weak and distortion may cause on the picture when it is strong.

Test Point	Adjustment Point	Input
TU201 6pin	VR101	PAL Color Bar
Equipment		Spec.
PAL Pattern Generator, DC Volt Meter		DC +4.1±0.1V

Connections of M. EQ.

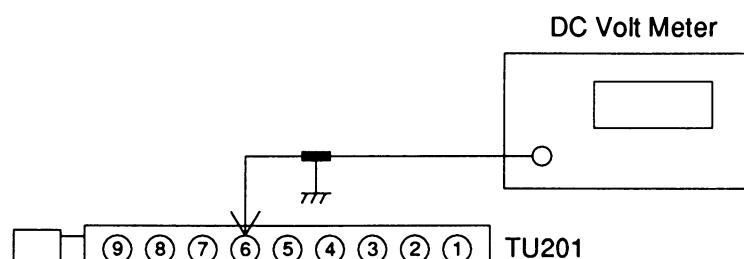

Reference Notes: TU201 --- MAIN PCB VR101 --- IF PCB

1. Receive the PAL Color Bar signal for 2ch (48.25MHz). (RF input level 80dB μ V at the best synchronized point)
2. Connect the equipment as shown in the above table.
3. Adjust VR101 for reading +4.1±0.1V on the DC Volt Meter.


5. 4.43MHz ADJUSTMENT

Purpose: To adjust the color sub-carrier frequency of PAL and SECAM.

Symptom of Misadjustment: No color when receiving PAL and SECAM signal.


Test Point	Adjustment Point	Input
Screen	C299	PAL Red Raster
Equipment		Spec.
PAL Pattern Generator		See below

Figure

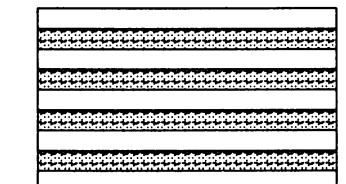


(Pink)

Picture is rolling or unstable.

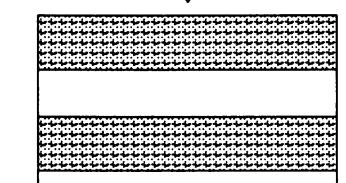

(Purple)

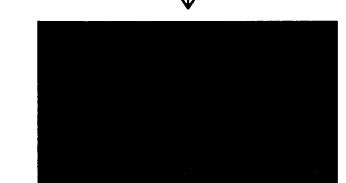

Whole Screen Red

Picture is stable.

Reference Notes: C299 --- MAIN PCB

1. Input the PAL Red Raster.
2. Check picture. A. If Red picture is stable.OK
B. If Red picture is rolling or unstable, adjust C299 until stable.

6. 3.58MHz ADJUSTMENT

Purpose: To adjust the color sub-carrier frequency of NTSC.

Symptom of Misadjustment: No color when receiving NTSC signal.

Test Point	Adjustment Point	Input
Screen	C298	NTSC Red Raster
Equipment		Spec.
NTSC Pattern Generator		See below

Reference Notes: C298 --- MAIN PCB

1. Input the NTSC Red Raster.
2. Check picture. Procedure is the same as for 4.43MHz Adjustment.

7. V. SIZE ADJUSTMENT

Purpose: To get correct vertical size of screen image.

Symptom of Misadjustment: Vertical size of screen image may not be properly displayed.

Test Point	Adjustment Point	Input
Screen	VR204	Monoscopic Pattern
Equipment		Spec.
Monoscope		90±5%

Figure

Reference Note: VR204 --- MAIN PCB

1. Operate the unit more than 20 minutes.
2. Input the Monoscopic Pattern.
3. Adjust VR204 so that the vertical size will be 90±5% of Monoscopic Pattern and the circle is round.

8. H. SIZE ADJUSTMENT

Purpose: To get correct horizontal size of screen image.

Symptom of Misadjustment: Horizontal size of screen image may not be properly displayed.

Test Point	Adjustment Point	Input
Screen	L206	Monoscopic Pattern
Equipment		Spec.
Monoscope		90±5%

Figure

Reference Note: L206 --- MAIN PCB

1. Operate the unit more than 20 minutes.
2. Input the Monoscopic Pattern.
3. Adjust L206 so that the horizontal size will be 90±5% of Monoscopic Pattern and the circle is round.

9. CUT OFF ADJUSTMENT

Purpose: To adjust the beam current of R, G, B and screen voltage.

Symptom of Misadjustment: White color may be reddish, greenish or bluish.

When the screen voltage is too high, the scanning line is appeared on the screen.

Test Point	Adjustment Point	Input
Screen	VR604, VR605, VR606 Screen-VR (FBT)	Black Raster
Equipment		Spec.
Pattern Generator		See below

Figure

Reference Notes: VR601, VR602, VR603, VR604, VR605, VR606 --- CRT PCB

SW209 --- MAIN PCB

Screen-VR --- MAIN PCB (FBT)

1. Operate the unit more than 20 minutes.
2. Degauss the CRT using Degaussing Coil.
3. Input the Black Raster.
4. Turn the Screen-VR (FBT) fully counterclockwise.
5. Set VR602 (B. Drive), VR603 (R. Drive), VR604 (B. Cut Off), VR605 (G. Cut Off), VR606 (R. Cut Off) and VR601 (Sub Bright) to center.
6. Set the SW209 (Service SW) to ON.
7. Slowly turn the Screen-VR (FBT) to the point where horizontal line just visible.
8. Adjust VR604 (Blue), VR605 (Green) and VR606 (Red) so that horizontal line becomes pure white.
9. Turn off the SW209 (Service SW).


Note: Confirm that White Balance Adj. is correct after this adjustment, and attempt White Balance Adj. if needed.

10. 1 H DELAY LINE ADJUSTMENT (for PAL)

Purpose: To get correct 1H delay line when the PAL signal is entered.

Symptom of Misadjustment: The Anti-PAL signal part is colored when the Philips Pattern is entered.
Each scanning line is colored on the color bar.

Test Point	Adjustment Point	Input
TP5 TP1 (GND)	L210, VR202, VR203	Philips Pattern
Equipment		Spec.
Pattern Generator Oscilloscope		See below
Connections of M. EQ.		

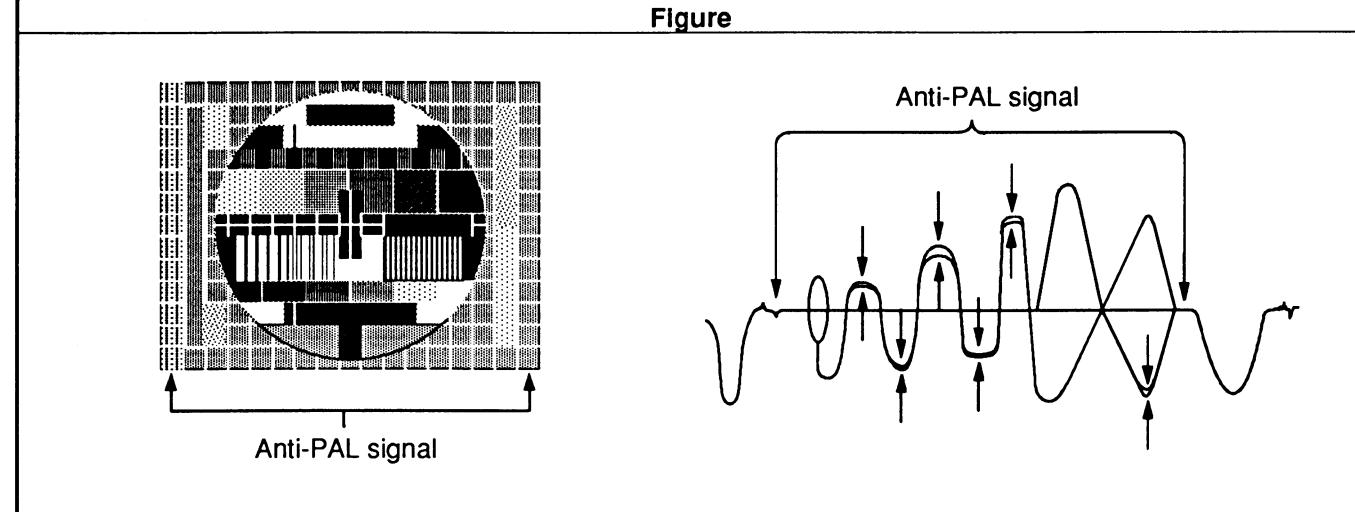

Reference Notes: D230, TP1, TP5, L210, VR202, VR203 --- MAIN PCB

1. Input the Philips Pattern.
2. Connect the equipment as shown in the above table.
3. Adjust VR202 VR203 and L210 so that the amplitude at Anti-PAL signal part becomes minimum (no color) and the waveform at the color bar part is not seen in double ("Venetian Blind" does not appear at the color bar signal part).

11. BELL FILTER ADJUSTMENT (for SECAM)

Purpose: To adjust the center frequency of SECAM bell filter.

Symptom of Misadjustment: The color will be reversed when the SECAM signal is entered.

Test Point	Adjustment Point	Input
TP2 TP1 (GND)	L216	SECAM Color Bar
Equipment		Spec.
SECAM Pattern Generator Oscilloscope (5mV/div, 10μs/div AC)		See below
Connections of M. EQ.		
Figure		


Reference Notes: D230, TP1, TP2, L216 --- MAIN PCB

1. Input the SECAM Color Bar signal.
2. Connect the equipment as shown in the above table.
3. Set oscilloscope to 10 : 1 probe, AC 5mV/div and Range 10μs/div.
4. Adjust L216 with core driver to flat waveform.

12. R-Y DEMODULATE COIL ADJUSTMENT (for SECAM)

Purpose: To adjust the level of R-Y color difference signal.

Symptom of Misadjustment: The R, G and B will be unbalanced.

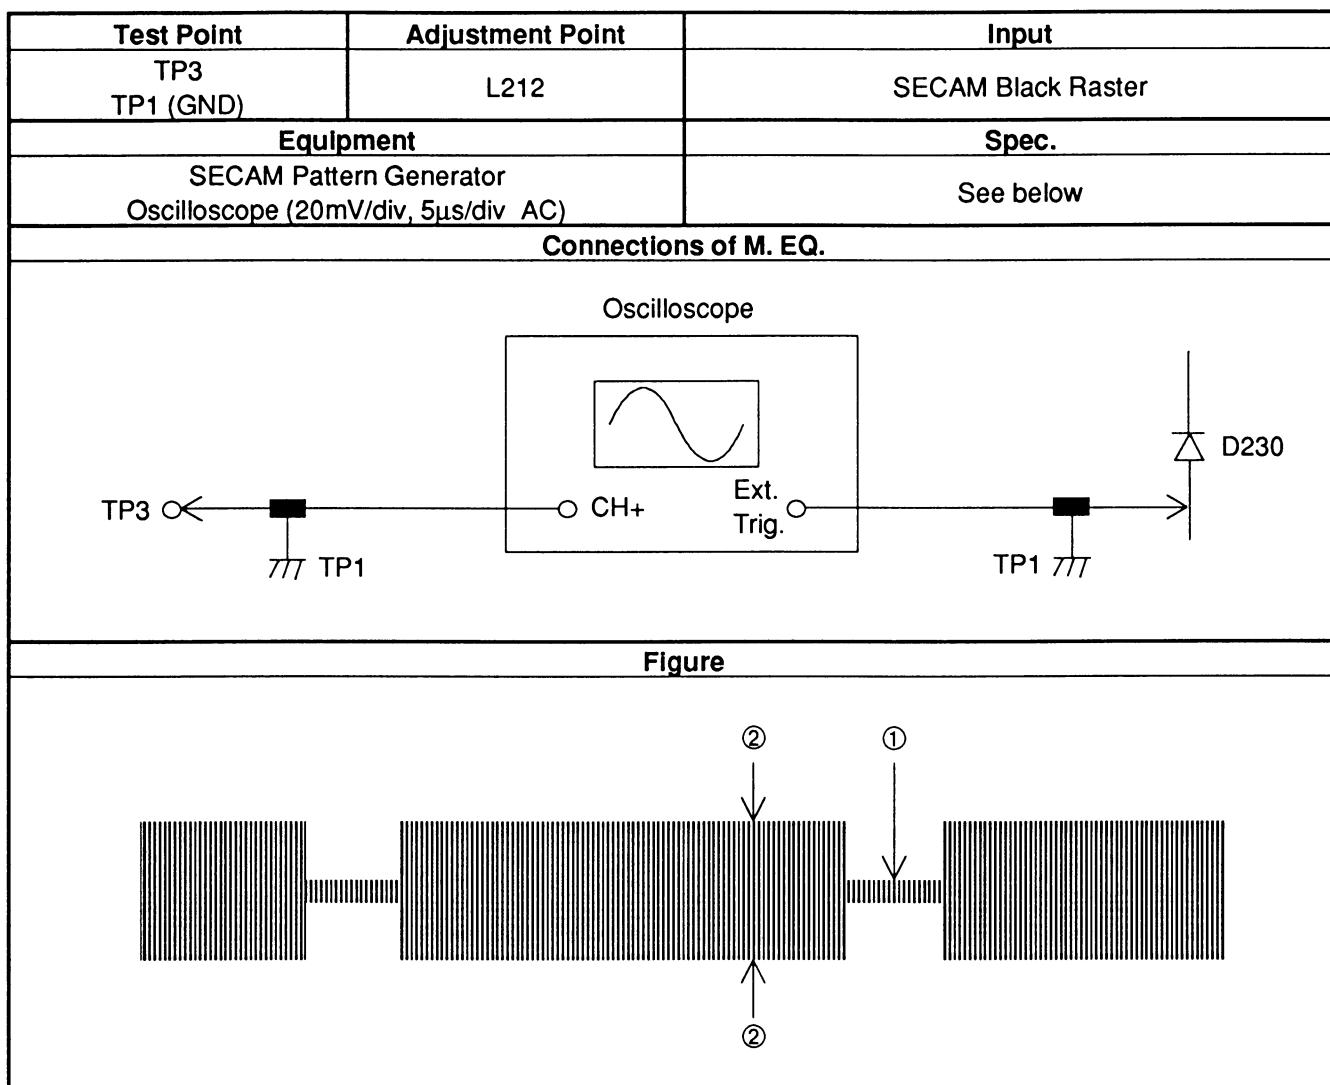


Reference Notes: D230, TP1, TP3, L212 --- MAIN PCB

1. Connect the equipment as shown in the above table.
2. Input the SECAM Black Raster.
3. Adjust L212 with core driver so that ① becomes center of ② as shown in the above table.

13. B-Y DEMODULATE COIL ADJUSTMENT (for SECAM)

Purpose: To adjust the level of B-Y color difference signal.

Symptom of Misadjustment: The R, G and B will be unbalanced.

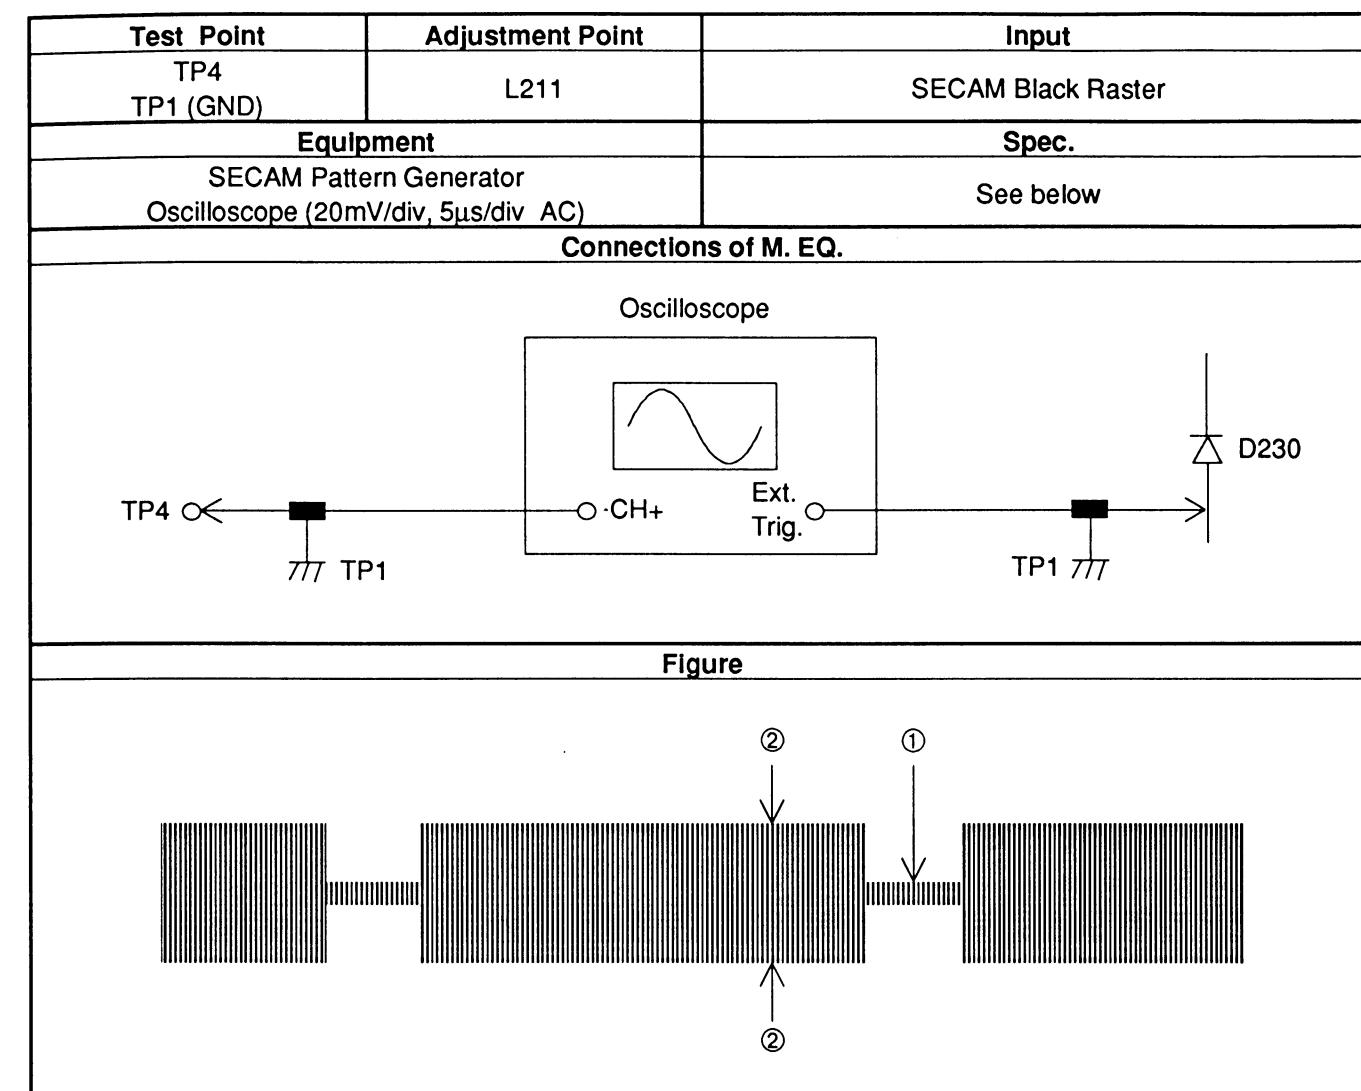

Reference Notes: D230, TP1, TP4, L211 --- MAIN PCB

1. Connect the equipment as shown in the above table.
2. Input the SECAM Black Raster.
3. Adjust L211 with core driver so that ① becomes center of ② as shown in the above table.

14. SUB BRIGHT ADJUSTMENT

Purpose: To get proper brightness.

Symptom of Misadjustment: Proper brightness cannot be obtained by adjusting the Bright Control.

Test Point	Adjustment Point	Input
Screen	VR601	Gray Scale pattern
Equipment Pattern Generator		Spec. See below

Figure

Reference Notes: VR601 --- CRT PCB

1. Operate the unit more than 20 minutes.
2. Input the 8-step Gray Scale pattern.
3. Adjust VR601 so that the bar is just visible. (See above figure)

15. FOCUS ADJUSTMENT

Purpose: To get correct focus.

Symptom of Misadjustment: Blurred image is shown on the display.

Test Point	Adjustment Point	Input
Screen	Focus-VR (FBT)	Monoscopic Pattern
Equipment Monoscope		Spec. See below

Figure

Reference Note: Focus-VR (FBT) --- MAIN PCB

1. Operate the unit more than 20 minutes.
2. Input the Monoscopic Pattern.
3. Adjust Focus-VR (FBT) to be obtained clear picture.

SCHEMATIC DIAGRAMS / PCB'S AND TEST POINTS

STANDARD NOTES

Warning

Critical components having special safety characteristics are identified with a Δ by the Ref. No. in the parts list and enclosed within a broken line * (where several critical components are grouped in one area) along with the safety symbol Δ on the schematics or exploded views.

Use of substitute replacement parts which do not have the same specified safety characteristics may create shock, fire, or other hazards.

Under no circumstances should the original design be modified or altered without written permission from Funai Electric Company. Funai assumes no liability, express or implied, arising out of any unauthorized modification of design. Servicer assumes all liability.

Notes:

- ① Do not use the part number shown on these drawings for ordering. The correct part number is shown in the parts list, and may be slightly different or amended since these drawings were prepared.
- ② All resistance values are indicated in ohms ($K=10^3$, $M=10^6$).
- ③ Resistor wattages are 1/5W or 1/6W unless otherwise specified.
- ④ All capacitance values are indicated in μF ($P=10^{-6} \mu F$).

Note of Capacitors:

(M) --- Mylar Cap. (SC) --- Semiconductor Cap. (TF) --- Stacked Metallized Film Cap.

Temprature Characteristics of Capacitors are noted with the following:

(YB) --- $\pm 10\%$ (SR) --- $\pm 15\%$ (NP0) --- $0\pm 60\text{ppm}/^\circ\text{C}$ (SL) --- $+350\sim 1000\text{ppm}/^\circ\text{C}$

Tolerance of Capacitors are noted with the following:

(K) --- $\pm 10\%$ (Z) --- $+80\sim 20\%$

Note of Resistor:

(F) --- Fuse Res.

VOLTAGE CHART

(Unit: Volt)

Pin No.	IC101	IC201	IC206
1	5.7	4.6	2.8
2	4.7	3.5	4.3
3	5.4	2.6	5.8
4	3.9	2.0	4.6
5	3.9	* 5.0~0.1	5.8
6	4.3	0	5.8
7	4.3	5.0	6.6
8	0	0	4.4
9	1.4	2.4	NC
10	4.8	2.5	4.4
11	6.0	2.5	0
12	3.8	5.0	0
13	8.4	5.0	0
14	8.4	5.0	0
15	3.8	5.0	3.1
16	4.4	5.0	5.0
17	11.7	0	2.9
18	0	NC	0.9
19	3.0	5.0	8.9
20	3.0	3.5	0.2
21	0	4.8	
22		NC	0
23	0	0	
24	0	2.2	
25	0	9.0	
26		4.1	3.6
27		5.0	0.5
28		3.0	0
29		3.0	4.2
30		0	5.2
31	—	3.0	
32	—	0.6	
33	4.9	0.4	
34	0	6.1	
35	5.0	6.1	
36	4.5	5.8	
37	0	2.5	
38		5.0	2.6
39	0	2.5	
40	0	3.9	
41	0	4.8	
42		5.0	6.8
43		2.6	
44		3.3	
45		3.6	
46		6.3	
47		8.9	
48		0	

Pin No.	IC202	IC203	IC204	IC205
1	5.0	6.0	0	11.0
2	2.5	5.9	13.0	4.9
3	2.5	6.9	27.4	NC
4	5.0	6.9	0.8	* 0.7~11.3
5	0	7.0	0.7	7.2
6	5.0	0	27.0	7.4
7	5.0	0	1.7	0
8	5.0	0		7.5
9		11.7		15.5
10		11.7		
11		11.7		
12		4.6		
13		5.0		
14		5.0		
15		6.0		
16		11.7		

Pin No.	IC207	IC208	IC209	IC210
1	16.3	32.0	2.5	11.8
2	0	0	2.5	0
3	11.8		4.9	8.9
4			4.9	
5			1.7	
6			1.7	
7			2.5	
8			2.6	
9			3.3	
10			2.7	
11			2.7	
12			1.7	
13			0.2	
14			0	
15			2.2	
16			3.8	
17			2.3	
18			1.7	
19			4.9	
20			4.9	
21			2.5	
22			2.5	
23			0	
24			2.5	

* Vol. Min~Max

Input: PAL Color Bar Signal (with 1KHz Audio Signal)

Receiving Ch.: E2 ch (48.25 MHz)

Preset Mode: Press Picture Select button on the remote control unit, then press the number "1" button.

Brightness--- Center

Color--- Center

Contrast--- Approx 70%


EXPLODED VIEW

t: Volt)

C205
11.0
4.9
NC
9.7~11.3
7.2
7.4
0
7.5
15.5

C210
11.8
0
8.9

★ Marked Parts see the Electrical Parts List.

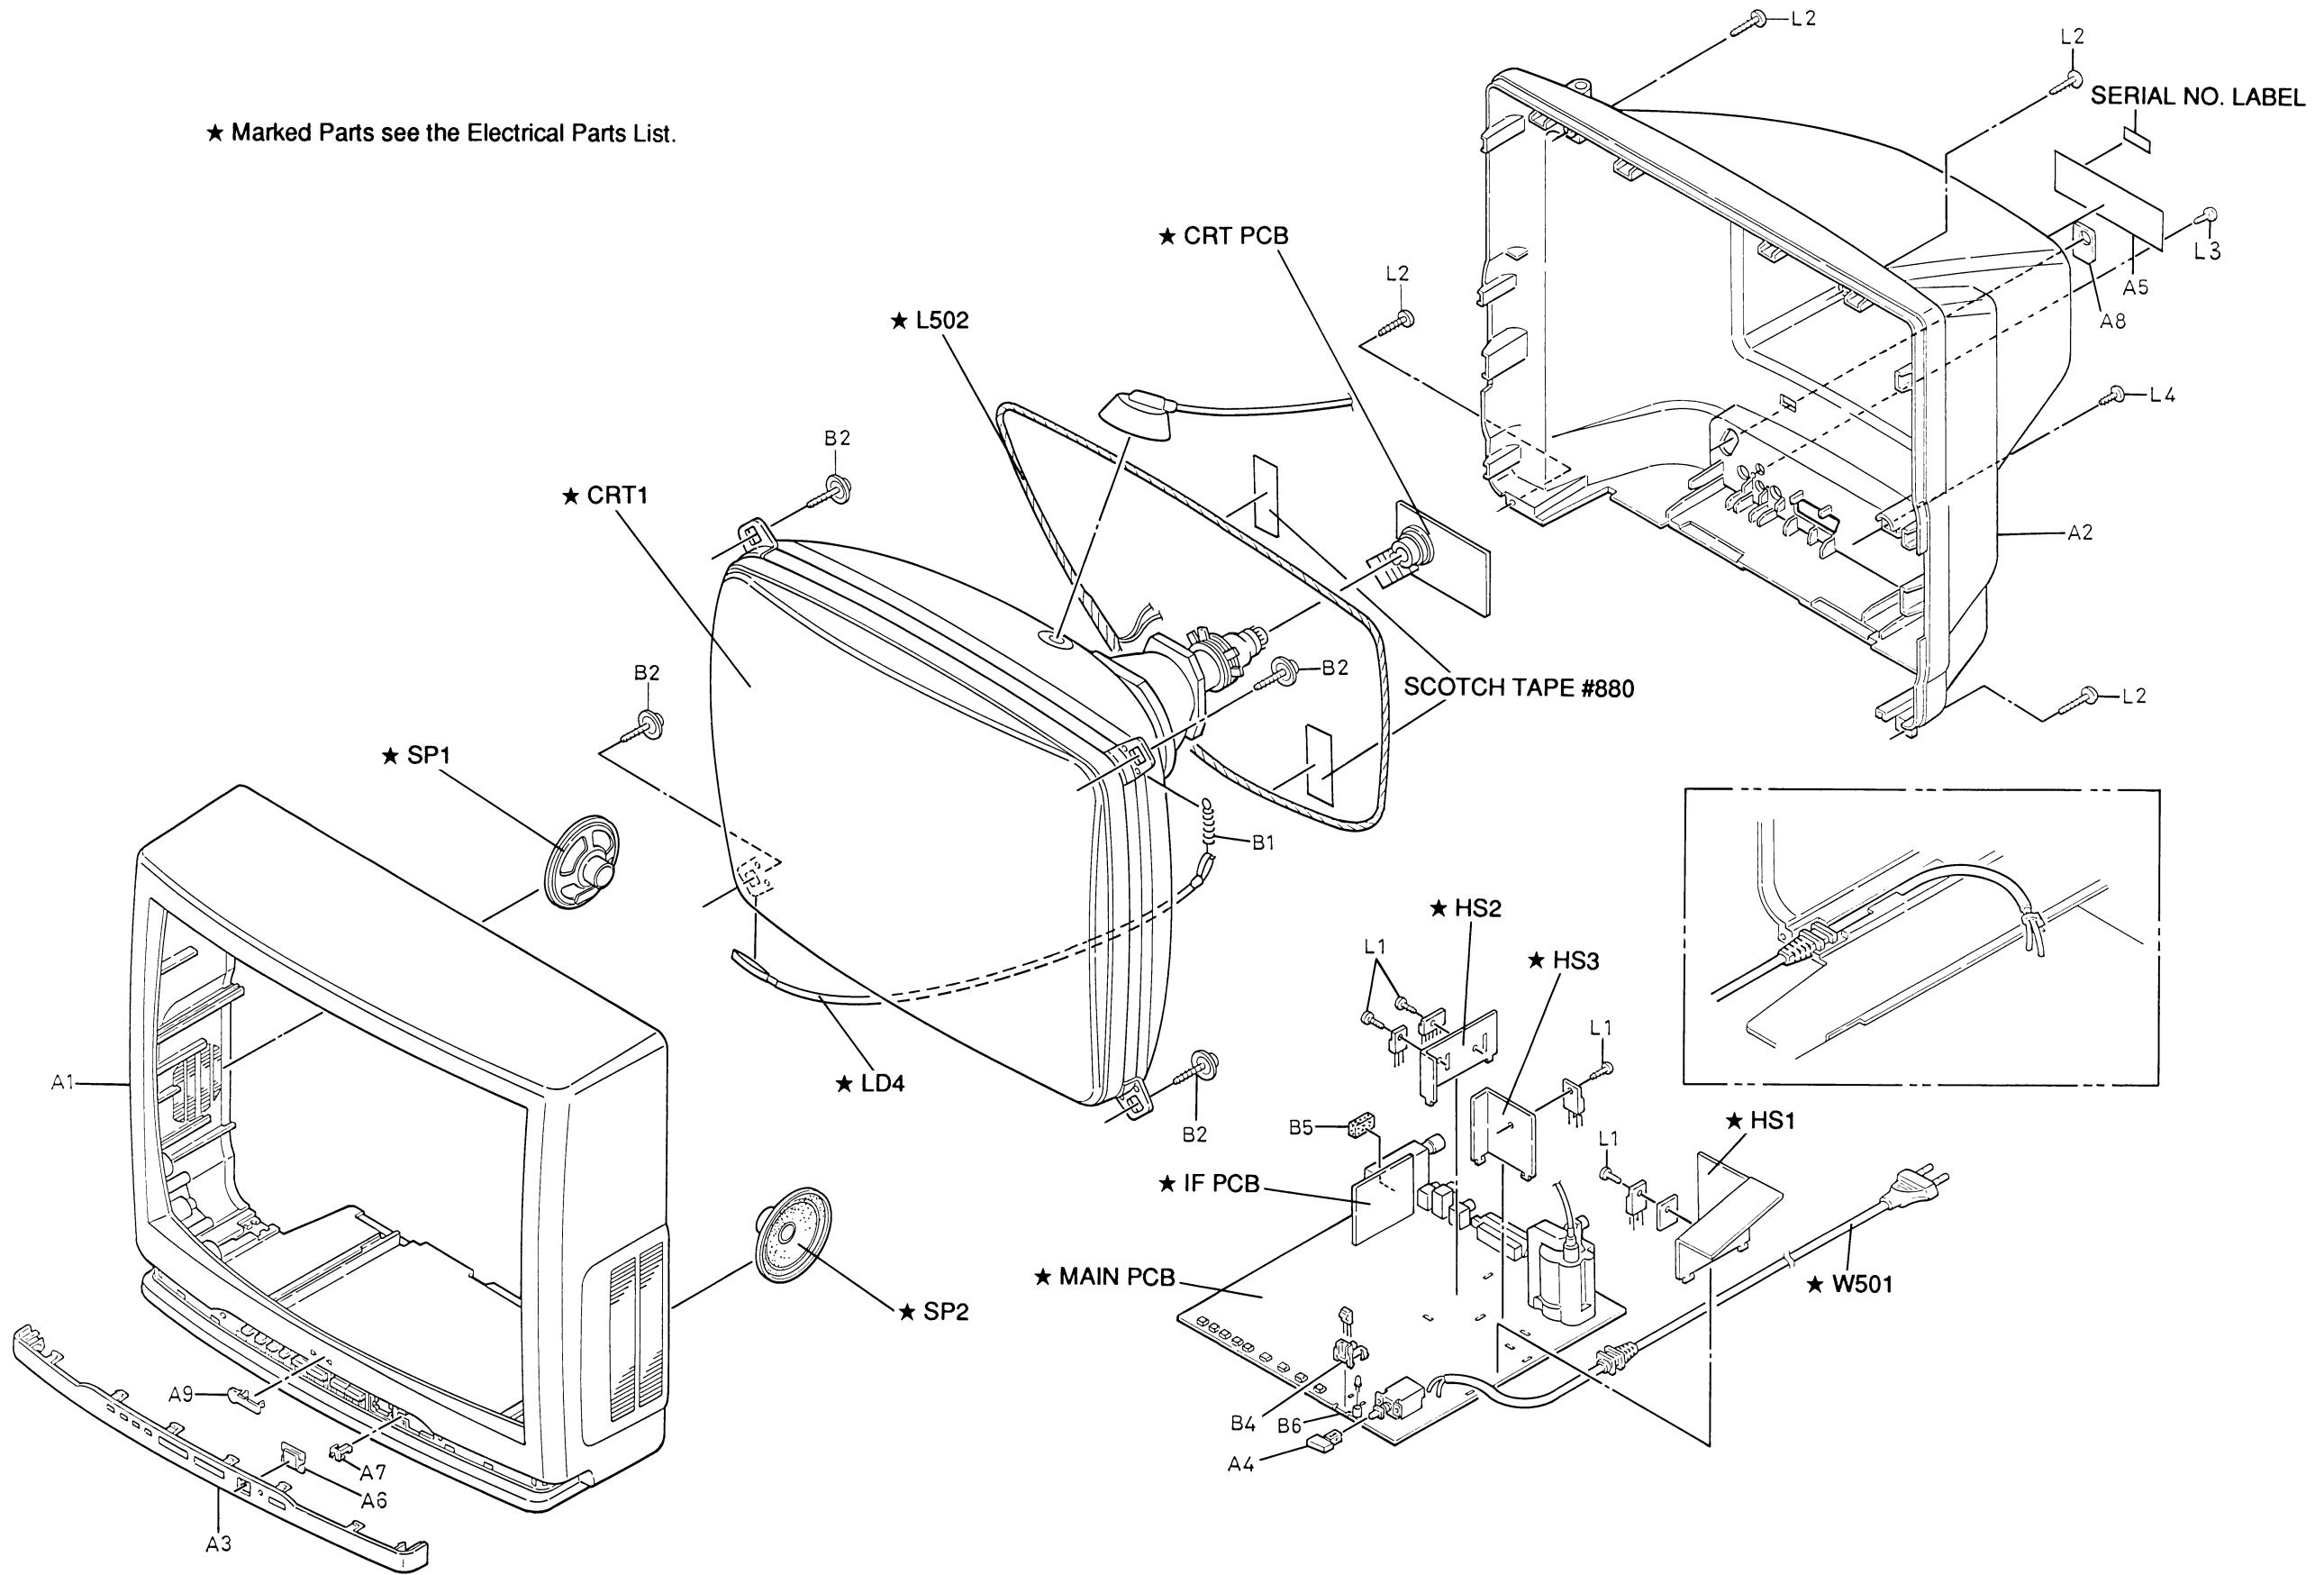

MECHANICAL PARTS LIST

PRODUCT SAFETY NOTE: Products marked with a  have special characteristics important to safety. Before replacing any of these components, read carefully the product safety notice in this service manual. Don't degrade the safety of the product through improper servicing.

Ref. No.	Description	Part No.
A 1	FRONT CABINET	OEM000111
A 2 *	REAR CABINET	OEM000112
A 3	CONTROL PANEL	OEM200274
A 4	POWER KNOB	OEM401467
A 5 	RATING LABEL	OEM401491
A 6	SENSOR WINDOW	OEM401469
A 7	LED INDICATOR	OEM401470
A 8	JACK PLATE	OEM401478
A 9	BRAND BADGE	OEM400975
B 1	TENSION SPRING EM40808	26WH006
B 2	CRT MOUNTING SCREW K42419	8A00083
B 4	SENSOR HOLDER	OEM401471
B 5	CUSHION	OEM401374
B 6	LED TUBE	OEM401473
L 1	B TIGHT SCREW 3X10 BIND +	GBMB3100
L 2	P TIGHT SCREW 4X16 BIND +	GBMP4160
L 3	P TIGHT SCREW 3X8 BIND +	GBKP3080
L 4	P TIGHT SCREW 4X12 BIND +	GBKP4120
ACCESSORIES		
	REMOTE CONTROL UNIT	UREMT20MM007
	DRY BATTERY UM-3 2PCS PACK or	1813020
	DRY BATTERY UM-3 2PCS PACK or	579W099
	DRY BATTERY UM-3 2PCS PACK	1790849
	ROD ANTENNA	OEMN00542
	OWNER'S MANUAL	OEMN00639

* Material certificate is required to attach.

ELECTRICAL PARTS LIST

PRODUCT SAFETY NOTE: Products marked with a  have special characteristics important to safety. Before replacing any of these components, read carefully the product safety notice of this service manual. Don't degrade the safety of the product through improper servicing.

NOTE: Parts that not assigned part number (-----) are not available.

Tolerance of Capacitors and Resistors are noted with the following symbols.

C.....±0.25%	F.....±1%	J.....±5%	M.....±20%	Z.....+80/-20%
D.....±0.5%	G.....±2%	K.....±10%	N.....±30%	

MMA PCB ASSEMBLY

Ref. No.	Description	Part No.
	MMA PCB ASSEMBLY Consists of the following:	MMA-96E
	PCB (MAIN+CRT+IF) MAIN PCB (MMA-A) CRT PCB (MMA-B) IF PCB (MMA-C)	BL7533F010B1 ----- ----- -----

MAIN PCB (MMA-A)

Ref. No.	Description	Part No.
	MAIN PCB (MMA-A) Consists of the following:	-----
CAPACITORS		
C201	ELECTROLYTIC CAP. 470µF/16V M	626C477
C202	ELECTROLYTIC CAP. 10µF/50V M	126F106S
C203	ELECTROLYTIC CAP. 4.7µF/50V M	126F475S
C206	ELECTROLYTIC CAP. 4.7µF/50V M	126F475S
C209	ELECTROLYTIC CAP. 4.7µF/50V M	126F475S
C211	ELECTROLYTIC CAP. 4.7µF/50V M	126F475S
C212	ELECTROLYTIC CAP. 220µF/6.3V M	126A227S
C213	ELECTROLYTIC CAP. 1µF/50V M	126F105S
C214	CHIP CERAMIC CAP. F Z 0.022µF/50V	CHE1JZB0F223
C215	ELECTROLYTIC CAP. 10µF/50V M	126F106S
C216	*MYLAR CAP. 0.18µF/50V K	2250184S
C217	ELECTROLYTIC CAP. 10µF/50V M	126F106S
C218	ELECTROLYTIC CAP. 10µF/50V M	126F106S
C219	ELECTROLYTIC CAP. 1µF/50V M	126F105S
C220	CHIP CERAMIC CAP. SL J 120pF/50V	CHE1JJBSL121
C221	ELECTROLYTIC CAP. 2.2µF/50V M	126F225S
C224	CHIP CERAMIC CAP. CH J 24pF/50V	CHE1JJBCH240
C225	CHIP CERAMIC CAP. CH J 24pF/50V	CHE1JJBCH240
C226	CHIP CERAMIC CAP. SL J 100pF/50V	CHE1JJBSL101
C227	CHIP CERAMIC CAP. SL J 100pF/50V	CHE1JJBSL101
C228	CHIP CERAMIC CAP. SL J 100pF/50V	CHE1JJBSL101
C229	CHIP CERAMIC CAP. F Z 0.01µF/50V	CHE1JZB0F103
C230	ELECTROLYTIC CAP. 47µF/16V M	126C476S
C232	CHIP CERAMIC CAP. SL J 100pF/50V	CHE1JJBSL101
C233	ELECTROLYTIC CAP. 10µF/50V M	126F106S
C234	ELECTROLYTIC CAP. 10µF/50V M	126F106S
C235	ELECTROLYTIC CAP. 10µF/50V M	126F106S
C236	CHIP CERAMIC CAP. F Z 0.01µF/50V	CHE1JZB0F103
C237	CHIP CERAMIC CAP. SL J 47pF/50V	CHE1JJBSL470

Ref. No.	Description	Part No.
C238	MYLAR CAP. 0.001µF/50V K	2250102S
C239	MYLAR CAP. 0.002µF/50V K	2250222S
C240	MYLAR CAP. 0.1µF/50V K	2250104S
C241	CHIP CERAMIC CAP. B K 0.001µF/50V	CHE1JKB0B102
C242	ELECTROLYTIC CAP. 100µF/35V M	126E107S
C243	ELECTROLYTIC CAP. 22µF/35V M	126E226S
C244	CHIP RES. 1/10W J 0Ω	RRXAJBBZ0000
C245	ELECTROLYTIC CAP. 2.2µF/50V M	126F225S
C246	ELECTROLYTIC CAP. 10µF/50V M	126F106S
C247	ELECTROLYTIC CAP. 1000µF/25V M	626D108
C248	ELECTROLYTIC CAP. 1µF/250V M or	CE2EMZNTL010
	ELECTROLYTIC CAP. 1µF/250V M or	CE2CMZDDL010
C249	ELECTROLYTIC CAP. 1µF/250V M	122Z340
C250	METALIZED FILM CAP. 0.47µF/200V or	122Z256
C251	METALIZED FILM CAP. 0.47µF/200V	1220511
C252	MYLAR CAP. 0.047µF/50V K	2250473S
C253	ELECTROLYTIC CAP. 1µF/50V	126F105S
C254	CHIP CERAMIC CAP. B K 0.01µF/50V	CHE1EKB0B103
C255	ELECTROLYTIC CAP. 2.2µF/50V M	126F225S
C256	ELECTROLYTIC CAP. 10µF/50V M	126F106S
C257	MYLAR CAP. 0.082µF/50V K	2250823S
C258	ELECTROLYTIC CAP. 470µF/16V M	626C477
C259	ELECTROLYTIC CAP. 470µF/25V M	626D477
C260	ELECTROLYTIC CAP. 1µF/250V M (105°C)	CA2E010NC009
C261	ELECTROLYTIC CAP. 100µF/35V M	126E107S
C262	ELECTROLYTIC CAP. 1µF/160V or	CE2CMZDDL010
	ELECTROLYTIC CAP. 1µF/160V or	CE2CMZNTL010
C263	ELECTROLYTIC CAP. 1µF/160V or	122Z282
C264	ELECTROLYTIC CAP. 1µF/160V or	1220497
	ELECTROLYTIC CAP. 1µF/160V or	122Z329
	ELECTROLYTIC CAP. 1µF/160V or	1220618
	METALIZED FILM CAP. 0.0056µF/1.6KV or	122Z282
	METALIZED FILM CAP. 0.0056µF/1.6KV or	1220497
	(use for FBT: FCM-20B031)	
	METALIZED FILM CAP. 0.0018µF/1.6KV or	122Z278
	METALIZED FILM CAP. 0.0018µF/1.6KV or	1220491
	[for CRT: 510UFB22-TC52(DPY)]	
	METALIZED FILM CAP. 0.001µF/1.6KV or	122Z275
	[for CRT: A48KMX12XX44]	
	METALIZED FILM CAP. 0.0012µF/1.6KV or	122Z276
	METALIZED FILM CAP. 0.0012µF/1.6KV or	1220489
	[for CRT: 51GGB95X-TC01]	

* Mylar is a registered trademark of E. I. Du Pont de Nemours and Company.

Ref. No.	Description	Part No.
C264	(use for FBT: 154-177T) METALIZED FILM CAP. 0.0033μF/1.6KV or METALIZED FILM CAP. 0.0033μF/1.6KV [for CRT: 510UFB22-TC52(DPY)]	122Z280 1220494
	METALIZED FILM CAP. 0.0018μF/1.6KV or METALIZED FILM CAP. 0.0018μF/1.6KV [for CRT: A48KMX12XX44]	122Z278 1220491
	METALIZED FILM CAP. 0.0022μF/1.6KV or METALIZED FILM CAP. 0.0022μF/1.6KV [for CRT: 51GGB95X-TC01]	122Z182 1220492
C265	ELECTROLYTIC CAP. 0.47μF/160V or ELECTROLYTIC CAP. 0.47μF/160V or ELECTROLYTIC CAP. 0.47μF/160V	CE2CMNTRL47 CE2CMZDLR47 122Z328
C268	CERAMIC CAP. 0.0022μF/500V	CCD2JKS0B222
C271	ELECTROLYTIC CAP. 47μF/160V M (105°C) or ELECTROLYTIC CAP. 47μF/160V M (105°C)	CA2C470NC009 CE2CMZDEH470
C273	ELECTROLYTIC CAP. 4.7μF/50V M	126F475S
C276	ELECTROLYTIC CAP. 0.22μF/50V M	126F224S
C277	CHIP CERAMIC CAP. SL J 33pF/50V	CHE1JJBSL330
C278	ELECTROLYTIC CAP. 470μF/16V M	626C477
C279	ELECTROLYTIC CAP. 1μF/50V M	126F105S
C280	ELECTROLYTIC CAP. 1μF/50V M	126F105S
C281	ELECTROLYTIC CAP. 1μF/50V M	126F105S
C282	ELECTROLYTIC CAP. 1μF/50V M	126F105S
C283	ELECTROLYTIC CAP. 1μF/50V M	126F105S
C284	ELECTROLYTIC CAP. 4.7μF/50V M	126F475S
C285	ELECTROLYTIC CAP. 0.22μF/50V (L.L.) or ELECTROLYTIC CAP. 0.22μF/50V (L.L.)	CE1JMASLLR22 CE1JMAULLR22
C286	ELECTROLYTIC CAP. 0.22μF/50V (L.L.) or ELECTROLYTIC CAP. 0.22μF/50V (L.L.)	CE1JMASLLR22 CE1JMAULLR22
C287	ELECTROLYTIC CAP. 0.22μF/50V (L.L.) or ELECTROLYTIC CAP. 0.22μF/50V (L.L.)	CE1JMASLLR22 CE1JMAULLR22
C288	SEMICONDUCTOR CAP. 0.047μF/25V K	12Y2473S
C289	CHIP CERAMIC CAP. B K 0.001μF/50V	CHE1JKB0B102
C290	CHIP CERAMIC CAP. F Z 0.022μF/50V	CHE1JJZBF223
C291	ELECTROLYTIC CAP. 1μF/50V	126F105S
C292	CHIP CERAMIC CAP. F Z 0.01μF/50V	CHE1JJZBF103
C293	ELECTROLYTIC CAP. 47μF/16V	126C476S
C294	STACKED FILM CAP. 0.47μF/50V K or STACKED FILM CAP. 0.47μF/50V K	125U474S 125R474S
C295	STACKED FILM CAP. 0.15μF/50V K or STACKED FILM CAP. 0.15μF/50V K	125U154S 125R154S
C296	ELECTROLYTIC CAP. 0.47μF/50V M	126F474S
C297	CHIP CERAMIC CAP. B K 0.001μF/50V	CHE1JKB0B102
C298	TRIMMER CAP. 30pF or	CVC300UT1008
C299	TRIMMER CAP. 30pF or	1280123
	TRIMMER CAP. 30pF	CVC300UT1008
C300	CHIP CERAMIC CAP. B K 0.0022μF/50V	CHE1JKB0B222
C301	STACKED FILM CAP. 0.22μF/50V K or STACKED FILM CAP. 0.22μF/50V K	125U224S 125R224S
C302	ELECTROLYTIC CAP. 22μF/50V M	126F226S
C303	CHIP CERAMIC CAP. SL F 10pF/50V	CHE1JFBLS100
C304	CHIP CERAMIC CAP. SL J 82pF/50V	CHE1JJBSL820
C305	CHIP CERAMIC CAP. SL J 22pF/50V	CHE1JJBSL220
C306	CHIP CERAMIC CAP. F Z 0.01μF/50V	CHE1JJZBF103
C307	CHIP CERAMIC CAP. SL J 75pF/50V	CHE1JJBSL750
C308	SEMICONDUCTOR CAP. 0.1μF/25V Z	1220520S
C309	CHIP CERAMIC CAP. CH J 27pF/50V	CHE1JJBCH270

Ref. No.	Description	Part No.
C310	CHIP CERAMIC CAP. SL J 120pF/50V	CHE1JJBSL121
C311	ELECTROLYTIC CAP. 0.47μF/50V	126F474S
C312	ELECTROLYTIC CAP. 0.47μF/50V	126F474S
C313	CHIP CERAMIC CAP. B K 0.0056μF/50V	CHE1JKB0B562
C314	CHIP CERAMIC CAP. SL J 220pF/50V	CHE1JJBSL221
C315	CHIP CERAMIC CAP. F Z 0.01μF/50V	CHE1JJZBF103
C316	CHIP CERAMIC CAP. SL J 100pF/50V	CHE1JJBSL101
C317	SEMICONDUCTOR CAP. 0.1μF/25V Z	1220520S
C318	CHIP CERAMIC CAP. CH J 22pF/50V	CHE1JJBCH220
C319	CHIP CERAMIC CAP. SL J 75pF/50V	CHE1JJBSL750
C320	SEMICONDUCTOR CAP. 0.1μF/25V Z	1220520S
C321	CHIP CERAMIC CAP. SL J 120pF/50V	CHE1JJBSL121
C322	ELECTROLYTIC CAP. 47μF/16V M	126C476S
C340	CERAMIC CAP. 470pF/500V	CCD2JKS0B471
C341	CERAMIC CAP. B K 470pF/50V	3B42471S
C342	CERAMIC CAP. B K 470pF/50V	3B42471S
C343	ELECTROLYTIC CAP. 100μF/160V M (105°C) or	CA2C101NC009
	ELECTROLYTIC CAP. 100μF/160V M (105°C)	CE2CMZDEH101
C344	ELECTROLYTIC CAP. 1000μF/25V M	626D108
C345	ELECTROLYTIC CAP. 47μF/16V M	126C476S
C346	ELECTROLYTIC CAP. 1000μF/25V M	626D108
C347	ELECTROLYTIC CAP. 470μF/16V M	626C477
C348	ELECTROLYTIC CAP. 2.2μF/50V M	126F225S
C363	ELECTROLYTIC CAP. 470μF/16V M	626C477
C364	MYLAR CAP. 0.1μF/50V K	2250104S
C365	CHIP CERAMIC CAP. F Z 0.022μF/50V	CHE1JJZBF223
C366	MYLAR CAP. 0.0022μF/50V K	2250222S
C368	CHIP CERAMIC CAP. B K 0.001μF/50V	CHE1JKB0B102
C371	CERAMIC CAP. B K 1000pF/50V	3B42102S
C372	CERAMIC CAP. CH D 10pF/50V	32CH100S
C373	CHIP CERAMIC CAP. SL J 82pF/50V	CHE1JJBSL820
C375	ELECTROLYTIC CAP. 47μF/16V M	126C476S
C376	CERAMIC CAP. 1000pF/1KV or	CCD3AKP0B102
	CERAMIC CAP. 1000pF/1KV	6220574
C377	CERAMIC CAP. SL J 68pF/50V	3S41680S
C378	ELECTROLYTIC CAP. 1000μF/16V M	626C108
C379	ELECTROLYTIC CAP. 470μF/16V M	626C477
C501 △	CERAMIC CAP. 2200pF AC400V or CERAMIC CAP. 2200pF AC400V	CCG2HMP0E222 1220621
C502 △	CERAMIC CAP. 2200pF AC400V or CERAMIC CAP. 2200pF AC400V	CCG2HMP0E222 1220621
C503 △	CERAMIC CAP. 2200pF AC400V or CERAMIC CAP. 2200pF AC400V	CCG2GMP0E222 1220621
C504 △	CERAMIC CAP. 2200pF AC400V	CCG2GMP0E222 1220621
C505 △	LINE ACROSS CAP. 0.1μF/250V or LINE ACROSS CAP. 0.1μF/250V	1220971 122Z181
	LINE ACROSS CAP. 0.1μF/250V or LINE ACROSS CAP. 0.1μF/250V	622Z631 622Z631
C506	ELECTROLYTIC CAP. 150μF/400V or ELECTROLYTIC CAP. 150μF/400V	122Z200 1220893
C507	MYLAR CAP. 0.039μF/50V K	2250393S
C508	CERAMIC CAP. 0.01μF /2KV	CCD3DZP0E103
	CERAMIC CAP. 0.01μF /2KV	6220602
C511	MYLAR CAP. 0.0082μF/50V K	2250822S
C512 △	CERAMIC CAP. 2200pF AC400V (T4KV) or CERAMIC CAP. 2200pF AC400V (T4KV)	CCN2HMP0E222 122Z011
C514	MYLAR CAP. 0.0022μF/50V K	2250222S
C515	ELECTROLYTIC CAP. 220μF/25V M	126D227S

Ref. No.	Description	Part No.
C516	ELECTROLYTIC CAP. 220μF 6.3V	126A227S
C517	CERAMIC CAP. 1000pF 1KV or	CCD3AKP0B102
C518	MYLAR CAP. 0.056μF/50V K	2250563S
C519	METALIZED FILM CAP. 0.1μF /400V or METALIZED FILM CAP. 0.1μF /400V	CT2H104NC001 CMA2HKD00104
C520 △	LINE ACROSS CAP. 0.1μF 250V or LINE ACROSS CAP. 0.1μF 250V or LINE ACROSS CAP. 0.1μF 250V	1220971 122Z181 622Z631
C521	MYLAR CAP. 0.0022μF/50V K	2250222S
CONNECTORS		
CN201	CONNECTOR BASE 2P (for SPEAKER)	1740764
CN202	CONNECTOR BASE 5P (for D.Y.) or	1730812
CN203	CONNECTOR BASE 5P (for D.Y.)	1730813
CN204	CABLE HOLDER 3P or	XW01D03NF001
CN205	CABLE HOLDER 3P	XW01B03NF001
CN206	CABLE HOLDER 6P or	XW01D06NF001
CN207	CONNECTOR BASE 2P	1740764
CN501	CONNECTOR BASE 2P (for D.G. COIL) or CONNECTOR BASE 2P (for D.G. COIL)	1780276 1780165
DIODES		
D202	DIODE 1SS133 or	1SS133S
	DIODE 1SS176	1SS176S
D204	DIODE 1SS133 or	1SS133S
	DIODE 1SS176	1SS176S
D207	DIODE 1SS133 or	1SS133S
	DIODE 1SS176	1SS176S
D208	ZENER DIODE MTZ12(C) or	MTZ12CS
	ZENER DIODE GZS12(Z) or	QDTZ00GZS12
	ZENER DIODE UZ-12BS(B)	QDSB00UZ12BS
D211	ZENER DIODE MTZ7.5(B) or	MTZ7.5BS
	ZENER DIODE GZS7.5(Y) or	QDTY00GZS7R5
	ZENER DIODE UZ-7.5BS(A)	QDSA0UZ7R5BS
D212	ZENER DIODE MTZ7.5(B) or	MTZ7.5BS
	ZENER DIODE GZS7.5(Y) or	QDTY00GZS7R5
	ZENER DIODE UZ-7.5BS(A)	QDSA0UZ7R5BS
D213	ZENER DIODE UZ-7.5BS(A)	QDS0UZ7R5BS
	DIODE 1SS133 or	1SS133S
	DIODE 1SS176	1SS176S
D214	DIODE 1SS133 or	1SS133S
	DIODE 1SS176	1SS176S
D215	DIODE 1SS133 or	1SS133S
	DIODE 1SS176	1SS176S
D216	DIODE 1SS133 or	1SS133S
	DIODE 1SS176	1SS176S
D217	DIODE 1SS133 or	1SS133S
	DIODE 1SS176	1SS176S
D218	DIODE 1SS133 or	

Ref. No.	Description	Part No.
IC208	IC L5631	L5631
IC209	IC CXA1214P	QSBLAOSSN011
IC210	IC 78M09 or IC 78M09	AN78M09 L78M09
COILS		
L204	MICRO INDUCTOR 39 μ H J or MICRO INDUCTOR 39 μ H J	2164390S 2164390S
L206	SIZE COIL or SIZE COIL	LLBB000AE005 1140097
L207	POT TYPE COIL 4.7mH	117M957
L208	MICRO INDUCTOR 47 μ H K or MICRO INDUCTOR 47 μ H K	2165470S 2162470S
L209	DELAY LINE	113N852
L210	CASING COIL or CASING COIL	LFA07V0MM011 LFA07V0TK008
L211	CASING COIL or CASING COIL	LFA07V0MM004 LFA07V0TK010
L212	CASING COIL or CASING COIL	LFA07V0MM004 LFA07V0TK010
L213	MICRO INDUCTOR 8.2 μ H K or MICRO INDUCTOR 8.2 μ H K	2165829S 2162829S
L214	MICRO INDUCTOR 33 μ H K or MICRO INDUCTOR 33 μ H K	2165330S 2162330S
L215	MICRO INDUCTOR 15 μ H K or MICRO INDUCTOR 15 μ H K	2165150S 2162150S
L216	CASING COIL or CASING COIL	LFA07V0MM003 LFA07V0TK009
L217	MICRO INDUCTOR 15 μ H K or MICRO INDUCTOR 15 μ H K	2165150S 2162150S
L218	POT TYPE COIL 47 μ H or POT TYPE COIL 47 μ H	LLBD**DMM001 LLBD00DQE001
L501 △	LINE FILTER or LINE FILTER	LLBG00ZBW007 LLBG00ZMS008
L503 △	LINE FILTER or LINE FILTER	LLBG00ZBW007 LLBG00ZMS008
TRANSISTORS		
Q201	TRANSISTOR 2SC331(T) or TRANSISTOR 2SC331(U) or TRANSISTOR KTC3198GR TO-92 or TRANSISTOR KTC3199(GR)	QSC331TNPAA QSC331UNPAA NQC40KTC3198 NQC10KTC3199
Q204	TRANSISTOR 2SC331(T) or TRANSISTOR 2SC331(U) or TRANSISTOR KTC3198GR TO-92 or TRANSISTOR KTC3199(GR)	QSC331TNPAA QSC331UNPAA NQC40KTC3198 NQC10KTC3199
Q205	TRANSISTOR 2SC331(T) or TRANSISTOR 2SC331(U) or TRANSISTOR KTC3198GR TO-92 or TRANSISTOR KTC3199(GR)	QSC331TNPAA QSC331UNPAA NQC40KTC3198 NQC10KTC3199
Q206	TRANSISTOR 2SC331(T) or TRANSISTOR 2SC331(U) or TRANSISTOR KTC3198GR TO-92 or TRANSISTOR KTC3199(GR)	QSC331TNPAA QSC331UNPAA NQC40KTC3198 NQC10KTC3199
Q207	TRANSISTOR 2SC331(T) or TRANSISTOR 2SC331(U) or TRANSISTOR KTC3198GR TO-92 or TRANSISTOR KTC3199(GR)	QSC331TNPAA QSC331UNPAA NQC40KTC3198 NQC10KTC3199
Q208	TRANSISTOR 2SC331(T) or TRANSISTOR 2SC331(U) or TRANSISTOR KTC3198GR TO-92 or TRANSISTOR KTC3199(GR)	QSC331TNPAA QSC331UNPAA NQC40KTC3198 NQC10KTC3199

Ref. No.	Description	Part No.
Q209	TRANSISTOR 2SA1318(T) or TRANSISTOR 2SA1318(U) or TRANSISTOR KTA1266GR TO-92 or TRANSISTOR KTA1267(GR)	2SA1318T-AA-NP 2SA1318U-AA-NP NQC40KTA1266 NQC10KTA1267
Q210	TRANSISTOR 2SA1318(T) or TRANSISTOR 2SA1318(U) or TRANSISTOR KTA1266GR TO-92 or TRANSISTOR KTA1267(GR)	2SA1318T-AA-NP 2SA1318U-AA-NP NQC40KTA1266 NQC10KTA1267
Q211	TRANSISTOR 2SA1318(T) or TRANSISTOR 2SA1318(U) or TRANSISTOR KTA1266GR TO-92 or TRANSISTOR KTA1267(GR)	2SA1318T-AA-NP 2SA1318U-AA-NP NQC40KTA1266 NQC10KTA1267
Q213	TRANSISTOR 2SC331(T) or TRANSISTOR 2SC331(U) or TRANSISTOR KTC3198GR TO-92 or TRANSISTOR KTC3199(GR)	QSC331TNPAA QSC331UNPAA NQC40KTC3198 NQC10KTC3199
Q214	TRANSISTOR 2SC331(T) or TRANSISTOR 2SC331(U) or TRANSISTOR KTC3198GR TO-92 or TRANSISTOR KTC3199(GR)	QSC331TNPAA QSC331UNPAA NQC40KTC3198 NQC10KTC3199
Q215	TRANSISTOR 2SA1318(T) or TRANSISTOR 2SA1318(U) or TRANSISTOR KTA1266GR TO-92 or TRANSISTOR KTA1267(GR)	2SA1318T-AA-NP 2SA1318U-AA-NP NQC40KTA1266 NQC10KTA1267
Q216	TRANSISTOR 2SC331(T) or TRANSISTOR 2SC331(U) or TRANSISTOR KTC3198GR TO-92 or TRANSISTOR KTC3199(GR)	QSC331TNPAA QSC331UNPAA NQC40KTC3198 NQC10KTC3199
Q217	TRANSISTOR 2SC331(T) or TRANSISTOR 2SC331(U) or TRANSISTOR KTC3198GR TO-92 or TRANSISTOR KTC3199(GR)	QSC331TNPAA QSC331UNPAA NQC40KTC3198 NQC10KTC3199
Q218	TRANSISTOR 2SC331(T) or TRANSISTOR 2SC331(U) or TRANSISTOR KTC3198GR TO-92 or TRANSISTOR KTC3199(GR)	QSC331TNPAA QSC331UNPAA NQC40KTC3198 NQC10KTC3199
Q219	TRANSISTOR 2SC2271(D) or TRANSISTOR 2SC2271(E)	2SC2271D-AA-MP 2SC2271E-AA-MP
Q220	TRANSISTOR 2SD2333LS	QQPZ02SD2333
Q221	TRANSISTOR 2SA1318(T) or TRANSISTOR 2SA1318(U) or TRANSISTOR KTA1266GR TO-92 or TRANSISTOR KTA1267(GR)	2SA1318T-AA-NP 2SA1318U-AA-NP NQC40KTA1266 NQC10KTA1267
Q222	TRANSISTOR 2SC331(T) or TRANSISTOR 2SC331(U) or TRANSISTOR KTC3198GR TO-92 or TRANSISTOR KTC3199(GR)	QSC331TNPAA QSC331UNPAA NQC40KTC3198 NQC10KTC3199
Q223	TRANSISTOR 2SC331(T) or TRANSISTOR 2SC331(U) or TRANSISTOR KTC3198GR TO-92 or TRANSISTOR KTC3199(GR)	QSC331TNPAA QSC331UNPAA NQC40KTC3198 NQC10KTC3199
Q224	TRANSISTOR 2SC331(T) or TRANSISTOR 2SC331(U) or TRANSISTOR KTC3198GR TO-92 or TRANSISTOR KTC3199(GR)	QSC331TNPAA QSC331UNPAA NQC40KTC3198 NQC10KTC3199
Q225	TRANSISTOR 2SC331(T) or TRANSISTOR 2SC331(U) or TRANSISTOR KTC3198GR TO-92 or TRANSISTOR KTC3199(GR)	QSC331TNPAA QSC331UNPAA NQC40KTC3198 NQC10KTC3199

Ref. No.	Description	Part No.
Q227	TRANSISTOR 2SC331(T) or TRANSISTOR 2SC331(U) or TRANSISTOR KTC3198GR TO-92 or TRANSISTOR KTC3199(GR)	QSC331TNPAA QSC331UNPAA NQC40KTC3198 NQC10KTC3199
Q228	TRANSISTOR 2SC331(T) or TRANSISTOR 2SC331(U) or TRANSISTOR KTC3198GR TO-92 or TRANSISTOR KTC3199(GR)	QSC331TNPAA QSC331UNPAA NQC40KTC3198 NQC10KTC3199
Q229	TRANSISTOR 2SC331(T) or TRANSISTOR 2SC331(U) or TRANSISTOR KTC3198GR TO-92 or TRANSISTOR KTC3199(GR)	QSC331TNPAA QSC331UNPAA NQC40KTC3198 NQC10KTC3199
Q233	TRANSISTOR 2SB1274 (R) or TRANSISTOR 2SB1274 (S)	Q2SB1274R000 Q2SB1274S000
Q234	TRANSISTOR 2SC331(T) or TRANSISTOR 2SC331(U) or TRANSISTOR KTC3198GR TO-92 or TRANSISTOR KTC3199(GR)	QSC331TNPAA QSC331UNPAA NQC40KTC3198 NQC10KTC3199
Q235	TRANSISTOR 2SC331(T) or TRANSISTOR 2SC331(U) or TRANSISTOR KTC3198GR TO-92 or TRANSISTOR KTC3199(GR)	QSC331TNPAA QSC331UNPAA NQC40KTC3198 NQC10KTC3199
Q236	TRANSISTOR 2SC331(T) or TRANSISTOR 2SC331(U) or TRANSISTOR KTC3198GR TO-92 or TRANSISTOR KTC3199(GR)	QSC331TNPAA QSC331UNPAA NQC40KTC3198 NQC10KTC3199
Q237	TRANSISTOR 2SC331(T) or TRANSISTOR 2SC331(U) or TRANSISTOR KTC3198GR TO-92 or TRANSISTOR KTC3199(GR)	QSC331TNPAA QSC331UNPAA NQC40KTC3198 NQC10KTC3199
Q239	TRANSISTOR 2SC331(T) or TRANSISTOR 2SC331(U) or TRANSISTOR KTC3198GR TO-92 or TRANSISTOR KTC3199(GR)	QSC331TNPAA QSC331UNPAA NQC40KTC3198 NQC10KTC3199
Q240	TRANSISTOR 2SC331(T) or TRANSISTOR 2SC331(U) or TRANSISTOR KTC3198GR TO-92 or TRANSISTOR KTC3199(GR)	QSC331TNPAA QSC331UNPAA NQC40KTC3198 NQC10KTC3199
Q501	FET 2SK1692	QF1Z02SK1692
Q503	TRANSISTOR 2SC331(T) or TRANSISTOR 2SC331(U) or TRANSISTOR KTC3198GR TO-92 or TRANSISTOR KTC3199(GR)	QSC331TNPAA QSC331UNPAA NQC40KTC3198 NQC10KTC3199
Q504	TRANSISTOR 2SB698 (F) or TRANSISTOR 2SB698 (G)	QQSF002SB698 QQSG002SB698
Q505 △	PHOTO COUPLER PC111L (Y1) FET 2SK212 (E) or FET 2SK212 (F)	QPE10PC111LY 2SK212(E) 2SK212(F)
Q506	TRANSISTOR 2SC331(T) or TRANSISTOR 2SC331(U) or TRANSISTOR KTC3198GR TO-92 or TRANSISTOR KTC3199(GR)	QSC331TNPAA QSC331UNPAA NQC40KTC3198 NQC10KTC3199
Q507	TRANSISTOR 2SC331(T) or TRANSISTOR 2SC331(U) or TRANSISTOR KTC3198GR TO-92 or TRANSISTOR KTC3199(GR)	QSC331TNPAA QSC331UNPAA NQC40KTC3198 NQC10KTC3199
RESISTORS		
R201	CARBON RES. 1/6W J 330 Ω or CARBON RES. 1/5W J 330 Ω	132A331S 1324331S
R204	CHIP RES. 1/10W J 6.8K Ω	RRXAJBBZ0682
R205	CHIP RES. 1/10W J 5.6K Ω	RRXAJBBZ0562
R206	CHIP RES. 1/10W J 68 Ω	RRXAJBBZ0680
R207	CHIP RES. 1/10W J 10K Ω	RRXAJBBZ0103
R214	CHIP RES. 1/10W J 12K Ω	RRXAJBBZ0123

Ref. No.	Description	. Part No.
R215	CHIP RES. 1/10W J 12K Ω	RRXAJBBZ0123
R216	CARBON RES. 1/6W J 10K Ω or CARBON RES. 1/5W J 10K Ω	132A103S 1324103S
R217	CARBON RES. 1/6W J 10K Ω or CARBON RES. 1/5W J 10K Ω	132A103S 1324103S
R220	CHIP RES. 1/10W J 5.6K Ω	RRXAJBBZ0562
R221	CHIP RES. 1/10W J 3.8K Ω	RRXAJBBZ0392
R222	CHIP RES. 1/10W J 12K Ω	RRXAJBBZ0123
R223	CHIP RES. 1/10W J 12K Ω	RRXAJBBZ0123
R224	CHIP RES. 1/10W J 68K Ω	RRXAJBBZ0683
R225	CHIP RES. 1/10W J 4.7K Ω	RRXAJBBZ0472
R226	CHIP RES. 1/10W J 3.9K Ω	RRXAJBBZ0392
R227	CHIP RES. 1/10W J 33K Ω	RRXAJBBZ0333
R228	CHIP RES. 1/10W J 2.2 Ω	RRXAJBBZ0222
R231	CHIP RES. 1/10W J 47K Ω	RRXAJBBZ0473
R232	CHIP RES. 1/10W J 47K Ω	RRXAJBBZ0473
R233	CHIP RES. 1/10W J 10K Ω	RRXAJBBZ0103
R		

Ref. No.	Description	Part No.
R279	CHIP RES. 1/10W J 47KΩ	RRXAJBBZ0473
R280	CHIP RES. 1/10W J 10KΩ	RRXAJBBZ0103
R281	CHIP RES. 1/10W J 82KΩ	RRXAJBBZ0823
R282	CHIP RES. 1/10W J 56KΩ	RRXAJBBZ0563
R283	CHIP RES. 1/10W J 33KΩ	RRXAJBBZ0333
R284	CHIP RES. 1/10W J 470Ω	RRXAJBBZ0471
R285	CHIP RES. 1/10W J 1KΩ	RRXAJBBZ0102
R286	CHIP RES. 1/10W J 0Ω	RRXAJBBZ0000
R287	CHIP RES. 1/10W J 68KΩ	RRXAJBBZ0683
R288	CHIP RES. 1/10W J 68KΩ	RRXAJBBZ0683
R289	CHIP RES. 1/10W J 15KΩ	RRXAJBBZ0153
R290	CHIP RES. 1/10W J 3.3KΩ	RRXAJBBZ0332
R291	CARBON RES. 1/4W J 1Ω	1345109S
R292	CARBON RES. 1/4W J 2.2Ω	1345229S
R295	FUSE RES. 1/2W 68Ω or	RFX2680KA003
	FUSE RES. 1/2W 68Ω or	5362680
	FUSE RES. 1/2W 68Ω	RFX2680MS002
R296	CARBON RES. 1/4W 68Ω	1345681S
R298	CHIP RES. 1/10W J 4.7KΩ	RRXAJBBZ0472
R301	CHIP RES. 1/10W J 10KΩ	RRXAJBBZ0103
R302	CHIP RES. 1/10W J 18KΩ	RRXAJBBZ0183
R303	CHIP RES. 1/10W J 10KΩ	RRXAJBBZ0103
R304	CHIP RES. 1/10W J 56Ω	RRXAJBBZ0561
R305	CHIP RES. 1/10W J 4.7Ω	RRXAJBBZ04R7
R307	FUSE RES. 1W J 3.3Ω or	RF01339KA004
	FUSE RES. 1W J 3.3Ω or	5363339
	FUSE RES. 1W J 3.3Ω	RF013R3MS002
R308	FUSE RES. 1W J 2.2Ω or	RF01229KA004
	FUSE RES. 1W J 2.2Ω or	5363229
	FUSE RES. 1W J 2.2Ω	RF012R2MS002
R310	CARBON RES. 1/6W J 5.6KΩ or	132A562S
	CARBON RES. 1/5W J 5.6KΩ	1324562S
R311	CARBON RES. 1/6W J 5.6KΩ or	132A562S
	CARBON RES. 1/5W J 5.6KΩ	1324562S
R314	CHIP RES. 1/10W J 820Ω	RRXAJBBZ0821
R315	CARBON RES. 1/4W J 2.2KΩ	1345222S
R316	CEMENT RES. 5W K 3.3KΩ or	RW05332PG003
	CEMENT RES. 5W K 3.3KΩ or	RW05332UB001
	CEMENT RES. 5W K 3.3KΩ	RW05332KA006
R317	CHIP RES. 1/10W J 82KΩ	RRXAJBBZ0823
R318	CARBON RES. 1/6W J 12KΩ or	132A123S
	CARBON RES. 1/5W J 12KΩ	1324123S
R319	CHIP RES. 1/10W J 12KΩ	RRXAJBBZ0123
R320	CHIP RES. 1/10W J 47KΩ	RRXAJBBZ0473
R321	CARBON RES. 1/6W J 150KΩ or	132A154T
	CARBON RES. 1/5W J 150KΩ [for CRT: A48KMX12XX44]	1324154T
	CARBON RES. 1/6W J 180KΩ or	132A184T
	CARBON RES. 1/5W J 180KΩ [for CRT: 51GGB95X-TC01 / 510UFB22-TC52(DPY)]	1324184T
R322	CHIP RES. 1/10W J 1.8KΩ	RRXAJBBZ0182
R323	CHIP RES. 1/10W J 27KΩ	RRXAJBBZ0273
R324	CHIP RES. 1/10W J 10KΩ	RRXAJBBZ0103
R325	CHIP RES. 1/10W J 1.5KΩ	RRXAJBBZ0152
R326	CHIP RES. 1/10W J 1.8KΩ	RRXAJBBZ0182
R327	CHIP RES. 1/10W J 100KΩ	RRXAJBBZ0104
R328	CHIP RES. 1/10W J 100KΩ	RRXAJBBZ0104
R329	CHIP RES. 1/10W J 6.8KΩ	RRXAJBBZ0682
R330	CHIP RES. 1/10W J 4.7KΩ	RRXAJBBZ0472

Ref. No.	Description	Part No.
R331	CHIP RES. 1/10W J 10KΩ	RRXAJBBZ0103
R332	CHIP RES. 1/10W J 47KΩ	RRXAJBBZ0473
R333	CHIP RES. 1/10W J 680KΩ	RRXAJBBZ0684
R335	CHIP RES. 1/10W J 270Ω	RRXAJBBZ0271
R336	CHIP RES. 1/10W J 180Ω	RRXAJBBZ0181
R337	CHIP RES. 1/10W J 4.7KΩ	RRXAJBBZ0472
R338	CHIP RES. 1/10W J 470Ω	RRXAJBBZ0471
R339	CHIP RES. 1/10W J 330KΩ	RRXAJBBZ0334
R340	CHIP RES. 1/10W J 330Ω	RRXAJBBZ0331
R341	CHIP RES. 1/10W J 5.6KΩ	RRXAJBBZ0562
R346	METALLIZED FILM RES. 1/5W 27KΩ	13C2702
R347	CHIP RES. 1/10W J 4.7KΩ	RRXAJBBZ0472
R348	CHIP RES. 1/10W J 10KΩ	RRXAJBBZ0103
R349	CHIP RES. 1/10W J 10KΩ	RRXAJBBZ0103
R350	CHIP RES. 1/10W J 3.3MΩ	RRXAJBBZ0335
R351	CHIP RES. 1/10W J 390Ω	RRXAJBBZ0391
R355	CHIP RES. 1/10W J 47KΩ	RRXAJBBZ0473
R356	CARBON RES. 1/6W J 470Ω or	132A471S
	CARBON RES. 1/5W J 470Ω	132A471S
R357	CHIP RES. 1/10W J 390Ω	RRXAJBBZ0391
R358	CHIP RES. 1/10W J 820Ω	RRXAJBBZ0821
R359	CHIP RES. 1/10W J 1KΩ	RRXAJBBZ0102
R360	CARBON RES. 1/6W J 270Ω or	132A271S
	CARBON RES. 1/5W J 270Ω	132A271S
R361	CHIP RES. 1/10W J 390Ω	RRXAJBBZ0391
R362	CHIP RES. 1/10W J 4.7KΩ	RRXAJBBZ0472
R363	CHIP RES. 1/10W J 3.9Ω	RRXAJBBZ0392
R364	CHIP RES. 1/10W J 390Ω	RRXAJBBZ0391
R365	CHIP RES. 1/10W J 270Ω	RRXAJBBZ0271
R366	CHIP RES. 1/10W J 470Ω	RRXAJBBZ0471
R367	CHIP RES. 1/10W J 2.2Ω	RRXAJBBZ0222
R368	CHIP RES. 1/10W J 10KΩ	RRXAJBBZ0103
R369	CHIP RES. 1/10W J 22KΩ	RRXAJBBZ0223
R396	CARBON RES. 1/6W J 150KΩ or	132A154S
	CARBON RES. 1/5W J 150KΩ	1324154S
R398	CARBON RES. 1/6W J 33KΩ or	132A333S
	CARBON RES. 1/5W J 33KΩ	1324333S
R399	CARBON RES. 1/4W J 1.5KΩ	1345152S
R400	CARBON RES. 1/6W J 22KΩ or	132A223S
	CARBON RES. 1/5W J 22KΩ	1324223S
R401	CARBON RES. 1/6W J 27KΩ or	132A273S
	CARBON RES. 1/5W J 27KΩ	1324273S
R402	CARBON RES. 1/4W J 1.5KΩ	1345152S
R403	CARBON RES. 1/6W J 5.6KΩ or	132A562S
	CARBON RES. 1/5W J 5.6KΩ	1324562S
R404	CARBON RES. 1/6W J 100KΩ or	132A104S
	CARBON RES. 1/5W J 100KΩ	1324104S
R405	CARBON RES. 1/6W J 120KΩ or	132A124S
	CARBON RES. 1/5W J 120KΩ	1324124S
R406	CARBON RES. 1/6W J 820Ω or	132A821S
	CARBON RES. 1/5W J 820Ω	1324821S
R407	CARBON RES. 1/6W J 22KΩ or	132A223S
	CARBON RES. 1/5W J 22KΩ	1324223S
R408	METAL RES. 1W J 15KΩ	534A153
R410	CARBON RES. 1/4W J 270Ω	1345271S
R411	CHIP RES. 1/10W J 2.7KΩ	RRXAJBBZ0272
R413	CHIP RES. 1/10W J 68KΩ	RRXAJBBZ0683
R414	CHIP RES. 1/10W J 27KΩ	RRXAJBBZ0273
R415	CARBON RES. 1/6W J 10KΩ or	132A103S
	CARBON RES. 1/5W J 10KΩ	1324103S

Ref. No.	Description	Part No.
R416	CARBON RES. 1/6W J 3.3KΩ or	132A332S
	CARBON RES. 1/5W J 3.3KΩ	1324332S
R417	CHIP RES. 1/10W J 100Ω	RRXAJBBZ0101
R418	FUSE RES. 1W J 2.2Ω or	RF01229KA004
	FUSE RES. 1W J 2.2Ω	5363229
	FUSE RES. 1W J 2.2Ω	RF012R2MS002
R427	METAL RES. 1W J 1KΩ	534A102
R430	CHIP RES. 1/10W J 2.2Ω	RRXAJBBZ0222
R431	CHIP RES. 1/10W J 10KΩ	RRXAJBBZ0103
R433	CHIP RES. 1/10W J 180Ω	RRXAJBBZ0181
R434	CHIP RES. 1/10W J 3.3KΩ	RRXAJBBZ0332
R435	CHIP RES. 1/10W J 4.7KΩ	RRXAJBBZ0472
R436	CHIP RES. 1/10W J 100KΩ	RRXAJBBZ0104
R437	CHIP RES. 1/10W J 100KΩ	RRXAJBBZ0104
R439	METAL RES. 1W J 1KΩ	534A102
R440	CHIP RES. 1/10W J 3.3KΩ	RRXAJBBZ0332
R441	CARBON RES. 1/6W J 47Ω or	132A470S
	CARBON RES. 1/5W J 47Ω	1324470S
R443	CARBON RES. 1/6W J 33KΩ or	132A333S
	CARBON RES. 1/4W J 33KΩ	1324333S
R446	CARBON RES. 1/6W J 10KΩ or	132A103S
	CARBON RES. 1/4W J 10KΩ	1324103S
R447	CARBON RES. 1/6W J 10KΩ or	132A103S
	CARBON RES. 1/4W J 10KΩ	1324103S
R501	CEMENT RES. 5W K 1.2Ω or	RW051R2PG001
	CEMENT RES. 5W K 1.2Ω or	RW051R2UB001
R502	CARBON RES. 1/6W 10MΩ or	132A106S
	CARBON RES. 1/5W 10MΩ	1324106S
R503	CARBON RES. 1/4W 3.9MΩ	1345395S
R505	CARBON RES. 1/4W J 270Ω	1345271S
R508	METAL RES. 3W 33KΩ or	RN03333KE003
	METAL RES. 3W 33KΩ or	RN03333KA001
	METAL RES. 3W 33KΩ	RN03JZD0333
R512	CEMENT RES. 3W 0.47Ω or	RW03R47KA012
	CEMENT RES. 3W 0.47Ω	RW03R47PG005
R513	CARBON RES. 1/4W J 680Ω	1345681S
R516	CARBON RES. 1/6W J 2.2KΩ or	132A222S
	CARBON RES. 1/5W J 2.2KΩ	1324222S</td

Ref. No.	Description	Part No.
HS 2	HEAT SINK PS (for IC204 / IC207)	0EM401145
HS 3	HEAT SINK PT (for Q220)	0EM401146
IP201 △	IC PROTECTOR ICP-N10	579F085Z
IP202 △	IC PROTECTOR ICP-N20	579F087Z
IP203 △	IC PROTECTOR ICP-N15	579F086Z
J202	RCA JACK	JXRL020HD009
J203	BNC JACK or BNC JACK	JXNL010HD002 JXNL010RA002
J204	21PIN JACK or 21PIN JACK or 21PIN JACK	1780187 JXGL210NF001 1780260
J205	BNC JACK or BNC JACK	JXNL010HD002 JXNL010RA002
LD 2	RIBBON WIRE 3P	WX1L7500-002
LD 3	RIBBON WIRE 6P	WX1L7500-003
PS501 △	THERMISTER(POSISTER)	5790117
TP 1	TEST PIN or TEST PIN	1700093 1740354
TP 2	TEST PIN or TEST PIN	1700093 1740354
TP 3	TEST PIN or TEST PIN	1700093 1740354
TP 4	TEST PIN or TEST PIN	1700093 1740354
TP 5	TEST PIN or TEST PIN	1700093 1740354
TU201	TUNER(ENV-79838F2)	UTUNPSDMS001
U201	REMOCON RECEIVING UNIT	USESJRSSN001
XT201	CERAMIC RESONATOR 4.19MHz or CERAMIC RESONATOR 4.19MHz	1813682 1812885
XT202	CERAMIC RESONATOR CSB500F2	1812039
XT203	CRYSTAL OSILLATOR 4.43MHz	1811387
XT204	CRYSTAL OSILLATOR 3.58MHz	1811291
W501 △	AC CORD CABLE TIE or CABLE TIE HEAT SINK SHEET (for Q501) or HEAT SINK SHEET (for Q501)	WAE0192LW001 1790256 1790356 XJ0Z000DB001 XJ0Z000CA002

CRT PCB (MMA-B)

Ref. No.	Description	Part No.
	CRT PCB (MMA-B)	-----
Consists of the following:		
CAPACITORS		
C601	CERAMIC CAP. 0.01μF/2KV or CERAMIC CAP. 0.01μF/2KV	CCD3DZP0E103 6220602
C602	CHIP CERAMIC CAP. SLJ 270pF/50V	CHE1JJBSL271
C603	CHIP CERAMIC CAP. SLJ 220pF/50V	CHE1JJBSL221
C604	CHIP CERAMIC CAP. SLJ 330pF/50V	CHE1JJBSL331
C605	ELECTROLYTIC CAP. 10μF/50V	126F106S
CONNECTORS		
CN601 △	CRT SOCKET or CRT SOCKET	JSCC290HD003 1780246
CN602	CONNECTOR PIN 1P (for CRT GND) or CONNECTOR PIN 1P (for CRT GND) or CONNECTOR PIN 1P (for CRT GND)	1700576 1730688 JTEA000LC001
CN603	CABLE HOLDER 3P or	XW01D03NF001


Ref. No.	Description	Part No.
CN604	CABLE HOLDER 3P	XW01B03NF001
	CABLE HOLDER 6P or	XW01D06NF001
	CABLE HOLDER 6P	XW01B06NF001
TRANSISTORS		
Q601	TRANSISTOR 2SC2271(D) or TRANSISTOR 2SC2271(E)	2SC2271D-AA-MP 2SC2271E-AA-MP
Q602	TRANSISTOR 2SC2271(D) or TRANSISTOR 2SC2271(E)	2SC2271D-AA-MP 2SC2271E-AA-MP
Q603	TRANSISTOR 2SC2271(D) or TRANSISTOR 2SC2271(E)	2SC2271D-AA-MP 2SC2271E-AA-MP
RESISTORS		
R601	CARBON RES. 1/4W J 1.8KΩ	1345182S
R602	CARBON RES. 1/4W J 1.8KΩ	1345182S
R603	CARBON RES. 1/4W J 1.8KΩ	1345182S
R604	CARBON RES. 1/4W J 1.5KΩ	1345152S
R605	CARBON RES. 1/4W J 1.5KΩ	1345152S
R606	CARBON RES. 1/4W J 1.5KΩ	1345152S
R607	CHIP RES. 1/10W J 2.7KΩ	RRXAJBBZ0272
R608	CHIP RES. 1/10W J 560Ω	RRXAJBBZ0561
R609	CHIP RES. 1/10W J 220Ω	RRXAJBBZ0221
R610	CHIP RES. 1/10W J 2.7KΩ	RRXAJBBZ0272
R611	CHIP RES. 1/10W J 1.5KΩ	RRXAJBBZ0152
R612	CHIP RES. 1/10W J 560Ω	RRXAJBBZ0561
R613	CHIP RES. 1/10W J 220Ω	RRXAJBBZ0221
R614	CHIP RES. 1/10W J 2.2Ω	RRXAJBBZ0222
R615	CHIP RES. 1/10W J 560Ω	RRXAJBBZ0561
R616	CHIP RES. 1/10W J 220Ω	RRXAJBBZ0221
R617	METAL RES. 1W J 12KΩ or	534A123
R618	METAL RES. 1W J 12KΩ or	534A123
R619	METAL RES. 1W J 12KΩ or	534A123
R620	METAL RES. 1W J 12KΩ	534A123
R621	CHIP RES. 1/10W J 2.2Ω	RRXAJBBZ0222
R622	CHIP RES. 1/10W J 470Ω	RRXAJBBZ0471
R623	CHIP RES. 1/10W J 2.2Ω	RRXAJBBZ0222
R624	CHIP RES. 1/10W J 470Ω	RRXAJBBZ0471
R625	CHIP RES. 1/10W J 2.2Ω	RRXAJBBZ0222
R626	CHIP RES. 1/10W J 470Ω	RRXAJBBZ0471
R627	CHIP RES. 1/10W J 270Ω	RRXAJBBZ0271
R628	CHIP RES. 1/10W J 270Ω	RRXAJBBZ0271
VARIABLE RESISTORS		
VR601	SEMITFIXED RES. 50KB	138J920
VR602	SEMITFIXED RES. 3KB	138J915
VR603	SEMITFIXED RES. 3KB	138J915
VR604	SEMITFIXED RES. 5KB	138J916
VR605	SEMITFIXED RES. 5KB	138J916
VR606	SEMITFIXED RES. 5KB	138J916

IF PCB (MMA-C)

Ref. No.	Description	Part No.
	IF PCB (MMA-C)	-----
Consists of the following:		
CAPACITORS		
C101	CHIP CERAMIC CAP. SLJ 22pF/50V	CHE1JJBSL220
C102	CHIP CERAMIC CAP. SLF 10pF/50V	CHE1JJBSL100
C103	CHIP CERAMIC CAP. BK 0.01μF/50V	CHE1EK0B103
C104	MYLAR CAP. 0.068μF/50V K	2250683S
C105	CHIP CERAMIC CAP. BK 0.001μF/50V	CHE1JKB0B102
C106	ELECTROLYTIC CAP. 0.47μF/50V M	126F474S
C107	ELECTROLYTIC CAP. 4.7μF/50V M	126F475S
C108	CHIP CERAMIC CAP. FZ 0.01μF/50V	CHE1JZB0F103
C110	CHIP CERAMIC CAP. FZ 0.01μF/50V	CHE1JZB0F103
C111	CHIP CERAMIC CAP. FZ 0.01μF/50V	CHE1JZB0F103
C112	CHIP CERAMIC CAP. FZ 0.01μF/50V	CHE1JZB0F103
C113	CHIP CERAMIC CAP. FZ 0.01μF/50V	CHE1JZB0F103
C120	CHIP CERAMIC CAP. FZ 0.01μF/50V	CHE1JZB0F103
C121	CHIP CERAMIC CAP. FZ 0.01μF/50V	CHE1JZB0F103
C122	CHIP CERAMIC CAP. CHJ 130pF/50V	CHE1JJBC131
C124	CHIP CERAMIC CAP. SLJ 27pF/50V	CHE1JJBSL270
C125	CHIP CERAMIC CAP. SLJ 33pF/50V	CHE1JJBSL330
C126	CHIP CERAMIC CAP. SLJ 22pF/50V	CHE1JJBSL220
C127	CHIP CERAMIC CAP. SLJ 27pF/50V	CHE1JJBSL270
C128	ELECTROLYTIC CAP. 47μF/50V M	126F476S
C129	CHIP CERAMIC CAP. FZ 0.01μF/50V	CHE1JZB0F103
C130	CHIP CERAMIC CAP. FZ 0.01μF/50V	CHE1JZB0F103
CONNECTORS		
CN101	PIN HEADER 6P	1770989
CN102	PIN HEADER 3P	1770986
CN103	CONNECTOR BASE 4P	1730628
CN104	CONNECTOR BASE 3P	1730627
IC		
IC101	IC LA7530N	14LQ162
COILS		
L101	MICRO INDUCTOR 1μH K or	2165109S
	MICRO INDUCTOR 1μH K	2162109S
L102	MICRO INDUCTOR 0.68μH K or	2165688S
	MICRO INDUCTOR 0.68μH K	2162688S
L104	MICRO INDUCTOR 10μH K or	2165100S
	MICRO INDUCTOR 10μH K	2162100S
L105	MICRO INDUCTOR 10μH K or	2165100S
	MICRO INDUCTOR 10μH K	2162100S
L106	CASING COIL (38.0MHz ADJ.)	LFA07V0MM001
L107	CASING COIL (AFT ADJ.)	LFA07V0MM002
TRANSISTORS		
Q102	TRANSISTOR 2SC3331(T) or TRANSISTOR 2SC3331(U) or	QSC3331TNPA
	TRANSISTOR KTC3198GR TO-92 or	QSC3331UNPA
Q103	TRANSISTOR KTC3199(GR)	NOC40KTC3198
Q104	TRANSISTOR 2SC3000(E)	NQS10KTC3199
	TRANSISTOR 2SA1318(T) or	C3000E-AA-NP
	TRANSISTOR 2SA1318(U) or	2SA1318T-AA-NP
	TRANSISTOR KTA1266GR TO-92 or	2SA1318U-AA-NP
	TRANSISTOR KTA1267(GR)	NQS40KTA1266
RESISTORS		
R101	CHIP RES. 1/10W J 470Ω	RRXAJBBZ0471
R102	CHIP RES. 1/10W J 390Ω	RRXAJBBZ0391
R103	CHIP RES. 1/10W J 470Ω	RRXAJBBZ0471
R104	CHIP RES. 1/10W J 330Ω	RRXAJBBZ0331

Ref. No.	Description	Part No.
R105	CHIP RES. 1/10W J 5.6KΩ	RRXAJBBZ0562
R106	CHIP RES. 1/10W J 1.8KΩ	RRXAJBBZ0182
R107	CHIP RES. 1/10W J 22KΩ	RRXAJBBZ0


BLOCK DIAGRAM

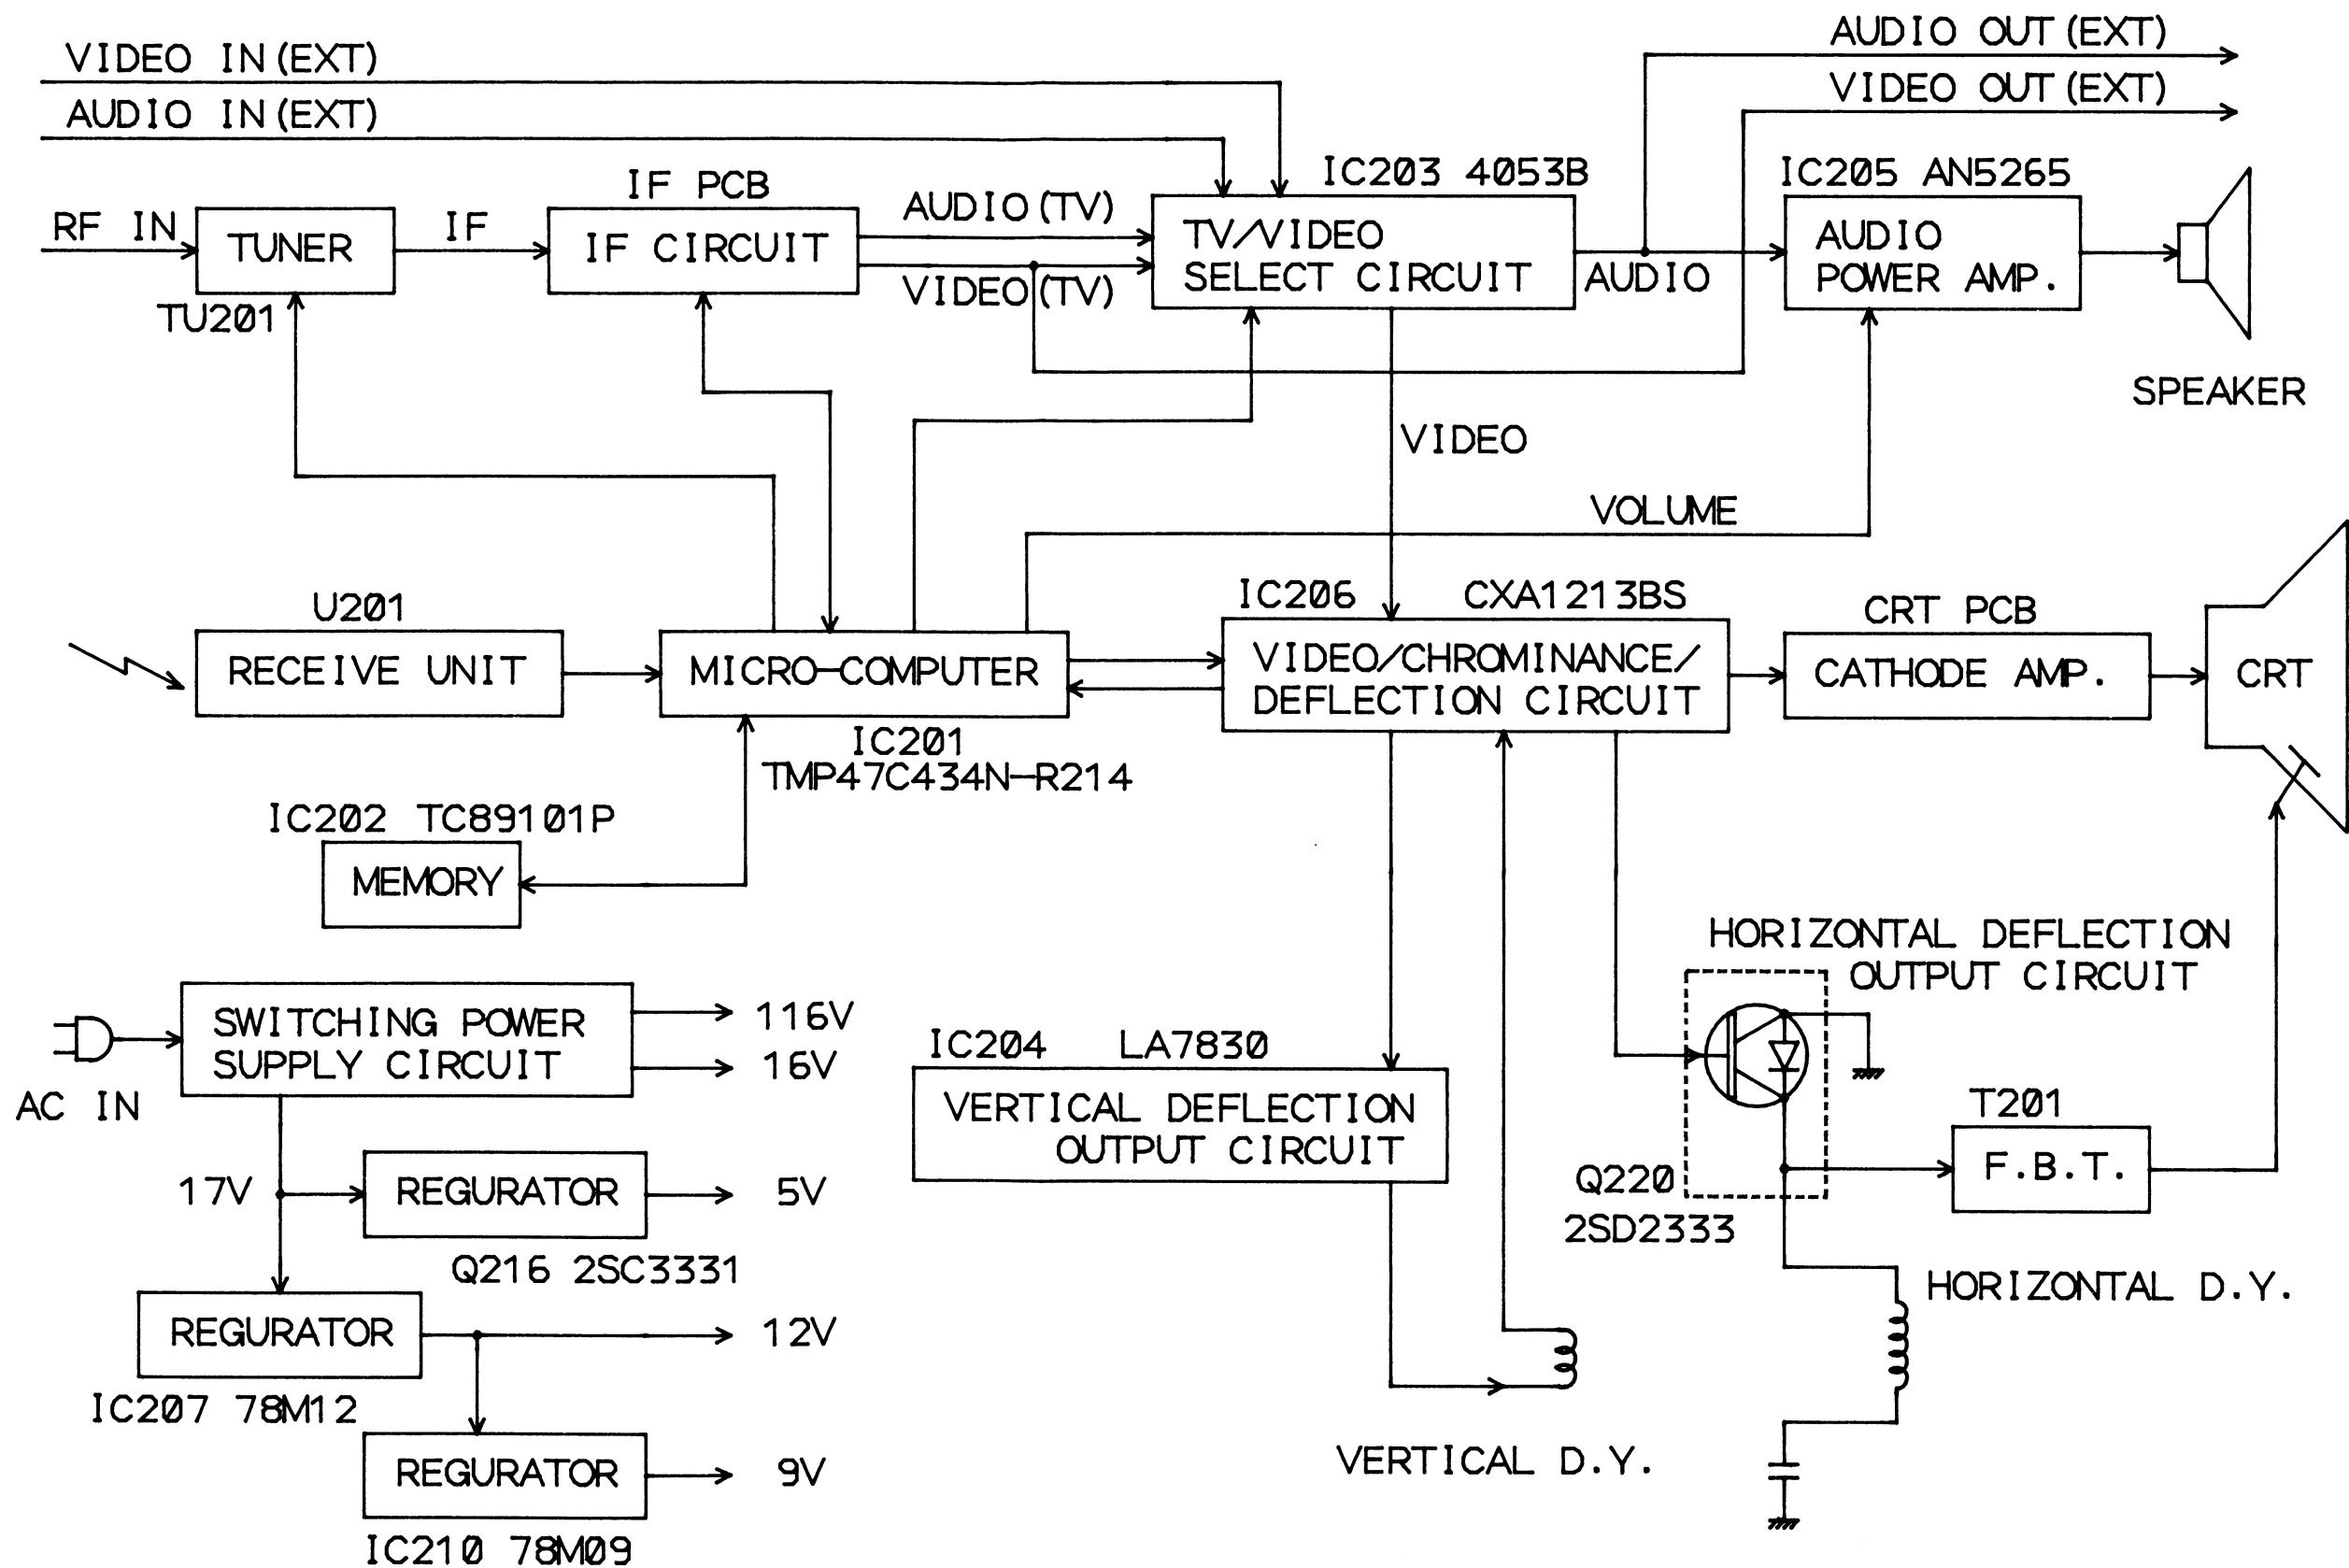

16. WHITE BALANCE ADJUSTMENT

Purpose: To mix red, green and blue beams correctly for pure white.

Symptom of Misadjustment: White becomes bluish or reddish.

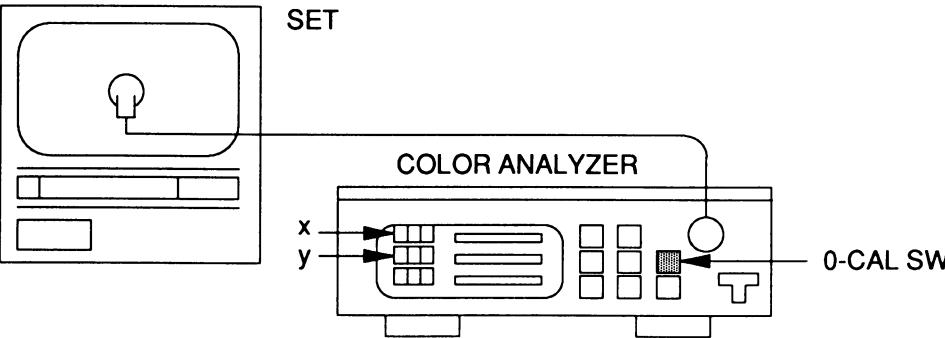
Test Point	Adjustment Point	Input
Screen	VR602, VR603	White Raster (APL 100%)
Equipment		Spec.
Pattern Generator Color Analyzer		See below
Connections of M. EQ.		
		

Reference Notes: VR602, VR603 --- CRT PCB

1. Operate the unit more than 20 minutes.
2. Face the unit to east. Degauss the CRT using Degaussing Coil.
3. Input the White Raster (APL 100%).
4. Set the color analyzer to the CHROMA mode and after zero point calibration, bring the optical receptor to the center on the tube surface (CRT).
5. Adjust VR603 (R. DRIVE) and VR602 (B. DRIVE) so that the respective chroma temperatures become 8000K-10MPCD ($x : 0.300 / y : 0.290 \pm 4\%$).





















Note: Confirm that Cut Off Adj. is correct after this adjustment, and attempt Cut Off Adj. if needed.

WIRING DIAGRAM

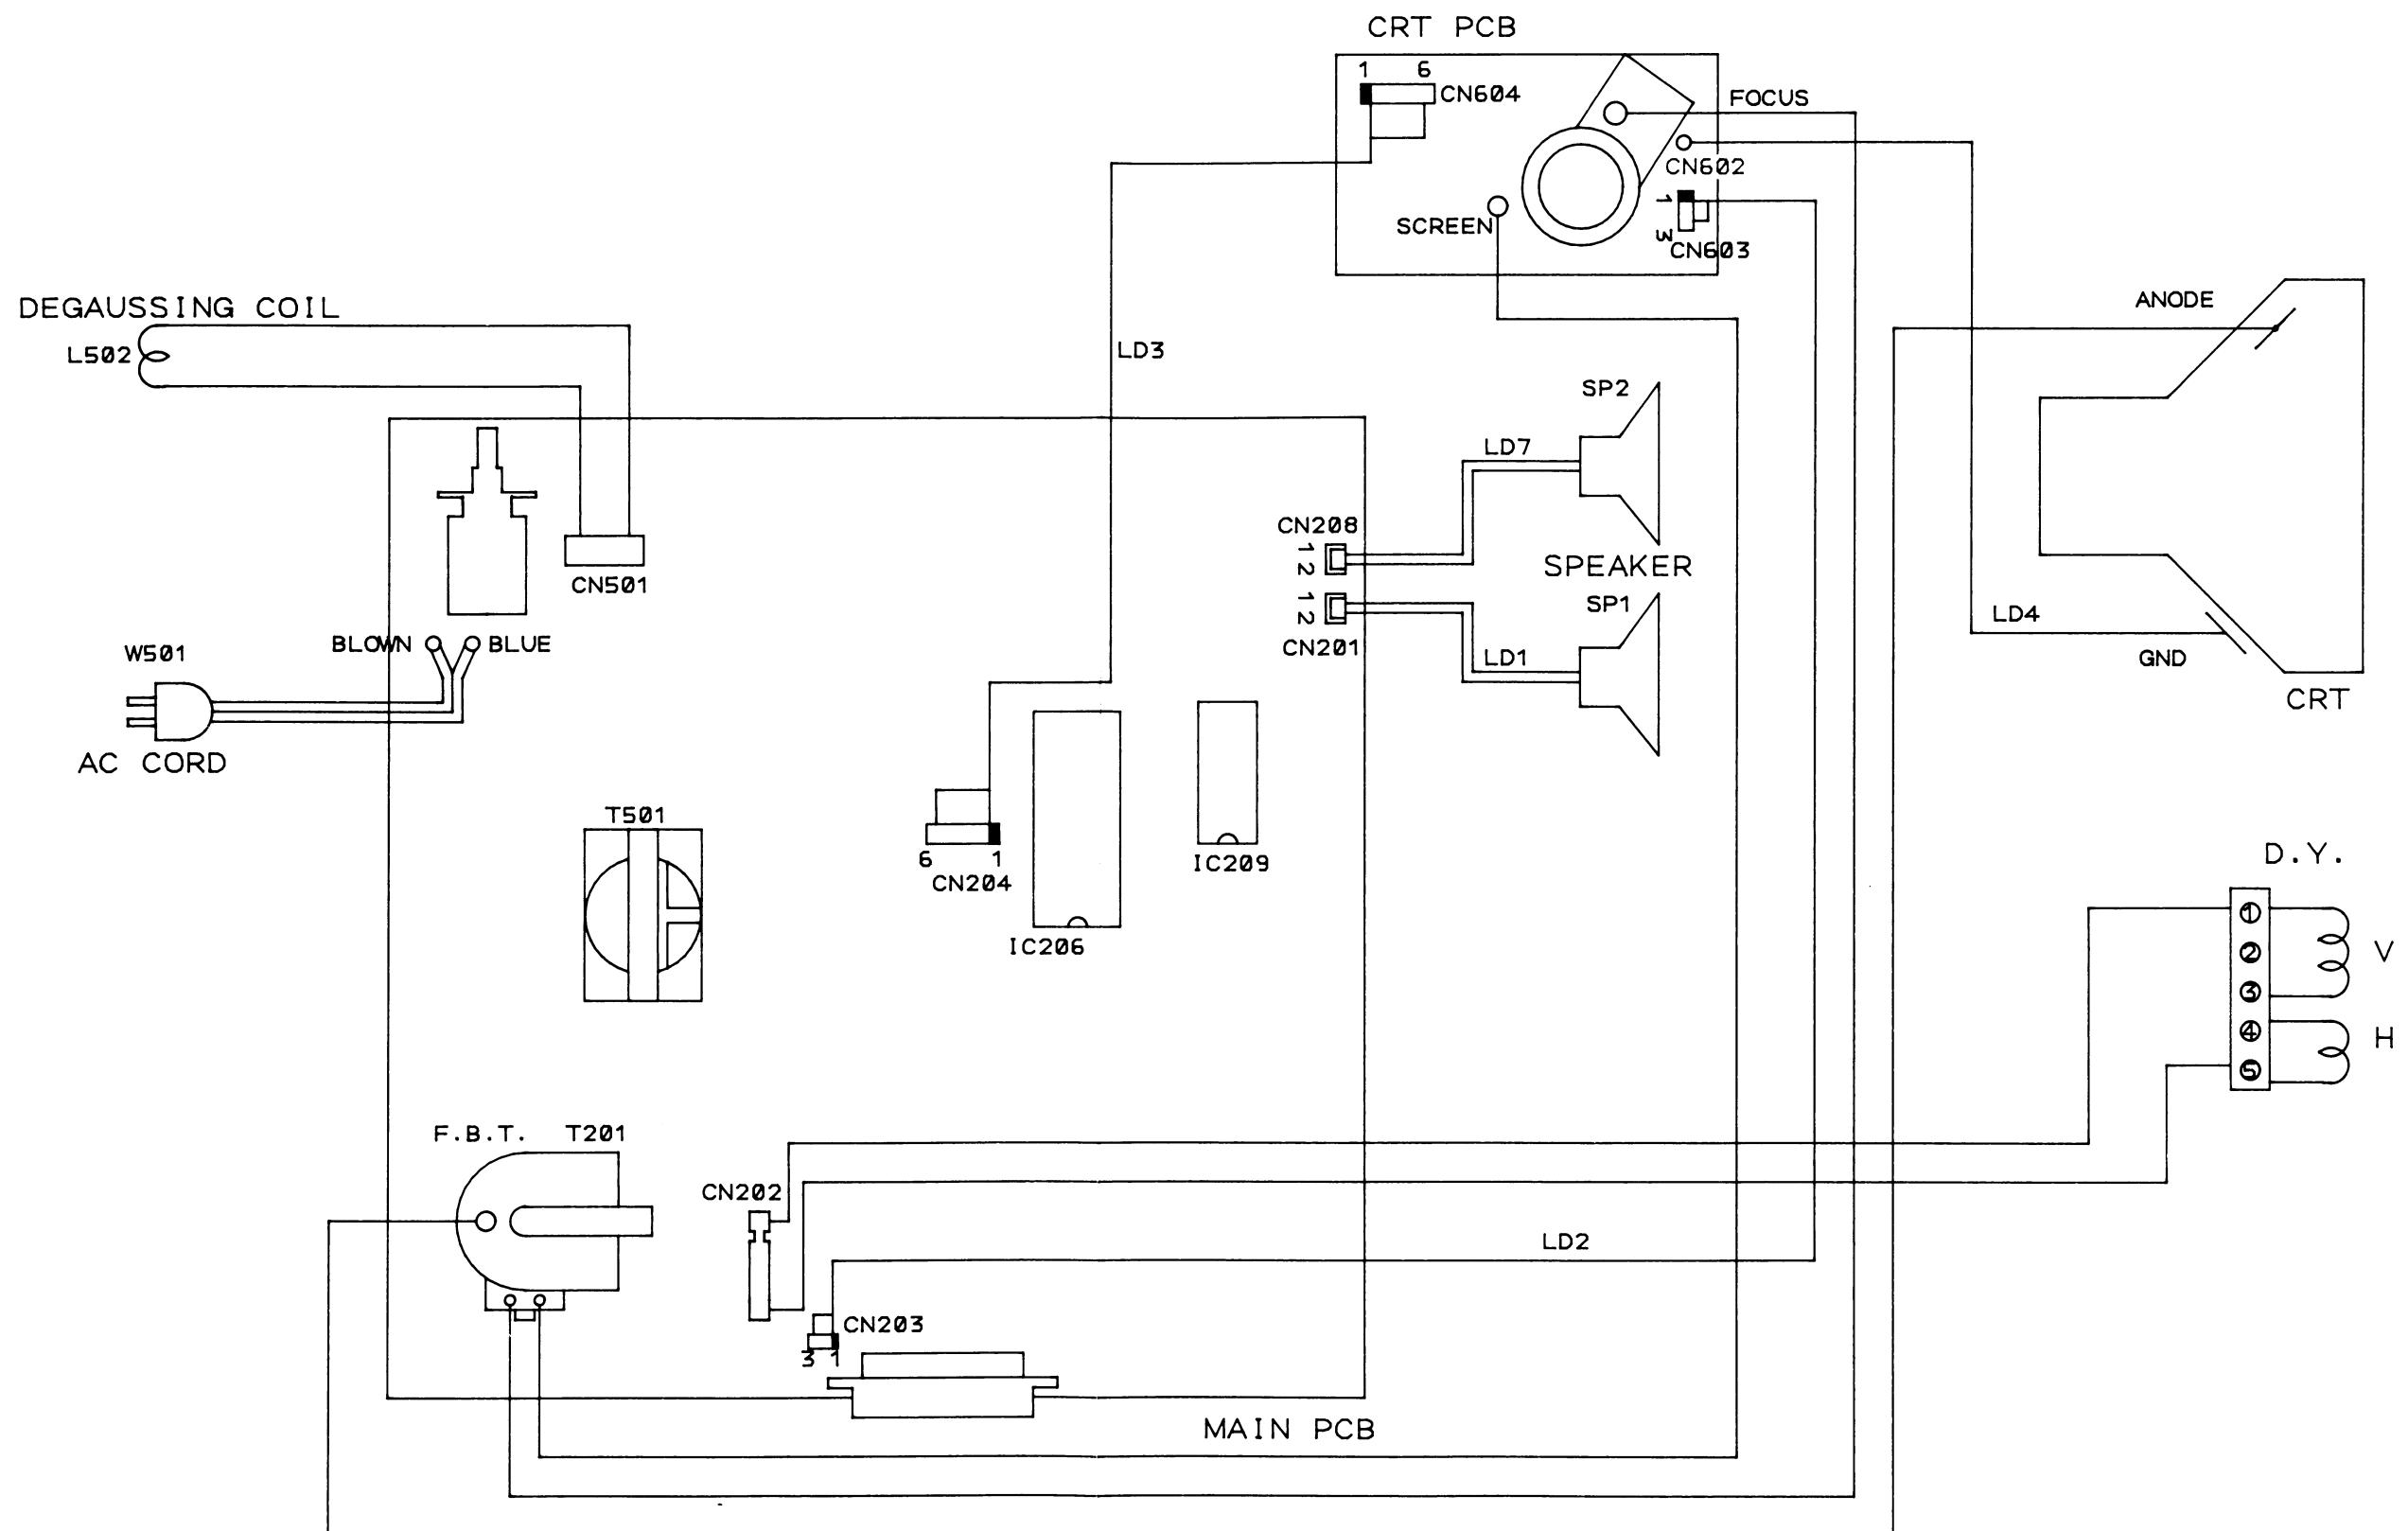


WAVEFORMS


WF1 ~ WF20 = Waveforms to be observed at
Waveform check points.
(Shown in Schematic Diagram.)

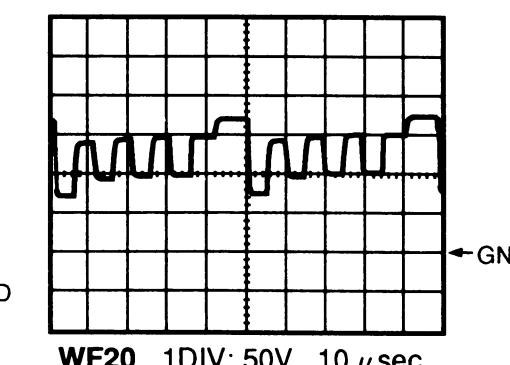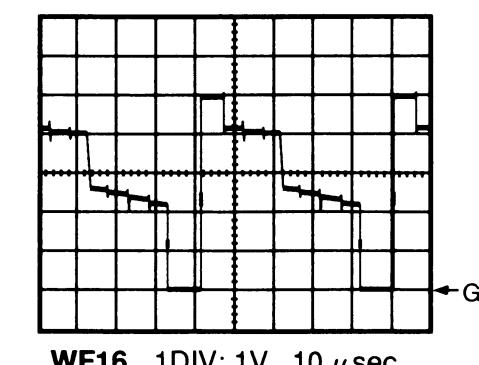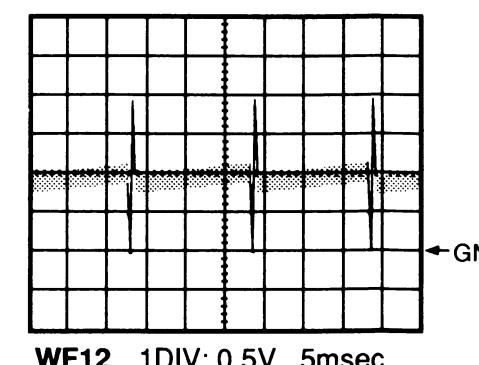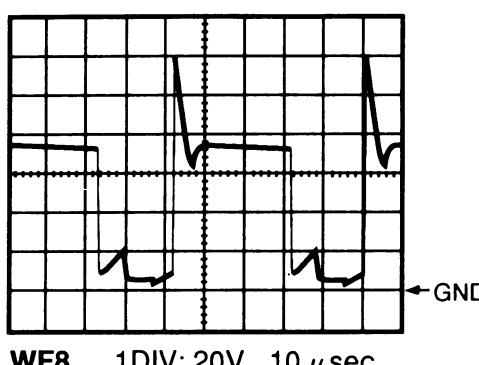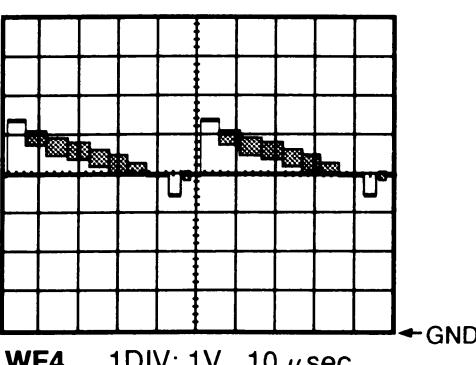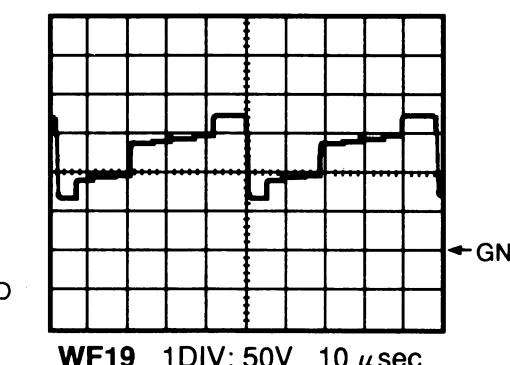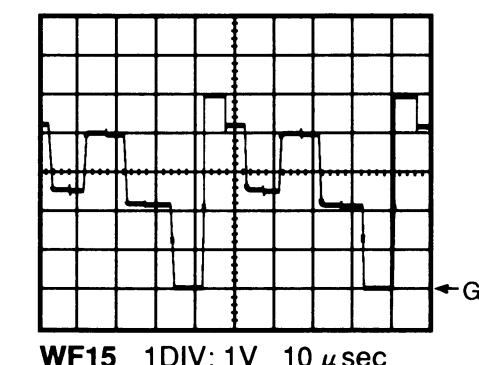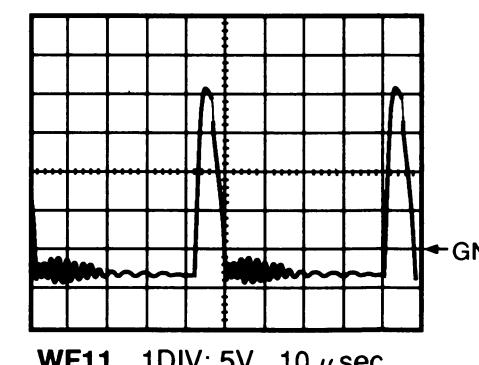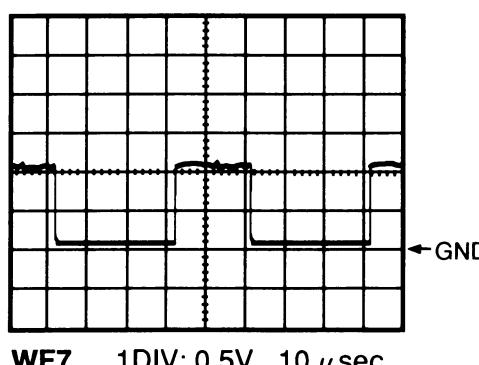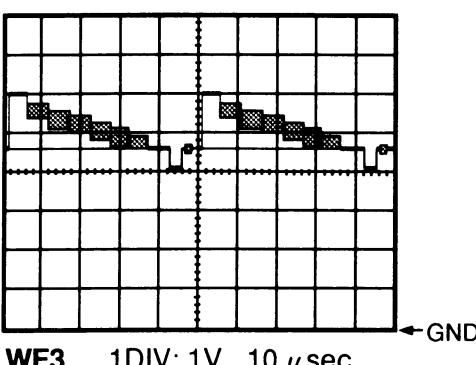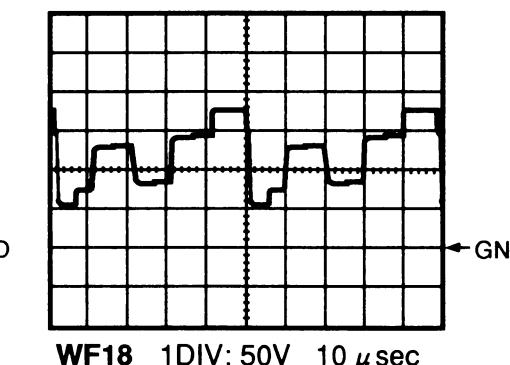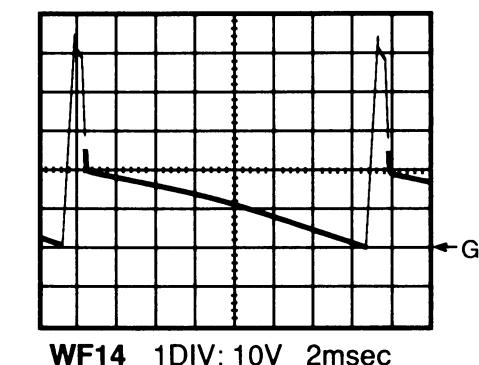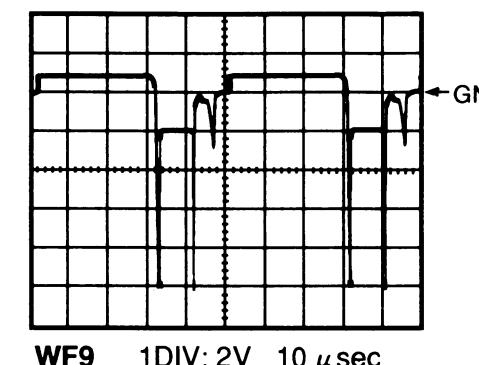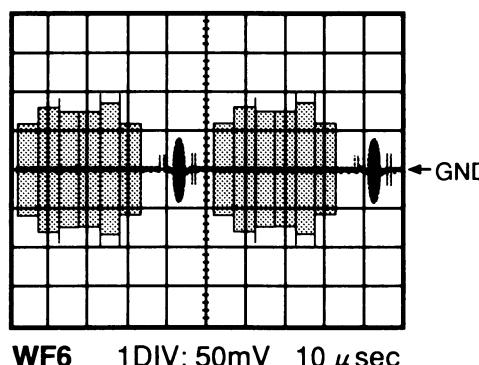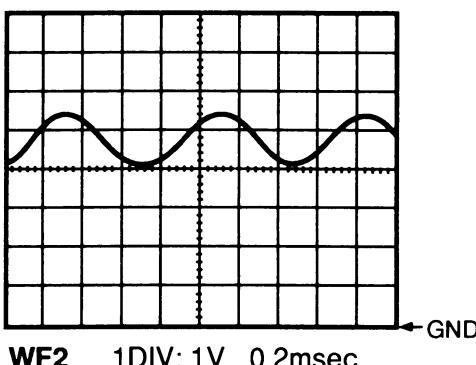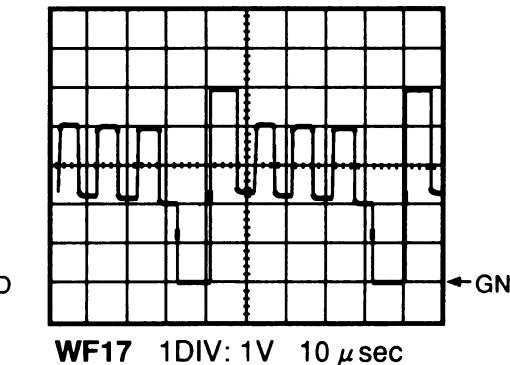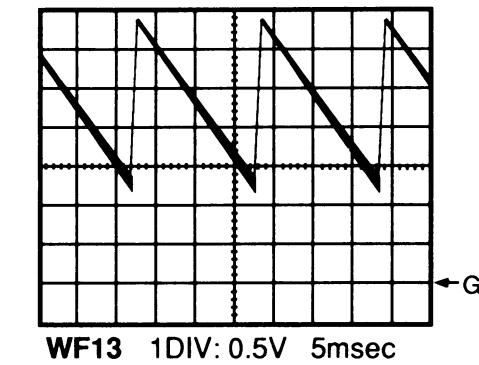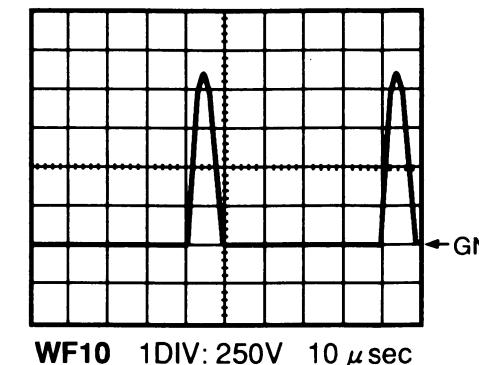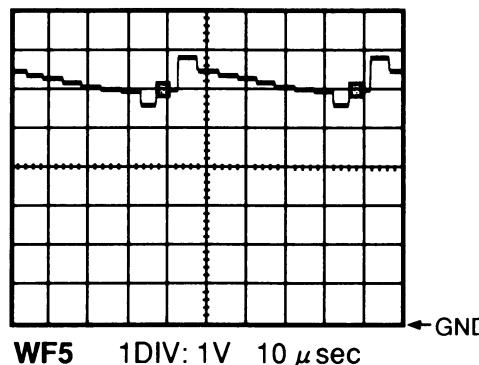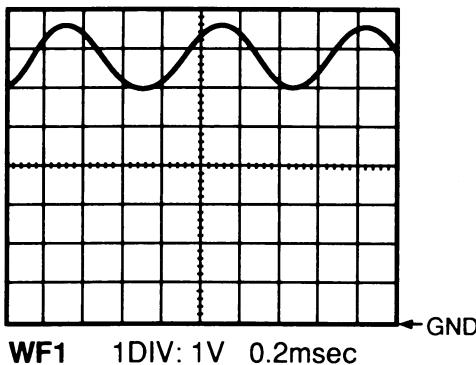


INPUT : PAL Color Bar Signal (with 1KHz Audio Signal)
RECEIVING CH. : E2 ch (48.25 MHz)
PRESET MODE : Press Picture Select button on the remote control unit,
then press the number "1" button.
(Brightness--- Center Color--- Center Contrast--- Approx 70%)

MAIN PCB (Top View)

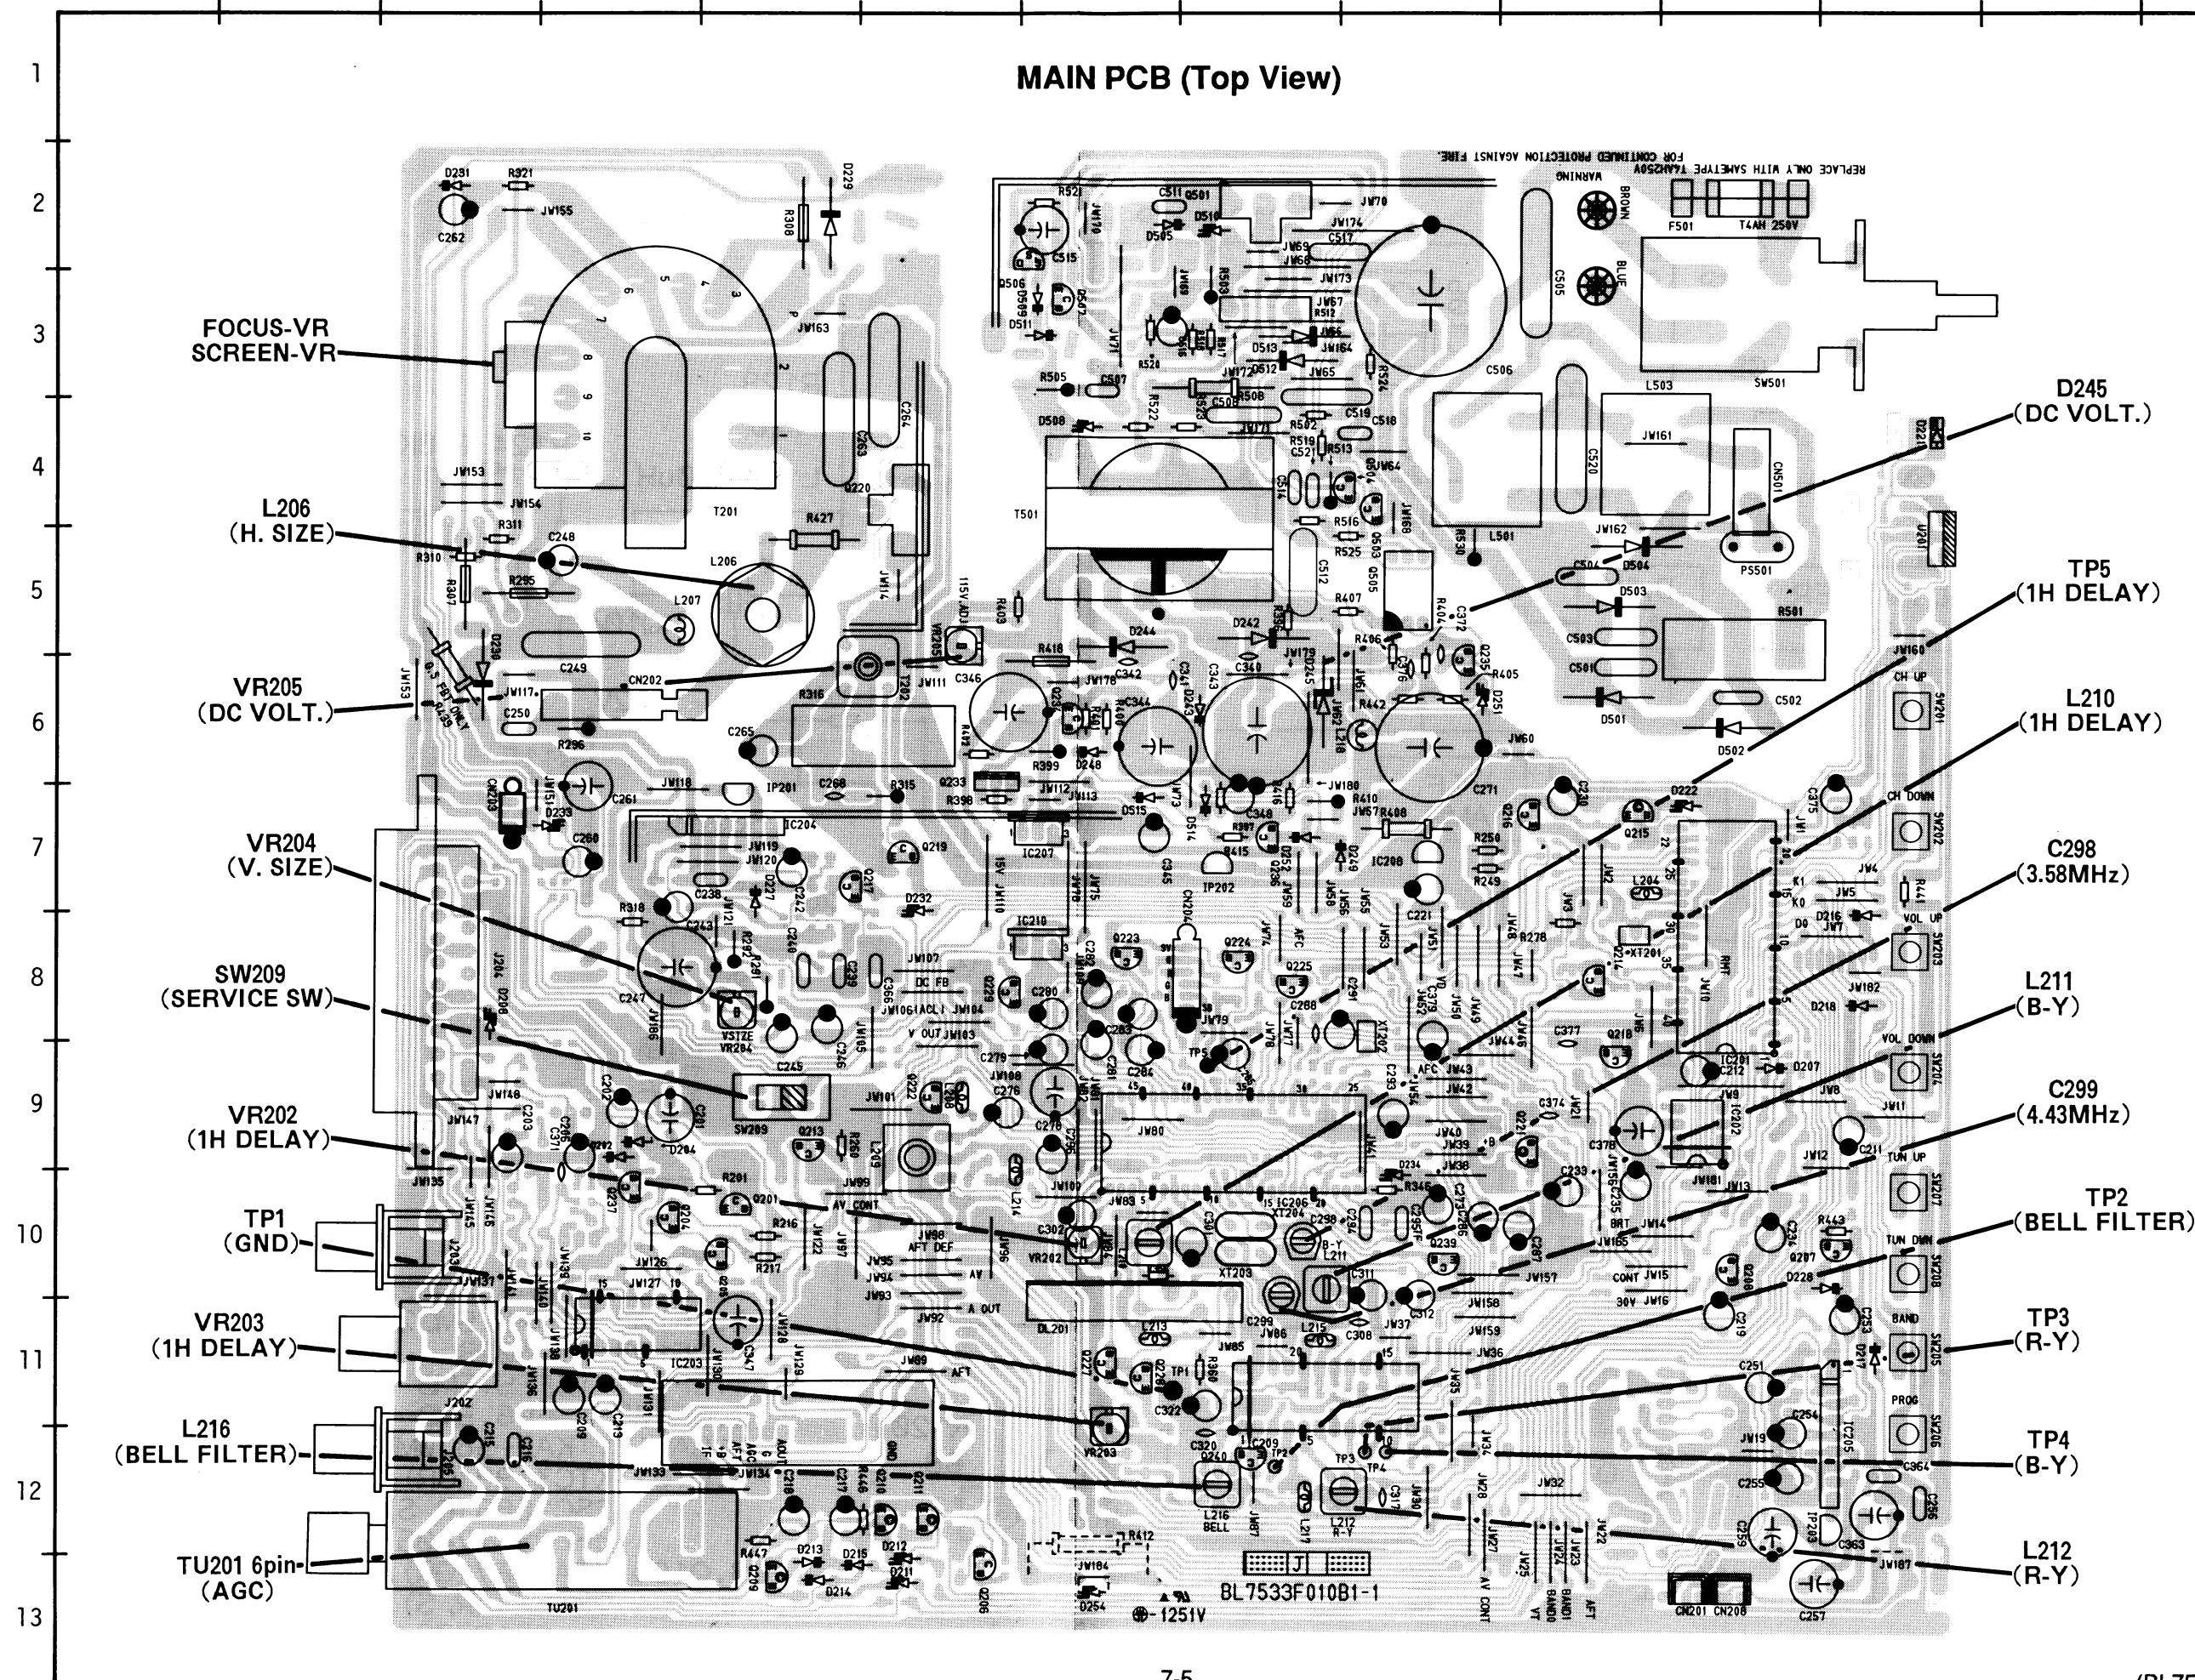


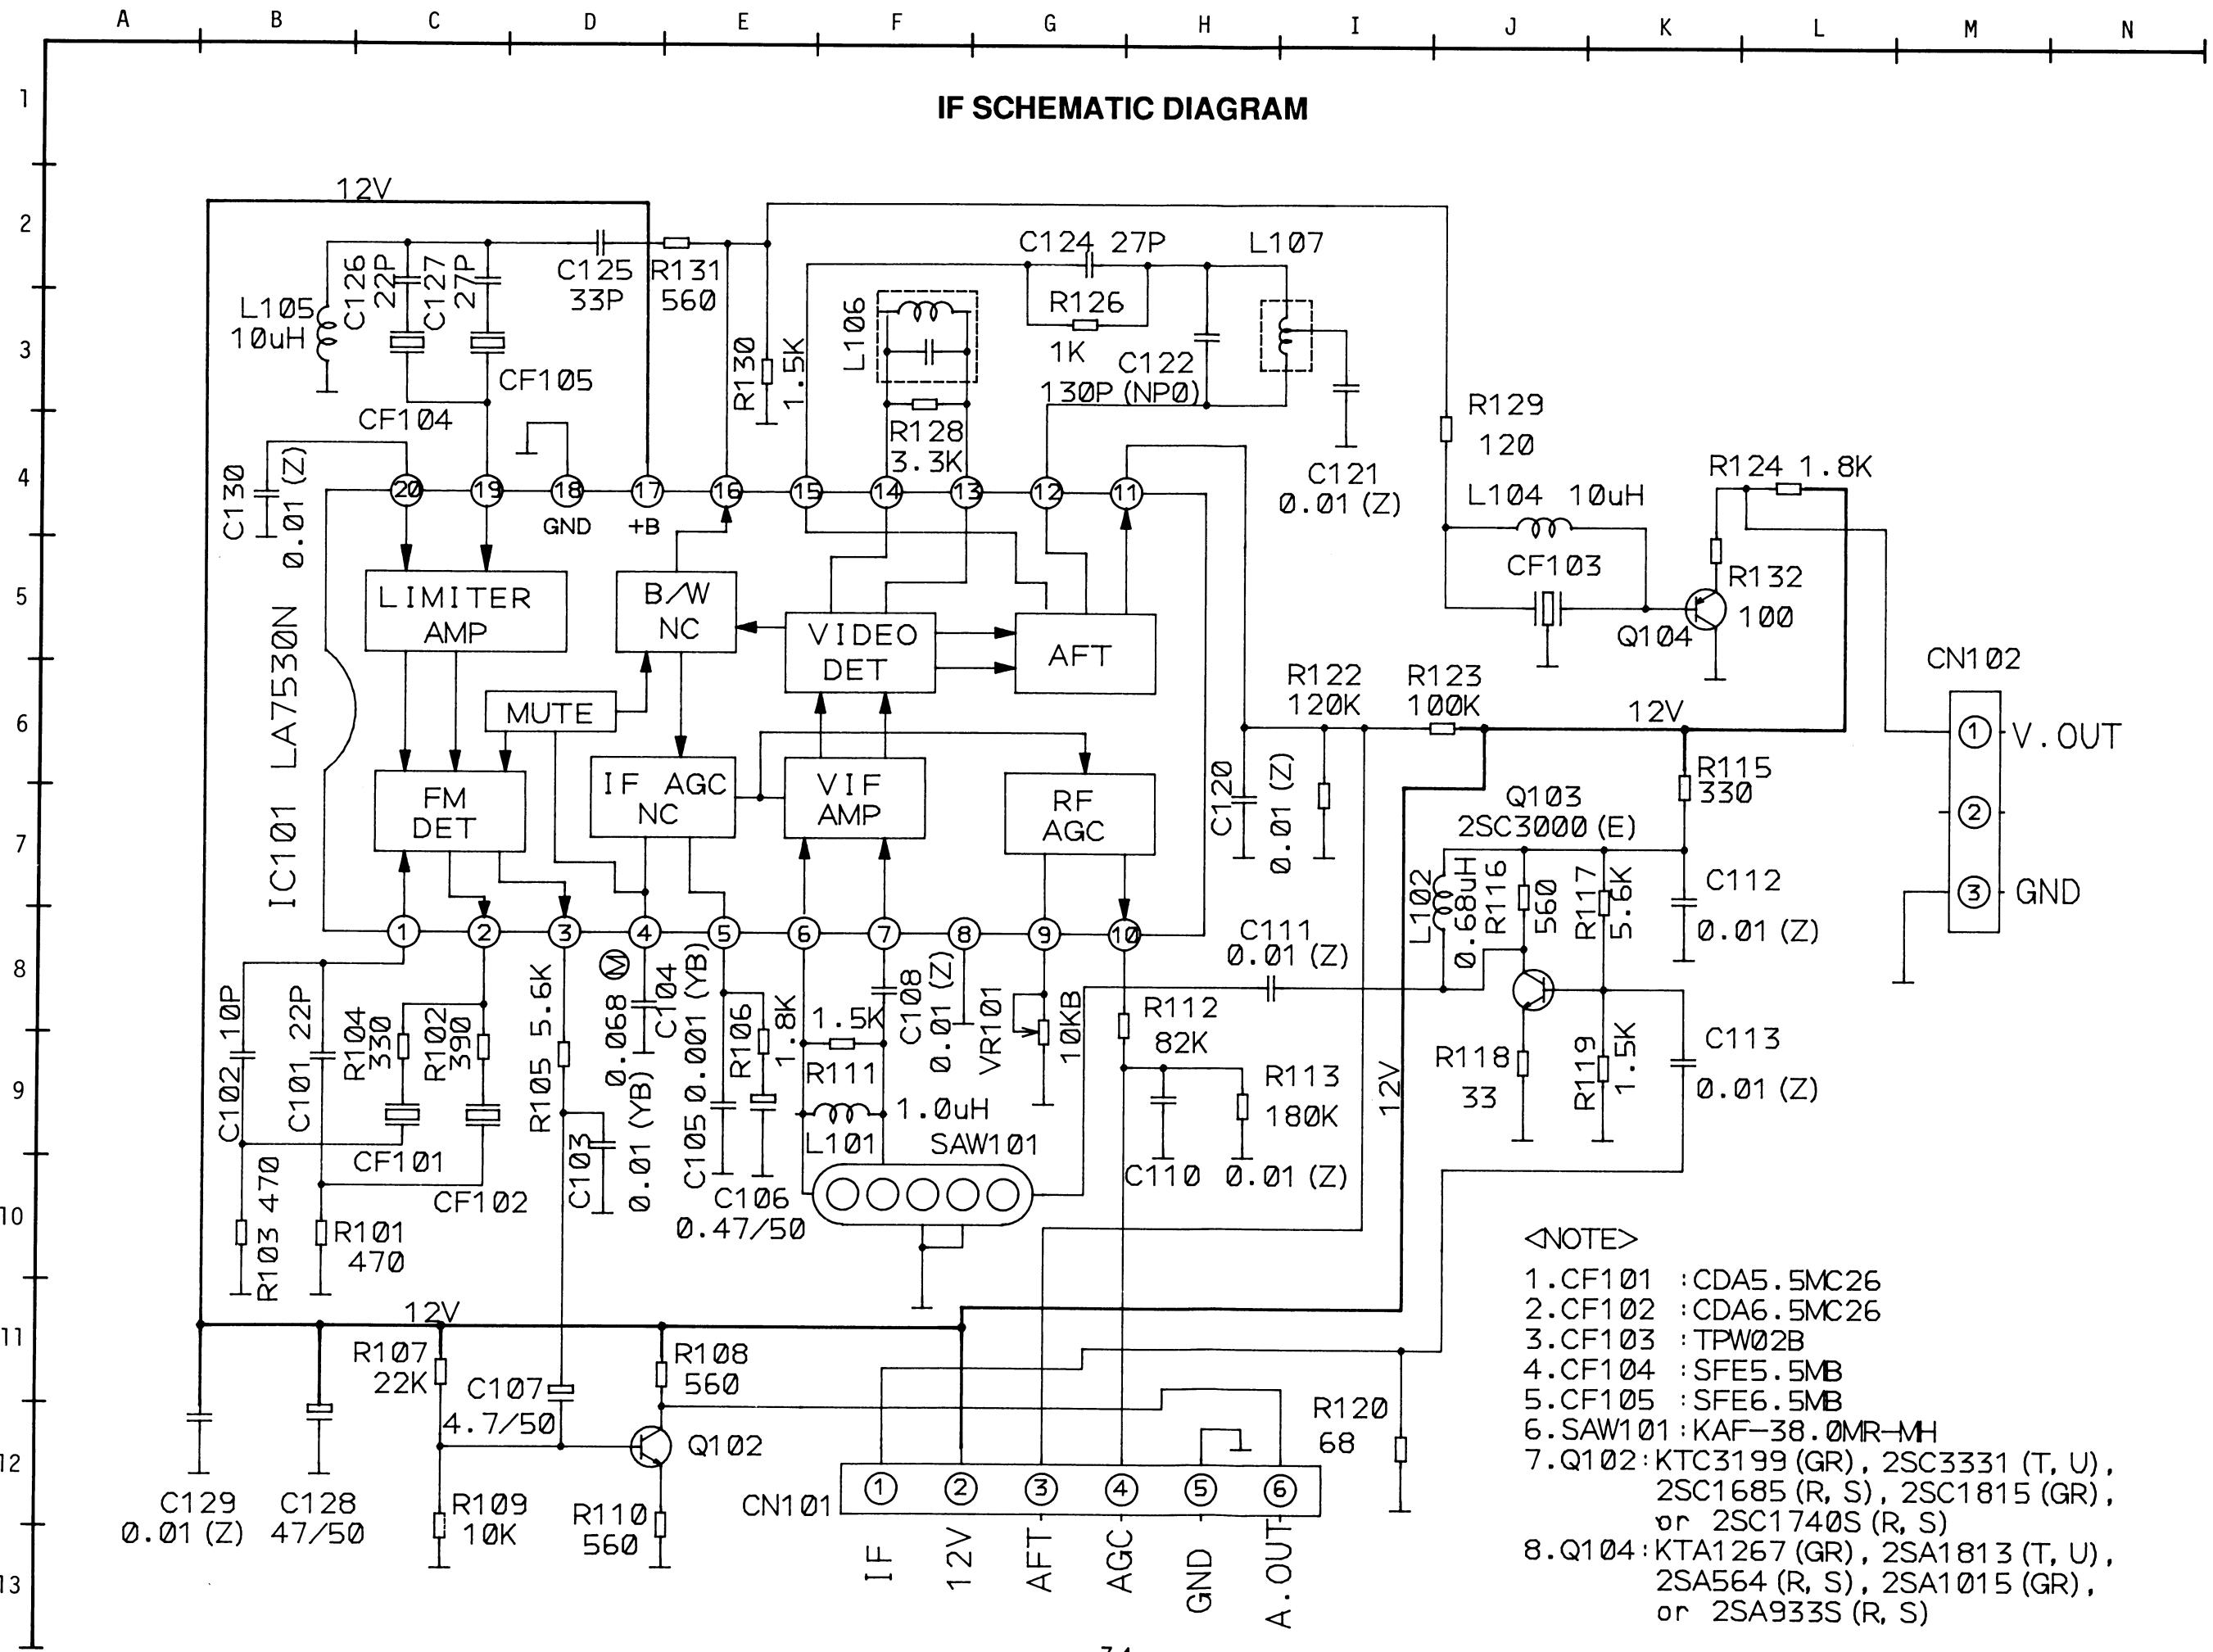

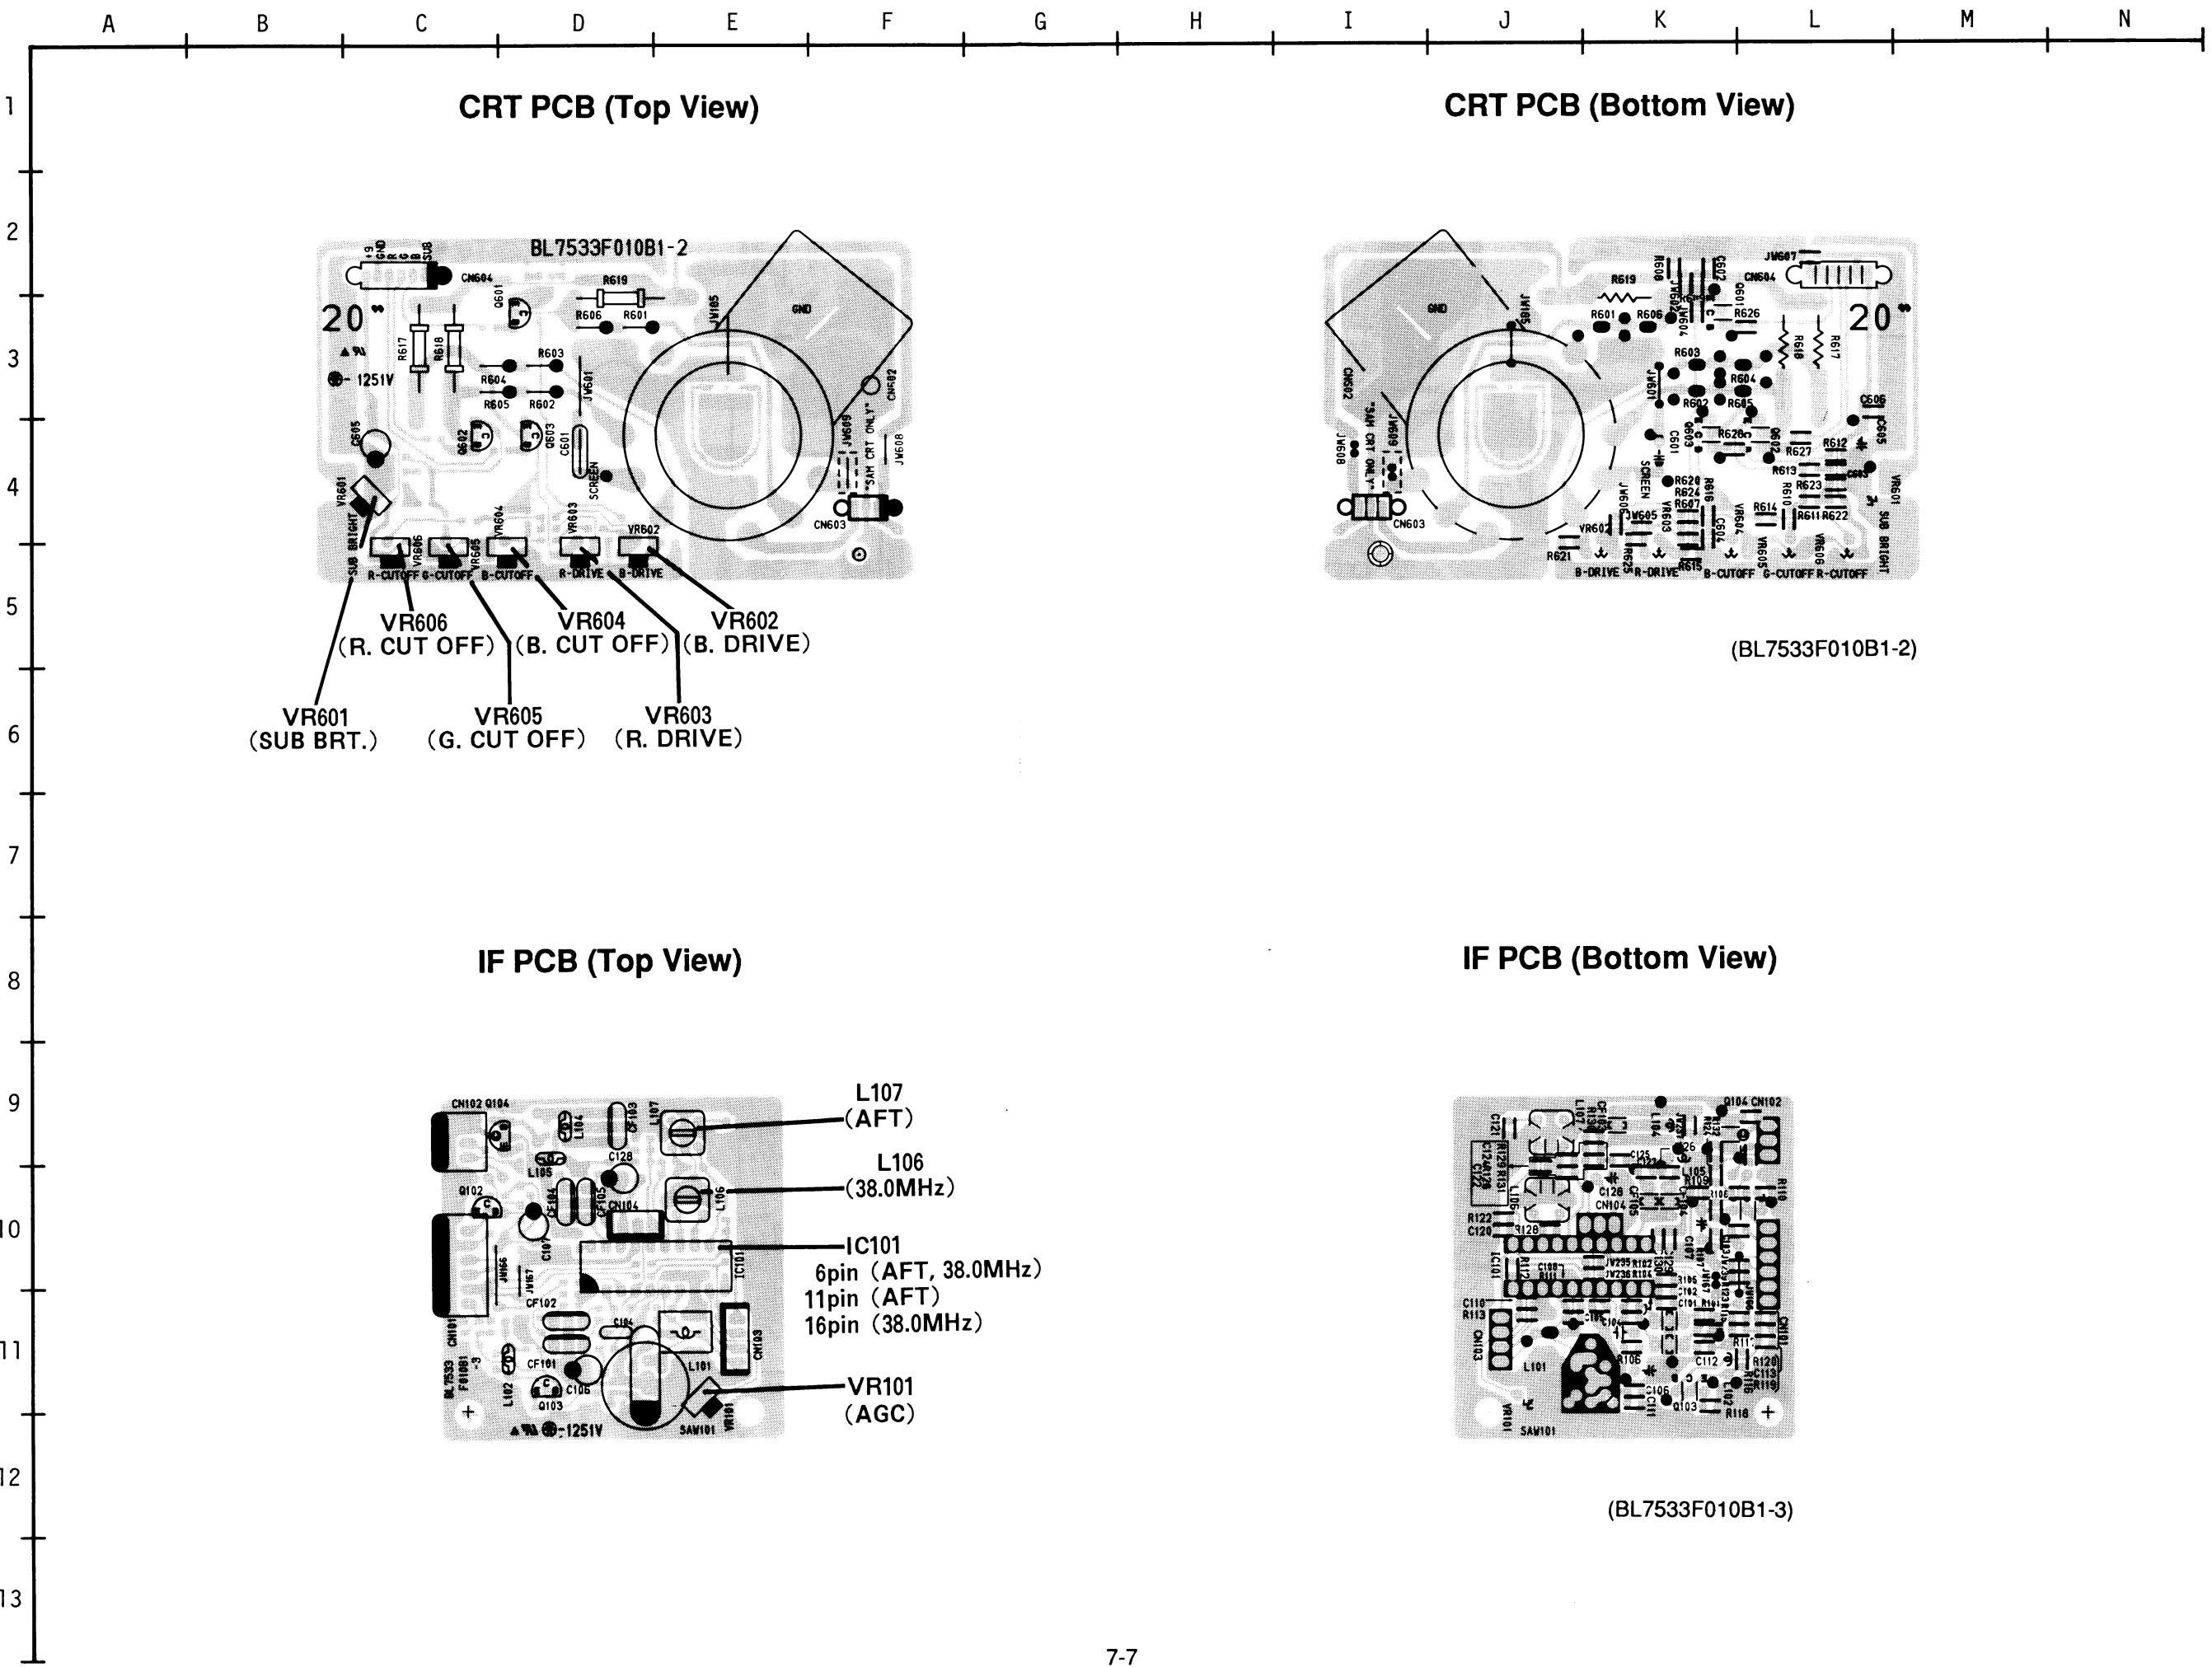



CHEMATIC DIAGRAM

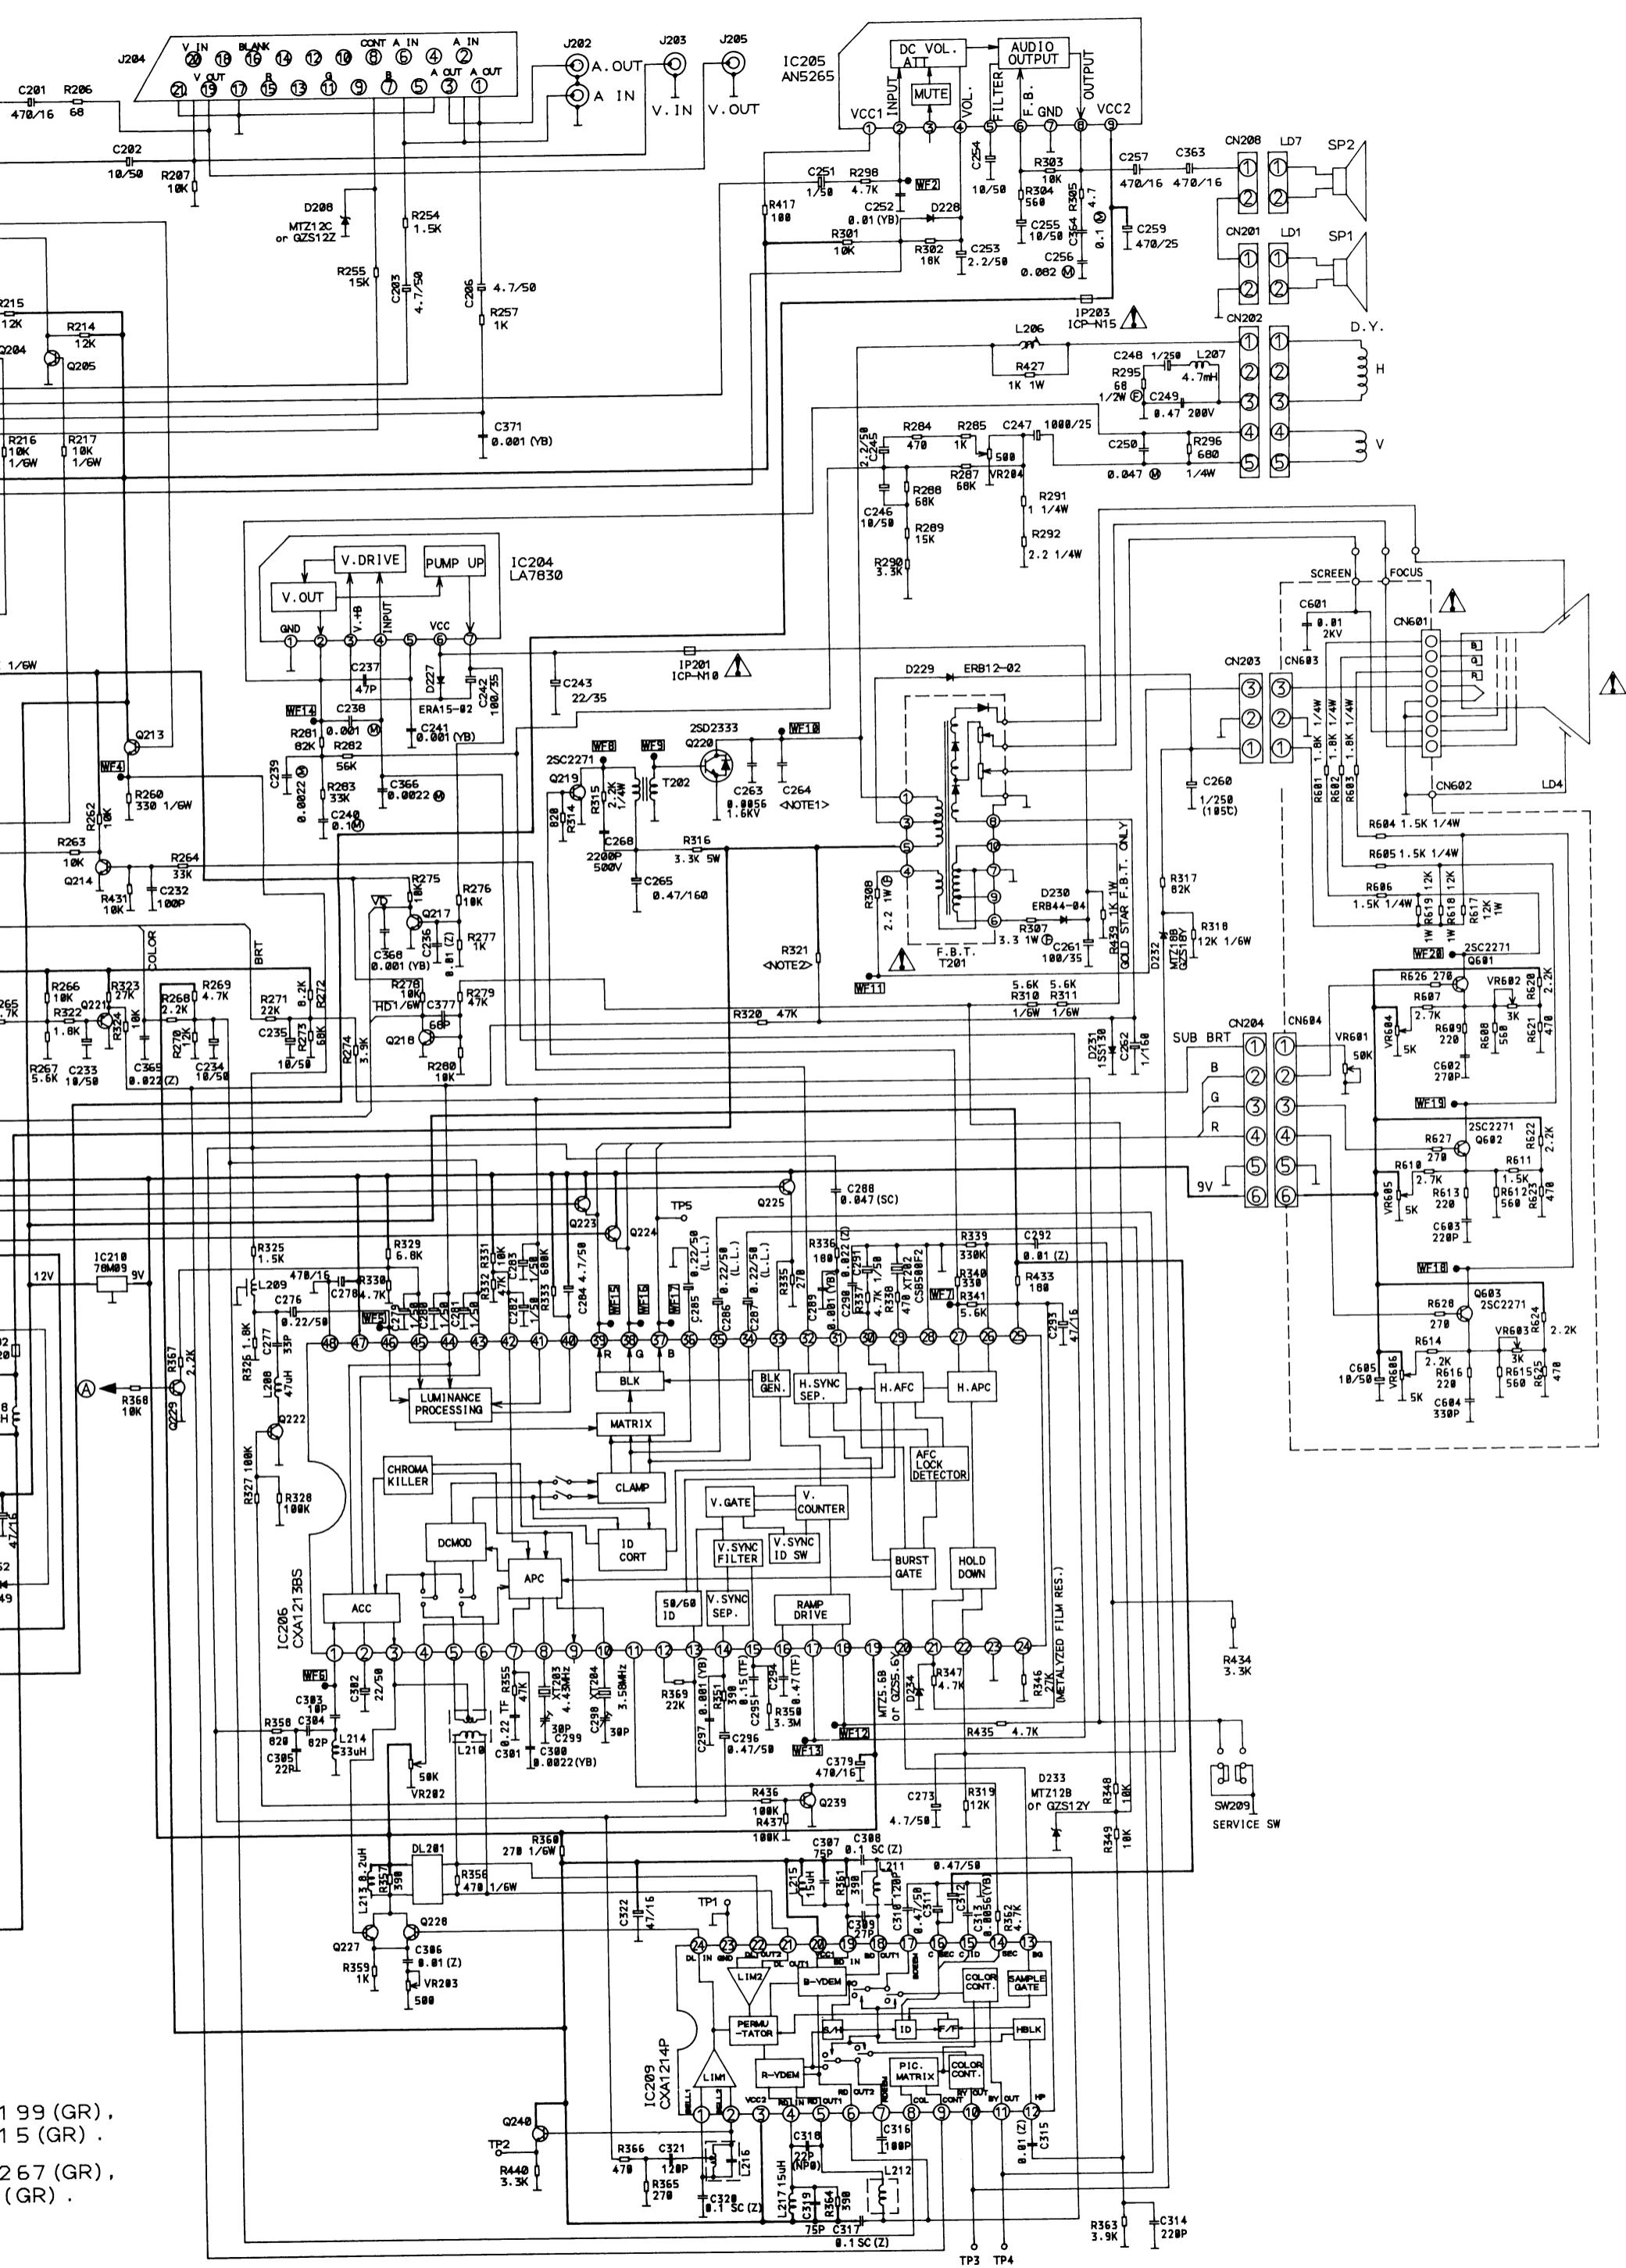

1 99 (GR),
1 5 (GR),
2 67 (GR),
(GR).

F

G

H

I

J

K

L

<NOTE 1>

Value of C264 is different from kinds of CRT and FBT.

FBT	CRT	510UFB22 -TC52 (DPY)	A48KMX12XX44	51GGB95X-TC01
FCM-20B031		0.0018 1.6KV	0.001 1.6KV	0.0012 1.6KV
154-177T		0.0033 1.6KV	0.0018 1.6KV	0.0022 1.6KV



<NOTE 2>

Value of R321 is different from kind of CRT.

CRT	510UFB22 -TC52 (DPY)	A48KMX12XX44	51GGB95X-TC01
R321	180K 1/6W	150K 1/6W	180K 1/6W

CAUTION:

FOR CONTINUED PROTECTION AGAINST FIRE HAZARD,
REPLACE ONLY WITH THE SAME TYPE T4AH 250V FUSE.
ATTENTION: POUR UNE PROTECTION CONTINUE LES RISQUES
D'INCEIE N'UTILISER QUE DES FUSIBLE DE MEMO TYPE T4AH 250V.
RISK OF FIRE - REPLACE FUSE AS MARKED.

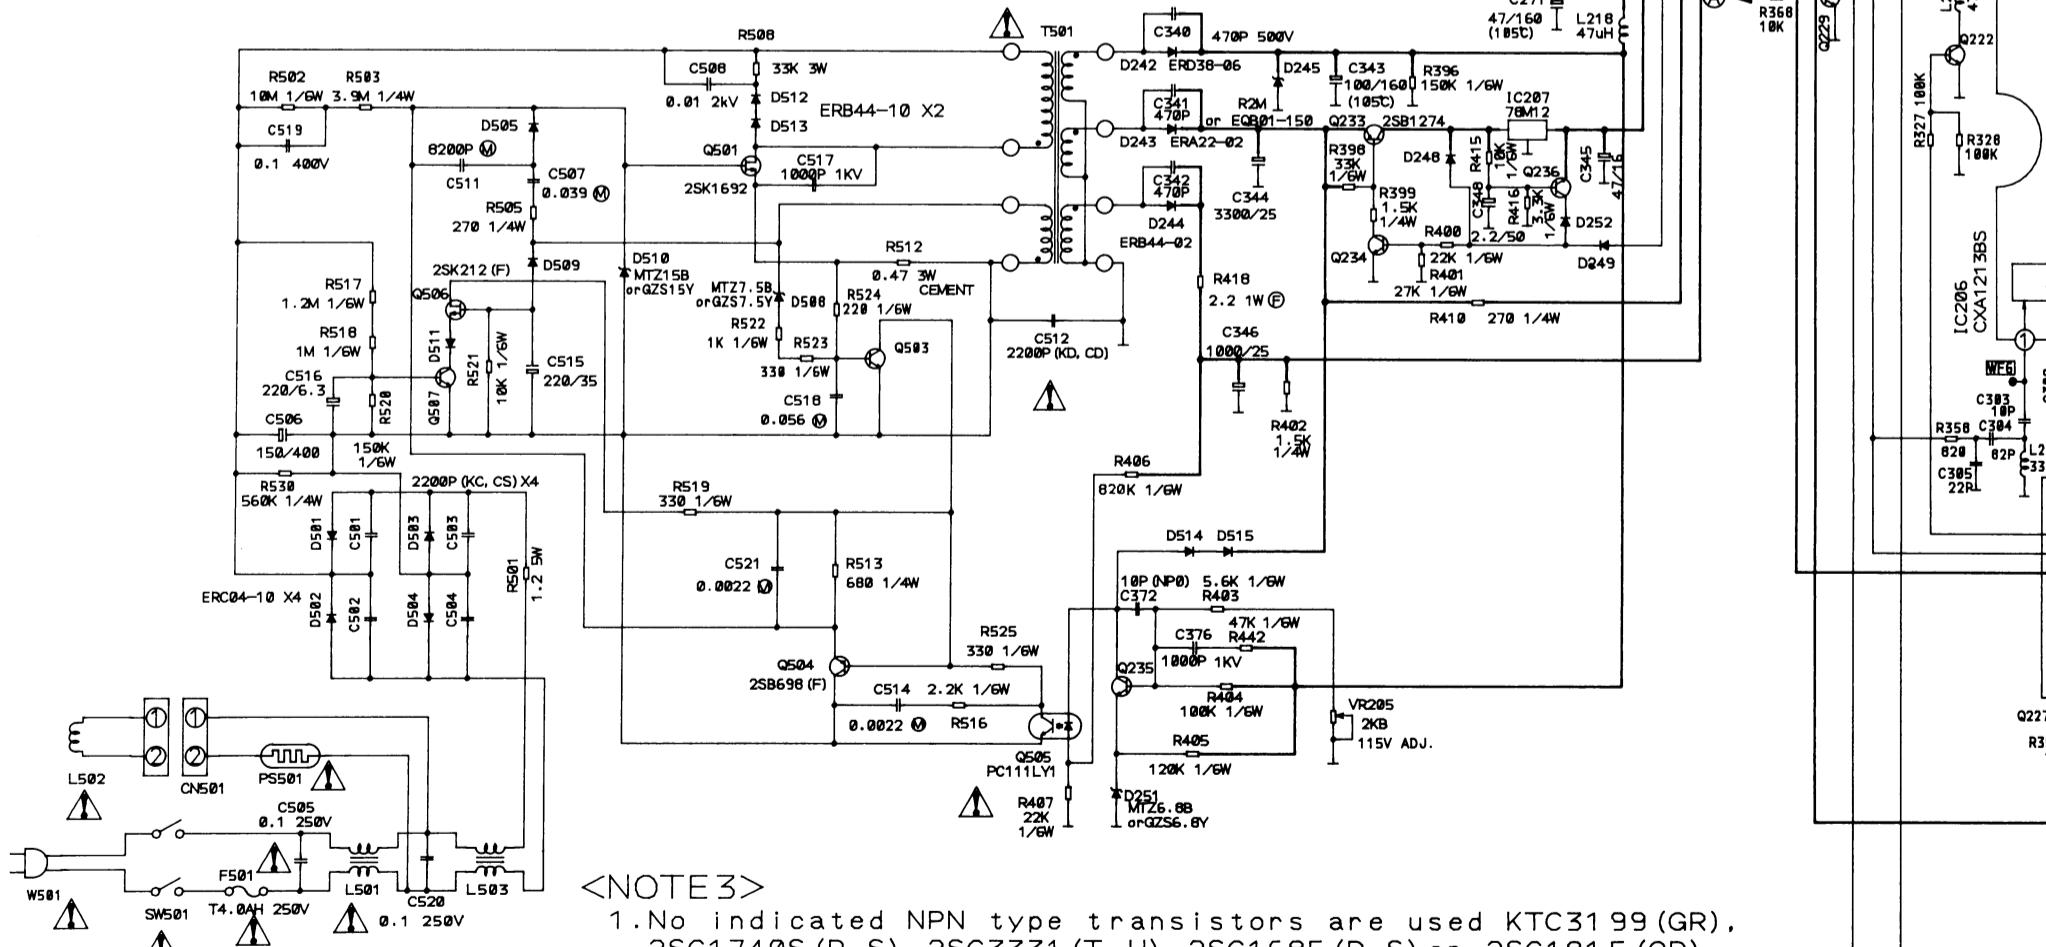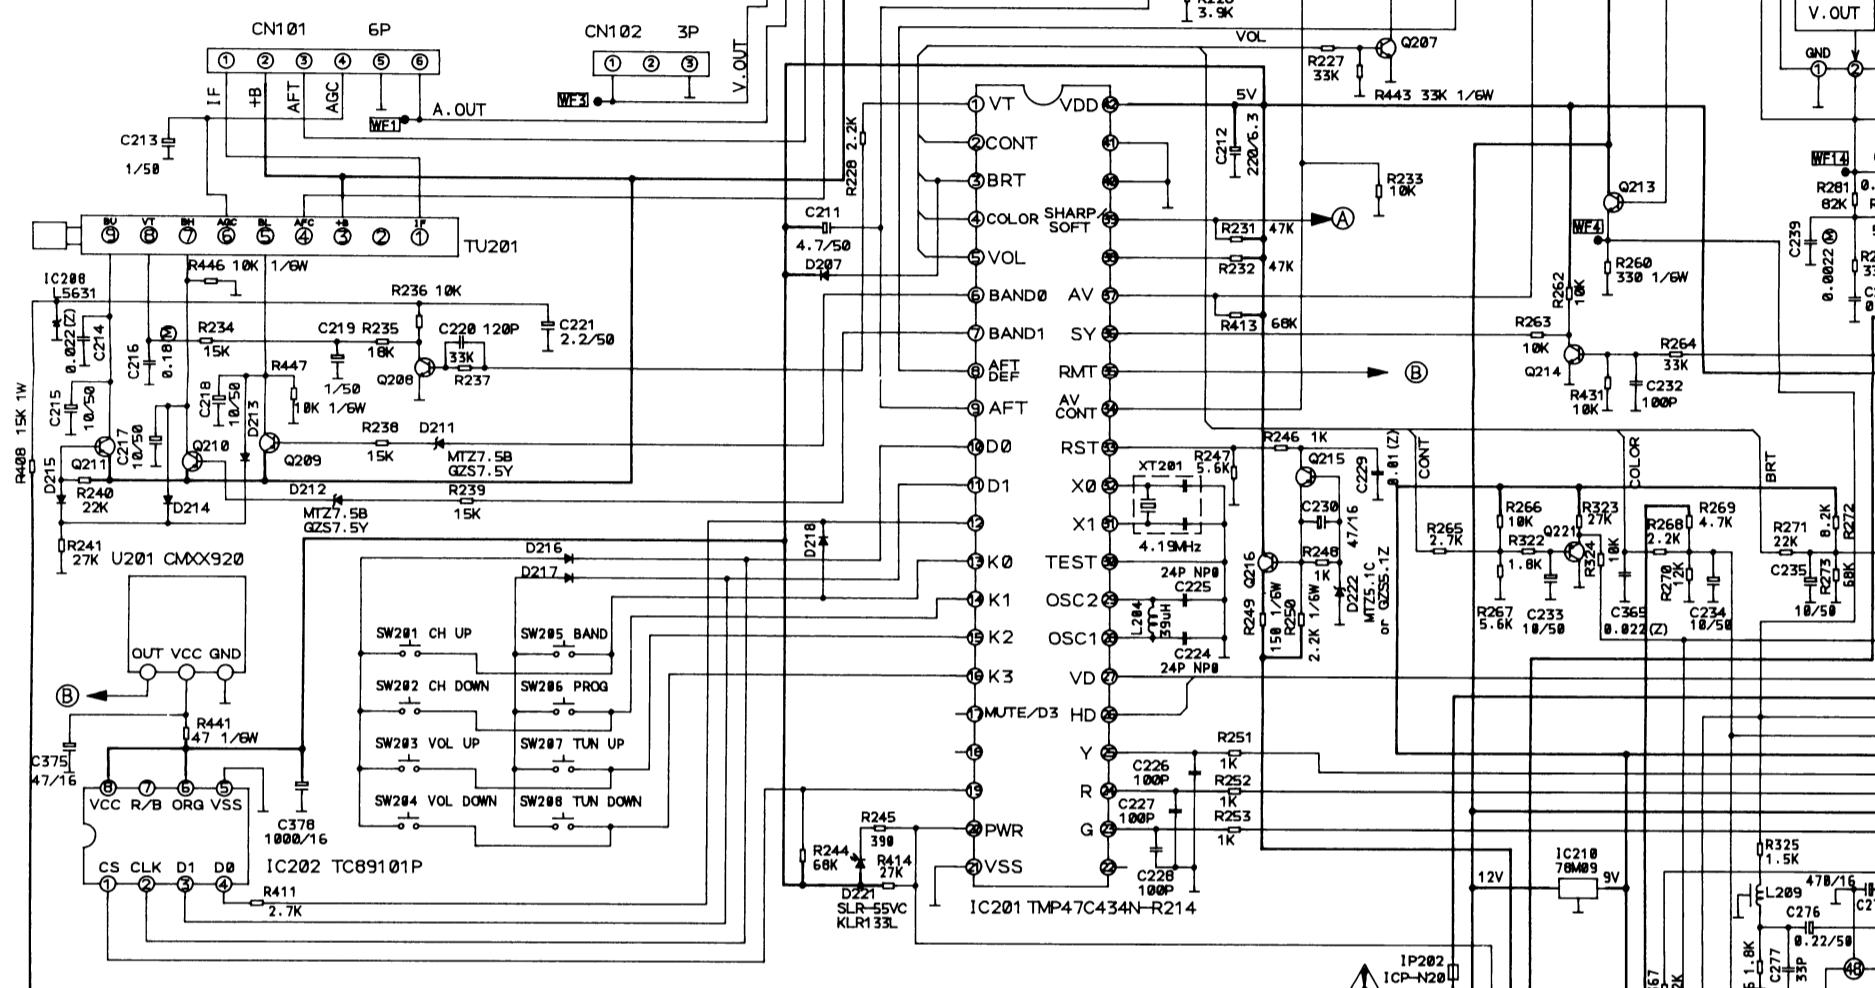

<NOTE 3>

1. No indicated NPN type transistors are used KTC3199 (GR), 2SC1740S (R, S), 2SC3331 (T, U), 2SC1685 (R, S) or 2SC1815 (GR).

2. No indicated PNP type transistors are used KTA1267 (GR), 2SA933S (R, S), 2SA1318 (T, U), 2SA564 (R, S) or 2SA1015 (GR).

3. No indicated diodes are used 1SS133 or 1SS176.