

# HITACHI

## SERVICE MANUAL

NTSC

AP63/63B Chassis

PA

No. 0069

60SX12B/13K  
50UX26B/27K  
46UX24B/25K  
50SX8B

R/C: CLU-952MP

### CONTENTS

SAFETY PRECAUTIONS .....	3
SERVICING PRECAUTIONS .....	6
TECHNICAL CAUTIONS .....	9
SPECIFICATIONS .....	10
CIRCUIT PROTECTION .....	10
GENERAL INFORMATION .....	11
CUSTOMER PICTURE AND SOUND ADJUSTMENTS .....	12
CAUTIONS WHEN CONNECTING/DISCONNECTING THE HV CONNECTOR .....	14
SERVICE ADJUSTMENTS .....	15
TROUBLESHOOTING .....	29
BLOCK DIAGRAM .....	37
PROTECTION CIRCUIT BLOCK DIAGRAM .....	38
BASIC CIRCUIT DIAGRAM .....	39
PRINTED CIRCUIT BOARDS .....	53
WIRING DIAGRAM .....	59
EXPLODED VIEW .....	63
REPLACEMENT PARTS LIST .....	67

**CAUTION:** Before servicing this chassis, it is important that the service technician read the "Safety Precaution" and "Product Safety Notices" in this Service Manual.

### SAFETY NOTICE USE ISOLATION TRANSFORMER WHEN SERVICING

Components having special safety characteristics are identified by a  on the schematics and on the parts list in this Service Data and its supplements and bulletins. Before servicing the chassis, it is important that the service technician read and follow the "Safety Precautions" and "Product Safety Notices" in this Service Manual.

\*For continued x-radiation protection, replace picture tube with original type of Hitachi approved equivalent type.

**SPECIFICATIONS AND PARTS ARE SUBJECT TO CHANGE FOR IMPROVEMENT**

## PROJECTION COLOR TELEVISION

June 1996    HHEA - MANUFACTURING DIVISION

60SX12B/13K  
50UX26B/27K  
46UX24B/25K  
50SX8B

This service manual is intended for qualified service technicians; it is not meant for the casual do-it-yourselfer. Qualified technicians have the necessary test equipment and tools, and have been trained to properly and safely repair complex products such as those covered by this manual.

Improperly performed repairs can adversely affect the safety and reliability of the product and may void warranty. If you are not qualified to perform the repair of this product properly and safely, you should not risk trying to do so and refer the repair to a qualified service technician.

### **WARNING**


Lead in solder used in this product is listed by the California Health and Welfare agency as a known reproductive toxicant which may cause birth defects or other reproductive harm (California Health and Safety Code, Section 25249.5).

When servicing or handling circuit boards and other components which contain lead in solder, avoid unprotected skin contact with solder. Also, when soldering do not inhale any smoke or fumes produced.

This television receiver provides display of television closed captioning in accordance with section 5.119 of the FCC rules.

## SAFETY PRECAUTIONS

1. Before returning an instrument to the customer, always make a safety check of the entire instrument, including but not limited to the following items:
  - a. Be sure that no built-in protective devices are defective and/or have been deleted during servicing.
    - (1) Protective shields are provided on this chassis to protect both the technician and the customer. Correctly replace all missing protective shields, including any removed for servicing convenience.
    - (2) When reinstalling the chassis and/or other assembly in the cabinet, be sure to put back in place all protective devices, including but not limited to, nonmetallic control knobs, insulating fishpapers, adjustment and compartment covers/shields, and isolation resistor/capacitor networks. **Do not operate this instrument or permit it to be operated without all protective devices correctly installed and functioning. Servicers who defeat safety features or fail to perform safety checks may be liable for any resulting damage.**
  - b. Be sure that there are no cabinet openings through which an adult or child might be able to insert their fingers and contact a hazardous voltage. Such openings include, but are not limited to (1) spacing between the picture tube and cabinet mask, (2) excessively wide cabinet ventilation slots, and (3) an improperly fitted and/or incorrectly secured cabinet back cover.
  - c. **Antenna Cold Check** — With the instrument AC plug removed from any AC source, connect an electrical jumper across the two AC plug prongs. Place the instrument AC switch in the on position. Connect one lead of an ohmmeter to the AC plug prongs tied together and touch the other ohmmeter lead in turn to each tuner antenna input exposed terminal screw and, if applicable, to the coaxial connector. If the measured resistance is less than 1.0 megohms or greater than 5.2 megohms, an abnormality exists that must be corrected before the instrument is returned to the customer. Repeat this test with the instrument AC switch in the off position.
  - d. **Leakage Current Hot Check** — With the instrument completely reassembled, plug the AC line cord directly into a 120V AC outlet. (Do not use an isolation transformer during this test.) Use a leakage current tester or a metering system that complies with American National Standards Institute (ANSI) C101.0 Leakage Current for Appliances and Underwriters Laboratories (UL) 1410, (50.7). With the instrument AC switch first in the on position and then in the off position, measure from a known earth ground (metal waterpipe, conduit, etc.) to all exposed metal parts of the instrument (antennas, handle bracket, metal cabinet, screw heads, metallic overlays, control shafts, etc.), especially any exposed metal parts that offer an electrical return path to the chassis. Any current measured must not exceed 0.1 millamps. Reverse the instrument power cord plug in the outlet and repeat test.

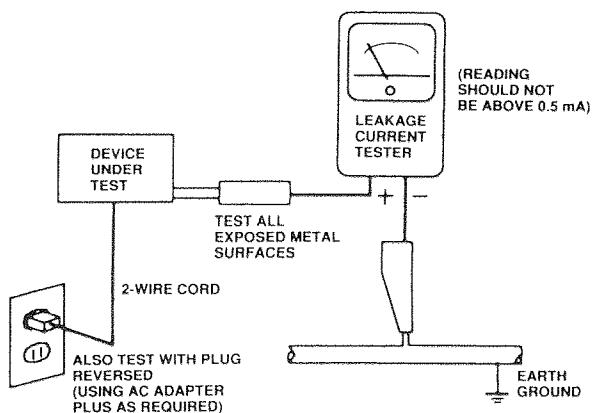


**AC Leakage Test**

**ANY MEASUREMENTS NOT WITHIN THE LIMITS SPECIFIED HEREIN INDICATE A POTENTIAL SHOCK HAZARD THAT MUST BE ELIMINATED BEFORE RETURNING THE INSTRUMENT TO THE CUSTOMER OR BEFORE CONNECTING THE ANTENNA OR ACCESSORIES.**

- e. **High Voltage** — This receiver is provided with a hold down circuit for clearly indicating that voltage has increased in excess of a predetermined value. Comply with all notes described in this Service Manual regarding this hold down circuit when servicing, so that this hold down circuit may correctly be operated.
- f. **Serviceman Warning** — With minimum contrast and brightness, operating high voltage in this receiver is lower than **31.6kV**. In case any component having influence on high voltage is replaced, confirm that high voltage with minimum contrast and brightness is lower than **31.6kV**. To measure H.V. use a high impedance H.V. meter. Connect (-) to chassis earth and (+) to the CRT anode button. (See the following connection diagram.)

**Note:** Turn power switch off without fail before the connection to the anode button is made.

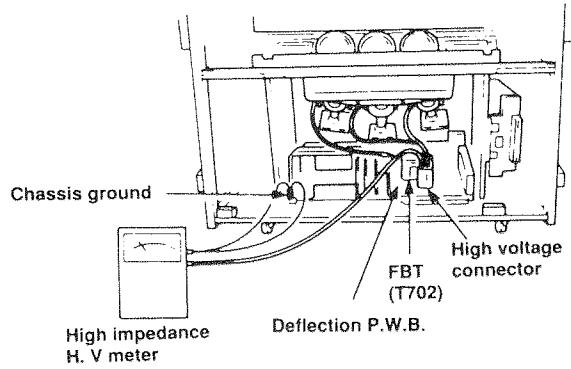

**g. X-radiation — TUBE:** The primary source of X radiation in this receiver is the picture tube. The tube utilized for the above mentioned function in this chassis is specially constructed to limit X radiation emissions.


For continued X radiation protection, the replacement tube must be the same type as the original, HITACHI approved type.

When troubleshooting and making test measurements in a receiver with a problem of excessive high voltage, avoid being unnecessarily close to the picture tube and the high voltage component.

Do not operate the chassis longer than is necessary to locate the cause of excessive voltage.

#### **h. X-Radiation Shield —**

- 1) This receiver is provided X-ray shield plates for the protection of X-radiation. Do not remove X-ray shield plates A, B, C, or D shown in Fig. 1 unnecessarily, when troubleshooting and/or making test measurements.
- 2) To prevent X-radiation, after replacement of picture tube and lens, confirm these components to be fixed correctly to bracket and cabinet, and not to be taken off easily.

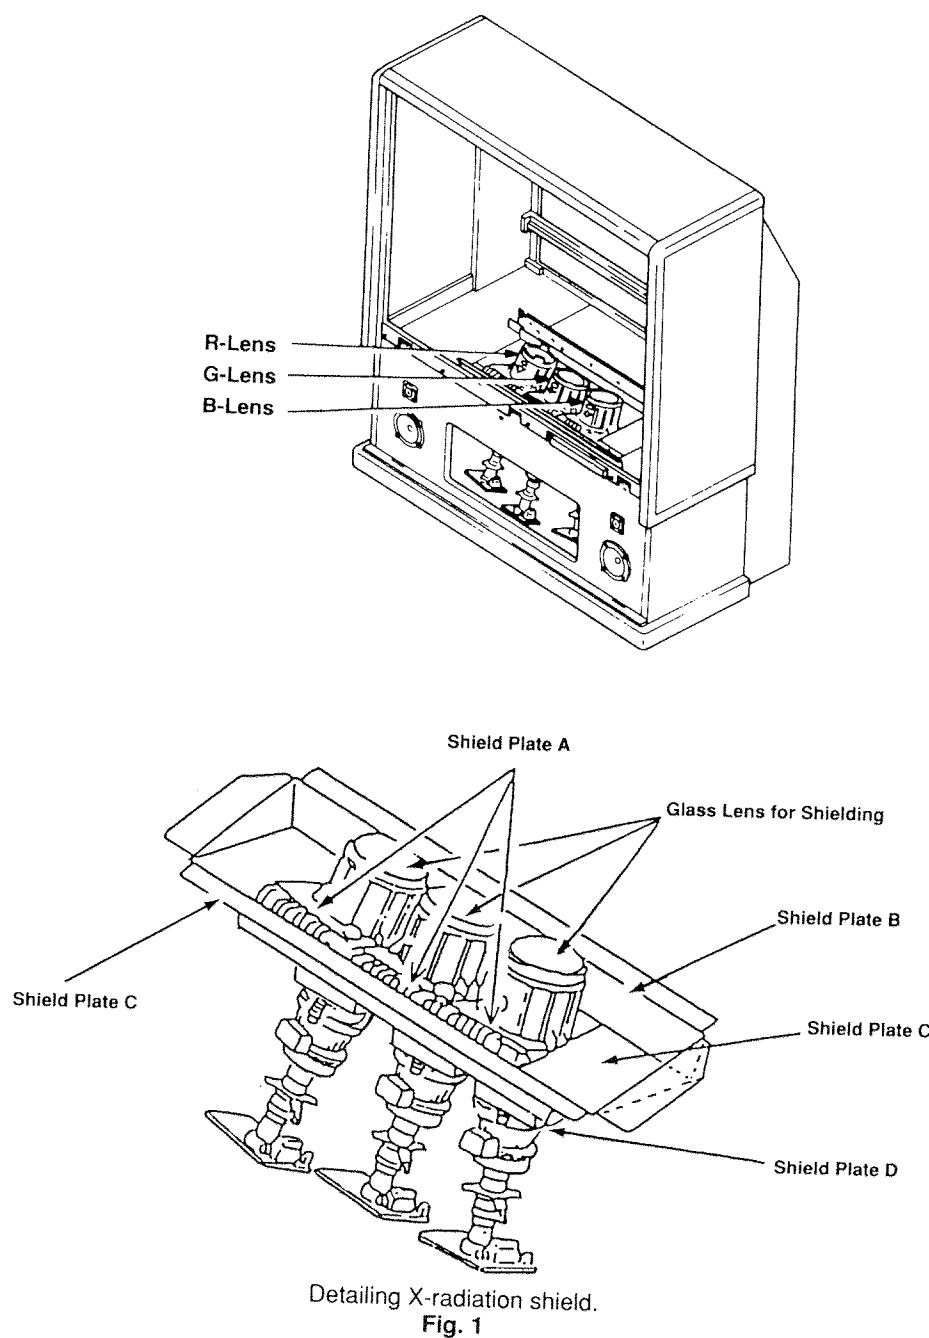

2. Read and comply with all caution and safety-related notes on or inside the receiver cabinet, on the receiver chassis, or on the picture tube.
3. **Design Alteration Warning** — Do not alter or add to the mechanical or electrical design of this TV receiver. Design alterations and additions, including but not limited to, circuit modifications and the addition of items such as auxiliary audio and/or video output connectors, might alter the safety characteristics of this receiver and create a hazard to the user. Any design alterations or additions may void the manufacturer's warranty and may make you, the servicer, responsible for personal injury or property damage resulting therefrom.
4. **Picture Tube Implosion Protection Warning** — The picture tube in this receiver employs integral implosion protection. For continued implosion protection, replace the picture tube only with one of the same type number. Do not remove, install, or otherwise handle the picture tube in any manner without first putting on shatterproof goggles equipped with side shields. People not so equipped must be kept safely away while picture tubes are handled. Keep the picture tube away from your body. Do not handle the picture tube by its neck.
5. **Hot Chassis Warning** — **a.** Some TV receiver chassis are electrically connected directly to one conductor of the AC power cord and may be safety serviced without an isolation transformer only if the AC power plug is inserted so that the chassis is connected to the ground side of the AC power source. To confirm that the AC power plug is inserted correctly, with an AC voltmeter measure between the chassis and a known earth ground. If a voltage reading in excess of 1.0V is obtained, remove and reinsert the AC power plug in the opposite polarity and again measure the voltage potential between the chassis and a known earth ground. **b.** Some TV receiver chassis normally have 85V AC (RMS) between chassis and earth ground regardless of the AC plug polarity. These chassis can be safely serviced only with an isolation transformer inserted in the power line between the receiver and the AC power source, for both personnel and test equipment protection. **c.** Some TV receiver chassis have a secondary ground system in addition to the main chassis ground. This secondary ground system is not isolated from the AC power line. The two ground systems are electrically separated by insulating material that must not be defeated or altered.
6. Observe original lead dress. Take extra care to assure correct lead dress in the following areas: **a.** near sharp edges, **b.** near thermally hot parts — be sure that leads and components do not touch thermally hot parts, **c.** the AC supply, **d.** high voltage and **e.** antenna wiring. Always inspect in all areas for pinched, out-of-plate, or frayed wiring. Do not change spacing between components, and between components and the printed circuit board. Check AC power cord for damage.
7. Components, parts, and/or wiring that appear to have overheated or are otherwise damaged should be replaced with components, parts, or wiring that meet original specifications. Additionally, determine the cause of overheating and/or damage and, if necessary, take corrective action to remove any potential safety hazard.
8. **PRODUCT SAFETY NOTICE** — Many TV electrical and mechanical parts have special safety-related characteristics some of which are often not evident from visual inspection, nor can the protection they give necessarily be obtained by replacing them with components rated for higher voltage, wattage, etc. Parts that have special safety characteristics are identified Hitachi service data by shading on schematics and by a () in the parts list. Use of a substitute replacement that does not have the same safety characteristics as the recommended replacement part in Hitachi service data parts list might create shock, fire, and/or other hazards. Product safety is under review continuously and new instructions are issued whenever appropriate. For the latest information, always consult the appropriate current Hitachi service literature. A subscription to, or additional copies of Service literature may be obtained at a nominal charge from Hitachi.

## SERVICING PRECAUTIONS

**CAUTION:** Before servicing instruments covered by this service data and its supplements and addenda, read and follow the SAFETY PRECAUTIONS on page 3 of this publication.

**NOTE:** If unforeseen circumstances create conflict between the following servicing precautions and any of the safety precautions on page 3 of this publication, always follow the safety precautions. Remember: Safety First.

### General Servicing Guidelines

1. Always unplug the instrument AC power cord from the AC power source before:
  - a. Removing or reinstalling any component, circuit board, module, or any other instrument assembly.
  - b. Disconnecting or reconnecting any instrument electrical plug or other electrical connection.
  - c. Connecting a test substitute in parallel with an electrolytic capacitor in the instrument.

**Caution:** A wrong part substitution or incorrect polarity installation of electrolytic capacitors may result in an explosion hazard.

  - d. Discharging the picture tube anode.
2. Test high voltage only by measuring it with an appropriate high voltage meter or other voltage measuring device (DVM, FETVOM, etc.) equipped with a suitable high voltage probe. Do not test high voltage by "drawing an arc." The H.V. Distribution Box has an internal  $400M\Omega$  resistor (bleeder resistor) connected from the high voltage to ground. After power is removed from the instrument the high voltage will discharge through the high voltage bleeder resistor. If the tubes have high voltage after power is removed, then the bleeder resistor is defective or the bleeder ground is disconnected.
3. Discharge the picture tube's anode at any of the R, G, or B outputs on the High Voltage distribution box only by (a) first connecting one end of an insulated clip lead to the degaussing or kine aquadag grounding system shield at the point where the picture tube socket ground lead is connected, and then (b) touch the other end of the insulated clip lead to the picture tube high voltage distribution box R, G, or B output, using an insulating handle to avoid personal contact with high voltage.
4. Do not spray chemical on or near this instrument or any of its assemblies.
5. Unless specified otherwise in these service data, clean electrical contacts by applying the following mixture to the contacts with a pipe cleaner, cotton-tipped stick or comparable nonabrasive applicator: 10% (by volume) Acetone and 90% (by volume) isopropyl alcohol (90%-99% strength). **Caution:** This is a flammable mixture. Unless specified otherwise in these service data, lubrication of contacts is not required.
6. Do not defeat any plug/socket B+ voltage interlocks with which instruments covered by this service data might be equipped.

7. Do not apply AC power to this instrument and/or any of its electrical assemblies unless all solid-state device heat sinks are correctly installed.
8. Always connect the test instrument ground lead to the appropriate instrument chassis ground before connecting the test instrument positive lead. Always remove the test instrument ground lead last.
9. Use with this instrument only the test fixtures specified in this service data.

**CAUTION:** Do not connect the test fixture ground strap to any heatsink in this instrument.

### Electrostatically Sensitive (ES) Devices

Some semiconductor (solid state) devices can be damaged easily by static electricity. Such components commonly are called Electrostatically Sensitive (ES) Devices. Examples of typical ES devices are integrated circuits and some field-effect transistors and semiconductor "chip" components. The following techniques should be used to help reduce the incidence of component damage caused by static electricity.


1. Immediately before handling any semiconductor component or semiconductor-equipped assembly, drain off any electrostatic charge on your body by touching a known earth ground. Alternatively, obtain and wear a commercially available discharging wrist strap device, which should be removed for potential shock reasons prior to applying power to the unit under test.
  2. After removing an electrical assembly equipped with ES devices, place the assembly on a conductive surface such as aluminum foil, to prevent electrostatic charge buildup or exposure of the assembly.
  3. Use only a grounded-tip soldering iron to solder or unsolder ES devices.
  4. Use only an anti-static type solder removal device. Some solder removal devices not classified as "anti-static" can generate electrical charges sufficient to damage ES devices.
  5. Do not use freon-propelled chemicals. These can generate electrical charges sufficient to damage ES devices.
  6. Do not remove a replacement ES device from its protective package until immediately before you are ready to install it. (Most replacement ES devices are packaged with leads electrically shorted together by conductive foam, aluminum foil or comparable conductive material.)
  7. Immediately before removing the protective material from the leads of a replacement ES device, touch the protective material to the chassis or circuit assembly into which the device will be installed.
- CAUTION:** Be sure no power is applied to the chassis or circuit, and observe all other safety precautions.
8. Minimize bodily motions when handling unpackaged replacement ES devices. (Otherwise harmless motion such as the brushing together of your clothes fabric or the lifting of your foot from a carpeted floor can generate static electricity sufficient to damage an ES device.)

### General Soldering Guidelines

1. Use a grounded-tip, low-wattage soldering iron and appropriate tip size and shape that will maintain tip temperature within the range 500°F to 600°F.
2. Use an appropriate gauge of resin-core solder composed of 60 parts tin/40 parts lead.
3. Keep the soldering iron tip clean and well tinned.
4. Thoroughly clean the surfaces to be soldered. Use a small wire-bristle (0.5 inch or 1.25 cm) brush with a metal handle. Do not use freon-propelled spray-on cleaners.
5. Use the following unsoldering technique.
  - a. Allow the soldering iron tip to reach normal temperature (500°F to 600°F).
  - b. Heat the component lead until the solder melts. Quickly draw away the melted solder with an anti-static, suction-type solder removal device or with solder braid.

**CAUTION:** Work quickly to avoid overheating the circuit board printed foil.
6. Use the following soldering technique.
  - a. Allow the soldering iron tip to reach normal temperature (500°F to 600°F).
  - b. First, hold the soldering iron tip and solder strand against the component lead until the solder melts.
  - c. Quickly move the soldering iron tip to the junction of the component lead and the printed circuit foil, and hold it there only until the solder flows onto and around both the component lead and the foil.

**CAUTION:** Work quickly to avoid overheating the circuit board printed foil or components.
- d. Closely inspect the solder area and remove any excess or splashed solder with a small wire-bristle brush.

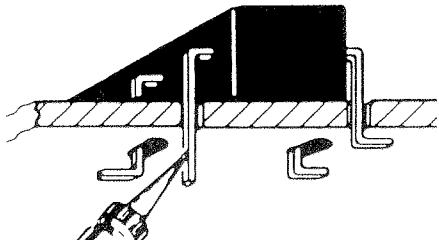

Use Soldering Iron to Pry Leads

### IC Removal/Replacement

Some Hitachi unitized chassis circuit boards have slotted holes (oblong) through which the IC leads are inserted and then bent flat against the circuit foil. When holes are the slotted type, the following technique should be used to remove and replace the IC. When working with boards using the familiar round hole, use the standard technique as outlined in paragraphs 5 and 6 above.

### Removal

1. Desolder and straighten each IC lead in one operation by gently prying up on the lead with the soldering iron tip as the solder melts.
2. Draw away the melted solder with an anti-static suction-type solder removal device (or with solder braid) before removing the IC.

### Replacement

1. Carefully insert the replacement IC in the circuit board.
2. Carefully bend each IC lead against the circuit foil pad and solder it.
3. Clean the soldered areas with a small wire-bristle brush. (It is not necessary to reapply acrylic coating to the areas.)

### "Small-signal" Discrete Transistor Removal/Replacement

1. Remove the defective transistor by clipping its leads as close as possible to the component body.
2. Bend into a "U" shape the end of each of three leads remaining on the circuit board.
3. Bend into a "U" shape the replacement transistor leads.
4. Connect the replacement transistor leads to the corresponding leads extending from the circuit board and crimp the "U" with long nose pliers to insure metal to metal contact, then solder each connection.

### Power Output Transistor Devices Removal/Replacement

1. Heat and remove all solder from around the transistor leads.
2. Remove the heatsink mounting screw (if so equipped).
3. Carefully remove the transistor from the circuit board.
4. Insert new transistor in circuit board.
5. Solder each transistor lead, and clip off excess lead.
6. Replace heatsink.

### Diode Removal/Replacement

1. Remove defective diode by clipping its leads as close as possible to diode body.
2. Bend the two remaining leads perpendicularly to the circuit board.
3. Observing diode polarity, wrap each lead out of the new diode around the corresponding lead on the circuit board.
4. Securely crimp each connection and solder it.
5. Inspect (on the circuit board copper side) the solder joints of the two "original" leads. If they are not shiny, reheat them and, if necessary, apply additional solder.

### Fuses and Conventional Resistor Removal/Replacement

1. Clip each fuse or resistor lead at top of circuit board hollow stake.
2. Securely crimp leads of replacement component around stake 1/8 inch from top.
3. Solder the connections.

**CAUTION:** Maintain original spacing between the replaced component and adjacent components and the circuit board, to prevent excessive component temperatures.

### Circuit Board Foil Repair

Excessive heat applied to the copper foil of any printed circuit board will weaken the adhesive that bonds the foil to the circuit board, causing the foil to separate from, or "lift-off," the board. The following guidelines and procedures should be followed whenever this condition is encountered.


#### In Critical Copper Pattern Areas

High component/copper pattern density and/or special voltage/current characteristics make the spacing and integrity of copper pattern in some circuit board areas more critical than in others. The circuit foil in these areas is designated as Critical Copper Pattern and is identified and illustrated in this service data in the section titled Safety Related Copper Pattern (see data in the section titled Safety Related Copper Pattern (see table of contents for page number). Because Critical Copper Pattern requires special soldering techniques to ensure the maintenance of reliability and safety standards, contact your Hitachi personnel.

#### At IC Connections

To repair defective copper pattern at IC connections, use the following procedure to install a jumper wire on the copper pattern side of the circuit board. (Use this technique only on IC connections.)

1. Carefully remove the damaged copper pattern with a sharp knife. (Remove only as much copper as absolutely necessary.)
2. Carefully scratch away the solder resist and acrylic coating (if used) from the end of the remaining copper pattern.

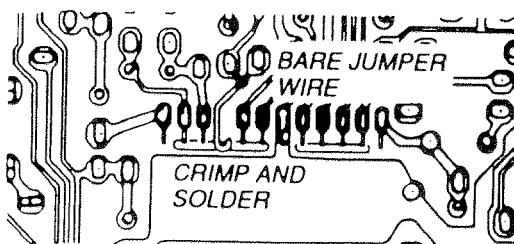


Install Jumper Wire and Solder

3. Bend a small "U" in one end of a small-gauge jumper wire and carefully crimp it around the IC pin. Solder the IC connection.

4. Route the jumper wire along the path of the cut-away copper pattern and let it overlap the previously scraped end of the good copper pattern. Solder the overlapped area, and clip off any excess jumper wire.

#### At Other connections

Use the following technique to repair defective copper pattern at connections other than IC Pins. This technique involves the installation of a jumper wire on the component side of the circuit board.

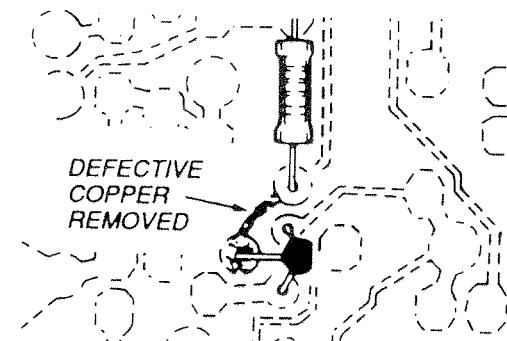

Insulated Jumper Wire

1. Remove the defective copper pattern with a sharp knife. Remove at least 1/4 inch of copper, to ensure that a hazardous condition will not exist if the jumper wire opens.
2. Trace along the copper pattern from both sides of the pattern break and locate the nearest component that is directly connected to the affected copper pattern.
3. Connect insulated 20-gauge jumper wire from the lead of the nearest component on one side of the pattern break to the lead of the nearest component on the other side. Carefully crimp and solder the connections.

**CAUTION:** Be sure the insulated jumper wire is dressed so that it does not touch components or sharp edges.

### Frequency Synthesis (FS) Tuning Systems

1. Always unplug the instrument AC power cord before disconnecting or reconnecting FS tuning system cables and before removing or inserting FS tuning system modules.
2. The FS tuner must never be disconnected from the FS tuning control module while power is applied to the instrument.
3. When troubleshooting intermittent problems that might be caused by defective cable connection(s) to the FS tuning system, remove the instrument AC power as soon as the defective connector is found and finish confirming the bad connection with a continuity test. This procedure will reduce the probability of electrical overstress of the FS system semi-conductor components.

## TECHNICAL CAUTIONS

### High Voltage limiter circuit operation check.

1. Turn off TV and connect jig as shown in Figure 2. Adjust jig fully counter-clockwise for minimum resistance.
2. Set the AC input to 120V AC and turn on TV.
3. Confirm test pattern on CRT is a usable picture, then slowly adjust jig until the picture disappears and TV shuts down.

4. When the limiter circuit is operating properly, High Voltage will be less than 37.0kV at 0.6mA when TV shuts down.
5. Turn off set immediately after checking circuit operation.
6. Unplug set for one minute to reset shutdown circuit. Remove jig and voltmeter.

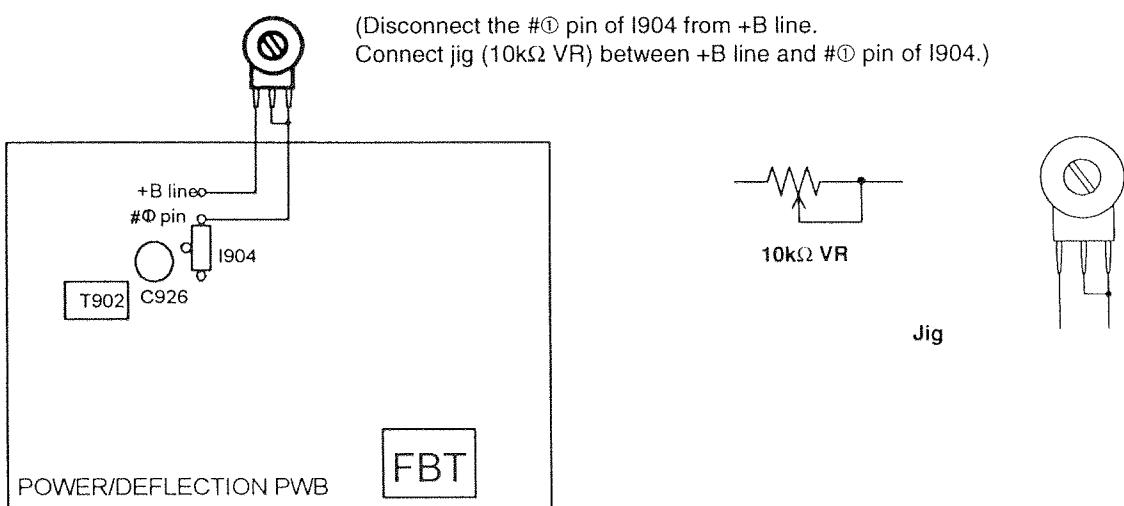
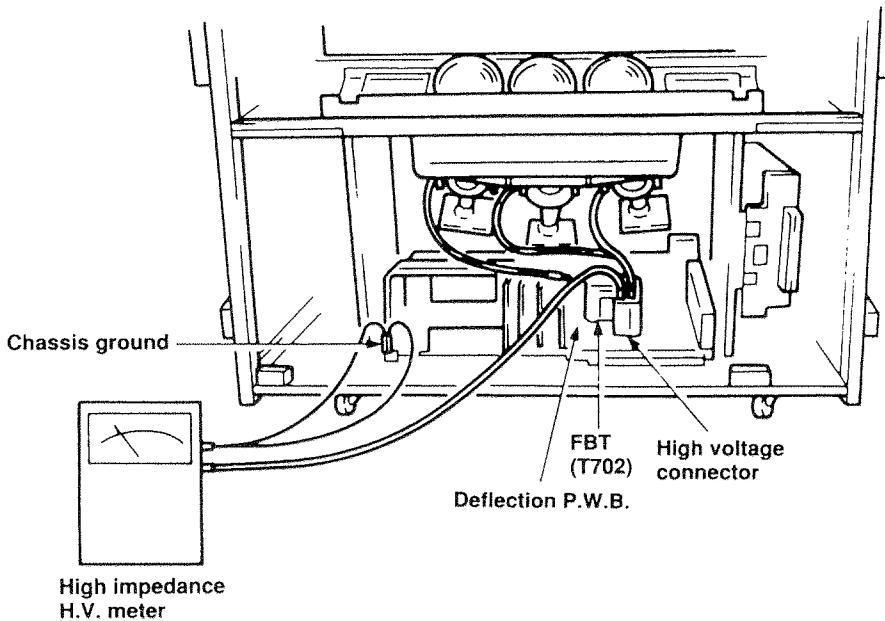


Fig. 2 Deflection/Power Supply P.C.B.

60SX12B/13K  
50UX26B/27K  
46UX24B/25K  
50SX8B


## SPECIFICATIONS

<b>Model:</b>	60SX12B	60SX13K	<b>Anode Voltage:</b>	30.0 kV (Zero Beam Current)
	50UX26B	50UX27K	<b>Brightness:</b>	500 ft-Nominal - (46UX24B/25K) 420 ft-Nominal - (50UX26B/27K) 380 ft-Nominal - (50SX8B) 250 ft-Nominal - (60SX12B/13K)
	46UX24B	46UX25K		(Peak White)
	50SX8B		<b>Speakers:</b>	2 Woofers - 5 inch (12 cm) round 2 Tweeters - 2 inch (5 cm) round 1 Full Range - 3x5 inch (7.5x12cm)
<b>Cathode-Ray Tube:</b>	80° deflection 6.9 inch			
60SX12B/13K, 50SX8B, 50UX26B/27K	46UX24B/25K			
P16LGD00RFA(R),	P16LEN00RFA(R),			
P16LGD00HLA(G),	P16LEN00HLA(G),			
P16LGD00BMB(B)	P16LEN00BMB(B)			
<b>Power Input:</b>	120 volts AC, 60Hz			
<b>Power Consumption:</b>	253 watts - Maximum (50UX26B/27K, 46UX24B/25K)			
	257 watts - Maximum (60SX12B/13K, 50SX8B)		<b>Dimension:</b>	<b>46UX24B/25K</b>
	173 watts - Operating (50UX26B/27K, 46UX24B/25K)		Height (in.)	49-1/8
	176 watts - Operating (60SX12B/13K, 50SX8B)		Width (in.)	40
<b>Antenna Impedance:</b>	75 ohm Unbalanced VHF/UHF/CATV		Depth (in.)	22-3/8
<b>Receiving Channel:</b>	CH		Weight (lbs.)	198
	VHF 2-13			
	EXT. Mid (A-2)-(A-1), 4+			<b>50UX26B/27K</b>
	CATV Mid A-I			
	CATV Super J-W			
	CATV Hyper (W+29)-(W+53)			
<b>Intermediate Frequency:</b>	Picture I-F Carrier 45.75 MHz Sound I-F Carrier 41.25 MHz Color Sub Carrier 42.17 MHz		<b>Circuit Board Assemblies:</b>	CPT (B) P.C.B. CPT (G) P.C.B. CPT (R) P.C.B. 3 Line Comb. P.C.B. (except SX models) Sensor Distribution P.C.B.
<b>Video Input:</b>	1 Volt p-p 75 ohm			Signal P.C.B.
<b>Video Output:</b>	1 Volt p-p 75 ohm			Signal Sub P.C.B.
<b>Audio Input:</b>	0.47 volt rms, 47 k ohm			Power/Deflection P.C.B.
<b>Stereo Audio Output:</b>	0.47 volt rms, 1 k ohm			Control P.C.B.
<b>Audio Output Power:</b>	Front — 10 watts rms per channel, 8 ohm impedance. Max output — 15 watts Rear — 5 watts per channel, 8 ohm impedance. Max output — 7 watts. Center — 7 watts per channel.			Surround A P.C.B. Surround B P.C.B. Graphic Eq. P.C.B. Terminal P.C.B. V.M. P.C.B.

## CIRCUIT PROTECTION


Fuse (or Device)	Circuit Protected	Physical Location
F902 5A/125V AC	Main Fuse	Power/Defl. Circuit Board
F903 5A/125V DC (LITTELFUSE)	Main Fuse	Power/Defl. Circuit Board
F905 4A/125V DC (LITTELFUSE)	26V Supply (Audio)	Power/Defl. Circuit Board
F906 1.6A/125V DC	115V (+B) Supply	Power/Defl. Circuit Board

## GENERAL INFORMATION

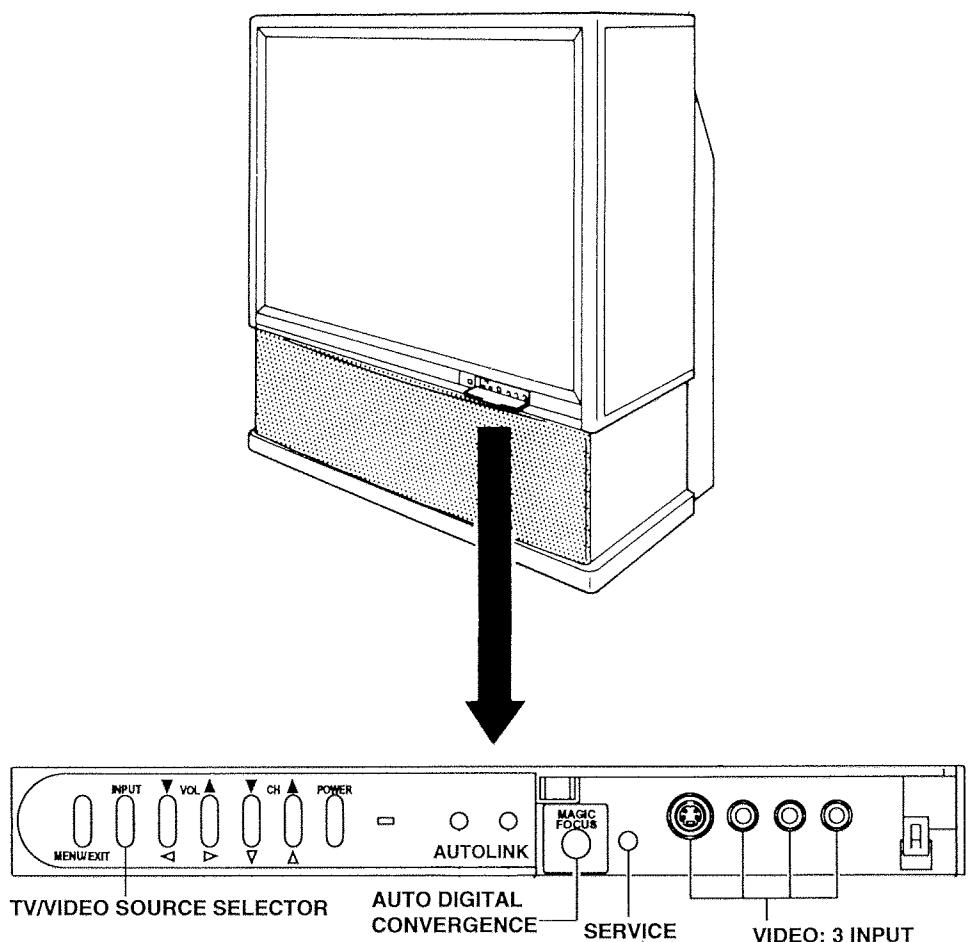

Control Panel  
Fig. 3



### REAR SPEAKER TERMINALS

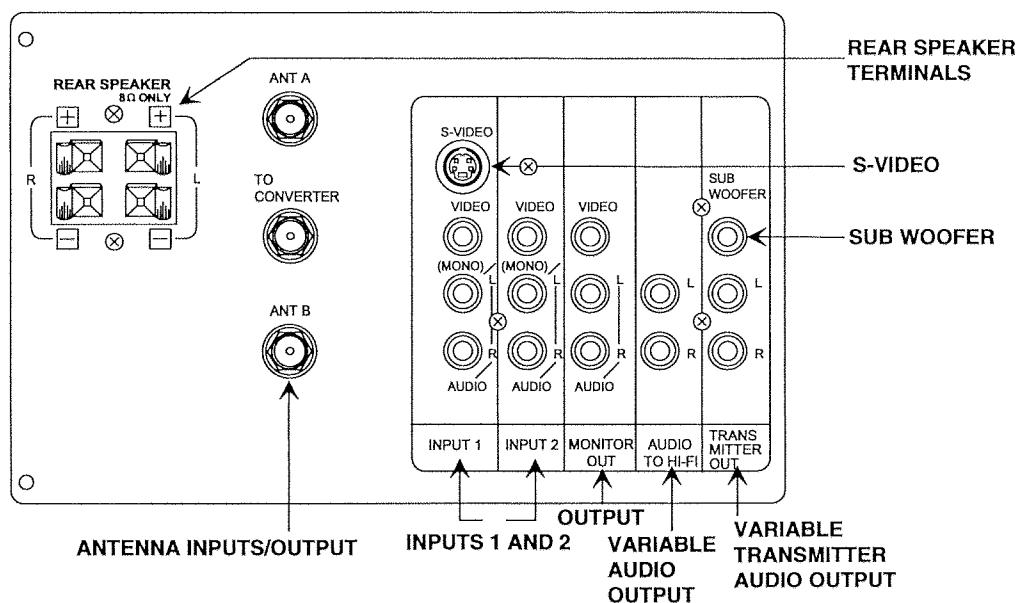

Rear Connections Panel  
Fig. 4



Select VIDEO SETTINGS to adjust picture settings and improve picture quality.

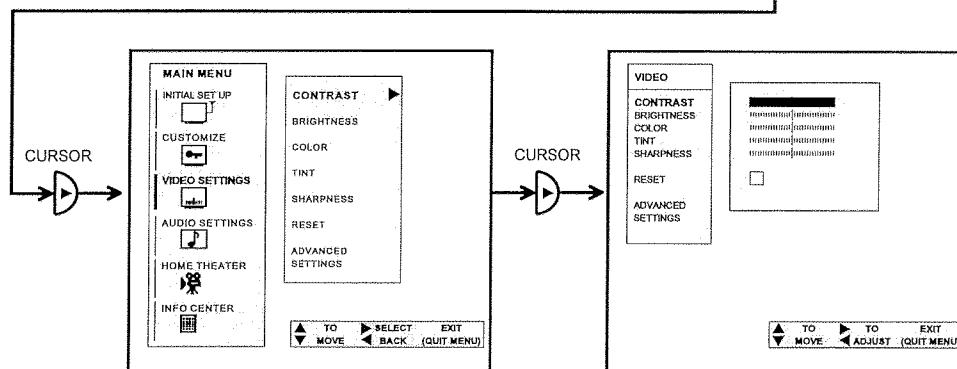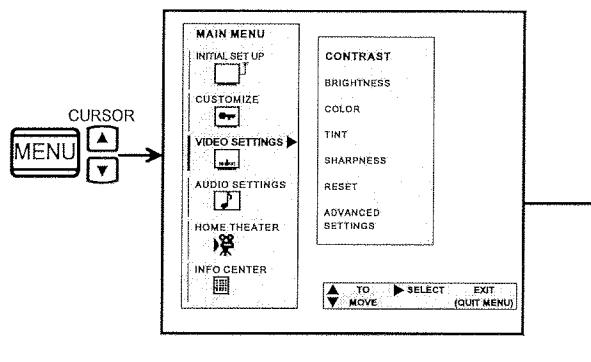

Use the CURSOR ▲ or ▼ to highlight the function to be adjusted.

Press CURSOR ◀ or ▶ to adjust the function.

Use CURSOR ▲ or ▼ to highlight RESET or ADVANCED SETTINGS, then CURSOR ◀ to return to previous menu.  
Press EXIT to quit menu.

#### CONTRAST

Use this function to change the contrast between black and white levels in the picture. This adjustment will only affect the picture when PICTURE SETTINGS AI is OFF.

#### BRIGHTNESS

Use this function to adjust overall picture brightness.

#### COLOR

Use this function to adjust the level of color in the picture.

#### TINT

Use this function to adjust flesh tones so they appear natural.


#### SHARPNESS

Use this function to adjust the amount of fine detail in the picture.

#### RESET

When RESET is selected, press CURSOR ▶ to return video adjustments to factory preset conditions.

Press the front panel MAGIC FOCUS button momentarily for auto setup.

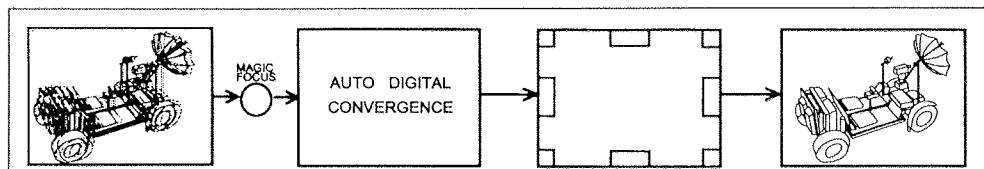


To adjust manually, press and hold the MAGIC FOCUS button until CENTER MODE or STATIC MODE is displayed. Press ENTER on the remote to select red or blue. Green is stationary. Use the cursor buttons to adjust. Center mode only adjusts the center section. Static mode adjusts the entire screen. **Note:** This new data is in RAM memory only and will be lost if the MAGIC FOCUS button is pressed again.

**AUDIO SETTINGS**



Select **AUDIO SETTINGS** to adjust the TV to your preference and to improve the sound quality.

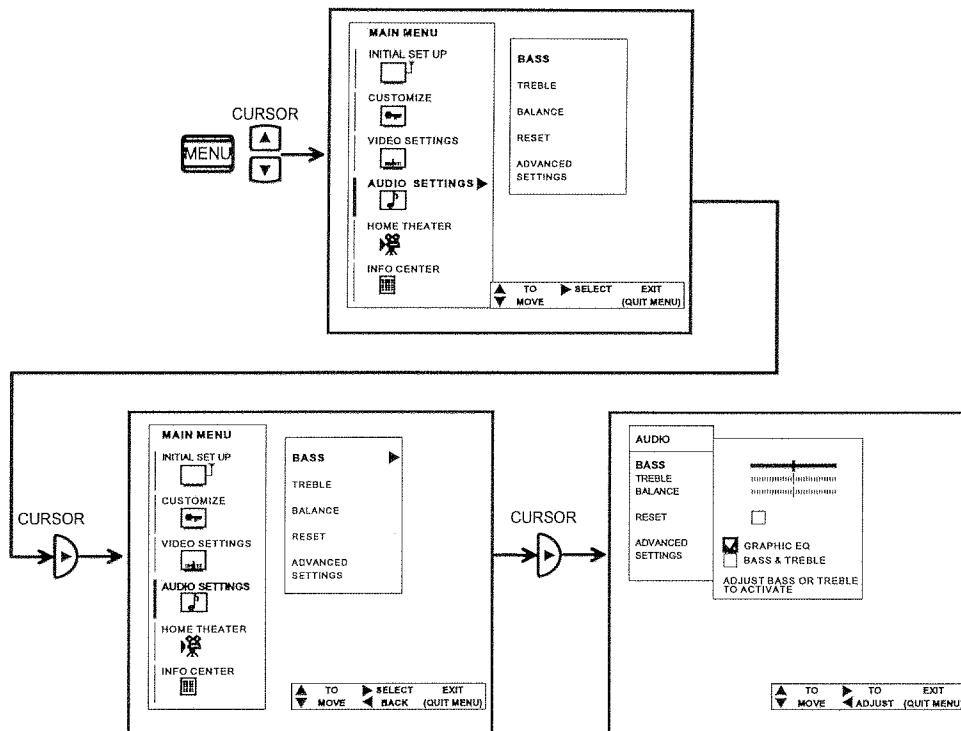

Use CURSOR **▲** or **▼** to highlight the function to be adjusted.

Press CURSOR **◀** or **▶** to adjust the function.

Use CURSOR **▲** or **▼** to highlight RESET or ADVANCED SETTINGS, then CURSOR **◀** to return to previous menu.

Press EXIT to quit menu.

**BASS**

This function controls the low frequency audio to all speakers.

**TREBLE**

This function controls the high frequency audio to all speakers.

**BALANCE**

This function will control the left to right balance of the TV internal speakers, the AUDIO TO HI FI output, and TRANSMITTER OUT output (Use the test tone volume levels to control balance when in "Surround-Dolby" Mode).

**RESET**

When RESET is selected, press CURSOR **▶** to return audio adjustments to factory preset conditions.

## CAUTIONS WHEN CONNECTING/DISCONNECTING THE HV CONNECTOR

Perform the following when the HV connector (anode connector) is removed or inserted for CPT replacement, etc.

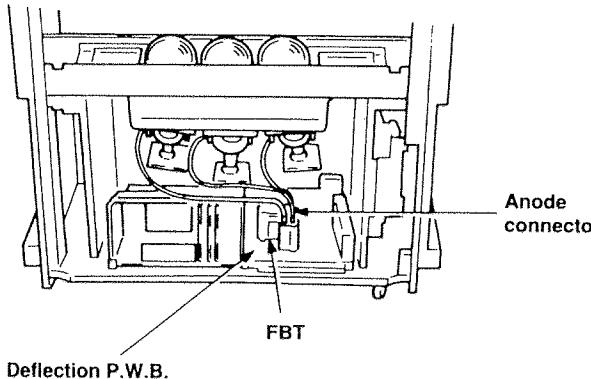


Fig. 5

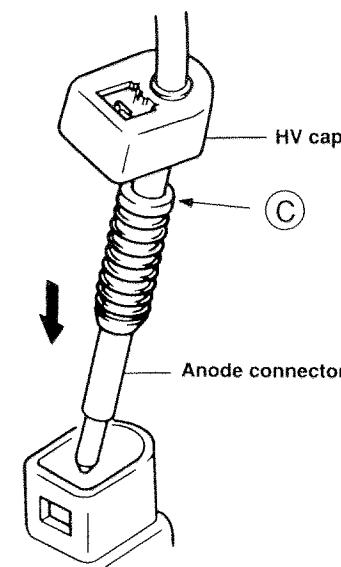


Fig. 7

### During Removal

1. Insert a small flat-bladed screwdriver (adjustment screwdriver: 5-7 mm wide and 0.2-0.3 mm thick) into section (A) in Fig. 6 and then push it in the direction of arrow (B). The lock will release with a click. (The state in Fig. 8 (1) will change to that in Fig. 8 (2).)


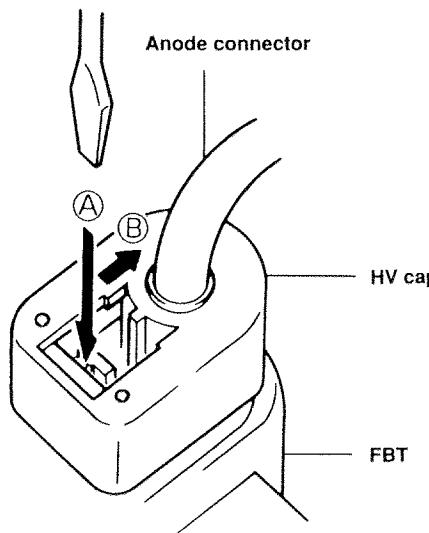


Fig. 6


2. Remove the HV cap and remove the anode connector (Fig. 7).

### During Insertion

1. Insert the anode connector deep into the FBT (to section (C) in Fig. 7) and then push the HV cap into the FBT until it clicks.
2. Make sure the connector is securely inserted. (Check that the claw is at the mark on the HV cap shown as in Fig. 8 (1).)

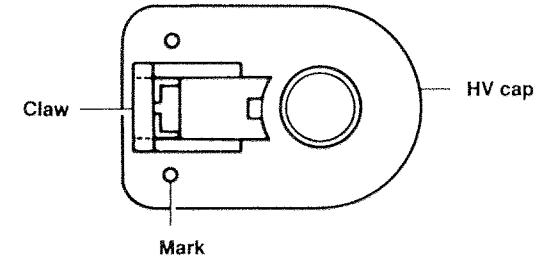

- (1) Lock on  
(When connector is inserted)

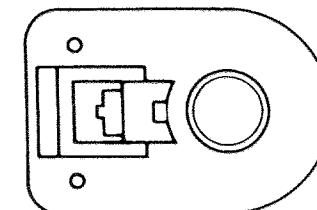

- (2) Release  
(When connector is removed)

Fig. 8

## ADJUSTMENT INSTRUCTION

<b>1. ASSEMBLED P.W.B. ADJUSTMENT .....</b>	<b>16</b>
1-1. Memory Initialization .....	16
1-2. Comb Filter Operation Check .....	16
1-3. Horizontal AFC Coarse Adjustment (R339) .....	16
1-4. Sub Picture Position Adjustment .....	16
 <b>2. FINAL ASSEMBLY ADJUSTMENT .....</b>	<b>17</b>
2-1. Focus Adjustment .....	18
2-2. White Balance Adjustment .....	18
2-3. Sub Brightness Adjustment .....	18
2-4. Sub Picture White Balance Adjustment .....	18
2-5. Surround Check .....	18
2-5-1. Surround Off Check .....	18
2-5-2. Surround Off/Monaural Check .....	19
2-5-3. Matrix Surround Check .....	19
2-5-4. Matrix Surround/Monaural Check .....	19
2-5-5. Hall Surround Check .....	19
2-5-6. Hall Surround/Monaural Check .....	19
2-5-7. Dolby Surround Check .....	19
2-5-8. Dolby Surround/Monaural Check .....	19
2-6. Shoot Balance Adjustment .....	19
2-7. Horizontal AFC Adjustment .....	20
2-8. Raster Inclination Adjustment (Deflection Yoke) .....	20
2-9. Raster Position Adjustment .....	20
2-10. Vertical Size Adjustment (R612) .....	21
2-11. Horizontal Size Adjustment (R649) .....	21
2-12. Beam Alignment .....	21
2-13. Beam Shape Adjustment .....	22
2-14. Static Focus Adjustment .....	22
2-15. Blue Defocus Adjustment .....	22
2-16. Static Convergence Adjustment .....	22
2-17. Digital Convergence Adjustment .....	23
2-17-1. Phase Adjustment (service mode) .....	23
2-17-2. Raster Position Adjustment .....	23
2-17-3. Convergence Point Adjustment .....	24
2-17-4. Digital Convergence Remote Control .....	24
 <b>3. ADJUSTMENT POINT .....</b>	<b>26</b>
3-1. CRT (R)(G)(B), Cabinet Locations .....	26
3-2. Main Chassis (Signal, Power/Deflection P.W.B.) .....	27
3-3. CPT (R)(G)(B), Control P.W.B., Focus Pack .....	28

## 1. ASSEMBLED PWB ADJUSTMENT

### 1.1 Memory initialization

Adjustment procedure

- (1) Press memory initialize key using the R/C.
- (2) Check the OSD according to the chassis type.

#### Initialize OSD (Memory Switches)

MEMORY SWITCH		
PIP 1	0	<input checked="" type="checkbox"/>
PIP 2	0	<input checked="" type="checkbox"/>
POWER ON1	<input checked="" type="checkbox"/>	1
POWER ON2	0	<input checked="" type="checkbox"/>
AUX 3	0	<input checked="" type="checkbox"/>
SUR 1	0	<input checked="" type="checkbox"/>
SUR 2	0	<input checked="" type="checkbox"/>
MAGIC F.	0	<input checked="" type="checkbox"/>
W. CONT	0	<input checked="" type="checkbox"/>
S. CONT	0	<input checked="" type="checkbox"/>
ANT	0	<input checked="" type="checkbox"/>
CTV/PTV	0	<input checked="" type="checkbox"/>
D. BASS	0	<input checked="" type="checkbox"/>
3D Y/C	<input checked="" type="checkbox"/>	1
NOTCH	<input checked="" type="checkbox"/>	1
PIP POSITION HP	0111 (0000-1111)	
	VP 0111 (0000-1111)	
SHOOT BAL. ADJ	37 (0-63)	
SUB BRIGHT ADJ	127 (63-191)	

#### CHASSIS TYPE TABLE

This table explains the chassis specification for the memory switch arrangement.

	AP63	AP63B
PIP 1	0	<input checked="" type="checkbox"/>
PIP 2	0	<input checked="" type="checkbox"/>
POWER ON1	0	<input checked="" type="checkbox"/>
POWER ON2	<input checked="" type="checkbox"/>	1
AUX 3	0	<input checked="" type="checkbox"/>
SUR 1	0	<input checked="" type="checkbox"/>
SUR 2	0	<input checked="" type="checkbox"/>
MAGIC F.	0	<input checked="" type="checkbox"/>
W. CONT	0	<input checked="" type="checkbox"/>
S. CONT	0	<input checked="" type="checkbox"/>
ANT	0	<input checked="" type="checkbox"/>
CTV/PTV	0	<input checked="" type="checkbox"/>
D. BASS	0	<input checked="" type="checkbox"/>
3D Y/C	<input checked="" type="checkbox"/>	1
NOTCH	<input checked="" type="checkbox"/>	1

- (3) Press Memory Initialize key of the R/C one more time and check that the set is returned to factory shipping conditions.

**Note:** The TV will be set to factory shipping conditions.  
Do not unplug set or press any buttons during this operation.


### 1.2 Comb filter operation check

Adjustment preparation

- (1) Receive the color bar signal at the regular tuning point.
- (2) Set the contrast control to MAX and the other controls to center.
- (3) Set the AI to OFF.

Adjustment procedure

- (1) Check that between the color bars there are line dots every second color bar as shown in the drawing.

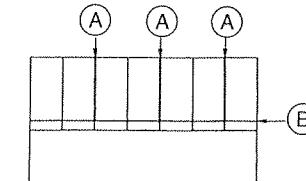

Check (A) and (B) line dots.

	AP63	AP63B
	Dots	Dots
(A)	X	None
(B)	None	None


### 1.3 Horizontal coarse AFC adjustment (R339)

Adjustment preparation

- (1) Receive the reverse cross-hatch pattern signal.  
(Cross-hatch lines are black.)
- (2) Connect the oscilloscope to SI2 connector pin ① (Y-out) and pin ⑫ (H-Drive).

Adjustment procedure

- (1) Adjust R339 (AFC) for 13μs delay between pin ① and ⑫.

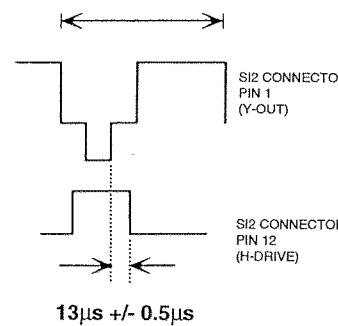

### 1.4 Sub-picture position adjustment

Adjustment preparation

- (1) Select signal on main picture.
- (2) Video settings have to be at normal condition.
- (3) Select the single PIP mode.

Adjustment procedure

- (1) Press the Memory Initialize key on the R/C.
- (2) Press the ▲▼ buttons to select the PIP position mode.
- (3) Adjust the VP (vertical) and HP (horizontal) position using the ←→ buttons.
- (4) Press the Memory Initialize key of the R/C to store the value in memory.
- (5) Select single PIP mode and shift the sub-picture using the 'shift' button. Distance between PIP and edge of screen should be equal when shifted. If it is not, repeat (1) ~ (5).


**Note:** Check the position of Multi PIP mode. Check the right edge of the sub-pictures for MV-4 and the left and bottom edge for MV-7 to make sure there is no separation between the Multi PIP and the edge of the screen.

## 2. FINAL ASSEMBLY ADJUSTMENT

### 2.1 Focus adjustment

Adjustment preparation

- (1) The set can face in any direction, west, east, north or south.
- (2) Receive the cross-hatch pattern signal.
- CONTRAST: CENTER
- BRIGHTNESS: -16 (-8 position shown on display)
- (3) The electrical focus adjustment should have been completed.
- (4) The centering DY inclination should have been adjusted.

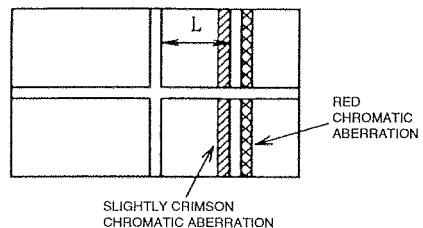


Adjustment procedure

- (1) Loosen the fixing screw on the lens cylinder so that the lens cylinder can be turned. (Be careful not to loosen too much. If it is loosened too much, rattling when tightening becomes greater and the focus may drift.) After completing steps (5), (6) and (7) below, tighten the fixing screws for each lens with a torque of 7-12kg/cm.
- (2) Apply covers to 2 of R, G and B lenses, and project a single color on the screen and adjust in sequence. (The adjustment order of R, G and B is only an example.)
- (3) For each of the R, G and B lenses, observe the color aberration generated on the outer circumference of the cross-hatch bright line at the center section  $\pm 3$  pitches vertically and horizontally from the center.
- (4) If the lens adjustment knob is turned clockwise, viewed from the front, the color aberration changes as follows.

Lens	Change of color aberration
R lens	Red $\rightarrow$ Crimson
G lens	Blue $\rightarrow$ Red
B lens	Purple $\rightarrow$ Green


- (5) In case of G lens, set to the point where the chromatic aberration switches from blue to red. If the chromatic aberration appearing all over the screen is not the same, observe the horizontal bright line at the center of the screen and set to the position where red chromatic aberration slightly appears inside and blue outside (reference value: 1-3mm) within the cross-hatch pitches specified in Table below. When the red chromatic aberration appearing at both sides of the bright line is not equal, observe the side with larger chromatic aberration when adjusting.

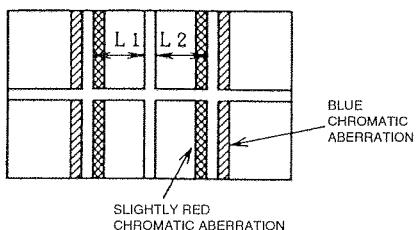

Set Size	Pitch between L1 & L2
46"	3.0 cross-hatch pitches
50"	3.0 cross-hatch pitches
60"	3.0 cross-hatch pitches


- (6) In case of R lens, set to the position where the chromatic aberration changes from red to crimson. As shown below, observe the horizontal bright line at the center and set to the position where the crimson chromatic aberration slightly appears inside and red outside (reference value: 1-3mm) within the cross-hatch pitches specified in Table next column.

- (7) In case of B lens, set to the position where the chromatic aberration changes from purple to green. As shown below, observe the horizontal bright line at the center and set to the position where green chromatic aberration slightly appears inside and purple outside (reference value: 1-3mm) within the cross-hatch pitches specified in table below.

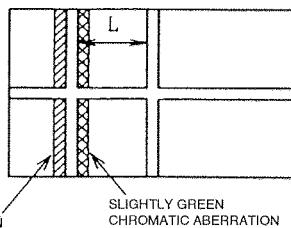


Set Size	Pitch between L
46"	3.0 cross-hatch pitches
50"	3.0 cross-hatch pitches
60"	3.0 cross-hatch pitches

Notes: (1) Fixing screw

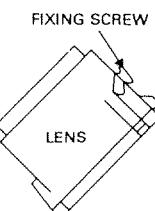

(2) Color aberration

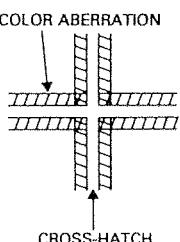

- (3) Since the G light is very important for picture quality and performance, pay special attention in its adjustment.

Note: Be careful not to touch the lens with your fingers when adjusting.

- (4) For red, setting to the center between red and crimson is optimum.
- (5) For blue, setting to the center between purple and green is optimum.

## 2.2 White balance adjustment

- (1) Screen adjustment
- (2) High brightness white balance
- (3) Low brightness white balance

Screen adjustment VRs	Drive adjustment VRs
Red: Focus Pack	Red: R873
Green: Focus Pack	Green: R843
Blue: Focus Pack	

### Adjustment preparation

- (1) Start adjustment 20 minutes or more after the power is turned on.
- (2) The vertical incident illumination on the screen should be 20 lux or less.
- (3) Set the video settings (contrast: max, others: center) to standard condition.
- (4) For low brightness white balance adjustment, input a white raster signal level of 0.300Vp-p (Video input level).
- (5) For high brightness white balance adjustment, input a white raster signal level of 0.715Vp-p (Video input level).
- (6) Set the drive adjustment VRs (red and green) to 12 ~ 2 o'clock position.
- (7) Turn the screen adjustment VRs (red, green, blue) fully counter-clockwise.
- (8) Set video advanced setting white control to warm position.
- (9) Set the S301 switch to the front as viewed from the front of the signal sub P.W.B. (Set to SERVICE side.)

### Adjustment procedure

- (1) Gradually turn the screen adjustment VRs (red, green, blue) clockwise and set them where the red, green and blue slightly bright lines just appear evenly on the screen.
- (2) Return S301 to the NORMAL side.
- (3) Select the input signal for high brightness.  
(video level = 0.715Vp-p ± 0.015).
- (4) Adjust the high brightness white balance using the drive adjustment VRs (red, green).
- (5) Select the input signal for low brightness  
(video level = 0.300Vp-p ± 0.015).
- (6) Adjust the low brightness white balance using the screen adjustment VRs (red, green, blue). (Visually adjust.)
- (7) Check that high brightness white balance is obtained.  
If it does not, return to step (5).


**Note:** When adjusting the white balance, if the horizontal single raster is to be obtained using S301, check that the screen adjustment VRs are turned fully counterclockwise. Since the phosphorescent surface of the CRT is likely to be burnt, be careful.

White balance: 7500°K+0MPGD  
Color coordinate: X.....0.301  
Y.....0.310

## 2.3 Sub brightness adjustment

### Adjustment preparation

- (1) Start adjustment 20 minutes or more after the power is turned on. Receive the color bar signal.
- (2) Set the contrast and color controls to minimum.
- (3) The vertical incident illumination on the screen should be 20 lux or less.

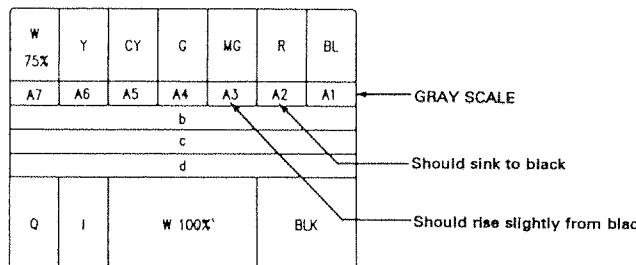

### Adjustment procedure

- (1) Press the memory initialize key on the R/C.
- (2) Press the ▲ button to select SUB-BRIGHTNESS mode.
- (3) Use the ▲▼ buttons to increase or decrease so that points A1 and A2 sink to black and A3 rises slightly above it.  
(Visually adjust)

- (4) After above adjustment, SUB-BRIGHTNESS will have value between 63 and 191. Adjustment is now complete.

- (5) After adjustment is done, press the memory initialize key on the R/C one more time and the data is stored in memory.

**Note:** When selecting SUB-BRIGHTNESS mode the µcon sets the CONTRAST and COLOR to min. automatically but make sure that the other conditions are center. Directly observe the screen by eye without using a mirror.


## 2.4 Sub picture white balance adjustment (R029, R026, R024)

### Adjustment preparation


- (1) Start adjustment after power is on for 20 minutes.
- (2) Use a white raster signal for adjustment.
- (3) Press "FREEZE" on the remote control and select 'single' freeze mode to display the sub picture.
- (4) Set contrast to center, brightness minimum, AI off.

### Adjustment procedure

- (1) Connect oscilloscope to P802 and adjust R029 to match blue level of main and sub pictures.
- (2) Repeat for P832 and R026 green, P862 and R024 for red.

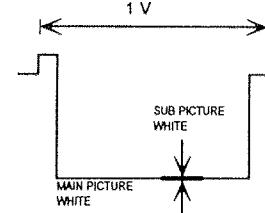

**Note:** If the sub picture has a signal sag, adjust level at center point.

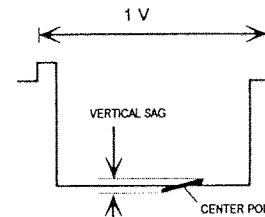

## 2.5 Surround operation check

### Adjustment preparation

Input the following audio signals to the audio input of the VIDEO INPUT terminals.

#### •When checking surround:

L CH: 400Hz sine wave 475mVrms

R CH: 5kHz sine wave 475mVrms

•Set the AUDIO ADVANCED SETTING for INT. SPEAKERS ON.

•Set the volume controls of FRONT, CENTER and REAR to around their centers.


•Set the BASS, TREBLE and BALANCE to TYP.

**Note:** Front waveform: Front speaker output of the set  
Rear waveform: Rear speaker output of the set

### 2.5.1. Surround off check

#### Adjustment procedure

- (1) Set to SURROUND: OFF and check that the waveform shown below is obtained.

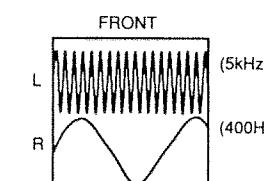


**Note:** The rear and center will have no output.

### 2.5.2. Surround off/monaural check

Adjustment procedure

Check that the following waveform is obtained. The amplitudes of 2 channels are equal.

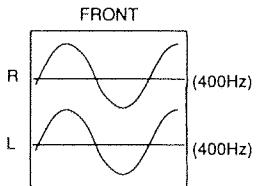

**Note:** Monaural check can be omitted. The rear and center have no output.


### 2.5.3. Matrix surround check

Adjustment procedure

(1) Set to SURROUND; MATRIX.

•Check that the following waveforms are obtained.

- Front: Check that the phases of R and L are different and 400Hz is superimposed on 5kHz. The amplitudes of R and L are different.
- Rear: Check that the phases of R and L are opposite and 400Hz is superimposed on 5kHz. The amplitudes of R and L are different.

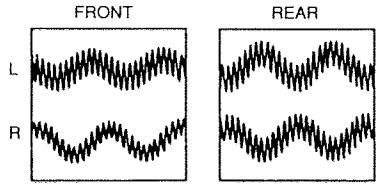

**Note:** Center has no output.


### 2.5.4. Matrix surround/monaural check

Adjustment procedure

Check that the following waveforms are obtained.

•Front: R and L waveforms are almost equal.

•Rear: R and L waveforms are almost zero.

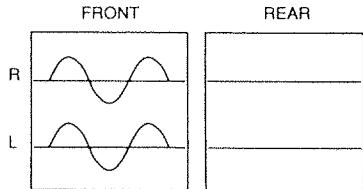

**Note:** Center has no output.


### 2.5.5. Hall surround check

Adjustment procedure

(1) Set to SURROUND; HALL.

•Front: Check that the phases of R and L signals are different and 400Hz is superimposed on 5kHz.

- Rear: Check that the R and L are opposite and 400Hz is superimposed on 5kHz. The R and L amplitudes are equal.

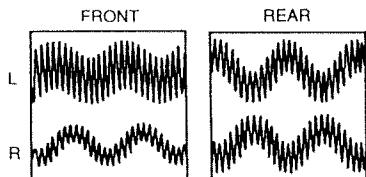

**Note:** Amplitude levels of front R and L are not even depending on the P.W.B. Center has no output.

### 2.5.6. Hall surround/monaural check

Adjustment procedure


Check that the following waveforms are obtained.

•Front: The phases of R and L are different.

The amplitudes are different.

•Rear: The phases of R and L are opposite.

The amplitudes of R and L are equal.

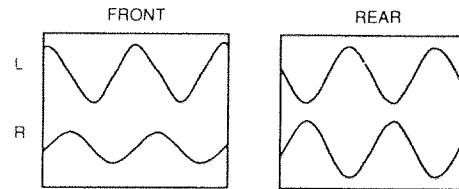

**Note:** The monaural check can be omitted. Amplitude levels of front R and L are not even depending on the P.W.B. Center has no output.

### 2.5.7. Dolby surround check


Adjustment procedure

(1) Set to SURROUND: DOLBY

•Check that the following waveforms are obtained.

•Front: 400Hz is superimposed on 5kHz.

- Rear: R and L are the same signal and 400Hz is superimposed on 5kHz.

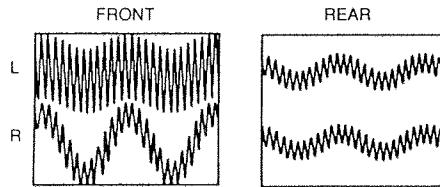

**Note:** MODE: PRO-LOGIC (NORMAL)

### 2.5.8. Dolby surround/monaural check


Adjustment procedure

Check that the following waveforms are obtained.

•Front: (Almost no output from both R and L.)

•Center: Same as the audio input signal.

•Rear: (Almost no output from both R and L.)

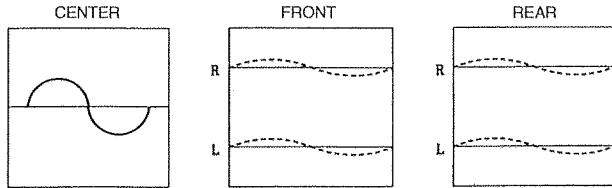

### 2.6. Shoot balance adjustment (R333)

Adjustment preparation

(1) Receive the reverse cross-hatch pattern signal. (Cross-hatch lines are black.)


(2) Set the video condition to factory reset.

Adjustment procedure

(1) Press the memory initialize key of the R/C.

(2) Press the ▲ button and select SHOOT BALANCE mode.

(3) Using the ▲▼ buttons, gradually adjust so the widths of pre-shoot and over-shoot of the vertical line (black) shown in the circle pattern are balanced. (Visually adjust)

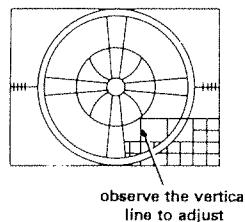

**Note:** Directly observe the screen by eye without using a mirror.


## 2.7 Horizontal AFC adjustment (R339)

Adjustment preparation

- (1) Receive the reverse cross-hatch pattern signal. (Cross-hatch lines are black.)
- (2) Set video conditions to factory reset.
- (3) Lens focus should be completed.
- (4) Electrical focus should be coarse adjusted.
- (5) The digital convergence RAM should be cleared (uncorrected state). With the TV set off, press and hold the service switch located on the front panel (see page 11), and then press the power button. Use a small insulated tool to reach inside the control panel to press the switch.
- (6) Raster inclination should be completed.

Adjustment procedure

- (1) Project only green color. Cover R & B lenses or short 2P mini connectors on CPT P.W.B.'s.
- (2) Adjust H-size to minimum. R649 fully counterclockwise.
- (3) Adjust green centering magnet (located on DY) to shift picture left to display edge of raster.
- (4) Adjust AFC (R339) so foldover of front porch occurs. Amount of foldover is 1/2 to 2/3 of front porch ( $\ell_1$ ).

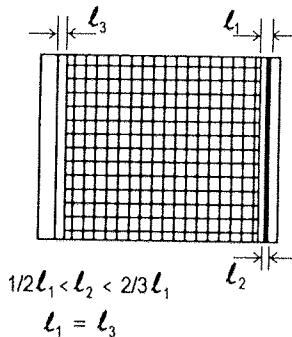

**Note:** (1) Front and back porch of video should be equal.  
(2) If adjustment is difficult with test pattern, follow adjustment 1.3.

## 2.8 Raster inclination adjustment (Deflection yoke)


Adjustment preparation

- (1) The set can face east or west.
- (2) Input the single cross test signal.
- (3) Set video conditions to factory reset.
- (4) The lens focus adjustment should have been completed.
- (5) The electric focus should have been coarse adjusted.
- (6) The digital convergence RAM should be cleared (uncorrected state). With the TV set off, press and hold the service switch located on the front panel (see page 11), and then press the power button. Use a small insulated tool to reach inside the control panel to press the switch.
- (7) Start adjustment 20 minutes or more after TV is turned on.

Adjustment procedure

- (1) Apply covers to the R and B lenses and project only green light.
- (2) Turn the G deflection yoke and adjust the vertical raster inclination.

- (3) Then, remove the cover of R or B lens and project red or blue light and green light together on the screen.
- (4) Turn the deflection yoke of R or B and set so that the inclination of R or B with respect to the green light is as shown below on the top and bottom sides.
- (5) After raster inclination adjustment, fixing screw of DY should be screwed with  $12 \pm 2 \text{ kg}\cdot\text{cm}$  torque.

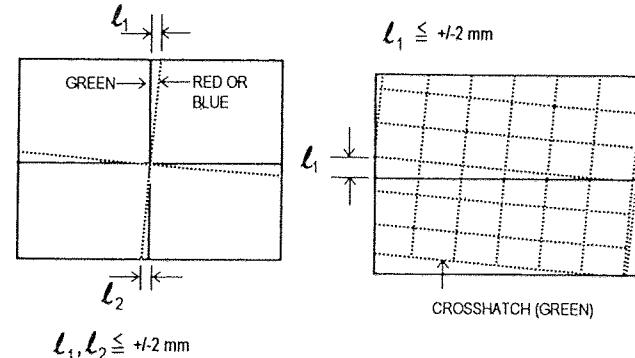

**Notes:** (1) If internal cross-hatch does not appear after clearing RAM data, press front panel service switch (see page 11) again.  
(2) To restore old RAM data, turn TV off and on.

## 2.9 Raster position adjustment


Adjustment preparation

- (1) The set can face east or west.
- (2) Input the single cross test signal.
- (3) Set video conditions to factory reset.
- (4) The lens focus adjustment should have been completed.
- (5) The electric focus should have been coarse adjusted.
- (6) The digital convergence RAM should be cleared (uncorrected state). With the TV set off, press and hold the service switch located on the front panel (see page 11), and then press the power button. Use a small insulated tool to reach inside the control panel to press the switch.
- (7) Start adjustment 20 minutes or more after TV is turned on.

Adjustment procedure

- (1) Turn the centering magnets for red, green, and blue to satisfy the condition below. The red and blue horizontal lines should match with green.

Size	Vert. Line	Side of Green
60"	Red $\ell_1$	0mm left
60"	Blue $\ell_2$	40mm right
50"	Red $\ell_1$	7mm left
50"	Blue $\ell_2$	42mm right
46"	Red $\ell_1$	7mm left
46"	Blue $\ell_2$	42mm right

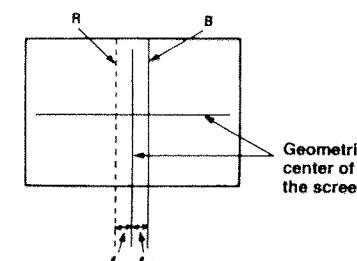

**Notes:** (1) If internal cross-hatch does not appear after clearing RAM data, press front panel service switch (see page 11) again.  
(2) To restore old RAM data, turn TV off and on.

## 2.10 Vertical size adjustment (R612)

### Adjustment preparation


- (1) The set can face east or west.
- (2) Input the single cross test signal.
- (3) Set video conditions to factory reset.
- (4) The lens focus adjustment should have been completed.
- (5) The electric focus should have been coarse adjusted.
- (6) The digital convergence RAM should be cleared (uncorrected state). With the TV set off, press and hold the service switch located on the front panel (see page 11), and then press the power button. Use a small insulated tool to reach inside the control panel to press the switch.
- (7) Start adjustment 20 minutes or more after TV is turned on.

### Adjustment procedure

- (1) Turn only the green by applying covers to the red and blue lens or shorting the 2 pin TS connectors on the red and blue CPT P.W.B.
- (2) Count the vertical lines of the DCU cross hatch. If the number of vertical lines is 9, go to step (3). If the number of vertical lines is 8, push "SRD" key and then push "5" key on the R/C so the number of vertical lines becomes "9".
- (3) Turn vertical amplitude adjustment VR (R612) so that the distance between the top and bottom horizontal lines is equal to the size shown in the table.

Size	<i>l</i>
60"	770 ± 5mm
50"	650 ± 5mm
46"	580 ± 5mm

**Note:** (1) If internal cross-hatch does not appear after clearing RAM data, press front panel service switch (see page 11) again.  
(2) To restore old RAM data, turn TV off and on.  
(3) 'SRD' key is not on R/C CLU-952MP. If 'SRD' is needed, please use R/C CLU-951MP.

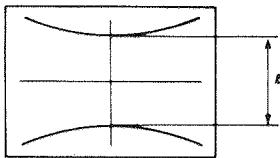

## 2.11 Horizontal size adjustment (R649)


### Adjustment preparation

- (1) The set can face east or west.
- (2) Input the single cross test signal.
- (3) Set video conditions to factory reset.
- (4) The lens focus adjustment should have been completed.
- (5) The electric focus should have been coarse adjusted.
- (6) The digital convergence RAM should be cleared (uncorrected state). With the TV set off, press and hold the service switch located on the front panel (see page 11), and then press the power button. Use a small insulated tool to reach inside the control panel to press the switch.
- (7) Start adjustment 20 minutes or more after TV is turned on.

### Adjustment procedure

- (1) Project only green, the same as 2.10.
- (2) Turn horizontal amplitude adjustment VR (R649) so distance between the left and right vertical lines is equal to the size shown in the table.

Size	<i>l</i>
60"	1140 ± 5mm
50"	950 ± 5mm
46"	875 ± 5mm

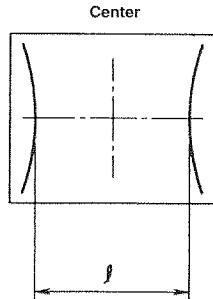

**Note:** (1) If internal cross-hatch does not appear after clearing RAM data, press front panel service switch (see page 11) again.  
(2) To restore old RAM data, turn TV off and on.


## 2.12 Beam alignment

### Adjustment preparation

- (1) Adjust at least 30 minutes after turning on power switch.
- (2) The static convergence data should be cleared (see section 1.1 Memory initialization).
- (3) Raster inclination, centering, horizontal and vertical amplitudes and optical focus adjustment should be completed.
- (4) Set video conditions to factory reset.
- (5) Receive cross-hatch signals. (Use of internal cross-hatch signals allowed.)
- (6) Short-circuit all metal parts (metal fittings, centering magnet) installed on the projection tubes to GNDs of the projection tubes.  
Since metal parts are charged with electricity, shocks may be caused if they are not short-circuited.

### Adjustment procedure

- (1) Green (G) tube beam alignment adjustment. Short-circuit 2P subminiature connector plug pins of Red (R) and Blue (B) on the CPT boards and project only Green (G) tube.
- (2) Put Green (G) tube beam alignment magnet to the cancel state as shown below.

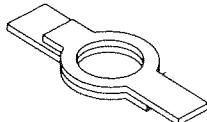

- (3) Turn the Green (G) static focus (Focus Pack) counterclockwise all the way and make sure of position of cross-hatch center on screen. (Halo state.)
- (4) Turn Green (G) static focus (Focus Pack) clockwise all the way. (Blooming state.)
- (5) Turn two magnets forming alignment magnet in any desired direction and move cross-hatch center to position found in (3).
- (6) If image position does not shift when Green (G) static focus (Focus Pack) is turned, Green (G) beam alignment has been completed.
- (7) If image position shifts when Green (G) static focus (Focus Pack) is turned, repeat (2)-(6).
- (8) Conduct beam alignment for Red (R) focus: Focus Pack EFPK Blue (B) focus: Focus Pack EFPK
- (9) Upon completion of adjustment, fix beam alignment magnets with white paint.


## 2.13 Beam shape adjustment

### Adjustment preparation

- (1) The beam alignment should have been completed.
- (2) The raster inclination, centering, horizontal/vertical amplitude and optical focus adjustments should have been completed.
- (3) Set video conditions to factory reset.
- (4) Input the dot signal.

### Adjustment procedure

- (1) Green PRT beam shape adjustment. Short-circuit 2P submini connectors on Red and Blue CPT P.W.B.s to project only the Green beam.
- (2) Turn the green static focus fully clockwise. (Blooming.)
- (3) Make the dot at the screen center a true circle using the 4-pole magnet as shown below.
- (4) Also adjust the Red and Blue PRT beam shapes according to the steps (1) to (3).
- (5) After the adjustment is completed, return R, G and B static VRs to the Just focus point.

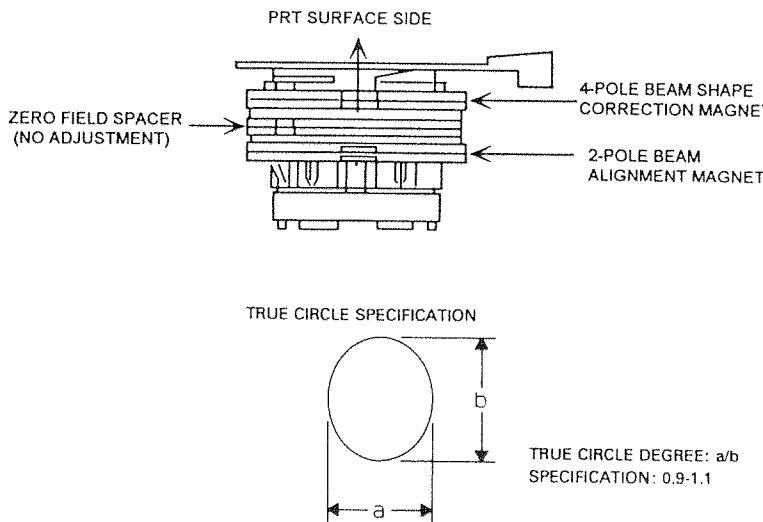


## 2.14 Static focus adjustment

### Adjustment preparation

- (1) The raster inclination, centering, horizontal/vertical amplitude and optical/electrical focus beam alignment should have been adjusted.
- (2) The static convergence data should be cleared.
- (3) Set video conditions to factory reset.
- (4) Receive the cross-hatch pattern signal.
- (5) Apply covers to the lenses of colors other than the color to be adjusted and project a single color.

### Adjustment procedure

- (1) Red (R), Green (G) and Blue (B) static focus adjustment. Vary the static focus VR (focus pack EFPK) and make the center of the cross-hatch pattern clearest.
- (2) Observe the corners of the picture and check that the focus does not get conspicuously worse.

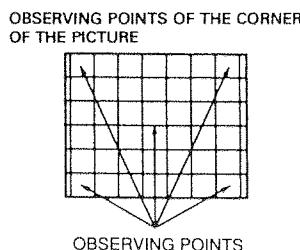


## 2.15 Blue defocus adjustment

### Adjustment preparation

- (1) Optical and electrical focus adjustment should have been completed.
- (2) The convergence adjustment should have been completed.
- (3) Set video conditions to factory reset.

### Adjustment procedure

- (1) Input an all-white signal shown below to VIDEO input.
- (2) Short-circuit 2P sub-mini connectors on the red and green CPT P.W.B.s to display only the blue beam.
- (3) Turn the B Focus VR (Focus Pack) fully clockwise.
- (4) Measure the brightness at the center of the screen and turn the B Focus VR (Focus Pack) counterclockwise to adjust the brightness of blue as shown in Table below.
- (5) After the adjustment is completed, if blue exceeds the specification, turn and adjust focus so that the sticking out part of blue satisfies the specification.

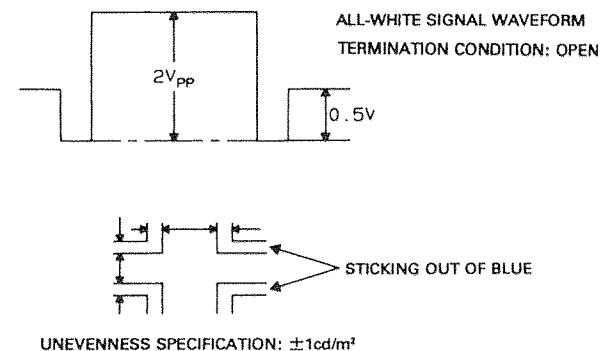

### Defocus brightness specification

Screen Size	Brightness of Blue
46"	45 cd/m <sup>2</sup>
50"	38 cd/m <sup>2</sup>
60"	---

### Defocus sticking out specification

Screen Size	Blue sticking out
46"	2.0 mm
50"	2.0 mm
60"	2.5mm

**Condition:** User controls are set to the initial set positions (for shipment) Measuring point Screen center.

**Cautions:** Correct the brightness gauge and amplitude of the all-white signal periodically. The aperture angle of the brightness gauge is 1°. Use a cross-hatch pattern to check.


## 2.16 Static convergence adjustment

### Adjustment preparation

- (1) The screen can face east or west.
- (2) Display the cross pattern signal or the cross-hatch pattern signal.
- (3) R, G and B lens focus adjustment and R, G and B raster inclination adjustment should have been completed.
- (4) R, G, and B raster position (centering magnet) adjustment should have been completed.
- (5) Vertical and horizontal size adjustments should have been completed.

#### Adjustment procedure

- (1) Press front panel MAGIC FOCUS button until "STATIC MODE" appears.
- (2) Check that the variable range of the static convergence adjustment is obtained as shown below using the cursor buttons of the remote control transmitter.
- (3) RV, BV      RH, BH

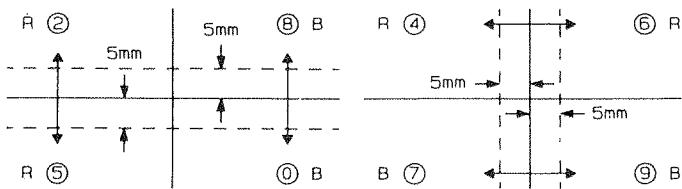

If the adjustment cannot be done, turn the centering magnets for R and B and re-adjust the R and B raster position.


**Note:** (1) Static convergence is set to standard mode during memory initialization.

#### 2.17 Digital convergence adjustment


**Note:** If replacing a PRT, DY, etc. perform auto-digital convergence first. (Press front panel MAGIC FOCUS switch when in normal customer mode). This can eliminate the need for a complete digital convergence alignment.

##### Adjustment preparation

- (1) Receive an RF or video signal.
- (2) Set controls to factory preset.
- (3) Install jig screen on the set.
- (4) Note the center of the video pattern displayed. This is necessary to match dotted lines (adjustment point viewed) and actual point that is adjusted and displayed by the video signal.
- (5) Press the front panel service only switch. (See page 11). The pattern displayed is now the digital convergence mode.
- (6) When performing a complete digital convergence adjustment CLEAR DATA in RAM. See 2.8. (1)-(7).

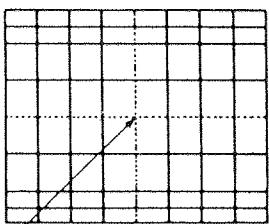

#### JIG SCREEN SPECIFICATION

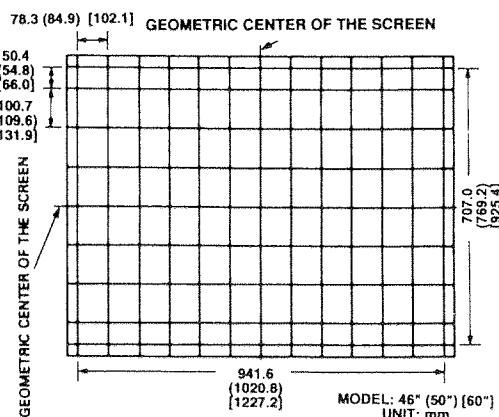

#### Notes: (1)

- Jig screen part number:  
46" - H310353  
50" - H310354  
60" - H310355
- (2) If only minor adjustments to convergence are needed, the jig screen is not necessary. Use digital data stored in memory and one color as a reference (red, green, or blue). DO NOT CLEAR DATA and WRITE to ROM memory.



#### 2.17.1. Phase adjustment (service mode)

##### Adjustment preparation

- (1) PHASE adjustment — This is to match the digital convergence cursor position to the video image displayed, and to match the digital convergence cursor position (dotted lines) to digital convergence data position (bent lines).

##### Adjustment procedure

- (1) Press the SRD button on the remote to select phase adjustment. (Only Green displayed)
- (2) Identify the bent lines and use the cursor buttons to move the dotted lines in between as shown.
- (3) Press SRD to exit PHASE mode.
- (4) Press ENTER 5 times to display external signal.
- (5) Identify center of active video, then press ENTER 5 times to return to internal cross-hatch.
- (6) Press SRD (phase adj.), and use 2, 4, 5 and 6 to position internal cross-hatch center on active video center identified in step (5).
- (7) Press SRD to exit PHASE mode.

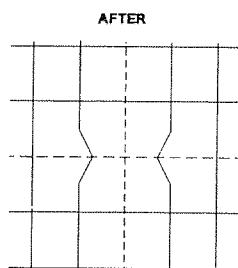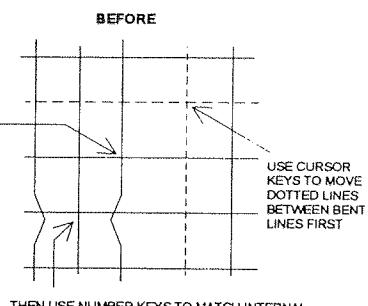

#### 2.17.2. Raster position adjustment

##### Adjustment preparation

- (1) Position adjustment — This will move an entire color. Use this adjustment to match colors at the center of the screen. (Active video center from external signal and physical screen center should now match from phase adj. 2.17.1.).
- (2) Use the buttons below to switch color to adjust.  
"RECALL" - Green  
"O" - Red  
"AVX" - Blue

#### Adjustment procedure

- (1) Press the FREEZE button. Extra horizontal lines appear to confirm raster position mode.
- (2) Use the cursor buttons to adjust position.
- (3) Press FREEZE again to exit raster position mode.

**Notes:** (1) Other functions cannot be accessed when in raster position adjustment mode. Press FREEZE and confirm extra horizontal lines disappear to exit raster position mode.  
 (2) Press MENU to switch between all colors displayed or adjustment color and Green only.

#### 2.17.3. Convergence point adjustment

##### Adjustment preparation

- (1) Select color to adjust.  
 "RECALL" - Green  
 "O" - Red  
 "AVX" - Blue
- (2) Use 4, 6, 2, and 5 to move the cursor position (dotted lines).
- (3) Use cursor buttons to move the convergence point.
- (4) Three adjustment modes are available:  
 1. (3x3) Press "RECALL" 5 times  
 2. (7x5) Press "O" 5 times  
 3. (13x9) Press "AVX" 5 times

For touch-up, only the (13x9) mode is necessary. This will adjust every cross-hatch intersection point on the screen.

For complete adjustment, start with (3x3) mode. This will adjust center point and eight edge points only, but will greatly reduce adjustment time. Then use (7x5) mode, and finally (13x9) mode to finish convergence.

If "S" distortion appears between cross-hatch lines repeat (7x5) mode to change calculation process while adjusting to remove distortion, then return to (13x9) mode to finish touch-up convergence.

##### Adjustment procedure


- (1) Start adjustment at the center of the screen.
- (2) Continue adjustment at next closest position.
- (3) Adjust center area first, and ending with edge sections.
- (4) Press the AI button to perform interpolation operation.  
 This process will take about 15 seconds and no picture will be seen at this time.
- (5) After interpolation, check convergence again and repeat (1)-(5) if necessary.
- (6) When convergence is acceptable, press SHIFT to write data to ROM memory. ROM WRITE? is displayed to alarm system that ROM will be overwritten with new data. Press the SHIFT button again to write displayed data to ROM.
- (7) DATA WRITE TO ROM will take approximately 20 seconds and no picture will be displayed.
- (8) Green dots will be displayed when operation is complete.
- (9) Press MUTE to return to convergence pattern, then confirm again convergence is acceptable.
- (10) Press SHIFT (ROM WRITE) mode, then press ANT to initialize sensor data positions.

**Notes:** (1) Display only green for easier adjustment and match to jig screen. Press "MENU", THEN PRESS "RECALL".  
 (2) Perform interpolation and data write to ROM after green adjustment. Once green has been confirmed to match jig screen, the jig screen can be removed. Do not readjust the green color after jig screen has been removed. This is now your reference color.  
 (3) Display green and red only and match red to green.  
 (4) Display all colors and match blue to green and red.  
 Touch-up red color if necessary.


- (5) Existing DATA in ROM can be read by pressing the SWAP button 2 times. This data can be used after replacing a component (CRT, DY, etc.) Where complete convergence adjustment is not necessary be careful not to overwrite this data.

DO NOT write cleared RAM data into ROM or a complete convergence adjustment will be necessary. Remember to try MAGIC FOCUS before starting convergence adjustment to minimize adjustment time.

#### 2.17.4. Digital Convergence Remote Control

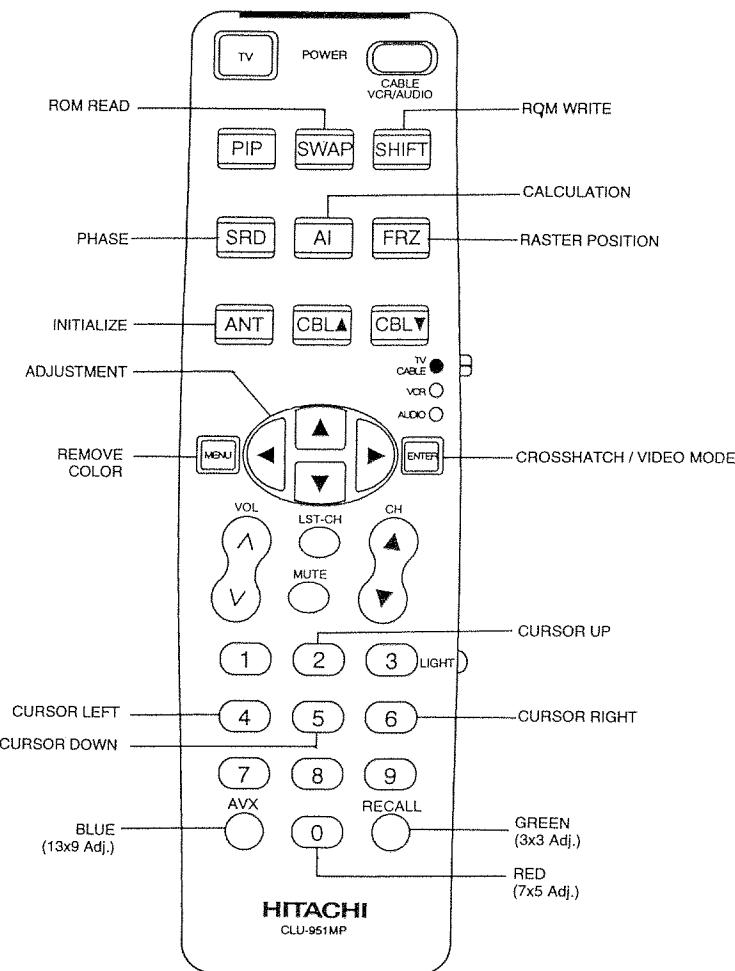


#### 2.17.4. Digital convergence remote control

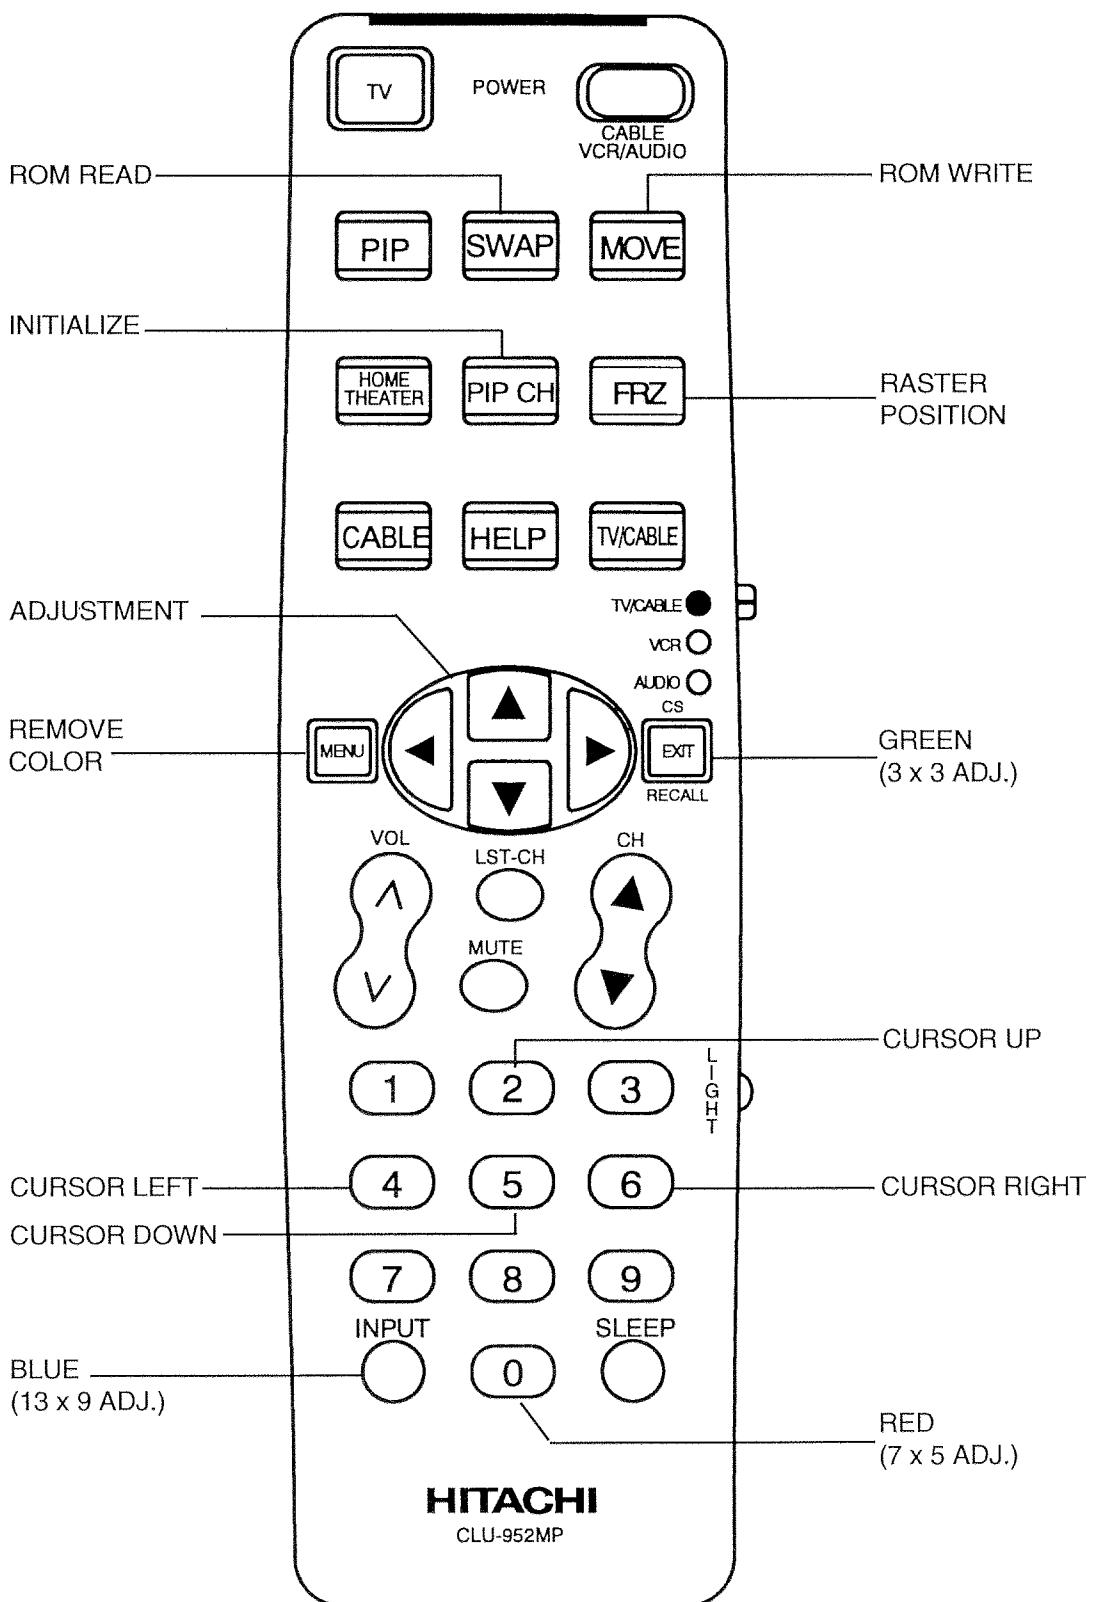


**Note:** Digital Convergence Adjustment procedures (2.17) were described for use with a CLU-951MP remote control. It is not possible to make Phase Adjustment (2.17.1) using the CLU-952MP remote control. If phase adjustment is necessary, please use the CLU-951MP remote control.

**3. ADJUSTMENT POINT**  
**3.1 CRT, cabinet locations**

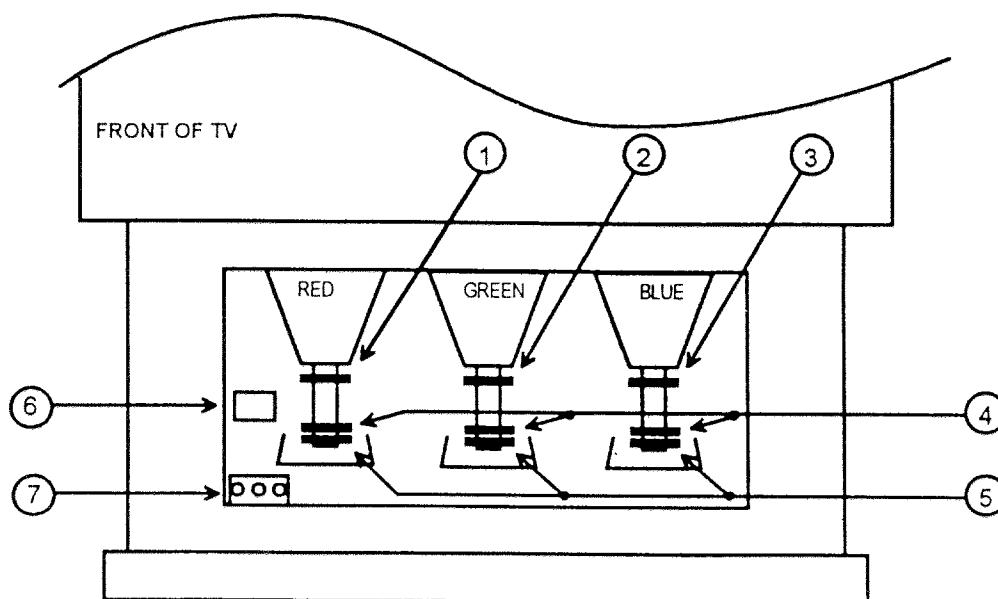



1. CENTERING MAGNET FOR RED PRT
2. CENTERING MAGNET FOR GREEN PRT
3. CENTERING MAGNET FOR BLUE PRT
4. 4-POLE MAGNET FOR BEAM FORM ADJUSTMENT
5. BEAM ALIGNMENT MAGNET
6. DIGITAL CONVERGENCE MODULE
7. FOCUS PACK (TOP ADJUSTMENTS FOR FOCUS, BOTTOM FOR SCREEN)

### 3.2 Signal PWB, Power/Deflection P.W.B. adjustment points

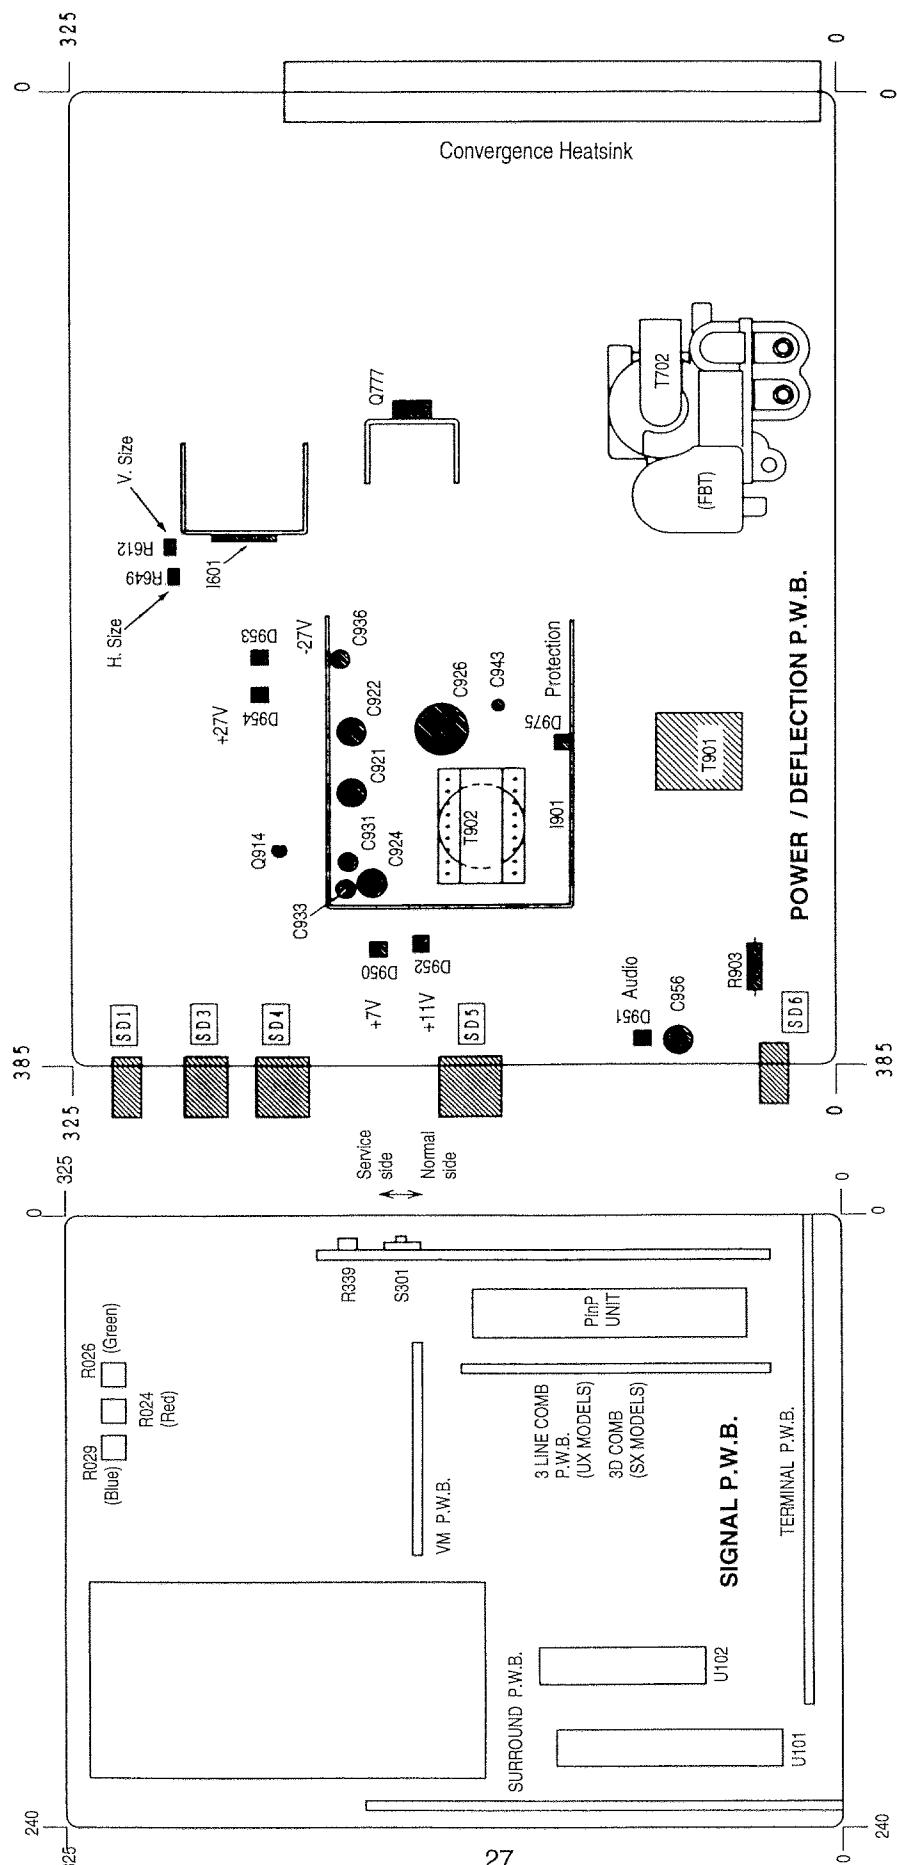


60SX12B/13K  
50UX26B/27K  
46UX24B/25K  
50SX8B



### 3.3 CPT, Control P.W.B., Focus Pack adjustment points

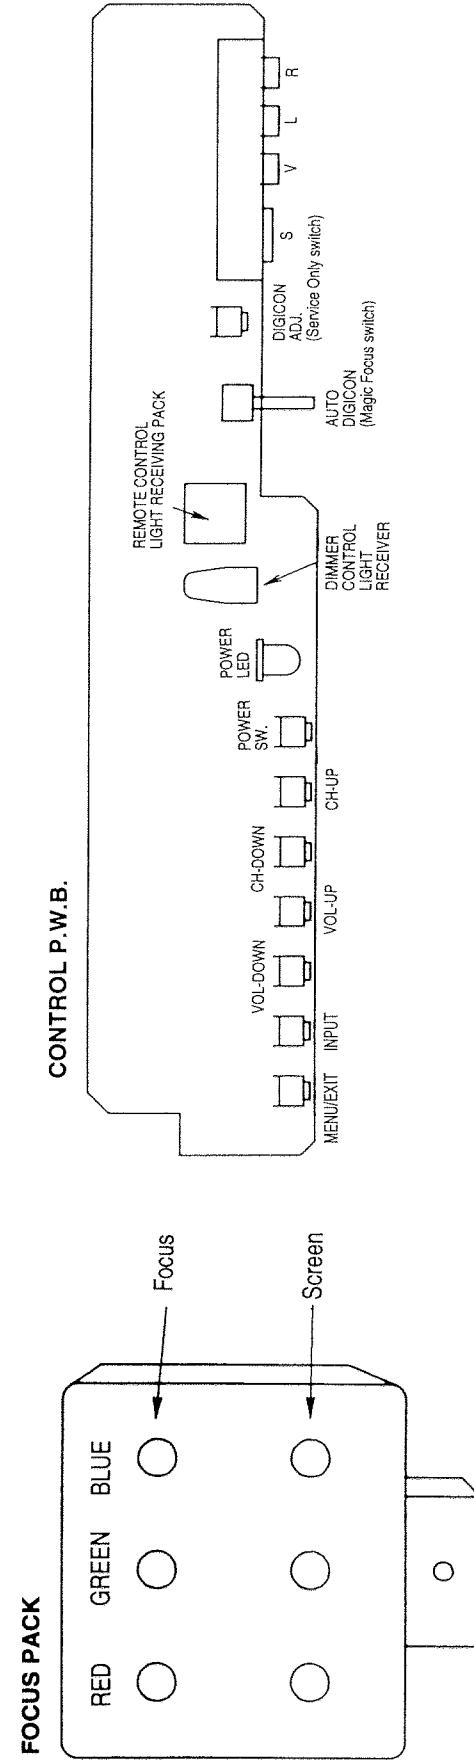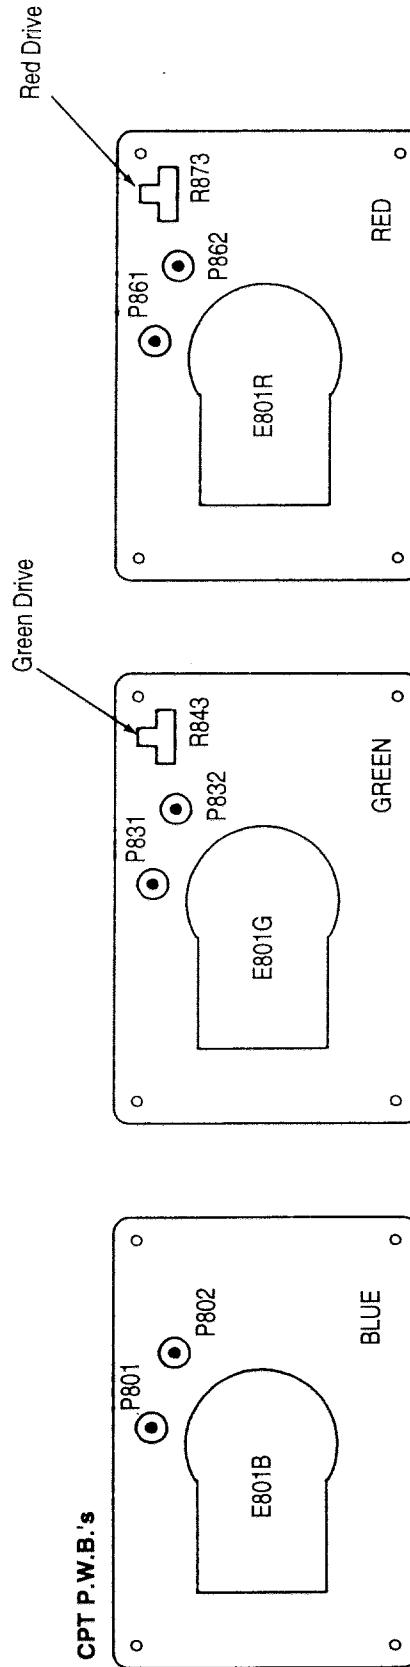


## TROUBLESHOOTING

### 1. No raster

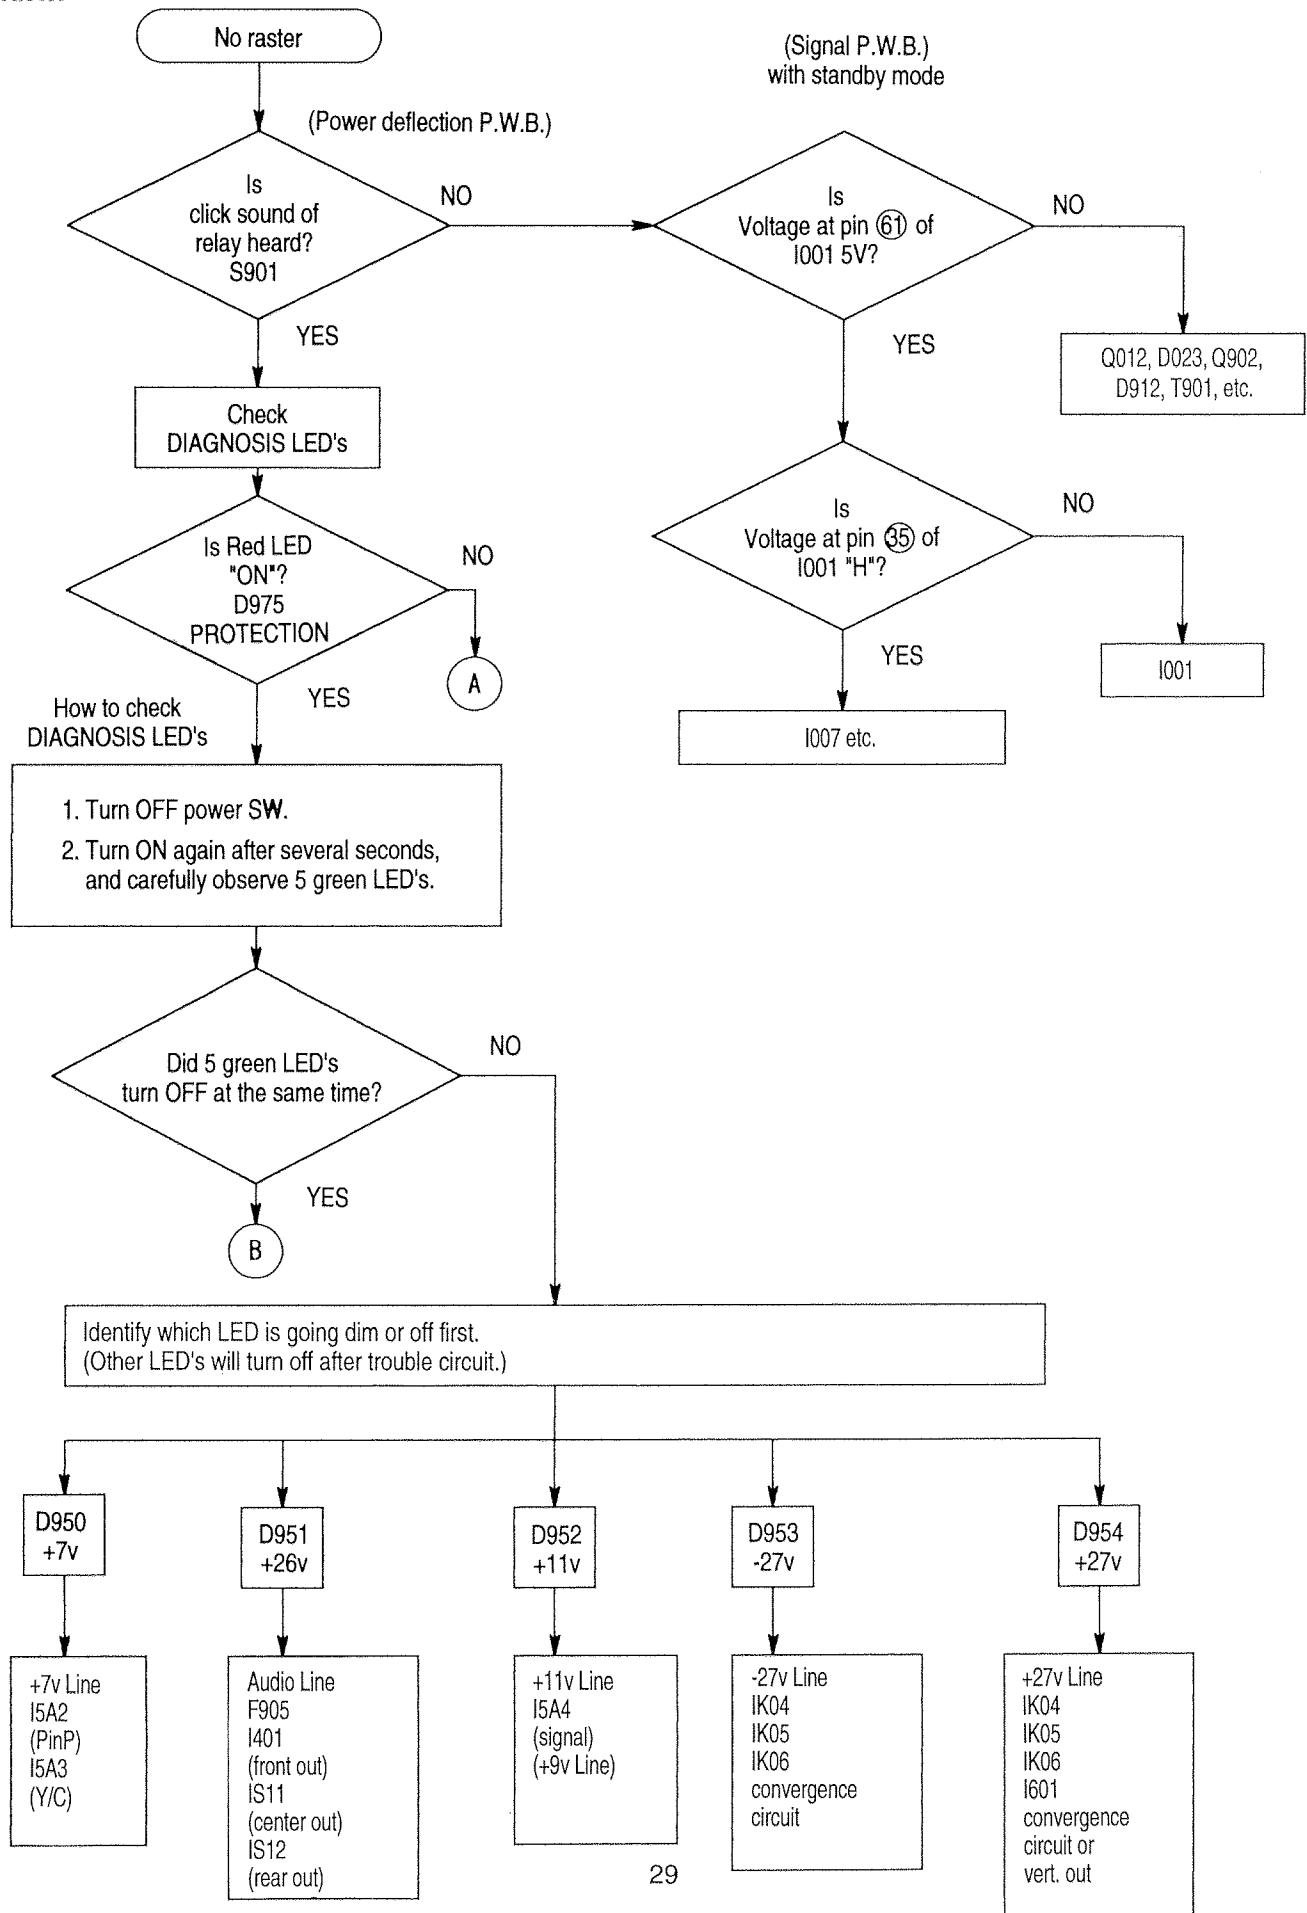

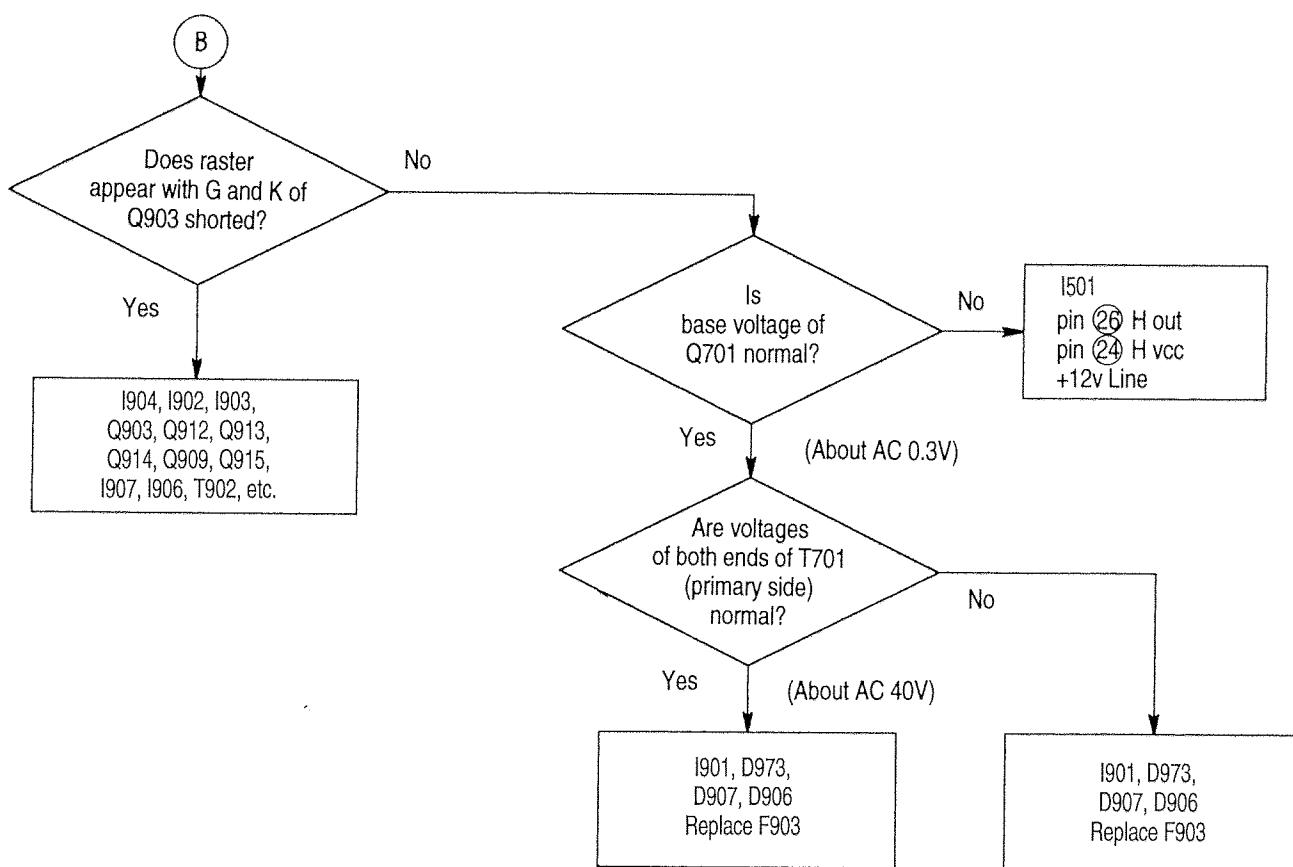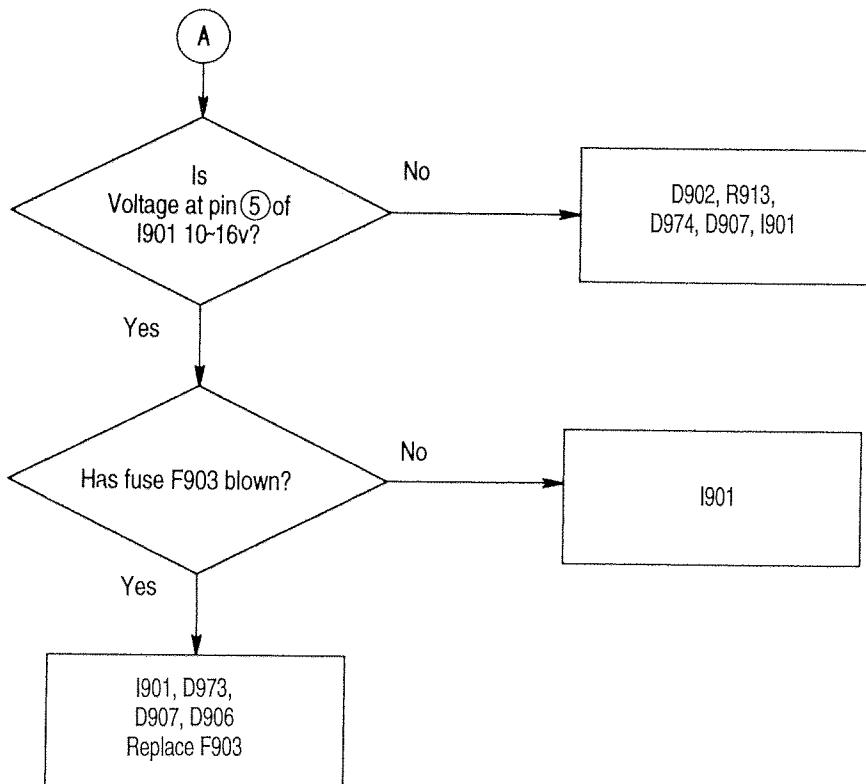


2. No picture

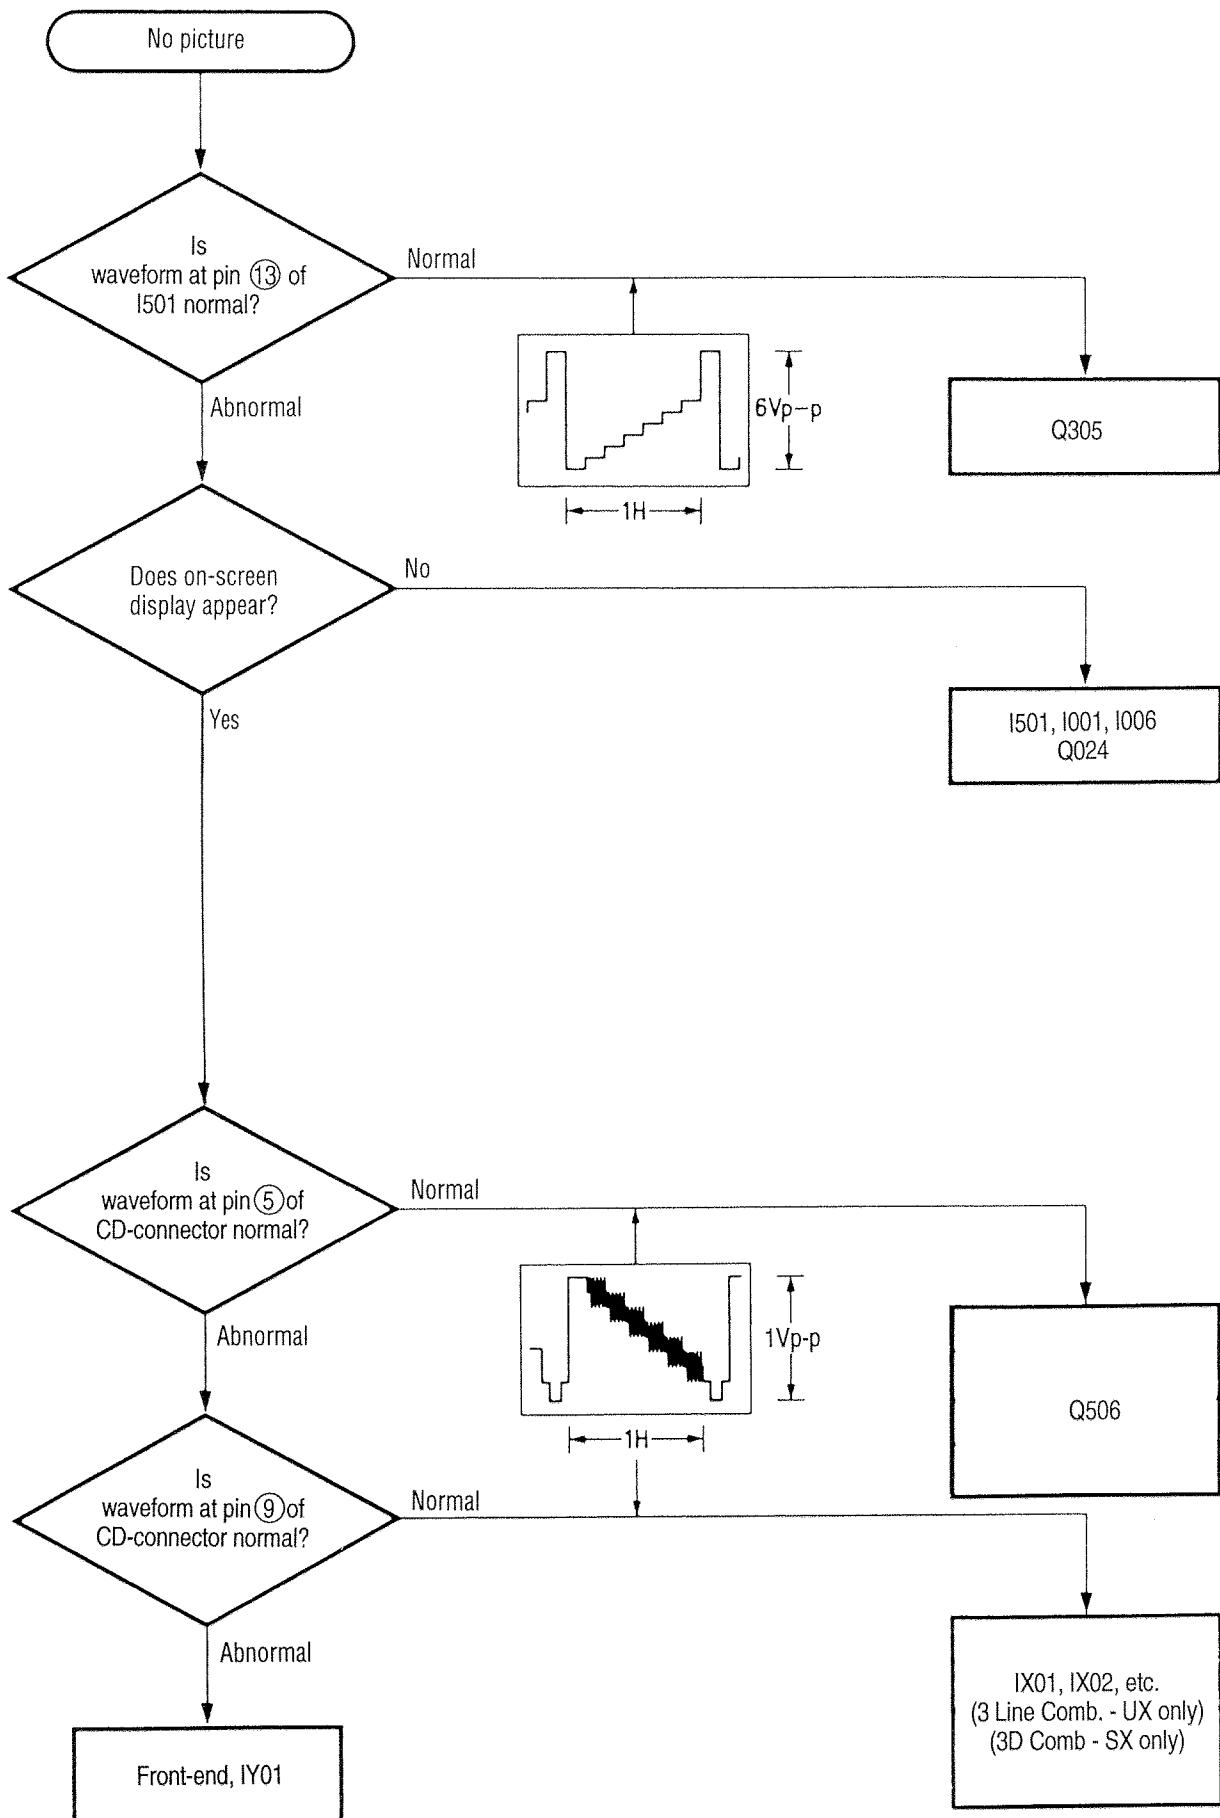


60SX12B/13K  
50UX26B/27K  
46UX24B/25K  
50SX8B


**3. Reception impossible with snow noise**  
**ANT A - Green Channel OSD**

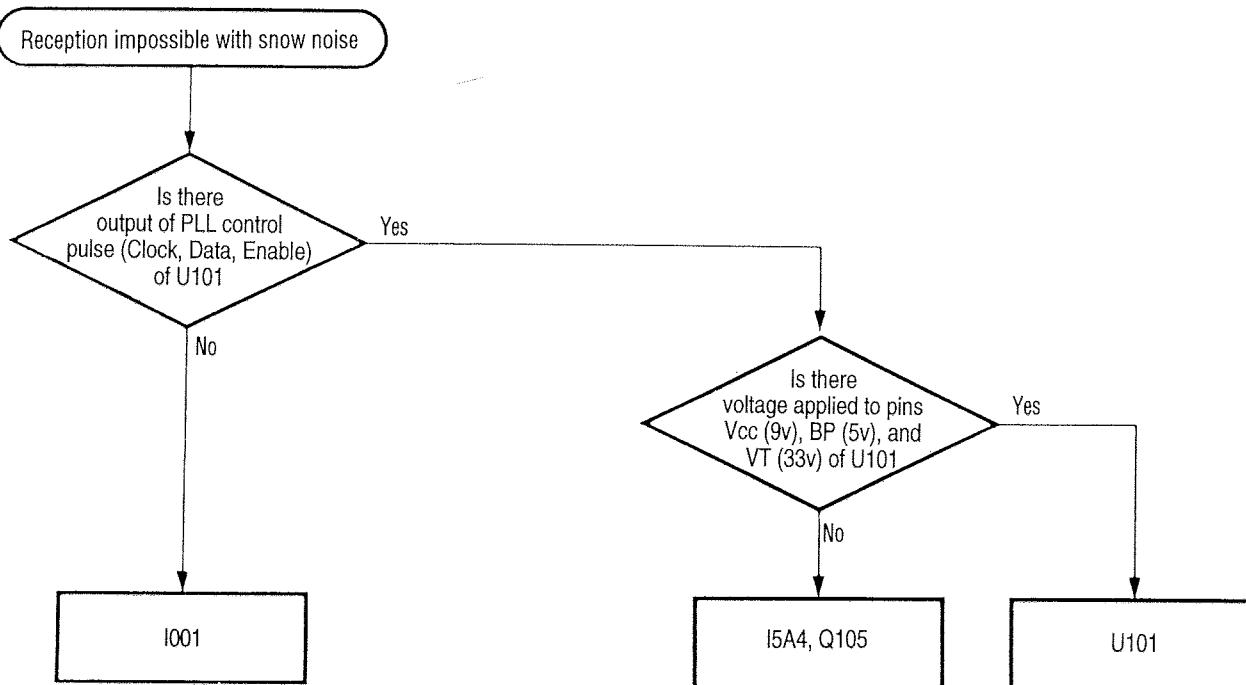


**ANT B - Yellow Channel OSD**

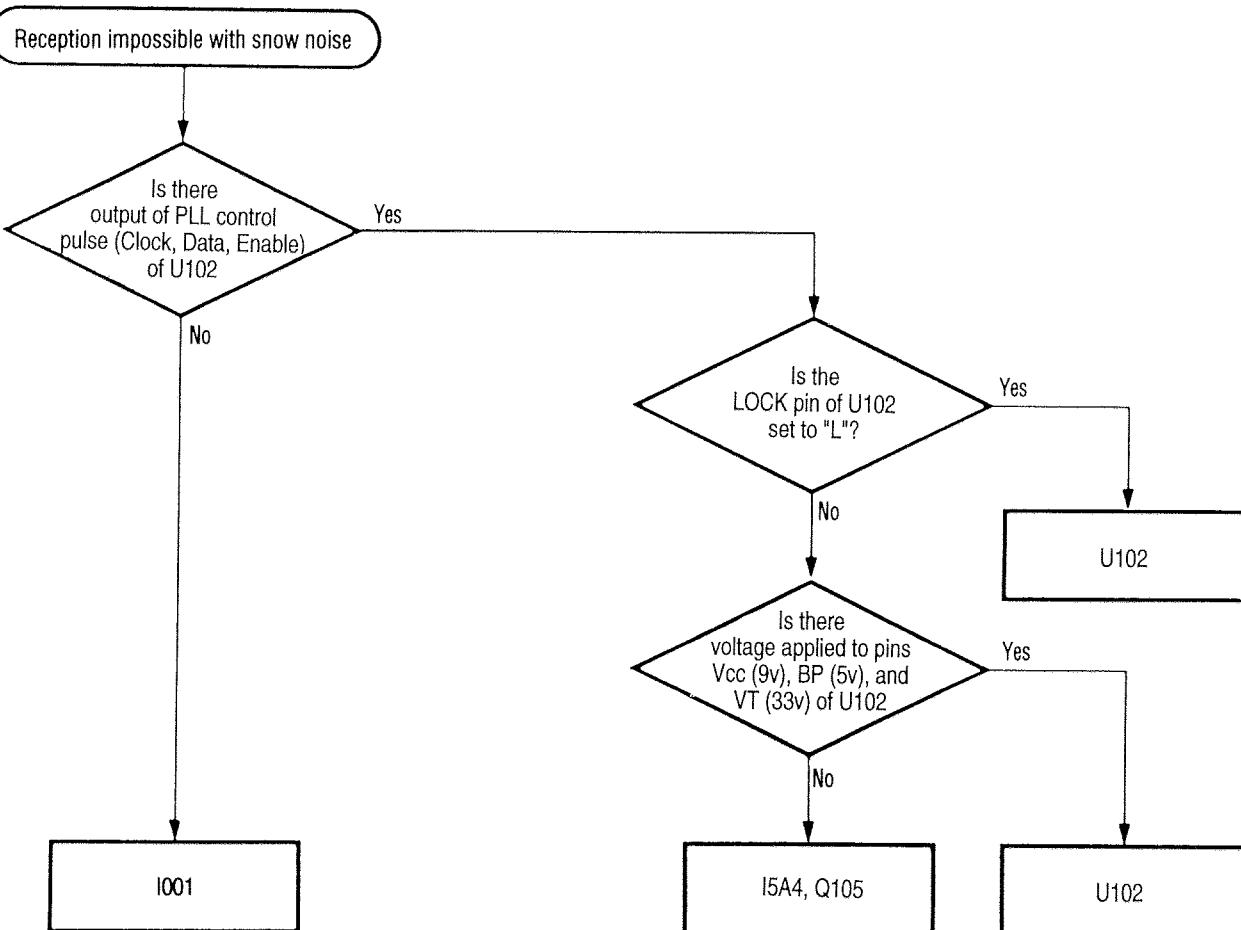


#### 4. Defective synchronization

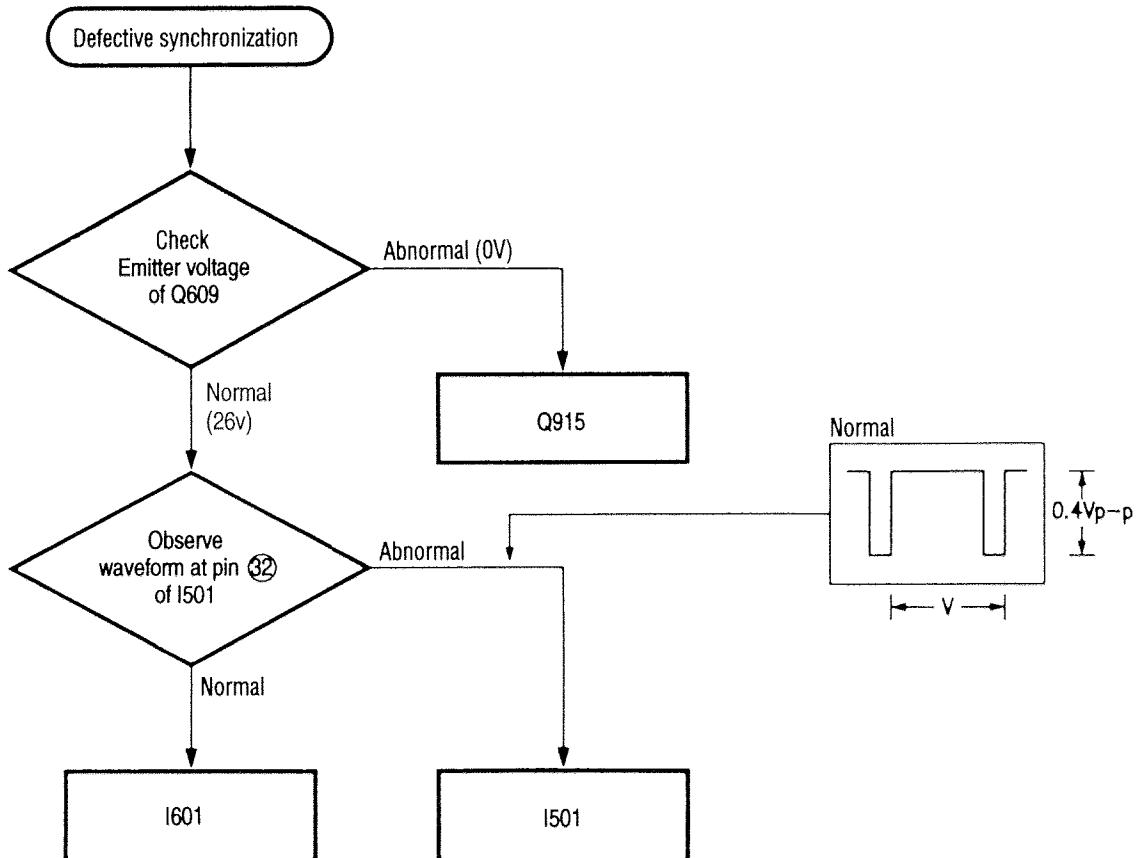

## 5. Incorrect color

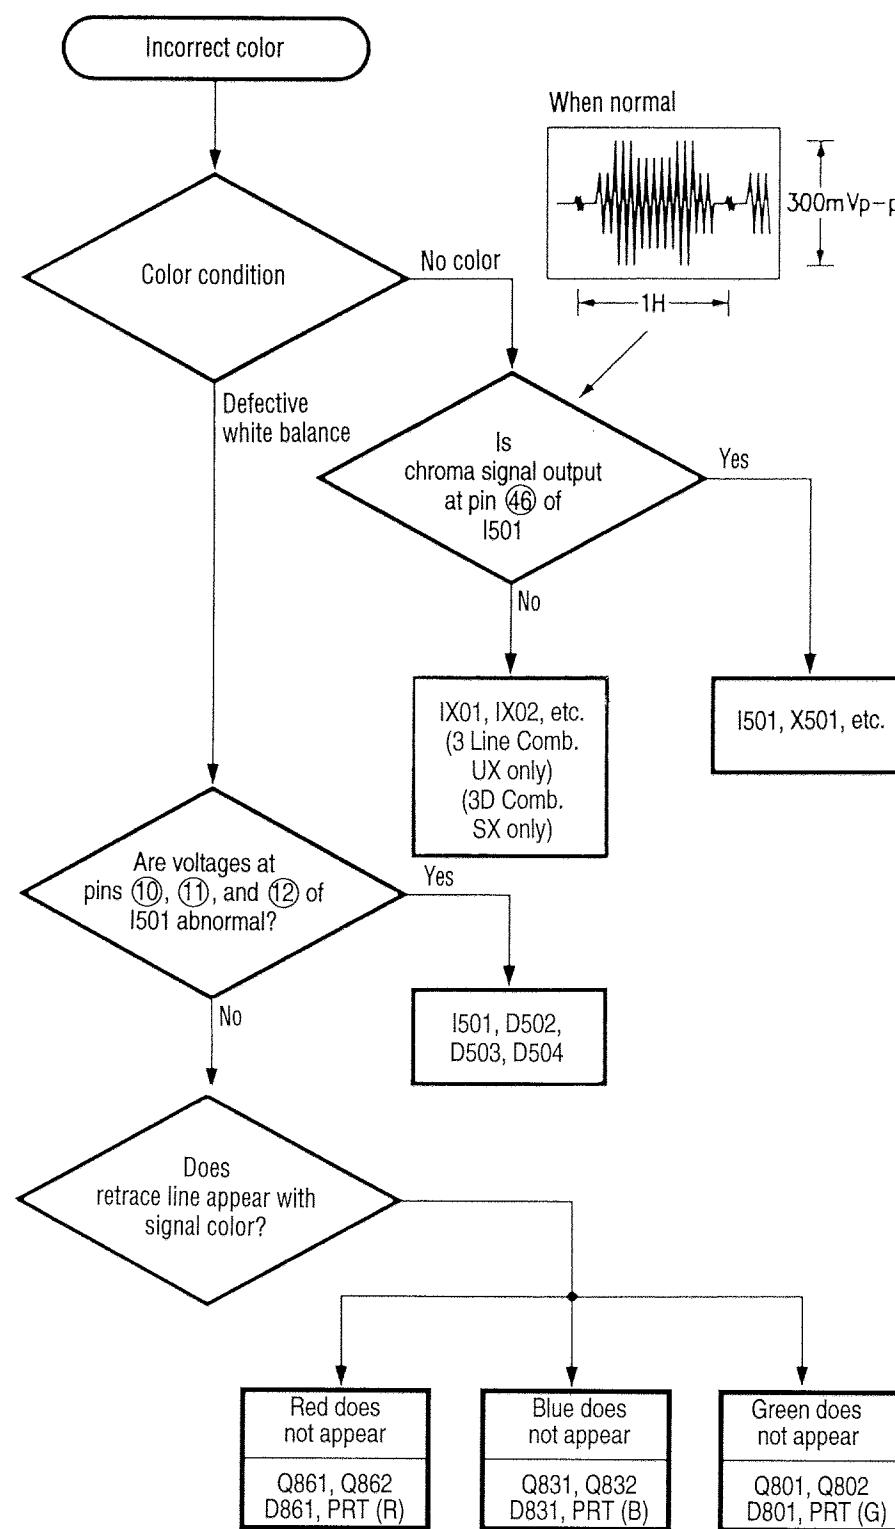

## 6. No sound (when Surround OFF)

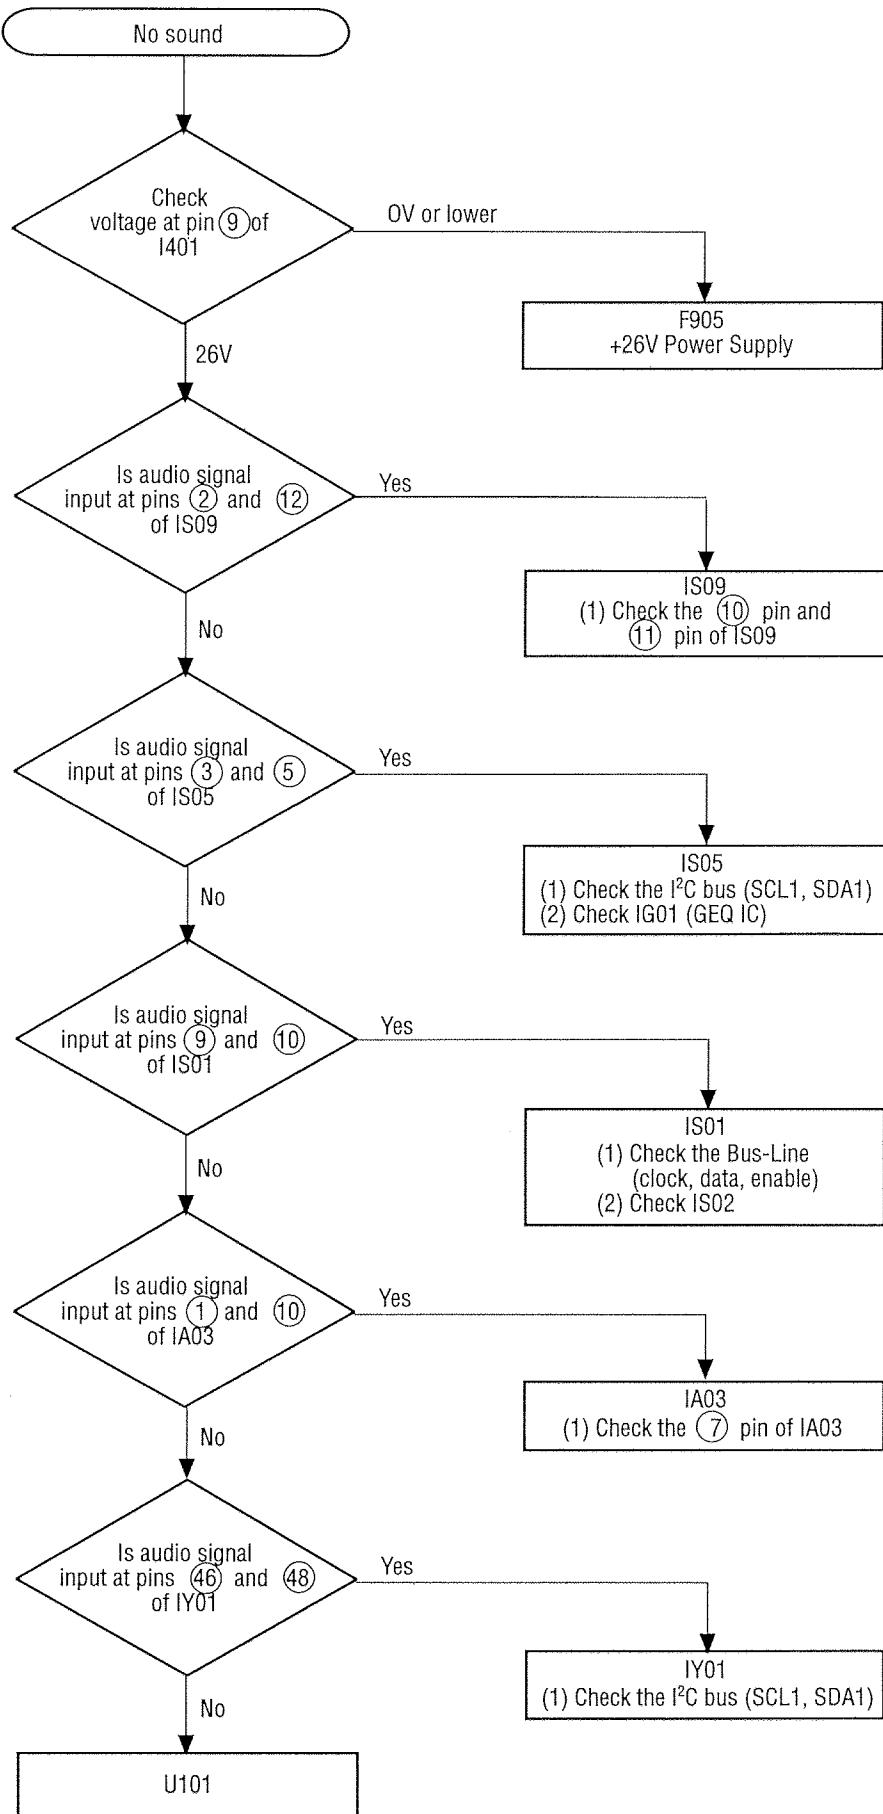

## 7. Convergence errors

If an error message or code appears while performing MAGIC FOCUS or Initialize (SHIFT, ANT in service mode) follow this confirmation and repair method.

1. Turn on power and receive any signal.
2. Press front panel service switch.
3. Press "SWAP", "ANT" on remote control.
4. Error code will be displayed in bottom right corner of screen. If there is no error, an 'INITIAL OK' message will appear on screen.
5. Follow repair table for errors.

**DCU REPAIR TABLE**

Error Code	Error Display	Countermeasure	Application	
			Initialize	Magic Focus
1	VF Error	Replace DCU	X	X
2 *2	Connect 1	1. Darken outside light 2. Placing of sensor 3. Is pattern hitting sensor 4. Check connection and solder bridge of sensor 5. Replace sensor 6. Replace sensor P.W.B. 7. Sensor Connector check 8. Replace DCU 9. Adjustment check (H/V size, centering)	X	--
3*2	A/D Level	Same as Error Code 2	X	X
4	Over Flow	1. Check the placement of sensor 2. Adjustment check (H/V size, centering) 3. Conv. amp gain check *1 (check resistor values only)	X	X
5	Convergence	Same as Error Code 4	X	X
7	Operation	Same as Error Code 4	--	X
9	Connect 2	Same as Error Code 2	X	X
10	Noise	Input strong field strong signal. Check the wiring of connector between sensor and DCU.	X	X
11	SYNC	Input strong field strength signal. Input standard signal NTSC	X	X


\*1 --RK 15, 16, 20, 21, 25, 26, 30, 31, 35, 36, 41, 42 check these resistors.

\*2 Sensor Position


0	1	2
7		3
6	5	4

(View from front side)


## BLOCK DIAGRAM (1/2)

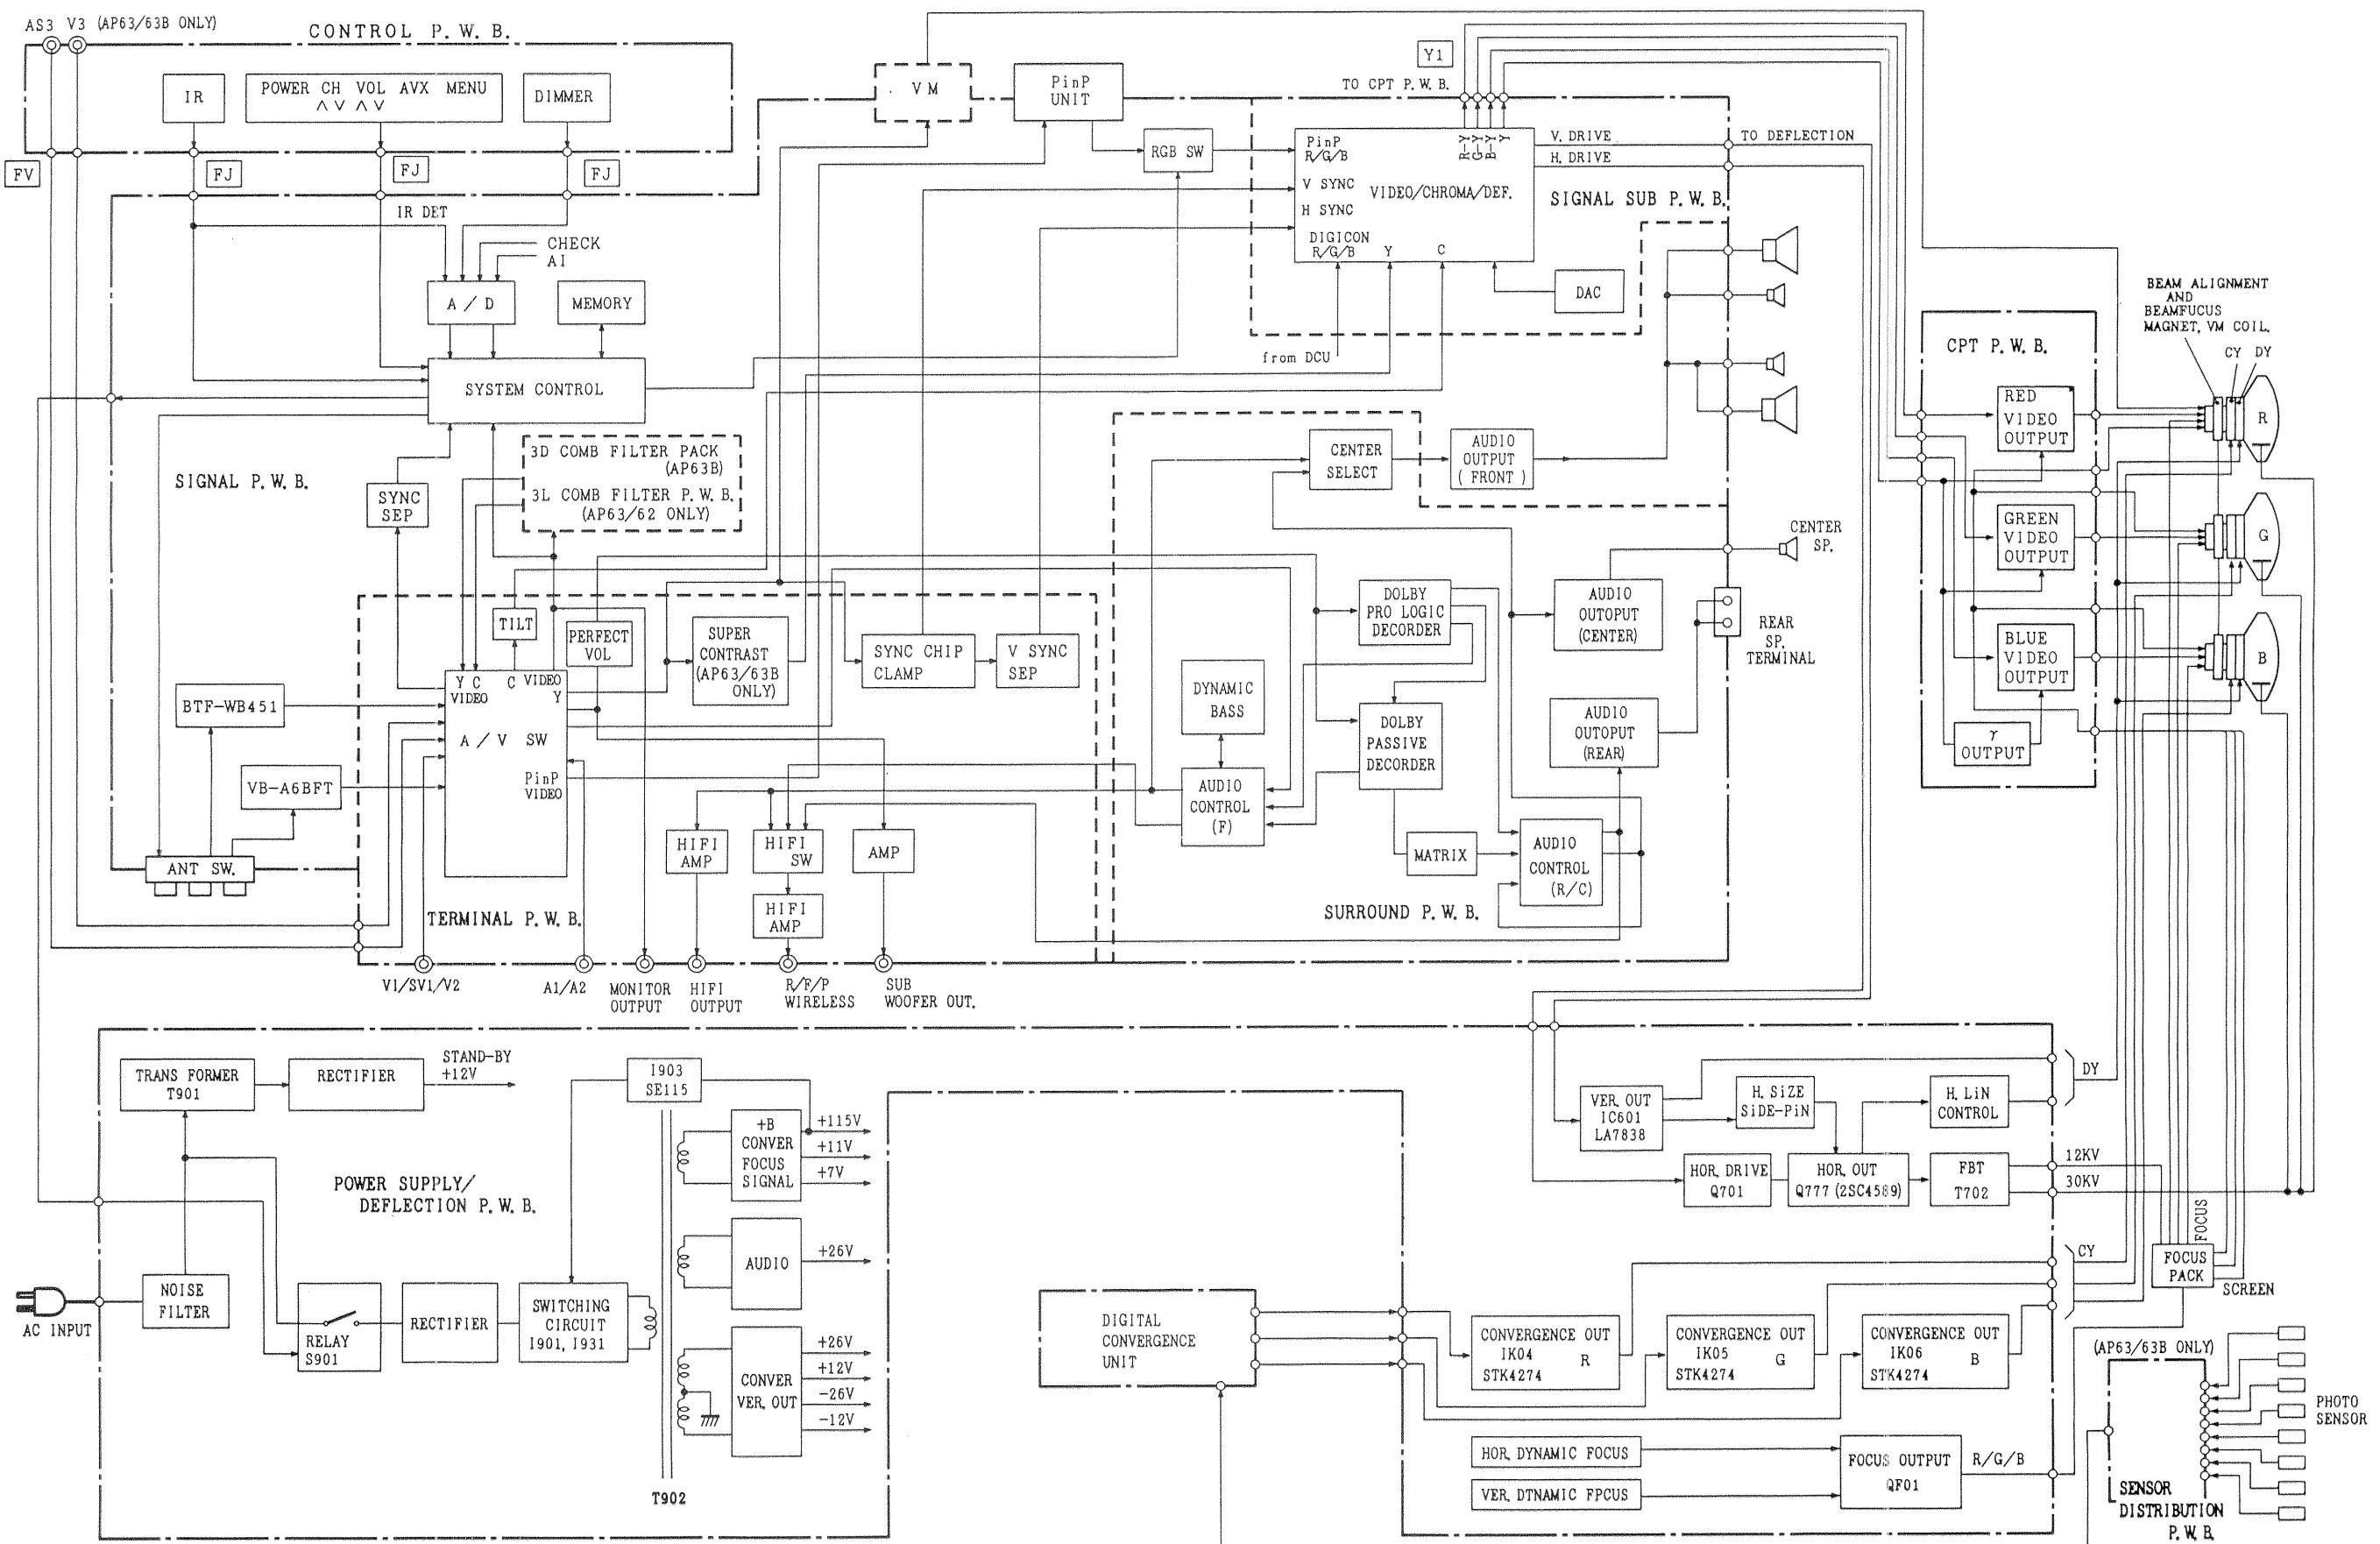


## BLOCK DIAGRAM (2/2)

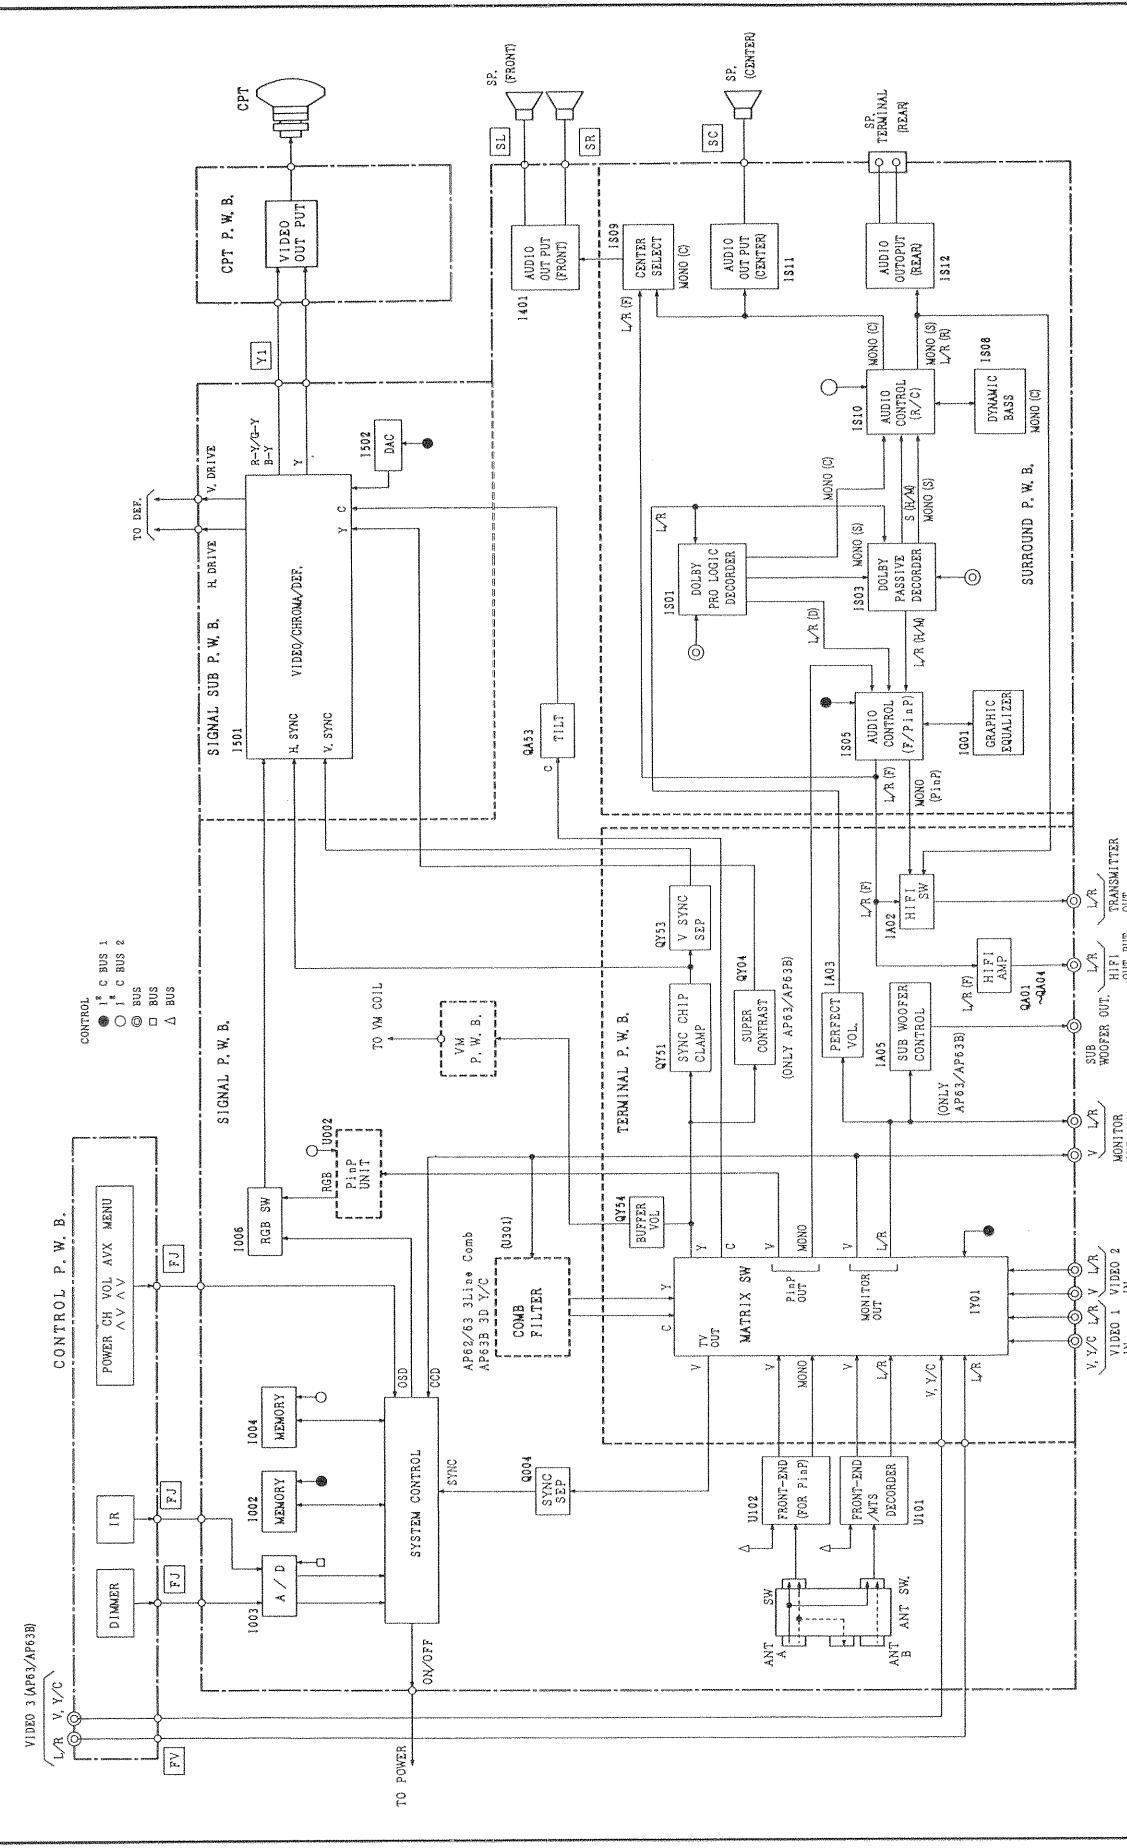

PRODUCT SAFETY NOTE: Components marked with a and shaded have special characteristics important to safety. Before replacing any of these components, read carefully the PRODUCT SAFETY NOTICE of this Service Manual. Don't degrade the safety of the receiver through improper servicing.

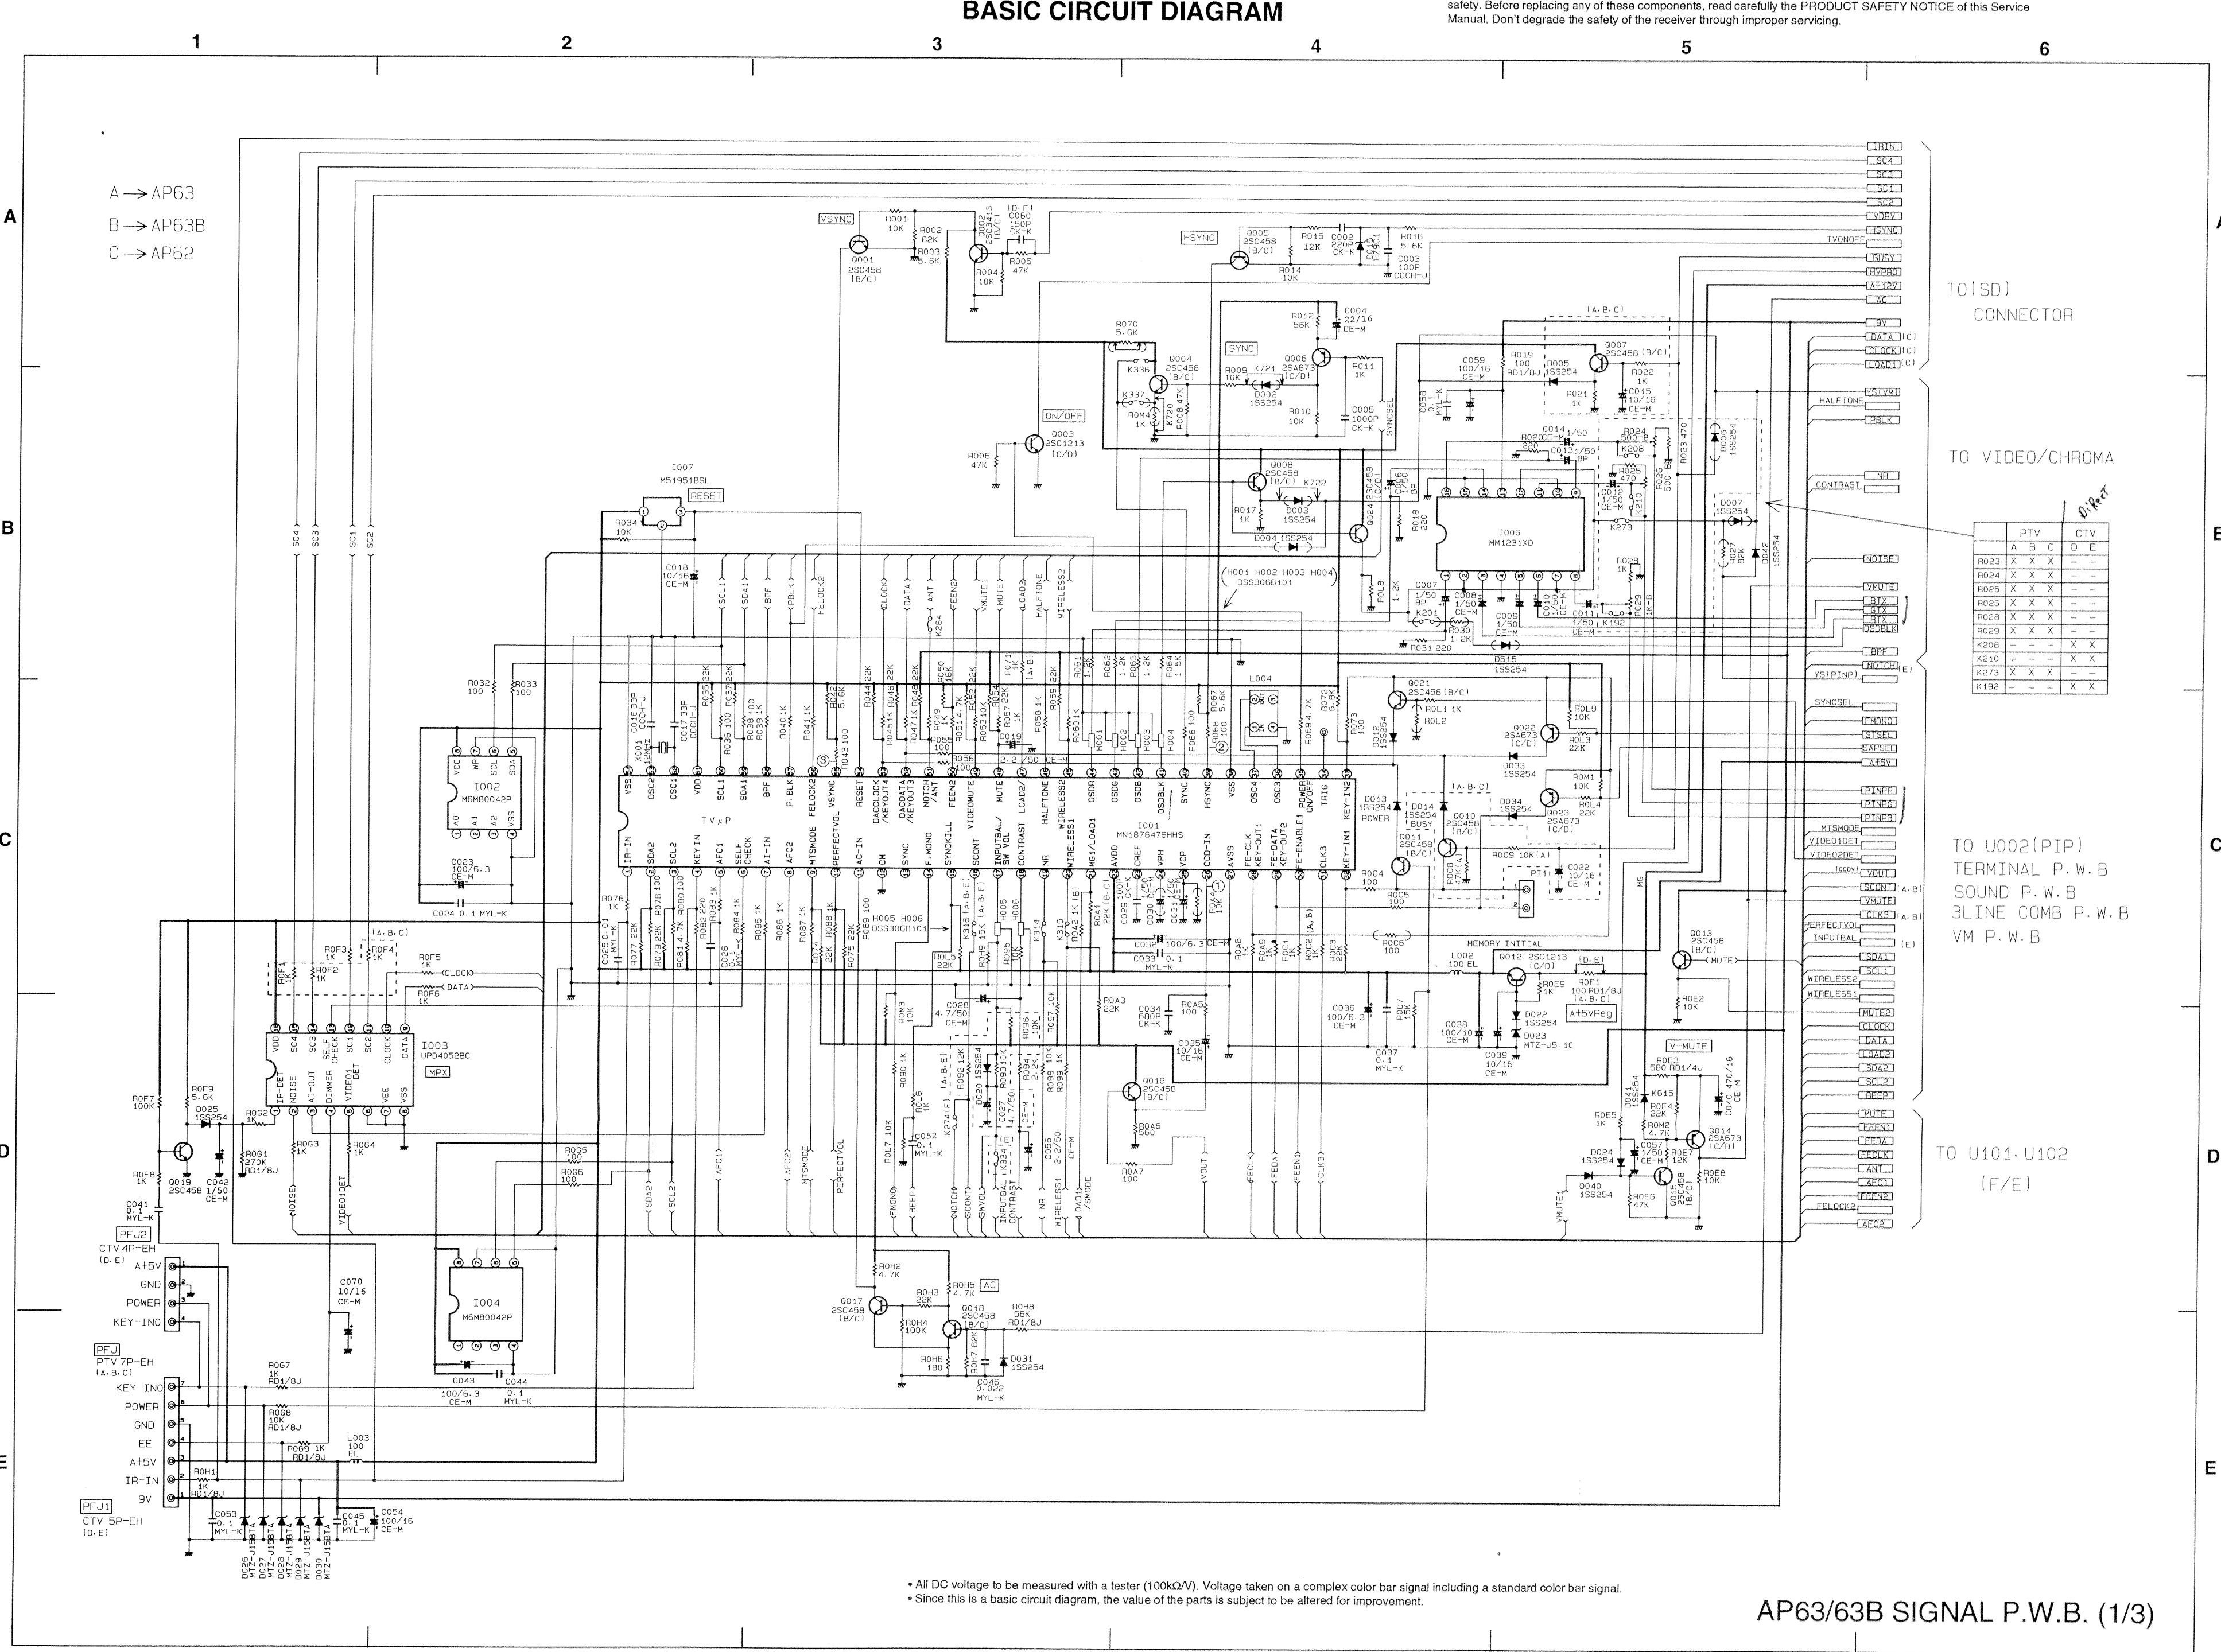


1			2			3			4			5			6		
Circuit No.	Pin No.	Voltage VDC	Circuit No.	Pin No.	Voltage VDC	Circuit No.	Pin No.	Voltage VDC	Circuit No.	Pin No.	Voltage VDC	Circuit No.	Pin No.	Voltage VDC	Circuit No.	Pin No.	Voltage VDC
I001	1	0.1	I001	33	3.8	I002	1	0	I002	1	0.1	I004	1	0	I004	1	0
	2	5.0		34	0		2	0		2	0		3	0		3	0
	3	5.0		35	5.0		3	0		3	0		36	2.6		4	0
	4	5.0		37	2.7		4	0		5	5.0		5	0.6		5	0.6
	5	2.5		38	0		6	5.0		6	5.0		6	0.5		7	0
	6	0.5		39	4.3		7	0		7	0		7	0.1		8	5.0
	8	2.4		40	4.3		8	5.0		8	5.0		8	0.1		9	0
	9	0		41	0		9	0		9	0		9	0.1		10	0
	10	0		42	0		10	0		10	0		10	0		11	2.4
	11	2.4		43	0		11	0		11	0		11	0		12	0
	12	0		44	0		12	0		12	0		12	0		13	2.5
	13	2.5		45	0.1		13	0		13	0		13	0		14	0.1
	14	0.1		46	0		14	0		14	0		14	0		15	0
	15	0		47	5.0		15	0		15	0		15	0		16	0
	16	0		48	0.1		16	0		16	0		16	0		17	1.8
	17	1.8		49	0		17	0		17	0		17	0		18	7.1
	18	7.1		50	0		18	0		18	0		18	0		19	8.9
	19	8.9		51	1.0		19	0		19	0		19	0		20	5.0
	20	5.0		52	5.0		20	0		20	0		20	0		21	0
	21	0		53	5.0		21	0		21	0		21	0		22	5.0
	22	5.0		54	5.0		22	0		22	0		22	0		23	0
	23	0		55	4.9		23	0		23	0		23	0		24	1.3
	24	1.3		56	5.2		24	0		24	0		24	0		25	1.2
	25	1.2		57	0		25	0		25	0		25	0		26	2.1
	26	2.1		58	5.0		26	0		26	0		26	0		27	0
	27	0		59	5.0		27	0		27	0		27	0		28	4.8
	28	4.8		60	5.0		28	0		28	0		28	0		29	4.9
	29	4.9		61	5.0		29	0		29	0		29	0		30	0.2
	30	0.2		62	2.5		30	0		30	0		30	0		31	0
	31	0		63	2.4		31	0		31	0		31	0		32	5.0
	32	5.0		64	0		32	0		32	0		32	0			

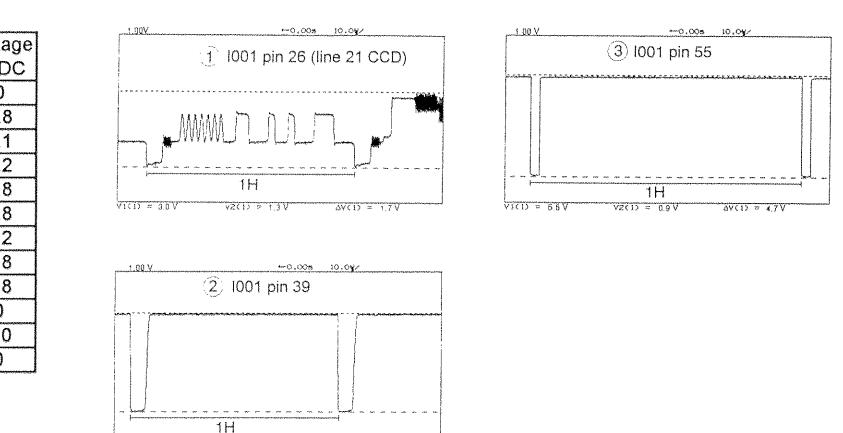

## **BASIC CIRCUIT DIAGRAM**

**PRODUCT SAFETY NOTE:** Components marked with a  and shaded have special characteristics important to safety. Before replacing any of these components, read carefully the PRODUCT SAFETY NOTICE of this Service Manual. Don't degrade the safety of the receiver through improper servicing.

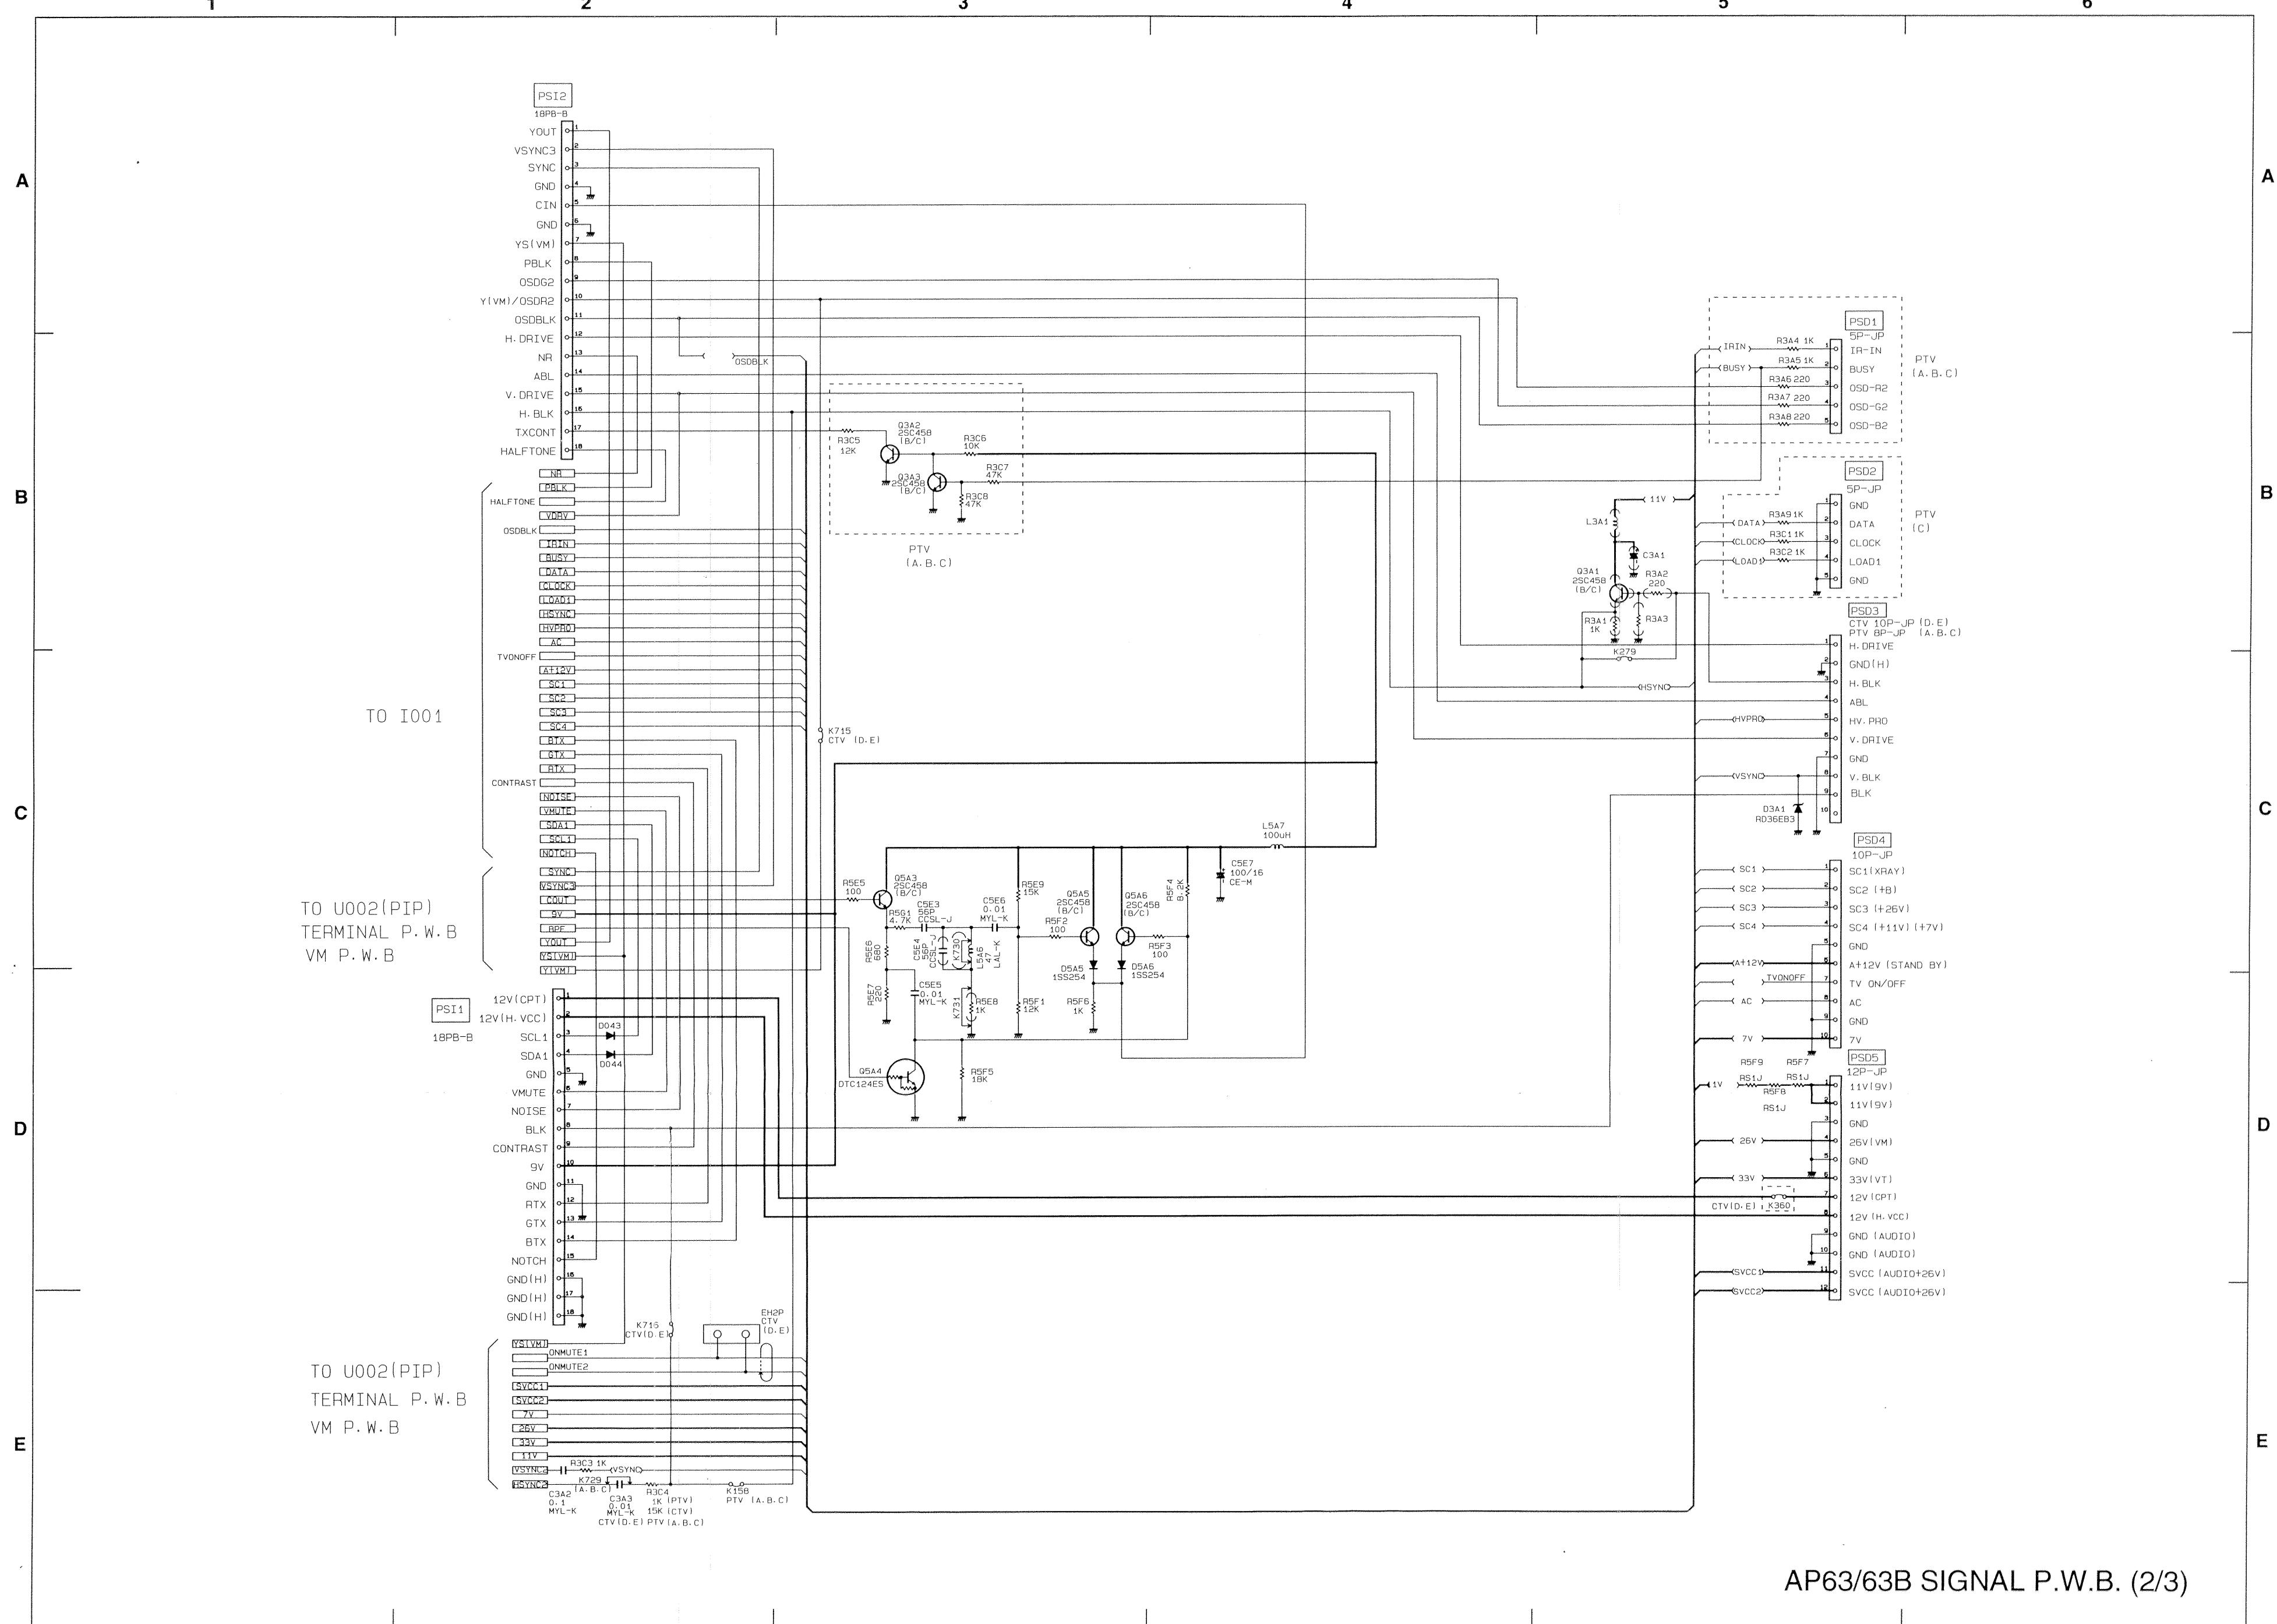


AP63/63B SIGNAL P.W.B. (2/3)

Circuit No.	Pin No.	Voltage VDC
Q3A2	B	0.7
	C	0
	E	0
Q3A3	B	0
	C	0.7
	E	0
Q5A3	B	3.8
	C	9.1
	E	3.1
Q5A4	B	4.8
	C	0
	E	0
Q5A5	B	3.9
	C	9.1
	E	3.3
Q5A6	B	0
	C	9.1
	E	0.1

- All DC voltage to be measured with a tester ( $100k\Omega/V$ ). Voltage taken on a complex color bar signal including a standard color bar signal.
- Since this is a basic circuit diagram, the value of the parts is subject to be altered for improvement.

### BASIC CIRCUIT DIAGRAM

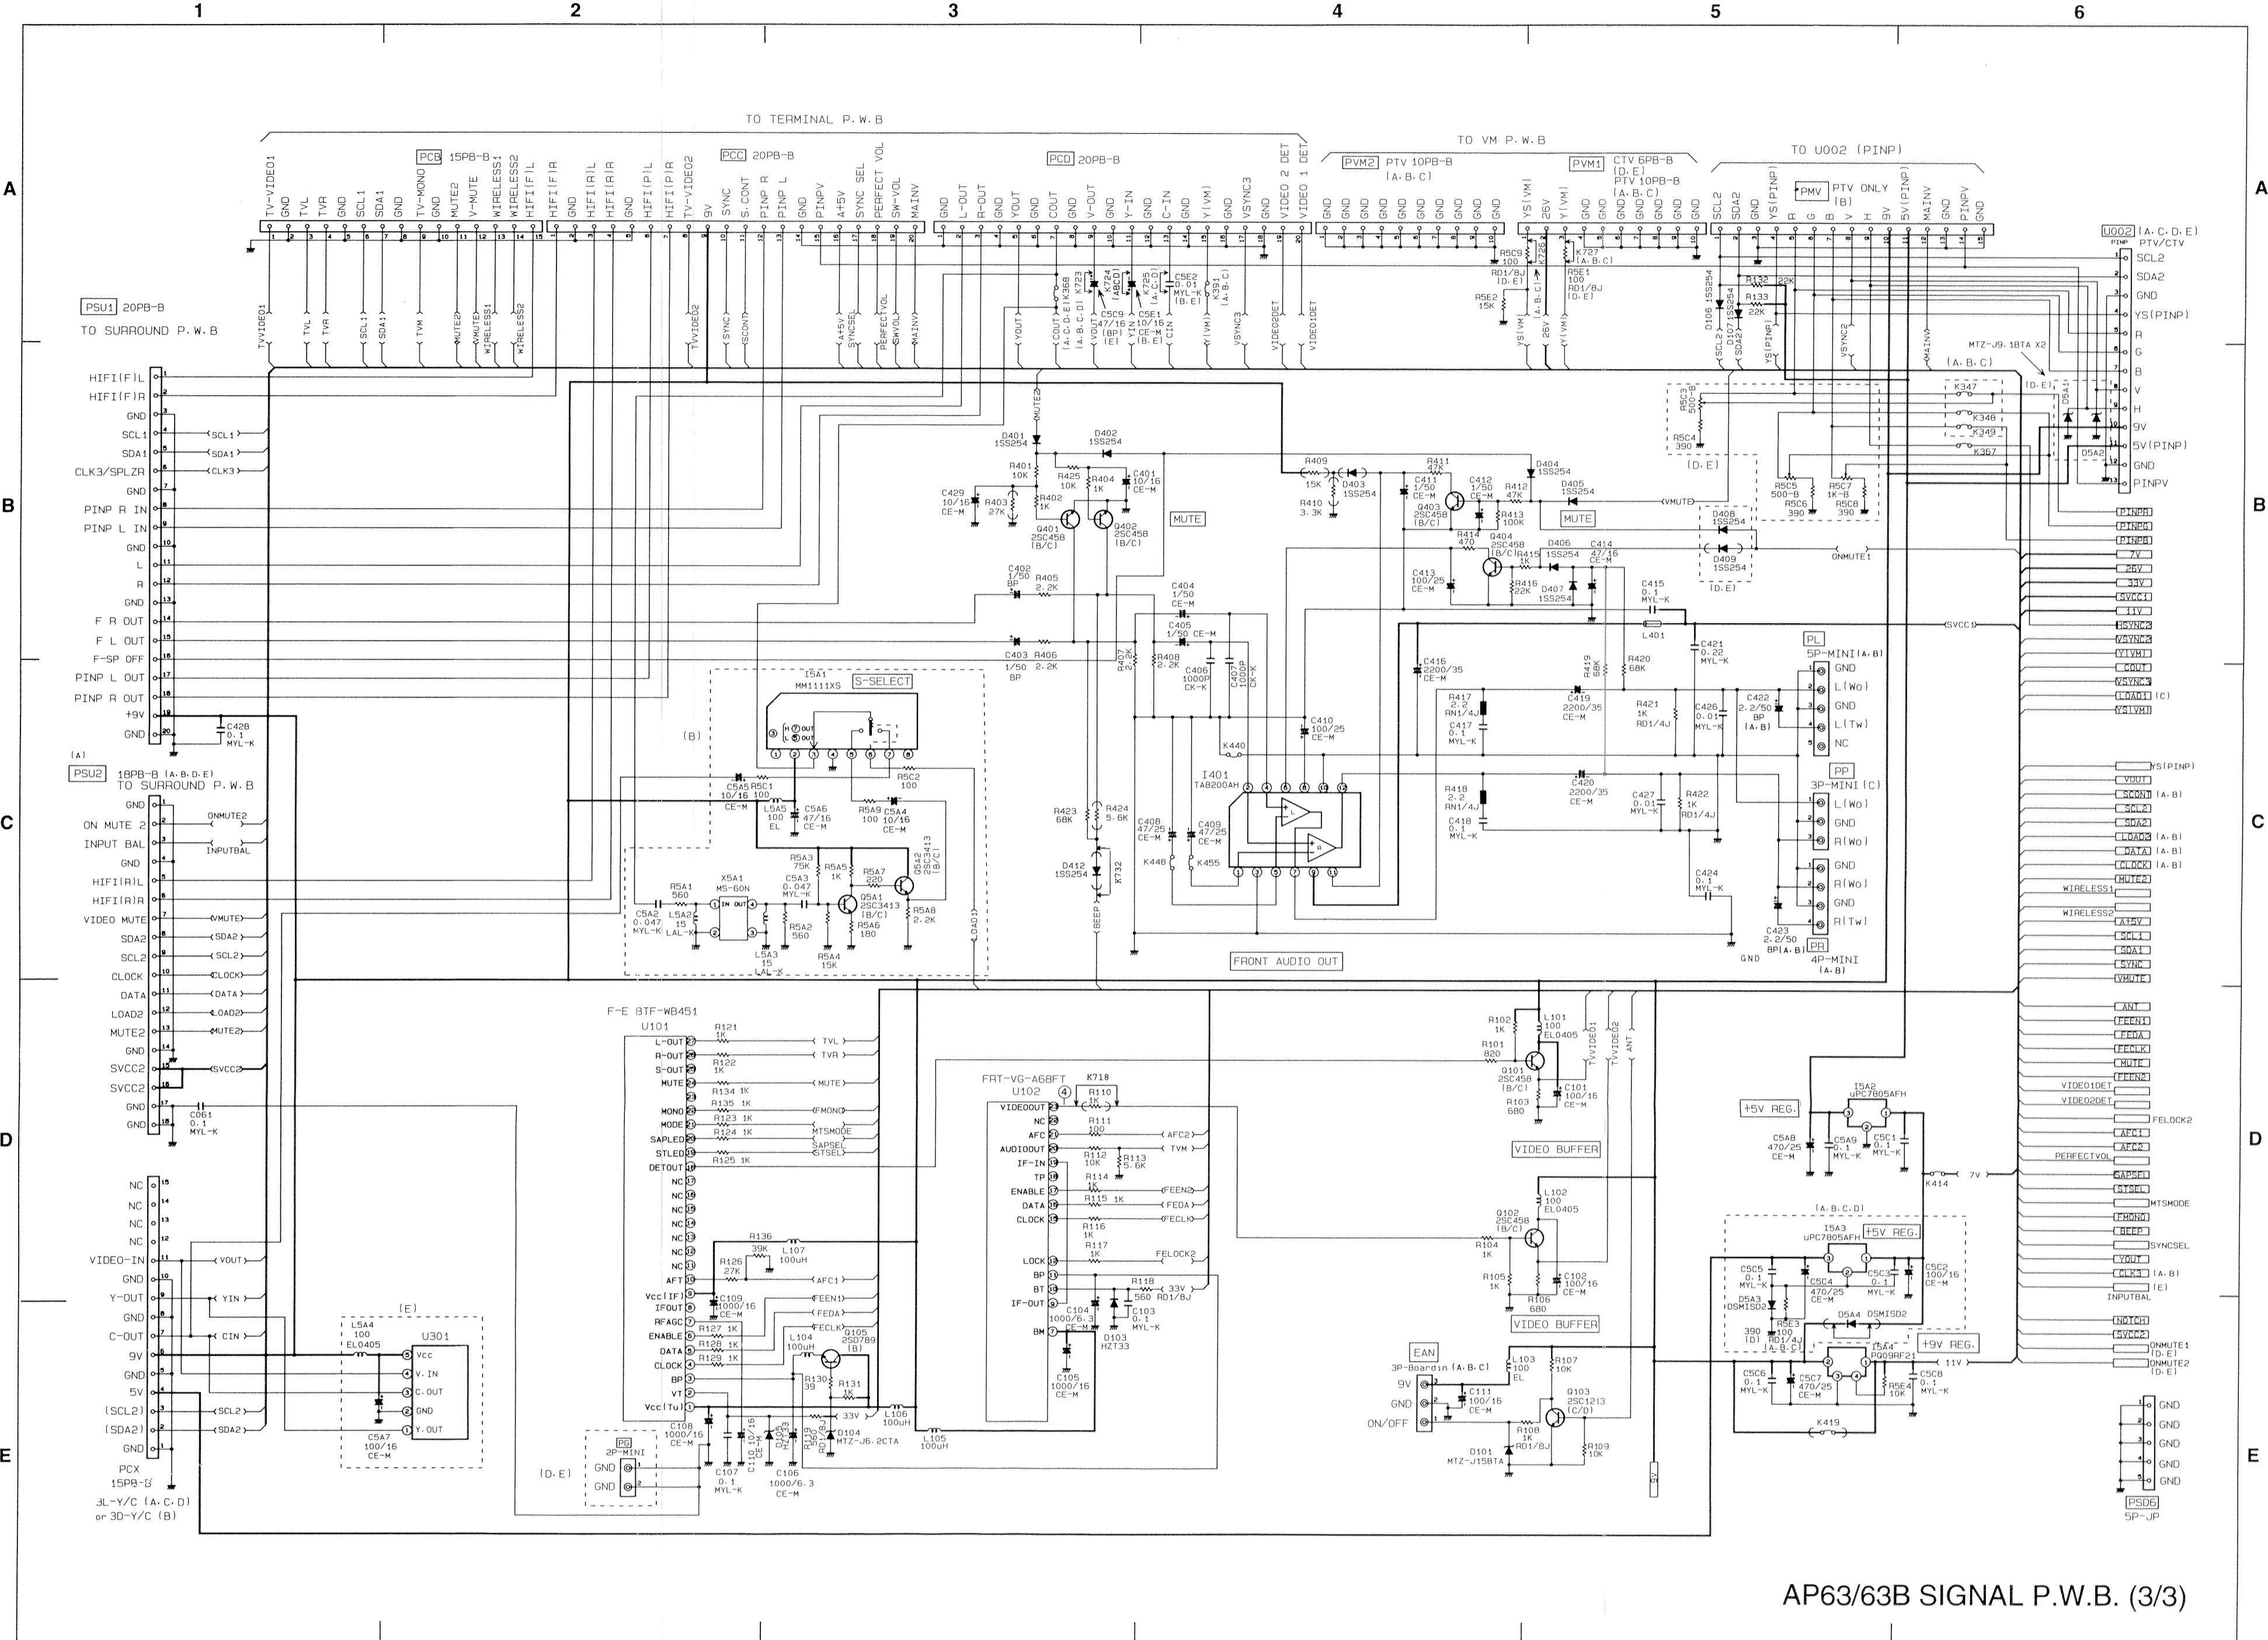


AP63/63B SIGNAL P.W.B. (3/3)

AP63B ONLY		
Circuit No.	Pin No.	Voltage VDC
I401	1	1.6
	2	0
	3	0
	4	0
	5	1.6
	6	9.1
	7	12.7
	8	2.0
	9	27.1
	10	0
	11	1.2
	12	12.4
I5A1	1	0
	2	8.9
	3	4.2
I5A2	4	0
	5	5.0
	6	0
	7	5.0
	8	0.5
	9	
	10	
	11	
I5A3	1	8.3
	2	0
	3	5.0
I5A4	1	8.3
	2	0.3
	3	5.2
	4	11.1

\* All DC voltage to be measured with a tester (100kΩ/V). Voltage taken on a complex color bar signal including a standard color bar signal.  
\* Since this is a basic circuit diagram, the value of the parts is subject to be altered for improvement.

## **BASIC CIRCUIT DIAGRAM**


**PRODUCT SAFETY NOTE:** Components marked with a  and shaded have special characteristics important to safety. Before replacing any of these components, read carefully the PRODUCT SAFETY NOTICE of this Service Manual. Don't degrade the safety of the receiver through improper servicing.

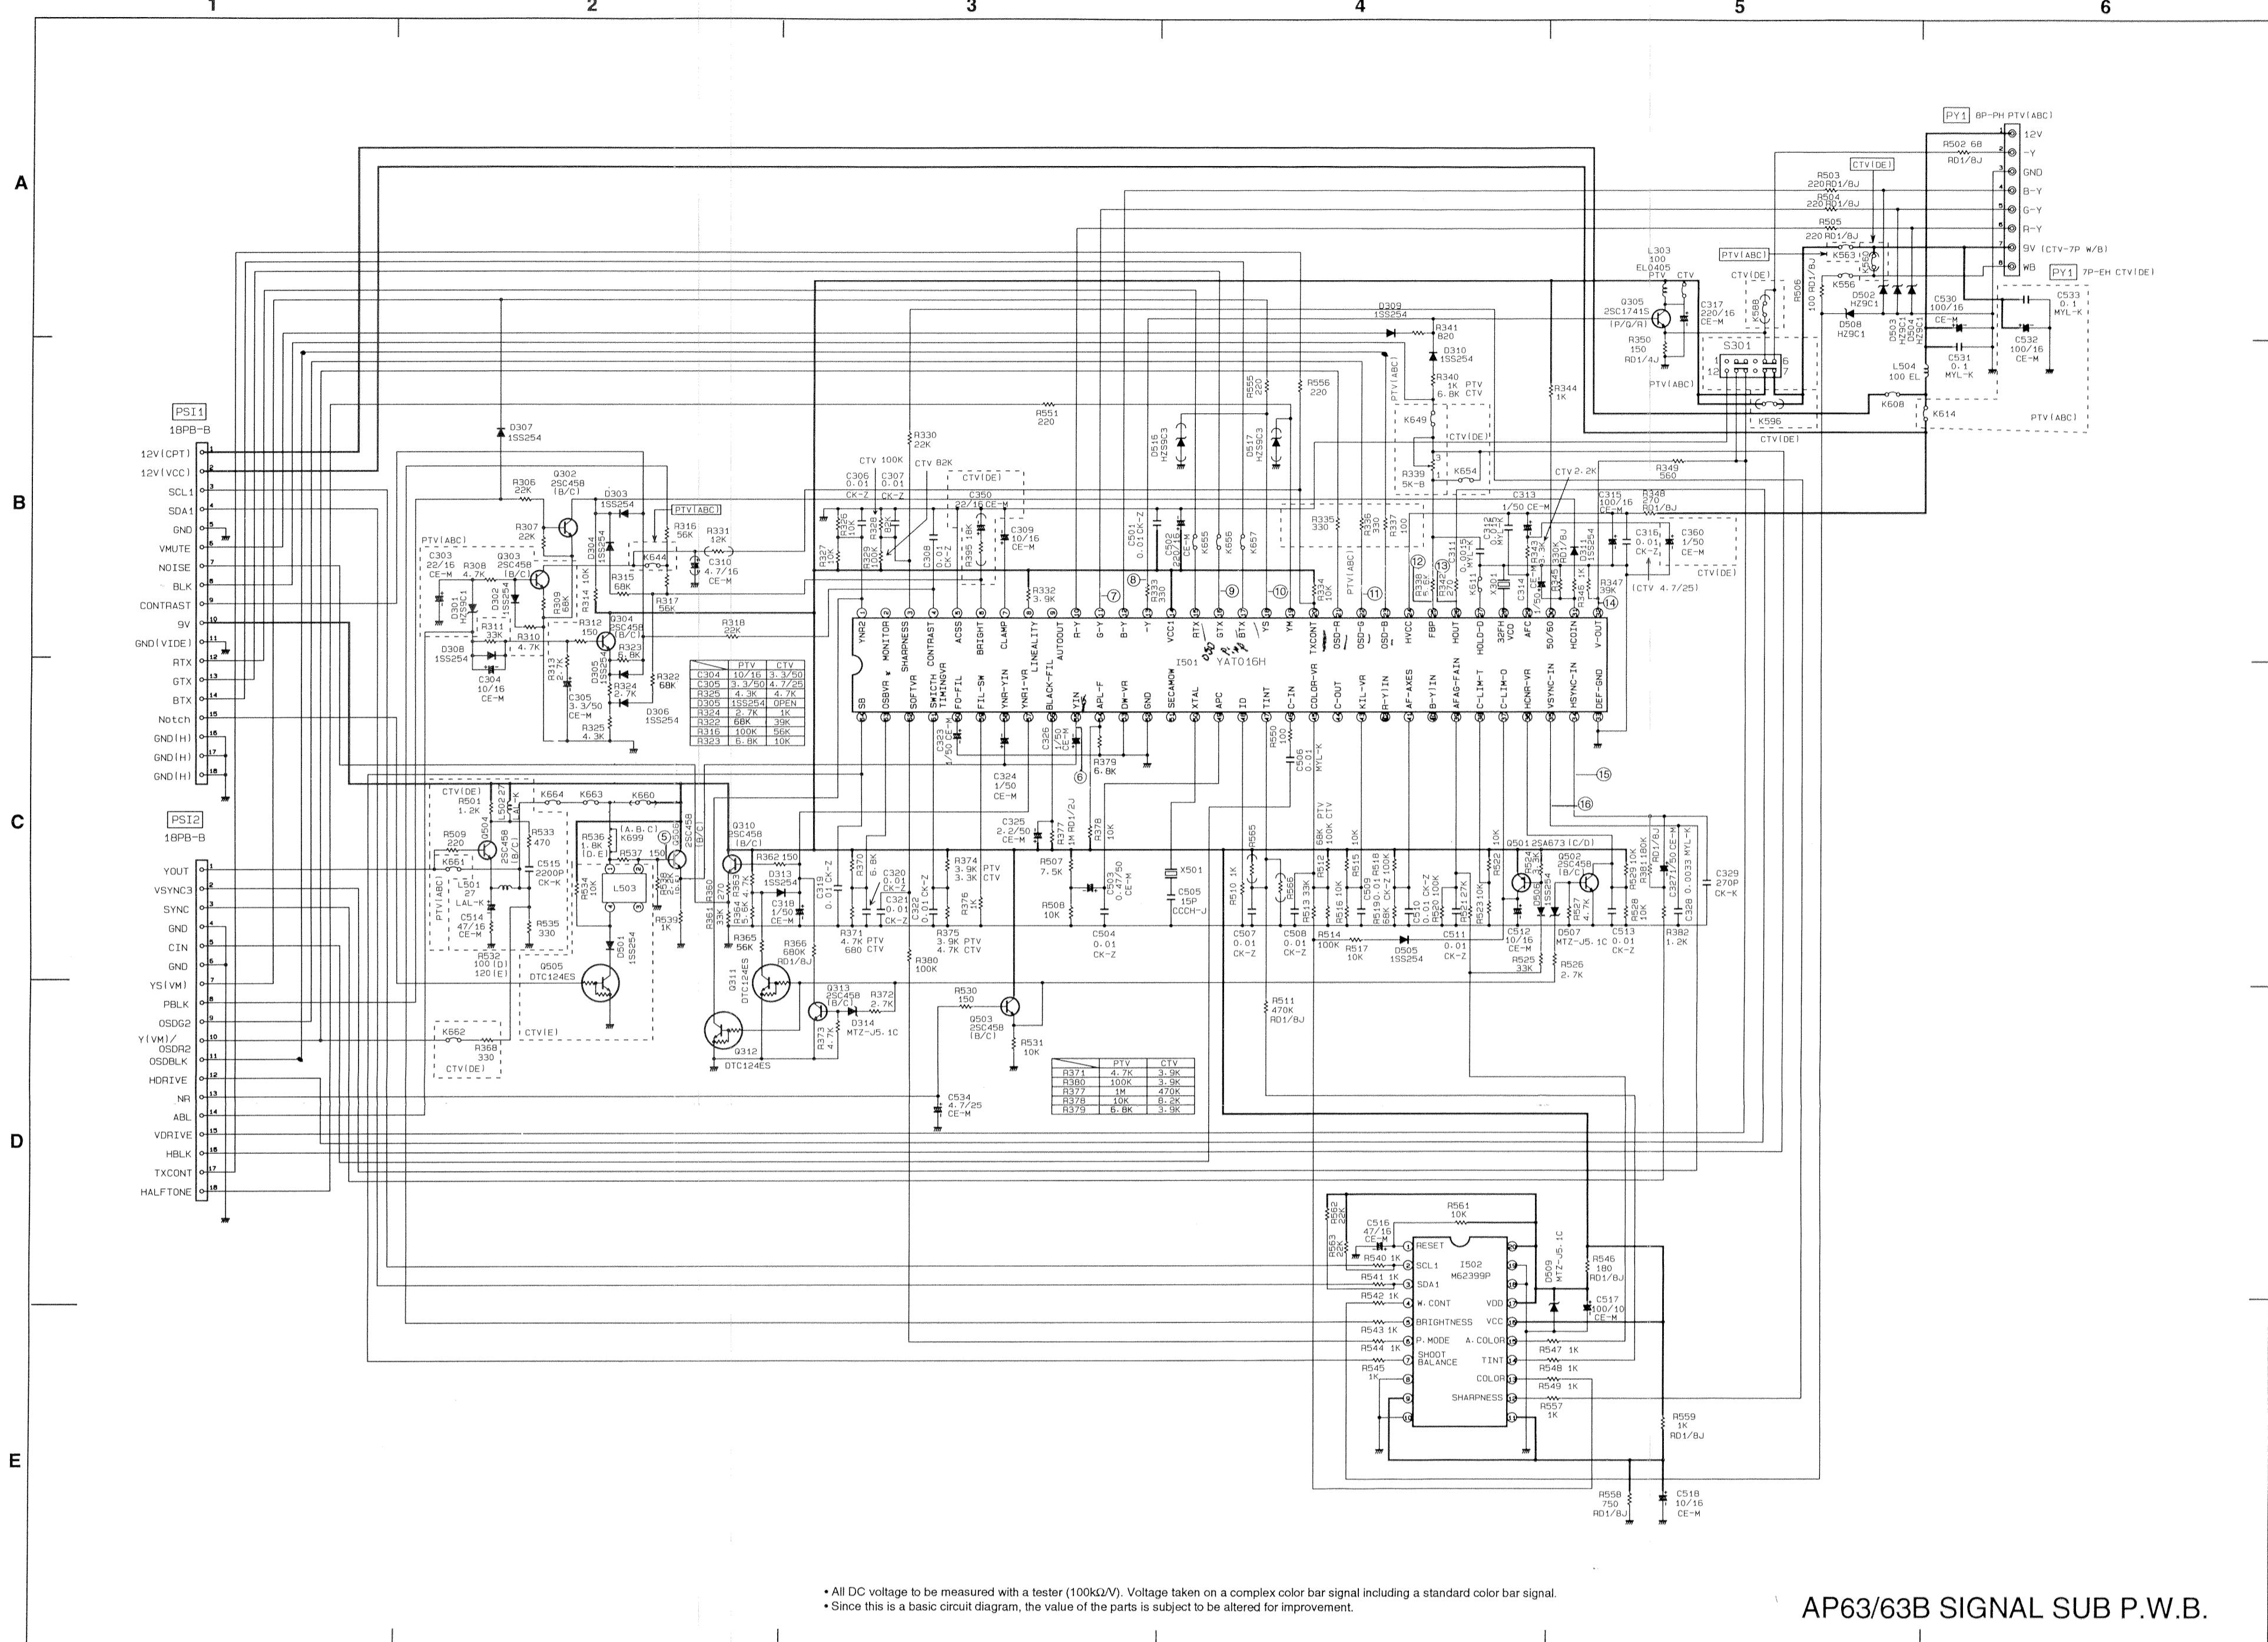


- All DC voltage to be measured with a tester ( $100k\Omega/V$ ). Voltage taken on a complex color bar signal including a standard color bar signal.
- Since this is a basic circuit diagram, the value of the parts is subject to be altered for improvement.

AP63/63B SIGNAL SUB P.W.B.

Circuit No.	Pin No.	Voltage VDC	Circuit No.	Pin No.	Voltage VDC	Circuit No.	Pin No.	Voltage VDC	Circuit No.	Pin No.	Voltage VDC	Circuit No.	Pin No.	V
I501	1	0	I501	33	0	I502	1	5.3	Q302	B	0	Q501	B	9
	2	0		34	7.0		2	5.2		C	9.0		C	4
	3	4.3		35	6.4		3	5.2		E	0		E	9
	4	7.0		36	0		4	0		B	0		B	0
	5	0		37	4.3		5	5.8		C	5.1		C	0
	6	4.8		38	4.0		6	8.8		E	0		E	0
	7	6.9		39	6.9		7	5.7		B	7.9		B	8
	8	8.9		40	1.3		8	0		C	9.0		C	9
	9	0.1		41	3.6		9	3.7		E	7.2		E	8
	10	5.1		42	1.3		10	0		B	4.5		B	6
	11	5.2		43	4.1		11	3.7		C	8.9		C	9
	12	5.3		44	6.5		12	4.4		E	3.9		E	5
	13	4.4		45	4.7		13	4.4		B	4.4		B	6
	14	9.0		46	3.1		14	4.5		C	9.0		C	9
	15	3.1		47	4.5		15	8.8		E	3.8		E	5
	16	3.1		48	0.7		16	9.0		B	8.1		B	6
	17	3.1		49	5.8		17	5.3		C	0		C	0
	18	0		50	5.5		18	0		E	0		E	0
	19	0		51	1.4		19	0		B	8.1		B	6
	20	4.9		52	0		20	5.3		C	0		C	0
	21	0		53	0					E	0		E	0
	22	0		54	3.6					B	0.7		B	0.7
	23	0		55	3.7					C	0		C	0
	24	7.8		56	6.0					E	0		E	0
	25	1.3		57	4.4									
	26	0.8		58	3.8									
	27	0		59	0									
	28	5.0		60	4.2									
	29	5.6		61	4.5									
	30	8.7		62	6.0									
	31	7.5		63	3.7									
	32	4.4		64	5.7									

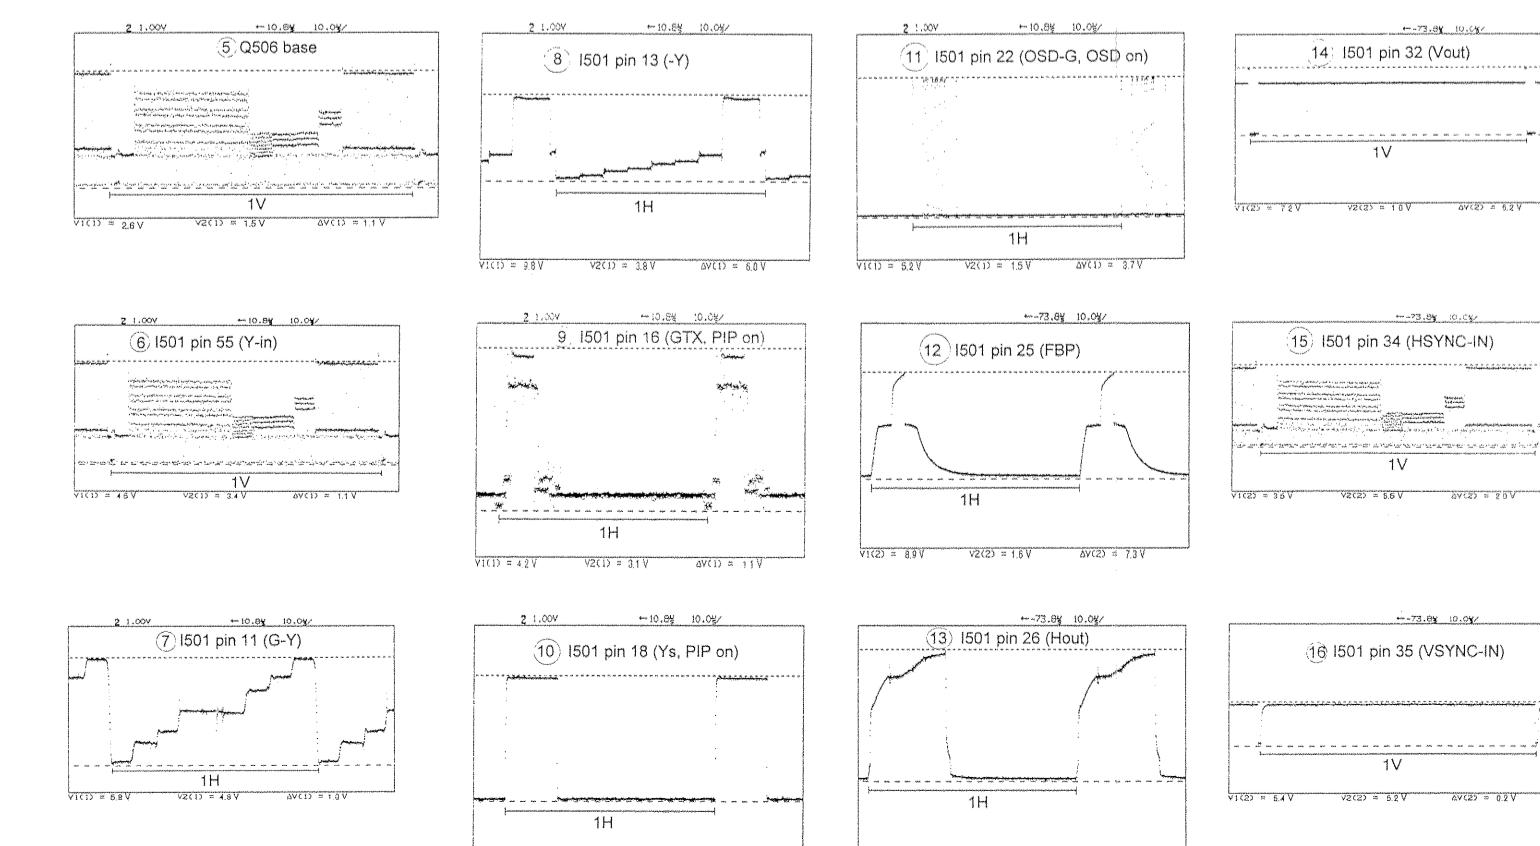


PRODUCT SAFETY NOTE: Components marked with a and shaded have special characteristics important to safety. Before replacing any of these components, read carefully the PRODUCT SAFETY NOTICE of this Service Manual. Don't degrade the safety of the receiver through improper servicing.

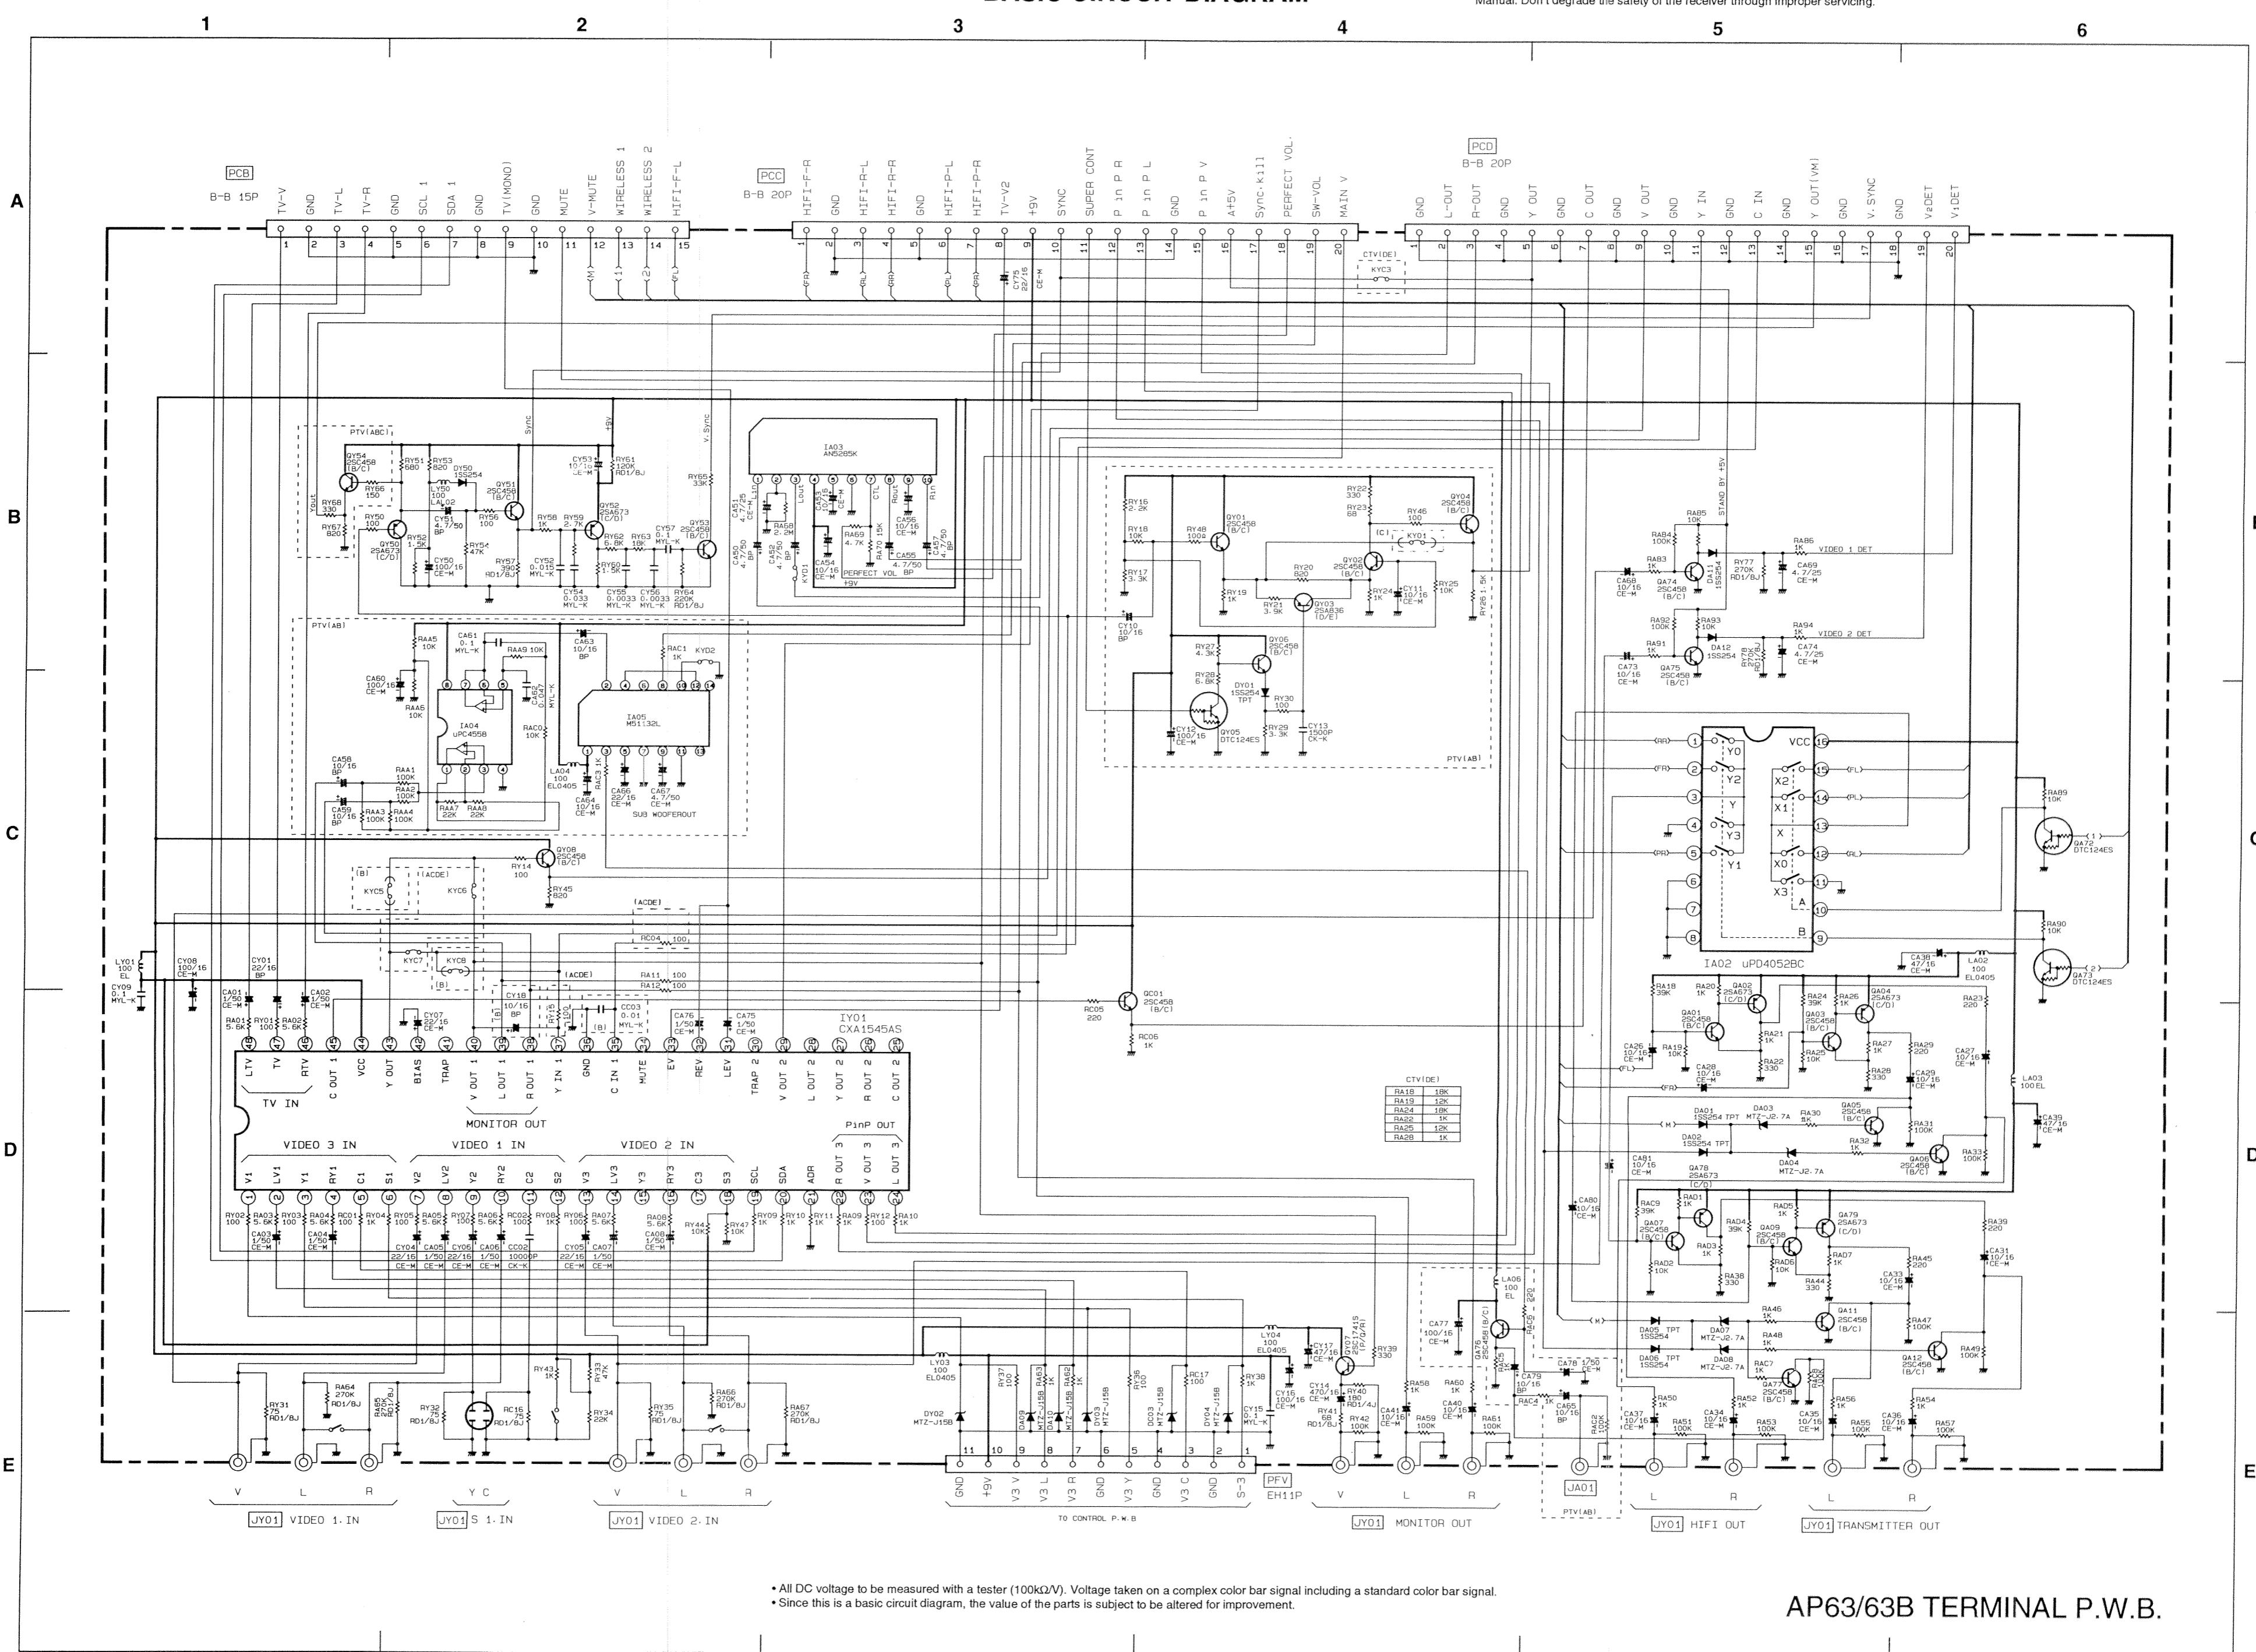

## BASIC CIRCUIT DIAGRAM

PRODUCT SAFETY NOTE: Components marked with a and shaded have special characteristics important to safety. Before replacing any of these components, read carefully the PRODUCT SAFETY NOTICE of this Service Manual. Don't degrade the safety of the receiver through improper servicing.

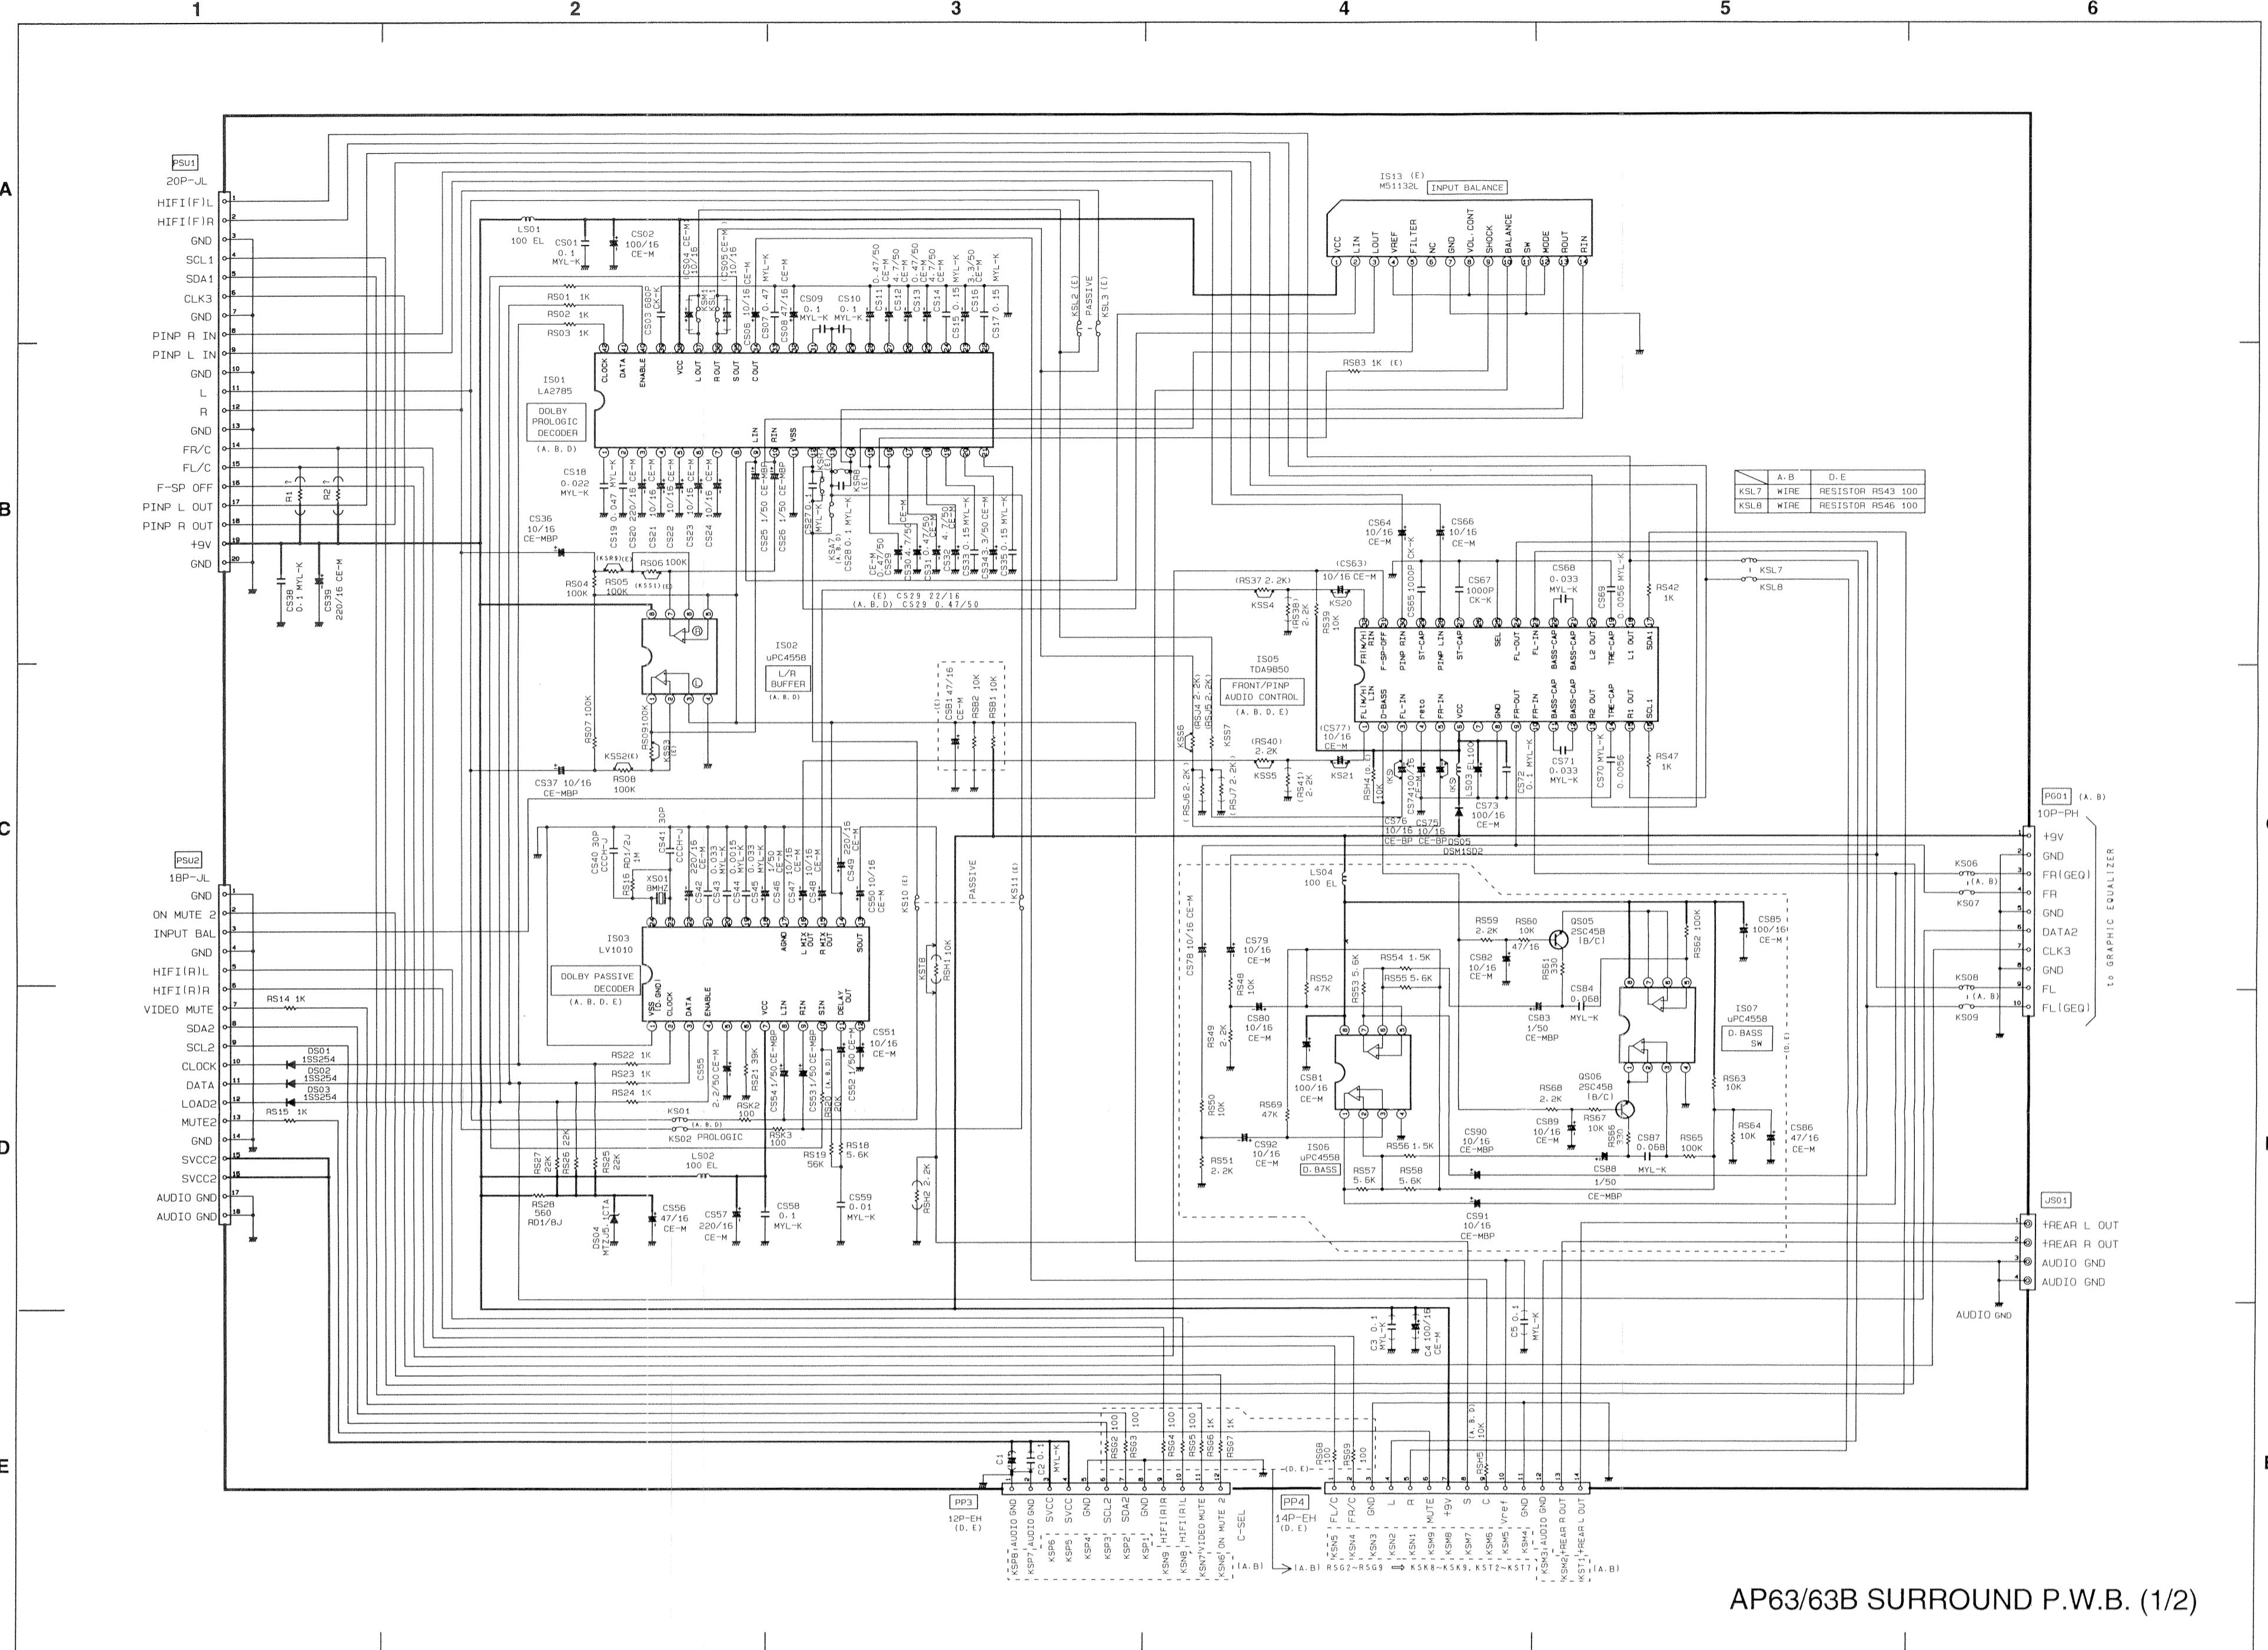

AP63/63B SURROUND P.W.B. (1/2)

All DC voltage to be measured with a tester (100kΩ/V). Voltage taken on a complex color bar signal including a standard color bar signal.  
Since this is a basic circuit diagram, the value of the parts is subject to be altered for improvement.

Circuit No.	Pin No.	Voltage VDC
1	4.4	
2	4.4	
3	4.5	
4	4.5	
5	4.5	
6	4.5	
7	4.5	
8	4.5	
9	4.4	
10	4.4	
11	0	
12	4.5	
13	4.5	
14	4.5	
15	4.5	
16	5.3	
17	4.5	
18	5.2	
19	5.3	
20	5.3	
21	5.3	
22	4.4	
23	4.3	
24	4.4	
25	5.2	
26	4.5	
27	5.2	
28	4.5	
29	4.5	
30	4.5	
31	4.5	
32	4.5	
33	4.5	
34	4.5	
35	4.5	
36	4.5	
37	4.5	
38	8.9	
39	0.1	
40	5.2	
41	5.1	
42	5.2	

Circuit No.	Pin No.	Voltage VDC
IS01	1	4.5
IS01	2	4.5
IS01	3	4.5
IS01	4	0
IS01	5	4.5
IS01	6	4.5
IS01	7	4.5
IS01	8	8.9
IS01	9	0.1
IS01	10	4.5
IS01	11	4.5
IS01	12	4.5
IS01	13	4.5
IS01	14	4.5
IS01	15	4.5
IS01	16	4.5
IS01	17	0
IS01	18	4.5
IS01	19	4.5
IS01	20	4.5
IS01	21	4.5
IS01	22	4.8
IS01	23	2.3
IS01	24	2.4


Circuit No.	Pin No.	Voltage VDC
IS02	1	4.5
IS02	2	4.5
IS02	3	4.5
IS02	4	0
IS02	5	4.5
IS02	6	4.5
IS02	7	4.5
IS02	8	4.4
IS02	9	4.4
IS02	10	4.5
IS02	11	4.5
IS02	12	4.5
IS02	13	4.5
IS02	14	4.5
IS02	15	4.5
IS02	16	4.5
IS02	17	0
IS02	18	4.5
IS02	19	4.5
IS02	20	4.5
IS02	21	4.5
IS02	22	4.8
IS02	23	2.3
IS02	24	2.4

Circuit No.	Pin No.	Voltage VDC
IS05	1	0
IS05	2	5.2
IS05	3	5.2
IS05	4	5.2
IS05	5	4.1
IS05	6	8.2
IS05	7	4.1
IS05	8	0
IS05	9	4.1
IS05	10	4.1
IS05	11	4.1
IS05	12	4.1
IS05	13	4.1
IS05	14	4.1
IS05	15	4.1
IS05	16	5.0

Circuit No.	Pin No.	Voltage VDC
IS05	17	5.0
IS05	18	4.1
IS05	19	4.1
IS05	20	4.1
IS05	21	4.1
IS05	22	4.1
IS05	23	4.1
IS05	24	4.1
IS05	25	0
IS05	26	4.1
IS05	27	4.1
IS05	28	4.1
IS05	29	4.1
IS05	30	4.1
IS05	31	3.5
IS05	32	4.1

## **BASIC CIRCUIT DIAGRAM**

**PRODUCT SAFETY NOTE:** Components marked with a  and shaded have special characteristics important to safety. Before replacing any of these components, read carefully the PRODUCT SAFETY NOTICE of this Service Manual. Don't degrade the safety of the receiver through improper servicing.

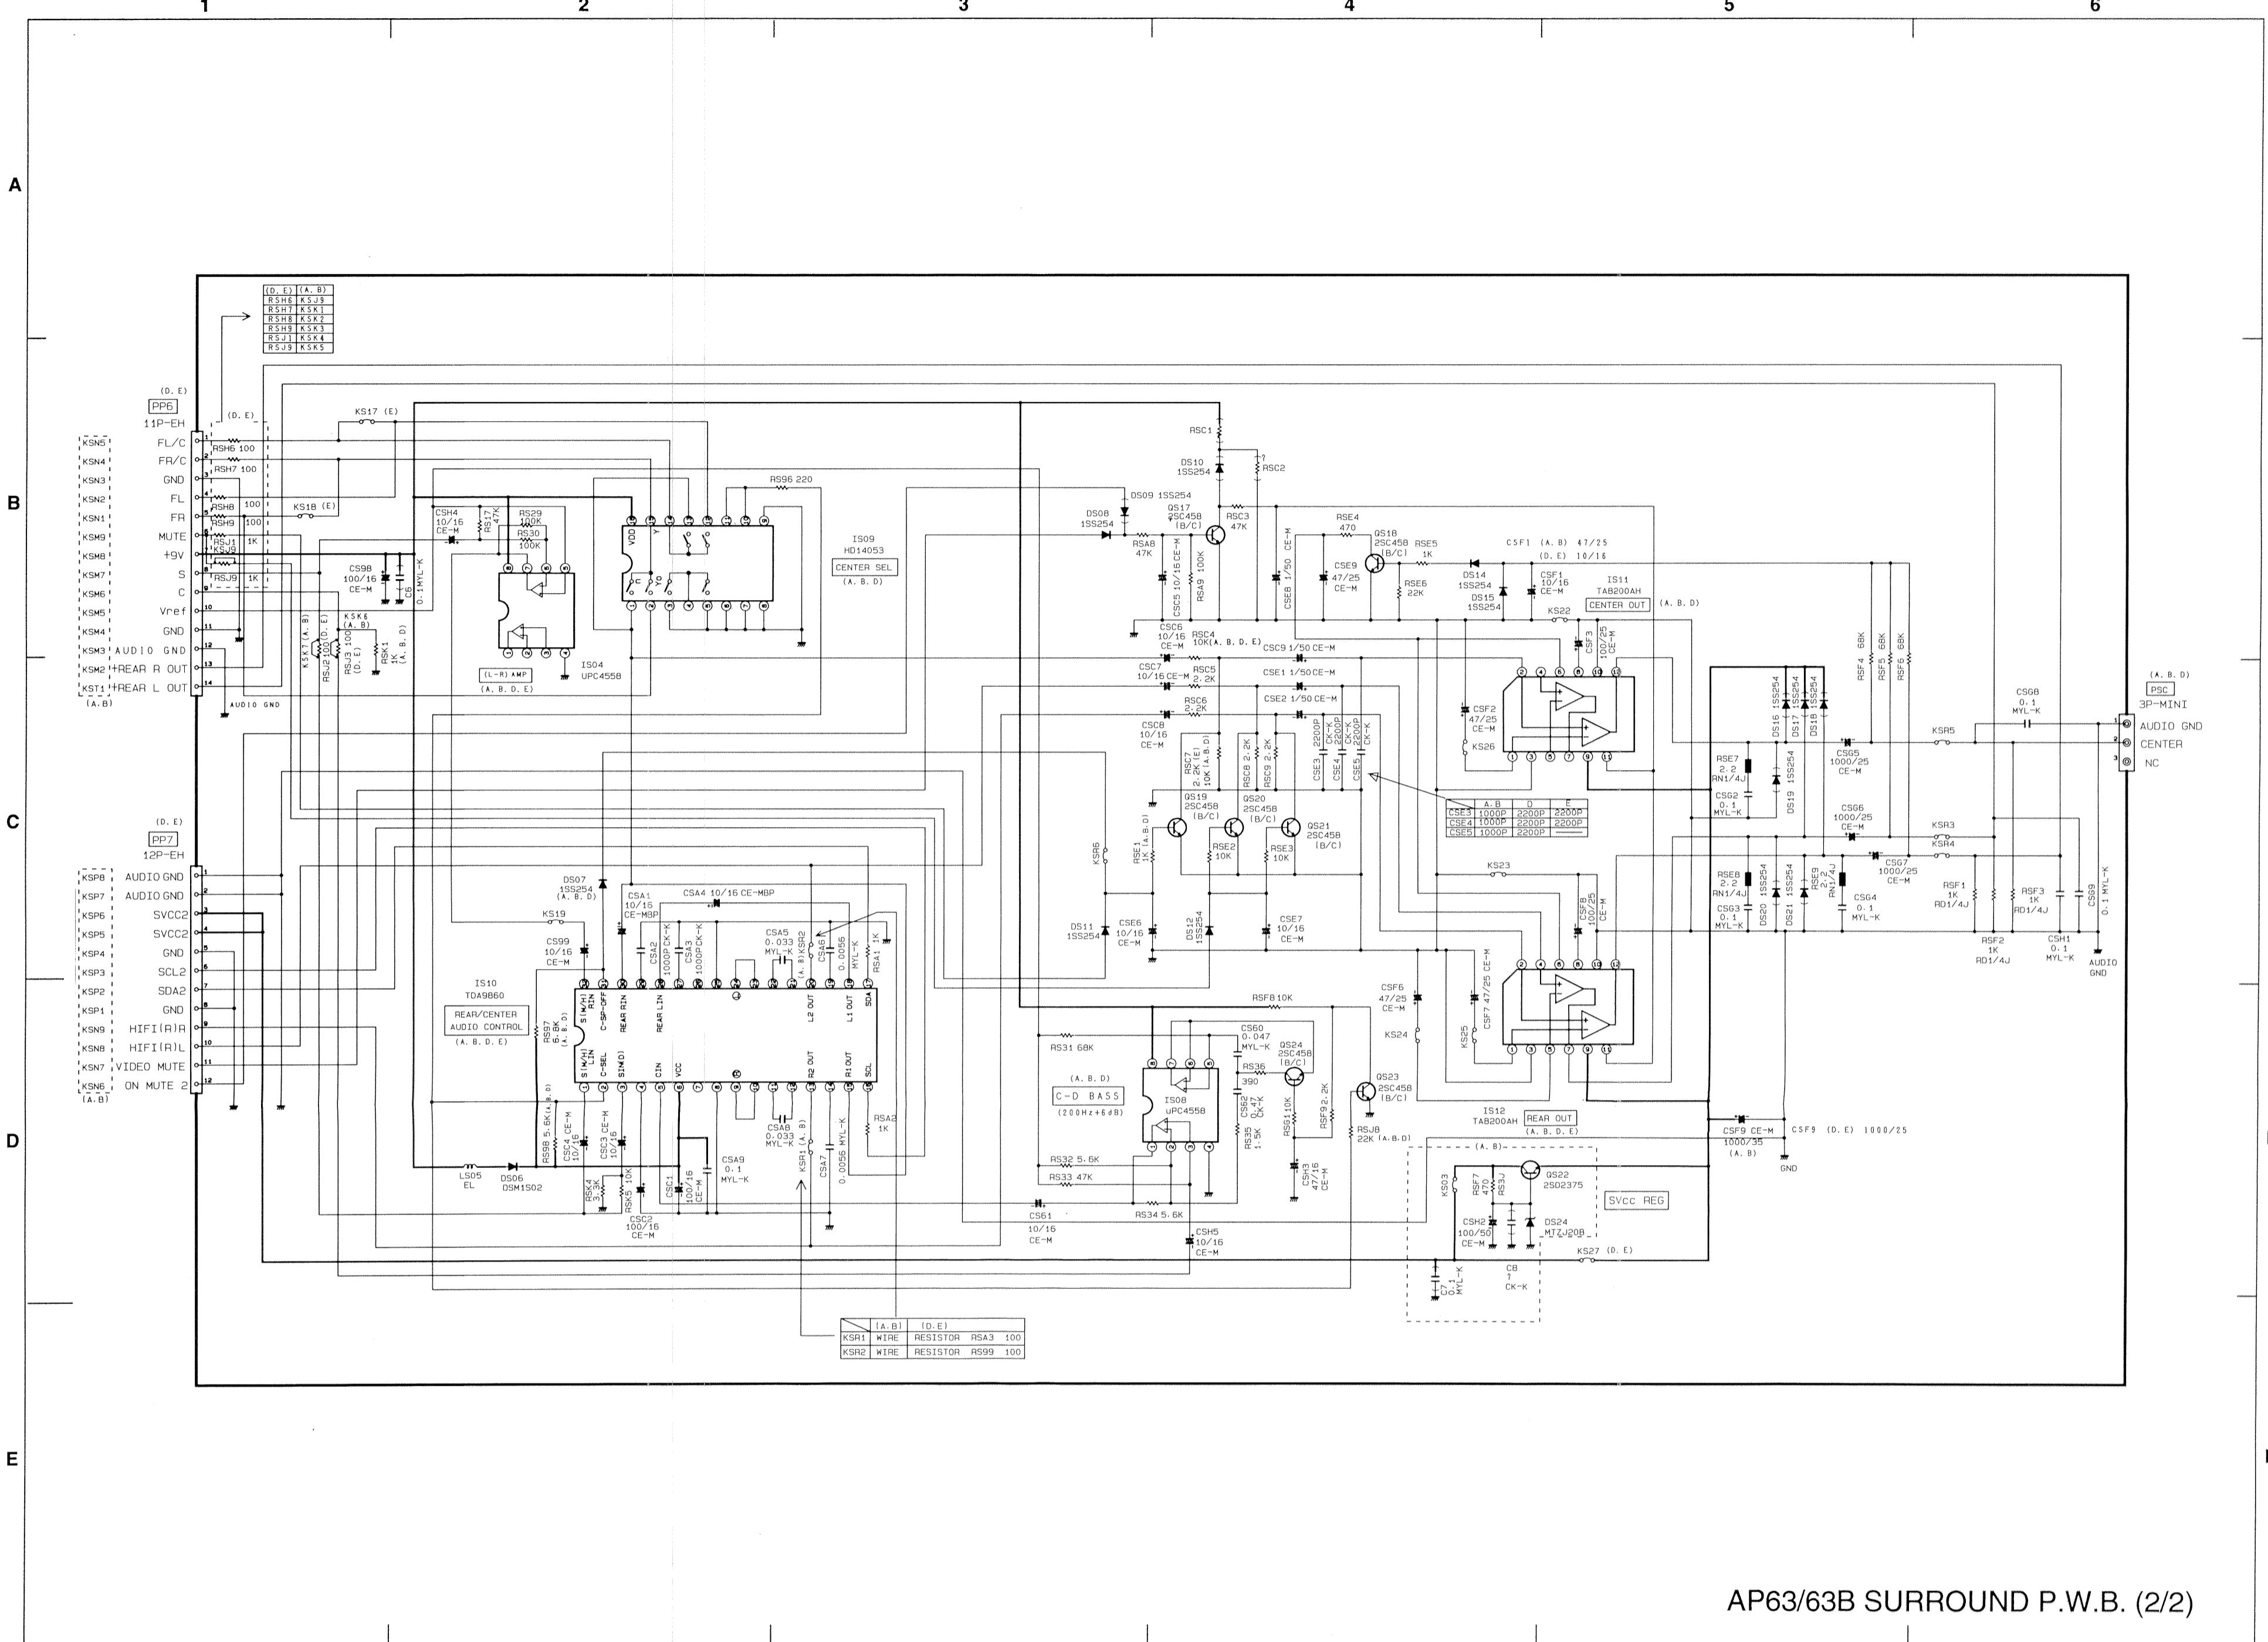

## AP63/63B SURROUND P.W.B. (2/2)

- All DC voltage to be measured with a tester ( $100\text{k}\Omega/\text{V}$ ). Voltage taken on a complex color bar signal including a standard color bar signal.
- Since this is a basic circuit diagram, the value of the parts is subject to be altered for improvement.

Circuit No.	Pin No.	Voltage VDC
IS04	1	8.5
	2	1.0
	3	1.0
	4	0
	5	4.5
	6	4.5
	7	4.5

Circuit No.	Pin No.	Voltage VDC
IS08	1	4.5
	2	4.5
	3	4.5
	4	0
	5	4.5
	6	4.5
	7	4.5
	8	8.9

Circuit No.	Pin No.	Voltage VDC
	1	4.1
	2	4.1
	3	0
	4	0
	5	0
	6	0
	7	0

9	0
10	0.3
11	0.3
12	4.1
13	4.1
14	4.1
15	4.1

Circuit No.	Pin No.	Voltage VDC
	1	4.1
	2	0.3
	3	4.1
	4	8.1
	5	4.1
	6	8.2
	7	4.1

9	4.1
10	4.1
11	4.1
12	4.1
13	4.1
14	4.1
15	4.1

Circuit No.	Pin No.	Voltage VDC
	17	4.9
	18	4.1
	19	4.1
	20	4.1
	21	4.1
	22	4.1
	23	4.1


25	0
26	4.1
27	4.1
28	4.1
29	4.1
30	4.1
31	2.2
32	4.1

Circuit No.	Pin No.	Voltage VDC
	1	1.6
	2	0
	3	0
	4	0
	5	1.6
611	6	6.6
	7	9.3

Circuit No.	Pin No.	Voltage VDC
12	1	1.6
	2	0
	3	0
	4	0
	5	1.6
	6	6.6
	7	1.3
	8	5.1
	9	19.6
	10	0
	11	4.4
	12	9.1

## BASIC CIRCUIT DIAGRAM

PRODUCT SAFETY NOTE: Components marked with a and shaded have special characteristics important to safety. Before replacing any of these components, read carefully the PRODUCT SAFETY NOTICE of this Service Manual. Don't degrade the safety of the receiver through improper servicing.

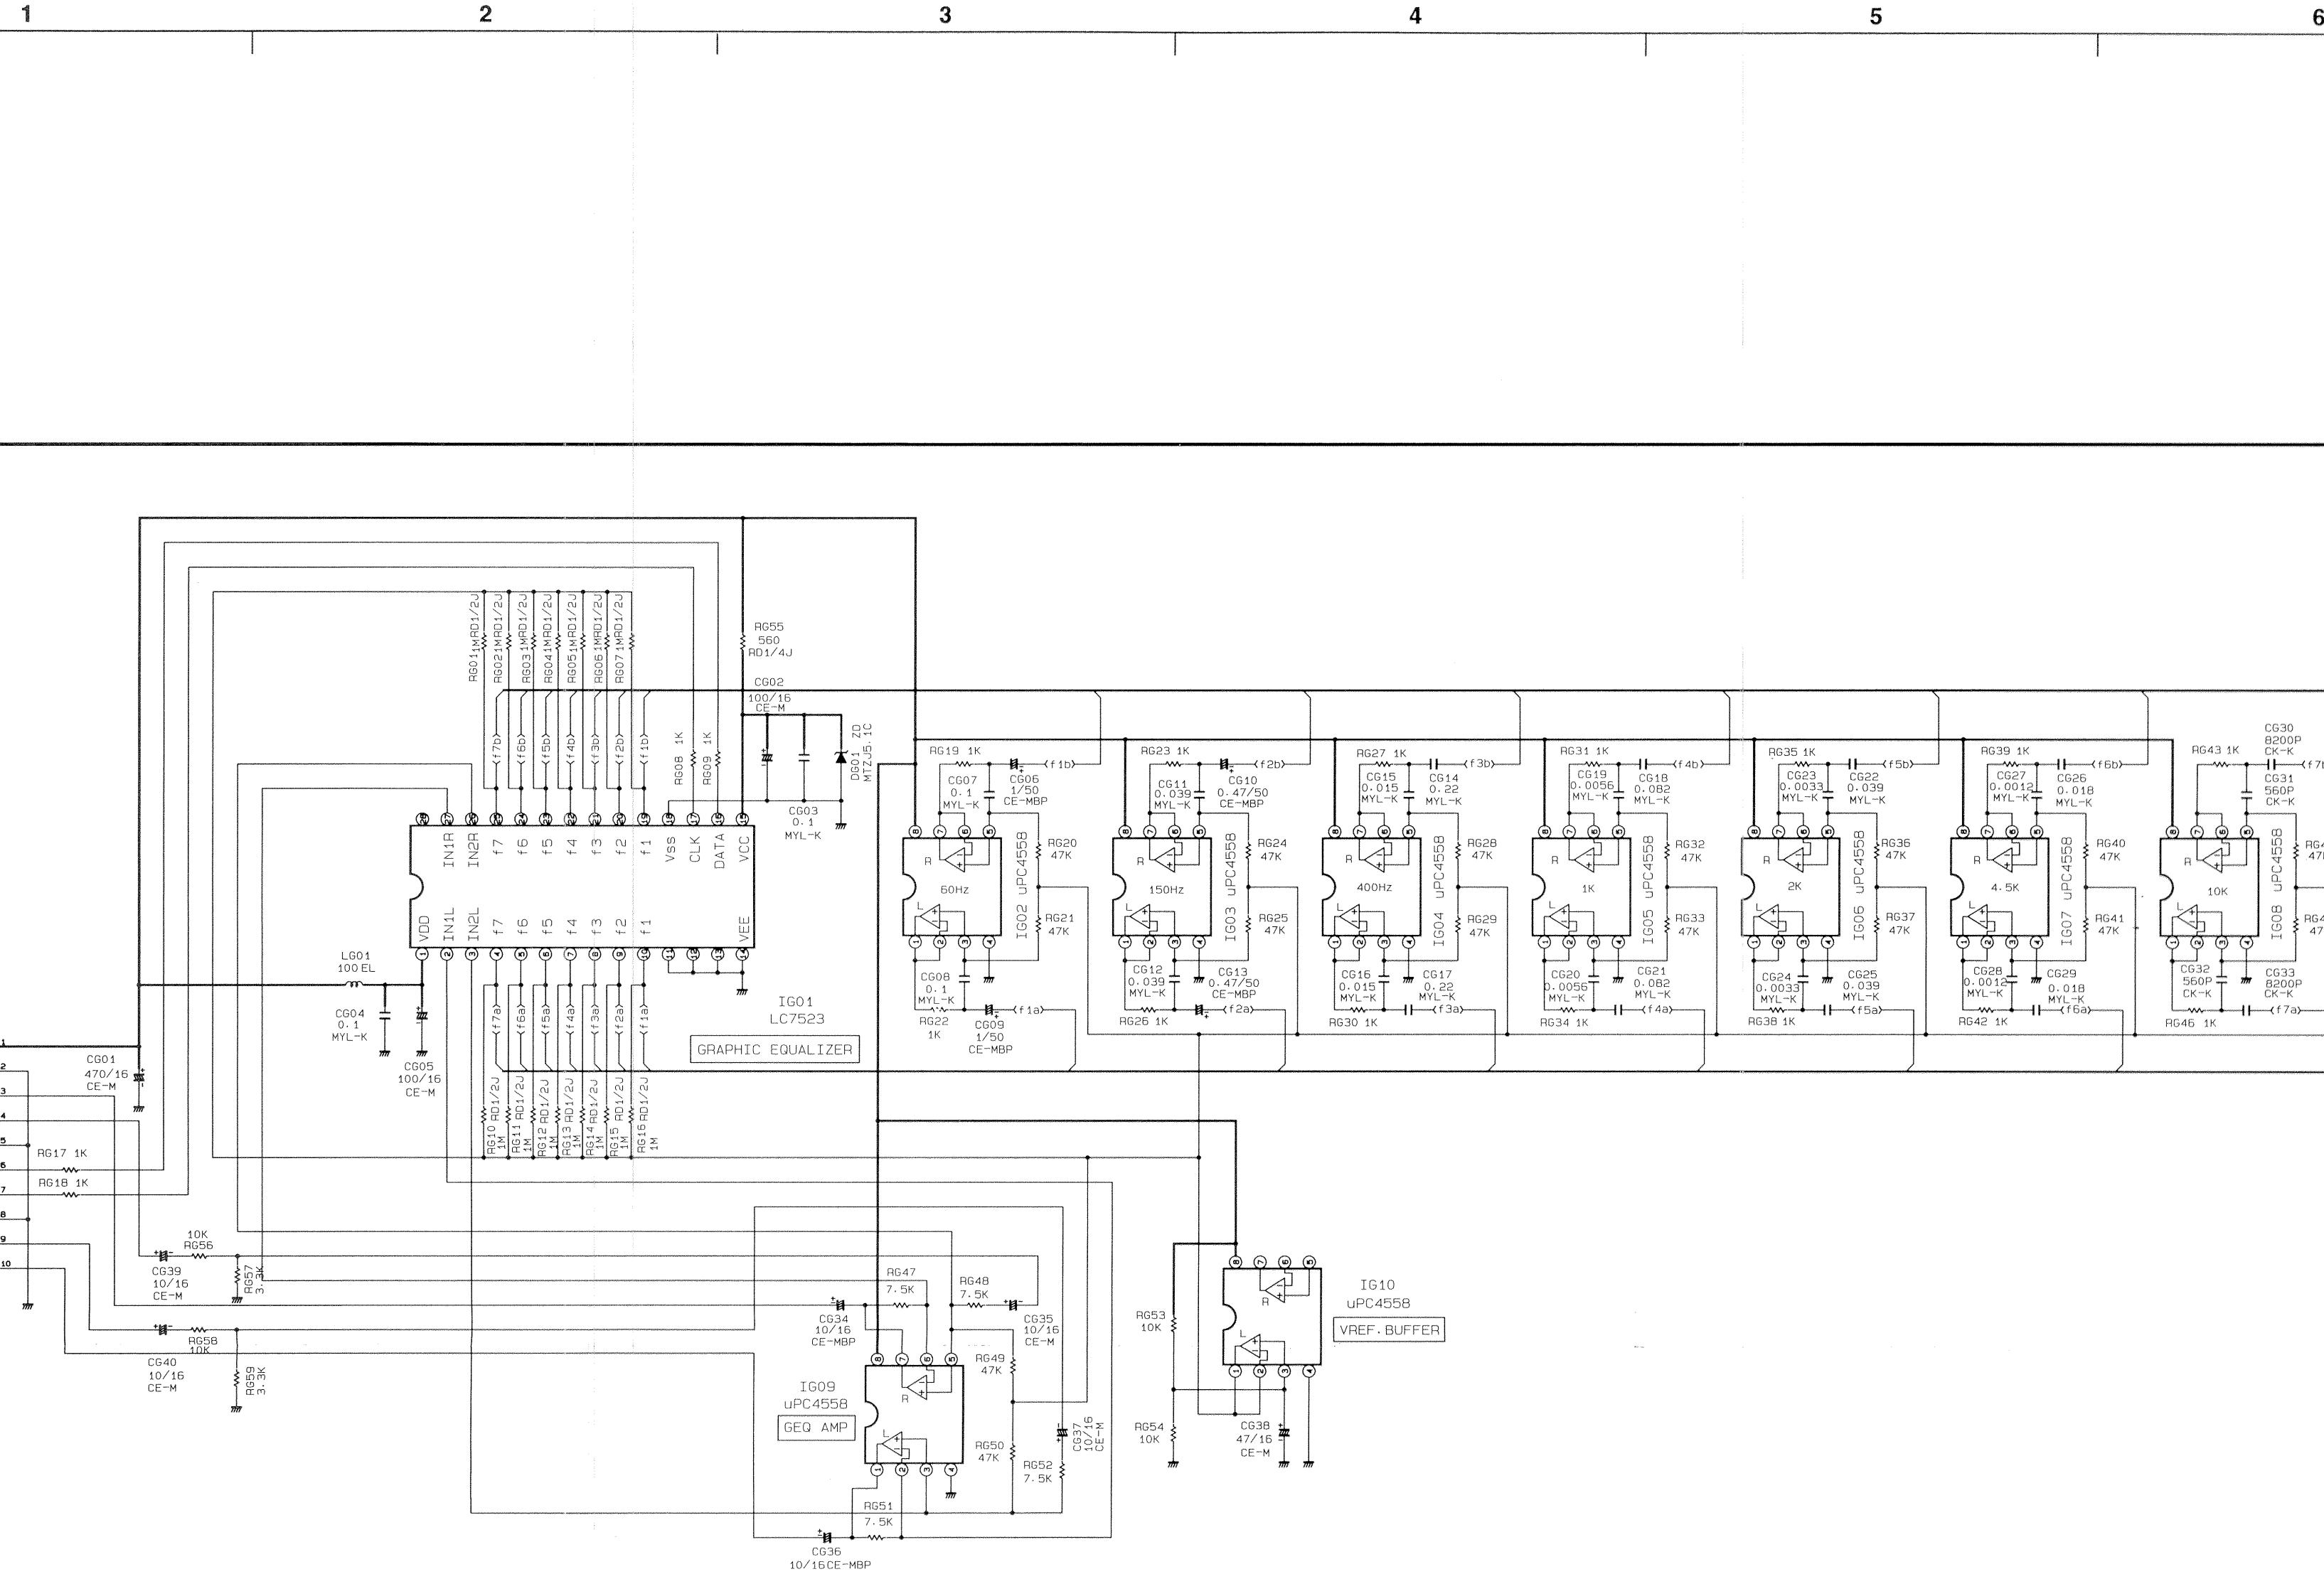


AP63/63B GRAPHIC EQ. P.W.B.

Circuit No.	Pin No.	Voltage VDC	Circuit No.	Pin No.	Voltage VDC	Circuit No.	Pin No.	Voltage VDC	Circuit No.	Pin No.	Voltage VDC	Circuit No.	Pin No.	Voltage VDC
1	8.9		1	4.5		1	4.5		1	4.5		1	4.5	
2	4.5		2	4.5		2	4.5		2	4.5		2	4.5	
3	4.4		3	4.4		3	4.4		3	4.4		3	4.4	
4	4.1		4	0		4	0		4	0		4	0	
5	4.1		5	4.4		5	4.4		5	4.4		5	4.4	
6	4.1		6	4.5		6	4.5		6	4.5		6	4.5	
7	4.1		7	4.5		7	4.5		7	4.5		7	4.5	
8	4.1		8	8.9		8	8.9		8	8.9		8	8.9	
9	4.1													
10	4.1													
11	0													
12	0													
13	0													
14	0													
15	5.2													
16	5.2													
17	0													
18	0													
19	4.1													
20	4.1													
21	4.1													
22	4.1													
23	4.1													
24	4.1													
25	4.1													
26	4.4													
27	4.5													
28	0													

\* All DC voltage to be measured with a tester (100kΩ/V). Voltage taken on a complex color bar signal including a standard color bar signal.  
\* Since this is a basic circuit diagram, the value of the parts is subject to be altered for improvement.

## BASIC CIRCUIT DIAGRAM

PRODUCT SAFETY NOTE: Components marked with a and shaded have special characteristics important to safety. Before replacing any of these components, read carefully the PRODUCT SAFETY NOTICE of this Service Manual. Don't degrade the safety of the receiver through improper servicing.

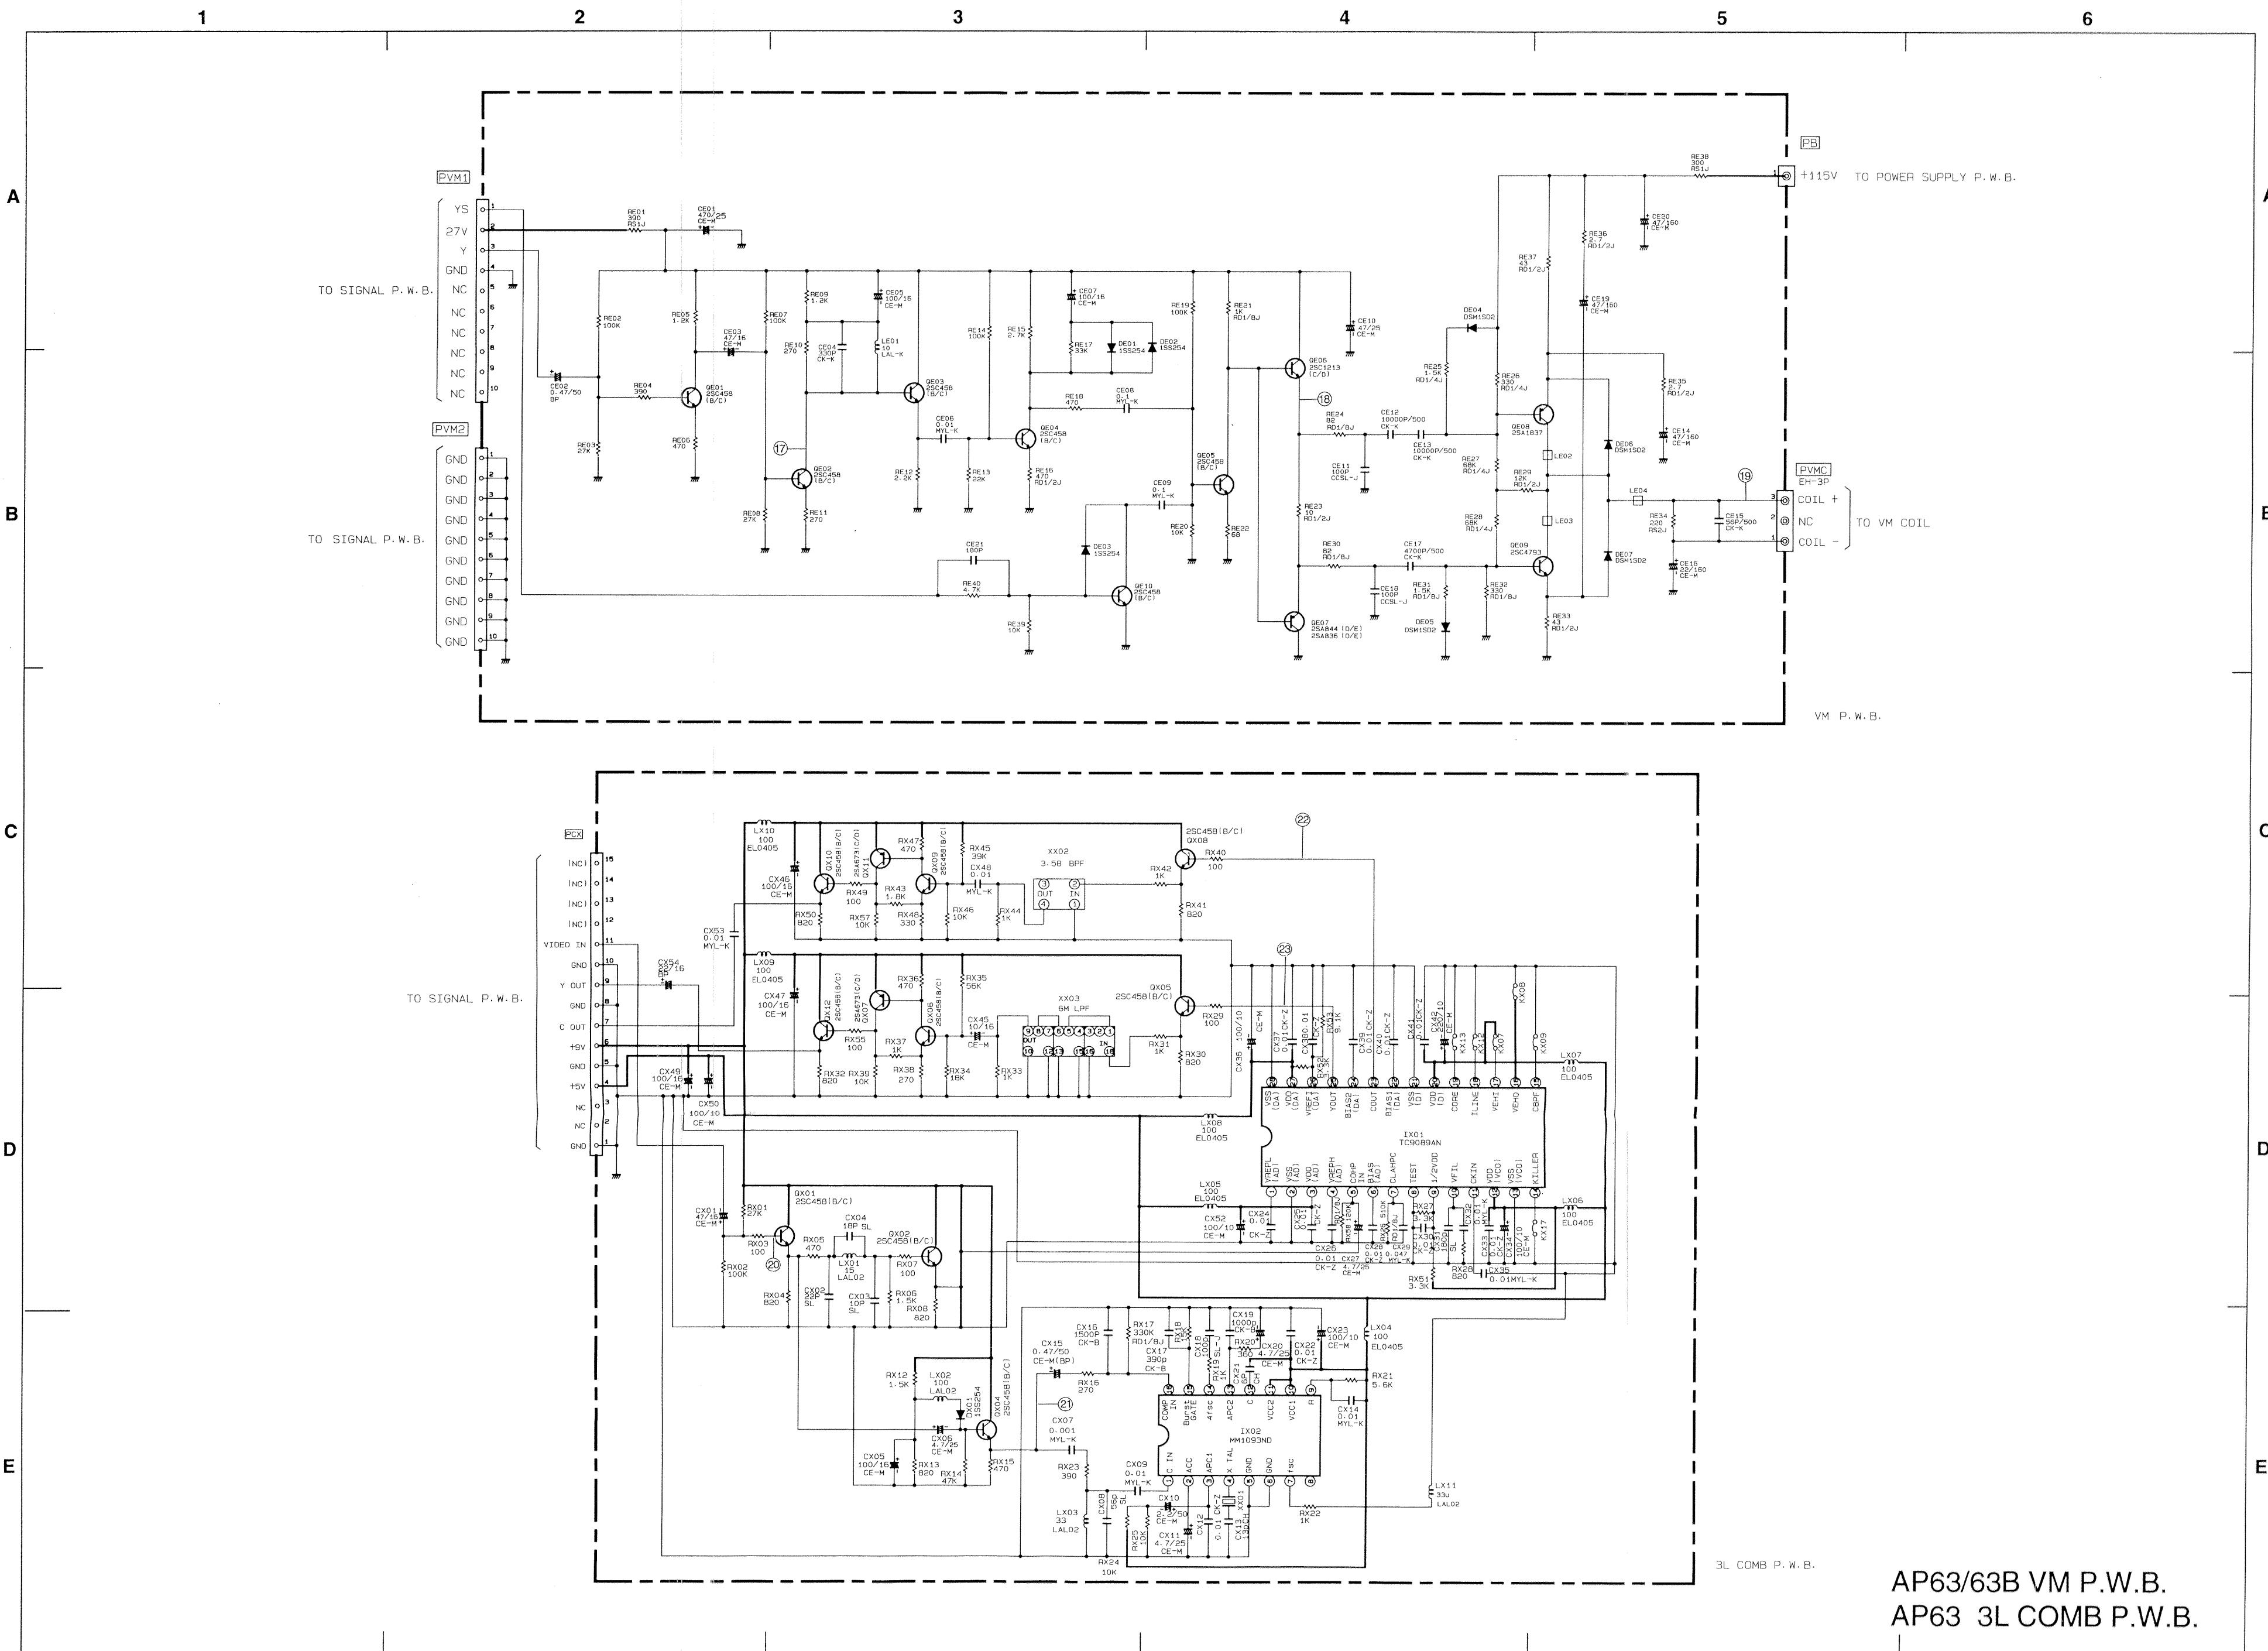


1 2 3 4 5 6

All DC voltage to be measured with a tester (100kΩ/V). Voltage taken on a complex color bar signal including a standard color bar signal.  
Since this is a basic circuit diagram, the value of the parts is subject to be altered for improvement.

Circuit No.	Pin No.	Voltage VDC
1	1.5	
2	0	
3	5.2	
4	3.6	
5	2.3	
6	1.5	
7	3.5	
8	0	
9	2.6	
10	2.0	
11	2.2	
12	5.2	
13	0	
14	0	
15	0	
16	0	
17	5.1	
18	0	
19	0	
20	5.1	
21	0	
22	3.7	
23	4.4	
24	1.9	
25	4.2	
26	3.8	
27	5.1	
28	0	

Circuit No.	Pin No.	Voltage VDC
1	3.6	
2	0.9	
3	2.5	
4	3.5	
5	0	
6	0	
7	2.4	
8	0	
9	3.6	
10	5.1	
11	5.1	
12	3.4	
13	2.2	
14	3.2	
15	0.8	
16	2.8	


Circuit No.	Pin No.	Voltage VDC
QX01	B	6.1
QX01	C	9.0
QX01	E	5.4
QX02	B	4.1
QX02	C	9.0
QX02	E	3.4
QX03	B	5.0
QX03	C	9.0
QX03	E	2.8
QX04	B	4.3
QX04	C	8.9
QX04	E	3.6
QX05	B	2.1
QX05	C	8.9
QX05	E	1.4
QX06	B	5.3
QX06	C	8.3
QX06	E	8.3
QX07	B	5.3
QX07	C	5.3
QX07	E	8.9

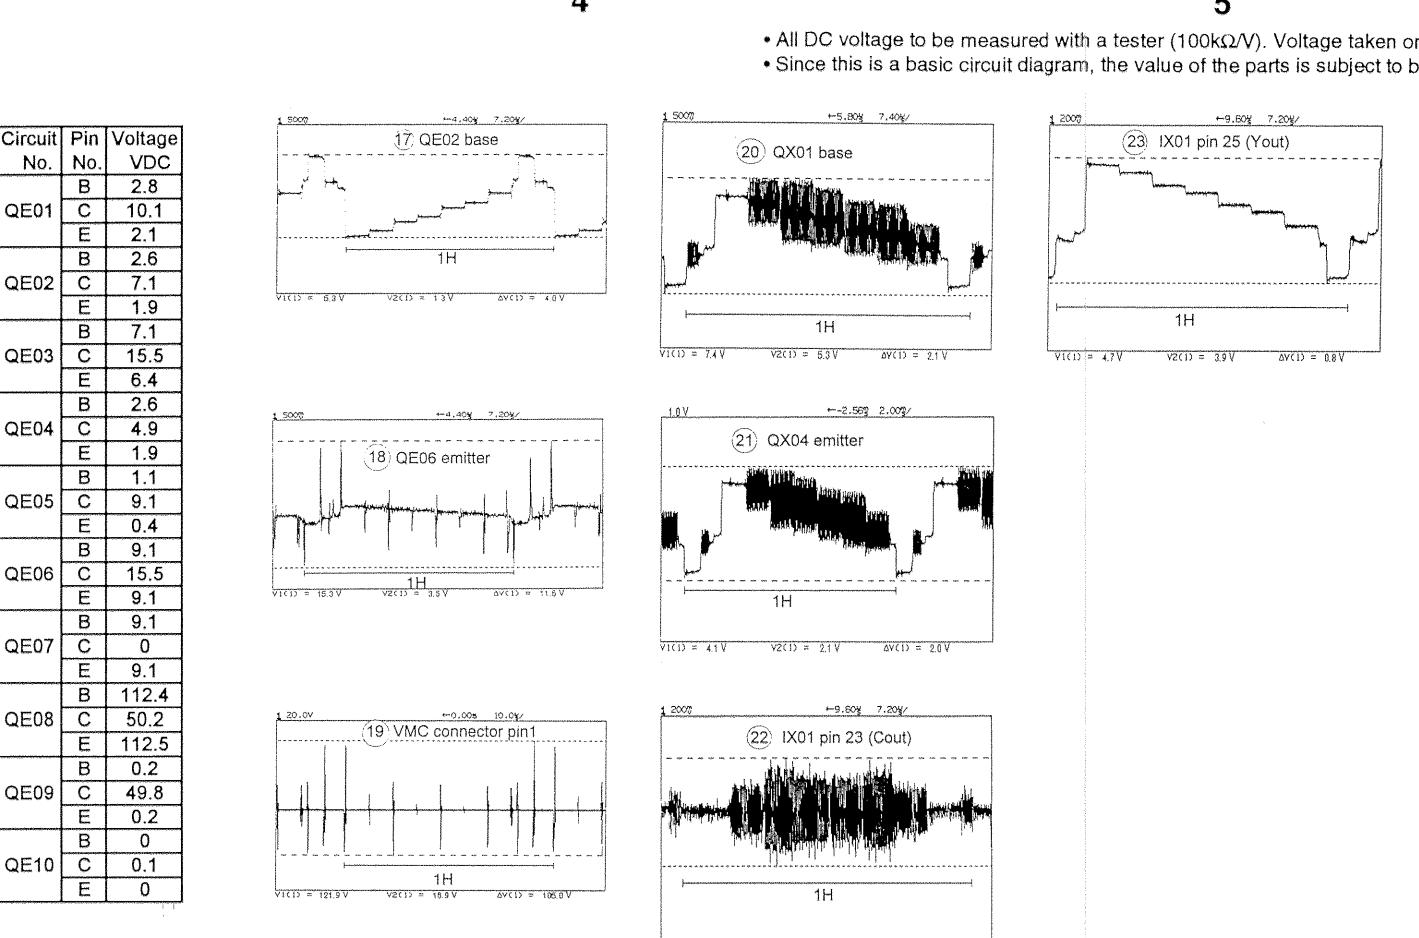

## BASIC CIRCUIT DIAGRAM

PRODUCT SAFETY NOTE: Components marked with a and shaded have special characteristics important to safety. Before replacing any of these components, read carefully the PRODUCT SAFETY NOTICE of this Service Manual. Don't degrade the safety of the receiver through improper servicing.

1 2 3 4 5 6

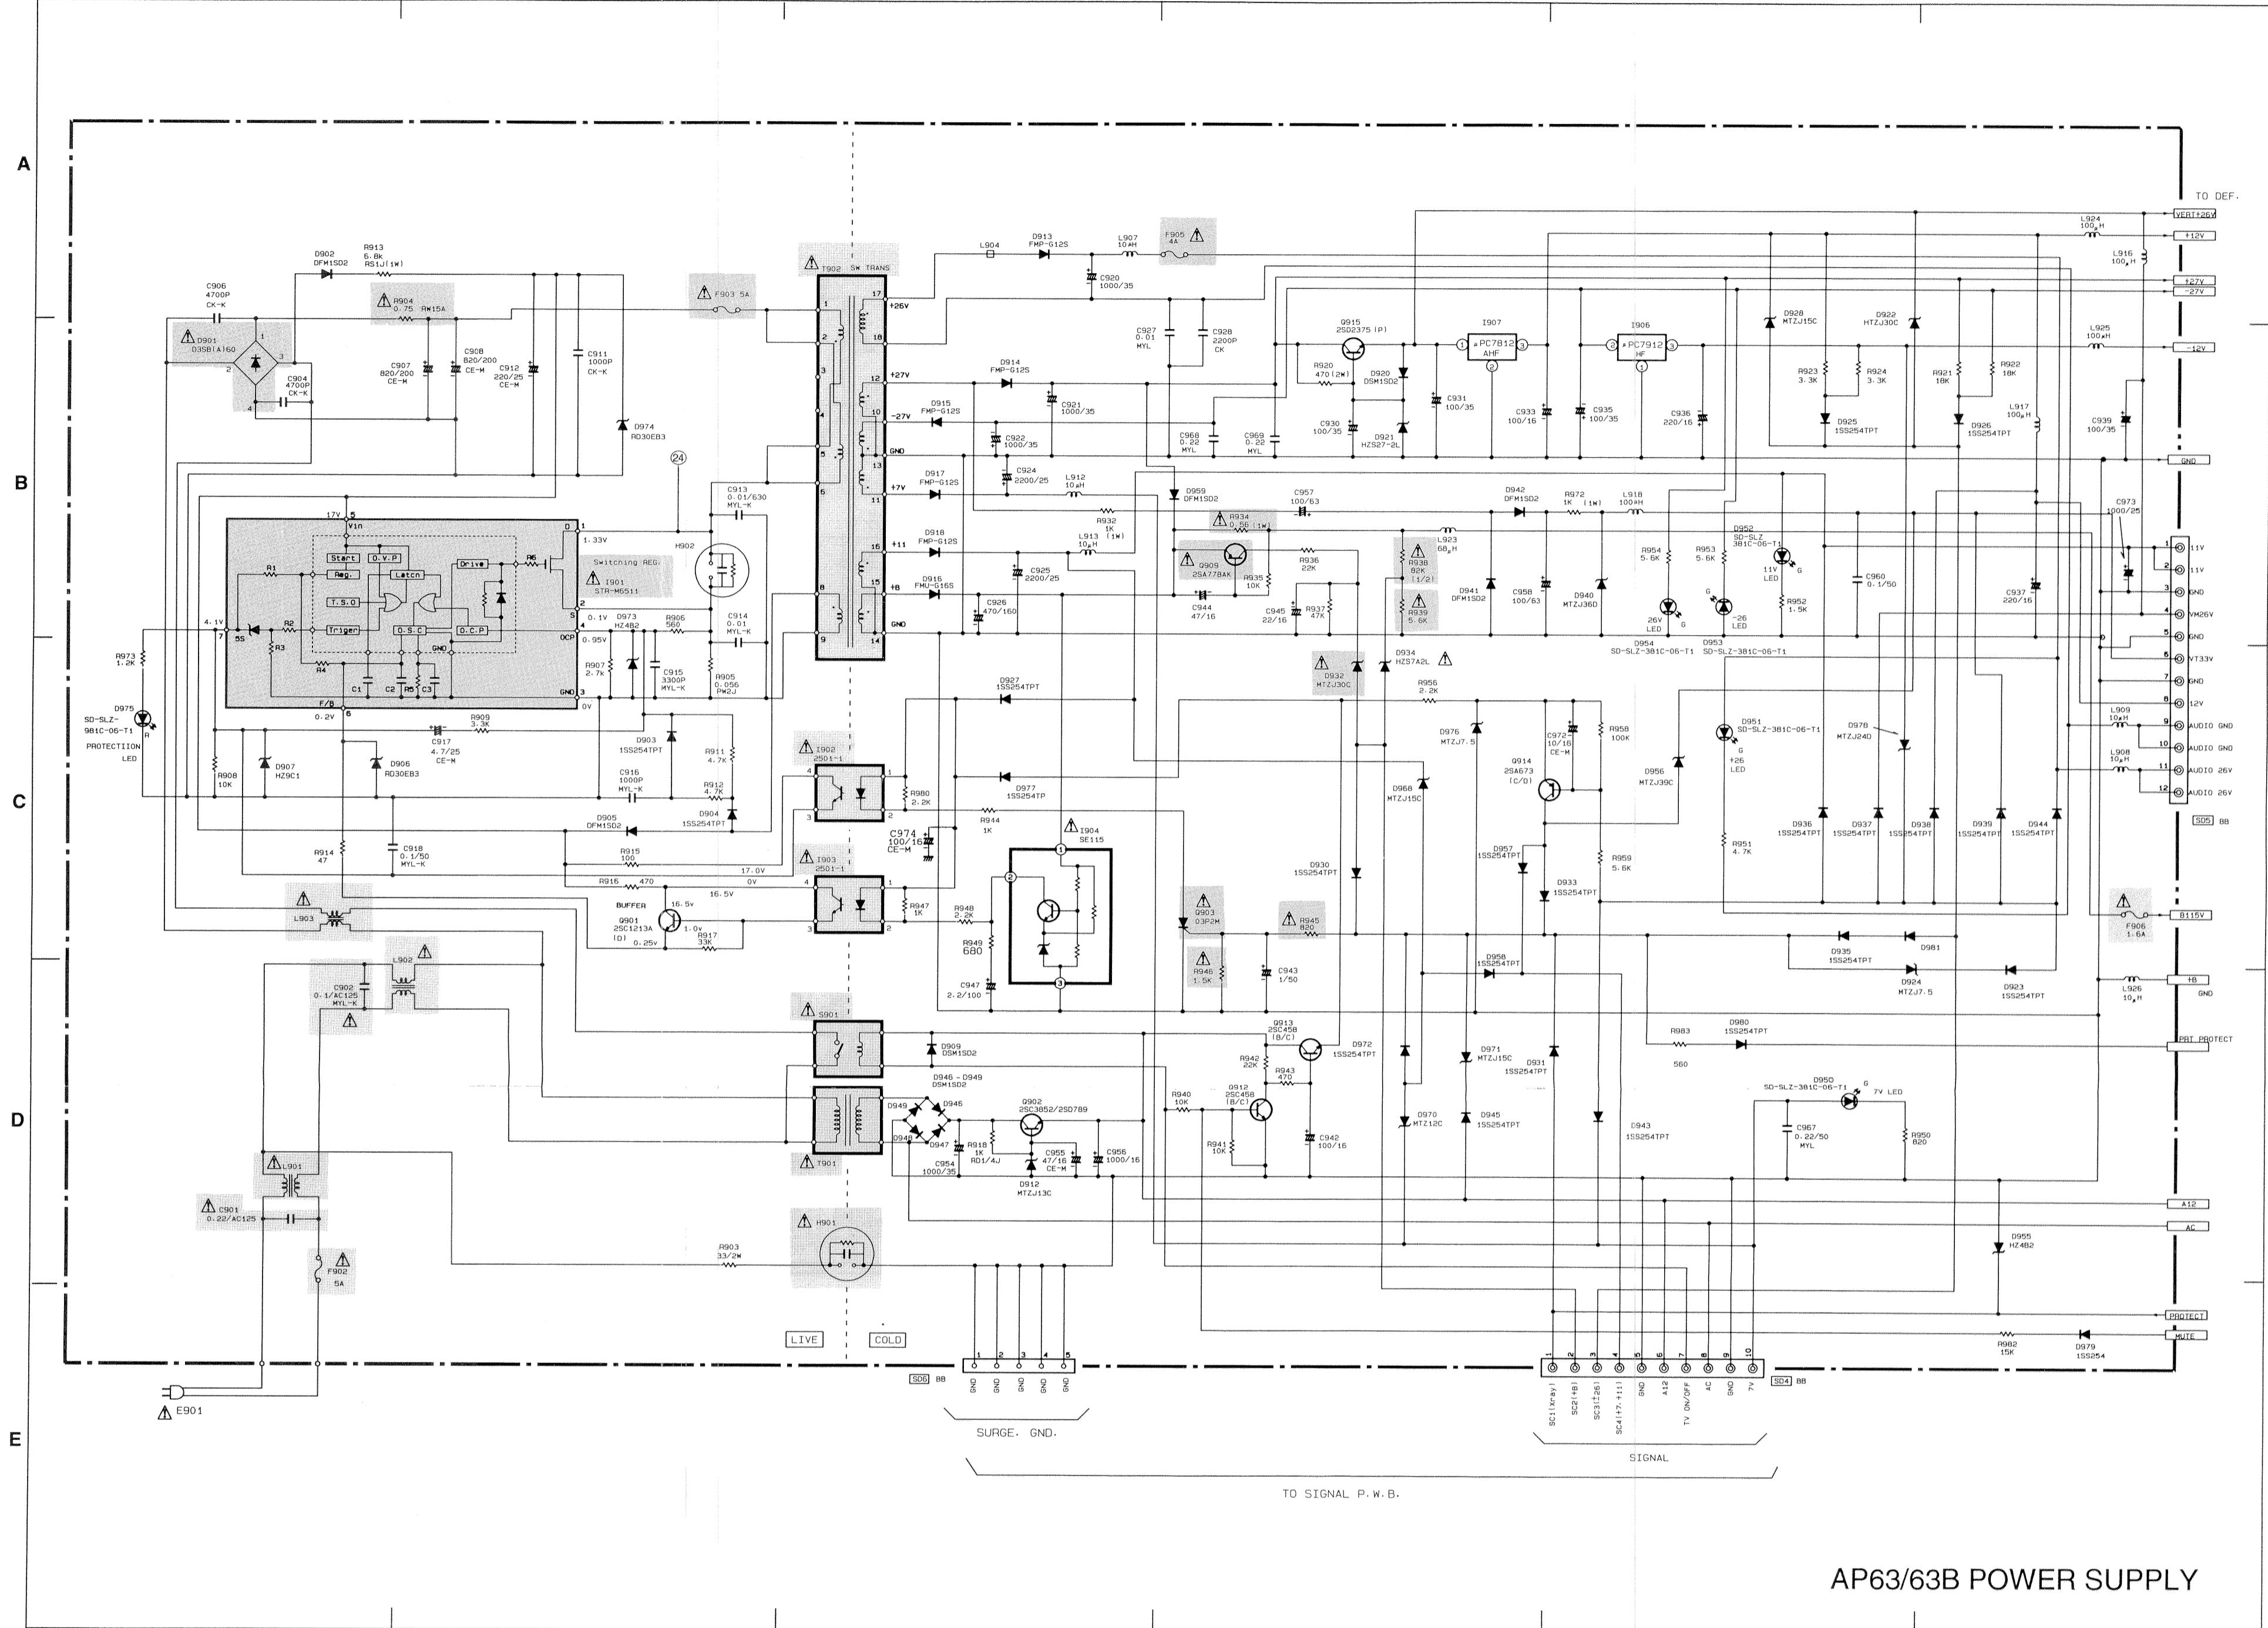

AP63/63B POWER SUPPLY

1 2 3 4 5 6

Circuit No.	Pin No.	Voltage VDC
I901	1	162.2
	2	0.1
	3	0
	4	1.4
	5	18.9
	6	0.2
	7	3.3


Circuit No.	Pin No.	Voltage VDC
I902	1	12.1
	2	12.1
	3	3.3
	4	18.9

Circuit No.	Pin No.	Voltage VDC
I903	1	12.1
	2	11.2
	3	1.0
	4	18.5

Circuit No.	Pin No.	Voltage VDC
I904	1	114.9
	2	9.1
	3	0
	4	1.4
	5	18.5
	6	0.2
	7	3.3

Circuit No.	Pin No.	Voltage VDC
I906	1	25.6
	2	-26.7
	3	-12.2
	4	-12.2

Circuit No.	Pin No.	Voltage VDC
I907	1	25.6
	2	0
	3	11.9
	4	11.9

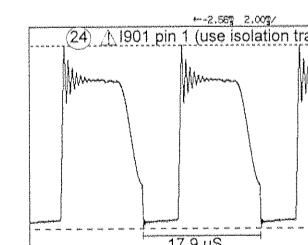


• All DC voltage to be measured with a tester (100kΩ/V). Voltage taken on a complex color bar signal including a standard color bar signal.  
• Since this is a basic circuit diagram, the value of the parts is subject to be altered for improvement.

## BASIC CIRCUIT DIAGRAM


PRODUCT SAFETY NOTE: Components marked with a  $\triangle$  and shaded have special characteristics important to safety. Before replacing any of these components, read carefully the PRODUCT SAFETY NOTICE of this Service Manual. Don't degrade the safety of the receiver through improper servicing.

1 2 3 4 5 6

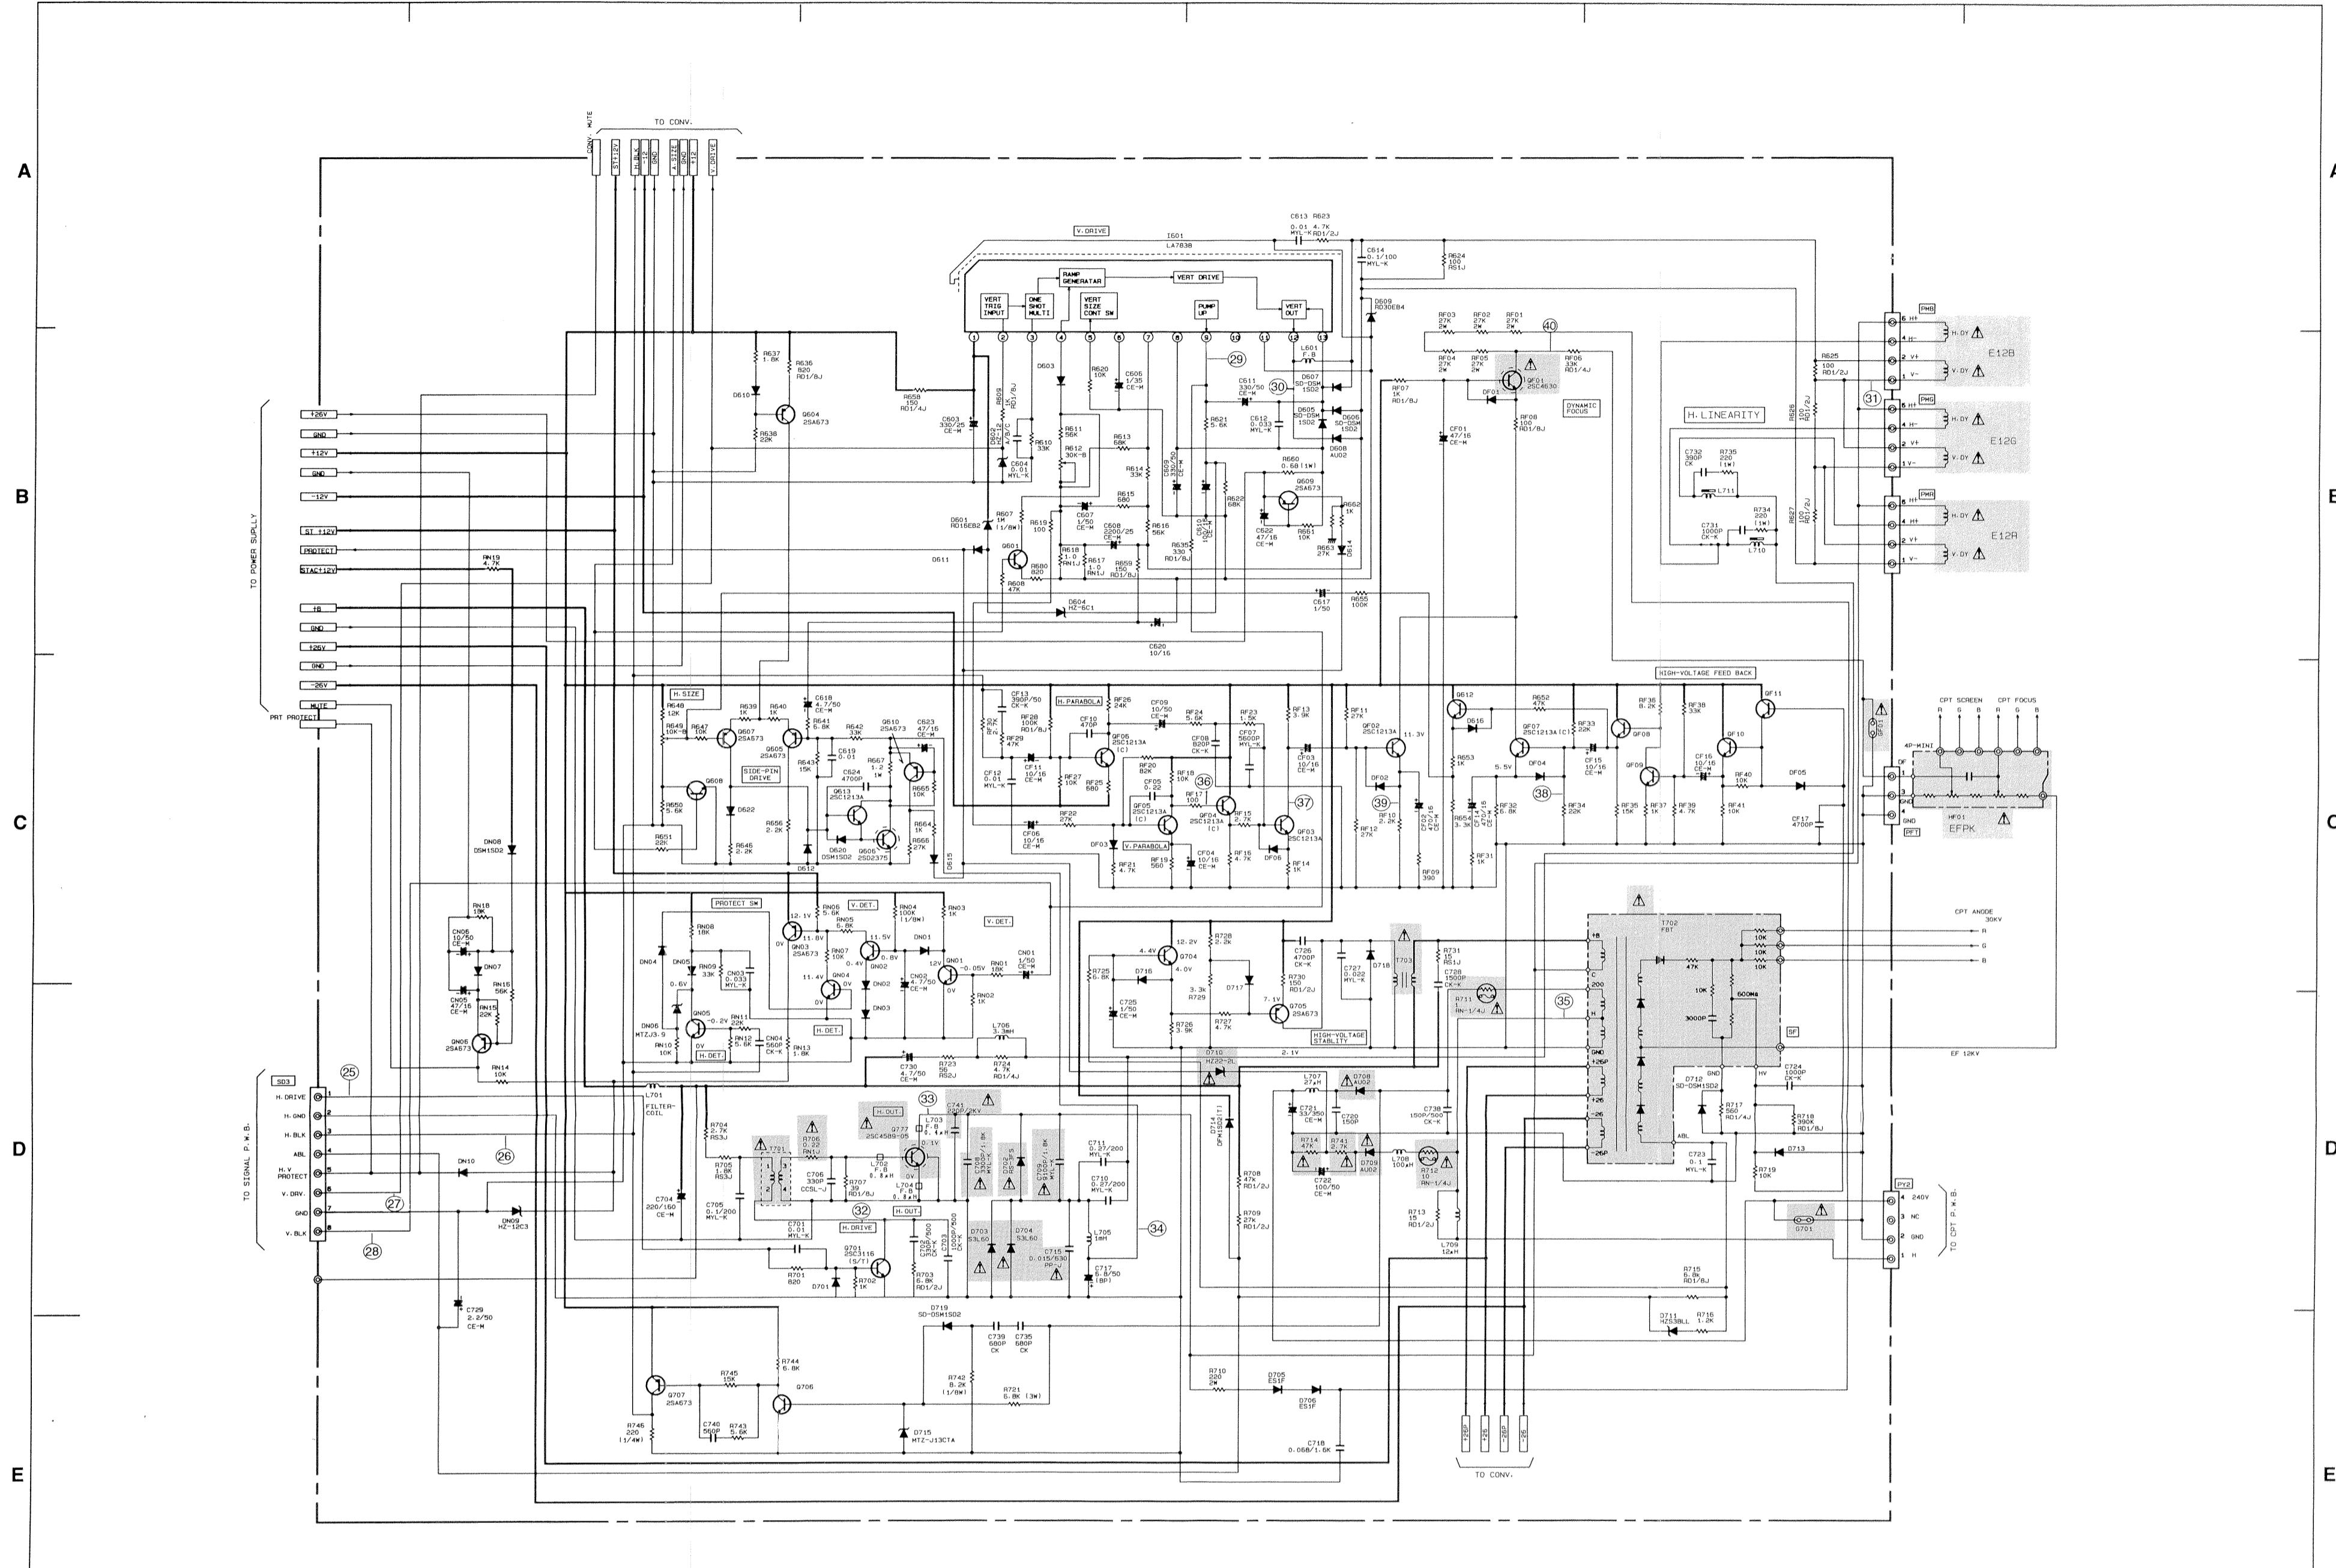


\* All DC voltage to be measured with a tester (100k $\Omega$ /V). Voltage taken on a complex color bar signal including a standard color bar signal.  
 \* Since this is a basic circuit diagram, the value of the parts is subject to be altered for improvement.

## AP63/63B CHASSIS DEFLECTION

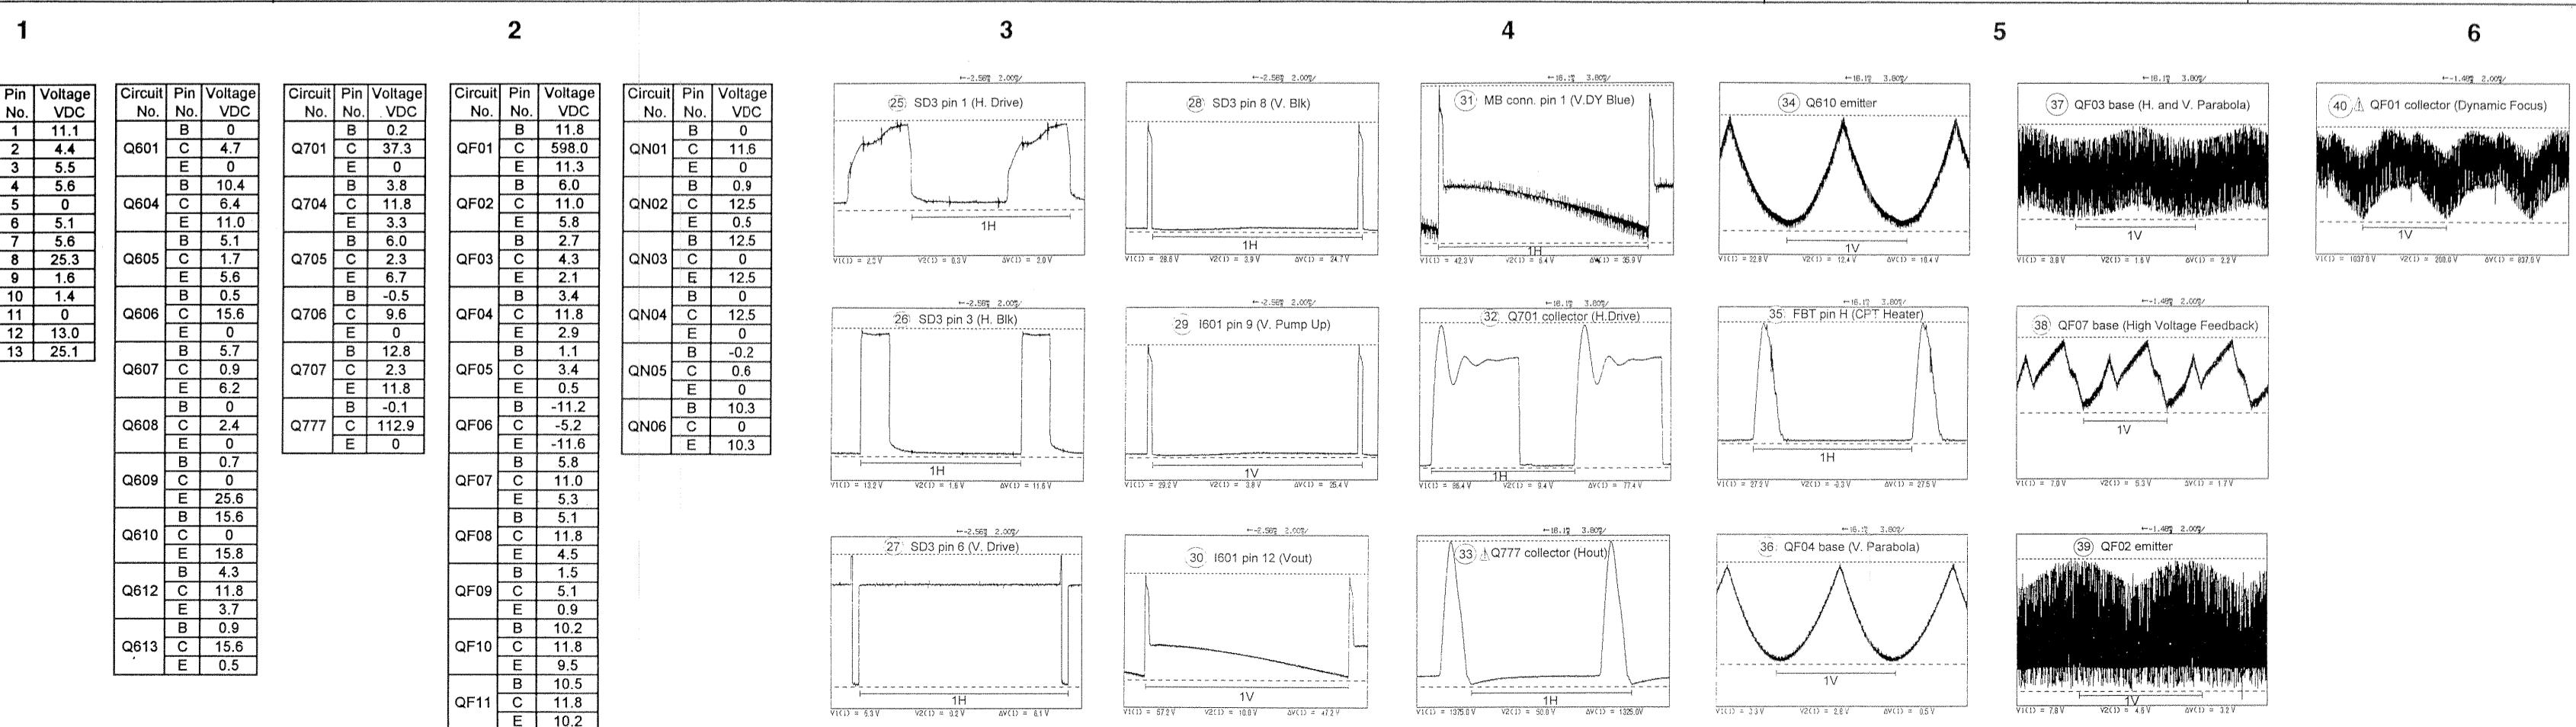

## **BASIC CIRCUIT DIAGRAM**

**PRODUCT SAFETY NOTE:** Components marked with a  and shaded have special characteristics important to safety. Before replacing any of these components, read carefully the PRODUCT SAFETY NOTICE of this Service Manual. Don't degrade the safety of the receiver through improper servicing.

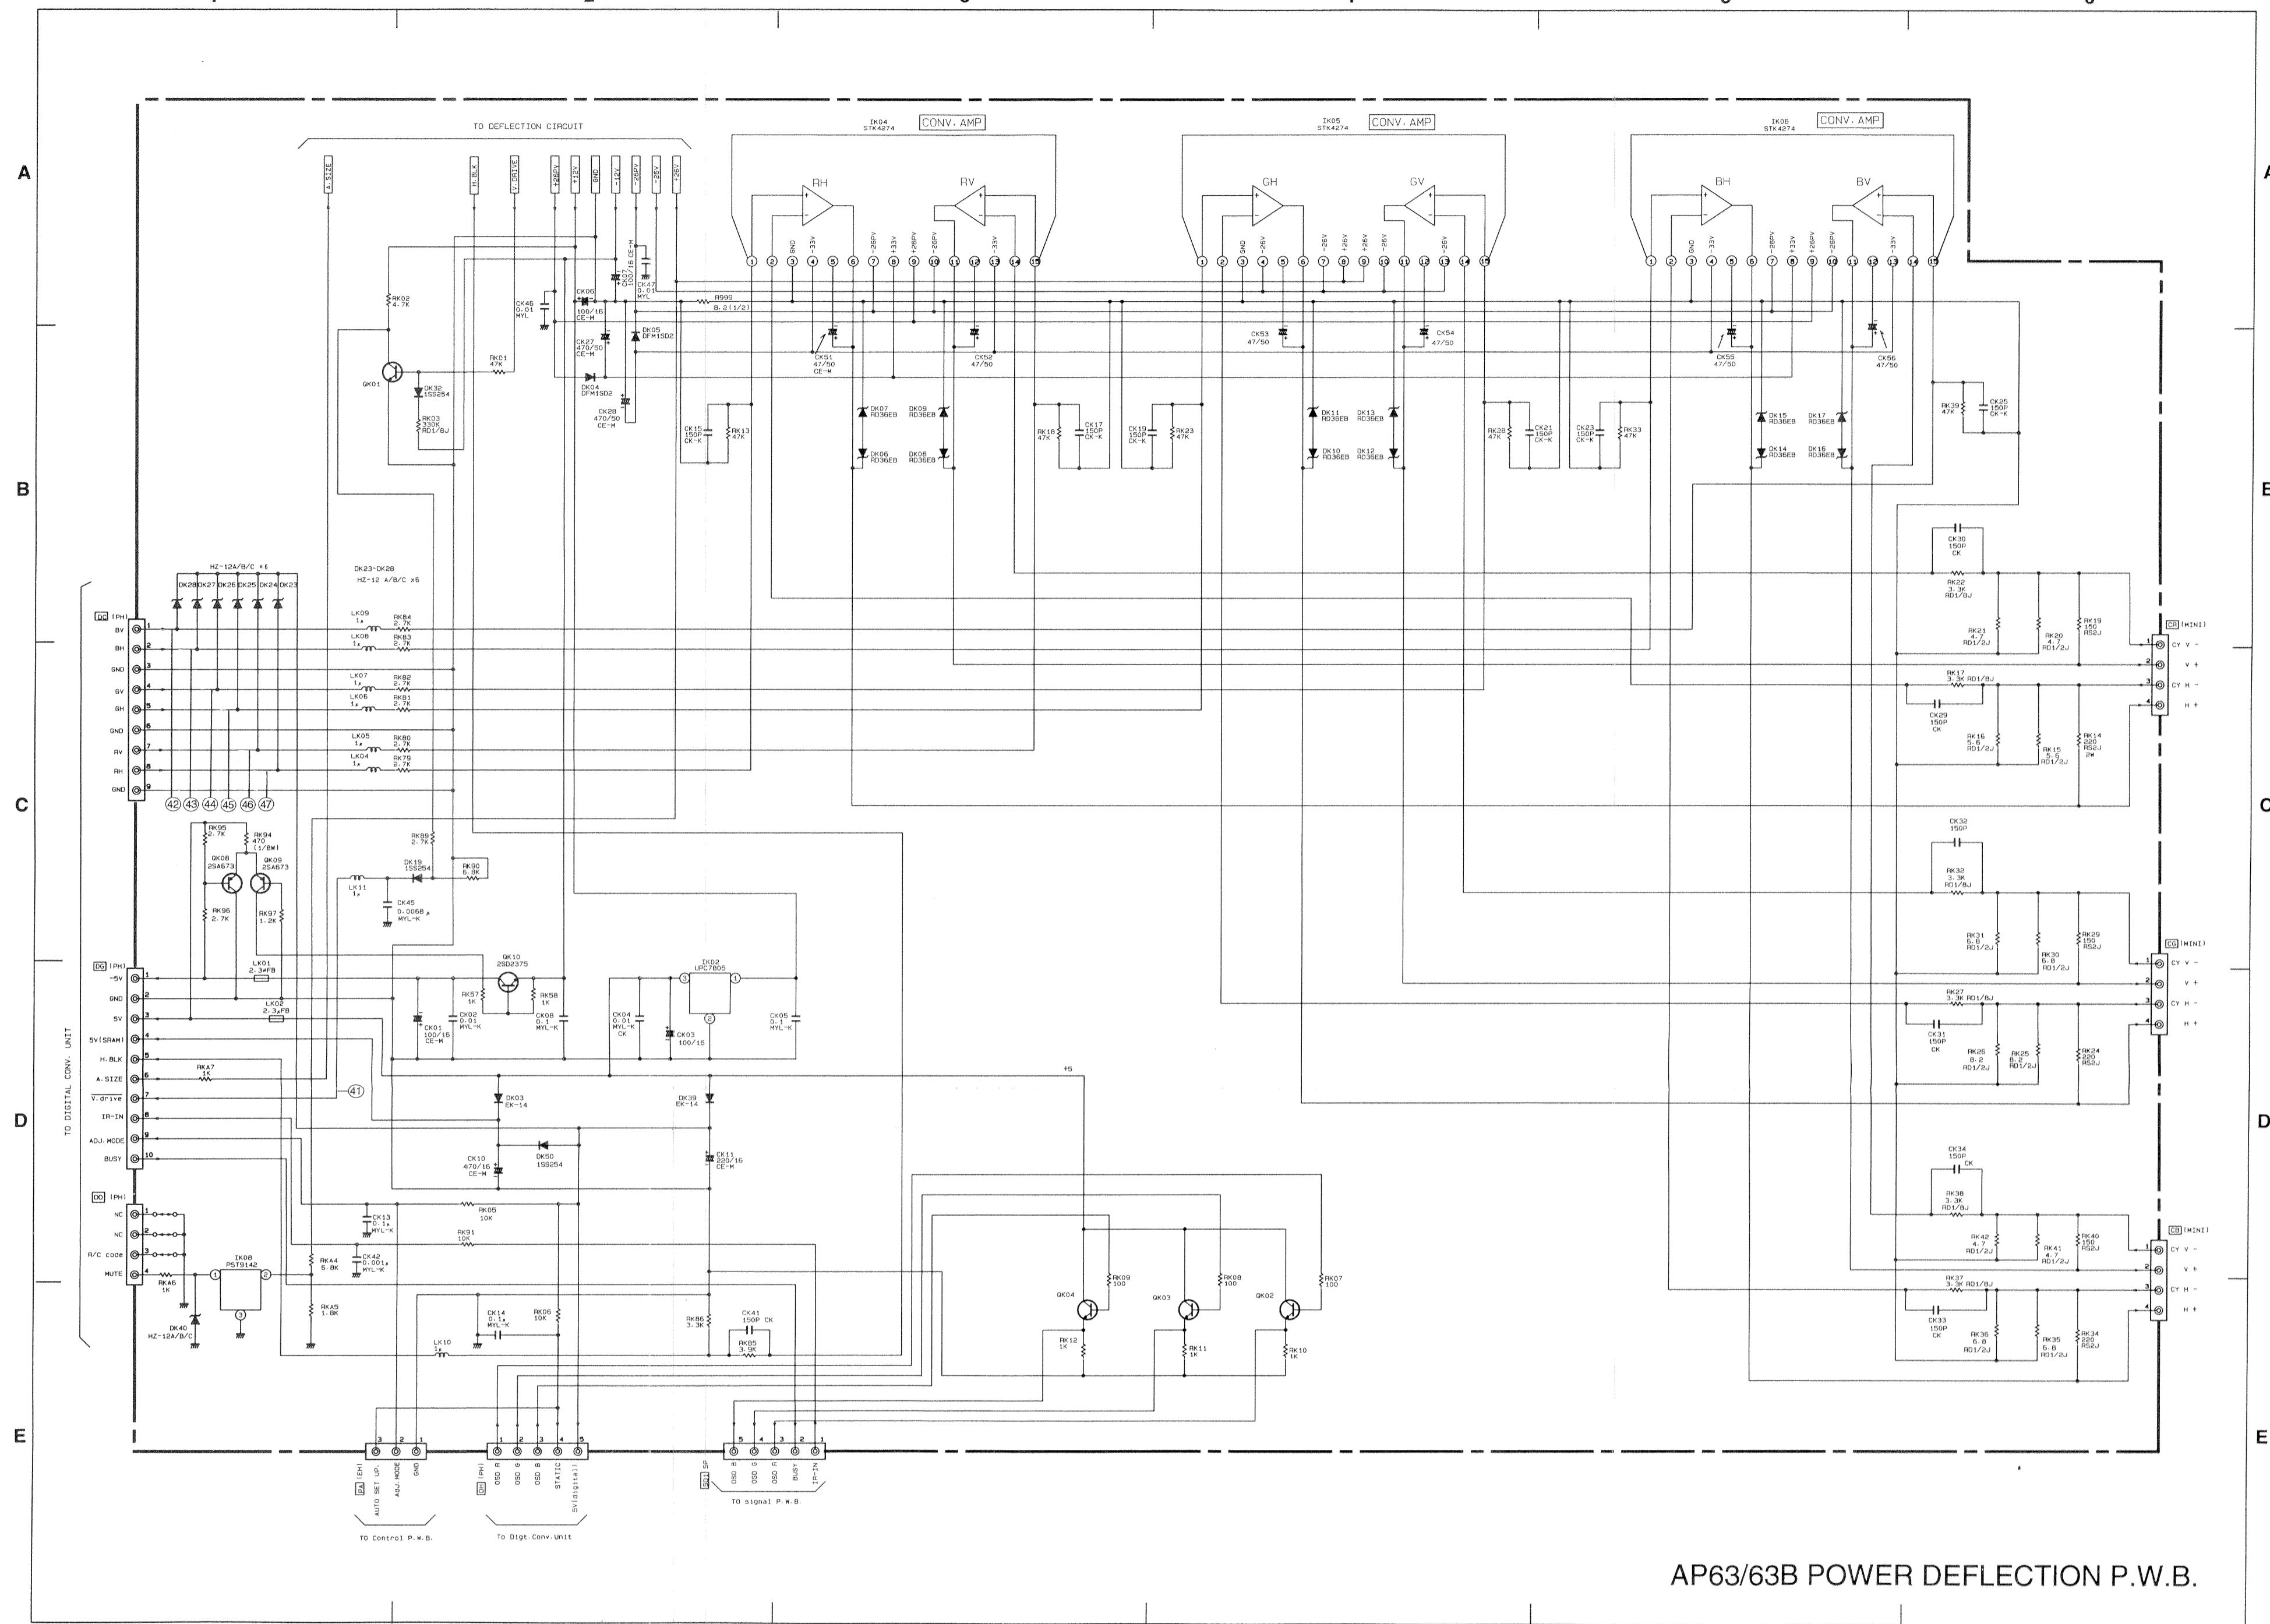












## AP63/63B POWER DEFLECTION P.W.B.

Circuit No.	Pin No.	Voltage VDC
IK02	1	11.8
	2	0
	3	1.8

Circuit No.	Pin No.	Voltage VDC
IK04	1	0.2
	2	0.2
	3	0
	4	-32.9
	5	-22.2
	6	-0.3
	7	-26.5
	8	33.3
	9	27.0
	10	-26.5
	11	-0.4
	12	-22.5
	13	-32.9
	14	-0.3
	15	-0.3

Circuit No.	Pin No.	Voltage VDC
	1	0.3
	2	0.3
	3	0


IK05	4	-26.5
	5	-17.8
	6	0.4
	7	-26.5
	8	27.0
	9	27.0
	10	-26.5
	11	-0.5
	12	-18.3
	13	-26.5
	14	-0.4
	15	-0.4

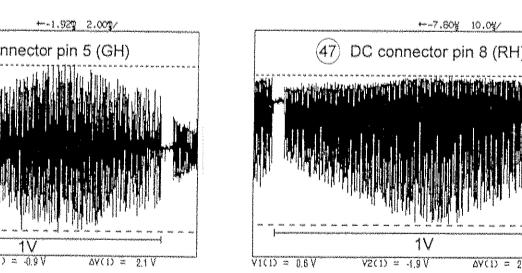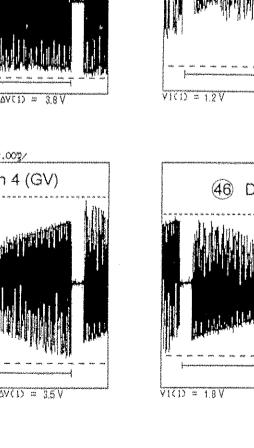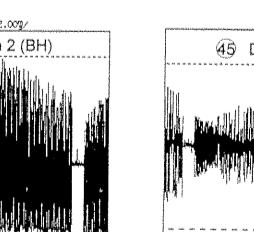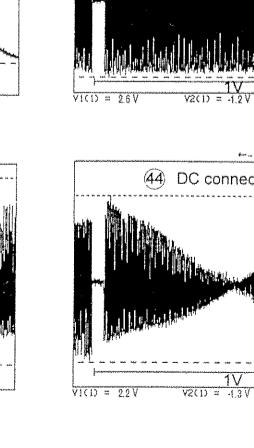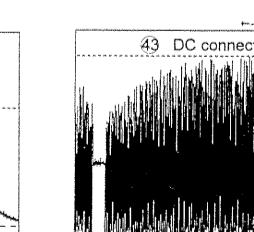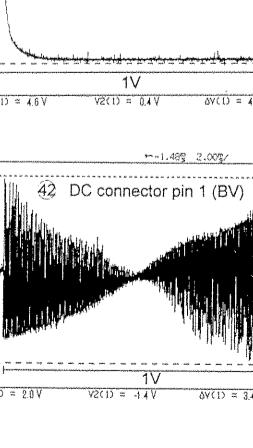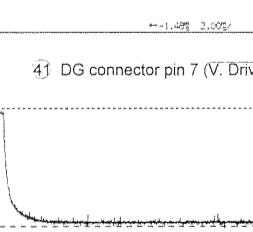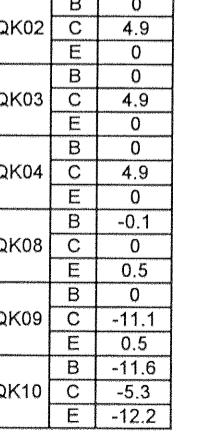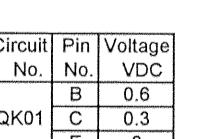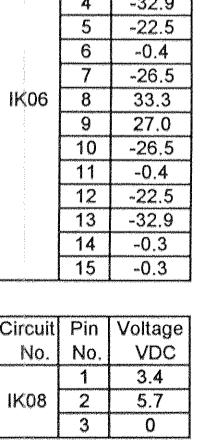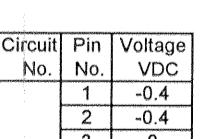

- All DC voltage to be measured with a tester ( $100\text{k}\Omega/\text{V}$ ). Voltage taken on a complex color bar signal including a standard color bar signal.
- Since this is a basic circuit diagram, the value of the parts is subject to be altered for improvement.

## BASIC CIRCUIT DIAGRAM

PRODUCT SAFETY NOTE: Components marked with a and shaded have special characteristics important to safety. Before replacing any of these components, read carefully the PRODUCT SAFETY NOTICE of this Service Manual. Don't degrade the safety of the receiver through improper servicing.

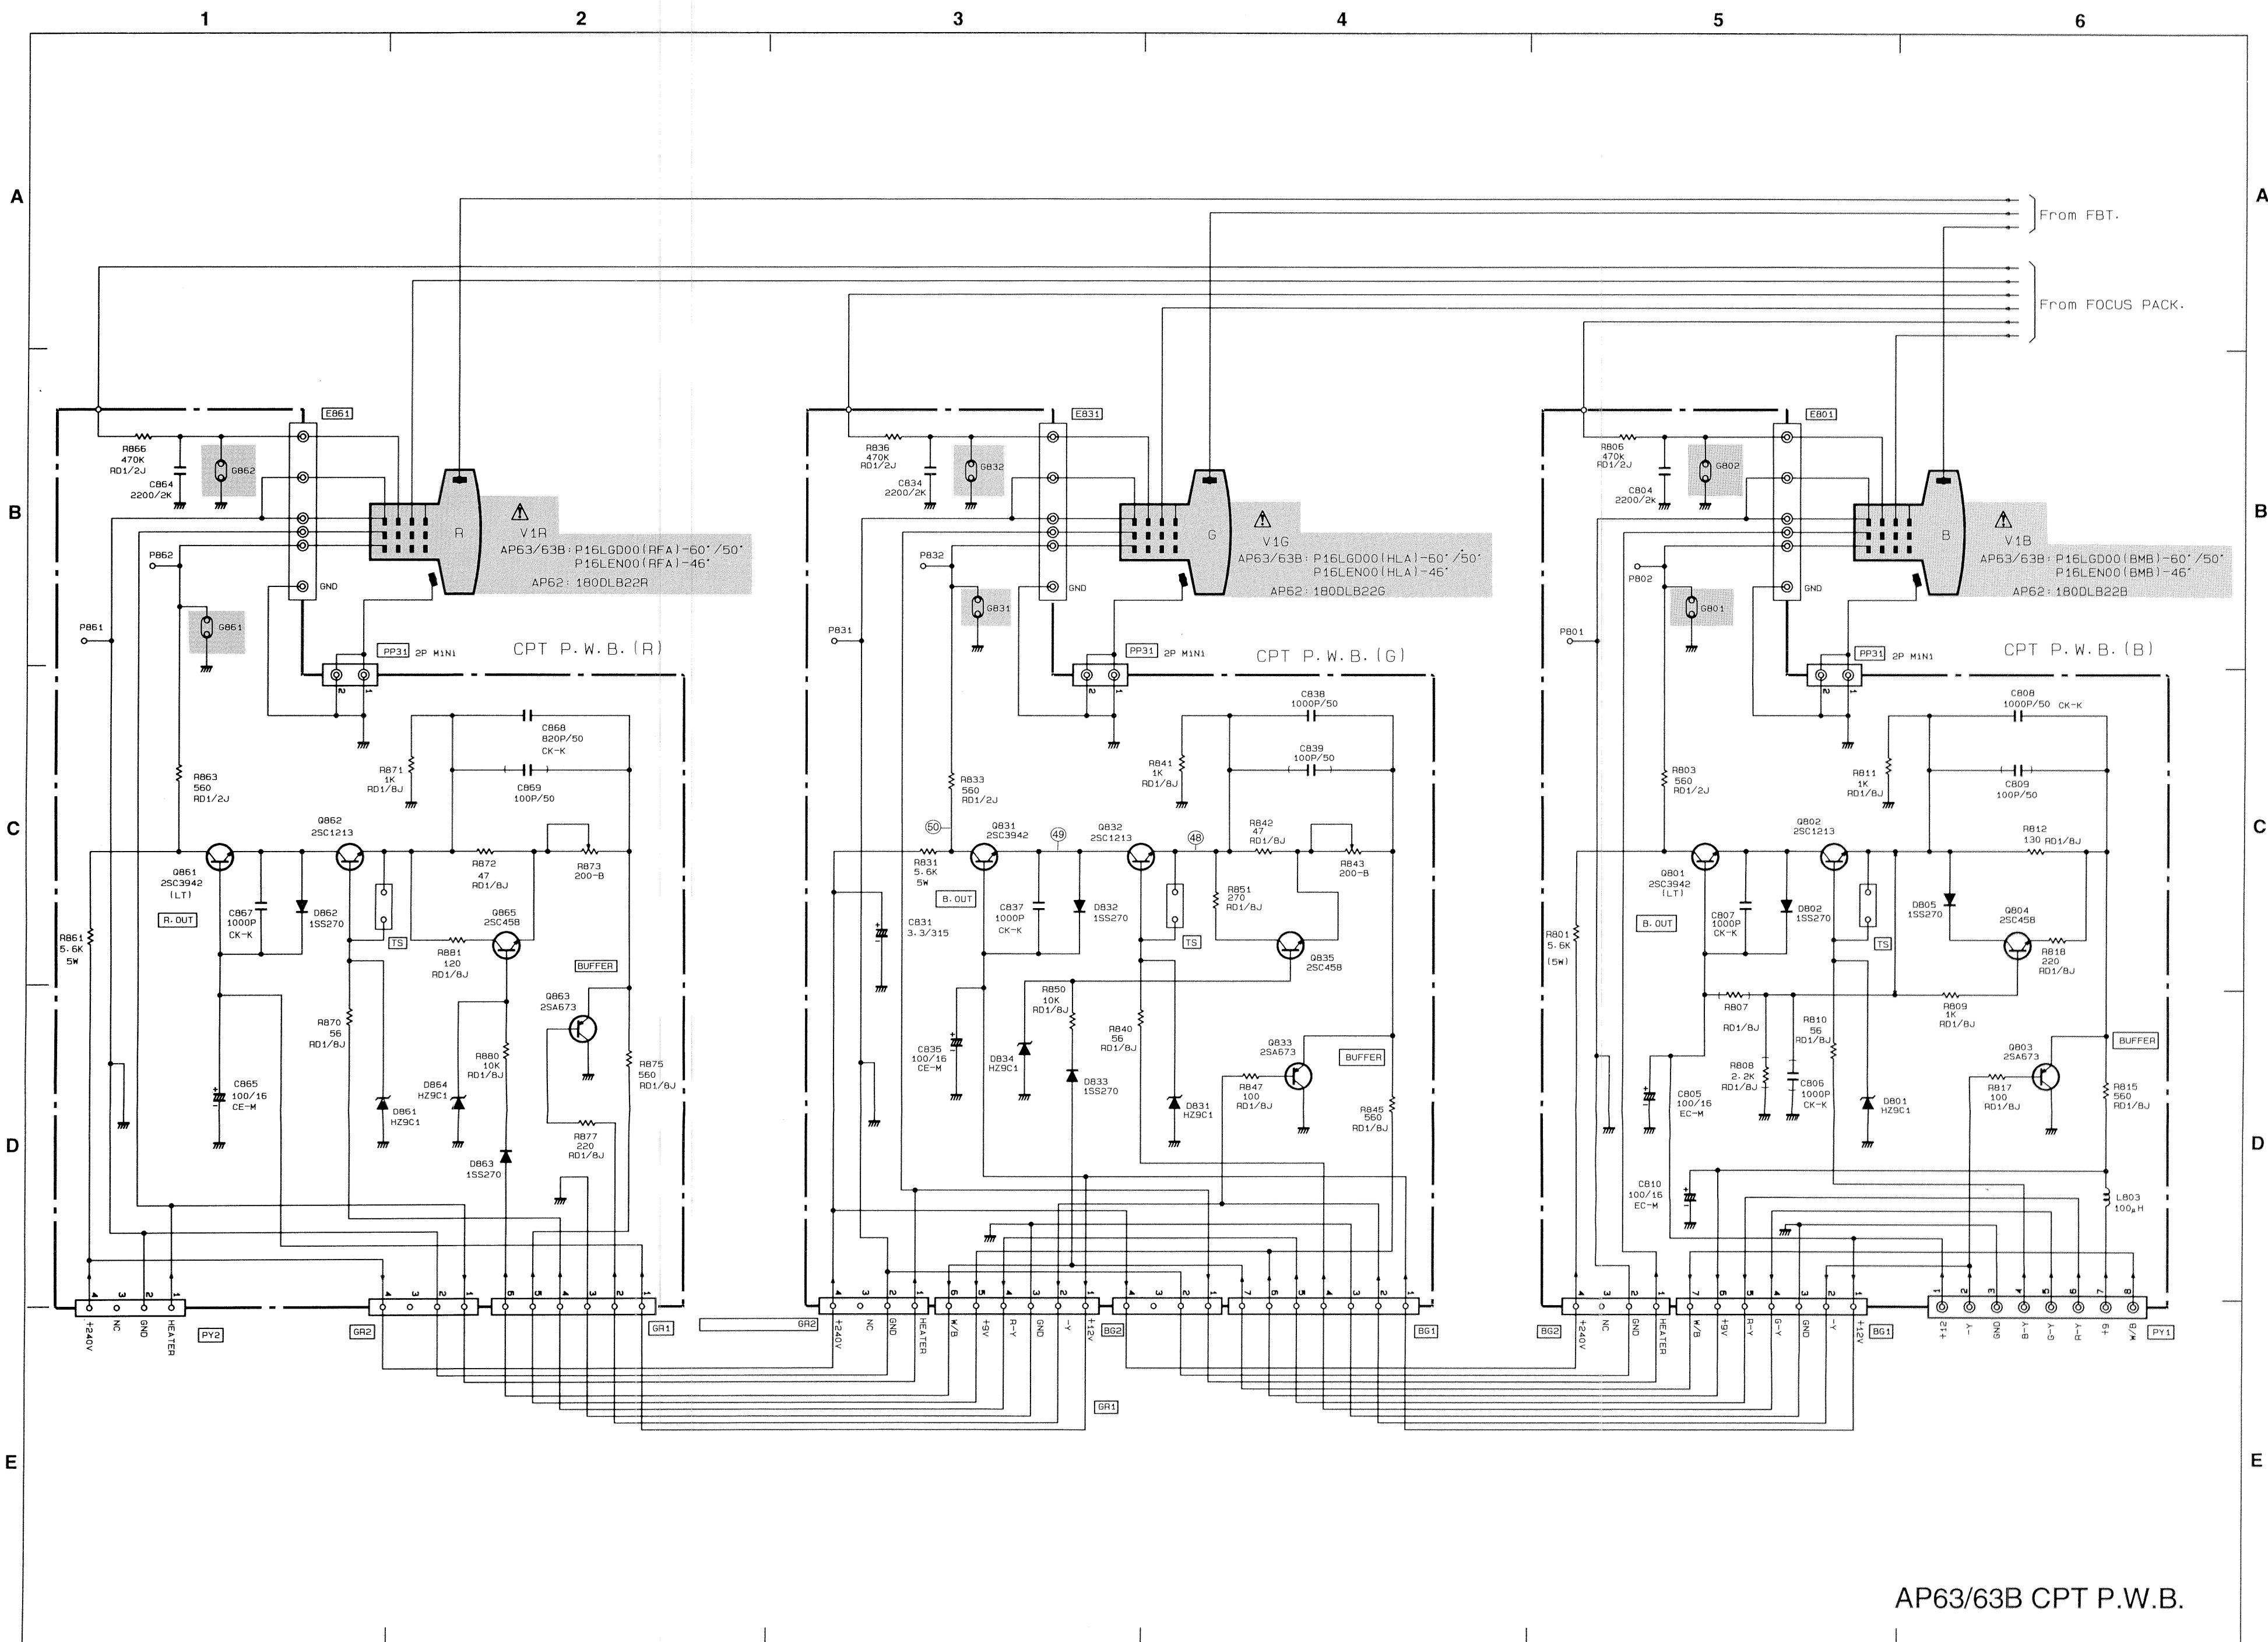


AP63/63B CPT P.W.B.

• All DC voltage to be measured with a tester (100kΩ/V). Voltage taken on a complex color bar signal including a standard color bar signal.  
• Since this is a basic circuit diagram, the value of the parts is subject to be altered for improvement.

Circuit No.	Pin No.	Voltage VDC
Q801	B	11.8
	C	172.8
	E	11.2
Q802	B	5.3
	C	11.2
	E	4.9
Q803	B	4.1
	C	0
	E	4.2
Q804	B	4.8
	C	4.5
	E	4.6
Q831	B	11.8
	C	175.8
	E	11.3
Q832	B	5.2
	C	11.2
	E	4.8


Circuit No.	Pin No.	Voltage VDC
Q801	B	4.1
Q833	C	0
	E	4.2
Q835	B	1.9
	C	4.8
	E	4.5
Q861	C	191.2
	E	11.2
Q862	B	5.1
	C	11.2
	E	4.7
Q863	C	4.1
	E	4.2
Q865	B	2.3
	C	4.7
	E	4.5

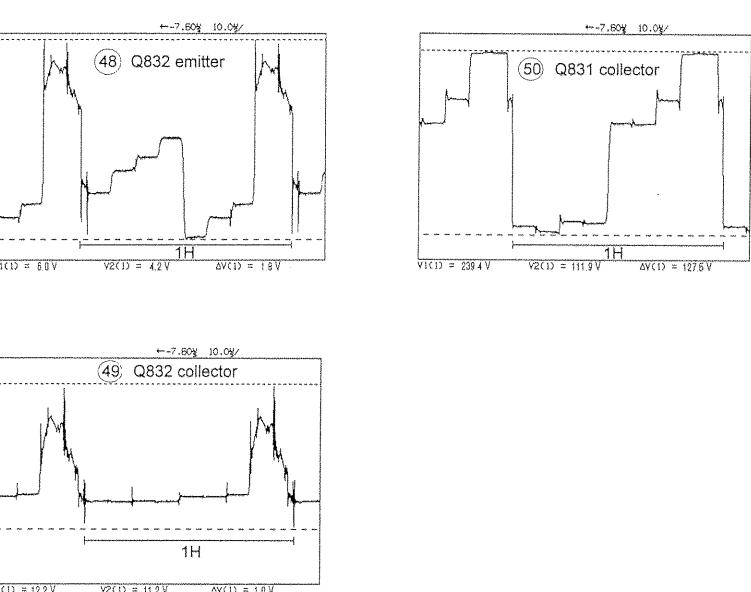

## BASIC CIRCUIT DIAGRAM

PRODUCT SAFETY NOTE: Components marked with a and shaded have special characteristics important to safety. Before replacing any of these components, read carefully the PRODUCT SAFETY NOTICE of this Service Manual. Don't degrade the safety of the receiver through improper servicing.

1 2 3 4 5 6

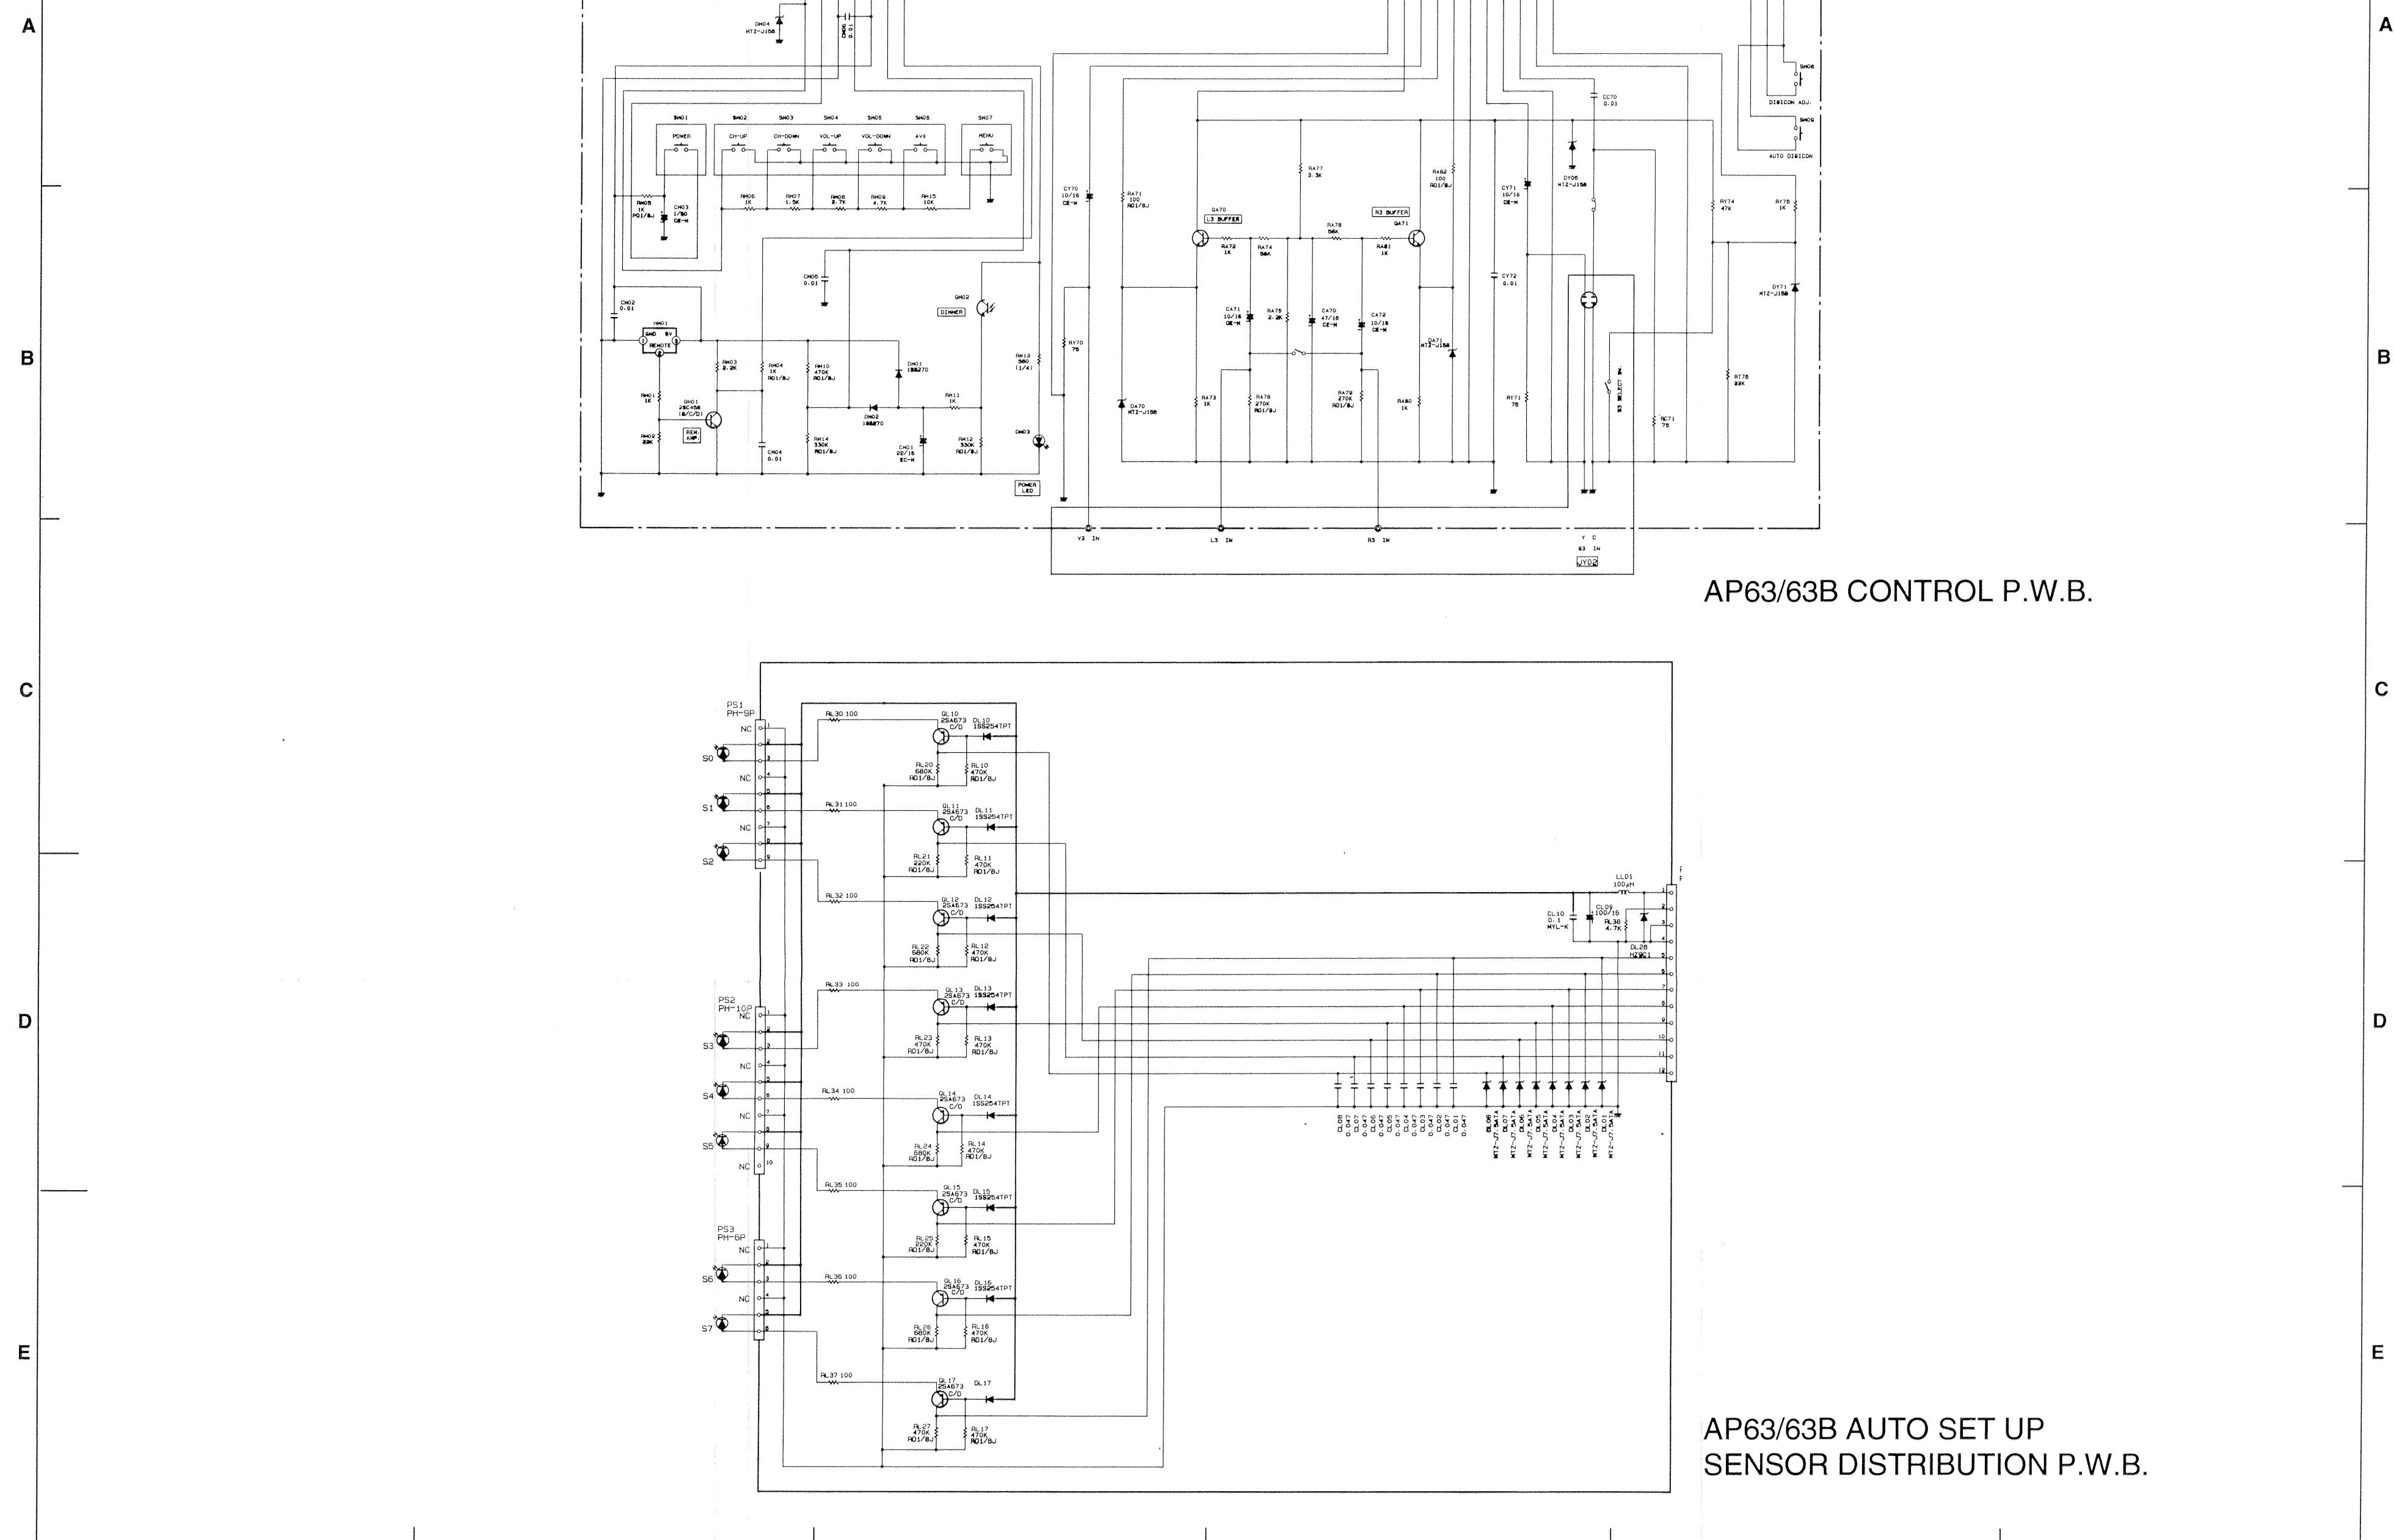

AP63/63B CONTROL P.W.B.

AP63/63B AUTO SET UP  
SENSOR DISTRIBUTION P.W.B.

1 2 3 4 5 6


Circuit No.	Pin No.	Voltage VDC
QL10	B	4.3
	C	0
	E	1.5
QL11	B	4.3
	C	0.1
	E	4.6
QL12	B	4.3
	C	0.9
	E	4.5
QL13	B	4.3
	C	0.7
	E	4.6
QL14	B	4.3
	C	0.1
	E	2.0
QL15	B	4.3
	C	2.3
	E	4.8
QL16	B	4.3
	C	0.1
	E	3.0
QL17	B	4.3
	C	0.5
	E	4.6

Circuit No.	Pin No.	Voltage VDC
QM01	B	0.7
	C	0.1
	E	0
QM02	B	---
	C	1.6
	E	9.1
QA70	B	2.9
	C	9.0
	E	2.3
QA71	B	3.0
	C	9.0
	E	2.3

\* All DC voltage to be measured with a tester (100kΩ/V). Voltage taken on a complex color bar signal including a standard color bar signal.  
\* Since this is a basic circuit diagram, the value of the parts is subject to be altered for improvement.

# PRINTED CIRCUIT BOARD


**SIGNAL P.C.B.**

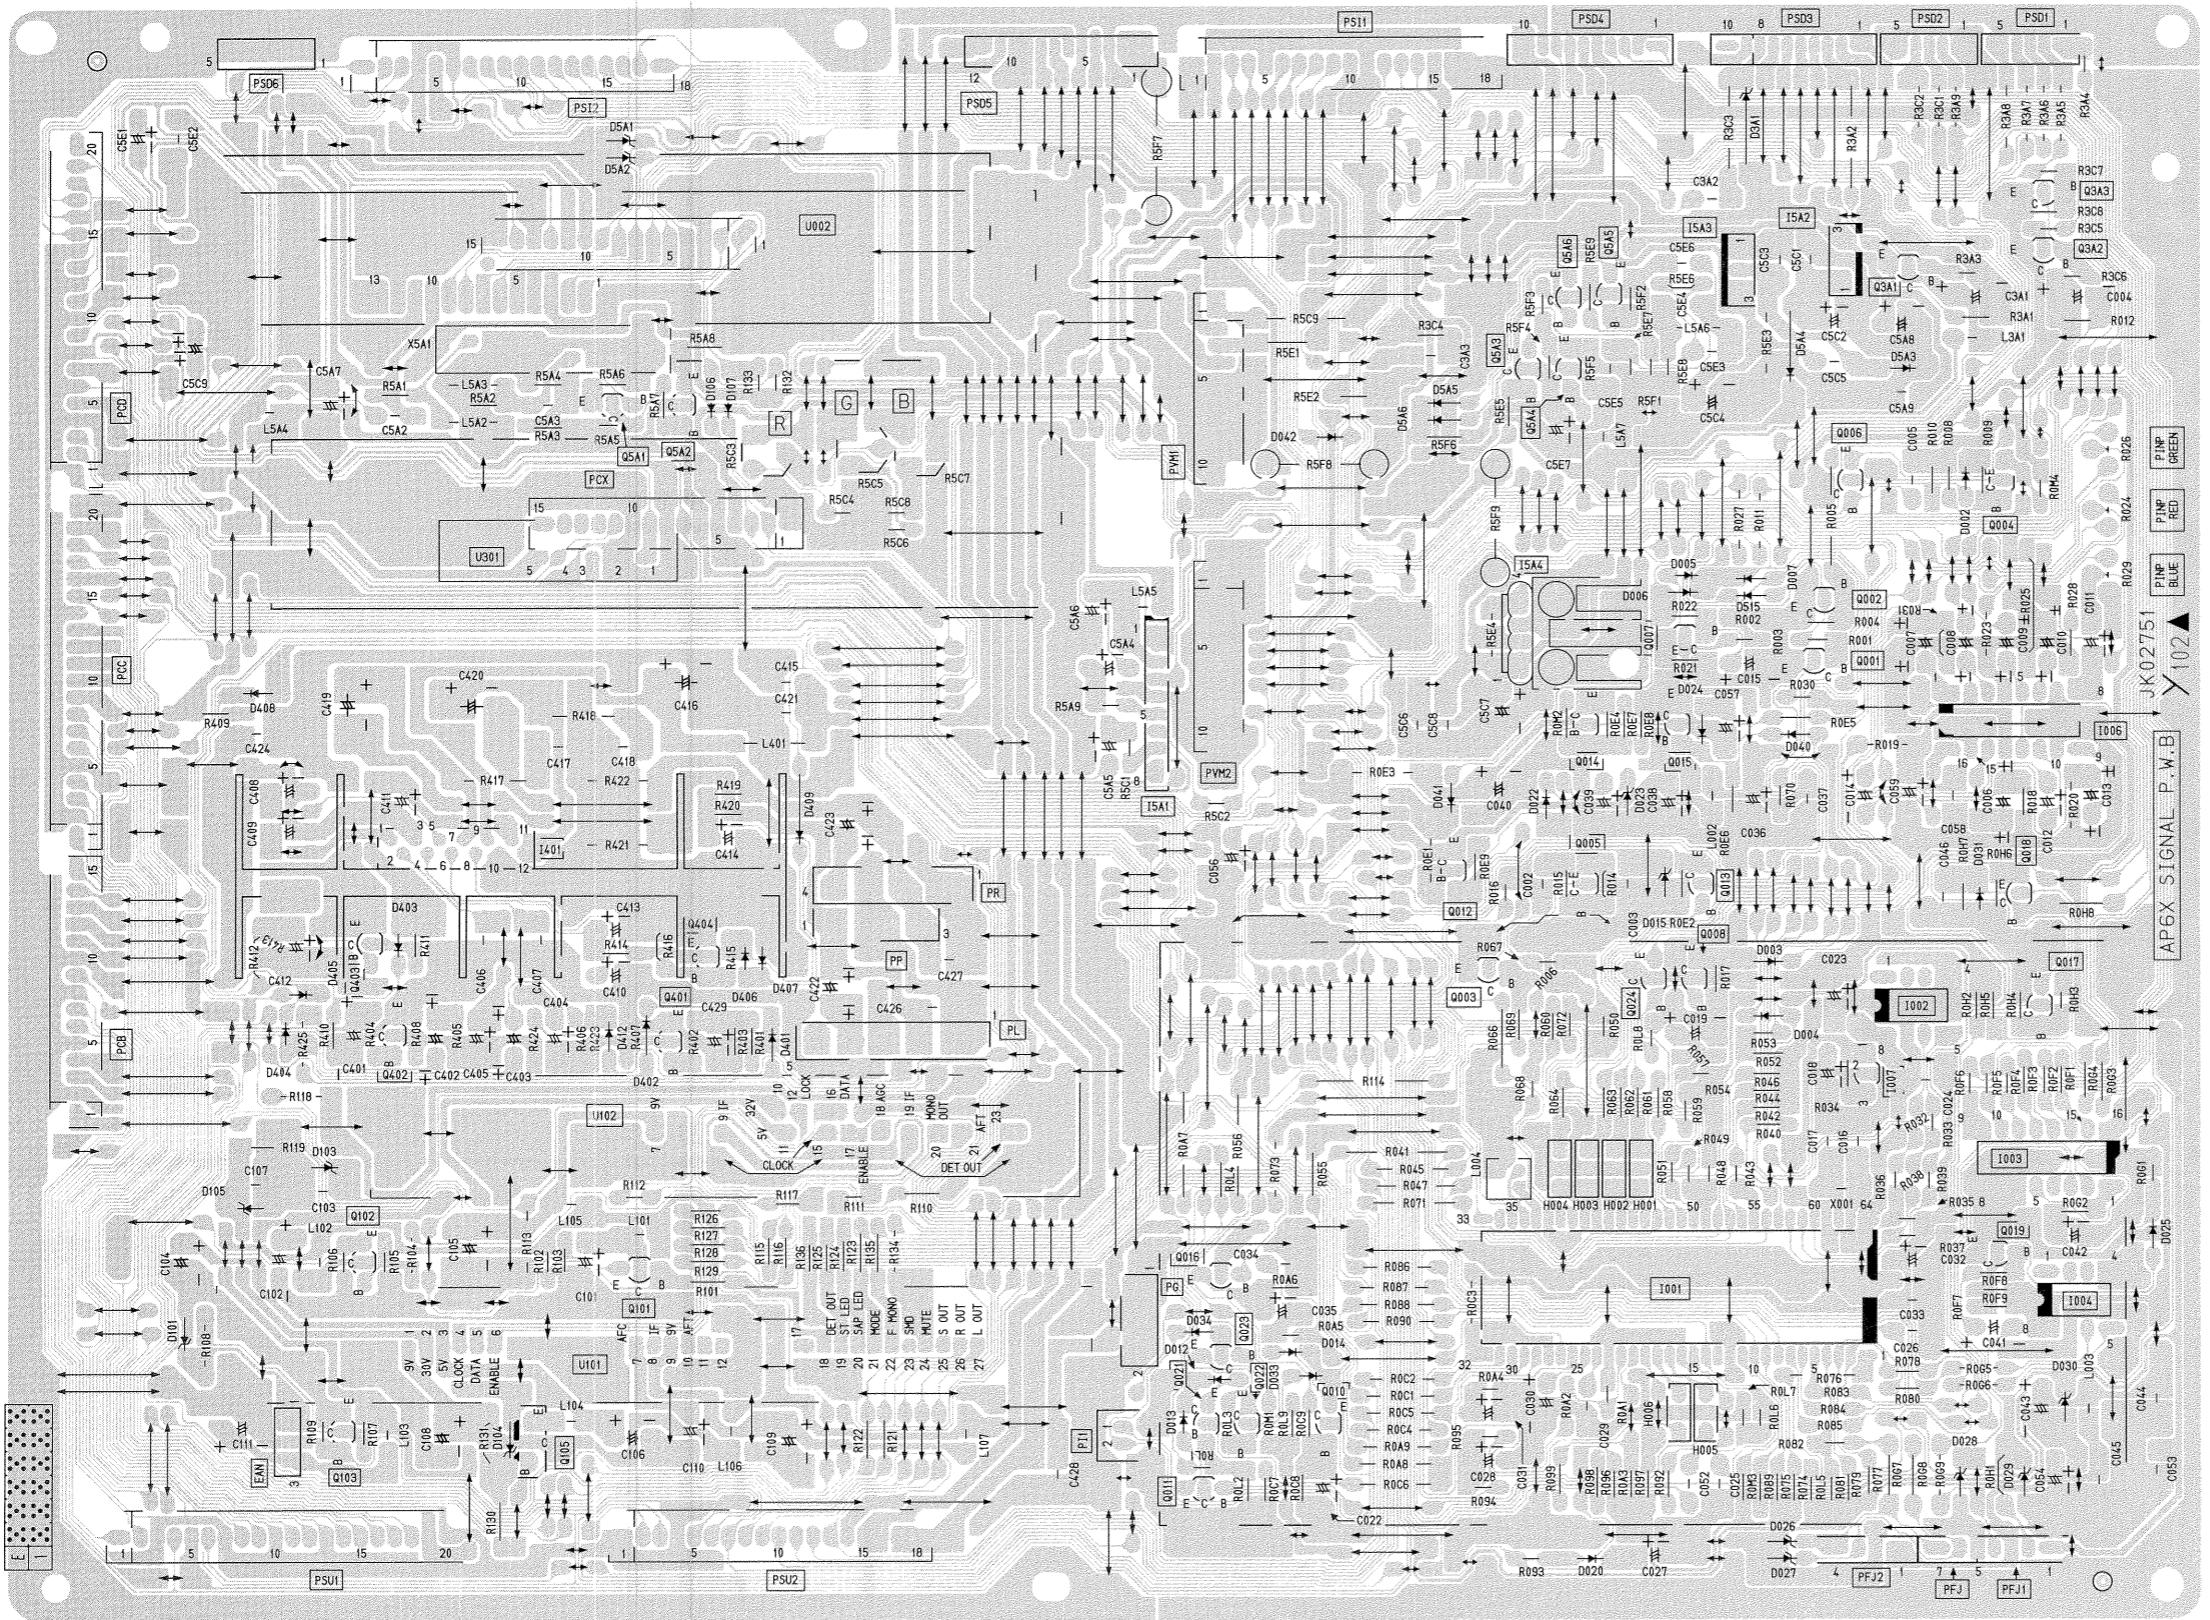


53

60SX12B/13K  
50UX26B/27K  
46UX24B/25K  
50SX8B

**GRAPHIC EQ. P.C.B.**

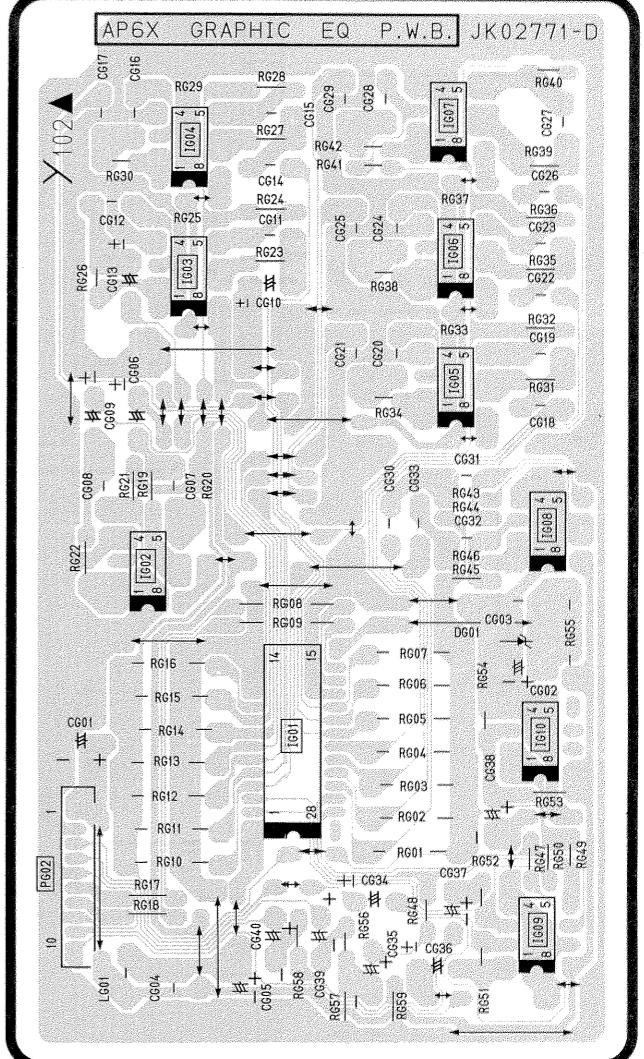


**SENSOR DISTRIBUTION P.C.B.**

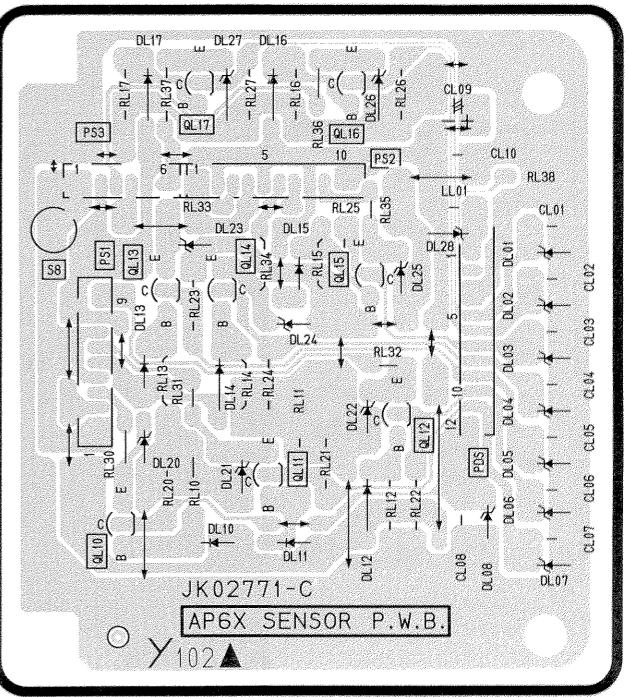

JK02771-C  
AP6X SENSOR P.W.B.


60SX12B/13K  
50UX26B/27K  
46UX24B/25K  
50SX8B

### POWER/DEFLECTION P.C.B.

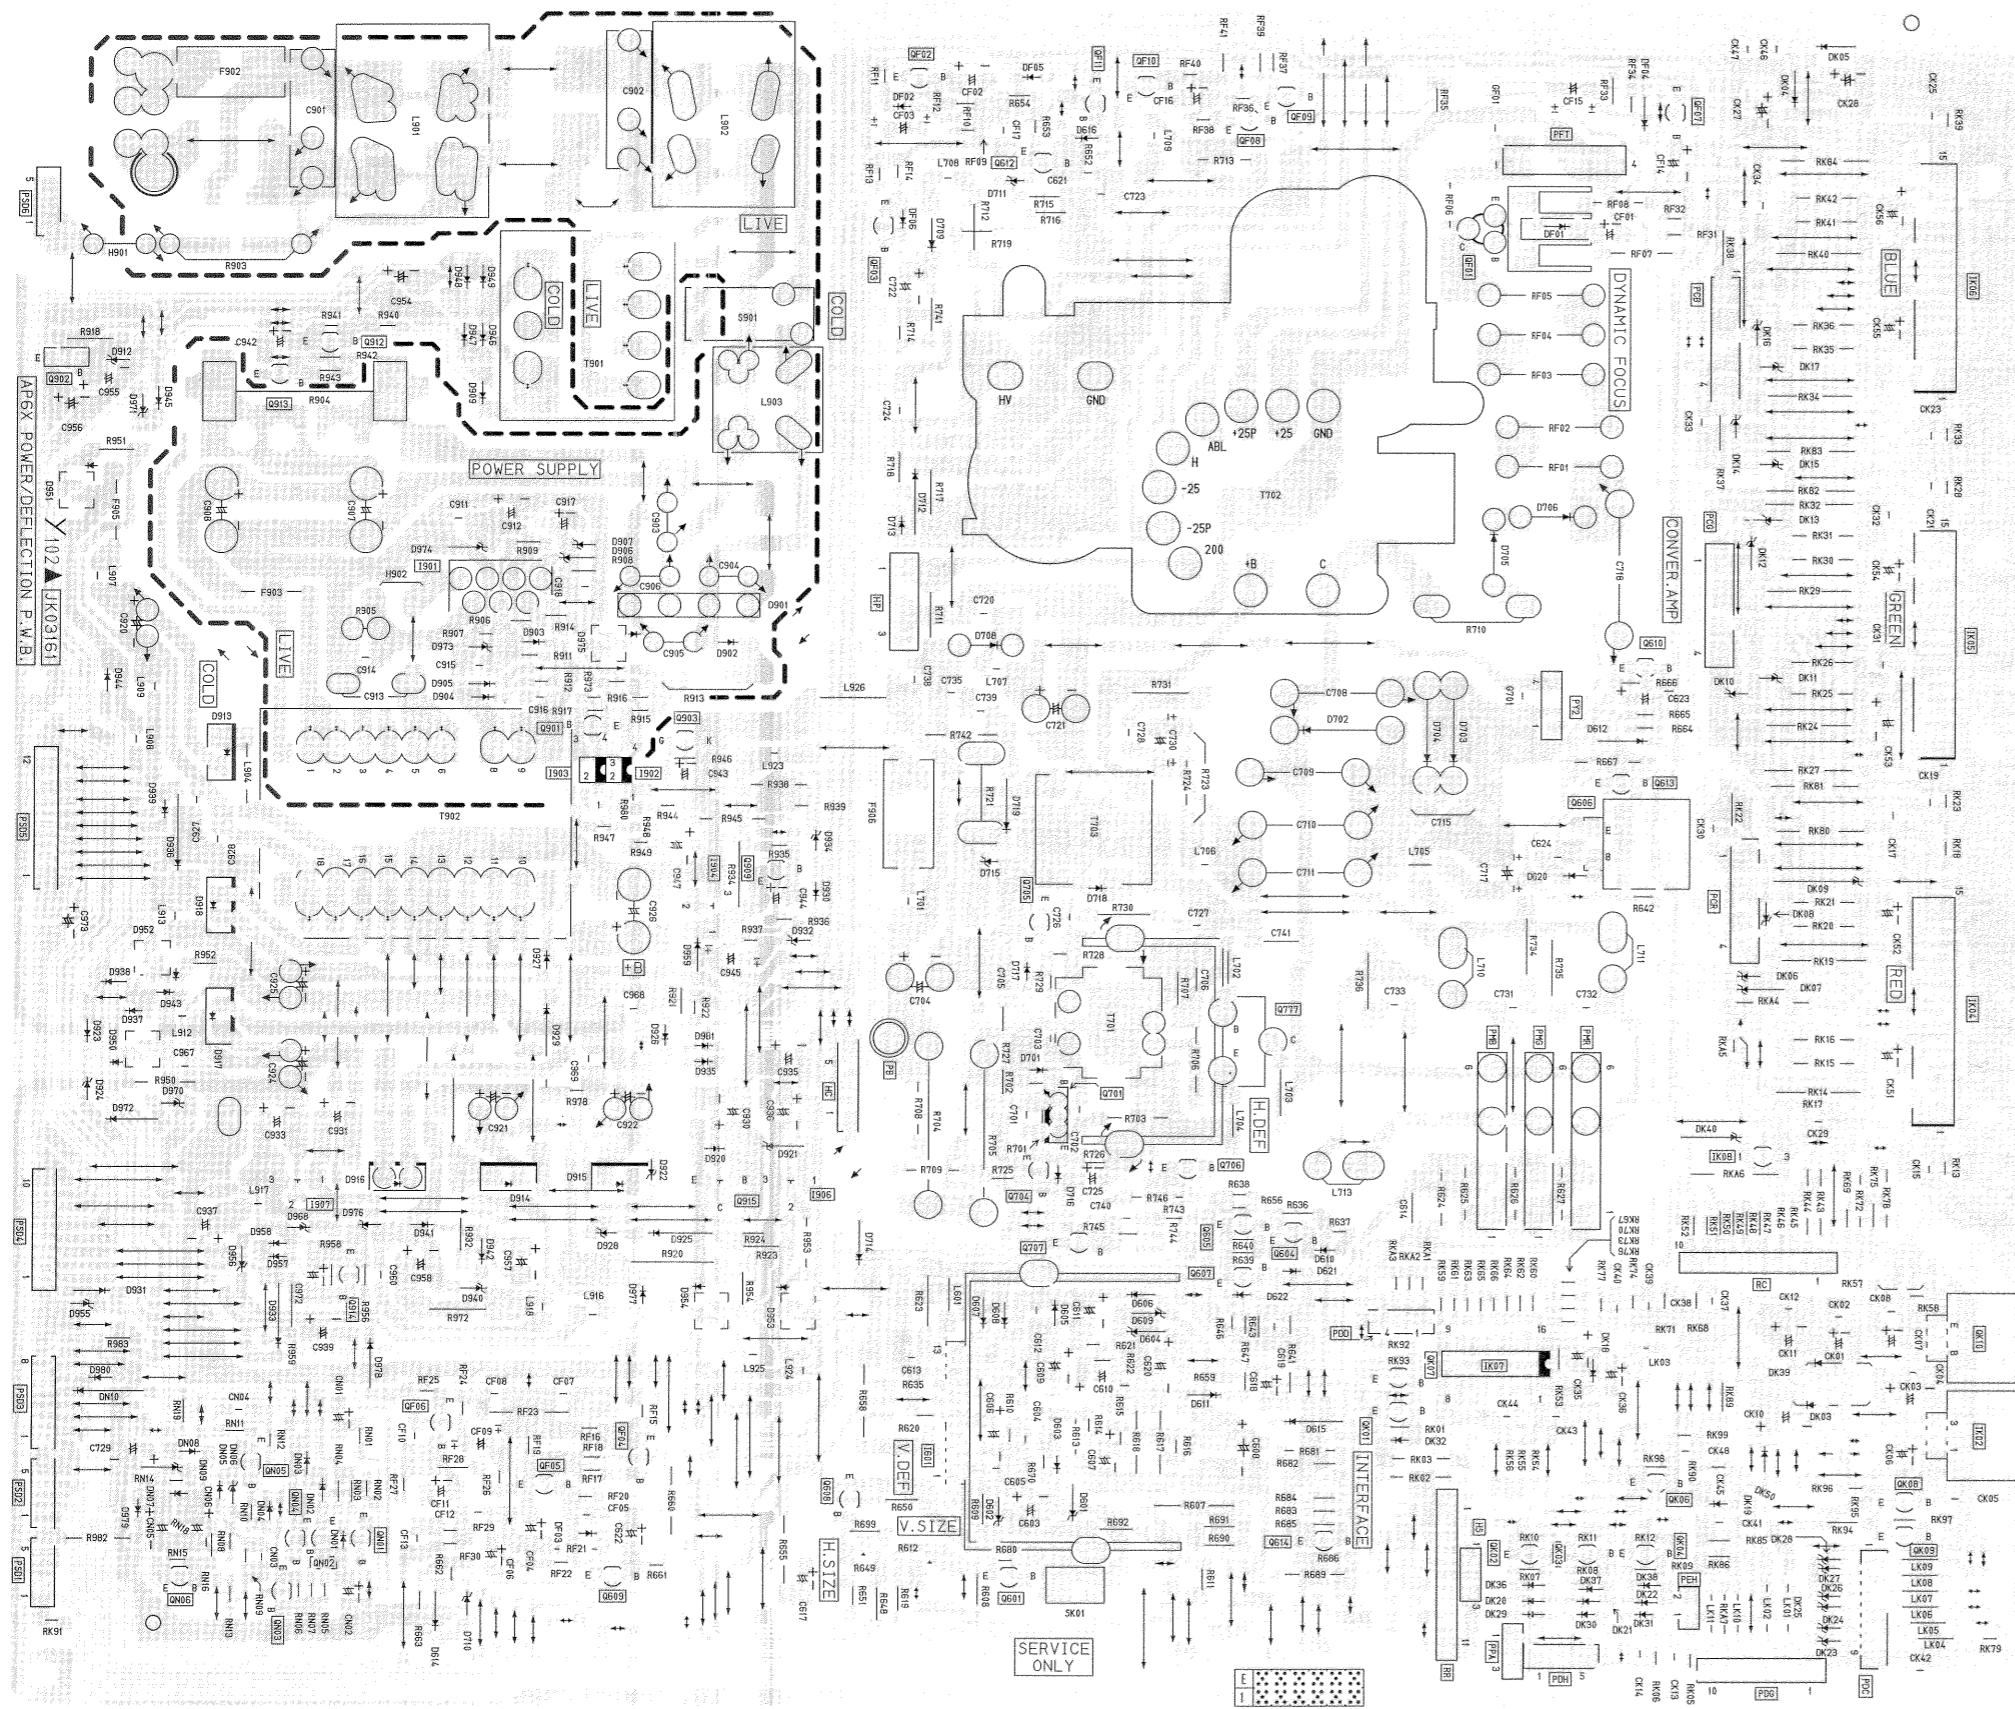


### PRINTED CIRCUIT BOARD


### RED CPT P.C.B.

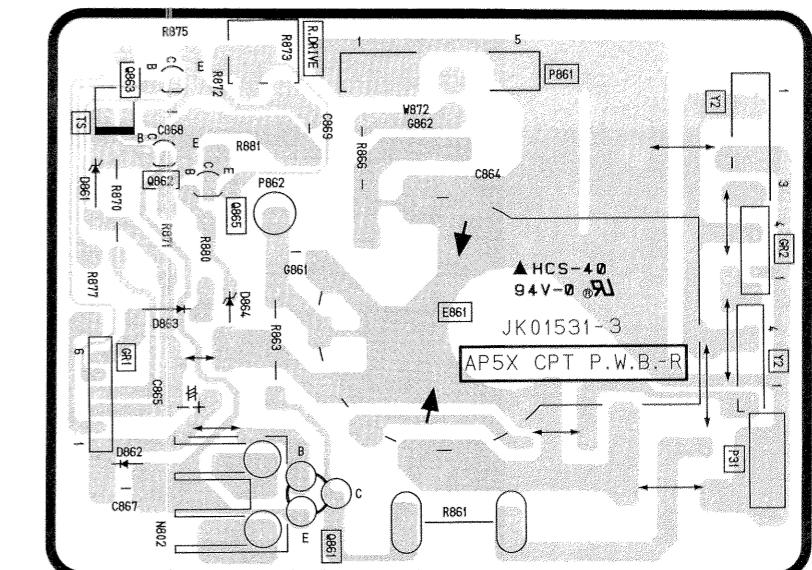

### GREEN CPT P.C.B.

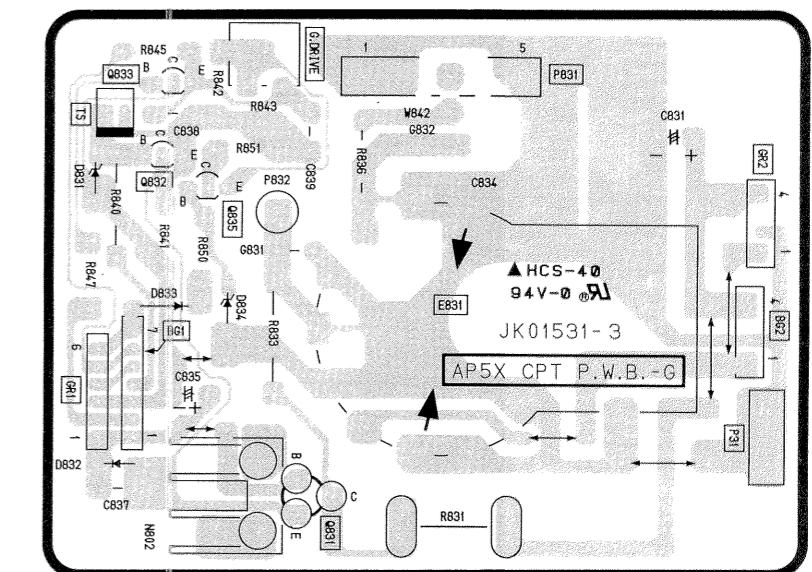


### BLUE CPT P.C.B.

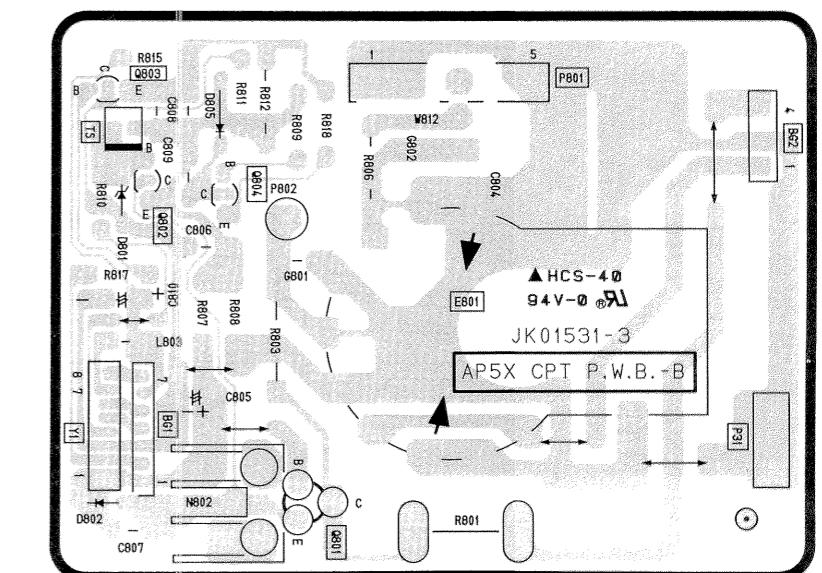

## PRINTED CIRCUIT BOARD


## SIGNAL SUB P.C.B.

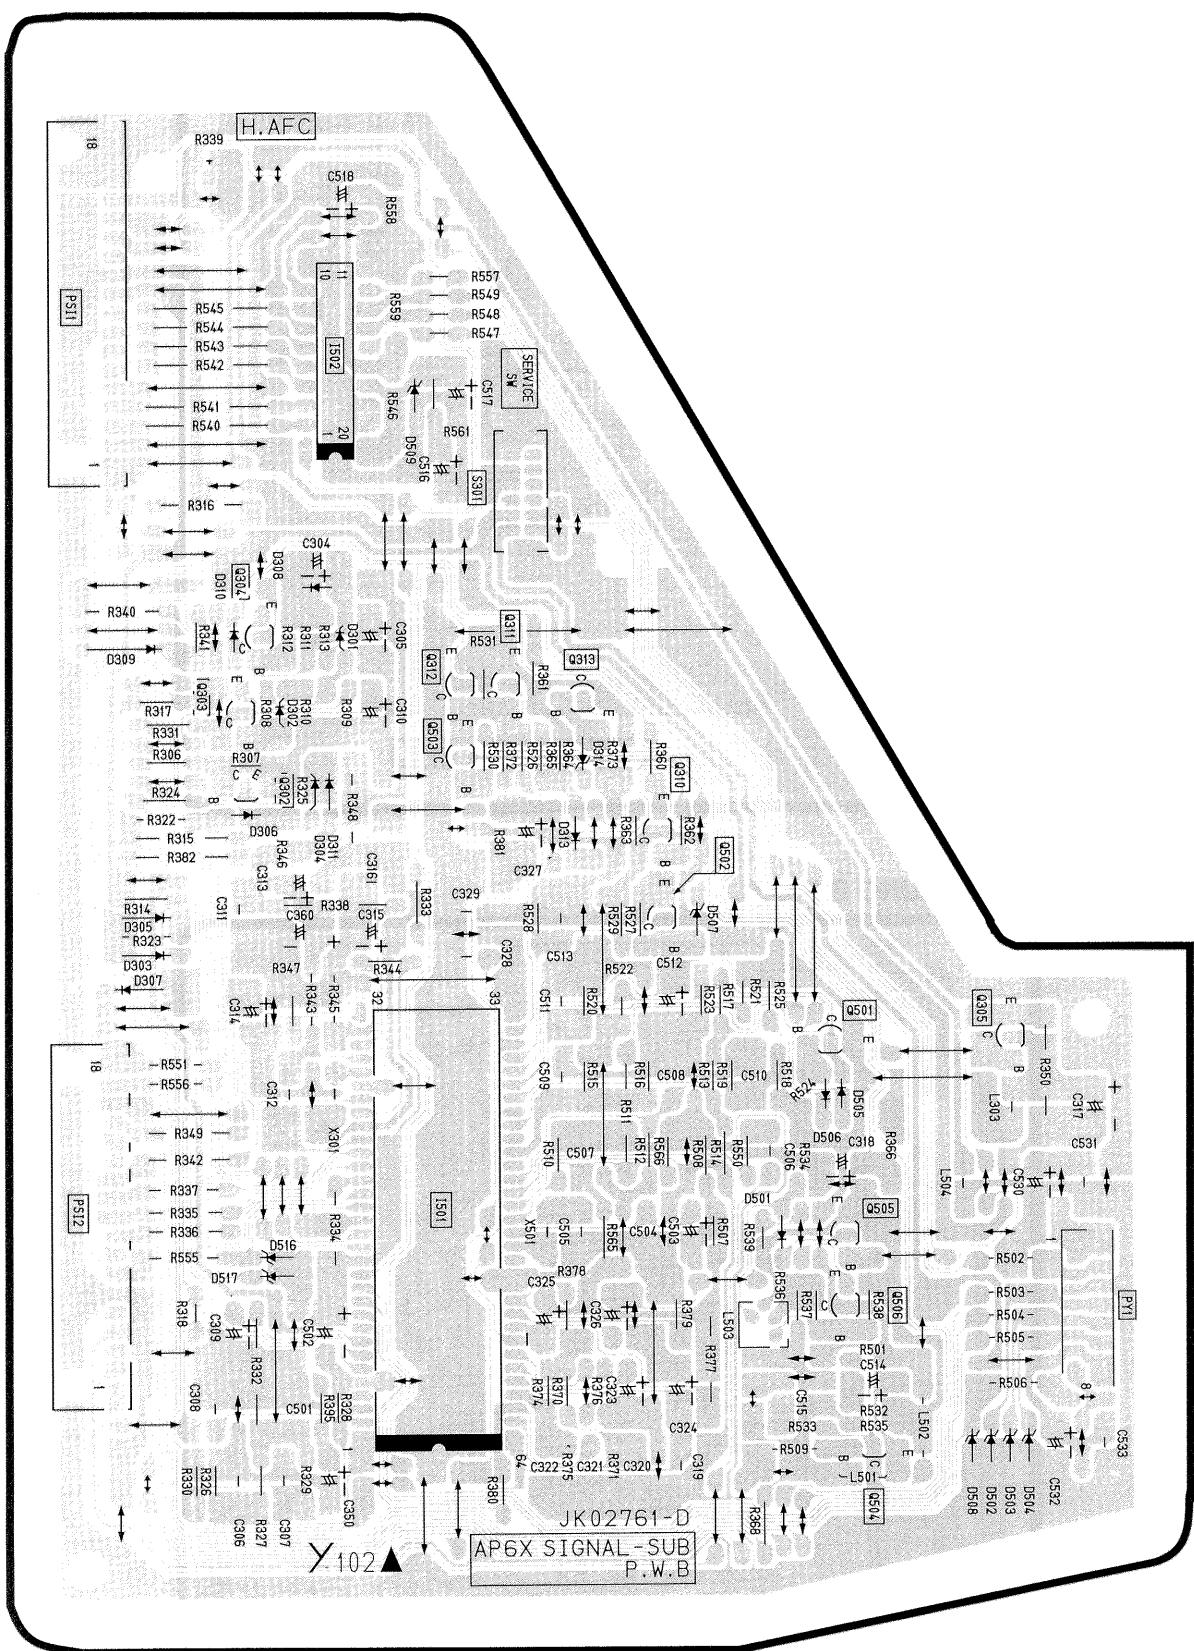


60SX12B/13K  
50UX26B/27K  
46UX24B/25K  
50SX8B

## PRINTED CIRCUIT BOARD

### SURROUND A P.C.B.

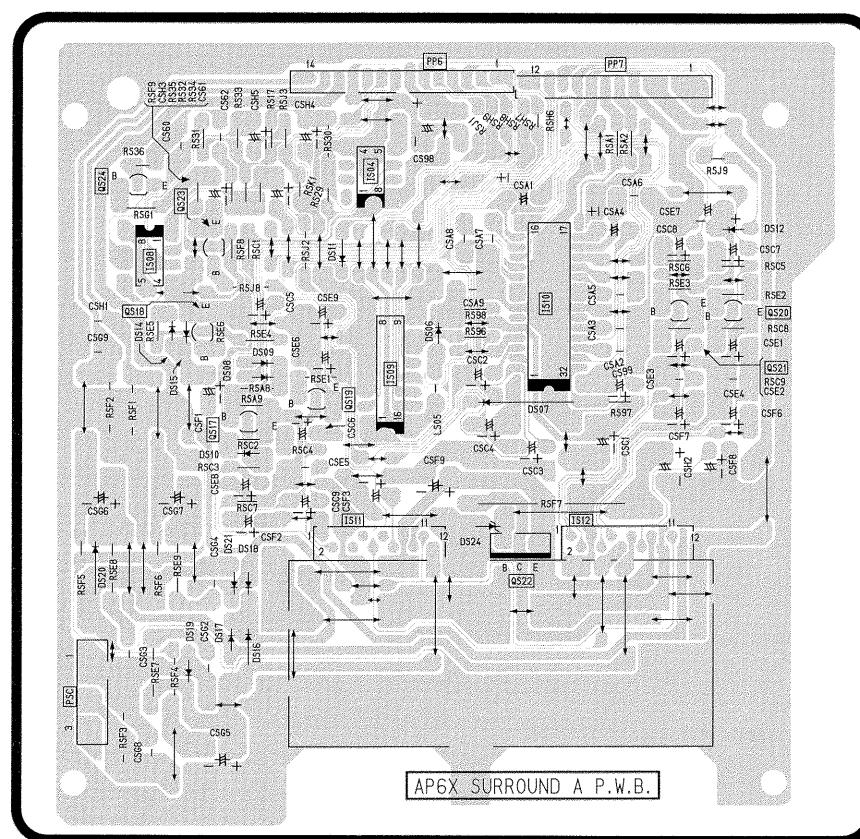


### SURROUND B P.C.B.

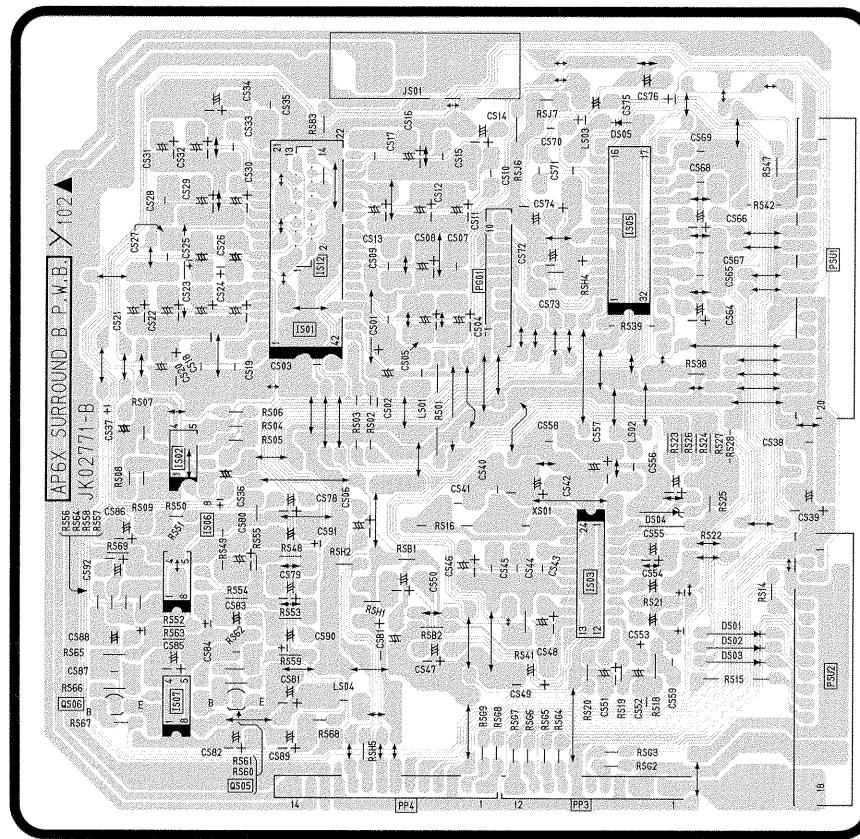


## **PRINTED CIRCUIT BOARD**

## TERMINAL P.C.B.

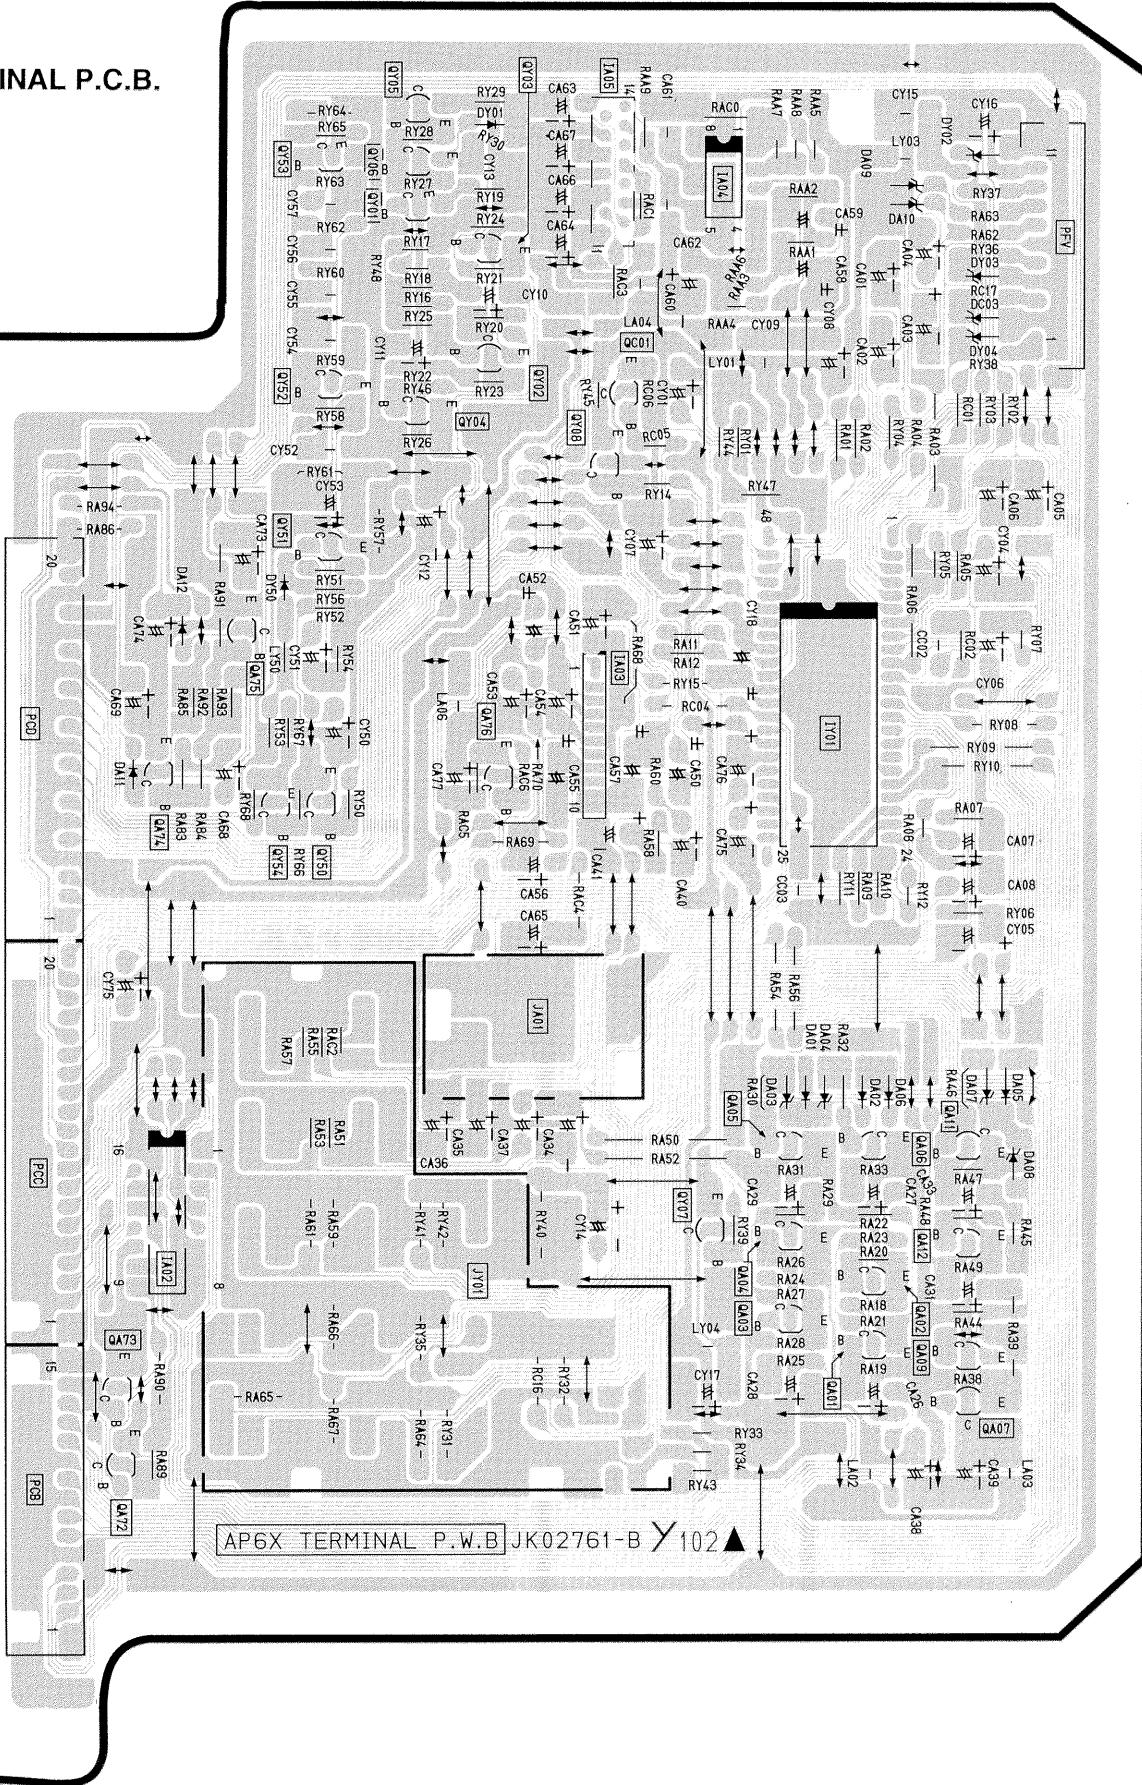


## **PRINTED CIRCUIT BOARD**


## **CONTROL P.C.B.**

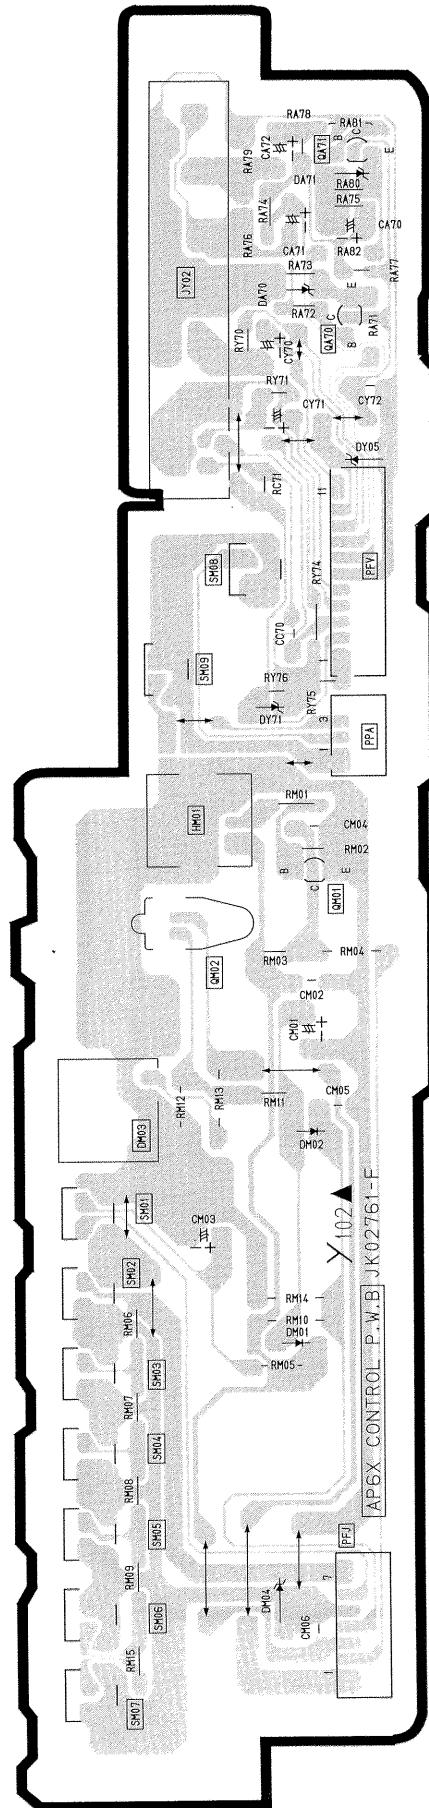


VM P.C.B

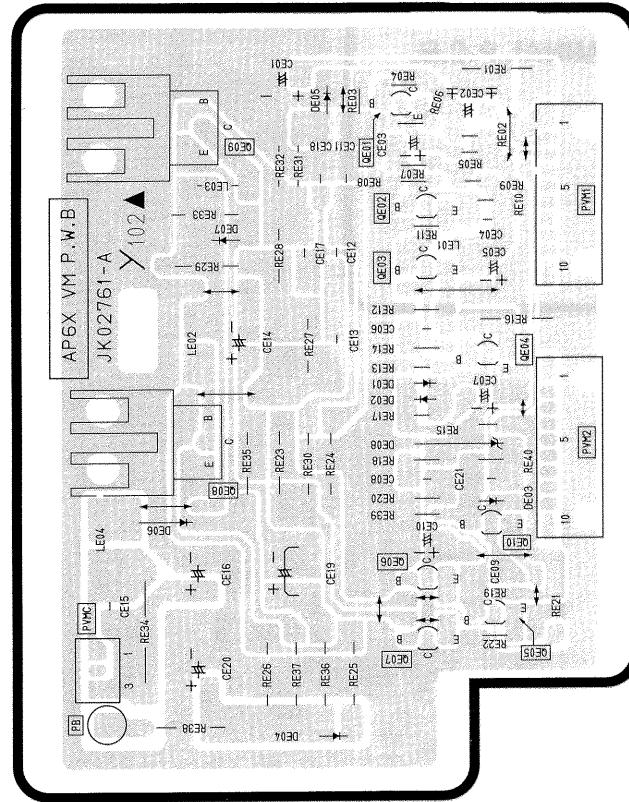


3 LINE COMB P.C.B

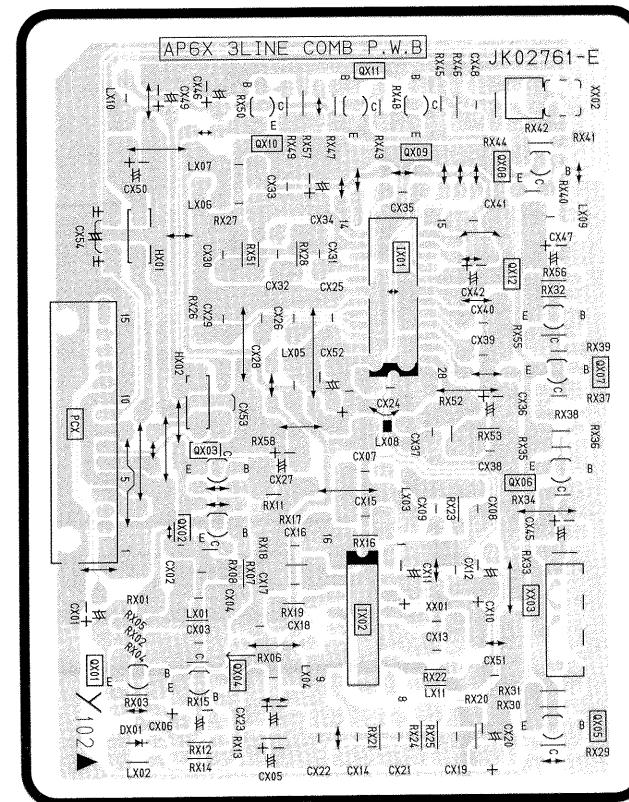

# WIRING DIAGRAM

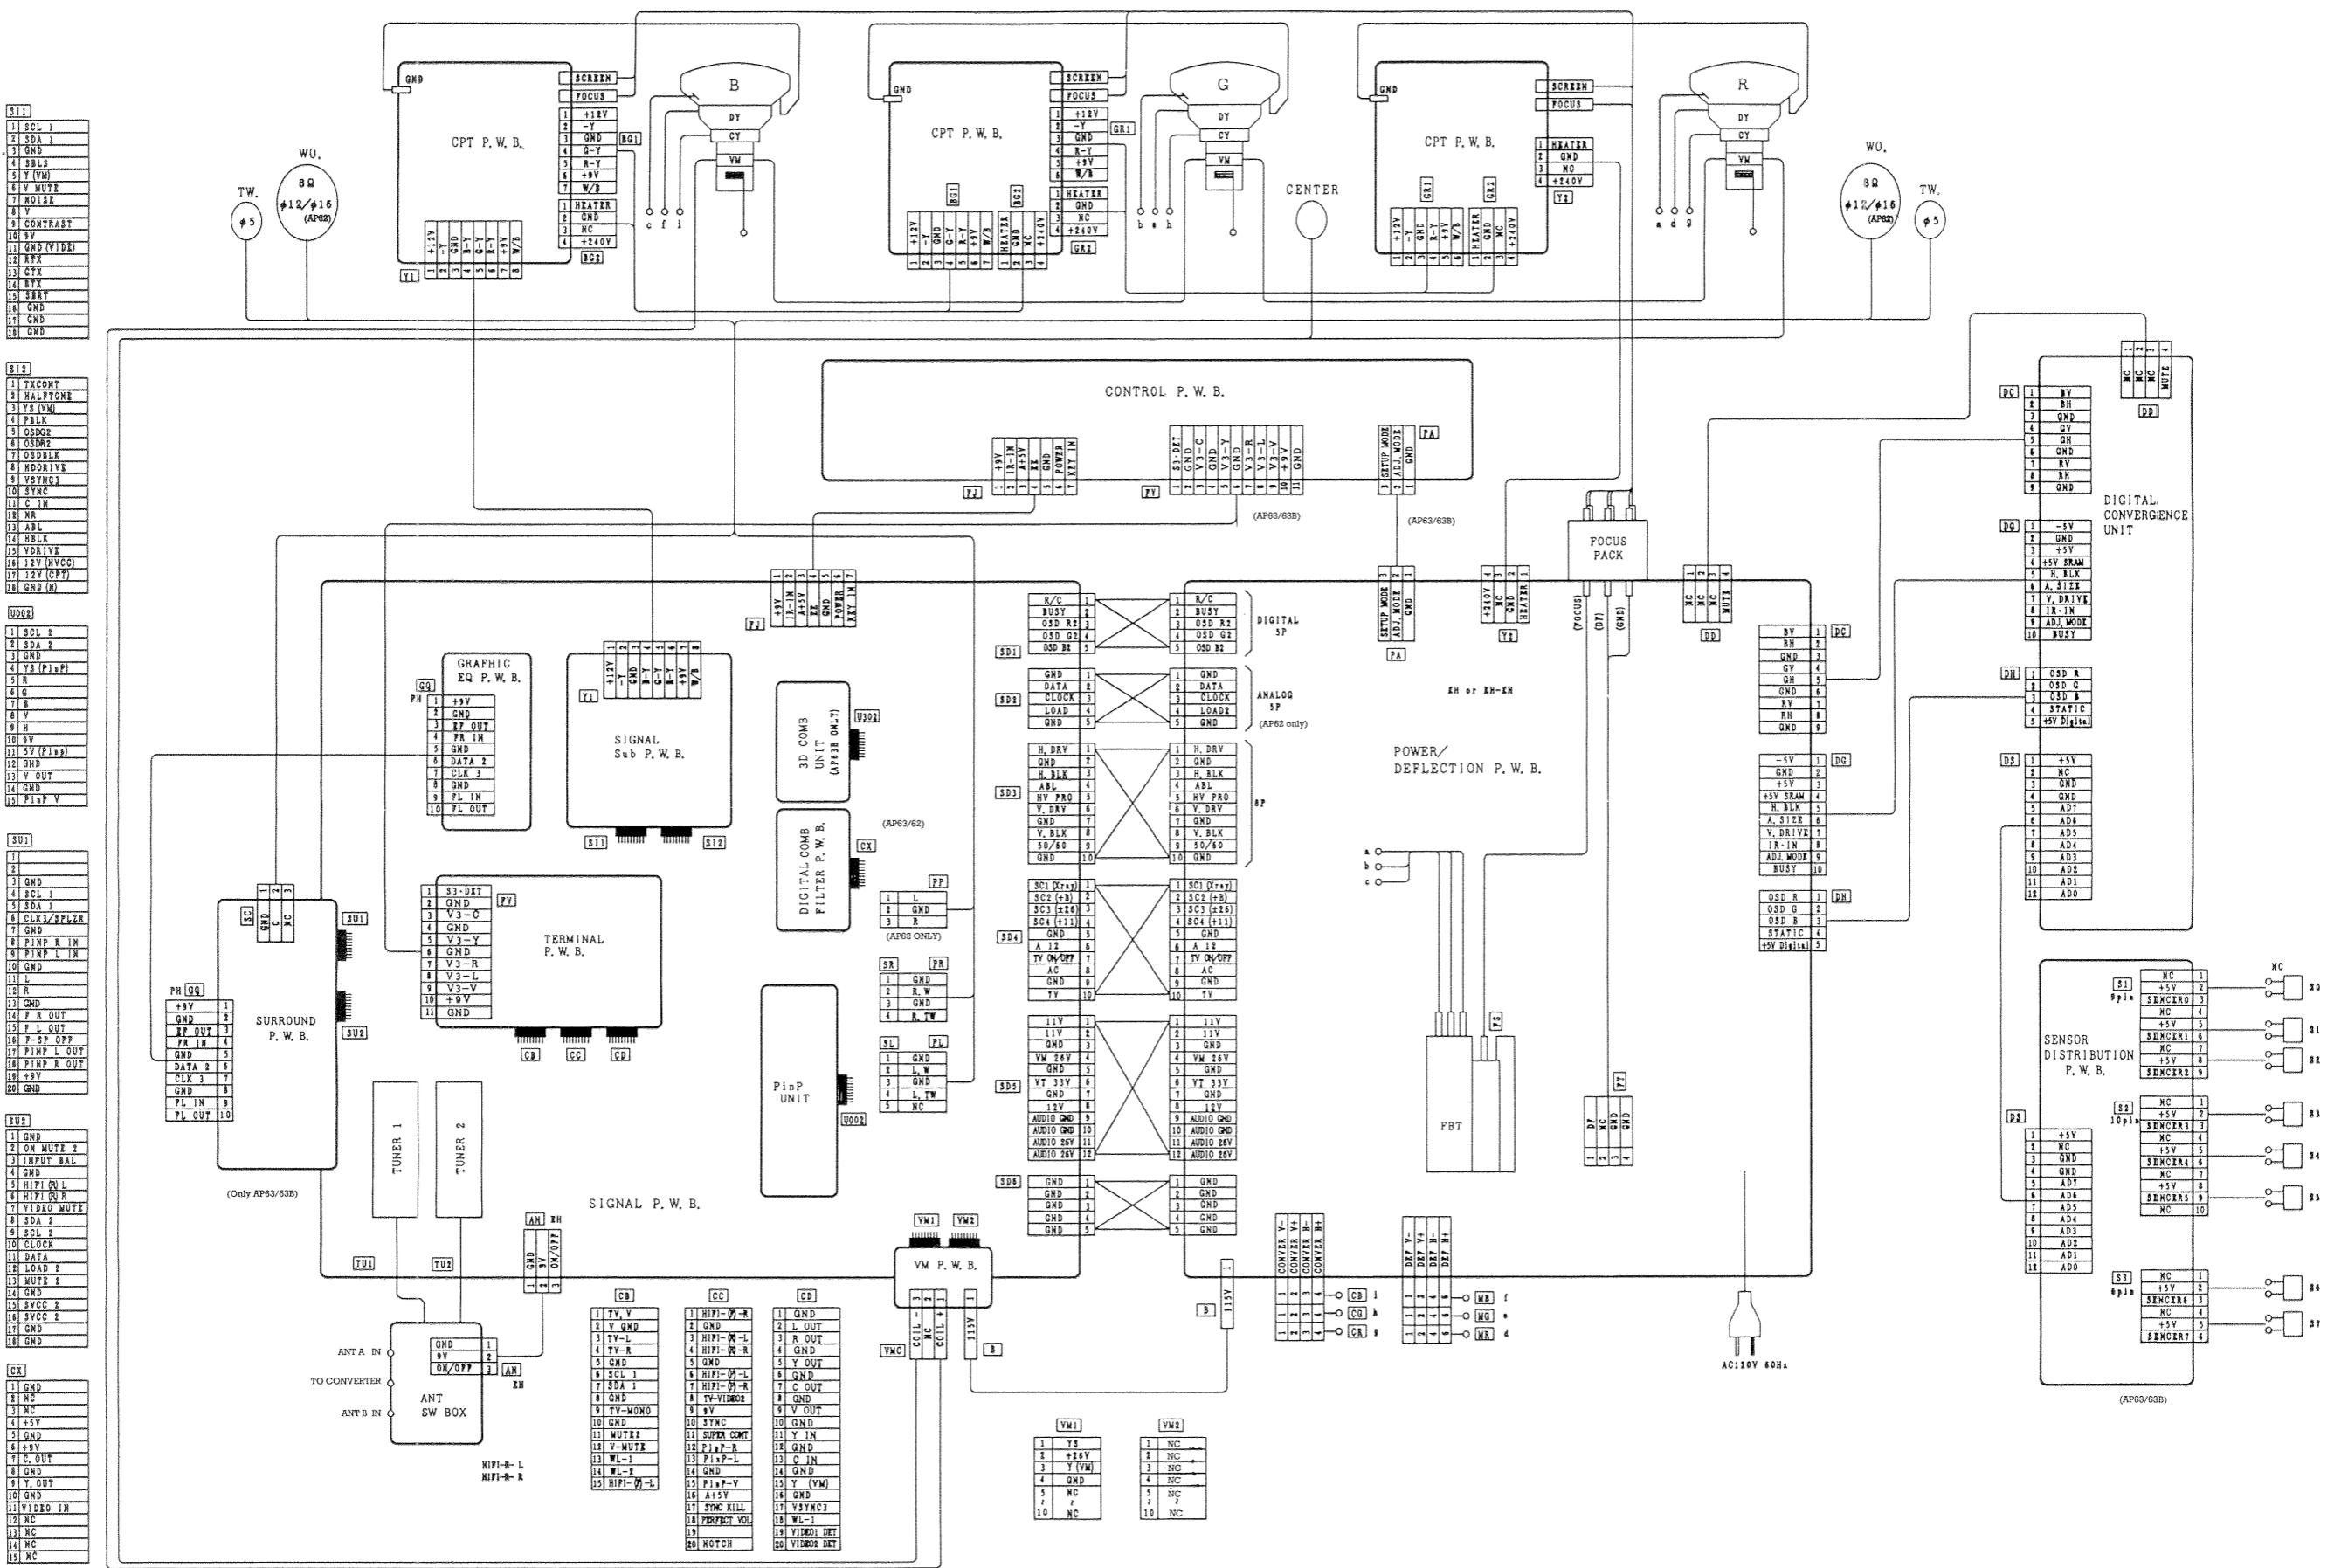


## WIRE DRESS DRAWING (1/3)

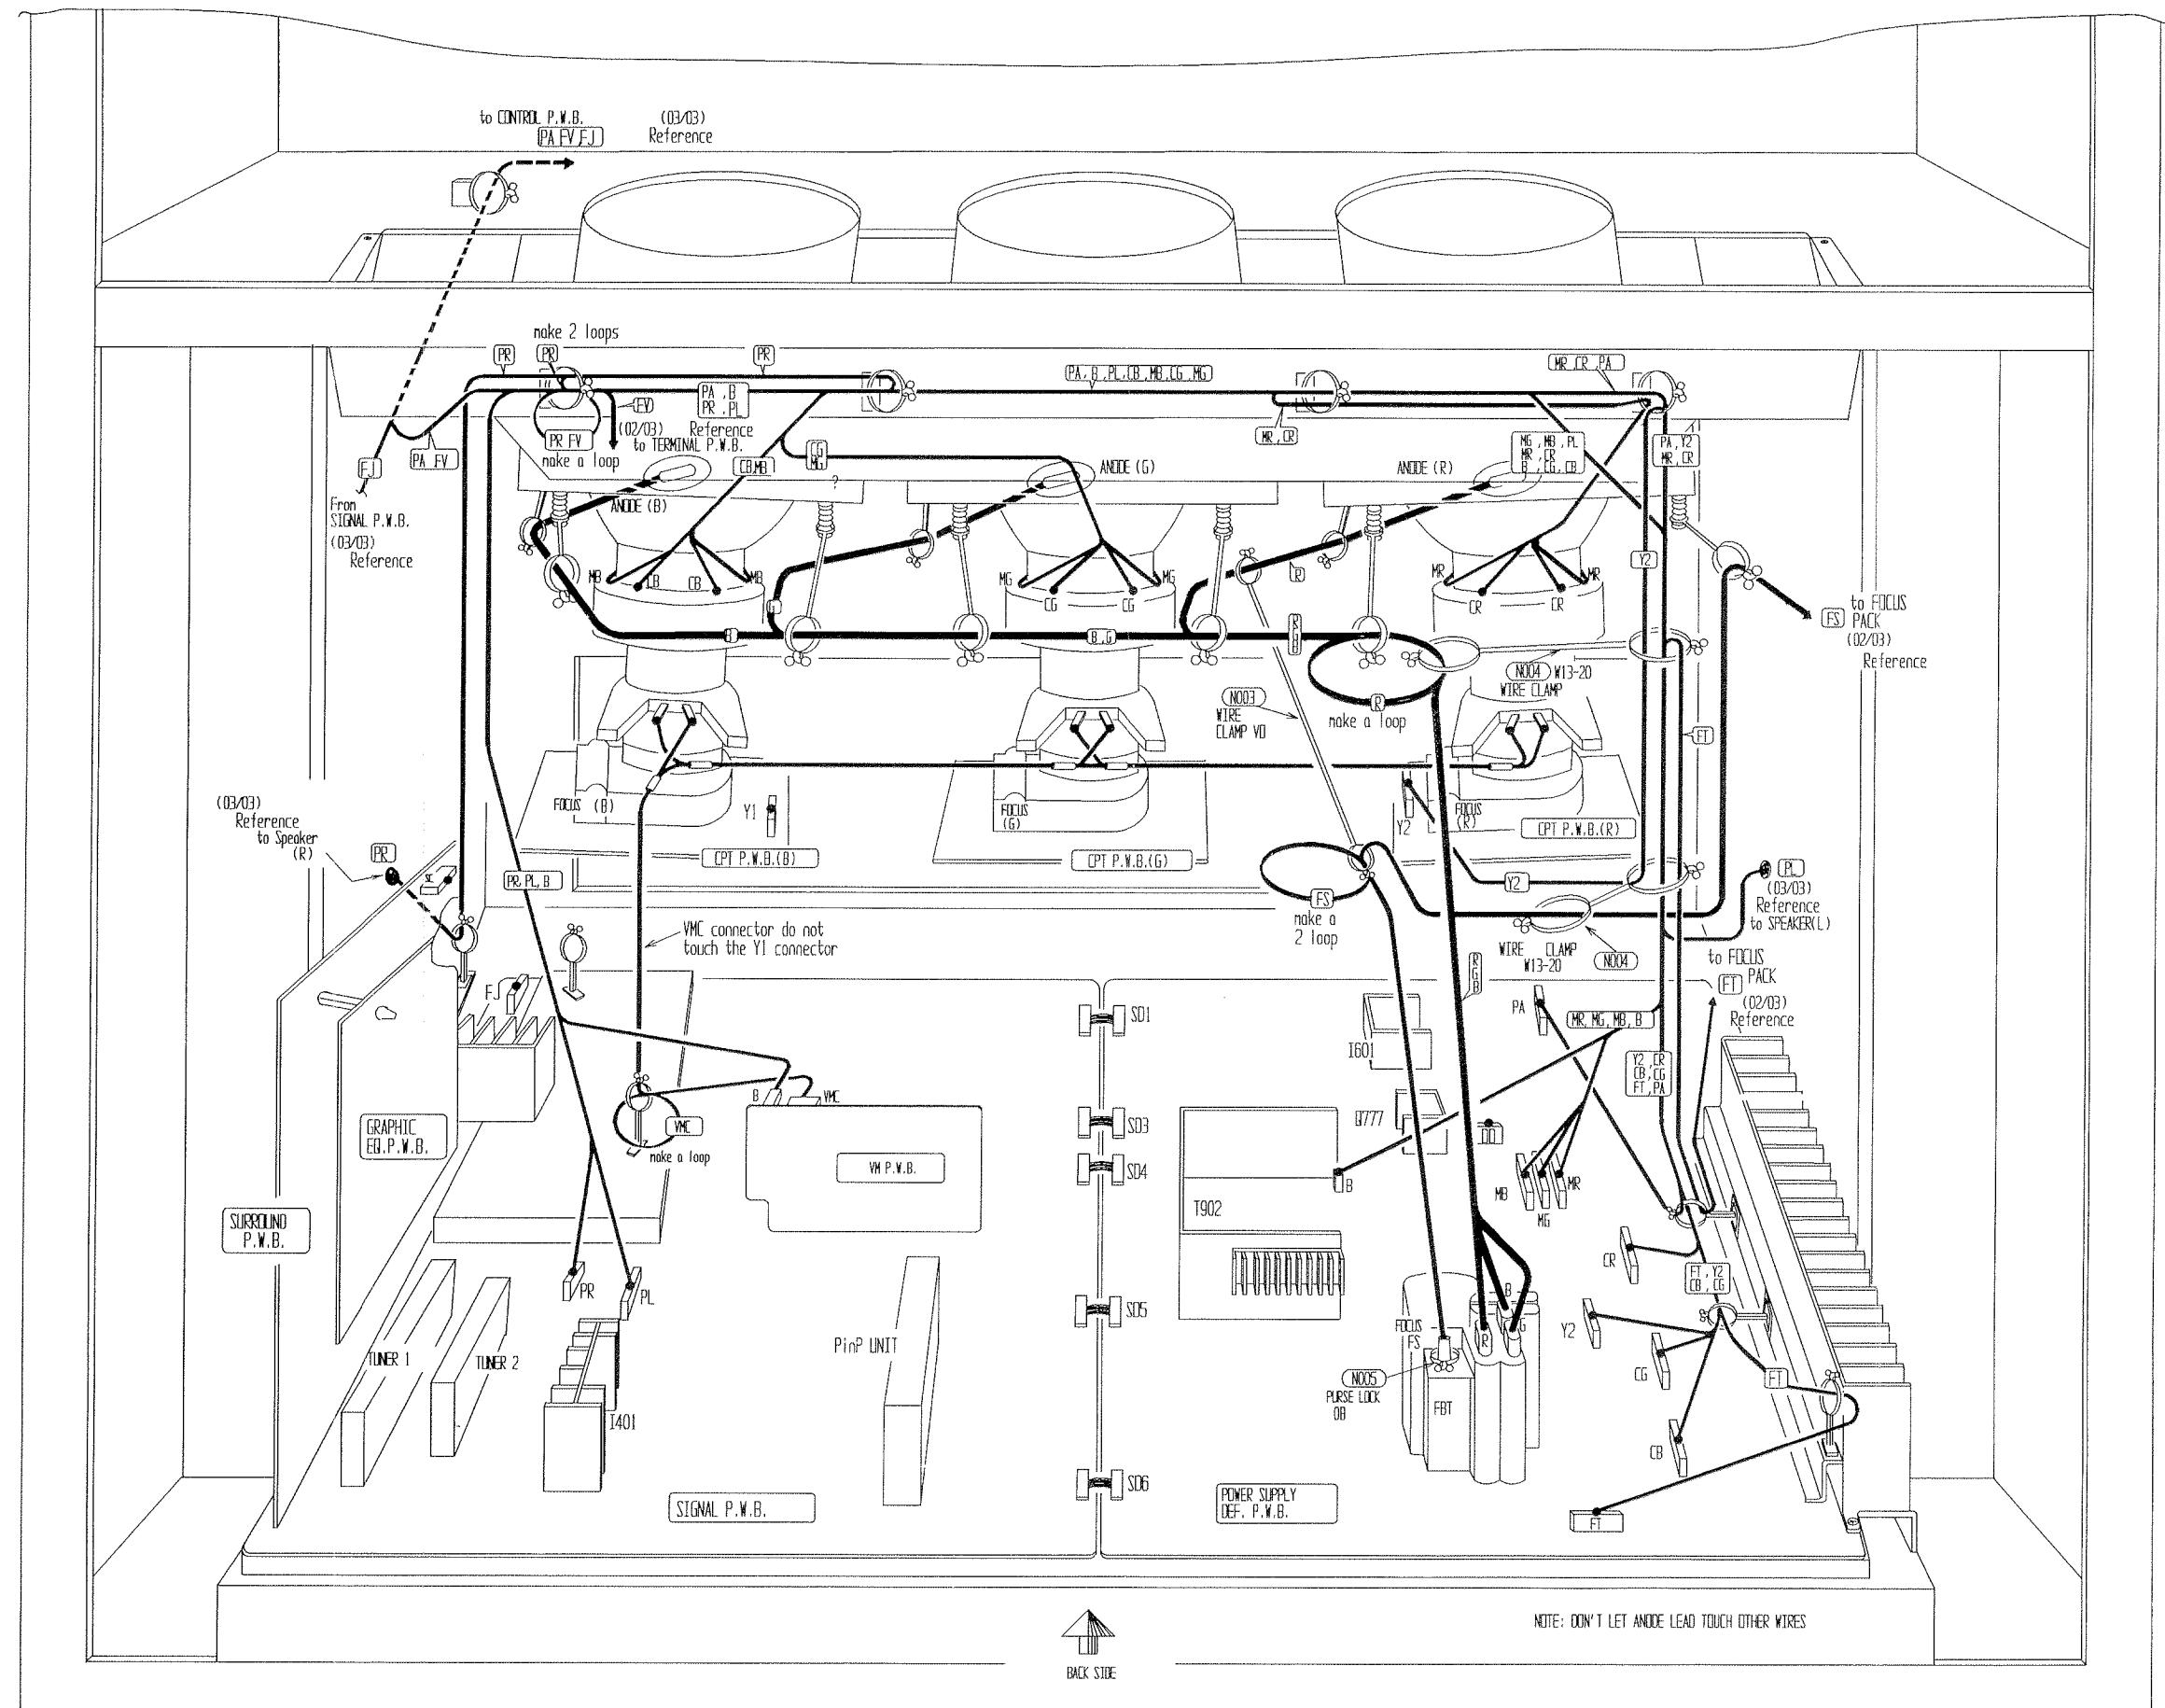


BACK SIDE


NOTE: DON'T LET ANODE LEAD TOUCH OTHER WIRES

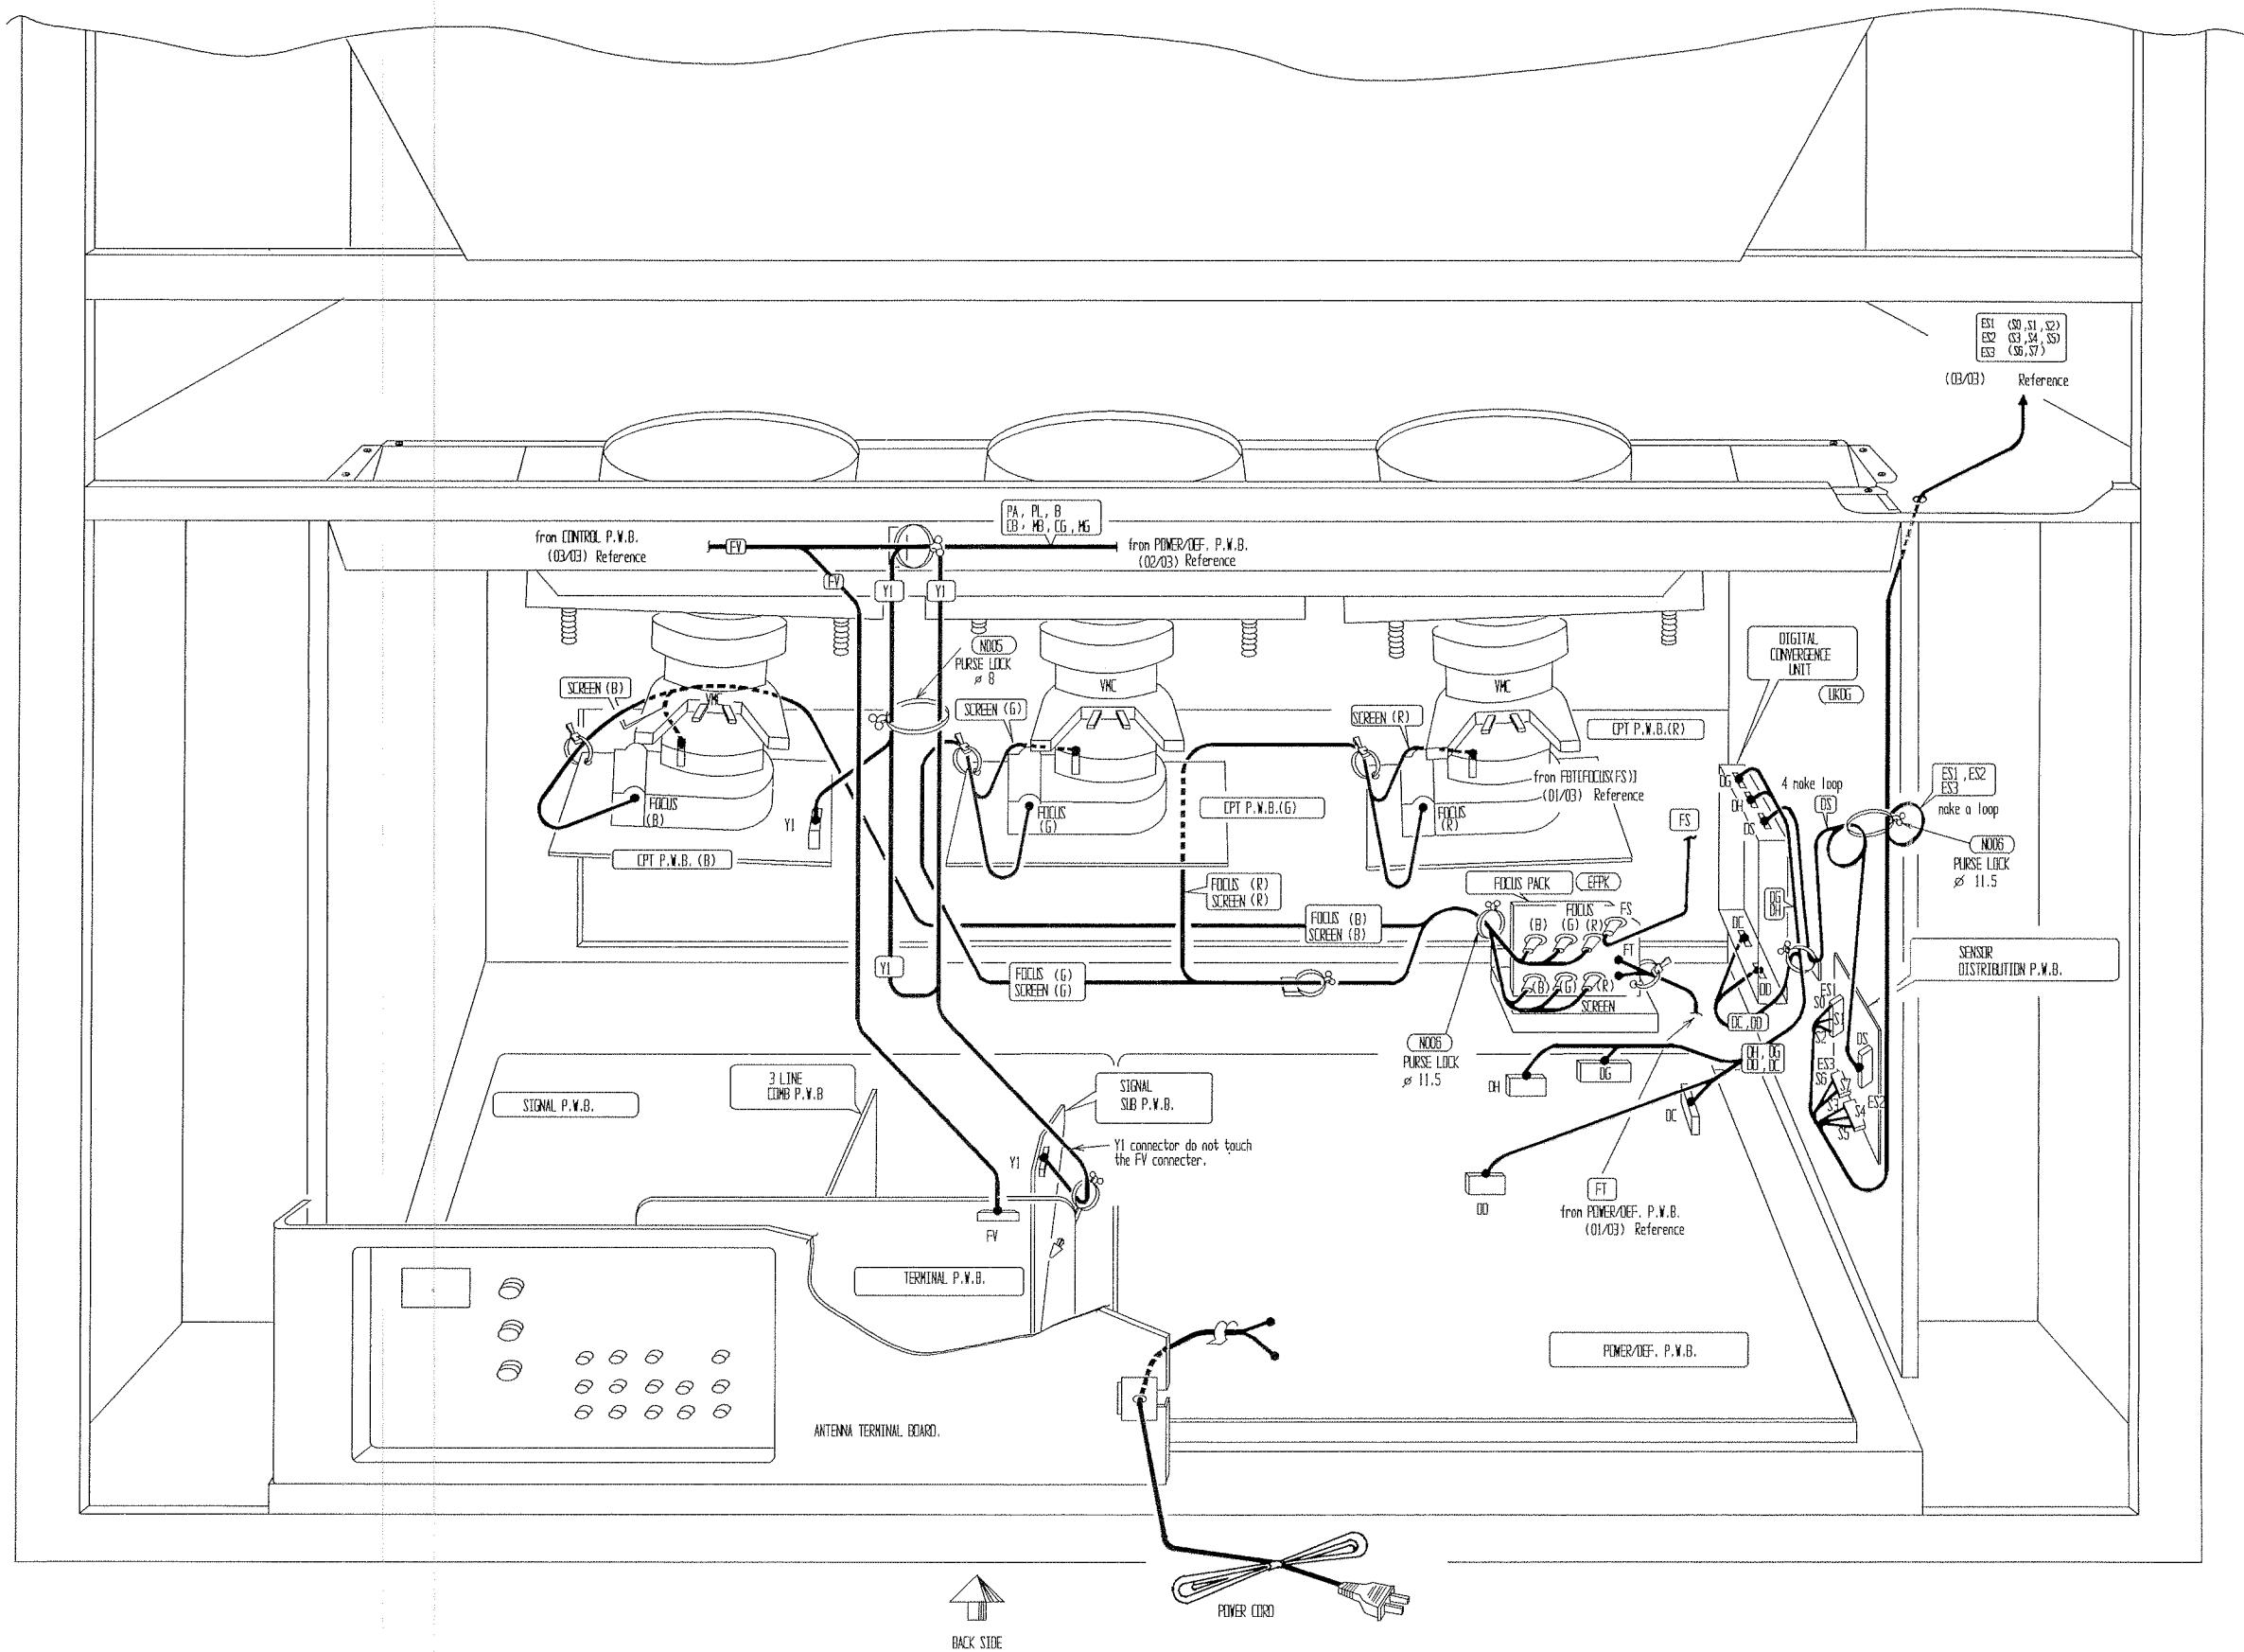

### WIRE DRESS DRAWING (3/3)

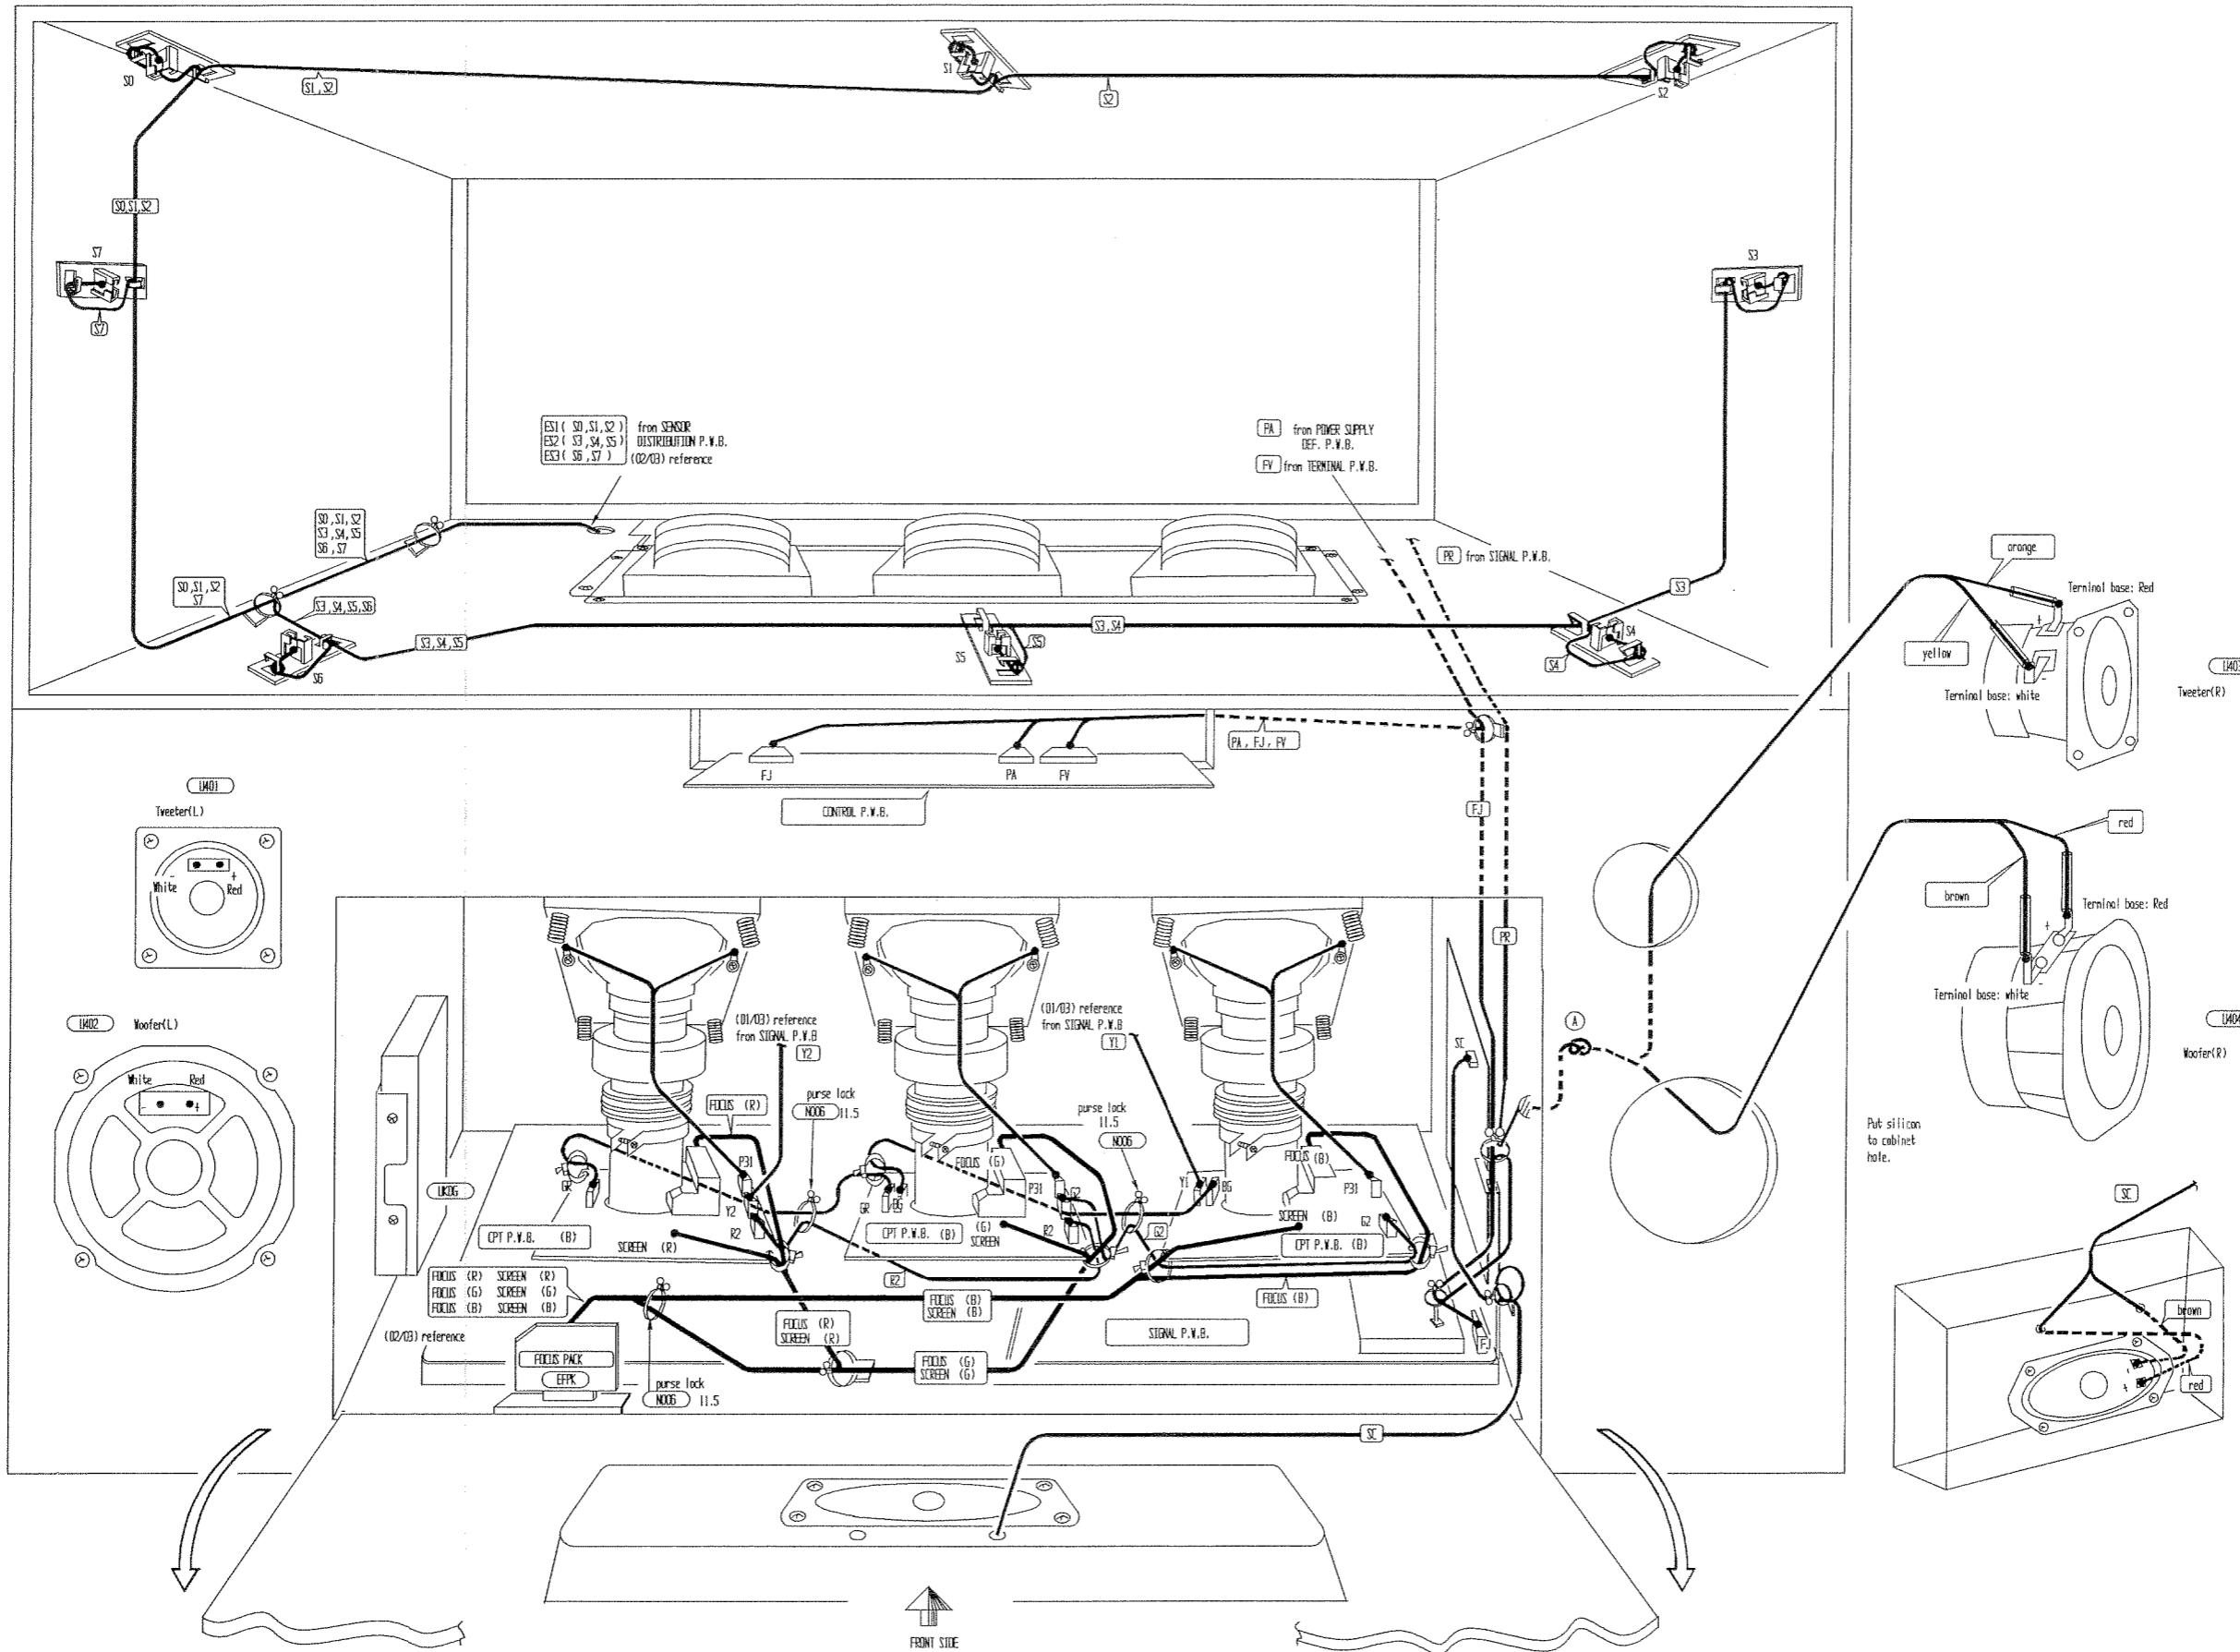


## EXPLODED VIEW (46UX24B/25K, 50UX26B/27K, 50SX8B) (1/3)

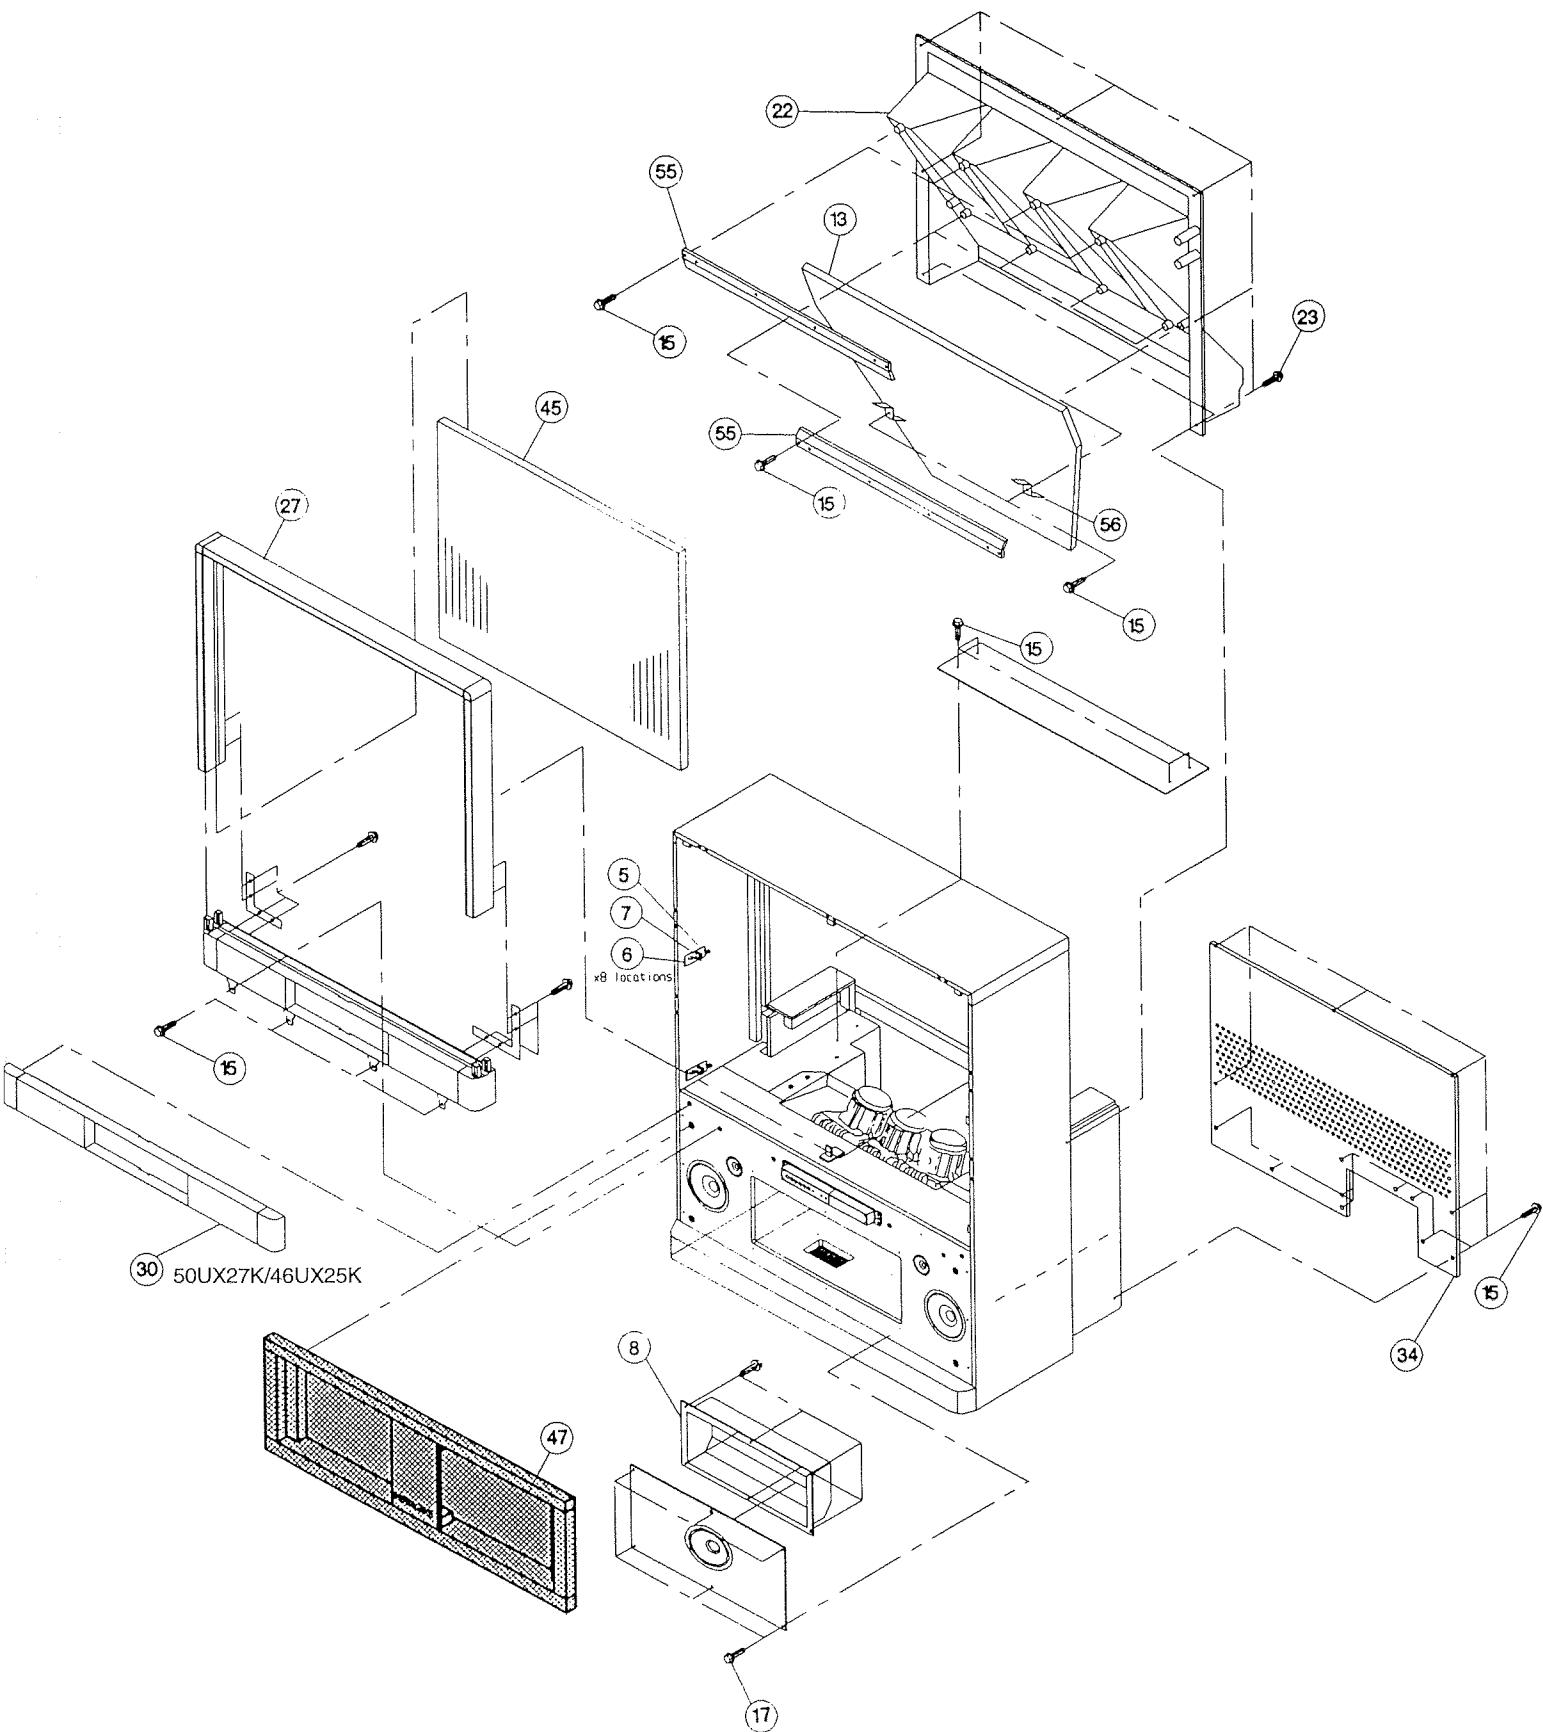

**Note:** Some parts may appear different than those shown in the exploded view. When ordering, refer to the REPLACEMENT PARTS LIST for correct part number. Since this Service Manual covers several models, use care to select the correct part for the model being serviced.


## EXPLODED VIEW (60SX12B/13K) (1/3)

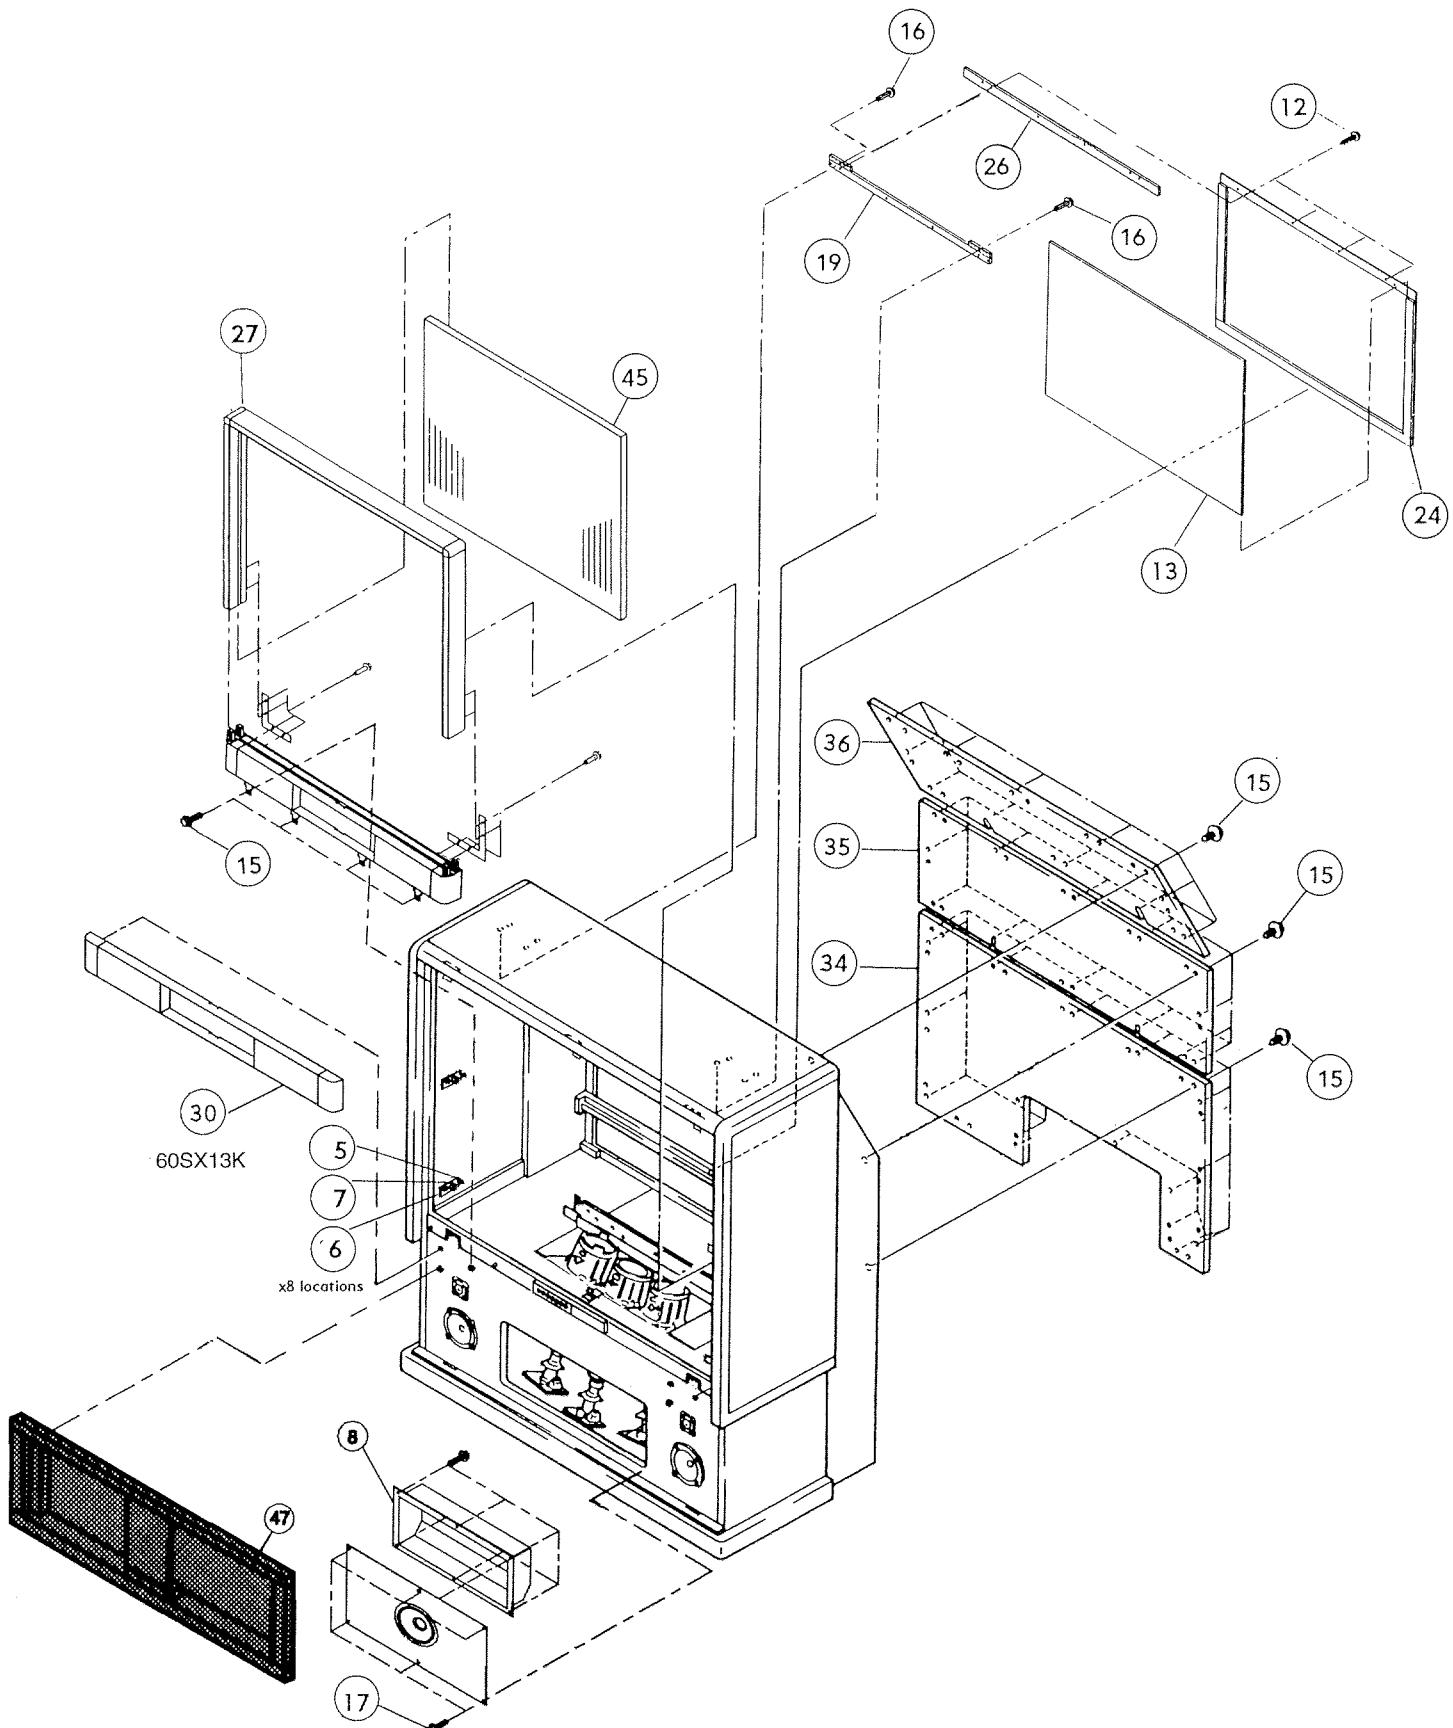

**Note:** Some parts may appear different than those shown in the exploded view. When ordering, refer to the REPLACEMENT PARTS LIST for correct part number. Since this Service Manual covers several models, use care to select the correct part for the model being serviced.

## EXPLODED VIEW (2/3)



60SX12B/13K  
50UX26B/27K  
46UX24B/25K  
50SX8B

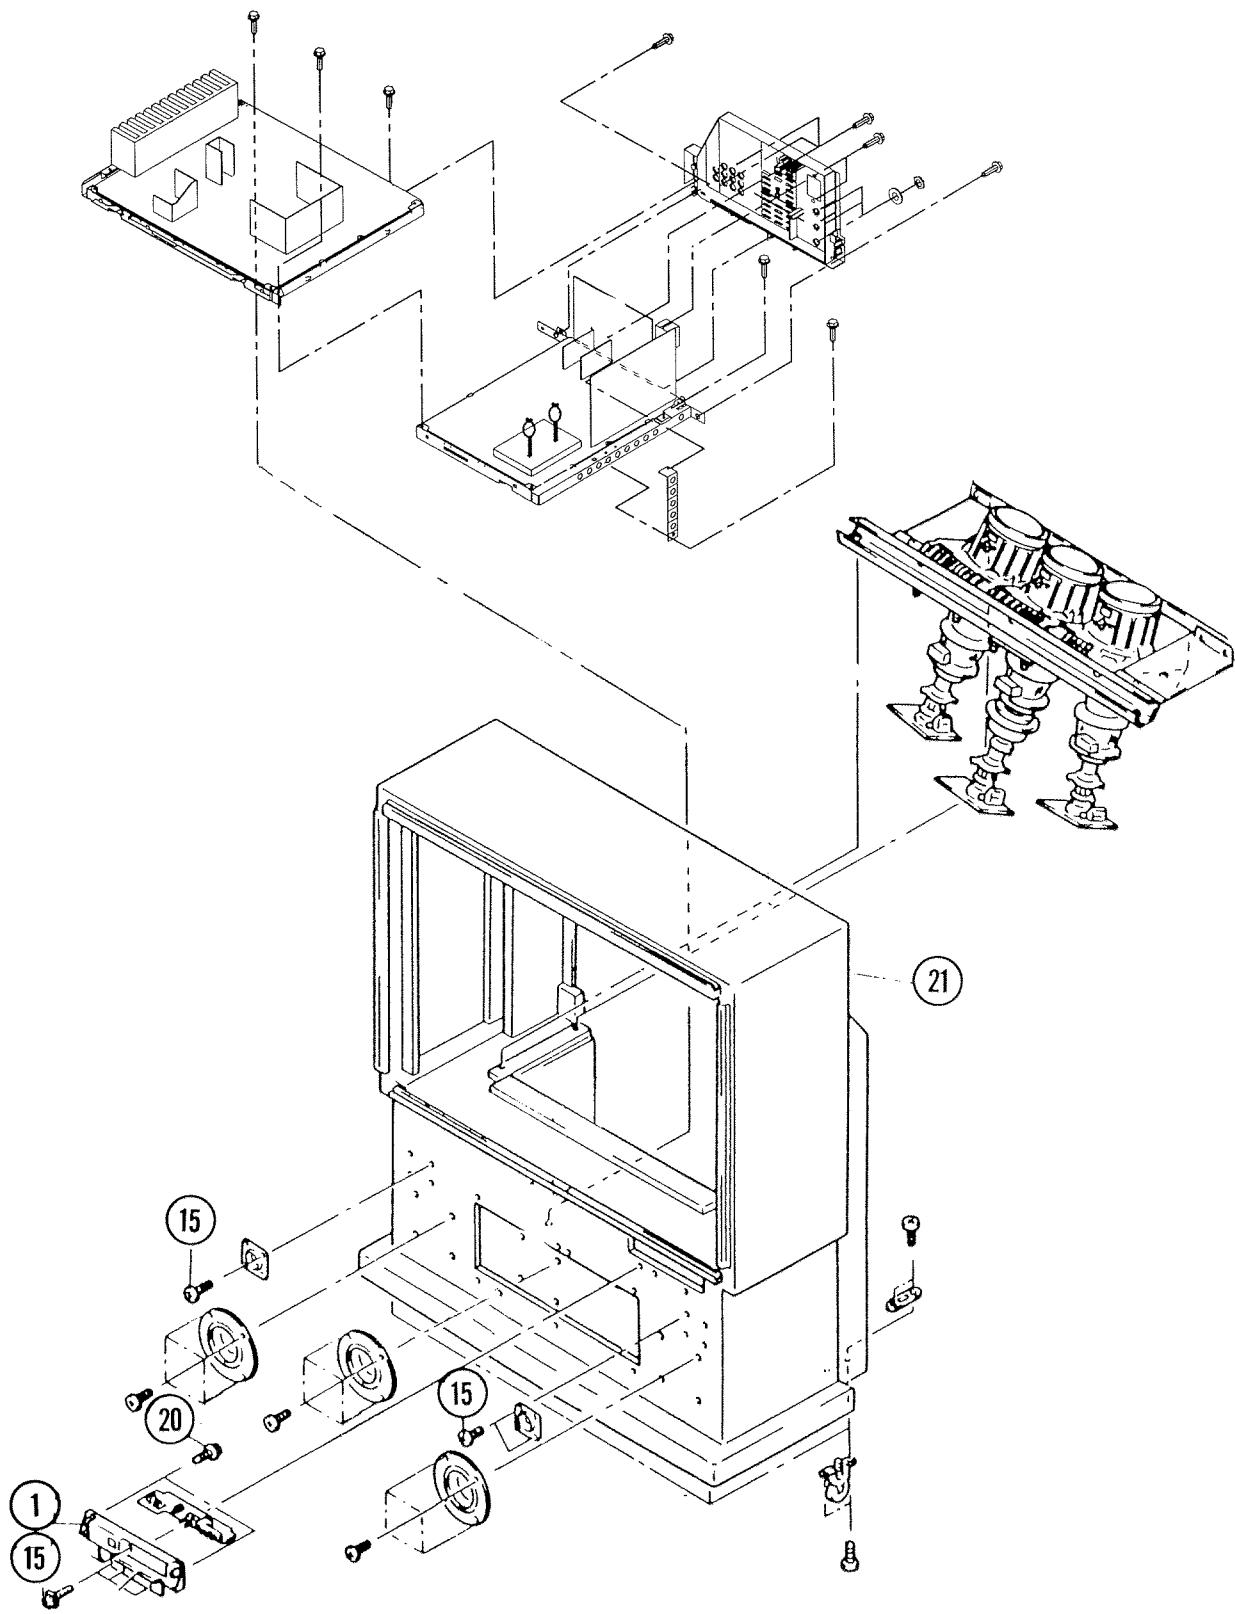

**Note:** Some parts may appear different than those shown in the exploded view. When ordering, refer to the REPLACEMENT PARTS LIST for correct part number. Since this Service Manual covers several models, use care to select the correct part for the model being serviced.

60SX12B/13K  
50UX26B/27K  
46UX24B/25K  
50SX8B

### EXPLODED VIEW (3/3)

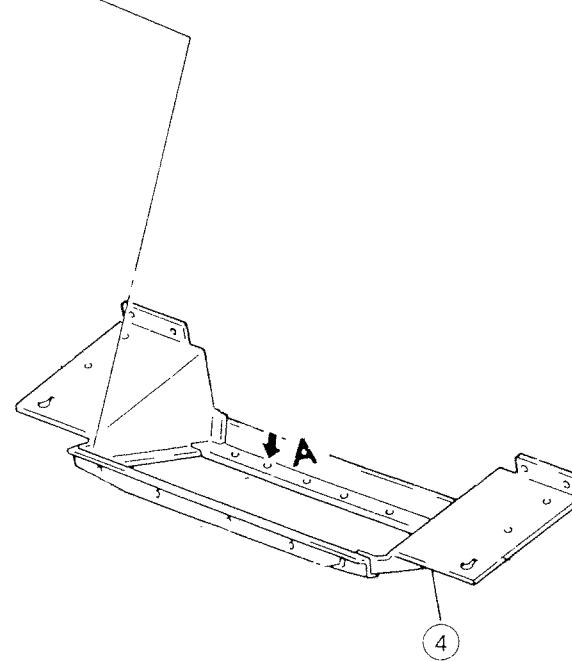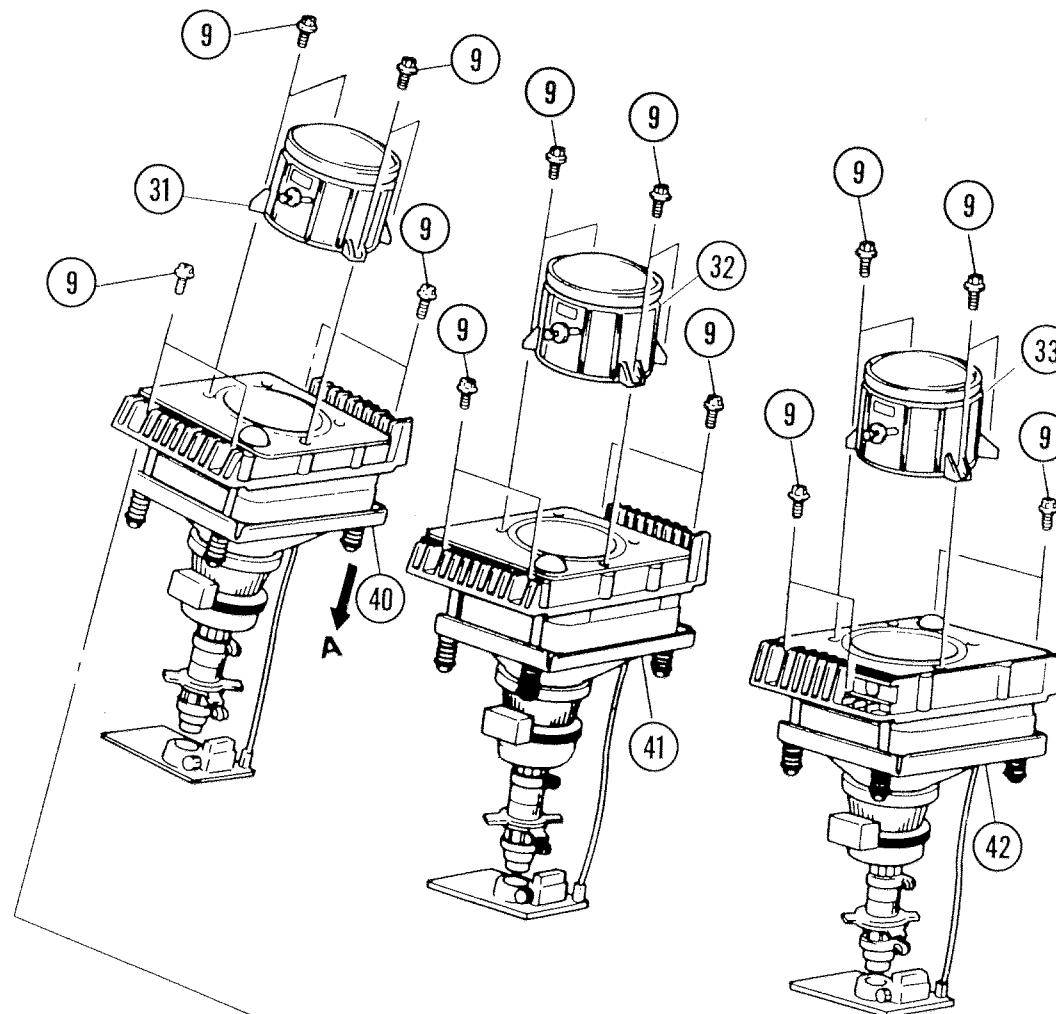

**Note:** Some parts may appear different than those shown in the exploded view. When ordering, refer to the REPLACEMENT PARTS LIST for correct part number. Since this Service Manual covers several models, use care to select the correct part for the model being serviced.

## REPLACEMENT PARTS LIST

**PRODUCT SAFETY NOTE:** Components marked with a  $\triangle$  have special characters important to safety. Before replacing any of these components, read carefully, the PRODUCT SAFETY NOTICE of this Service Manual. Don't degrade the safety of the receiver through improper servicing.

### ABBREVIATIONS

**Capitors:** CD: Ceramic Disc  
PF: Polyester Film  
EL: Electrolytic  
PP: Polypropylene  
PR: Paper  
TA: Tantalum  
TM: Trimmer

**Resistors:** CF: Carbon Film  
CC: Carbon Composition  
MF: Metal Oxide Film  
VR: Variable Resistor  
WW: Wire Wound  
FR: Fuse Resistor  
MG: Metal Glaze

**Semiconductors:** TR: Transistor  
DI: Diode  
ZD: Zener Diode  
VA Varistor  
TH: Thermistor  
IC: Integrated Circuit

CIRCUIT BLOCK	SECOND CHARACTER OF SYMBOL NO.	CIRCUIT BLOCK	SECOND CHARACTER OF SYMBOL NO.	CIRCUIT BLOCK	SECOND CHARACTER OF SYMBOL NO.
System Control	0	Signal Control	Y	CPT	8
Tuner	1	( include composite)		Horizontal Deflection	7
Signal (Y) & SYNC.	3	Signal Control	C	Vertical Deflection	6
Signal (Chroma)	5	(include BPF)		Dynamic Focus	F
3 Line Comb	X	Signal Control	A	Convergence	K
Sound	4	(include MTS)		Sensor Distribution	L
Surround	S	PIP	P	Power Supply	9
MTS	W	VM	E	Graphic Eq.	G
SP Terminal	Z	CONTROL	M		

SYMBOL NO.	PART NO.	PART DESCRIPTION	SYMBOL NO.	PART NO.	PART DESCRIPTION
		CAPACITORS	CA66	0800023R	EL 22UF-M 16V
CA01	0800003R	EL 1.0UF-M 50V	CA67	0800012R	EL 4.7UF-M 50V
CA02	0800003R	EL 1.0UF-M 50V	CA68	0800015R	EL 10UF-M 16V
CA03	0800003R	EL 1.0UF-M 50V	CA69	0800009R	EL 4.7UF-M 25V
CA04	0800003R	EL 1.0UF-M 50V	CA70	0800041R	EL 47UF-M 16V
CA05	0800003R	EL 1.0UF-M 50V	CA71	0800015R	EL 10UF-M 16V
CA06	0800003R	EL 1.0UF-M 50V	CA72	0800015R	EL 10UF-M 16V
CA07	0800003R	EL 1.0UF-M 50V	CA73	0800015R	EL 10UF-M 16V
CA08	0800003R	EL 1.0UF-M 50V	CA74	0800009R	EL 4.7UF-M 25V
CA26	0800015R	EL 10UF-M 16V	CA75	0800003R	EL 1.0UF-M 50V
CA27	0800015R	EL 10UF-M 16V	CA76	0800003R	EL 1.0UF-M 50V
CA28	0800015R	EL 10UF-M 16V	CA77	0800049R	EL 100UF-M 16V
CA29	0800015R	EL 10UF-M 16V	CA78	0800003R	EL 1.0UF-M 50V
CA31	0800015R	EL 10UF-M 16V	CA79	0284638R	EL 10UF-SME(BP) 16V
CA33	0800015R	EL 10UF-M 16V	CA80	0800015R	EL 10UF-M 16V
CA34	0800015R	EL 10UF-M 16V	CA81	0800015R	EL 10UF-M 16V
CA35	0800015R	EL 10UF-M 16V	CC02	0244171R	CD 0.01UF-Z F 50V TAPE
CA36	0800015R	EL 10UF-M 16V	CC03	0880044R	PF 0.01UF-KEB 50V (AP63B ONLY)
CA37	0800015R	EL 10UF-M 16V	CC70	0244171R	CD 0.01UF-Z F 50V TAPE
CA38	0800041R	EL 47UF-M 16V	CE01	0800075F	EL 470UF-M 25V
CA39	0800041R	EL 47UF-M 16V	CE02	0284621R	EL 0.47UF 50V (BP)
CA40	0800015R	EL 10UF-M 16V	CE03	0800041R	EL 47UF-M 16V
CA41	0800015R	EL 10UF-M 16V	CE04	0890081R	CD 330PF 50V
CA50	0284634R	EL 4.7UF-M 50V	CE05	0800049R	EL 100UF-M .6V
CA51	0800009R	EL 4.7UF-M 25V	CE06	0880044R	PF 0.01UF-KEB 50V
CA52	0284634R	EL 4.7UF-M 50V	CE07	0800049R	EL 100UF-M .6V
CA53	0800015R	EL 10UF-M 16V	CE08	0276717R	PF 0.1UF-J 50V (TF TYP E)
CA54	0800015R	EL 10UF-M 16V	CE09	0276717R	PF. 0.1UF-J 50V (TF TYP E)
CA55	0284634R	EL 4.7UF-M 50V	CE10	0800042R	EL 47UF-M 25V
CA56	0800015R	EL 10UF-M 16V	CE11	0890074R	CD 100PF-J 50V
CA57	0284634R	EL 4.7UF-M 50V	CE12	0244541F	CD 0.01MF-K B 500V
CA58	0284638R	EL10UF-SME(BP) 16V	CE13	0244541F	CD 0.01MF-K B 500V
CA59	0284638R	EL10UF-SME(BP) 16V	CE14	AL00009R	EL. 47UF 160V
CA60	0800049R	EL 100UF-M 16V	CE15	0247848R	CD 56PF-J SL 500V
CA61	0880057R	PF 0.1UF-KEB 50V	CE16	AL00007R	EL 220UF16
CA62	0880053R	PF 0.047UF-KEB 50V	CE17	0244509R	CD 4700PF-KB B 500V
CA63	0284638R	EL10UF-SME(BP) 16V	CE18	0890074R	CD 100PF-J 50V
CA64	0800015R	EL 10UF-M 16V	CE19	AL00009R	EL 47UF 160V
CA65	0284638R	EL10UF-SME(BP) 16V	CE20	AL00009R	EL 47UF 160V
			CE21	0890077R	CD 180PF-K 50V

## REPLACEMENT PARTS LIST

**PRODUCT SAFETY NOTE:** Components marked with a  have special characters important to safety. Before replacing any of these components, read carefully, the PRODUCT SAFETY NOTICE of this Service Manual. Don't degrade the safety of the receiver through improper servicing.

SYMBOL NO.	PART NO.	PART DESCRIPTION	SYMBOL NO.	PART NO.	PART DESCRIPTION
CF01	0800317R	EL 47UF-M(SMG) 16V	CK08	AN00075R	PF 104UF 50V
CF02	0800353R	EL 470UF-M 16V	CK10	0800353R	EL 470UF-M 16V
CF03	0284638R	EL10UF-SME(BP) 16V	CK11	0800058R	EL 220UF-M 16V
CF04	0800291R	EL10UF-M(SMG) 16V	CK13	AN00075R	PF 104UF 50V
CF05	0276721R	PF 0.22UF-J 50V (TF TY PE)	CK14	AN00075R	PF 104UF 50V
CF06	0800291R	EL10UF-M(SMG) 16V	CK15	0248688R	CD 150PF-J SL 50V
CF07	0880041R	PF 0.0056UF-KEB50V	CK17	0248688R	CD 150PF-J SL 50V
CF08	0244120R	CD 820PF-K B 50V	CK19	0248688R	CD 150PF-J SL 50V
CF09	0284642R	EL10UF-SME(BP)50V	CK21	0248688R	CD 150PF-J SL 50V
CF10	0890083R	CD 470PF-K 50V	CK23	0248688R	CD 150PF-J SL 50V
CF11	0800291R	EL10UF-M(SMG) 16V	CK25	0248688R	CD 150PF-J SL 50V
CF12	AN00062R	PF 103UF 50V	CK27	0258175G	EL 470UF 50V
CF13	0890082R	CD 390PF-K 50V	CK28	0258175G	EL 470UF 50V
CF14	0800353R	EL 470UF-M 16V	CK29	0248688R	CD 150PF-J SL 50V
CF15	0284638R	EL10UF-SME(BP) 16V	CK30	0248688R	CD 150PF-J SL 50V
CF16	0800291R	EL10UF-M(SMG) 16V	CK31	0248688R	CD 150PF-J SL 50V
CF17	0244109R	CD 4700PF-KB 50V	CK32	0248688R	CD 150PF-J SL 50V
CG01	0800353R	EL 470UF-M 16V	CK33	0248688R	CD 150PF-J SL 50V
CG02	0800049R	EL 100UF-M 16V	CK34	0248688R	CD 150PF-J SL 50V
CG03	0880057R	PF 0.1UF-KEB 50V	CK41	0248688R	CD 150PF-J SL 50V
CG04	0880057R	PF 0.1UF-KEB 50V	CK42	0880031R	PF 1000PF-K 50V
CG05	0800049R	EL 100UF-M 16V	CK45	0880042R	PF 0.0068UF-KEB50V
CG06	0284623R	EL 1UF-SME(BP) 50V	CK46	0880044R	PF 0.01UF-KEB 50V
CG07	0880057R	PF 0.1UF-KEB 50V	CK47	0880044R	PF 0.01UF-KEB 50V
CG08	0880057R	PF 0.1UF-KEB 50V	CK51	0800321R	EL 47UF-M 50V
CG09	0284623R	EL 1UF-SME(BP) 50V	CK52	0800321R	EL 47UF-M 50V
CG10	0284621R	EL 0.47UF 50V (BP)	CK53	0800321R	EL 47UF-M 50V
CG11	0880052R	PF 0.039UF-KEB 50V	CK54	0800321R	EL 47UF-M 50V
CG12	0880052R	PF 0.039UF-KEB 50V	CK55	0800321R	EL 47UF-M 50V
CG13	0284621R	EL 0.47UF 50V (BP)	CK56	0800321R	EL 47UF-M 50V
CG14	0880062R	PF 0.22UF-KEB 50V	CL01	0880053R	PF 0.047UF-KEB 50V
CG15	0880046R	PF 0.015UF-K 50V	CL02	0880053R	PF 0.047UF-KEB 50V
CG16	0880046R	PF 0.015UF-K 50V	CL03	0880053R	PF 0.047UF-KEB 50V
CG17	0880062R	PF 0.22UF-KEB 50V	CL04	0880053R	PF 0.047UF-KEB 50V
CG18	0880056R	PF 0.082UF-KEB 50V	CL05	0880053R	PF 0.047UF-KEB 50V
CG19	0880041R	PF 0.0056UF-KEB50V	CL06	0880053R	PF 0.047UF-KEB 50V
CG20	0880041R	PF 0.0056UF-KEB50V	CL07	0880053R	PF 0.047UF-KEB 50V
CG21	0880056R	PF 0.082UF-KEB 50V	CL08	0880053R	PF 0.047UF-KEB 50V
CG22	0880052R	PF 0.039UF-KEB 50V	CL09	0800049R	EL 100UF-M 16V
CG23	0880037R	PF 0.0033UF-KEB50V	CL10	0880057R	PF 0.1UF-KEB 50V
CG24	0880037R	PF 0.0033UF-KEB50V	CM01	0800023R	EL 22UF-M 16V
CG25	0880052R	PF 0.039UF-KEB 50V	CM02	0244171R	CD 0.01UF-Z F 50V TAPE
CG26	0880047R	PF 0.018UF-KEB 50V	CM03	0800003R	EL 1.0UF-M 50V
CG27	0880032R	PF 0.0012UF-KEB50V	CM04	0244171R	CD 0.01UF-Z F 50V TAPE
CG28	0880032R	PF 0.0012UF-KEB50V	CM05	0244171R	CD 0.01UF-Z F 50V TAPE
CG29	0880047R	PF 0.018UF-KEB 50V	CM06	0880057R	PF 0.1UF-KEB 50V
CG30	0880043R	PF 0.0082UF-KEB50V	CN01	0800279R	EL 1.0UF-M(SMG) 50V
CG31	0890084R	CD 560PF-K 50V	CN02	0800288R	EL 4.7UF-M(SMG) 50V
CG32	0890084R	CD 560PF-K 50V	CN03	0880051R	PF 0.033UF-KEB 50V
CG33	0880043R	PF 0.0082UF-KEB50V	CN04	0890084R	CD 560PF-K 50V
CG34	0284638R	EL 10UF-SME(BP) 16V	CN05	0800041R	EL 47UF-M 16V
CG35	0800015R	EL 10UF-M 16V	CN06	0800018R	EL 10UF-M 50V
CG36	0284638R	EL 10UF-SME(BP) 16V	CSA1	0284638R	EL 10UF-SME(BP) 16V
CG37	0800015R	EL 10UF-M 16V	CSA2	0890087R	CD 1000PF-K 50V
CG38	0800041R	EL 47UF-M 16V	CSA3	0890087R	CD 1000PF-K 50V
CG39	0800015R	EL 10UF-M 16V	CSA4	0284638R	EL 10UF-SME(BP) 16V
CG40	0800015R	EL 10UF-M 16V	CSA5	0880051R	PF 0.033UF-KEB 50V
CK01	0800326R	EL 100UF-M 16V	CSA6	0880041R	PF 0.0056UF-KEB50V
CK02	0244141R	CD 0.01UF-KB B 50V	CSA7	0880041R	PF 0.0056UF-KEB50V
CK03	0800326R	EL 100UF-M 16V	CSA8	0880051R	PF 0.033UF-KEB 50V
CK04	0244141R	CD 0.01UF-KB B 50V	CSA9	0880057R	PF 0.1UF-KEB 50V
CK05	AN00075R	PF 104UF 50V )	CSC1	0800049R	EL 100UF-M 16V
CK06	0800326R	EL 100UF-M 16V	CSC2	0800049R	EL 100UF-M 16V
CK07	0800326R	EL 100UF-M 16V	CSC3	0800015R	EL 10UF-M 16V

## REPLACEMENT PARTS LIST

**PRODUCT SAFETY NOTE:** Components marked with a  $\Delta$  have special characters important to safety. Before replacing any of these components, read carefully, the PRODUCT SAFETY NOTICE of this Service Manual. Don't degrade the safety of the receiver through improper servicing.

SYMBOL NO.	PART NO.	PART DESCRIPTION	SYMBOL NO.	PART NO.	PART DESCRIPTION
CSC4	0800015R	EL 10UF-M 16V	CS32	0800012R	EL 4.7UF-M 50V
CSC5	0800015R	EL 10UF-M 16V	CS33	0880059R	PF 0.15UF-KEB 50V
CSC6	0800015R	EL 10UF-M 16V	CS34	0800007R	EL 3.3UF-M 50V
CSC7	0800015R	EL 10UF-M 16V	CS35	0880059R	PF 0.15UF-KEB 50V
CSC8	0800015R	EL 10UF-M 16V	CS36	0284638R	EL 10UF-SME(BP) 16V
CSC9	0800003R	EL 1.0UF-M 50V	CS37	0284638R	EL 10UF-SME(BP) 16V
CSE1	0800003R	EL 1.0UF-M 50V	CS38	0880057R	PF 0.1UF-KEB 50V
CSE2	0800003R	EL 1.0UF-M 50V	CS39	0880058R	EL 220UF-M 16V
CSE3	0890087R	CD 1000PF-K 50V	CS40	0246451R	CD 30PF-JB CH 50V
CSE4	0890087R	CD 1000PF-K 50V	CS41	0246451R	CD 30PF-JB CH 50V
CSE5	0890087R	CD 1000PF-K 50V	CS42	0800058R	EL 220UF-M 16V
CSE6	0800015R	EL 10UF-M 16V	CS43	0880051R	PF 0.033UF-KEB 50V
CSE7	0800015R	EL 10UF-M 16V	CS44	0880033R	PF 0.0015UF-KEB50V
CSE8	0800003R	EL 1.0UF-M 50V	CS45	0880051R	PF 0.033UF-KEB 50V
CSE9	0800042R	EL 47UF-M 25V	CS46	0800003R	EL 1.0UF-M 50V
CSF1	0800042R	EL 47UF-M 25V	CS47	0800015R	EL 10UF-M 16V
CSF2	0800042R	EL 47UF-M 25V	CS48	0800015R	EL 10UF-M 16V
CSF3	0800051R	EL 100UF-M 25V	CS49	0880058R	EL 220UF-M 16V
CSF6	0800042R	EL 47UF-M 25V	CS50	0800015R	EL 10UF-M 16V
CSF7	0800042R	EL 47UF-M 25V	CS51	0800015R	EL 10UF-M 16V
CSF8	0800051R	EL 100UF-M 25V	CS52	0800003R	EL 1.0UF-M 50V
CSF9	0800084F	EL 1000UF-M 35V	CS53	0284623R	EL 1UF-SME(BP) 50V
CSG2	0880057R	PF 0.1UF-KEB 50V	CS54	0284623R	EL 1UF-SME(BP) 50V
CSG3	0880057R	PF 0.1UF-KEB 50V	CS55	0800005R	EL 2.2UF-M 50V
CSG4	0880057R	PF 0.1UF-KEB 50V	CS56	0800041R	EL 47UF-M 16V
CSG5	0800083F	EL 1000UF-M 25V	CS57	0800058R	EL 220UF-M 16V
CSG6	0800083F	EL 1000UF-M 25V	CS58	0880057R	PF 0.1UF-KEB 50V
CSG7	0800083F	EL 1000UF-M 25V	CS59	0880044R	PF 0.01UF-KEB 50V
CSG8	0880057R	PF 0.1UF-KEB 50V	CS60	0880053R	PF 0.047UF-KEB 50V
CSG9	0880057R	PF 0.1UF-KEB 50V	CS61	0800015R	EL 10UF-M 16V
CSH1	0880057R	PF 0.1UF-KEB 50V	CS62	0880203R	PF 0.47UF-J 50V
CSH2	08000329R	EL 100UF-M(SMG) 50V	CS64	0800015R	EL 10UF-M 16V
CSH3	0800041R	EL 47UF-M 16V	CS65	0890087R	CD 1000PF-K 50V
CSH4	0800015R	EL 10UF-M 16V	CS66	0800015R	EL 10UF-M 16V
CSH5	0800015R	EL 10UF-M 16V	CS67	0890087R	CD 1000PF-K 50V
CS01	0880057R	PF 0.1UF-KEB 50V	CS68	0880051R	PF 0.033UF-KEB 50V
CS02	0800049R	EL 100UF-M 16V	CS69	0880041R	PF 0.0056UF-KEB50V
CS03	0890085R	CD 680PF-K 50V	CS70	0880041R	PF 0.0056UF-KEB50V
CS06	0800015R	EL 10UF-M 16V	CS71	0880051R	PF 0.033UF-KEB 50V
CS07	0880203R	PF 0.47UF-J 50V	CS72	0880057R	PF 0.1UF-KEB 50V
CS08	0800041R	EL 47UF-M 16V	CS73	0800049R	EL 100UF-M 16V
CS09	0880057R	PF 0.1UF-KEB 50V	CS74	0800049R	EL 100UF-M 16V
CS10	0880057R	PF 0.1UF-KEB 50V	CS75	0284638R	EL 10UF-SME(BP) 16V
CS11	0800001R	EL 0.47UF-M 50V (SME)	CS76	0284638R	EL 10UF-SME(BP) 16V
CS12	0800012R	EL 4.7UF-M 50V	CS98	0800049R	EL 100UF-M 16V
CS13	0800001R	EL 0.47UF-M 50V (SME)	CS99	0800015R	EL 10UF-M 16V
CS14	0800012R	EL 4.7UF-M 50V	CX01	0800041R	EL 47UF-M 16V (AP63 ONLY)
CS15	0880059R	PF 0.15UF-KEB 50V	CX02	0890065R	CD 22PF-J 50V (AP63 ONLY)
CS16	0800007R	EL 3.3UF-M 50V	CX03	0890061R	CD 10PF- 50V (AP63 ONLY)
CS17	0880059R	PF 0.15UF-KEB 50V	CX04	0890064R	CD 18PF-J SL 50V (AP63 ONLY)
CS18	0880048R	PF 0.022UF-KEB 50V	CX05	0800049R	EL 100UF-M 16V (AP63 ONLY)
CS19	0880053R	PF 0.047UF-KEB 50V	CX06	0880009R	EL 4.7UF-M 25V (AP63 ONLY)
CS20	0800058R	EL 220UF-M 16V	CX07	0880031R	PF 1000PF-K 50V (AP63 ONLY)
CS21	0800015R	EL 10UF-M 16V	CX08	0890071R	CD 56PF-J 50V (AP63 ONLY)
CS22	0800015R	EL 10UF-M 16V	CX09	0880044R	PF 0.01UF-KEB 50V (AP63 ONLY)
CS23	0800015R	EL 10UF-M 16V	CX10	0800005R	EL 2.2UF-M 50V (AP63 ONLY)
CS24	0800015R	EL 10UF-M 16V	CX11	0800009R	EL 4.7UF-M 25V (AP63 ONLY)
CS25	0284623R	EL 1UF-SME(BP) 50V	CX12	0244171R	CD 0.01UF-Z F 50V TAPE (AP63 ONLY)
CS26	0284623R	EL 1UF-SME(BP) 50V	CX13	0246443R	CD 13PF (C) 50WV (AP63 ONLY)
CS27	0880057R	PF 0.1UF-KEB 50V	CX14	0880044R	PF 0.01UF-KEB 50V (AP63 ONLY)
CS28	0880057R	PF 0.1UF-KEB 50V	CX15	0284621R	EL 0.47UF 50V (BP) (AP63 ONLY)
CS29	0800001R	EL 0.47UF-M 50V (SME)	CX16	0890089R	CD 1500PF-K 50V (AP63 ONLY)
CS30	0800012R	EL 4.7UF-M 50V	CX17	0890082R	CD 390PF-K 50V (AP63 ONLY)
CS31	0800001R	EL 0.47UF-M 50V (SME)	CX18	0890074R	CD 100PF-J 50V (AP63 ONLY)

60SX12B/13K  
50UX26B/27K  
46UX24B/25K  
50SX8B

## REPLACEMENT PARTS LIST

**PRODUCT SAFETY NOTE:** Components marked with a  $\Delta$  have special characters important to safety. Before replacing any of these components, read carefully, the PRODUCT SAFETY NOTICE of this Service Manual. Don't degrade the safety of the receiver through improper servicing.

SYMBOL NO.	PART NO.	PART DESCRIPTION	SYMBOL NO.	PART NO.	PART DESCRIPTION
CX19	0890087R	CD 1000PF-K 50V (AP63 ONLY)	C005	0890087R	CD 1000PF-K 50V
CX20	0800009R	EL 4.7UF-M 25V (AP63 ONLY)	C006	0284623R	EL 1UF-SME(BP) 50V
CX21	0890109R	CD T6R0D50D3 (AP63 ONLY)	C007	0284623R	EL 1UF-SME(BP) 50V
CX22	0244171R	CD 0.01UF-Z F 50V TAPE (AP63 ONLY)	C008	0284623R	EL 1UF-SME(BP) 50V
CX23	0800048R	EL 100UF-M 10V (AP63 ONLY)	C009	0284623R	EL 1UF-SME(BP) 50V
CX24	0244171R	CD 0.01UF-Z F 50V TAPE (AP63 ONLY)	C010	0284623R	EL 1UF-SME(BP) 50V
CX25	0244171R	CD 0.01UF-Z F 50V TAPE (AP63 ONLY)	C011	0800003R	EL 1.0UF-M 50V
CX26	0244171R	CD 0.01UF-Z F 50V TAPE (AP63 ONLY)	C012	0800003R	EL 1.0UF-M 50V
CX27	0800009R	EL 4.7UF-M 25V (AP63 ONLY)	C013	0284623R	EL 1UF-SME(BP) 50V
CX28	0244171R	CD 0.01UF-Z F 50V TAPE (AP63 ONLY)	C014	0800003R	EL 1.0UF-M 50V
CX29	0880053R	PF 0.047UF-KEB 50V (AP63 ONLY)	C015	0800015R	EL 10UF-M 16V
CX30	0244171R	CD 0.01UF-Z F 50V TAPE (AP63 ONLY)	C016	0890121R	CD 33PF-J CH 50V
CX31	0248690R	CD 180PF-J SL 50V (AP63 ONLY)	C017	0890121R	CD 33PF-J CH 50V
CX32	0880044R	PF 0.01UF-KEB 50V (AP63 ONLY)	C018	0800015R	EL 10UF-M 16V
CX33	0244171R	CD 0.01UF-Z F 50V TAPE (AP63 ONLY)	C019	0800005R	EL 2.2UF-M 50V
CX34	0800048R	EL 100UF-M 10V (AP63 ONLY)	C022	0800015R	EL 10UF-M 16V
CX35	0880044R	PF 0.01UF-KEB 50V (AP63 ONLY)	C023	0800047R	EL 100UF-M 6.3V
CX36	0800048R	EL 100UF-M 10V (AP63 ONLY)	C024	0880057R	PF 0.1UF-KEB 50V
CX37	0244171R	CD 0.01UF-Z F 50V TAPE (AP63 ONLY)	C025	0880044R	PF 0.01UF-KEB 50V
CX38	0244171R	CD 0.01UF-Z F 50V TAPE (AP63 ONLY)	C026	0880057R	PF 0.1UF-KEB 50V
CX39	0244171R	CD 0.01UF-Z F 50V TAPE (AP63 ONLY)	C027	0800012R	EL 4.7UF-M 50V
CX40	0244171R	CD 0.01UF-Z F 50V TAPE (AP63 ONLY)	C028	0800012R	EL 4.7UF-M 50V
CX41	0244171R	CD 0.01UF-Z F 50V TAPE (AP63 ONLY)	C029	0890074R	CD 100PF-J 50V
CX42	0800057R	EL 220UF-M 10V (AP63 ONLY)	C031	0800003R	EL 1.0UF-M 50V
CX45	0800015R	EL 10UF-M 16V (AP63 ONLY)	C032	0800047R	EL 100UF-M 6.3V
CX46	0800049R	EL 100UF-M 16V (AP63 ONLY)	C033	0880057R	PF 0.1UF-KEB 50V
CX47	0800049R	EL 100UF-M 16V (AP63 ONLY)	C034	0890085R	CD 680PF-K 50V
CX48	0880044R	PF 0.01UF-KEB 50V (AP63 ONLY)	C035	0800015R	EL 10UF-M 16V
CX49	0800049R	EL 100UF-M 16V (AP63 ONLY)	C036	0800047R	EL 100UF-M 6.3V
CX50	0800048R	EL 100UF-M 10V (AP63 ONLY)	C037	0880057R	PF 0.1UF-KEB 50V
CX52	0800048R	EL 100UF-M 10V (AP63 ONLY)	C038	0800048R	EL 100UF-M 10V
CX53	0880044R	PF 0.01UF-KEB 50V (AP63 ONLY)	C039	0800015R	EL 10UF-M 16V
CX54	0284647R	EL 22UF-SME(BP) 16V (AP63 ONLY)	C040	0800074N	EL 470UF-M 16V
CY01	0284647R	EL 22UF-SME(BP) 16V	C041	0880057R	PF 0.1UF-KEB 50V
CY04	0800023R	EL 22UF-M 16V	C042	0800003R	EL 1.0UF-M 50V
CY05	0800023R	EL 22UF-M 16V	C043	0800047R	EL 100UF-M 6.3V
CY06	0800023R	EL 22UF-M 16V	C044	0880057R	PF 0.1UF-KEB 50V
CY07	0800023R	EL 22UF-M 16V	C045	0880057R	PF 0.1UF-KEB 50V
CY08	0800049R	EL 100UF-M 16V	C046	0880048R	PF 0.022UF-KEB 50V
CY09	0276717R	PF 0.1UF-J 50V (TF TYP E)	C052	0880044R	PF 0.01UF-KEB 50V
CY10	0284638R	EL 10UF-SME(BP) 16V	C053	0880057R	PF 0.1UF-KEB 50V
CY11	0800015R	EL 10UF-M 16V	C054	0800049R	EL 100UF-M 16V
CY12	0800049R	EL 100UF-M 16V	C056	0800005R	EL 2.2UF-M 50V
CY13	0890089R	CD 1500PF-K 50V	C057	0800003R	EL 1.0UF-M 50V
CY14	0800074N	EL 470UF-M 16V	C058	0880057R	PF 0.1UF-KEB 50V
CY15	0276717R	PF 0.1UF-J 50V (TF TYP E)	C059	0800049R	EL 100UF-M 16V
CY16	0800049R	EL 100UF-M 16V	C061	0880057R	PF 0.1UF-KEB 50V
CY17	0800041R	EL 47UF-M 16V	C070	0800015R	EL 10UF-M 16V
CY18	0284638R	EL 10UF-SME(BP) 16V (AP63B ONLY)	C101	0800049R	EL 100UF-M 16V
CY50	0800049R	EL 100UF-M 16V	C102	0800049R	EL 100UF-M 16V
CY51	0284634R	EL 4.7UF-M 50V	C103	0880057R	PF 0.1UF-KEB 50V
CY52	0880011R	EL 0.015UF	C104	0800079N	EL 102M6R3WHLT-SME
CY53	0800015R	EL 10UF-M 16V	C105	0800082N	EL 1000UF-MB16V(SME)
CY54	0880013R	EL 0.033UF	C106	0800079N	EL 102M6R3WHLT-SME
CY55	0880006R	EL 0.033UF	C107	0880057R	PF 0.1UF-KEB 50V
CY56	0880006R	EL 0.033UF	C108	0800082N	EL 1000UF-MB16V(SME)
CY57	0880016R	PF FILM 0.1UF 50V	C109	0800082N	EL 1000UF-MB16V(SME)
CY70	0800015R	EL 10UF-M 16V	C110	0800015R	EL 10UF-M 16V
CY71	0800015R	EL 10UF-M 16V	C111	0800049R	EL 100UF-M 16V
CY72	0244171R	CD 0.01UF-Z F 50V TAPE	C3A2	0880057R	PF 0.1UF-KEB 50V
CY75	0800023R	EL 22UF-M 16V	C304	0800015R	EL 10UF-M 16V
C002	0890078R	CD 220PF-K 50V	C305	0800007R	EL 3.3UF-M 50V
C003	0246464R	CD 100PF-J CH 50V TAPE	C306	0244171R	CD 0.01UF-Z F 50V TAPE
C004	0800023R	EL 22UF-M 16V	C307	0244171R	CD 0.01UF-Z F 50V TAPE

## REPLACEMENT PARTS LIST

**PRODUCT SAFETY NOTE:** Components marked with a  $\Delta$  have special characters important to safety. Before replacing any of these components, read carefully, the PRODUCT SAFETY NOTICE of this Service Manual. Don't degrade the safety of the receiver through improper servicing.

SYMBOL NO.	PART NO.	PART DESCRIPTION	SYMBOL NO.	PART NO.	PART DESCRIPTION
C308	0244171R	CD 0.01UF-Z F 50V TAPE	C5E3	0890071R	CD 56PF-J 50V
C309	0800015R	EL 10UF-M 16V	C5E5	0880044R	PF 0.01UF-KEB 50V
C311	0880033R	PF 0.0015UF-KEB50V	C5E6	0880044R	PF 0.01UF-KEB 50V
C312	0880046R	PF 0.015UF-K 50V	C5E7	0800049R	EL 100UF-M 16V
C313	0800003R	EL 1.0UF-M 50V	C501	0244171R	CD 0.01UF-Z F 50V TAPE
C314	0800003R	EL 1.0UF-M 50V	C502	0800058R	EL 220UF-M 16V
C315	0800049R	EL 100UF-M 16V	C503	0800001R	EL 0.47UF-M 50V (SME)
C316	0244171R	CD 0.01UF-Z F 50V TAPE	C504	0244171R	CD 0.01UF-Z F 50V TAPE
C317	0800058R	EL 220UF-M 16V	C505	0890116R	CD 15PF-J CH 50V
C318	0800003R	EL 1.0UF-M 50V	C506	0880044R	PF 0.01UF-KEB 50V
C319	0244171R	CD 0.01UF-Z F 50V TAPE	C507	0244171R	CD 0.01UF-Z F 50V TAPE
C320	0244171R	CD 0.01UF-Z F 50V TAPE	C508	0244171R	CD 0.01UF-Z F 50V TAPE
C321	0244171R	CD 0.01UF-Z F 50V TAPE	C509	0244171R	CD 0.01UF-Z F 50V TAPE
C322	0244171R	CD 0.01UF-Z F 50V TAPE	C510	0244171R	CD 0.01UF-Z F 50V TAPE
C323	0800003R	EL 1.0UF-M 50V	C511	0244171R	CD 0.01UF-Z F 50V TAPE
C324	0800003R	EL 1.0UF-M 50V	C512	0800015R	EL 10UF-M 16V
C325	0800005R	EL 2.2UF-M 50V	C513	0244171R	CD 0.01UF-Z F 50V TAPE
C326	0800003R	EL 1.0UF-M 50V	C516	0800041R	EL 47UF-M 16V
C327	0800003R	EL 1.0UF-M 50V	C517	0800048R	EL 100UF-M 10V
C328	0880037R	PF 0.0033UF-KEB50V	C518	0800015R	EL 10UF-M 16V
C329	0890079R	CD 270PF-K 50V	C530	0800049R	EL 100UF-M 16V
C401	0800015R	EL 10UF-M 16V	C531	0276717R	PF 0.1UF-J 50V (TF TYP E)
C402	0284623R	EL 1UF-SME(BP) 50V	C532	0800049R	EL 100UF-M 16V
C403	0284623R	EL 1UF-SME(BP) 50V	C533	0880016R	PF FILM 0.1UF 50V
C404	0800003R	EL 1.0UF-M 50V	C534	0800009R	EL 4.7UF-M 25V
C405	0800003R	EL 1.0UF-M 50V	C603	0800345R	EL 330UF-M(SMG 25V)
C406	0890087R	CD 1000PF-K 50V	C604	AN00062R	PF 103UF 50V
C407	0890087R	CD 1000PF-K 50V	C606	0298261R	TA 1MF-J 35V
C408	0800042R	EL 47UF-M 25V	C607	0284446R	EL1UF-M 50V
C409	0800042R	EL 47UF-M 25V	C608	0800368F	EL 2200UF-M 25V
C410	0800051R	EL 100UF-M 25V	C609	0800347N	EL330UF-M(SMG) 50V
C411	0800003R	EL 1.0UF-M 50V	C610	0800326R	EL100UF-M 16V
C412	0800003R	EL 1.0UF-M 50V	C611	0800347N	EL330UF-M(SMG) 50V
C413	0800051R	EL 100UF-M 25V	C612	0880051R	PF 0.033UF-KEB 50V
C414	0800041R	EL 47UF-M 16V	C613	AN00062R	PF 103UF 50V
C415	0880057R	PF 0.1UF-KEB 50V	C614	0279859F	PF 0.1UF-K 100V
C416	0253934F	EL 2200UF-M 35V	C617	0284446R	EL1UF-M 50V
C417	0880057R	PF 0.1UF-KEB 50V	C618	0284449R	EL4.7UF-KMF 50V
C418	0880057R	PF 0.1UF-KEB 50V	C619	AN00062R	PFD 103UF 50V
C419	0253934F	EL 2200UF-M 35V	C620	0800291R	EL10UF-M(SMG) 16V
C420	0253934F	EL 2200UF-M 35V	C622	0800041R	EL 47UF-M 16V
C421	0880062R	PF 0.22UF-KEB 50V	C623	0800041R	EL 47UF-M 16V
C422	0258616	EL 2.2UF-M 50V	C624	0244109R	CD 4700PF-KB 50V
C423	0258616	EL 2.2UF-M 50V	C701	AN00062R	PF 103UF 50V
C424	0880057R	PF 0.1UF-KEB 50V	C702	0243507R	CD 330PF-K 500V TAPE
C426	0880044R	PF 0.01UF-KEB 50V	C703	0244501R	CD 1000PF-K 500V
C427	0880044R	PF 0.01UF-KEB 50V	C704	0259153F	EL 220UF (HR) 160V
C428	0880057R	PF 0.1UF-KEB 50V	C705	0299926F	PF 0.1UF-K 200V
C429	0800015R	EL 10UF-M 16V	C706	0890028M	CD 330PF-K B 50V
C5A2	0880053R	PF 0.047UF-KEB 50V (AP63B ONLY)	$\Delta$ C708	0262414F	PP 3300PF 1800V
C5A3	0880053R	PF 0.047UF-KEB 50V (AP63B ONLY)	$\Delta$ C709	0262426F	PF 0.0091UF 1.8KV
C5A4	0800015R	EL 10UF-M 16V (AP63B ONLY)	C710	0299931F	PP 0.27UF-K 200V
C5A5	0800015R	EL 10UF-M 16V (AP63B ONLY)	C711	0299931F	PP 0.27UF-K 200V
C5A6	0800041R	EL 47UF-M 16V (AP63B ONLY)	$\Delta$ C715	0299720F	PP 0.015UF-J 6
C5A8	0800075F	EL 470UF-M 25V	C717	0259471	PP 6.8UF-M (BP) 50V
C5A9	0880057R	PF 0.1UF-KEB 50V	C718	0299636F	PF 0.068UF-J 1600V
C5C1	0880057R	PF 0.1UF-KEB 50V	C720	0243503R	CD 150PF-K B 500V
C5C2	0800049R	EL 100UF-M 16V	C721	0253983F	EL 33UF-M 350V
C5C3	0880057R	PF 0.1UF-KEB 50V	C722	0800329R	EL100UF-M(SMG) 50V
C5C4	0800075F	EL 470UF-M 25V	C723	0880057R	PF 0.1UF-KEB 50V
C5C5	0880057R	PF 0.1UF-KEB 50V	C724	0890087R	CD 1000PF-K 50V
C5C6	0880057R	PF 0.1UF-KEB 50V	C725	0800279R	EL 1.0UF-M(SMG) 50V
C5C7	0800075F	EL 470UF-M 25V	C726	0244109R	CD 4700PF-KB 50V
C5C8	0880057R	PF 0.1UF-KEB 50V	C727	0880048R	PF 0.022UF-KEB 50V

60SX12B/13K  
50UX26B/27K  
46UX24B/25K  
50SX8B

## REPLACEMENT PARTS LIST

**PRODUCT SAFETY NOTE:** Components marked with a  $\Delta$  have special characters important to safety. Before replacing any of these components, read carefully, the PRODUCT SAFETY NOTICE of this Service Manual. Don't degrade the safety of the receiver through improper servicing.

SYMBOL NO.	PART NO.	PART DESCRIPTION	SYMBOL NO.	PART NO.	PART DESCRIPTION
C728	0890089R	CD 1500PF-K 50V	C967	0880198R	PF 0.22UF-J 50V
C729	0800282R	EL 2.2UF-M(SMG) 50V	C968	0880198R	PF 0.22UF-J 50V
C730	0284634R	EL 4.7UF-M 50V	C969	0880198R	PF 0.22UF-J 50V
C731	0244501R	CD 1000PF-K 500V	C972	0800291R	EL10UF-M(SMG) 16V
C732	0243508R	CD 390PF-K 500V	C973	0800083F	EL1000UF-M 25V
C735	0243511R	CD 680PF-K 500V TAPE	C974	0800326	EL100UF-M 16V
C738	0243503R	CD 150PF-K B 500V			DIODES
C739	0243511R	CD 680PF-K 500V TAPE			
C740	0890084R	CD 560PF-K 50V			
$\Delta$ C741	0246348	CD 220PF-2KV	DA01	2398611M	DI 1SS254 TAPE (35V) SI 4NSEC
C804	0244889	CD 2200PF +-10% 2KV	DA02	2398611M	DI 1SS254 TAPE (35V) SI 4NSEC
C805	0800326	EL 100MF 16V	DA03	2348031M	DI MTZ-J2.7ATA
C807	0244139	CD 1000PF +-10% 50V	DA04	2348031M	DI MTZ-J2.7ATA
C808	0244139	CD 1000PF +-10% 50V	DA05	2398611M	DI 1SS254 TAPE (35V) SI 4NSEC
C810	0800326	EL 100MF 16V	DA06	2398611M	DI 1SS254 TAPE (35V) SI 4NSEC
C831	0257543	EL 3.3MF 315V	DA07	2348031M	DI MTZ-J2.7ATA
C834	0244889	CD 2200PF +-10% 2KV	DA08	2348031M	DI MTZ-J2.7ATA
C835	0800326	EL 100MF 16V	DA09	2348212M	DI MTZ-J15BTA
C837	0244139	CD 1000PF +-10% 50V	DA10	2348212M	DI MTZ-J15BTA
C838	0244139	CD 1000PF +-10% 50V	DA11	2398611M	DI 1SS254 TAPE (35V) SI 4NSEC
C864	0244889	CD 2200PF +-10% 2KV	DA12	2398611M	DI 1SS254 TAPE (35V) SI 4NSEC
C865	0800326	EL 100MF 16V	DA70	2348212M	DI MTZ-J15BTA
C867	0244139	CD 1000PF +-10% 50V	DA71	2348212M	DI MTZ-J15BTA
C868	0890086	CD 820PF +-10% 50V	DC03	2348212M	DI MTZ-J15BTA
$\Delta$ C901	AN00148S	PF 0.22UF250V	DE01	2398611M	DI 1SS254 TAPE (35V) SI 4NSEC
$\Delta$ C902	AN00144S	PF 0.1UF250V	DE02	2398611M	DI 1SS254 TAPE (35V) SI 4NSEC
C904	0248593F	CD 4700PF-Z 250V	DE03	2398611M	DI 1SS254 TAPE (35V) SI 4NSEC
C906	0248593F	CD 4700PF-Z 250V	DE04	CH00151M	DI DSM1SD2(200V)TAPE
C907	0259167	EL 820UF (HR) 200V	DE05	CH00151M	DI DSM1SD2(200V)TAPE
C908	0259167	EL 820UF (HR) 200V	DE06	CH00151M	DI DSM1SD2(200V)TAPE
C911	0890087R	CD 1000PF-K 50V	DE07	CH00151M	DI DSM1SD2(200V)TAPE
C912	0800059R	EL 220UF-M 25V	DF01	2398611M	DI 1SS254 TAPE (35V) SI 4NSEC
C913	0299981F	PF 0.01UF-J 630V	DF02	2398611M	DI 1SS254 TAPE (35V) SI 4NSEC
C914	0880044R	PF 0.01UF-KEB 50V	DF03	2398611M	DI 1SS254 TAPE (35V) SI 4NSEC
C915	0880037R	PF 0.0033UF-KEB50V	DF04	2398611M	DI 1SS254 TAPE (35V) SI 4NSEC
C916	0880031R	PF.1000PF-K 50V	DF05	2398611M	DI 1SS254 TAPE (35V) SI 4NSEC
C917	0800286R	EL 4.7UF-M(SMG) 25V	DF06	2398611M	DI 1SS254 TAPE (35V) SI 4NSEC
C918	0880057R	PF 0.1UF-KEB 50V	DG01	2348103M	ZD MTZJ-5.1C TA
C920	0285221	EL 1000UF-M 35V	DK03	2339551M	DI ED14(V1) SI 5MA 45
C921	0285221	EL 1000UF-M 35V	DK04	CH00172M	DI DFM1SD2(200V)TAPE
C922	0285221	EL 1000UF-M 35V	DK05	CH00172M	DI DFM1SD2(200V)TAPE
C924	0285224	EL 2200UF-M 25V	DK06	2334324M	ZD RD36E TAPE (B3) SI 500MW
C925	0285224	EL 2200UF-M 25V	DK07	2334324M	ZD RD36E TAPE (B3) SI 500MW
C926	0258697	EL 470UF (HR) 160V	DK08	2334324M	ZD RD36E TAPE (B3) SI 500MW
C927	0880044R	PF 0.01UF-KEB 50V	DK09	2334324M	ZD RD36E TAPE (B3) SI 500MW
C928	0244105R	CD 2200PF-K 50V TAPE	DK10	2334324M	ZD RD36E TAPE (B3) SI 500MW
C930	0284436R	EL 100UF-M 35V	DK11	2334324M	ZD RD36E TAPE (B3) SI 500MW
C931	0284436R	EL 100UF-M 35V	DK12	2334324M	ZD RD36E TAPE (B3) SI 500MW
C933	0800326R	EL100UF-M 16V	DK13	2334324M	ZD RD36E TAPE (B3) SI 500MW
C935	0284436R	EL 100UF-M 35V	DK14	2334324M	ZD RD36E TAPE (B3) SI 500MW
C936	0284405R	EL 220UF-M 16V	DK15	2334324M	ZD RD36E TAPE (B3) SI 500MW
C937	0284405R	EL 220UF-M 16V	DK16	2334324M	ZD RD36E TAPE (B3) SI 500MW
C939	0284436R	EL 100UF-M 35V	DK17	2334324M	ZD RD36E TAPE (B3) SI 500MW
C942	0800326R	EL100UF-M 16V	DK19	2398611M	DI 1SS254 TAPE (35V) SI 4NSEC
C943	0800279R	EL 1.0UF-M(SMG) 50V	DK23	2331154M	ZD HZ-12 (A1-3 B1-3.TA) SI 200MA
C944	0800317R	EL47UF-M(SMG) 16V	DK24	2331154M	ZD HZ-12 (A1-3 B1-3.TA) SI 200MA
C945	0284647R	EL 22UF-SME(BP) 16V	DK25	2331154M	ZD HZ-12 (A1-3 B1-3.TA) SI 200MA
C947	0258121R	EL 2.2UF-M 100V	DK26	2331154M	ZD HZ-12 (A1-3 B1-3.TA) SI 200MA
C954	0800363F	EL SMG1000UF-M 35V	DK27	2331154M	ZD HZ-12 (A1-3 B1-3.TA) SI 200MA
C955	0800317R	EL 47UF-M(SMG) 16V	DK28	2331154M	ZD HZ-12 (A1-3 B1-3.TA) SI 200MA
C956	0800082F	EL 1000UF-M 16V	DK32	2398611M	DI 1SS254 TAPE (35V) SI 4NSEC
C957	0800331R	EL 100UF-M 63V	DK39	2339551M	DI ED14(V1) SI 5MA 45
C958	0800331R	EL 100UF-M 63V	DK40	2331154M	ZD HZ-12 (A1-3 B1-3.TA) SI 200MA
C960	0880057R	PF 0.1UF-KEB 50V	DK50	2398611M	DI 1SS254 TAPE (35V) SI 4NSEC

## REPLACEMENT PARTS LIST

**PRODUCT SAFETY NOTE:** Components marked with a have special characters important to safety. Before replacing any of these components, read carefully, the PRODUCT SAFETY NOTICE of this Service Manual. Don't degrade the safety of the receiver through improper servicing.

SYMBOL NO.	PART NO.	PART DESCRIPTION	SYMBOL NO.	PART NO.	PART DESCRIPTION
DL01	2348141M	ZD MTZJ-7.5A TA	D028	2348212M	DI MTZ-J15BTA
DL02	2348141M	ZD MTZJ-7.5A TA	D029	2348212M	DI MTZ-J15BTA
DL03	2348141M	ZD MTZJ-7.5A TA	D030	2348212M	DI MTZ-J15BTA
DL04	2348141M	ZD MTZJ-7.5A TA	D031	2398611M	DI 1SS254 TAPE (35V) SI 4NSEC
DL05	2348141M	ZD MTZJ-7.5A TA	D033	2398611M	DI 1SS254 TAPE (35V) SI 4NSEC
DL06	2348141M	ZD MTZJ-7.5A TA	D034	2398611M	DI 1SS254 TAPE (35V) SI 4NSEC
DL07	2348141M	ZD MTZJ-7.5A TA	D040	2398611M	DI 1SS254 TAPE (35V) SI 4NSEC
DL08	2348141M	ZD MTZJ-7.5A TA	D041	2398611M	DI 1SS254 TAPE (35V) SI 4NSEC
DL10	2398611M	DI 1SS254 TAPE (35V) SI 4NSEC	D042	2398611M	DI 1SS254 TAPE (35V) SI 4NSEC
DL11	2398611M	DI 1SS254 TAPE (35V) SI 4NSEC	D043	2398611M	DI 1SS254 TAPE (35V) SI 4NSEC
DL12	2398611M	DI 1SS254 TAPE (35V) SI 4NSEC	D044	2398611M	DI 1SS254 TAPE (35V) SI 4NSEC
DL13	2398611M	DI 1SS254 TAPE (35V) SI 4NSEC	D101	2348212M	DI MTZ-J15BTA
DL14	2398611M	DI 1SS254 TAPE (35V) SI 4NSEC	D103	2335991M	ZD HZ-T33 (02 TP)
DL15	2398611M	DI 1SS254 TAPE (35V) SI 4NSEC	D104	2348123M	ZD MTZJ-6.2C TA
DL16	2398611M	DI 1SS254 TAPE (35V) SI 4NSEC	D105	2335991M	ZD HZ-T33 (02 TP)
DL17	2398611M	DI 1SS254 TAPE (35V) SI 4NSEC	D106	2398611M	DI 1SS254 TAPE (35V) SI 4NSEC
DL28	2331827M	ZD HZ-9 TAPE (C1) SI 500MW	D107	2398611M	DI 1SS254 TAPE (35V) SI 4NSEC
DM01	2398611M	DI 1SS254 TAPE (35V) SI 4NSEC	D3A1	2334324M	ZD RD36E TAPE (B3) SI 500MW
DM02	2398611M	DI 1SS254 TAPE (35V) SI 4NSEC	D301	2339867M	ZD HZS-9-C1 TAPE (SI.200MA)
DM03	CH00231	LED SLH-56VC3F	D302	2398611M	DI 1SS254 TAPE (35V) SI 4NSEC
DM04	2348212M	DI MTZ-J15BTA	D303	2398611M	DI 1SS254 TAPE (35V) SI 4NSEC
DN01	2398611M	DI 1SS254 TAPE (35V) SI 4NSEC	D304	2398611M	DI 1SS254 TAPE (35V) SI 4NSEC
DN02	2398611M	DI 1SS254 TAPE (35V) SI 4NSEC	D305	2398611M	DI 1SS254 TAPE (35V) SI 4NSEC
DN03	2398611M	DI 1SS254 TAPE (35V) SI 4NSEC	D306	2398611M	DI 1SS254 TAPE (35V) SI 4NSEC
DN04	2398611M	DI 1SS254 TAPE (35V) SI 4NSEC	D307	2398611M	DI 1SS254 TAPE (35V) SI 4NSEC
DN05	2398611M	DI 1SS254 TAPE (35V) SI 4NSEC	D308	2398611M	DI 1SS254 TAPE (35V) SI 4NSEC
DN06	2348071M	ZD MTZJ-3.9A TA	D309	2398611M	DI 1SS254 TAPE (35V) SI 4NSEC
DN07	2398611M	DI 1SS254 TAPE (35V) SI 4NSEC	D310	2398611M	DI 1SS254 TAPE (35V) SI 4NSEC
DN08	CH00151M	DI DSM1SD2(200V)TAPE	D311	2398611M	DI 1SS254 TAPE (35V) SI 4NSEC
DN09	2331849M	ZD HZ12C3 (TA) SI 500MW	D313	2398611M	DI 1SS254 TAPE (35V) SI 4NSEC
DN10	2398611M	DI 1SS254 TAPE (35V) SI 4NSEC	D314	2348103M	ZD MTZJ-5.1C TA
DS01	2398611M	DI 1SS254 TAPE (35V) SI 4NSEC	D401	2398611M	DI 1SS254 TAPE (35V) SI 4NSEC
DS02	2398611M	DI 1SS254 TAPE (35V) SI 4NSEC	D402	2398611M	DI 1SS254 TAPE (35V) SI 4NSEC
DS03	2398611M	DI 1SS254 TAPE (35V) SI 4NSEC	D404	2398611M	DI 1SS254 TAPE (35V) SI 4NSEC
DS04	2348103M	ZD MTZJ-5.1C TA	D405	2398611M	DI 1SS254 TAPE (35V) SI 4NSEC
DS05	CH00151M	DI DSM1SD2(200V)TAPE	D406	2398611M	DI 1SS254 TAPE (35V) SI 4NSEC
DS06	CH00151M	DI DSM1SD2(200V)TAPE	D407	2398611M	DI 1SS254 TAPE (35V) SI 4NSEC
DS07	2398611M	DI 1SS254 TAPE (35V) SI 4NSEC	D5A3	CH00151M	DI DSM1SD2(200V)TAPE
DS08	2398611M	DI 1SS254 TAPE (35V) SI 4NSEC	D5A5	2398611M	DI 1SS254 TAPE (35V) SI 4NSEC
DS11	2398611M	DI 1SS254 TAPE (35V) SI 4NSEC	D5A6	2398611M	DI 1SS254 TAPE (35V) SI 4NSEC
DS12	2398611M	DI 1SS254 TAPE (35V) SI 4NSEC	D502	2331827M	ZD HZ-9 TAPE (C1) SI 500MW
DS14	2398611M	DI 1SS254 TAPE (35V) SI 4NSEC	D503	2331827M	ZD HZ-9 TAPE (C1) SI 500MW
DS15	2398611M	DI 1SS254 TAPE (35V) SI 4NSEC	D504	2331827M	ZD HZ-9 TAPE (C1) SI 500MW
DS24	2348242M	DI MTZ-J20BTA	D505	2398611M	DI 1SS254 TAPE (35V) SI 4NSEC
DX01	2398611M	DI 1SS254 TAPE (35V) SI 4NSEC (AP63 ONLY)	D506	2398611M	DI 1SS254 TAPE (35V) SI 4NSEC
DY01	2398611M	DI 1SS254 TAPE (35V) SI 4NSEC	D507	2348103M	ZD MTZJ-5.1C TA
DY02	2348212M	DI MTZ-J15BTA	D508	2331827M	ZD HZ-9 TAPE (C1) SI 500MW
DY03	2348212M	DI MTZ-J15BTA	D509	2348103M	ZD MTZJ-5.1C TA
DY04	2348212M	DI MTZ-J15BTA	D601	2334243M	ZD RD16E (B2 T2/TP/TA) SI 10MA 1
DY05	2348212M	DI MTZ-J15BTA	D602	2331154M	ZD HZ-12 (A1-3 B1-3.TA) SI 200MA
DY50	2398611M	DI 1SS254 TAPE (35V) SI 4NSEC	D603	2398611M	DI 1SS254 TAPE (35V) SI 4NSEC
DY71	2348212M	DI MTZ-J15BTA	D604	2331807M	ZD HZ-6 TAPE (C1) SI 500MW
D005	2398611M	DI 1SS254 TAPE (35V) SI 4NSEC	D605	CH00151M	DI DSM1SD2(200V)TAPE
D012	2398611M	DI 1SS254 TAPE (35V) SI 4NSEC	D606	CH00151M	DI DSM1SD2(200V)TAPE
D013	2398611M	DI 1SS254 TAPE (35V) SI 4NSEC	D607	CH00151M	DI DSM1SD2(200V)TAPE
D014	2398611M	DI 1SS254 TAPE (35V) SI 4NSEC	D608	CH00031M	DI AU02V1(280V)
D015	2398611M	DI 1SS254 TAPE (35V) SI 4NSEC	D609	2334305M	ZD RD30E (B4 T2/TP/TA) SI 5MA 30
D020	2331827M	ZD HZ-9 TAPE (C1) SI 500MW	D610	2398611M	DI 1SS254 TAPE (35V) SI 4NSEC
D022	2398611M	DI 1SS254 TAPE (35V) SI 4NSEC	D611	2398611M	DI 1SS254 TAPE (35V) SI 4NSEC
D023	2348103M	ZD MTZJ-5.1C TA	D612	2398611M	DI 1SS254 TAPE (35V) SI 4NSEC
D024	2398611M	DI 1SS254 TAPE (35V) SI 4NSEC	D614	2398611M	DI 1SS254 TAPE (35V) SI 4NSEC
D025	2398611M	DI 1SS254 TAPE (35V) SI 4NSEC	D615	2398611M	DI 1SS254 TAPE (35V) SI 4NSEC
D026	2348212M	DI MTZ-J15BTA	D616	2398611M	DI 1SS254 TAPE (35V) SI 4NSEC
D027	2348212M	DI MTZ-J15BTA	D620	CH00151M	DI DSM1SD2(200V)TAPE

60SX12B/13K  
50UX26B/27K  
46UX24B/25K  
50SX8B

## REPLACEMENT PARTS LIST

**PRODUCT SAFETY NOTE:** Components marked with a  have special characters important to safety. Before replacing any of these components, read carefully, the PRODUCT SAFETY NOTICE of this Service Manual. Don't degrade the safety of the receiver through improper servicing.

SYMBOL NO.	PART NO.	PART DESCRIPTION	SYMBOL NO.	PART NO.	PART DESCRIPTION
D622	2398611M	DI 1SS254 TAPE (35V) SI 4NSEC	D940	2348304M	ZD MTZJ-36D TA
D701	2398611M	DI 1SS254 TAPE (35V) SI 4NSEC	D941	CH00172M	DI DFM1SD2(200V)TAPE
△D702	2348511	DI RS3FS	D942	CH00172M	DI DFM1SD2(200V)TAPE
△D703	2359371	DI S3L60 SI	D943	2398611M	DI 1SS254 TAPE (35V) SI 4NSEC
△D704	2359371	DI S3L60 SI	D944	2398611M	DI 1SS254 TAPE (35V) SI 4NSEC
D705	CH00041M	DI ES1FV1 (1500V)	D945	2398611M	DI 1SS254 TAPE (35V) SI 4NSEC
D706	CH00041M	DI ES1FV1 (1500V)	D946	CH00151M	DI DSM1SD2(200V)TAPE
△D708	CH00031M	DI AU02V1(280V)	D947	CH00151M	DI DSM1SD2(200V)TAPE
△D709	CH00031M	DI AU02V1(280V)	D948	CH00151M	DI DSM1SD2(200V)TAPE
△D710	2335042M	ZD HZ-22 (2L TP) SI 200MA	D949	CH00151M	DI DSM1SD2(200V)TAPE
D711	2339612M	ZD HZS-3 TA (BLL) SI 200MA	D950	CH00182R	DI (SLZ-381C-06-T1)
D712	CH00151M	DI DSM1SD2(200V)TAPE	D951	CH00182R	DI (SLZ-381C-06-T1)
D713	2398611M	DI 1SS254 TAPE (35V) SI 4NSEC	D952	CH00182R	DI (SLZ-381C-06-T1)
D714	CH00172M	DI DFM1SD2(200V)TAPE	D953	CH00182R	DI (SLZ-381C-06-T1)
D715	2348203M	ZD MTZJ-13C TA	D954	CH00182R	SLZ-381C-06-T1)
D716	2398611M	DI 1SS254 TAPE (35V) SI 4NSEC	D955	2331785M	ZD HZ-4 TAPE (B2) SI 500MW
D717	2398611M	DI 1SS254 TAPE (35V) SI 4NSEC	D956	2348313M	ZD MTZJ-39C TA
D718	2398611M	DI 1SS254 TAPE (35V) SI 4NSEC	D957	2398611M	DI 1SS254 TAPE (35V) SI 4NSEC
D719	CH00172M	DI DFM1SD2(200V)TAPE	D958	2398611M	DI 1SS254 TAPE (35V) I 4NSEC
D801	2331827	ZD HZ-9 (C1)	D959	CH00172M	DI DFM1SD2(200V)TAPE
D802	23383211	DI 1SS270	D968	2348213M	ZD MTZJ-15C TA
D805	23383211	DI 1SS270	D970	2348193M	ZD MTZJ-12C TA
D831	2331827	ZD HZ-9 (C1)	D971	2348213M	ZD MTZJ-15C TA
D832	23383211	DI 1SS270	D972	2398611M	DI 1SS254 TAPE (35V) SI 4NSEC
D833	23383211	DI 1SS270	D973	2331785M	ZD HZ-4 TAPE (B2) SI 500MW
D834	2331827	ZD HZ-9 (C1)	D974	2334304M	ZD RD30E (B3 T2/TP/TA) SI 5MA 3
D861	2331827	ZD HZ-9 (C1)	D975	CH00183R	DI (SLZ-981C-06-T1)
D862	23383211	DI 1SS270	D976	2348141M	ZD MTZJ-7.5A TA
D863	23383211	DI 1SS270	D977	2398611M	DI 1SS254 TAPE (35V) SI 4NSEC
D864	2331827	ZD HZ-9 (C1)	D978	2348264M	ZD MTZJ-24D TA
△D901	2342061	DI D3SB(A)60.	D979	2398611M	DI 1SS254 TAPE (35V) SI 4NSEC
D902	CH00172M	DI DFM1SD2(200V)TAPE	D980	2398611M	DI 1SS254 TAPE (35V) SI 4NSEC
D903	2398611M	DI 1SS254 TAPE (35V) SI 4NSEC	D981	2398611M	DI 1SS254 TAPE (35V) SI 4NSEC
D904	2398611M	DI 1SS254 TAPE (35V) SI 4NSEC			<b>FUSES</b>
D905	CH00172M	DI DFM1SD2(200V)TAPE			
D906	2334304M	ZD RD30E (B3 T2/TP/TA) SI 5MA 3			
D907	2331827M	ZD HZ-9 TAPE (C1)SI 500MW	△F902	2722358	FUSE AC 5A
D909	CH00151M	DI DSM1SD2(200V)TAPE	△F903	FN00071R	FUSE DC 5A UL
D912	2348202M	ZD MTZJ-13B TA	△F905	2722389M	FUSE DC 4A
D913	2359401	DI FMP-G12S	△F906	2722353	FUSE AC 1.6A
D914	2359401	DI FMP-G12S			<b>COMPOUND COMPONENTS</b>
D915	2359401	DI FMP-G12S	△EFPK	AZ00003	CRX FOCUS PACK
D916	2349861	DI FMU-G16S		2574762	R/C MODULE SPS-409-1K
D917	2359401	DI FMP-G12S	H001	2791754R	CONDENSER WITH 3 TERMINAL 100PF
D918	2359401	DI FMP-G12S	H002	2791754R	CONDENSER WITH 3 TERMINAL 100PF
D920	CH00151M	DI DSM1SD2(200V)TAPE	H003	2791754R	CONDENSER WITH 3 TERMINAL 100PF
D921	2339222M	ZD HZS27-2L	H004	2791754R	CONDENSER WITH 3 TERMINAL 100PF
D922	2348283M	ZD MTZJ-30C TA	H005	2791754R	CONDENSER WITH 3 TERMINAL 100PF
D923	2398611M	DI 1SS254 TAPE (35V) SI 4NSEC	H006	2791754R	CONDENSER WITH 3 TERMINAL 100PF
D924	2348141M	ZD MTZJ-7.5A TA	△H901	2793312	CP-EXN-471P365L
D925	2398611M	DI 1SS254 TAPE (35V) SI 4NSEC	H902	2793312	CP-EXN-471P365L
D926	2398611M	DI 1SS254 TAPE (35V) SI 4NSEC	UKDG	CS00021	DIGI-CON.HC2061 ASY
D927	2398611M	DI 1SS254 TAPE (35V) SI 4NSEC	U002	HP00202	PINP UNIT KC-021 (SX MODELS ONLY)
D928	2348213M	ZD MTZJ-15C TA	U002	HP00093	PINP UNIT KC-010S (UX MODELS ONLY))
D930	2398611M	DI 1SS254 TAPE (35V) SI 4NSEC	U001	HC00221	BTF-WB451
D931	2398611M	DI 1SS254 TAPE (35V) SI 4NSEC	U102	2429691	FE TUNER V8-A68FT
△D932	2348283M	ZD MTZJ-30C TA			
D933	2398611M	DI 1SS254 TAPE (35V) SI 4NSEC			
△D934	2339042M	ZD HZS7A2L TAPE			
D935	2398611M	DI 1SS254 TAPE (35V) SI 4NSEC			
D936	2398611M	DI 1SS254 TAPE (35V) SI 4NSEC			
D937	2398611M	DI 1SS254 TAPE (35V) SI 4NSEC			
D938	2398611M	DI 1SS254 TAPE (35V) SI 4NSEC			
D939	2398611M	DI 1SS254 TAPE (35V) SI 4NSEC			

## REPLACEMENT PARTS LIST

**PRODUCT SAFETY NOTE:** Components marked with a  have special characters important to safety. Before replacing any of these components, read carefully, the PRODUCT SAFETY NOTICE of this Service Manual. Don't degrade the safety of the receiver through improper servicing.

SYMBOL NO.	PART NO.	PART DESCRIPTION	SYMBOL NO.	PART NO.	PART DESCRIPTION
		IC'S	LE03	2123468M	FERRITE BEADS CORE LEAD 0.8MH
IA02	2366301	IC UPD4052BC	LE04	2123468M	FERRITE BEADS CORE LEAD 0.8MH
IA03	CP02601	AN5285K	LG01	2123781R	FILTER COIL 101K
IA04	2362602	IC UPC4558	LK01	2123462M	FERRITE BEADS CORE B 2.3UH
IA05	2000361	IC M51132L	LK02	2123462M	FERRITE BEADS CORE B 2.3UH
IG01	CP02771U	GRAPHICEQULIZER IC	LK04	2122929M	COIL-AXIAL 1.0UH-M
IG02	2362602	IC UPC4558	LK05	2122929M	COIL-AXIAL 1.0UH-M
IG03	2362602	IC UPC4558	LK06	2122929M	COIL-AXIAL 1.0UH-M
IG04	2362602	IC UPC4558	LK07	2122929M	COIL-AXIAL 1.0UH-M
IG05	2362602	IC UPC4558	LK08	2122929M	COIL-AXIAL 1.0UH-M
IG06	2362602	IC UPC4558	LK09	2122929M	COIL-AXIAL 1.0UH-M
IG07	2362602	IC UPC4558	LK10	2122929M	COIL-AXIAL 1.0UH-M
IG08	2362602	IC UPC4558	LK11	2122929M	COIL-AXIAL 1.0UH-M
IG09	2362602	IC UPC4558	LL01	2123781R	FILTER COIL 101K
IG10	2362602	IC UPC4558	LS01	2123781R	FILTER COIL 101K
IK02	2003421	IC UPC7805AHF	LS02	2123781R	FILTER COIL 101K
IK04	2003191	IC STK4274	LS03	2123781R	FILTER COIL 101K
IK05	2003191	IC STK4274	LS05	2123781R	FILTER COIL 101K
IK06	2003191	IC STK4274	LX01	2123105M	LAL02 AXIAL COIL 15UH-K (AP63 ONLY)
IK08	CP01631R	ICL-PST9142	LX02	2123116M	COIL-AXIAL 100UH-K (AP63 ONLY)
IS01	CP00801U	LA2785	LX03	2123109M	COIL-AXIAL 33UH-K (AP63 ONLY)
IS02	2362602	IC UPC4558	LX04	2123763R	RADIAL COIL 101K(TYPE EL0405) (AP63 ONLY)
IS03	CP00791U	LV1010N	LX05	2123763R	RADIAL COIL 101K(TYPE EL0405) (AP63 ONLY)
IS04	2362602	IC UPC4558	LX06	2123763R	RADIAL COIL 101K(TYPE EL0405) (AP63 ONLY)
IS05	2020001	IC TDA9860	LX07	2123763R	RADIAL COIL 101K(TYPE EL0405) (AP63 ONLY)
IS08	2362602	IC UPC4558	LX08	2123763R	RADIAL COIL 101K(TYPE EL0405) (AP63 ONLY)
IS09	2362651	IC HD14053B	LX09	2123763R	RADIAL COIL 101K(TYPE EL0405) (AP63 ONLY)
IS10	2020001	IC TDA9860	LX10	2123763R	RADIAL COIL 101K(TYPE EL0405) (AP63 ONLY)
IS11	2004751	IC TA8200AH	LX11	2123109M	COIL-AXIAL 33UH-K (AP63 ONLY)
IS12	2004751	IC TA8200AH	LY01	2123781R	FILTER COIL 101K
IX01	CP01081U	DIGITAL MONOLITHIC IC (TC9089AN) (AP63 ONLY)	LY03	2123763R	RADIAL COIL 101K(TYPE EL0405)
IX02	CP00121U	ANALOG MONOLITHIC IC (MM1093N) (AP63 ONLY)	LY04	2123763R	RADIAL COIL 101K(TYPE EL0405)
IY01	2020452	ANALOG MONOLITHIC IC (CXA1545AS)	LY50	2123116M	COIL-AXIAL 100UH-K
I001	CP02793	MN1876476-HHT (AP63 ONLY)	L002	2123781R	FILTER COIL 101K
I001	CP02795	MN1876476-HHX (AP63B ONLY)	L003	2123781R	FILTER COIL 101K
I002	CP00822	DIGITAL MONOLITHIC IC M6M80042P	L004	2146093	COIL (LC FILTER) FL-160V5R8SS
I003	2366301	IC UPD4052BC	L101	2123763R	RADIAL COIL 101K(TYPE EL0405)
I004	CP00822	DIGITAL MONOLITHIC IC M6M80042P	L102	2123763R	RADIAL COIL 101K(TYPE EL0405)
I006	CP00761	ANALOG MONOLITHIC IC (MM1231XD)	L103	2123781R	FILTER COIL 101K
I007	2000541	IC M51951BSL	L104	2123763R	RADIAL COIL 101K(TYPE EL0405)
I401	2004751	IC TA8200AH	L105	2123781R	FILTER COIL 101K
IS41	2020341	IC MM1111XS (AP63B ONLY)	L106	2123781R	FILTER COIL 101K
IS42	2003421	IC UPC7805AHF	L107	2123781R	FILTER COIL 101K
IS43	2003421	IC UPC7805AHF	L303	2123763R	RADIAL COIL 101K(TYPE EL0405)
IS44	2004665	IC PQ09RF21	L401	2122652M	FERRITE CORE
I501	2020324	ANALOG MONOLITHIC IC (YAT016H)	L5A2	2123105M	LAL02 AXIAL COIL 15UH-K (AP63B ONLY)
I502	CP02781	M62399P	L5A3	2123105M	LAL02 AXIAL COIL 15UH-K (AP63B ONLY)
I601	2003541	IC LA7838	L5A5	2123781R	FILTER COIL 101K (AP63B ONLY)
△I901	2373343	IC M6511	L5A6	2122952M	COIL-AXIAL 47UHKM BELTING
△I902	2000465	IC PS2501-1 (KC/LC)	L5A7	2123763R	RADIAL COIL 101K(TYPE EL0405)
△I903	2000465	IC PS2501-1 (KC/LC)	L504	2123763R	RADIAL COIL 101K(TYPE EL0405)
△I904	2381343	IC (SE115N)	L601	2123461M	FERRITE BEADS B 0.8 MH
I906	CP03163	ANALOG MONOLITHIC UPC7912AHF	L701	BH00212R	FILTER COIL 68UH
I907	2003424	IC UPC7812AHF	L702	2123461M	FERRITE BEADS B 0.8 MH
		COILS	L703	2123465M	FERRITE BEADS 0.4UH
			L704	2123461M	FERRITE BEADS B 0.8 MH
			L705	BZ00846	CHOKE COIL 1000UH SL1720
			L706	BH00228R	COIL 332K-1T7608A
			L707	BH00206R	FILTER COIL 27UH
LA02	2123763R	RADIAL COIL 101K(TYPE EL0405)	L708	BH00214R	FILTER COIL 100UH
LA03	2123763R	RADIAL COIL 101K(TYPE EL0405)	L709	BH00202R	FILTER COIL 12UH
LA04	2123763R	RADIAL COIL 101K(TYPE EL0405)	L710	BZ00318	LINEARITY COIL 50UH-W
LA06	2123763R	RADIAL COIL 101K(TYPE EL0405)	L711	BZ00317	LINEARITY COIL 140UH-W
LE01	2123103M	COIL-AXIAL LAL 10UH-K	L712	2123763	RADIAL COIL 100MH
LE02	2123468M	FERRITE BEADS CORE LEAD 0.8MH	L803		

## REPLACEMENT PARTS LIST

**PRODUCT SAFETY NOTE:** Components marked with a  have special characters important to safety. Before replacing any of these components, read carefully, the PRODUCT SAFETY NOTICE of this Service Manual. Don't degrade the safety of the receiver through improper servicing.

SYMBOL NO.	PART NO.	PART DESCRIPTION	SYMBOL NO.	PART NO.	PART DESCRIPTION
△L901	BZ00571	LINE FILTER 1.0MH	QK04	2320591M	TRS. 2SC458 (B TZ/C TZ) SI 230MHZ
△L902	BZ00561	LINE FILTER 3.9MH	QK08	2320637M	TRS. 2SA673 (C 26TZ/D 26TZ) SI 80MHZ
△L903	BZ00571	LINE FILTER 1.0MH	QK09	2320637M	TRS. 2SA673 (C 26TZ/D 26TZ) SI 80MHZ
L904	2122653M	FERRITE CORE 1.65UH TAPE	QK10	2312172	TRS. 2SD2375 Q/P
L907	BH00201R	FILTER COIL 10UH	QL10	2320637M	TRS. 2SA673 (C 26TZ/D 26TZ) SI 80MHZ
L908	BH00201R	FILTER COIL 10UH	QL11	2320637M	TRS. 2SA673 (C 26TZ/D 26TZ) SI 80MHZ
L909	BH00201R	FILTER COIL 10UH	QL12	2320637M	TRS. 2SA673 (C 26TZ/D 26TZ) SI 80MHZ
L912	BH00201R	FILTER COIL 10UH	QL13	2320637M	TRS. 2SA673 (C 26TZ/D 26TZ) SI 80MHZ
L913	BH00201R	FILTER COIL 10UH	QL14	2320637M	TRS. 2SA673 (C 26TZ/D 26TZ) SI 80MHZ
L916	BH00214R	FILTER COIL 100UH	QL15	2320637M	TRS. 2SA673 (C 26TZ/D 26TZ) SI 80MHZ
L917	BH00214R	FILTER COIL 100UH	QL16	2320637M	TRS. 2SA673 (C 26TZ/D 26TZ) SI 80MHZ
L918	BH00214R	FILTER COIL 100UH	QL17	2320637M	TRS. 2SA673 (C 26TZ/D 26TZ) SI 80MHZ
L923	BH00212R	FILTER COIL 68UH	QM01	2320591M	TRS. 2SC458 (B TZ/C TZ) SI 230MHZ
L924	BH00214R	FILTER COIL 100UH	QM02	2312992	PHOTO TRS. RPT-38PT3F (M)
L925	BH00214R	FILTER COIL 100UH	QN01	2320591M	TRS. 2SC458 (B TZ/C TZ) SI 230MHZ
L926	2161152	FILTER COIL	QN02	2320591M	TRS. 2SC458 (B TZ/C TZ) SI 230MHZ
		TRANSISTORS	QN03	2320637M	TRS. 2SA673 (C 26TZ/D 26TZ) SI 80MHZ
QA01	2320591M	TRS. 2SC458 (B TZ/C TZ) SI 230MHZ	QN04	2320591M	TRS. 2SC458 (B TZ/C TZ) SI 230MHZ
QA02	2320637M	TRS. 2SA673 (C 26TZ/D 26TZ) SI 80MHZ	QN05	2320591M	TRS. 2SC458 (B TZ/C TZ) SI 230MHZ
QA03	2320591M	TRS. 2SC458 (B TZ/C TZ) SI 230MHZ	QN06	2320637M	TRS. 2SA673 (C 26TZ/D 26TZ) SI 80MHZ
QA04	2320637M	TRS. 2SA673 (C 26TZ/D 26TZ) SI 80MHZ	QS17	2320591M	TRS. 2SC458 (B TZ/C TZ) SI 230MHZ
QA05	2320591M	TRS. 2SC458 (B TZ/C TZ) SI 230MHZ	QS18	2320591M	TRS. 2SC458 (B TZ/C TZ) SI 230MHZ
QA06	2320591M	TRS. 2SC458 (B TZ/C TZ) SI 230MHZ	QS19	2320591M	TRS. 2SC458 (B TZ/C TZ) SI 230MHZ
QA07	2320591M	TRS. 2SC458 (B TZ/C TZ) SI 230MHZ	QS20	2320591M	TRS. 2SC458 (B TZ/C TZ) SI 230MHZ
QA09	2320591M	TRS. 2SC458 (B TZ/C TZ) SI 230MHZ	QS21	2320591M	TRS. 2SC458 (B TZ/C TZ) SI 230MHZ
QA11	2320591M	TRS. 2SC458 (B TZ/C TZ) SI 230MHZ	QS22	2312174	TRS. 2SD2375 (P)
QA12	2320591M	TRS. 2SC458 (B TZ/C TZ) SI 230MHZ	QS23	2320591M	TRS. 2SC458 (B TZ/C TZ) SI 230MHZ
QA70	2320591M	TRS. 2SC458 (B TZ/C TZ) SI 230MHZ	QS24	2320591M	TRS. 2SC458 (B TZ/C TZ) SI 230MHZ
QA71	2320591M	TRS. 2SC458 (B TZ/C TZ) SI 230MHZ	QX01	2320591M	TRS. 2SC458 (B TZ/C TZ) SI 230MHZ (AP63 ONLY)
QA72	2326876R	TRS. DTC124ES TAPE	QX02	2320591M	TRS. 2SC458 (B TZ/C TZ) SI 230MHZ (AP63 ONLY)
QA73	2326876R	TRS. DTC124ES TAPE	QX04	2320591M	TRS. 2SC458 (B TZ/C TZ) SI 230MHZ (AP63 ONLY)
QA74	2320591M	TRS. 2SC458 (B TZ/C TZ) SI 230MHZ	QX05	2320591M	TRS. 2SC458 (B TZ/C TZ) SI 230MHZ (AP63 ONLY)
QA75	2320591M	TRS. 2SC458 (B TZ/C TZ) SI 230MHZ	QX06	2320591M	TRS. 2SC458 (B TZ/C TZ) SI 230MHZ (AP63 ONLY)
QA76	2320591M	TRS. 2SC458 (B TZ/C TZ) SI 230MHZ	QX07	2320637M	TRS. 2SA673 (C 26TZ/D 26TZ) SI 80MHZ (AP63 ONLY)
QA77	2320591M	TRS. 2SC458 (B TZ/C TZ) SI 230MHZ	QX08	2320591M	TRS. 2SC458 (B TZ/C TZ) SI 230MHZ (AP63 ONLY)
QA78	2320637M	TRS. 2SA673 (C 26TZ/D 26TZ) SI 80MHZ	QX09	2320591M	TRS. 2SC458 (B TZ/C TZ) SI 230MHZ (AP63 ONLY)
QA79	2320637M	TRS. 2SA673 (C 26TZ/D 26TZ) SI 80MHZ	QX10	2320591M	TRS. 2SC458 (B TZ/C TZ) SI 230MHZ (AP63 ONLY)
QC01	2320591M	TRS. 2SC458 (B TZ/C TZ) SI 230MHZ	QX11	2320637M	TRS. 2SA673 (C 26TZ/D 26TZ) SI 80MHZ (AP63 ONLY)
QE01	2320598M	TRS. 2SC458 (B TZ/C TZ/D TZ)	QX12	2320591M	TRS. 2SC458 (B TZ/C TZ) SI 230MHZ (AP63 ONLY)
QE02	2320598M	TRS. 2SC458 (B TZ/C TZ/D TZ)	QY01	2320591M	TRS. 2SC458 (B TZ/C TZ) SI 230MHZ
QE03	2320598M	TRS. 2SC458 (B TZ/C TZ/D TZ)	QY02	2320591M	TRS. 2SC458 (B TZ/C TZ) SI 230MHZ
QE04	2320598M	TRS. 2SC458 (B TZ/C TZ/D TZ)	QY03	2321351M	TRS. 2SA836/844D/E 100MA 200MW 200MHZSI
QE05	2320598M	TRS. 2SC458 (B TZ/C TZ/D TZ)	QY04	2320591M	TRS. 2SC458 (B TZ/C TZ) SI 230MHZ
QE06	2320647M	TRS. 2SC1213 (C 21 TZ/D 21 TZ) SI 80MHZ4	QY05	2326876R	TRS. DTC124ES TAPE
QE07	2321351M	TRS. 2SA836/844D/E 100MA 200MW 200MHZSI	QY06	2320591M	TRS. 2SC458 (B TZ/C TZ) SI 230MHZ
QE08	2315381	TRS. 2SA1837	QY07	2326021M	TRS. 2SC1741S P/R/Q (TP) 250MHZ 30
QE09	2315391	TRS. 2SC4793	QY08	2320591M	TRS. 2SC458 (B TZ/C TZ) SI 230MHZ
QE10	2320598M	TRS. 2SC458 (B TZ/C TZ/D TZ)	QY50	2320637M	TRS. 2SA673 (C 26TZ/D 26TZ) SI 80MHZ
△QF01	2314991	TRS. 2SC4630	QY51	2320591M	TRS. 2SC458 (B TZ/C TZ) SI 230MHZ
QF02	2320663M	TRS. 2SC1213A (C)	QY52	2320637M	TRS. 2SA673 (C 26TZ/D 26TZ) SI 80MHZ
QF03	2320663M	TRS. 2SC1213A (C)	QY53	2320591M	TRS. 2SC458 (B TZ/C TZ) SI 230MHZ
QF04	2320663M	TRS. 2SC1213A (C)	QY54	2320591M	TRS. 2SC458 (B TZ/C TZ) SI 230MHZ
QF05	2320663M	TRS. 2SC1213A (C)	Q001	2320591M	TRS. 2SC458 (B TZ/C TZ) SI 230MHZ
QF06	2320663M	TRS. 2SC1213A (C)	Q002	2327772M	TRS. 2SC3413 TAPE (B/C) SI 200MHZ
QF07	2320663M	TRS. 2SC1213A (C)	Q003	2320647M	TRS. 2SC1213 (C 21 TZ/D 21 TZ) SI 80MHZ4
QF08	2320591M	TRS. 2SC458 (B TZ/C TZ) SI 230MHZ	Q004	2320591M	TRS. 2SC458 (B TZ/C TZ) SI 230MHZ
QF09	2320591M	TRS. 2SC458 (B TZ/C TZ) SI 230MHZ	Q005	2320591M	TRS. 2SC458 (B TZ/C TZ) SI 230MHZ
QF10	2320591M	TRS. 2SC458 (B TZ/C TZ) SI 230MHZ	Q006	2320637M	TRS. 2SA673 (C 26TZ/D 26TZ) SI 80MHZ
QF11	2320591M	TRS. 2SC458 (B TZ/C TZ) SI 230MHZ	Q007	2320591M	TRS. 2SC458 (B TZ/C TZ) SI 230MHZ
QK01	2320591M	TRS. 2SC458 (B TZ/C TZ) SI 230MHZ	Q008	2320591M	TRS. 2SC458 (B TZ/C TZ) SI 230MHZ
QK02	2320591M	TRS. 2SC458 (B TZ/C TZ) SI 230MHZ	Q010	2320591M	TRS. 2SC458 (B TZ/C TZ) SI 230MHZ
QK03	2320591M	TRS. 2SC458 (B TZ/C TZ) SI 230MHZ	Q011	2320591M	TRS. 2SC458 (B TZ/C TZ) SI 230MHZ
			Q012	2320647M	TRS. 2SC1213 (C 21 TZ/D 21 TZ) SI 80MHZ4
			Q013	2320591M	TRS. 2SC458 (B TZ/C TZ) SI 230MHZ

## REPLACEMENT PARTS LIST

**PRODUCT SAFETY NOTE:** Components marked with a  $\Delta$  have special characters important to safety. Before replacing any of these components, read carefully, the PRODUCT SAFETY NOTICE of this Service Manual. Don't degrade the safety of the receiver through improper servicing.

SYMBOL NO.	PART NO.	PART DESCRIPTION	SYMBOL NO.	PART NO.	PART DESCRIPTION
Q014	2320637M	TRS. 2SA673 (C 26TZ/D 26TZ) SI 80MHZ	Q863	2320637	TRS. 2SA673C/D SI 80MHZ 400MW
Q015	2320591M	TRS. 2SC458 (B TZ/C TZ) SI 230MHZ	Q865	2320591	TRS. 2SC458B/C SI 230MHZ 200MW
Q016	2320591M	TRS. 2SC458 (B TZ/C TZ) SI 230MHZ	Q901	2320665R	TRS. 2SC1213A(D R) TA
Q017	2320591M	TRS. 2SC458 (B TZ/C TZ) SI 230MHZ	Q902	2312171	TRS. 2SC3852
Q018	2320591M	TRS. 2SC458 (B TZ/C TZ) SI 230MHZ	$\Delta$ Q903	2323782R	THYRISTOR 03P2M(TA)
Q019	2320591M	TRS. 2SC458 (B TZ/C TZ) SI 230MHZ	$\Delta$ Q909	2321112M	TRS. 2SA778AK(02 TAPE)
Q021	2320591M	TRS. 2SC458 (B TZ/C TZ) SI 230MHZ	Q912	2320591M	TRS. 2SC458 (B TZ/C TZ) SI 230MHZ
Q022	2320637M	TRS. 2SA673 (C 26TZ/D 26TZ) SI 80MHZ	Q913	2320591M	TRS. 2SC458 (B TZ/C TZ) SI 230MHZ
Q023	2320637M	TRS. 2SA673 (C 26TZ/D 26TZ) SI 80MHZ	Q914	2320637M	TRS. 2SA673 (C 26TZ/D 26TZ) SI 80MHZ
Q024	2320591M	TRS. 2SC458 (B TZ/C TZ) SI 230MHZ	Q915	2312177	TRS. 2SD2375 (LD) (P)
Q101	2320591M	TRS. 2SC458 (B TZ/C TZ) SI 230MHZ			RESISTORS
Q102	2320591M	TRS. 2SC458 (B TZ/C TZ) SI 230MHZ			
Q103	2320647M	TRS. 2SC1213 (C 21 TZ/D 21 TZ) SI 80MHZ4			
Q105	2323524M	TRS. 2SD789 TAPE(C)	RAA1	0700067M	CF 1/16W 100K-JB
Q3A2	2320591M	TRS. 2SC458 (B TZ/C TZ) SI 230MHZ	RAA2	0700067M	CF 1/16W 100K-JB
Q3A3	2320591M	TRS. 2SC458 (B TZ/C TZ) SI 230MHZ	RAA3	0700067M	CF 1/16W 100K-JB
Q302	2320591M	TRS. 2SC458 (B TZ/C TZ) SI 230MHZ	RAA4	0700067M	CF 1/16W 100K-JB
Q303	2320591M	TRS. 2SC458 (B TZ/C TZ) SI 230MHZ	RAA5	0700054M	CF 1/16W 10K-JB
Q304	2320591M	TRS. 2SC458 (B TZ/C TZ) SI 230MHZ	RAA6	0700054M	CF 1/16W 10K-JB
Q305	2326021M	TRS. 2SC1741S P/R/Q (TP) 250MHZ 30	RAA7	0700058M	CF 1/16W 22K-JB
Q310	2320591M	TRS. 2SC458 (B TZ/C TZ) SI 230MHZ	RAA8	0700058M	CF 1/16W 22K-JB
Q311	2326876R	TRS. DTC124ES TAPE	RAA9	0700054M	CF 1/16W 10K-JB
Q312	2326876R	TRS. DTC124ES TAPE	RAC0	0700054M	CF 1/16W 10K-JB
Q313	2320591M	TRS. 2SC458 (B TZ/C TZ) SI 230MHZ	RAC1	0700041M	CF 1/16W 1.0K-JB
Q401	2320591M	TRS. 2SC458 (B TZ/C TZ) SI 230MHZ	RAC2	0700067M	CF 1/16W 100K-JB
Q402	2320591M	TRS. 2SC458 (B TZ/C TZ) SI 230MHZ	RAC3	0700041M	CF 1/16W 1.0K-JB
Q403	2320591M	TRS. 2SC458 (B TZ/C TZ) SI 230MHZ	RAC4	0700041M	CF 1/16W 1.0K-JB
Q404	2320591M	TRS. 2SC458 (B TZ/C TZ) SI 230MHZ	RAC5	0700041M	CF 1/16W 1.0K-JB
Q5A1	2320591M	TRS. 2SC458 (B TZ/C TZ) SI 230MHZ (AP63B ONLY)	RAC6	0700032M	CF 1/16W 220-JB
Q5A2	2320591M	TRS. 2SC458 (B TZ/C TZ) SI 230MHZ (AP63B ONLY)	RAC7	0700041M	CF 1/16W 1.0K-JB
Q5A3	2320591M	TRS. 2SC458 (B TZ/C TZ) SI 230MHZ	RAC8	0700067M	CF 1/16W 100K-JB
Q5A4	2326876R	TRS. DTC124ES TAPE	RAC9	0700062M	CF 1/16W 39K-JB
Q5A5	2320591M	TRS. 2SC458 (B TZ/C TZ) SI 230MHZ	RAD1	0700041M	CF 1/16W 1.0K-JB
Q5A6	2320591M	TRS. 2SC458 (B TZ/C TZ) SI 230MHZ	RAD2	0700054M	CF 1/16W 10K-JB
Q501	2320637M	TRS. 2SA673 (C 26TZ/D 26TZ) SI 80MHZ	RAD3	0700041M	CF 1/16W 1.0K-JB
Q502	2320591M	TRS. 2SC458 (B TZ/C TZ) SI 230MHZ	RAD4	0700062M	CF 1/16W 39K-JB
Q503	2320591M	TRS. 2SC458 (B TZ/C TZ) SI 230MHZ	RAD5	0700041M	CF 1/16W 1.0K-JB
Q506	2320591M	TRS. 2SC458 (B TZ/C TZ) SI 230MHZ	RAD6	0700054M	CF 1/16W 10K-JB
Q601	2320591M	TRS. 2SC458 (B TZ/C TZ) SI 230MHZ	RAD7	0700041M	CF 1/16W 1.0K-JB
Q604	2320637M	TRS. 2SA673 (C 26TZ/D 26TZ) SI 80MHZ	RA01	0700051M	CF 1/16W 5.6K-JB
Q605	2320637M	TRS. 2SA673 (C 26TZ/D 26TZ) SI 80MHZ	RA02	0700051M	CF 1/16W 5.6K-JB
Q606	2312177	TRS. 2SD2375 (LD) (P)	RA03	0700051M	CF 1/16W 5.6K-JB
Q607	2320637M	TRS. 2SA673 (C 26TZ/D 26TZ) SI 80MHZ	RA04	0700051M	CF 1/16W 5.6K-JB
Q608	2320591M	TRS. 2SC458 (B TZ/C TZ) SI 230MHZ	RA05	0700051M	CF 1/16W 5.6K-JB
Q609	2320637M	TRS. 2SA673 (C 26TZ/D 26TZ) SI 80MHZ	RA06	0700051M	CF 1/16W 5.6K-JB
Q610	2320637M	TRS. 2SA673 (C 26TZ/D 26TZ) SI 80MHZ	RA07	0700051M	CF 1/16W 5.6K-JB
Q612	2320591M	TRS. 2SC458 (B TZ/C TZ) SI 230MHZ	RA08	0700051M	CF 1/16W 5.6K-JB
Q613	2320665R	TRS. 2SC1213A(D R) TA	RA09	0700041M	CF 1/16W 1.0K-JB
Q701	2326216	TRS. 2SC3116 (S/T)	RA10	0700041M	CF 1/16W 1.0K-JB
Q704	2320591M	TRS. 2SC458 (B TZ/C TZ) SI 230MHZ	RA11	0700027M	CF 1/16W 100-JB
Q705	2320637M	TRS. 2SA673 (C 26TZ/D 26TZ) SI 80MHZ	RA12	0700027M	CF 1/16W 100-JB
Q706	2320591M	TRS. 2SC458 (B TZ/C TZ) SI 230MHZ	RA18	0700062M	CF 1/16W 39K-JB
Q707	2320637M	TRS. 2SA673 (C 26TZ/D 26TZ) SI 80MHZ	RA19	0700054M	CF 1/16W 10K-JB
$\Delta$ Q777	2315274F	TRS. 2SC4589-05 (1500V)	RA20	0700041M	CF 1/16W 1.0K-JB
Q801	2312372F	TRS. 2SC3942	RA21	0700041M	CF 1/16W 1.0K-JB
Q802	2320663	TRS. 2SC1213AC SI 80MHZ 400MW	RA22	0700034M	CF 1/16W 330-JB
Q803	2320637	TRS. 2SA673C/D SI 80MHZ 400MW	RA23	0700032M	CF 1/16W 220-JB
Q804	2320591	TRS. 2SC458B/C SI 230MHZ 200MW	RA24	0700062M	CF 1/16W 39K-JB
Q831	2312372F	TRS. 2SC3942	RA25	0700054M	CF 1/16W 10K-JB
Q832	2320663	TRS. 2SC1213AC SI 80MHZ 400MW	RA26	0700041M	CF 1/16W 1.0K-JB
Q833	2320637	TRS. 2SA673C/D SI 80MHZ 400MW	RA27	0700041M	CF 1/16W 1.0K-JB
Q835	2320591	TRS. 2SC458B/C SI 230MHZ 200MW	RA28	0700034M	CF 1/16W 330-JB
Q861	2312372F	TRS. 2SC3942	RA29	0700032M	CF 1/16W 220-JB
Q862	2320663	TRS. 2SC1213AC SI 80MHZ 400MW	RA30	0700041M	CF 1/16W 1.0K-JB

60SX12B/13K  
50UX26B/27K  
46UX24B/25K  
50SX8B

## REPLACEMENT PARTS LIST

**PRODUCT SAFETY NOTE:** Components marked with a  have special characters important to safety. Before replacing any of these components, read carefully, the PRODUCT SAFETY NOTICE of this Service Manual. Don't degrade the safety of the receiver through improper servicing.

SYMBOL NO.	PART NO.	PART DESCRIPTION	SYMBOL NO.	PART NO.	PART DESCRIPTION
RA31	0700067M	CF 1/16W 100K-JB	RE03	0700059M	CF 1/16W 27K-JB
RA32	0700041M	CF 1/16W 1.0K-JB	RE04	0700035M	CF 1/16W 390-JB
RA33	0700067M	CF 1/16W 100K-JB	RE05	0700042M	CF 1/16W 1.2K-JB
RA38	0700034M	CF 1/16W 330-JB	RE06	0700036M	CF 1/16W 470-JB
RA39	0700032M	CF 1/16W 220-JB	RE07	0700067M	CF 1/16W 100K-JB
RA44	0700034M	CF 1/16W 330-JB	RE08	0700059M	CF 1/16W 27K-JB
RA45	0700032M	CF 1/16W 220-JB	RE09	0700042M	CF 1/16W 1.2K-JB
RA46	0700041M	CF 1/16W 1.0K-JB	RE10	0700033M	CF 1/16W 270-JB
RA47	0700067M	CF 1/16W 100K-JB	RE11	0700033M	CF 1/16W 270-JB
RA48	0700041M	CF 1/16W 1.0K-JB	RE12	0700045M	CF 1/16W 2.2K-JB
RA49	0700067M	CF 1/16W 100K-JB	RE13	0700058M	CF 1/16W 22K-JB
RA50	0700041M	CF 1/16W 1.0K-JB	RE14	0700067M	CF 1/16W 100K-JB
RA51	0700067M	CF 1/16W 100K-JB	RE15	0700046M	CF 1/16W 2.7K-JB
RA52	0700041M	CF 1/16W 1.0K-JB	RE16	0113742M	CF 1/2W 470-JB
RA53	0700067M	CF 1/16W 100K-JB	RE17	0700061M	CF 1/16W 33K-JB
RA54	0700041M	CF 1/16W 1.0K-JB	RE18	0700036M	CF 1/16W 470-JB
RA55	0700067M	CF 1/16W 100K-JB	RE19	0700067M	CF 1/16W 100K-JB
RA56	0700041M	CF 1/16W 1.0K-JB	RE20	0700054M	CF 1/16W 10K-JB
RA57	0700067M	CF 1/16W 100K-JB	RE21	0100065M	CF 1/8W 1K-JB
RA58	0700041M	CF 1/16W 1.0K-JB	RE22	0700025M	CF 1/16W 68-J
RA59	0700067M	CF 1/16W 100K-JB	RE23	0113701M	CF SRD1/2P-B 10-J
RA60	0700041M	CF 1/16W 1.0K-JB	RE24	0100039M	CF 1/8W 82-JB
RA61	0700067M	CF 1/16W 100K-JB	RE25	0114165M	CF SRD 1/4 PF 1.5K-J
RA62	0700041M	CF 1/16W 1.0K-JB	RE26	0114143M	CF 1/4W 330-JB
RA63	0700041M	CF 1/16W 1.0K-JB	RE27	0114221M	CF 1/4 PB 68K-J
RA64	0100123M	CF 1/8W 270K-JB	RE28	0114221M	CF 1/4 PB 68K-J
RA65	0100123M	CF 1/8W 270K-JB	RE29	0113776M	CF SRD1/2P-B 12K-J
RA66	0100123M	CF 1/8W 270K-JB	RE30	0100039M	CF 1/8W 82-JB
RA67	0100123M	CF 1/8W 270K-JB	RE31	0100069M	CF 1/8W 1.5K-JB
RA68	0179561M	MG 2.2M-J TAPE	RE32	0100053M	CF 1/8W 330-JB
RA69	0700049M	CF 1/16W 4.7K-JB	RE33	0113716M	CF SRD1/2P-B 43-J
RA70	0700056M	CF 1/16W 15K-JB	RE34	0110229S	MF 220-JS
RA71	0100041M	CF 1/8W 100-JB	RE35	0113686M	CF 1/2W 2.7-J
RA72	0700041M	CF 1/16W 1.0K-JB	RE36	0113686M	CF 1/2W 2.7-J
RA73	0700041M	CF 1/16W 1.0K-JB	RE37	0113716M	CF SRD1/2P-B 43-J
RA74	0700064M	CF 1/16W 56K-JB	RE38	0110132S	MF 300-JS
RA75	0700045M	CF 1/16W 2.2K-JB	RE39	0700054M	CF 1/16W 10K-JB
RA76	0100123M	CF 1/8W 270K-JB	RE40	0700049M	CF 1/16W 4.7K-JB
RA77	0700047M	CF 1/16W 3.3K-JB	RF01	0110279S	MF 27K-JS
RA78	0700064M	CF 1/16W 56K-JB	RF02	0110279S	MF 27K-JS
RA79	0100123M	CF 1/8W 270K-JB	RF03	0110279S	MF 27K-JS
RA80	0700041M	CF 1/16W 1.0K-JB	RF04	0110279S	MF 27K-JS
RA81	0700041M	CF 1/16W 1.0K-JB	RF05	0110279S	MF 27K-JS
RA82	0100041M	CF 1/8W 100-JB	RF06	0114213M	CF SRD 1/4 PB 33K-J
RA83	0700041M	CF 1/16W 1.0K-JB	RF07	0100065M	CF 1/8W 1K-JB
RA84	0700067M	CF 1/16W 100K-JB	RF08	0100041M	CF 1/8W 100-JB
RA85	0700054M	CF 1/16W 10K-JB	RF09	0700035M	CF 1/16W 390-JB
RA86	0700041M	CF 1/16W 1.0K-JB	RF10	0700045M	CF 1/16W 2.2K-JB
RA89	0700054M	CF 1/16W 10K-JB	RF11	0700059M	CF 1/16W 27K-JB
RA90	0700054M	CF 1/16W 10K-JB	RF12	0700059M	CF 1/16W 27K-JB
RA91	0700041M	CF 1/16W 1.0K-JB	RF13	0700048M	CF 1/16W 3.9K-JB
RA92	0700067M	CF 1/16W 100K-JB	RF14	0700041M	CF 1/16W 1.0K-JB
RA93	0700054M	CF 1/16W 10K-JB	RF15	0700046M	CF 1/16W 2.7K-JB
RA94	0700041M	CF 1/16W 1.0K-JB	RF16	0700049M	CF 1/16W 4.7K-JB
RC01	0700027M	CF 1/16W 100-JB	RF17	0700027M	CF 1/16W 100-JB
RC02	0700027M	CF 1/16W 100-JB	RF18	0700054M	CF 1/16W 10K-JB
RC04	0700027M	CF 1/16W 100-JB (AP63 ONLY)	RF19	0700037M	CF 1/16W 560-JB
RC05	0700032M	CF 1/16W 220-JB	RF20	0700066M	CF 1/16W 82K-JB
RC06	0700041M	CF 1/16W 1.0K-JB	RF21	0700049M	CF 1/16W 4.7K-JB
RC16	0100038M	CF 1/8W 75-JB	RF22	0700059M	CF 1/16W 27K-JB
RC17	0700027M	CF 1/16W 100-JB	RF23	0700043M	CF 1/16W 1.5K-JB
RC71	0187038M	CF 1/16W 75-J	RF24	0700051M	CF 1/16W 5.6K-JB
RE01	0110135S	MF 390-JS	RF25	0700038M	CF 1/16W 680-JB
RE02	0700067M	CF 1/16W 100K-JB	RF26	0187098M	CF 1/16W 24K-JB

## REPLACEMENT PARTS LIST

**PRODUCT SAFETY NOTE:** Components marked with a  have special characters important to safety. Before replacing any of these components, read carefully, the PRODUCT SAFETY NOTICE of this Service Manual. Don't degrade the safety of the receiver through improper servicing.

SYMBOL NO.	PART NO.	PART DESCRIPTION	SYMBOL NO.	PART NO.	PART DESCRIPTION
RF27	0700054M	CF 1/16W 10K-JB	RG50	0700063M	CF 1/16W 47K-JB
RF28	0100113M	CF 1/8W 100K-JB	RG51	0187086M	CF 1/16W 7.5K-JB
RF29	0700063M	CF 1/16W 47K-JB	RG52	0187086M	CF 1/16W 7.5K-JB
RF30	0700046M	CF 1/16W 2.7K-JB	RG53	0700054M	CF 1/16W 10K-JB
RF31	0700041M	CF 1/16W 1.0K-JB	RG54	0700054M	CF 1/16W 10K-JB
RF32	0700052M	CF 1/16W 6.8K-JB	RG55	0114149M	CF SRD 1/4 PF 560-J
RF33	0700058M	CF 1/16W 22K-JB	RG56	0700054M	CF 1/16W 10K-JB
RF34	0700058M	CF 1/16W 22K-JB	RG57	0700047M	CF 1/16W 3.3K-JB
RF35	0700056M	CF 1/16W 15K-JB	RG58	0700054M	CF 1/16W 10K-JB
RF36	0700053M	CF 1/16W 8.2K-JB	RG59	0700047M	CF 1/16W 3.3K-JB
RF37	0700041M	CF 1/16W 1.0K-JB	RKA4	0700052M	CF 1/16W 6.8K-JB
RF38	0700061M	CF 1/16W 33K-JB	RKA5	0700044M	CF 1/16W 1.8K-JB
RF39	0700049M	CF 1/16W 4.7K-JB	RKA6	0700041M	CF 1/16W 1.0K-JB
RF40	0700054M	CF 1/16W 10K-JB	RKA7	0700041M	CF 1/16W 1.0K-JB
RF41	0700054M	CF 1/16W 10K-JB	RK01	0700063M	CF 1/16W 47K-JB
RG01	0179536M	MG 1M J TAPE	RK02	0700049M	CF 1/16W 4.7K-JB
RG02	0179536M	MG 1M J TAPE	RK03	0100125M	CF 1/8W 330K-JB
RG03	0179536M	MG 1M J TAPE	RK05	0700054M	CF 1/16W 10K-JB
RG04	0179536M	MG 1M J TAPE	RK06	0700054M	CF 1/16W 10K-JB
RG05	0179536M	MG 1M J TAPE	RK07	0700027M	CF 1/16W 100-JB
RG06	0179536M	MG 1M J TAPE	RK08	0700027M	CF 1/16W 100-JB
RG07	0179536M	MG 1M J TAPE	RK09	0700027M	CF 1/16W 100-JB
RG08	0700041M	CF 1/16W 1.0K-JB	RK10	0700041M	CF 1/16W 1.0K-JB
RG09	0700041M	CF 1/16W 1.0K-JB	RK11	0700041M	CF 1/16W 1.0K-JB
RG10	0179536M	MG 1M J TAPE	RK12	0700041M	CF 1/16W 1.0K-JB
RG11	0179536M	MG 1M J TAPE	RK13	0700063M	CF 1/16W 47K-JB
RG12	0179536M	MG 1M J TAPE	RK14	0110229S	MF 220-JS
RG13	0179536M	MG 1M J TAPE	RK15	0113694M	CF 1/2W 5.6-J
RG14	0179536M	MG 1M J TAPE	RK16	0113694M	CF 1/2W 5.6-J
RG15	0179536M	MG 1M J TAPE	RK17	0100077M	CF 1/8W 3.3K-JB
RG16	0179536M	MG 1M J TAPE	RK18	0700063M	CF 1/16W 47K-JB
RG17	0700041M	CF 1/16W 1.0K-JB	RK19	0110225S	MG 150-JS 2W
RG18	0700041M	CF 1/16W 1.0K-JB	RK20	0113692M	CF 1/2W 4.7-J
RG19	0700041M	CF 1/16W 1.0K-JB	RK21	0113692M	CF 1/2W 4.7-J
RG20	0700063M	CF 1/16W 47K-JB	RK22	0100077M	CF 1/8W 3.3K-JB
RG21	0700063M	CF 1/16W 47K-JB	RK23	0700063M	CF 1/16W 47K-JB
RG22	0700041M	CF 1/16W 1.0K-JB	RK24	0110229S	MF 220-JS
RG23	0700041M	CF 1/16W 1.0K-JB	RK25	0113698M	CF 1/2W 8.2-J
RG24	0700063M	CF 1/16W 47K-JB	RK26	0113698M	CF 1/2W 8.2-J
RG25	0700063M	CF 1/16W 47K-JB	RK27	0100077M	CF 1/8W 3.3K-JB
RG26	0700041M	CF 1/16W 1.0K-JB	RK28	0700063M	CF 1/16W 47K-JB
RG27	0700041M	CF 1/16W 1.0K-JB	RK29	0110225S	MG 150-JS 2W
RG28	0700063M	CF 1/16W 47K-JB	RK30	0113696M	CF 1/2W 6.8-J
RG29	0700063M	CF 1/16W 47K-JB	RK31	0113696M	CF 1/2W 6.8-J
RG30	0700041M	CF 1/16W 1.0K-JB	RK32	0100077M	CF 1/8W 3.3K-JB
RG31	0700041M	CF 1/16W 1.0K-JB	RK33	0700063M	CF 1/16W 47K-JB
RG32	0700063M	CF 1/16W 47K-JB	RK34	0110229S	MF 220-JS
RG33	0700063M	CF 1/16W 47K-JB	RK35	0113696M	CF 1/2W 6.8-J
RG34	0700041M	CF 1/16W 1.0K-JB	RK36	0113696M	CF 1/2W 6.8-J
RG35	0700041M	CF 1/16W 1.0K-JB	RK37	0100077M	CF 1/8W 3.3K-JB
RG36	0700063M	CF 1/16W 47K-JB	RK38	0100077M	CF 1/8W 3.3K-JB
RG37	0700063M	CF 1/16W 47K-JB	RK39	0700063M	CF 1/16W 47K-JB
RG38	0700041M	CF 1/16W 1.0K-JB	RK40	0110225S	MG 150-JS 2W
RG39	0700041M	CF 1/16W 1.0K-JB	RK41	0113692M	CF 1/2W 4.7-J
RG40	0700063M	CF 1/16W 47K-JB	RK42	0113692M	CF 1/2W 4.7-J
RG41	0700063M	CF 1/16W 47K-JB	RK57	0700041M	CF 1/16W 1.0K-JB
RG42	0700041M	CF 1/16W 1.0K-JB	RK58	0700041M	CF 1/16W 1.0K-JB
RG43	0700041M	CF 1/16W 1.0K-JB	RK79	0700046M	CF 1/16W 2.7K-JB
RG44	0700063M	CF 1/16W 47K-JB	RK80	0700046M	CF 1/16W 2.7K-JB
RG45	0700063M	CF 1/16W 47K-JB	RK81	0700046M	CF 1/16W 2.7K-JB
RG46	0700041M	CF 1/16W 1.0K-JB	RK82	0700046M	CF 1/16W 2.7K-JB
RG47	0187086M	CF 1/16W 7.5K-JB	RK83	0700046M	CF 1/16W 2.7K-JB
RG48	0187086M	CF 1/16W 7.5K-JB	RK84	0700046M	CF 1/16W 2.7K-JB
RG49	0700063M	CF 1/16W 47K-JB	RK85	0700048M	CF 1/16W 3.9K-JB

## REPLACEMENT PARTS LIST

**PRODUCT SAFETY NOTE:** Components marked with a  have special characters important to safety. Before replacing any of these components, read carefully, the PRODUCT SAFETY NOTICE of this Service Manual. Don't degrade the safety of the receiver through improper servicing.

SYMBOL NO.	PART NO.	PART DESCRIPTION	SYMBOL NO.	PART NO.	PART DESCRIPTION
RK86	0700047M	CF 1/16W 3.3K-JB	RN18	0700057M	CF 1/16W 18K-JB
RK89	0700046M	CF 1/16W 2.7K-JB	RN19	0700049M	CF 1/16W 4.7K-JB
RK90	0700052M	CF 1/16W 6.8K-JB	RSA1	0700041M	CF 1/16W 1.0K-JB
RK91	0700054M	CF 1/16W 10K-JB	RSA2	0700041M	CF 1/16W 1.0K-JB
RK94	0100057M	CF 1/8W 470-JB	RSA8	0700063M	CF 1/16W 47K-JB
RK95	0700046M	CF 1/16W 2.7K-JB	RSA9	0700067M	CF 1/16W 100K-JB
RK96	0700046M	CF 1/16W 2.7K-JB	RSC3	0700063M	CF 1/16W 47K-JB
RK97	0700042M	CF 1/16W 1.2K-JB	RSC4	0700054M	CF 1/16W 10K-JB
RL10	0100129M	CF 1/8W 470K-JB	RSC5	0700045M	CF 1/16W 2.2K-JB
RL11	0100129M	CF 1/8W 470K-JB	RSC6	0700045M	CF 1/16W 2.2K-JB
RL12	0100129M	CF 1/8W 470K-JB	RSC7	0700054M	CF 1/16W 10K-JB
RL13	0100129M	CF 1/8W 470K-JB	RSC8	0700045M	CF 1/16W 2.2K-JB
RL14	0100129M	CF 1/8W 470K-JB	RSC9	0700045M	CF 1/16W 2.2K-JB
RL15	0100129M	CF 1/8W 470K-JB	RSE1	0700041M	CF 1/16W 1.0K-JB
RL16	0100129M	CF 1/8W 470K-JB	RSE2	0700054M	CF 1/16W 10K-JB
RL17	0100129M	CF 1/8W 470K-JB	RSE3	0700054M	CF 1/16W 10K-JB
RL20	0100133M	CF 1/8W 680K-JB	RSE4	0700036M	CF 1/16W 470-JB
RL21	0100121M	CF 1/8W 220K-JB	RSE5	0700041M	CF 1/16W 1.0K-JB
RL22	0100133M	CF 1/8W 680K-JB	RSE6	0700058M	CF 1/16W 22K-JB
RL23	0100129M	CF 1/8W 470K-JB	RSE7	0119505G	MF 2.2-J
RL24	0100133M	CF 1/8W 680K-JB	RSE8	0119505G	MF 2.2-J
RL25	0100121M	CF 1/8W 220K-JB	RSE9	0119505G	MF 2.2-J
RL26	0100133M	CF 1/8W 680K-JB	RSF1	0114161M	CF 1/4W 1K-JB
RL27	0100129M	CF 1/8W 470K-JB	RSF2	0114161M	CF 1/4W 1K-JB
RL30	0700027M	CF 1/16W 100-JB	RSF3	0114161M	CF 1/4W 1K-JB
RL31	0700027M	CF 1/16W 100-JB	RSF4	0700065M	CF 1/16W 68K-JB
RL32	0700027M	CF 1/16W 100-JB	RSF5	0700065M	CF 1/16W 68K-JB
RL33	0700027M	CF 1/16W 100-JB	RSF6	0700065M	CF 1/16W 68K-JB
RL34	0700027M	CF 1/16W 100-JB	RSF7	0110337S	MF 3W 470-JS
RL35	0700027M	CF 1/16W 100-JB	RSF8	0700054M	CF 1/16W 10K-JB
RL36	0700027M	CF 1/16W 100-JB	RSF9	0700045M	CF 1/16W 2.2K-JB
RL37	0700027M	CF 1/16W 100-JB	RSG1	0700054M	CF 1/16W 10K-JB
RL38	0700049M	CF 1/16W 4.7K-JB	RSH5	0700054M	CF 1/16W 10K-JB
RM01	0700041M	CF 1/16W 1.0K-JB	RSJ8	0700058M	CF 1/16W 22K-JB
RM02	0700058M	CF 1/16W 22K-JB	RSK1	0700041M	CF 1/16W 1.0K-JB
RM03	0700045M	CF 1/16W 2.2K-JB	RSK2	0700027M	CF 1/16W 100-JB
RM04	0100065M	CF 1/8W 1K-JB	RSK3	0700027M	CF 1/16W 100-JB
RM05	0100065M	CF 1/8W 1K-JB	RSK4	0700047M	CF 1/16W 3.3K-JB
RM06	0700041M	CF 1/16W 1.0K-JB	RSK5	0700054M	CF 1/16W 10K-JB
RM07	0700043M	CF 1/16W 1.5K-JB	RS01	0700041M	CF 1/16W 1.0K-JB
RM08	0700046M	CF 1/16W 2.7K-JB	RS02	0700041M	CF 1/16W 1.0K-JB
RM09	0700049M	CF 1/16W 4.7K-JB	RS03	0700041M	CF 1/16W 1.0K-JB
RM10	0100129M	CF 1/8W 470K-JB	RS04	0700067M	CF 1/16W 100K-JB
RM11	0700041M	CF 1/16W 1.0K-JB	RS05	0700067M	CF 1/16W 100K-JB
RM12	0100125M	CF 1/8W 330K-JB	RS06	0700067M	CF 1/16W 100K-JB
RM13	0114149M	CF SRD 1/4 PF 560-J	RS07	0700067M	CF 1/16W 100K-JB
RM14	0100125M	CF 1/8W 330K-JB	RS08	0700067M	CF 1/16W 100K-JB
RM15	0700054M	CF 1/16W 10K-JB	RS09	0700067M	CF 1/16W 100K-JB
RN01	0700057M	CF 1/16W 18K-JB	RS14	0700041M	CF 1/16W 1.0K-JB
RN02	0700041M	CF 1/16W 1.0K-JB	RS15	0700041M	CF 1/16W 1.0K-JB
RN03	0700041M	CF 1/16W 1.0K-JB	RS16	0179536M	MG 1M J TAPE
RN04	0700067M	CF 1/16W 100K-JB	RS17	0700063M	CF 1/16W 47K-JB
RN05	0700052M	CF 1/16W 6.8K-JB	RS18	0700051M	CF 1/16W 5.6K-JB
RN06	0700051M	CF 1/16W 5.6K-JB	RS19	0700064M	CF 1/16W 56K-JB
RN07	0700054M	CF 1/16W 10K-JB	RS20	0187096M	CF 1/16W 20K-JB
RN08	0700057M	CF 1/16W 18K-JB	RS21	0700062M	CF 1/16W 39K-JB
RN09	0700061M	CF 1/16W 33K-JB	RS22	0700041M	CF 1/16W 1.0K-JB
RN10	0700054M	CF 1/16W 10K-JB	RS23	0700041M	CF 1/16W 1.0K-JB
RN11	0700058M	CF 1/16W 22K-JB	RS24	0700041M	CF 1/16W 1.0K-JB
RN12	0700051M	CF 1/16W 5.6K-JB	RS25	0700058M	CF 1/16W 22K-JB
RN13	0700044M	CF 1/16W 1.8K-JB	RS26	0700058M	CF 1/16W 22K-JB
RN14	0700054M	CF 1/16W 10K-JB	RS27	0700058M	CF 1/16W 22K-JB
RN15	0700058M	CF 1/16W 22K-JB	RS28	0100059M	CF 1/8W 560-JB
RN16	0700064M	CF 1/16W 56K-JB	RS29	0700067M	CF 1/16W 100K-JB

## REPLACEMENT PARTS LIST

**PRODUCT SAFETY NOTE:** Components marked with a have special characters important to safety. Before replacing any of these components, read carefully, the PRODUCT SAFETY NOTICE of this Service Manual. Don't degrade the safety of the receiver through improper servicing.

SYMBOL NO.	PART NO.	PART DESCRIPTION	SYMBOL NO.	PART NO.	PART DESCRIPTION
RS30	0700067M	CF 1/16W 100K-JB	RX57	0700054M	CF 1/16W 10K-JB (AP63 ONLY)
RS31	0700065M	CF 1/16W 68K-JB	RX58	0100115M	CF 1/8W 120K-JB (AP63 ONLY)
RS32	0700051M	CF 1/16W 5.6K-JB	RY01	0700027M	CF 1/16W 100-JB
RS33	0700063M	CF 1/16W 47K-JB	RY02	0700027M	CF 1/16W 100-JB
RS34	0700051M	CF 1/16W 5.6K-JB	RY03	0700027M	CF 1/16W 100-JB
RS35	0700043M	CF 1/16W 1.5K-JB	RY04	0700041M	CF 1/16W 1.0K-JB
RS36	0700035M	CF 1/16W 390-JB	RY05	0700027M	CF 1/16W 100-JB
RS39	0700054M	CF 1/16W 10K-JB	RY06	0700027M	CF 1/16W 100-JB
RS42	0700041M	CF 1/16W 1.0K-JB	RY07	0700027M	CF 1/16W 100-JB
RS47	0700041M	CF 1/16W 1.0K-JB	RY08	0700041M	CF 1/16W 1.0K-JB
RS96	0700032M	CF 1/16W 220-JB	RY09	0700041M	CF 1/16W 1.0K-JB
RS97	0700052M	CF 1/16W 6.8K-JB	RY10	0700041M	CF 1/16W 1.0K-JB
RS98	0700051M	CF 1/16W 5.6K-JB	RY11	0700041M	CF 1/16W 1.0K-JB
RX01	0700059M	CF 1/16W 27K-JB (AP63 ONLY)	RY12	0700027M	CF 1/16W 100-JB
RX02	0700067M	CF 1/16W 100K-JB (AP63 ONLY)	RY14	0700027M	CF 1/16W 100-JB
RX03	0700027M	CF 1/16W 100-JB (AP63 ONLY)	RY15	0700027M	CF 1/16W 100-JB (AP63 ONLY)
RX04	0700039M	CF 1/16W 820-JB (AP63 ONLY)	RY16	0700045M	CF 1/16W 2.2K-JB
RX05	0700036M	CF 1/16W 470-JB (AP63 ONLY)	RY17	0700047M	CF 1/16W 3.3K-JB
RX06	0700043M	CF 1/16W 1.5K-JB (AP63 ONLY)	RY18	0700054M	CF 1/16W 10K-JB
RX07	0700027M	CF 1/16W 100-JB (AP63 ONLY)	RY19	0700041M	CF 1/16W 1.0K-JB
RX08	0700039M	CF 1/16W 820-JB (AP63 ONLY)	RY20	0700039M	CF 1/16W 820-JB
RX12	0700043M	CF 1/16W 1.5K-JB (AP63 ONLY)	RY21	0700048M	CF 1/16W 3.9K-JB
RX13	0700039M	CF 1/16W 820-JB (AP63 ONLY)	RY22	0700034M	CF 1/16W 330-JB
RX14	0700063M	CF 1/16W 47K-JB (AP63 ONLY)	RY23	0700025M	CF 1/16W 68-J (AP63 ONLY)
RX15	0700036M	CF 1/16W 470-JB (AP63 ONLY)	RY23	0700027M	CF 1/16W 100-JB (AP63B ONLY)
RX16	0700033M	CF 1/16W 270-JB (AP63 ONLY)	RY24	0700041M	CF 1/16W 1.0K-JB
RX17	0100125M	CF 1/8W 330K-JB (AP63 ONLY)	RY25	0700054M	CF 1/16W 10K-JB
RX18	0700056M	CF 1/16W 15K-JB (AP63 ONLY)	RY26	0700043M	CF 1/16W 1.5K-JB
RX19	0700041M	CF 1/16W 1.0K-JB (AP63 ONLY)	RY27	0187080M	CF 1/16W 4.3K-JB
RX20	0187054M	CF 1/16W 360-JB (AP63 ONLY)	RY28	0700052M	CF 1/16W 6.8K-JB
RX21	0700051M	CF 1/16W 5.6K-JB (AP63 ONLY)	RY29	0700047M	CF 1/16W 3.3K-JB
RX22	0700041M	CF 1/16W 1.0K-JB (AP63 ONLY)	RY30	0700027M	CF 1/16W 100-JB
RX23	0700035M	CF 1/16W 390-JB (AP63 ONLY)	RY31	0100038M	CF 1/8W 75-JB
RX24	0700054M	CF 1/16W 10K-JB (AP63 ONLY)	RY32	0100038M	CF 1/8W 75-JB
RX25	0700054M	CF 1/16W 10K-JB (AP63 ONLY)	RY33	0700063M	CF 1/16W 47K-JB
RX26	0100130M	CF 1/8W 510K-JB (AP63 ONLY)	RY34	0700058M	CF 1/16W 22K-JB
RX27	0700047M	CF 1/16W 3.3K-JB (AP63 ONLY)	RY35	0100038M	CF 1/8W 75-JB
RX28	0700039M	CF 1/16W 820-JB (AP63 ONLY)	RY36	0700027M	CF 1/16W 100-JB
RX29	0700027M	CF 1/16W 100-JB (AP63 ONLY)	RY37	0700027M	CF 1/16W 100-JB
RX30	0700039M	CF 1/16W 820-JB (AP63 ONLY)	RY38	0700041M	CF 1/16W 1.0K-JB
RX31	0700041M	CF 1/16W 1.0K-JB (AP63 ONLY)	RY39	0700034M	CF 1/16W 330-JB
RX32	0700039M	CF 1/16W 820-JB (AP63 ONLY)	RY40	0114137M	CF 1/4W 180-JB
RX33	0700041M	CF 1/16W 1.0K-JB (AP63 ONLY)	RY41	0100037M	CF 1/8W 68-JB
RX34	0700057M	CF 1/16W 18K-JB (AP63 ONLY)	RY42	0700067M	CF 1/16W 100K-JB
RX35	0700064M	CF 1/16W 56K-JB (AP63 ONLY)	RY43	0700041M	CF 1/16W 1.0K-JB
RX36	0700036M	CF 1/16W 470-JB (AP63 ONLY)	RY44	0700054M	CF 1/16W 10K-JB
RX37	0700041M	CF 1/16W 1.0K-JB (AP63 ONLY)	RY45	0700039M	CF 1/16W 820-JB
RX38	0700033M	CF 1/16W 270-JB (AP63 ONLY)	RY46	0700027M	CF 1/16W 100-JB
RX39	0700054M	CF 1/16W 10K-JB (AP63 ONLY)	RY47	0700054M	CF 1/16W 10K-JB
RX40	0700027M	CF 1/16W 100-JB (AP63 ONLY)	RY48	0700027M	CF 1/16W 100-JB
RX41	0700039M	CF 1/16W 820-JB (AP63 ONLY)	RY50	0700027M	CF 1/16W 100-JB
RX42	0700041M	CF 1/16W 1.0K-JB (AP63 ONLY)	RY51	0700038M	CF 1/16W 680-JB
RX43	0700044M	CF 1/16W 1.8K-JB (AP63 ONLY)	RY52	0700043M	CF 1/16W 1.5K-JB
RX44	0700041M	CF 1/16W 1.0K-JB (AP63 ONLY)	RY53	0700039M	CF 1/16W 820-JB
RX45	0700062M	CF 1/16W 39K-JB (AP63 ONLY)	RY54	0700063M	CF 1/16W 47K-JB
RX46	0700054M	CF 1/16W 10K-JB (AP63 ONLY)	RY56	0700027M	CF 1/16W 100-JB
RX47	0700036M	CF 1/16W 470-JB (AP63 ONLY)	RY57	0100055M	CF 1/8W 390-JB
RX48	0700034M	CF 1/16W 330-JB (AP63 ONLY)	RY58	0700041M	CF 1/16W 1.0K-JB
RX49	0700027M	CF 1/16W 100-JB (AP63 ONLY)	RY59	0700046M	CF 1/16W 2.7K-JB
RX50	0700039M	CF 1/16W 820-JB (AP63 ONLY)	RY60	0700043M	CF 1/16W 1.5K-JB
RX51	0700047M	CF 1/16W 3.3K-JB (AP63 ONLY)	RY61	0100115M	CF 1/8W 120K-JB
RX52	0700047M	CF 1/16W 3.3K-JB (AP63 ONLY)	RY62	0700052M	CF 1/16W 6.8K-JB
RX53	0187088M	CF 1/16W 9.1K-JB (AP63 ONLY)	RY63	0700057M	CF 1/16W 18K-JB
RX55	0700027M	CF 1/16W 100-JB (AP63 ONLY)	RY64	0100121M	CF 1/8W 220K-JB

60SX12B/13K  
50UX26B/27K  
46UX24B/25K  
50SX8B

## REPLACEMENT PARTS LIST

**PRODUCT SAFETY NOTE:** Components marked with a  have special characters important to safety. Before replacing any of these components, read carefully, the PRODUCT SAFETY NOTICE of this Service Manual. Don't degrade the safety of the receiver through improper servicing.

SYMBOL NO.	PART NO.	PART DESCRIPTION	SYMBOL NO.	PART NO.	PART DESCRIPTION
RY65	0700061M	CF 1/16W 33K-JB	R0L3	0700058M	CF 1/16W 22K-JB
RY66	0700029M	CF 1/16W 150-JB	R0L4	0700058M	CF 1/16W 22K-JB
RY67	0700039M	CF 1/16W 820-JB	R0L5	0700058M	CF 1/16W 22K-JB
RY68	0700034M	CF 1/16W 330-JB	R0L6	0700041M	CF 1/16W 1.0K-JB
RY70	0187038M	CF 1/16W 75-J	R0L7	0700054M	CF 1/16W 10K-JB
RY71	0187038M	CF 1/16W 75-J	R0L8	0700042M	CF 1/16W 1.2K-JB
RY74	0700063M	CF 1/16W 47K-JB	R0L9	0700054M	CF 1/16W 10K-JB
RY75	0700041M	CF 1/16W 1.0K-JB	R0M1	0700054M	CF 1/16W 10K-JB
RY76	0700058M	CF 1/16W 22K-JB	R0M2	0700049M	CF 1/16W 4.7K-JB
RY77	0100123M	CF 1/8W 270K-JB	R0M3	0700054M	CF 1/16W 10K-JB
RY78	0100123M	CF 1/8W 270K-JB	R001	0700054M	CF 1/16W 10K-JB
ROA1	0700058M	CF 1/16W 22K-JB (AP63B ONLY)	R002	0700066M	CF 1/16W 82K-JB
ROA2	0700041M	CF 1/16W 1.0K-JB (AP63B ONLY)	R003	0700051M	CF 1/16W 5.6K-JB
ROA3	0700058M	CF 1/16W 22K-JB	R004	0700054M	CF 1/16W 10K-JB
ROA5	0700027M	CF 1/16W 100-JB	R005	0700063M	CF 1/16W 47K-JB
ROA6	0700037M	CF 1/16W 560-JB	R006	0700063M	CF 1/16W 47K-JB
ROA7	0700027M	CF 1/16W 100-JB	R008	0700063M	CF 1/16W 47K-JB
ROA8	0700041M	CF 1/16W 1.0K-JB	R009	0700054M	CF 1/16W 10K-JB
ROA9	0700041M	CF 1/16W 1.0K-JB	R010	0700054M	CF 1/16W 10K-JB
ROC1	0700041M	CF 1/16W 1.0K-JB	R011	0700041M	CF 1/16W 1.0K-JB
ROC2	0700041M	CF 1/16W 1.0K-JB	R012	0700064M	CF 1/16W 56K-JB
ROC3	0700058M	CF 1/16W 22K-JB	R014	0700054M	CF 1/16W 10K-JB
ROC4	0700027M	CF 1/16W 100-JB	R015	0700055M	CF 1/16W 12K-JB
ROC5	0700027M	CF 1/16W 100-JB	R016	0700051M	CF 1/16W 5.6K-JB
ROC7	0700056M	CF 1/16W 15K-JB	R017	0700041M	CF 1/16W 1.0K-JB
ROC8	0700063M	CF 1/16W 47K-JB	R018	0700032M	CF 1/16W 220-JB
ROC9	0700054M	CF 1/16W 10K-JB	R019	0100041M	CF 1/8W 100-JB
ROE1	0100041M	CF 1/8W 100-JB	R020	0700032M	CF 1/16W 220-JB
ROE2	0700054M	CF 1/16W 10K-JB	R021	0700041M	CF 1/16W 1.0K-JB
ROE3	0114149M	CF SRD 1/4 PF 560-J	R022	0700041M	CF 1/16W 1.0K-JB
ROE4	0700058M	CF 1/16W 22K-JB	R023	0700036M	CF 1/16W 470-JB
ROE5	0700041M	CF 1/16W 1.0K-JB	R024	0150110	RES.-VARIABLE RV6 500-B
ROE6	0700063M	CF 1/16W 47K-JB	R025	0700036M	CF 1/16W 470-JB
ROE7	0700055M	CF 1/16W 12K-JB	R026	0150110	VR RV6 500-B
ROE8	0700054M	CF 1/16W 10K-JB	R028	0700041M	CF 1/16W 1.0K-JB
ROE9	0700041M	CF 1/16W 1.0K-JB	R029	0150111	VR RV6 1K-B
ROF1	0700041M	CF 1/16W 1.0K-JB	R031	0700032M	CF 1/16W 220-JB
ROF2	0700041M	CF 1/16W 1.0K-JB	R032	0700027M	CF 1/16W 100-JB
ROF3	0700041M	CF 1/16W 1.0K-JB	R033	0700027M	CF 1/16W 100-JB
ROF4	0700041M	CF 1/16W 1.0K-JB	R034	0700054M	CF 1/16W 10K-JB
ROF5	0700041M	CF 1/16W 1.0K-JB	R035	0700058M	CF 1/16W 22K-JB
ROF6	0700041M	CF 1/16W 1.0K-JB	R036	0700027M	CF 1/16W 100-JB
ROF7	0700067M	CF 1/16W 100K-JB	R037	0700058M	CF 1/16W 22K-JB
ROF8	0700041M	CF 1/16W 1.0K-JB	R038	0700027M	CF 1/16W 100-JB
ROF9	0700051M	CF 1/16W 5.6K-JB	R039	0700041M	CF 1/16W 1.0K-JB
ROG1	0100123R	CF 1/8W 270K-J	R040	0700041M	CF 1/16W 1.0K-JB
ROG2	0700041M	CF 1/16W 1.0K-JB	R041	0700041M	CF 1/16W 1.0K-JB
ROG3	0700041M	CF 1/16W 1.0K-JB	R042	0700051M	CF 1/16W 5.6K-JB
ROG4	0700041M	CF 1/16W 1.0K-JB	R043	0700027M	CF 1/16W 100-JB
ROG5	0700027M	CF 1/16W 100-JB	R044	0700058M	CF 1/16W 22K-JB
ROG6	0700027M	CF 1/16W 100-JB	R045	0700041M	CF 1/16W 1.0K-JB
ROG7	0100065M	CF 1/8W 1K-JB	R046	0700058M	CF 1/16W 22K-JB
ROG8	0100089M	CF 1/8W 10K-JB	R047	0700041M	CF 1/16W 1.0K-JB
ROG9	0100065M	CF 1/8W 1K-JB	R048	0700058M	CF 1/16W 22K-JB
ROH1	0100065M	CF 1/8W 1K-JB	R049	0700041M	CF 1/16W 1.0K-JB
ROH2	0700049M	CF 1/16W 4.7K-JB	R050	0700057M	CF 1/16W 18K-JB
ROH3	0700058M	CF 1/16W 22K-JB	R051	0700049M	CF 1/16W 4.7K-JB
ROH4	0700067M	CF 1/16W 100K-JB	R052	0700058M	CF 1/16W 22K-JB
ROH5	0700049M	CF 1/16W 4.7K-JB	R053	0700054M	CF 1/16W 10K-JB
ROH6	0700031M	CF 1/16W 180-JB	R054	0700058M	CF 1/16W 22K-JB
ROH7	0700066M	CF 1/16W 82K-JB	R055	0700027M	CF 1/16W 100-JB
ROH8	0100107M	CF 1/8W 56K-JB	R056	0700027M	CF 1/16W 100-JB
ROH9	0700056M	CF 1/16W 15K-JB	R057	0700041M	CF 1/16W 1.0K-JB
ROL1	0700041M	CF 1/16W 1.0K-JB	R058	0700041M	CF 1/16W 1.0K-JB

## REPLACEMENT PARTS LIST

**PRODUCT SAFETY NOTE:** Components marked with a  have special characters important to safety. Before replacing any of these components, read carefully, the PRODUCT SAFETY NOTICE of this Service Manual. Don't degrade the safety of the receiver through improper servicing.

SYMBOL NO.	PART NO.	PART DESCRIPTION	SYMBOL NO.	PART NO.	PART DESCRIPTION
R059	0700058M	CF 1/16W 22K-JB	R128	0700041M	CF 1/16W 1.0K-JB
R060	0700041M	CF 1/16W 1.0K-JB	R129	0700041M	CF 1/16W 1.0K-JB
R061	0700042M	CF 1/16W 1.2K-JB	R130	0700022M	CF 1/16W 39-J
R062	0700042M	CF 1/16W 1.2K-JB	R131	0700041M	CF 1/16W 1.0K-JB
R063	0700042M	CF 1/16W 1.2K-JB	R132	0700058M	CF 1/16W 22K-JB
R064	0700043M	CF 1/16W 1.5K-JB	R133	0700058M	CF 1/16W 22K-JB
R066	0700027M	CF 1/16W 100-JB	R134	0700041M	CF 1/16W 1.0K-JB
R067	0700051M	CF 1/16W 5.6K-JB	R135	0700041M	CF 1/16W 1.0K-JB
R068	0700027M	CF 1/16W 100-JB	R136	0700062M	CF 1/16W 39K-JB
R069	0700049M	CF 1/16W 4.7K-JB	R3A4	0700041M	CF 1/16W 1.0K-JB
R070	0700051M	CF 1/16W 5.6K-JB	R3A5	0700041M	CF 1/16W 1.0K-JB
R071	0700041M	CF 1/16W 1.0K-JB	R3A6	0700032M	CF 1/16W 220-JB
R072	0700052M	CF 1/16W 6.8K-JB	R3A7	0700032M	CF 1/16W 220-JB
R073	0700027M	CF 1/16W 100-JB	R3A8	0700032M	CF 1/16W 220-JB
R074	0700058M	CF 1/16W 22K-JB	R3C3	0700041M	CF 1/16W 1.0K-JB
R075	0700058M	CF 1/16W 22K-JB	R3C4	0700041M	CF 1/16W 1.0K-JB
R076	0700041M	CF 1/16W 1.0K-JB	R3C5	0700055M	CF 1/16W 12K-JB
R077	0700058M	CF 1/16W 22K-JB	R3C6	0700054M	CF 1/16W 10K-JB
R078	0700027M	CF 1/16W 100-JB	R3C7	0700063M	CF 1/16W 47K-JB
R079	0700058M	CF 1/16W 22K-JB	R3C8	0700063M	CF 1/16W 47K-JB
R080	0700027M	CF 1/16W 100-JB	R306	0700058M	CF 1/16W 22K-JB
R081	0700049M	CF 1/16W 4.7K-JB	R307	0700058M	CF 1/16W 22K-JB
R082	0700032M	CF 1/16W 220-JB	R308	0700049M	CF 1/16W 4.7K-JB
R083	0700041M	CF 1/16W 1.0K-JB	R309	0700065M	CF 1/16W 68K-JB
R084	0700041M	CF 1/16W 1.0K-JB	R310	0700049M	CF 1/16W 4.7K-JB
R085	0700041M	CF 1/16W 1.0K-JB	R311	0700061M	CF 1/16W 33K-JB
R086	0700041M	CF 1/16W 1.0K-JB	R312	0700029M	CF 1/16W 150-JB
R087	0700041M	CF 1/16W 1.0K-JB	R313	0700046M	CF 1/16W 2.7K-JB
R088	0700041M	CF 1/16W 1.0K-JB	R314	0700054M	CF 1/16W 10K-JB
R089	0700027M	CF 1/16W 100-JB	R315	0700065M	CF 1/16W 68K-JB
R090	0700041M	CF 1/16W 1.0K-JB	R316	0700067M	CF 1/16W 100K-JB
R092	0700055M	CF 1/16W 12K-JB	R317	0700064M	CF 1/16W 56K-JB
R093	0700054M	CF 1/16W 10K-JB	R318	0700058M	CF 1/16W 22K-JB
R094	0700045M	CF 1/16W 2.2K-JB	R322	0700065M	CF 1/16W 68K-JB
R095	0700054M	CF 1/16W 10K-JB	R323	0700052M	CF 1/16W 6.8K-JB
R096	0700054M	CF 1/16W 10K-JB	R324	0700046M	CF 1/16W 2.7K-JB
R097	0700054M	CF 1/16W 10K-JB	R325	0187080M	CF 1/16W 4.3K-JB
R098	0700054M	CF 1/16W 10K-JB	R326	0700054M	CF 1/16W 10K-JB
R099	0700041M	CF 1/16W 1.0K-JB	R327	0700054M	CF 1/16W 10K-JB
R101	0700039M	CF 1/16W 820-JB	R328	0700066M	CF 1/16W 82K-JB
R102	0700041M	CF 1/16W 1.0K-JB	R329	0700067M	CF 1/16W 100K-JB
R103	0700038M	CF 1/16W 680-JB	R330	0700058M	CF 1/16W 22K-JB
R104	0700041M	CF 1/16W 1.0K-JB	R332	0700048M	CF 1/16W 3.9K-JB
R105	0700041M	CF 1/16W 1.0K-JB	R333	0700034M	CF 1/16W 330-JB
R106	0700038M	CF 1/16W 680-JB	R334	0700054M	CF 1/16W 10K-JB
R107	0700054M	CF 1/16W 10K-JB	R335	0700034M	CF 1/16W 330-JB
R108	0100065M	CF 1/8W 1K-JB	R336	0700034M	CF 1/16W 330-JB
R109	0700054M	CF 1/16W 10K-JB	R337	0700027M	CF 1/16W 100-JB
R111	0700027M	CF 1/16W 100-JB	R338	0700051M	CF 1/16W 5.6K-JB
R112	0700054M	CF 1/16W 10K-JB	R339	0150113	VR RV6 5K-B
R113	0700051M	CF 1/16W 5.6K-JB	R340	0700041M	CF 1/16W 1.0K-JB
R114	0700041M	CF 1/16W 1.0K-JB	R341	0700039M	CF 1/16W 820-JB
R115	0700041M	CF 1/16W 1.0K-JB	R342	0700033M	CF 1/16W 270-JB
R116	0700041M	CF 1/16W 1.0K-JB	R343	0700047M	CF 1/16W 3.3K-JB
R117	0700041M	CF 1/16W 1.0K-JB	R344	0700041M	CF 1/16W 1.0K-JB
R118	0100059M	CF 1/8W 560-JB	R345	0100125M	CF 1/8W 330K-JB
R119	0100059M	CF 1/8W 560-JB	R346	0700041M	CF 1/16W 1.0K-JB
R121	0700041M	CF 1/16W 1.0K-JB	R347	0700062M	CF 1/16W 39K-JB
R122	0700041M	CF 1/16W 1.0K-JB	R348	0100051M	CF 1/8W 270-JB
R123	0700041M	CF 1/16W 1.0K-JB	R349	0700037M	CF 1/16W 560-JB
R124	0700041M	CF 1/16W 1.0K-JB	R350	0114135M	CF 1/4W 150-JB
R125	0700041M	CF 1/16W 1.0K-JB	R360	0700033M	CF 1/16W 270-JB
R126	0700059M	CF 1/16W 27K-JB	R361	0700061M	CF 1/16W 33K-JB
R127	0700041M	CF 1/16W 1.0K-JB	R362	0700029M	CF 1/16W 150-JB

60SX12B/13K  
50UX26B/27K  
46UX24B/25K  
50SX8B

## REPLACEMENT PARTS LIST

**PRODUCT SAFETY NOTE:** Components marked with a  $\Delta$  have special characters important to safety. Before replacing any of these components, read carefully, the PRODUCT SAFETY NOTICE of this Service Manual. Don't degrade the safety of the receiver through improper servicing.

SYMBOL NO.	PART NO.	PART DESCRIPTION	SYMBOL NO.	PART NO.	PART DESCRIPTION
R363	0700049M	CF 1/16W 4.7K-JB	R5F9	0119691M	MF 1W 0.33JB
R364	0700051M	CF 1/16W 5.6K-JB	R5G1	0700049M	CF 1/16W 4.7K-JB
R365	0700064M	CF 1/16W 56K-JB (AP63 ONLY)	R502	0100037M	CF 1/8W 68-JB
R366	0100133M	CF 1/8W 680K-JB (AP63 ONLY)	R503	0100049M	CF 1/8W 220-JB
R370	0700052M	CF 1/16W 6.8K-JB	R504	0100049M	CF 1/8W 220-JB
R371	0700049M	CF 1/16W 4.7K-JB	R505	0100049M	CF 1/8W 220-JB
R372	0700046M	CF 1/16W 2.7K-JB	R506	0100041M	CF 1/8W 100-JB
R373	0700049M	CF 1/16W 4.7K-JB	R507	0187086M	CF 1/16W 7.5K-JB
R374	0700048M	CF 1/16W 3.9K-JB	R508	0700054M	CF 1/16W 10K-JB
R375	0700048M	CF 1/16W 3.9K-JB	R510	0700041M	CF 1/16W 1.0K-JB
R376	0700041M	CF 1/16W 1.0K-JB	R511	0100129M	CF 1/8W 470K-JB
R377	0179536M	MG 1M J TAPE	R512	0700065M	CF 1/16W 68K-JB
R378	0700054M	CF 1/16W 10K-JB	R513	0700061M	CF 1/16W 33K-JB
R379	0700052M	CF 1/16W 6.8K-JB	R514	0700067M	CF 1/16W 100K-JB
R380	0700067M	CF 1/16W 100K-JB	R515	0700054M	CF 1/16W 10K-JB
R381	0100119M	CF 1/8W 180K-JB	R516	0700054M	CF 1/16W 10K-JB
R382	0700042M	CF 1/16W 1.2K-JB	R517	0700054M	CF 1/16W 10K-JB
R401	0700054M	CF 1/16W 10K-JB	R518	0700067M	CF 1/16W 100K-JB
R402	0700041M	CF 1/16W 1.0K-JB	R519	0700065M	CF 1/16W 68K-JB
R404	0700041M	CF 1/16W 1.0K-JB	R520	0700067M	CF 1/16W 100K-JB
R405	0700045M	CF 1/16W 2.2K-JB	R521	0700059M	CF 1/16W 27K-JB
R406	0700045M	CF 1/16W 2.2K-JB	R522	0700054M	CF 1/16W 10K-JB
R407	0700045M	CF 1/16W 2.2K-JB	R523	0700054M	CF 1/16W 10K-JB
R408	0700045M	CF 1/16W 2.2K-JB	R524	0700047M	CF 1/16W 3.3K-JB
R411	0700063M	CF 1/16W 47K-JB	R525	0700061M	CF 1/16W 33K-JB
R412	0700063M	CF 1/16W 47K-JB	R526	0700046M	CF 1/16W 2.7K-JB
R413	0700067M	CF 1/16W 100K-JB	R527	0700049M	CF 1/16W 4.7K-JB
R414	0700036M	CF 1/16W 470-JB	R528	0700054M	CF 1/16W 10K-JB
R415	0700041M	CF 1/16W 1.0K-JB	R529	0700054M	CF 1/16W 10K-JB
R416	0700058M	CF 1/16W 22K-JB	R530	0700029M	CF 1/16W 150-JB
R417	0119505G	MF 2.2-J	R531	0700054M	CF 1/16W 10K-JB
R418	0119505G	MF 2.2-J	R537	0700029M	CF 1/16W 150-JB
R419	0700065M	CF 1/16W 68K-JB	R539	0700041M	CF 1/16W 1.0K-JB
R420	0700065M	CF 1/16W 68K-JB	R540	0700041M	CF 1/16W 1.0K-JB
R421	0114161M	CF 1/4W 1K-JB	R541	0700041M	CF 1/16W 1.0K-JB
R422	0114161M	CF 1/4W 1K-JB	R542	0700041M	CF 1/16W 1.0K-JB
R423	0700065M	CF 1/16W 68K-JB	R543	0700041M	CF 1/16W 1.0K-JB
R425	0700054M	CF 1/16W 10K-JB	R544	0700041M	CF 1/16W 1.0K-JB
R5A1	0700037M	CF 1/16W 560-JB (AP63B ONLY)	R545	0700041M	CF 1/16W 1.0K-JB
R5A2	0700037M	CF 1/16W 560-JB (AP63B ONLY)	R546	0100047M	CF 1/8W 180-JB
R5A3	0187110M	CF 1/16W 75K-JB (AP63B ONLY)	R547	0700041M	CF 1/16W 1.0K-JB
R5A4	0700056M	CF 1/16W 15K-JB (AP63B ONLY)	R548	0700041M	CF 1/16W 1.0K-JB
R5A5	0700041M	CF 1/16W 1.0K-JB (AP63B ONLY)	R549	0700041M	CF 1/16W 1.0K-JB
R5A6	0700031M	CF 1/16W 180-JB (AP63B ONLY)	R550	0700027M	CF 1/16W 100-JB
R5A7	0700032M	CF 1/16W 220-JB (AP63B ONLY)	R551	0700032M	CF 1/16W 220-JB
R5A8	0700045M	CF 1/16W 2.2K-JB (AP63B ONLY)	R555	0700032M	CF 1/16W 220-JB
R5A9	0700027M	CF 1/16W 100-JB (AP63B ONLY)	R556	0700032M	CF 1/16W 220-JB
R5C1	0700027M	CF 1/16W 100-JB (AP63B ONLY)	R557	0700041M	CF 1/16W 1.0K-JB
R5C2	0700027M	CF 1/16W 100-JB (AP63B ONLY)	R558	0100062M	CF 1/8W 750-JB
R5E2	0700056M	CF 1/16W 15K-JB	R559	0700041M	CF 1/16W 1.0K-JB
R5E3	0114131M	CF 1/4W 100-JB	R561	0700054M	CF 1/16W 10K-JB
R5E4	0700054M	CF 1/16W 10K-JB	R562	0700058M	CF 1/16W 22K-JB
R5E5	0700027M	CF 1/16W 100-JB	R563	0700058M	CF 1/16W 22K-JB
R5E6	0700038M	CF 1/16W 680-JB	R607	0179536M	MG 1M J TAPE
R5E7	0700032M	CF 1/16W 220-JB	R608	0700063M	CF 1/16W 47K-JB
R5E9	0700056M	CF 1/16W 15K-JB	R609	0100065M	CF 1/8W 1K-JB
R5F1	0700055M	CF 1/16W 12K-JB	R610	0700061M	CF 1/16W 33K-JB
R5F2	0700027M	CF 1/16W 100-JB	R611	0700064M	CF 1/16W 56K-JB
R5F3	0700027M	CF 1/16W 100-JB	R612	0150307	VR RV06 30K-B
R5F4	0700053M	CF 1/16W 8.2K-JB	R613	0700065M	CF 1/16W 68K-JB
R5F5	0700057M	CF 1/16W 18K-JB	R614	0700061M	CF 1/16W 33K-JB
R5F6	0700041M	CF 1/16W 1.0K-JB	R615	0700038M	CF 1/16W 680-JB
R5F7	0119691M	MF 1W 0.33JB	R616	0700064M	CF 1/16W 56K-JB
R5F8	0119691M	MF 1W 0.33JB	R617	0119722M	MF 1.0-JB/W

## REPLACEMENT PARTS LIST

**PRODUCT SAFETY NOTE:** Components marked with a  $\Delta$  have special characters important to safety. Before replacing any of these components, read carefully, the PRODUCT SAFETY NOTICE of this Service Manual. Don't degrade the safety of the receiver through improper servicing.

SYMBOL NO.	PART NO.	PART DESCRIPTION	SYMBOL NO.	PART NO.	PART DESCRIPTION
R618	0119722M	MF 1.0-JB/W	R725	0700052M	CF 1/16W 6.8K-JB
R619	0700027M	CF 1/16W 100-JB	R726	0700048M	CF 1/16W 3.9K-JB
R620	0700054M	CF 1/16W 10K-JB	R727	0700049M	CF 1/16W 4.7K-JB
R621	0700051M	CF 1/16W 5.6K-JB	R728	0700045M	CF 1/16W 2.2K-JB
R622	0700065M	CF 1/16W 68K-JB	R729	0700047M	CF 1/16W 3.3K-JB
R623	0113766M	CF SRD1/2P-B 4.7K-J	R730	0113729M	CF 1/2W 150-JB
R624	0110121S	MF 100-JS	R731	0110101S	MF 1W 15-JS
R625	0113725M	CF SRD1/2P-B 100-J	R734	0110129S	MF 220-JS
R626	0113725M	CF SRD1/2P-B 100-J	R735	0110129S	MF 220-JS
R627	0113725M	CF SRD1/2P-B 100-J	$\Delta$ R741	0700046M	CF 1/16W 2.7K-JB
R635	0100053M	CF 1/8W 330-JB	R742	0114183M	CF SRD 1/4 P 8.2K-J
R636	0100063M	CF 1/8W 820-JB	R743	0700051M	CF 1/16W 5.6K-JB
R637	0700044M	CF 1/16W 1.8K-JB	R744	0700052M	CF 1/16W 6.8K-JB
R638	0700058M	CF 1/16W 22K-JB	R745	0700056M	CF 1/16W 15K-JB
R639	0700041M	CF 1/16W 1.0K-JB	R746	0114139M	CF SRD 1/4 P 220-J
R640	0700041M	CF 1/16W 1.0K-JB	R801	0140326S	MF 5.6K OHM +-5% 5W
R641	0700052M	CF 1/16W 6.8K-JB	R803	0113744	CF 560 OHM +-5% 1/2W
R642	0700061M	CF 1/16W 33K-JB	R806	0113815	CF 470K OHM +-5% 1/2W
R643	0700056M	CF 1/16W 15K-JB	R809	0100065	CF 1K OHM +-5% 1/8W
R646	0700045M	CF 1/16W 2.2K-JB	R810	0100035	CF 56 OHM +-5% 1/8W
R647	0700054M	CF 1/16W 10K-JB	R811	0100065	CF 1K OHM +-5% 1/8W
R648	0700052M	CF 1/16W 6.8K-JB	R812	0100044	CF 130 OHM +-5% 1/8W
R649	0150307	VR RV06 30K-B	R815	0100059	CF 560 OHM +-5% 1/8W
R650	0700051M	CF 1/16W 5.6K-JB	R817	0100041	CF 100 OHM +-5% 1/8W
R651	0700058M	CF 1/16W 22K-JB	R818	0100049	CF 220 OHM +-5% 1/8W
R652	0700063M	CF 1/16W 47K-JB	R831	0140326S	MF 5.6K OHM +-5% 5W
R653	0700041M	CF 1/16W 1.0K-JB	R833	0113744	CF 560 OHM +-5% 1/2W
R654	0700047M	CF 1/16W 3.3K-JB	R836	0113815	CF 470K OHM +-5% 1/2W
R655	0700067M	CF 1/16W 100K-JB	R840	0100035	CF 56 OHM +-5% 1/8W
R656	0700045M	CF 1/16W 2.2K-JB	R841	0100065	CF 1K OHM +-5% 1/8W
R658	0114135M	CF 1/4W 150-JB	R842	0100033	CF 47 OHM +-5% 1/8W
R659	0100045M	CF 1/8W 150-JB	R843	0150001	VR 200 OHM-B
R660	0119731M	MF 1W R68-K TAPE	R845	0100059	CF 560 OHM +-5% 1/8W
R661	0700054M	CF 1/16W 10K-JB	R847	0100041	CF 100 OHM +-5% 1/8W
R662	0700041M	CF 1/16W 1.0K-JB	R850	0100089	CF 10K OHM +-5% 1/8W
R663	0700059M	CF 1/16W 27K-JB	R851	0100051	CF 270 OHM +-5% 1/8W
R664	0700041M	CF 1/16W 1.0K-JB	R861	0140326S	MF 5.6K OHM +-5% 5W
R665	0700054M	CF 1/16W 10K-JB	R863	0113744	CF 560 OHM +-5% 1/2W
R666	0700059M	CF 1/16W 27K-JB	R866	0113815	CF 470K OHM +-5% 1/2W
R667	0119732M	MF 1.2-JB	R870	0100035	CF 56 OHM +-5% 1/8W
R680	0700039M	CF 1/16W 820-JB	R871	0100065	CF 1K OHM +-5% 1/8W
R699	0700061M	CF 1/16W 33K-JB	R872	0100033	CF 47 OHM +-5% 1/8W
R701	0700039M	CF 1/16W 820-JB	R873	0150001	VR 200 OHM-B
R702	0700041M	CF 1/16W 1.0K-JB	R875	0100059	CF 560 OHM +-5% 1/8W
R703	0113770M	CF SRD1/2P-B 6.8K-J	R877	0100049	CF 220 OHM +-5% 1/8w
R704	0110355S	MF 3W 2.7K-J	R880	0100089	CF 10K OHM +-5% 1/8W
R705	0110351S	MF 1.8K-J	R881	0100043	CF 120 OHM +-5% 1/8W
$\Delta$ R706	0119688M	MF 1W 0.22-JB	R903	0147060	WW 2W 33-K
R707	0100031M	CF 1/8W 39-JB	$\Delta$ R904	0147804	WW 15W 0.75-KM CEMENTED
R708	0113791M	CF 1/2W 47K-JB	R905	0148009	WW 2W 0.056-J
R709	0113785M	CF SRD1/2P-B 27K-J	R906	0700037M	CF 1/16W 560-JB
R710	0110229S	MF 220-JS	R907	0700046M	CF 1/16W 2.7K-JB
$\Delta$ R711	0119512G	MG RN1/4P 1.0-JF	R908	0700054M	CF 1/16W 10K-JB
$\Delta$ R712	0119514G	MF 10-J	R909	0700047M	CF 1/16W 3.3K-JB
R713	0113705M	CF SRD1/2P-B 15-J	R911	0700049M	CF 1/16W 4.7K-JB
$\Delta$ R714	0700063M	CF 1/16W 47K-JB	R912	0700049M	CF 1/16W 4.7K-JB
R715	0100085M	CF 1/8W 6.8K-JB	R913	0110265S	MF 6.8K-JS
R716	0700042M	CF 1/16W 1.2K-JB	R914	0700023M	CF 1/16W 47-J
R717	0114149M	CF SRD 1/4 PF 560-J	R915	0700027M	CF 1/16W 100-JB
R718	0100127M	CF 1/8W 390K-JB	R916	0700036M	CF 1/16W 470-JB
R719	0700054M	CF 1/16W 10K-JB	R917	0700061M	CF 1/16W 33K-JB
R721	0140327S	WW 6.8K-J 5W	R918	0114161M	CF 1/4W 1K-JB
R723	0110215S	MF 2W56-J	R920	0110237S	MF 2W 470-J
R724	0114177M	CF SRD 1/4 P 4.7K-J	R921	0700057M	CF 1/16W 18K-JB

## REPLACEMENT PARTS LIST

**PRODUCT SAFETY NOTE:** Components marked with a  $\Delta$  have special characters important to safety. Before replacing any of these components, read carefully, the PRODUCT SAFETY NOTICE of this Service Manual. Don't degrade the safety of the receiver through improper servicing.

SYMBOL NO.	PART NO.	PART DESCRIPTION	SYMBOL NO.	PART NO.	PART DESCRIPTION
R922	0700057M	CF 1/16W 18K-JB			MISCELLANEOUS
R923	0700047M	CF 1/16W 3.3K-JB	1	PH02576	ULTRA CONTROL PANEL ASS'Y
R924	0700047M	CF 1/16W 3.3K-JB	4	NA03233	LENS CRT METAL
R932	0110145S	MF 1.0K-JS	5	NJ01361	SENSOR HOLDER BASE (CABINET MOUNT)
$\Delta$ R934	0119839M	MF 0.56-J 1W	6	NJ01301	SENSOR HOLDER
R935	0700054M	CF 1/16W 10K-JB	7	FT00001	SOLAR BATTERY (8 LOCATIONS)
R936	0700058M	CF 1/16W 22K-JB	8	H311061	SPEAKER BOX
R937	0700063M	CF 1/16W 47K-JB	9	4524911	HEXAGON FLANGE HEAD B T-S 4*12
$\Delta$ R938	0113797M	CF 1/2W 82K-JB	12	4137977	4 x 25 SELF TAPPING SCREW
$\Delta$ R939	0700051M	CF 1/16W 5.6K-JB	13	KS00044	MIRROR (46UX24B/25K)
R940	0700054M	CF 1/16W 10K-JB	13	KS00045	MIRROR (50UX26B/27K,50SX8B)
R941	0700054M	CF 1/16W 10K-JB	13	KS00161	MIRROR (60SX12B/13K)
R942	0700058M	CF 1/16W 22K-JB	15	4520771	4x18 HEX HEAD TAPPING SCREW WITH WASHER
R943	0700036M	CF 1/16W 470-JB	16	4520772	4 x 14 HEX HEAD TAPPING SCREW
R944	0700041M	CF 1/16W 1.0K-JB	17	81481100	8 x 1 DRYWALL SCREW
$\Delta$ R945	0700039M	CF 1/16W 820-JB	19	6202AAB61	MIRROR CLEAT
$\Delta$ R946	0700043M	CF 1/16W 1.5K-JB	20	4137975	4 x 16 TAPPING SCREW WITH WASHER
R947	0700041M	CF 1/16W 1.0K-JB	21	QD02642	46UX24B CABINET ASSEMBLY
R948	0700045M	CF 1/16W 2.2K-JB	21	QD02652	46UX25K CABINET ASSEMBLY
R949	0700038M	CF 1/16W 680-JB	21	QD02641	50UX26B CABINET ASSEMBLY
R950	0700039M	CF 1/16W 820-JB	21	QD02651	50UX27K CABINET ASSEMBLY
R951	0700049M	CF 1/16W 4.7K-JB	21	QD02644	50SX8B CABINET ASSEMBLY
R952	0700043M	CF 1/16W 1.5K-JB	21	QD02643	60SX12B CABINET ASSEMBLY
R953	0700051M	CF 1/16W 5.6K-JB	21	QD02653	60SX13K CABINET ASSEMBLY
R954	0700051M	CF 1/16W 5.6K-JB	21	QD01531	BACK COVER
R956	0700045M	CF 1/16W 2.2K-JB	22	QD01520	8 x 3/4 PAN HEAD DRYWALL SCREW
R958	0700067M	CF 1/16W 100K-JB	23	55050006	MIRROR BOARD ASS'Y
R959	0700051M	CF 1/16W 5.6K-JB	24	H420781	MIRROR HANGER
R972	0110145S	MF 1.0K-JS	26	NT00461	SCREEN FRAME ASS'Y B (46UX24B)
R973	0700042M	CF 1/16W 1.2K-JB	27	NT00462	SCREEN FRAME ASS'Y "B" (50UX26B)
R980	0700045M	CF 1/16W 2.2K-JB	27	NT00463	SCREEN FRAME ASS'Y "B" (50SX8B)
R982	0700056M	CF 1/16W 15K-JB	27	NT00464	SCREEN FRAME ASS'Y "B" (60SX12B)
R983	0700037M	CF 1/16W 560-JB	27	NT00461	SCREEN FRAME ASS'Y (46UX25K)
R999	0113698M	CF 1/2W 8.2-J	27	NT00471	SCREEN FRAME ASS'Y (50UX27K)
		TRANSFORMERS	27	NT00472	SCREEN FRAME ASS'Y (60SX13K)
$\Delta$ T701	2260291	HORIZONTAL DRIVE TRANSFORMER	30	PH00578	DECO PANEL (46UX25K)
$\Delta$ T702	2436493	FLYBACK TRANSFORMER	30	PH00576	DECO PANEL (50UX27K)
$\Delta$ T703	2272762	SPC TRANSFORMER	30	PH00577	DECO PANEL (60SX13K)
$\Delta$ T901	BT00161	POWER TRANSFORMER (40M 120V)	$\Delta$ 31	KQ00166K	LENS SASS
$\Delta$ T902	BT00141	SWITCHING TRANSFORMER (240VA)	$\Delta$ 32	KQ00166K	LENS SASS
		SWITCHES	$\Delta$ 33	KQ00161K	LENS SASS CPC B
SM01	FE00061	1P TACT SWITCH	34	QG00221	REAR COVER ASS'Y (46UX24B/25K)
SM02	FE00061	1P TACT SWITCH	34	H512214	LOWER REAR BOARD (46UX24B/25K)
SM03	FE00061	1P TACT SWITCH	35	QG00222	REAR COVER ASS'Y (50UX26B/27K, 50SX8B)
SM04	FE00061	1P TACT SWITCH	35	H512213	LOWER REAR BRD (50UX26B/27K, 50SX8B)
SM05	FE00061	1P TACT SWITCH	35	H512197	REAR BOARD ASS'Y (60SX12B/13K)
SM06	FE00061	1P TACT SWITCH	36	33100020	MIDDLE BACK COVER (60SX12B)
SM07	FE00061	1P TACT SWITCH	36	33100017	MIDDLE BACK COVER (60SX13K)
SM08	FE00091	SWP01N01-EVQQKH08Q	$\Delta$ 40	33100019	UPPER BACK COVER (60SX12B)
SM09	FE00091	SWP01N01-EVQQKH08Q	$\Delta$ 40	33100018	UPPER BACK COVER (60SX13K)
S301	FD00011	SLIDE SWITCH	$\Delta$ 41	UE01551	LENS CRT BLOCK ASS'Y (R) 46"
S901	2640576	RELAY(SDT-SS-112DM)	$\Delta$ 41	UE01561	LENS CRT BLOCK ASS'Y(R) 50"
			$\Delta$ 41	UE01564	LENS CRT BLOCK ASS'Y (R) 60"
			$\Delta$ 42	UE01552	LENS CRT BLOCK ASS'Y (G) 46"
			$\Delta$ 42	UE01562	LENS CRT BLOCK ASS'Y(G) 50"
			$\Delta$ 42	UE01562	LENS CRT BLOCK ASS'Y (G) 60"
			$\Delta$ 42	UE01553	LENS CRT BLOCK ASS'Y (B) 46"
			$\Delta$ 42	UE01563	LENS CRT BLOCK ASS'Y(B) 50"
			45	UE01565	LENS CRT BLOCK ASS'Y (B) 60"
			45	KR00271	SCREEN ASS'Y (46UX24B/25K)
			45	KR00272	SCREEN ASS'Y (50UX26B/27K, 50SX8B)
			45	KR00273	SCREEN ASS'Y (60SX12B/13K)
			47	H311121	SPEAKER GRILL ASS'Y (46UX24B)

60SX12B/13K  
50UX26B/27K  
46UX24B/25K  
50SX8B

## REPLACEMENT PARTS LIST

**PRODUCT SAFETY NOTE:** Components marked with a  $\Delta$  have special characters important to safety. Before replacing any of these components, read carefully, the PRODUCT SAFETY NOTICE of this Service Manual. Don't degrade the safety of the receiver through improper servicing.

SYMBOL NO.	PART NO.	PART DESCRIPTION	SYMBOL NO.	PART NO.	PART DESCRIPTION
47	H311124	SPEAKER GRILL ASS'Y (46UX25K)	E902	3772201	AC CORD HOLDER NYLON
47	H311122	SPEAKER GRILL ASS'Y (50UX26B, 50SX8B)	E903	3739671	CORD HOLDER
47	H311123	SPEAKER GRILL ASS'Y (50UX27K)	E904	2782611	CENTER PIN
47	32110028	SPEAKER GRILL ASS'Y (60SX12B)	$\Delta$ GF01	CJ00071R	SPARK GAP
47	32110027	SPEAKER GRILL ASS'Y (60SX13K)	$\Delta$ G701	CJ00071R	SPARK GAP
55	H420671	MIRROR METAL A	$\Delta$ G801	CJ00071R	SPARK GAP
56	H420681	MIRROR METAL B	$\Delta$ G802	CJ00071R	SPARK GAP
	3204182	R/C LENS	$\Delta$ G831	CJ00071R	SPARK GAP
	3700921	475T LAMP LENS A	$\Delta$ G832	CJ00071R	SPARK GAP
	3821734	CONTROL DOOR	$\Delta$ G861	CJ00071R	SPARK GAP
	3827874	INDOOR PLATE	$\Delta$ G862	CJ00071R	SPARK GAP
	3827875	DOOR PLATE	JA01	EQ00121	PJV-1P-PIN JACK
	3875771	LATCH 4T02 NYLON	JS01	ER00121	2L4P LEVER TERMINAL
	4517511	3X14 TAPPING SCREW WITH WASHER	JY01	ES00001	13P JACK WITH S TERMINAL JACK
	4517512	3 x 16 T-NE WITH WASHER	JY02	ES00022	3P(SW) PIN JACK WITH S TERMINAL
	H810211	M4X14 SCREW CROSS RECESS WITH WASHER	NE02	4520883	3*12 SCREW WITH WASHER
	H830072	1/8" FLAT WASHER	NFP2	3763751	SK BINDER
	PC01201	CONTROL BUTTON	NF02	4520883	3*12 SCREW WITH WASHER
	PH02242	TERMINAL HOLDER AP63	NK03	4520883	3*12 SCREW WITH WASHER
	PH02303	TERMINAL HOLDER AP63 SUB ASS'Y	NK06	4520885	3*16 SCREW WITH WASHER
	PH02582	CONTROL PANEL	NK07	4518772	SCREW3X12TAPPINGWITHWSR STEEL
$\Delta$ EANT	HP00341	ANT SW	NK08	4105241	CONV.IC SUPPORT BK
EAN	2974056S	3J CONNE SEH UL1007 L=160	NK11	4520883	3*12 SCREW WITH WASHER
EB	2997977	1J MINI CONNE. L=910	NPF2	3763751	SK BINDER
EDC	2908848	9J CONNE. L=470	NS01A	4520883	3*12 SCREW WITH WASHER
EDD	2908698	4J CONNE. L=470	NS02	3787482	PCB HOLDER (16L)
EDG	2908878	PH CONNECTOR 10P L=470MM	N001	3738631	PWB HOLDER
EDH	2908728	5J CONNE. L=470	N003	3700342	WIRE CLAMP V0
EDS	2908947	12J CONNE. L=1000	N004	3876031	WIRE CLAMP W 13-20 PA
EFJ	2973837S	7J CONNE. L=1000	N005	3728273	PURSE LOCK (8)
EFS	2958151	CONN. W/WIRE 1J (L=900)	N006	3785502	V LOCK 11.5
EFT	2958134	CONN. W/WIRE MINI 4J (L1000)	N007	3785511	V LOCK 16
EFV	2973957S	11J CONNE L=1000	N101	3443353	SHIELD CASE
EF92	2721351	FUSE HOLDER	N102	3443361	SHIELD PLATE
EF96	2721351	FUSE HOLDER	N153	H810221	PRT SCREW
EGQ	2908863	CONN. 10J L=100	N155	H830091	CRT SPRING
EPA	EF01971	3J EH CONNE L=1500	N201	QR07382	AP63/63B INSTRUCTION BOOK (E)
EPP	2973631	CONNECTOR 3P	N202B	3393814	CP-2 LENS (RG)
ESC1	EF03971	CO-03C-C5R0-820W/ SM	N202G	3393811	CP-2 LENS (RG)
ESC2	EF03981	CO-02C-F2R5-470 SM	N202R	3393811	CP-2 LENS (RG)
ESL	2993565	CONN. W/WIRE MINI 5J (L1500) W/FASTON	N402	4520883	3*12 SCREW WITH WASHER
ESR	2993556	CONN. W/WIRE MINI 4J (L1500) W/FASTON	N406	3335321	GROUNDING SPRING
ES1	EF02233	CO-09C-N2R0-322 (PH)	N408	3332021	GX EARTH SPRING STEEL
ES2	EF02242	CO-10C-N2R0-262	N502	4520883	3*12 SCREW WITH WASHER
ES3	EF02253	CO-06C-N2R0-152 (PH)	N505	3617451	HC SP LENS COVER
ETU1	2979174	PLUG WITH COAXIAL CABLE	N602	4520883	3*12 SCREW WITH WASHER
ETU2	2979172	MINI PLUG WITH COAXIAL CABLE	N604	4520883	3*12 SCREW WITH WASHER
EVMC	EF04061	C0-03C-C2R5-651(CYR)	N702	4520883	3*12 SCREW WITH WASHER
EY1	2908824	8J CONNE.L=750	N704	4159425	3X16 TAPPING WITH WASHER
EY2	2973744S	4J CONNE. L=750	N730	4159427	3X10 SCREW WITH WASHER STEEL
E107	2958351	CONN. W/WIRE MINI 2J	N801	3763751	SK BINDER
E10	2776542	MAG-VM(C-C)NON6P	PB	2661756	1P PLUG PIN WITH BASE
E11	3811322	DY INSULATOR	PCB	ED00512	CP-TAC-L15P-A1
$\Delta$ E12	BY00441	DY-V80-6.7SS(3.00)	PCC	ED00516	CP-TAC-L20P-A1
E301	HL00213	REMOTE CONTROL CLU-952MP	PCD	ED00516	CP-TAC-L20P-A1
$\Delta$ E801	2698671	CPT SOCKET	PCG	2903544	4P PLUG PIN WITH BASE
$\Delta$ E831	2698671	CPT SOCKET	PCR	2903544	4P PLUG PIN WITH BASE
$\Delta$ E861	2698671	CPT SOCKET	PCX	ED00512	CP-TAC-L15P-A1 (UX MODELS ONLY)
E9BN	4520883	3x12 SCREW WITH WASHER	PDC	2959058	PINPOST 9P PH
E9DN	4520883	3x12 SCREW WITH WASHER	PDD	2959053	5P POST PIN 4P TYPE PH
E9DW	4269926	WASHER	PDG	2959059	PLUG PH PIN POST 10P
E9IN	4520883	3x12 SCREW WITH WASHER	PDH	2959054	PINPOST 5P PH
E9IS	KL00051	IC SPRING	PDS	2959062	PIN POST (PH 12P)
$\Delta$ E901	2972841	AC POWER CORD (FILTER IN)	PFJ	2902246	PLUG PIN SUB MINI 7P

60SX12B/13K  
50UX26B/27K  
46UX24B/25K  
50SX8B

## REPLACEMENT PARTS LIST

**PRODUCT SAFETY NOTE:** Components marked with a  $\Delta$  have special characters important to safety. Before replacing any of these components, read carefully, the PRODUCT SAFETY NOTICE of this Service Manual. Don't degrade the safety of the receiver through improper servicing.

SYMBOL NO.	PART NO.	PART DESCRIPTION	SYMBOL NO.	PART NO.	PART DESCRIPTION
PFT	2666191	4P PLUG PIN WITH BASE			
PFV	2902251	11P PLUG PIN			
PG01	2959059	PLUG PH PIN POST 10P			
PG02	2959059	PLUG PH PIN POST 10P			
PI1	2663821	2P SUB MINI PLUG PIN			
PL	2903545	5P PLUG PIN WITH BASE			
PMB	2665272	4P PLUG PIN WITH BASE			
PMG	2665272	4P PLUG PIN WITH BASE			
PMR	2665272	4P PLUG PIN WITH BASE			
PMV	2675593	15P PLUG PIN (SX MODELS ONLY)			
PPA	2902262	PLUG PIN SUB MINI 3P			
PPA	2902242	PLUG PIN SUB MINI3P			
PP31	2661751	PLUG PIN WITH BASE			
PR	2903544	4P PLUG PIN WITH BASE			
PSC	2903543	3P PLUG PIN WITH BASE			
PSD1	2674631	5P PLUG PIN			
PSD3	2674634	8P PLUG PIN			
PSD4	2674635	10P PLUG PIN			
PSD5	2674636	12P FJ CONNECTOR (TYPE 12PL-FJ )			
PSD6	2674631	5P PLUG PIN			
PSI1	ED00575	CP-TAC-L18X-A1			
PSI2	ED00575	CP-TAC-L18X-A1			
PSU1	ED00576	CP-TAC-L20X-A1			
PSU2	ED00575	CP-TAC-L18X-A1			
PS1	2959058	PINPOST 9P PH			
PS2	2959059	PLUG PH PIN POST 10P			
PS3	2959055	CONNECTOR-6P(PH)			
PVMC	2902262	PLUG PIN SUB MINI 3P			
PVM1	ED00566	CP-TAC-L10X-A1			
PVM2	ED00566	CP-TAC-L10X-A1			
PY1	2675287	PLUG PIN (PH 8P)			
PY2	2902263	PLUG PIN SUB MINI 4P			
P802	2661756	1P PLUG PIN WITH BASE			
P832	2661756	1P PLUG PIN WITH BASE			
P862	2661756	1P PLUG PIN WITH BASE			
U301	JP01031	3D Y/C UNIT (50SX8B, 60SX12B/13K)			
$\Delta$ U401	GK00101	SP-05M C057PT811-10			
$\Delta$ U402	GK00091	SP-12M C120RB804-10			
$\Delta$ U403	GK00101	SP-05M C057PT811-10			
$\Delta$ U404	GK00091	SP-12M C120RB804-10			
$\Delta$ U405	GK00112	SP-7*12DC121RBX000N3			
V1B	DE00826	P16LGD00RFA (R) 50"/60"			
V1G	DE00825	P16LGD00HLA (G) 50"/60"			
V1R	DE00824	P16LGD00BMB (B) 50"/60"			
V1B	DE00114	P16LEN00RFA (R) 46"			
V1G	DE00115	P16LEN00HLA (G) 46"			
V1R	DE00116	P16LEN00BMB (B) 46"			
XS01	2786585	CRYSTAL RESONATOR 8.000MHZ			
XX01	2791501	CRYSTAL HC-49/U (AP63 ONLY)			
XX02	BJ00141	COIL (LC FILTER) 3.58MHZ (AP63 ONLY)			
XX03	BJ00112	COIL (LC FILTER) 6MHZ (AP63 ONLY)			
X001	2168831	CRYSTAL CSA12.0MTZ			
X5A1	2794401	DELAY LINE GLASS 63.5US (AP63B ONLY)			
X301	2786685	CRYSTAL CSB500F25			
X501	2791501	CRYSTAL HC-49/U			
	H310353	DIGITAL CONV. JIG SCREEN (46")			
	H310354	DIGITAL CONV. JIG SCREEN (50")			
	H310355	DIGITAL CONV. JIG SCREEN (60")			
	UE02341	LENS CRT CHASSIS B. ASS'Y (50UX26B/27K)			
	UE02342	LENS CRT CHASSIS B. ASS'Y (46UX24B/25K)			
	UE02343	LENS CRT CHASSIS B. ASS'Y (60SX12B/13K)			
	UE02344	LENS CRT CHASSIS B. ASS'Y (50SX8B)			

60SX12B/13K  
50UX26B/27K  
46UX24B/25K  
50SX8B

## NOTES

**HITACHI**