



website:<http://biz.LGservice.com>
e-mail:<http://www.LGService.com/techsup.html>


LCD TV SERVICE MANUAL

CHASSIS : ML-024F

MODEL : RZ-17LZ40

CAUTION

BEFORE SERVICING THE CHASSIS,
READ THE SAFETY PRECAUTIONS IN THIS MANUAL.

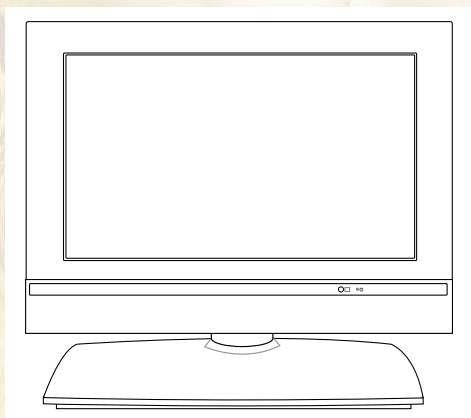

CONTENTS

Contents	2
Safety Precautions	3
Servicing Precautions	4
Specifications	6
Description of Controls	8
Adjustment Instruction	11
Block Diagram	17
Exploded View	18
Exploded View Parts List.....	19
Replacement Parts List	20
SVC. Sheet	

SAFETY PRECAUTIONS

IMPORTANT SAFETY NOTICE

Many electrical and mechanical parts in this chassis have special safety-related characteristics. These parts are identified by $\triangle$ in the Schematic Diagram and Replacement Parts List.

It is essential that these special safety parts should be replaced with the same components as recommended in this manual to prevent X-RADIATION, Shock, Fire, or other Hazards.

Do not modify the original design without permission of manufacturer.

General Guidance

An isolation Transformer should always be used during the servicing of a receiver whose chassis is not isolated from the AC power line. Use a transformer of adequate power rating as this protects the technician from accidents resulting in personal injury from electrical shocks.

It will also protect the receiver and its components from being damaged by accidental shorts of the circuitry that may be inadvertently introduced during the service operation.

If any fuse (or Fusible Resistor) in this TV receiver is blown, replace it with the specified.

When replacing a high wattage resistor (Oxide Metal Film Resistor, over 1W), keep the resistor 10mm away from PCB.

Keep wires away from high voltage or high temperature parts.

Due to high vacuum and large surface area of picture tube, extreme care should be used in handling the Picture Tube. Do not lift the Picture tube by its Neck.

X-RAY Radiation

Warning:

The source of X-RAY RADIATION in this TV receiver is the High Voltage Section and the Picture Tube.

For continued X-RAY RADIATION protection, the replacement tube must be the same type tube as specified in the Replacement Parts List.

To determine the presence of high voltage, use an accurate high impedance HV meter.

Adjust brightness, color, contrast controls to minimum.

Measure the high voltage.

The meter reading should indicate

23.5 $\pm$ 1.5KV: 14-19 inch, 26 $\pm$ 1.5KV: 19-21 inch,

29.0 $\pm$ 1.5KV: 25-29 inch, 30.0 $\pm$ 1.5KV: 32 inch

If the meter indication is out of tolerance, immediate service and correction is required to prevent the possibility of premature component failure.

Before returning the receiver to the customer,

always perform an AC leakage current check on the exposed metallic parts of the cabinet, such as antennas, terminals, etc., to be sure the set is safe to operate without damage of electrical shock.

Leakage Current Cold Check(Antenna Cold Check)

With the instrument AC plug removed from AC source, connect an electrical jumper across the two AC plug prongs. Place the AC switch in the on position, connect one lead of ohm-meter to the AC plug prongs tied together and touch other ohm-meter lead in turn to each exposed metallic parts such as antenna terminals, phone jacks, etc.

If the exposed metallic part has a return path to the chassis, the measured resistance should be between 1M Ω and 5.2M Ω .

When the exposed metal has no return path to the chassis the reading must be infinite.

An other abnormality exists that must be corrected before the receiver is returned to the customer.

Leakage Current Hot Check (See below Figure)

Plug the AC cord directly into the AC outlet.

Do not use a line Isolation Transformer during this check.


Connect 1.5K/10watt resistor in parallel with a 0.15uF capacitor between a known good earth ground (Water Pipe, Conduit, etc.) and the exposed metallic parts.

Measure the AC voltage across the resistor using AC voltmeter with 1000 ohms/volt or more sensitivity.

Reverse plug the AC cord into the AC outlet and repeat AC voltage measurements for each exposed metallic part. Any voltage measured must not exceed 0.75 volt RMS which corresponds to 0.5mA.

In case any measurement is out of the limits specified, there is possibility of shock hazard and the set must be checked and repaired before it is returned to the customer.

Leakage Current Hot Check circuit

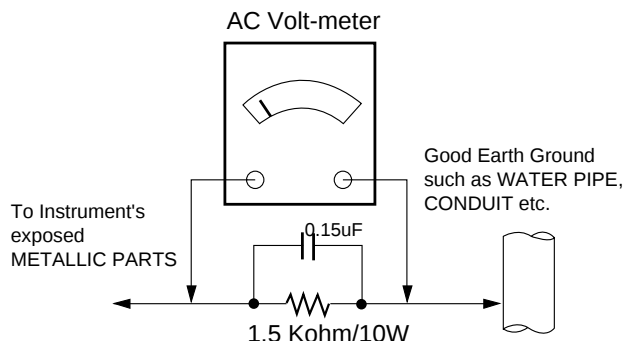

SERVICING PRECAUTIONS

CAUTION: Before servicing receivers covered by this service manual and its supplements and addenda, read and follow the **SAFETY PRECAUTIONS** on page 3 of this publication.

NOTE: If unforeseen circumstances create conflict between the following servicing precautions and any of the safety precautions on page 3 of this publication, always follow the safety precautions. Remember: Safety First.

General Servicing Precautions

1. Always unplug the receiver AC power cord from the AC power source before;
 - a. Removing or reinstalling any component, circuit board module or any other receiver assembly.
 - b. Disconnecting or reconnecting any receiver electrical plug or other electrical connection.
 - c. Connecting a test substitute in parallel with an electrolytic capacitor in the receiver.
CAUTION: A wrong part substitution or incorrect polarity installation of electrolytic capacitors may result in an explosion hazard.
 - d. Discharging the picture tube anode.
2. Test high voltage only by measuring it with an appropriate high voltage meter or other voltage measuring device (DVM, FETVOM, etc) equipped with a suitable high voltage probe. Do not test high voltage by "drawing an arc".
3. Discharge the picture tube anode only by (a) first connecting one end of an insulated clip lead to the degaussing or kine aquadag grounding system shield at the point where the picture tube socket ground lead is connected, and then (b) touch the other end of the insulated clip lead to the picture tube anode button, using an insulating handle to avoid personal contact with high voltage.
4. Do not spray chemicals on or near this receiver or any of its assemblies.
5. Unless specified otherwise in this service manual, clean electrical contacts only by applying the following mixture to the contacts with a pipe cleaner, cotton-tipped stick or comparable non-abrasive applicator; 10% (by volume) Acetone and 90% (by volume) isopropyl alcohol (90%-99% strength)
CAUTION: This is a flammable mixture.
Unless specified otherwise in this service manual, lubrication of contacts is not required.
6. Do not defeat any plug/socket B+ voltage interlocks with which receivers covered by this service manual might be equipped.
7. Do not apply AC power to this instrument and/or any of its electrical assemblies unless all solid-state device heat sinks are correctly installed.
8. Always connect the test receiver ground lead to the receiver chassis ground before connecting the test receiver positive lead.
Always remove the test receiver ground lead last.
9. Use with this receiver only the test fixtures specified in this service manual.
CAUTION: Do not connect the test fixture ground strap to any heat sink in this receiver.

Electrostatically Sensitive (ES) Devices

Some semiconductor (solid-state) devices can be damaged easily by static electricity. Such components commonly are called *Electrostatically Sensitive (ES) Devices*. Examples of typical ES devices are integrated circuits and some field-effect transistors and semiconductor "chip" components. The following techniques should be used to help reduce the incidence of component

damage caused by static by static electricity.

1. Immediately before handling any semiconductor component or semiconductor-equipped assembly, drain off any electrostatic charge on your body by touching a known earth ground. Alternatively, obtain and wear a commercially available discharging wrist strap device, which should be removed to prevent potential shock reasons prior to applying power to the unit under test.
2. After removing an electrical assembly equipped with ES devices, place the assembly on a conductive surface such as aluminum foil, to prevent electrostatic charge buildup or exposure of the assembly.
3. Use only a grounded-tip soldering iron to solder or unsolder ES devices.
4. Use only an anti-static type solder removal device. Some solder removal devices not classified as "anti-static" can generate electrical charges sufficient to damage ES devices.
5. Do not use freon-propelled chemicals. These can generate electrical charges sufficient to damage ES devices.
6. Do not remove a replacement ES device from its protective package until immediately before you are ready to install it. (Most replacement ES devices are packaged with leads electrically shorted together by conductive foam, aluminum foil or comparable conductive material).
7. Immediately before removing the protective material from the leads of a replacement ES device, touch the protective material to the chassis or circuit assembly into which the device will be installed.
CAUTION: Be sure no power is applied to the chassis or circuit, and observe all other safety precautions.
8. Minimize bodily motions when handling unpackaged replacement ES devices. (Otherwise harmless motion such as the brushing together of your clothes fabric or the lifting of your foot from a carpeted floor can generate static electricity sufficient to damage an ES device.)

General Soldering Guidelines

1. Use a grounded-tip, low-wattage soldering iron and appropriate tip size and shape that will maintain tip temperature within the range or 500 °F to 600 °F.
2. Use an appropriate gauge of RMA resin-core solder composed of 60 parts tin/40 parts lead.
3. Keep the soldering iron tip clean and well tinned.
4. Thoroughly clean the surfaces to be soldered. Use a mall wire-bristle (0.5 inch, or 1.25cm) brush with a metal handle. Do not use freon-propelled spray-on cleaners.
5. Use the following unsoldering technique
 - a. Allow the soldering iron tip to reach normal temperature. (500 °F to 600 °F)
 - b. Heat the component lead until the solder melts.
 - c. Quickly draw the melted solder with an anti-static, suction-type solder removal device or with solder braid.
CAUTION: Work quickly to avoid overheating the circuitboard printed foil.
6. Use the following soldering technique.
 - a. Allow the soldering iron tip to reach a normal temperature (500 °F to 600 °F)
 - b. First, hold the soldering iron tip and solder the strand against the component lead until the solder melts.

- c. Quickly move the soldering iron tip to the junction of the component lead and the printed circuit foil, and hold it there only until the solder flows onto and around both the component lead and the foil.

CAUTION: Work quickly to avoid overheating the circuit board printed foil.

- d. Closely inspect the solder area and remove any excess or splashed solder with a small wire-bristle brush.

IC Remove/Replacement

Some chassis circuit boards have slotted holes (oblong) through which the IC leads are inserted and then bent flat against the circuit foil. When holes are the slotted type, the following technique should be used to remove and replace the IC. When working with boards using the familiar round hole, use the standard technique as outlined in paragraphs 5 and 6 above.

Removal

1. Desolder and straighten each IC lead in one operation by gently prying up on the lead with the soldering iron tip as the solder melts.
2. Draw away the melted solder with an anti-static suction-type solder removal device (or with solder braid) before removing the IC.

Replacement

1. Carefully insert the replacement IC in the circuit board.
2. Carefully bend each IC lead against the circuit foil pad and solder it.
3. Clean the soldered areas with a small wire-bristle brush.
(It is not necessary to reapply acrylic coating to the areas).

"Small-Signal" Discrete Transistor

Removal/Replacement

1. Remove the defective transistor by clipping its leads as close as possible to the component body.
2. Bend into a "U" shape the end of each of three leads remaining on the circuit board.
3. Bend into a "U" shape the replacement transistor leads.
4. Connect the replacement transistor leads to the corresponding leads extending from the circuit board and crimp the "U" with long nose pliers to insure metal to metal contact then solder each connection.

Power Output, Transistor Device

Removal/Replacement

1. Heat and remove all solder from around the transistor leads.
2. Remove the heat sink mounting screw (if so equipped).
3. Carefully remove the transistor from the heat sink of the circuit board.
4. Insert new transistor in the circuit board.
5. Solder each transistor lead, and clip off excess lead.
6. Replace heat sink.

Diode Removal/Replacement

1. Remove defective diode by clipping its leads as close as possible to diode body.
2. Bend the two remaining leads perpendicular y to the circuit board.
3. Observing diode polarity, wrap each lead of the new diode around the corresponding lead on the circuit board.
4. Securely crimp each connection and solder it.
5. Inspect (on the circuit board copper side) the solder joints of the two "original" leads. If they are not shiny, reheat them and if necessary, apply additional solder.

Fuse and Conventional Resistor

Removal/Replacement

1. Clip each fuse or resistor lead at top of the circuit board hollow stake.
2. Securely crimp the leads of replacement component around notch at stake top.
3. Solder the connections.

CAUTION: Maintain original spacing between the replaced component and adjacent components and the circuit board to prevent excessive component temperatures.

Circuit Board Foil Repair

Excessive heat applied to the copper foil of any printed circuit board will weaken the adhesive that bonds the foil to the circuit board causing the foil to separate from or "lift-off" the board. The following guidelines and procedures should be followed whenever this condition is encountered.

At IC Connections

To repair a defective copper pattern at IC connections use the following procedure to install a jumper wire on the copper pattern side of the circuit board. (Use this technique only on IC connections).

1. Carefully remove the damaged copper pattern with a sharp knife. (Remove only as much copper as absolutely necessary).
2. Carefully scratch away the solder resist and acrylic coating (if used) from the end of the remaining copper pattern.
3. Bend a small "U" in one end of a small gauge jumper wire and carefully crimp it around the IC pin. Solder the IC connection.
4. Route the jumper wire along the path of the out-away copper pattern and let it overlap the previously scraped end of the good copper pattern. Solder the overlapped area and clip off any excess jumper wire.

At Other Connections

Use the following technique to repair the defective copper pattern at connections other than IC Pins. This technique involves the installation of a jumper wire on the component side of the circuit board.

1. Remove the defective copper pattern with a sharp knife. Remove at least 1/4 inch of copper, to ensure that a hazardous condition will not exist if the jumper wire opens.
2. Trace along the copper pattern from both sides of the pattern break and locate the nearest component that is directly connected to the affected copper pattern.
3. Connect insulated 20-gauge jumper wire from the lead of the nearest component on one side of the pattern break to the lead of the nearest component on the other side.
Carefully crimp and solder the connections.
CAUTION: Be sure the insulated jumper wire is dressed so the it does not touch components or sharp edges.

SPECIFICATION

NOTE : Specifications and others are subject to change without notice for improvement.

1. Application range

This specification is applied to ML-024F chassis.

2. Requirement for Test

Testing for standard of each part must be followed in below condition.

- (1) Temperature: 25°C ± 5°C(But, CST must be tested 40°C ± 5°C)
- (2) Humidity: 65% ± 10%
- (3) Power: Standard input voltage (AC 100-220V, 50/60Hz)
- (4) Measurement must be performed after heat-run more than 15min.

(5) Adjusting standard for this chassis is followed a special standard.

(6) Use the parts only designated in B.O.M.,PARTS SPEC.,or drawings.

(7) Follow each drawing or spec for spec and performance of parts,based upon P/N of RPL

3. Test and Inspection method

(1) Capacity: Follow LG electronics TV Testing Standard.

(2) RCA JACK performance :Follow the standard of LG.

(3) Another Required Standard
Follow the standard of each nation.

4.General Specification

No.	Item	Specification				Remark
		Min	Typ	Max	Unit	
1	Receivable broadcasting system	1)PAL/SECAM-BG 2)PAL/SECAM-DK 3)PAL-I/I 4)SECAM-L/L' 5)NTSC -M 6)NTSC 4.43(AV)				EU/Non-EU (PAL Market)
		7)PAL N/M 8)NTSC-M				NTSC Market
2	RF input channel	VHF: E02 ~ E12 UHF : E21 ~ E69 CATV : S1 ~ S20 HYPER : S21 ~ S41				PAL
		L/L' : B,C,D				FRANCE
		VHF : 2 ~13 UHF : 14 ~ 69 CATV : 1 ~ 125				NTSC
		VHF low : 1 ~M10 VHF high : 14 ~ 69 UHF : S23 ~ 62				JAPAN
3	Input voltage	110 - 220V ~± 10%, 50/60Hz				USA(120V/60Hz) EU(230~240V/50Hz) JAPAN(100V/60Hz)
4	Tuning system	FVS 100 program FS				PAL, 200PR.(option) NTSC
5	Market	World Wide				Initial : Zenith(RMS)
6	Screen size	15.1" diagonal (384mm)				024A
		15" diagonal				024E
		17.1" diagonal				024F
7	Aspect ratio	4:3				024A/E
		16:9				024F
8	Operating temperature	0		50	deg	024A/E/F
9	Operating humidity	10		90	%RH	024A/F
		20		85		024E
10	Storage temperature	-20		60	deg	024A/E/F
11	Storage humidity	10		90	%RH	024A/F
		5		85		024E

5. Feature and Function


No.	Item	Specification				Remark
		Min	Typ	Max	Unit	
1	Teletext	TOP,FLOF,LIST				TOP(option)
2	REMOCON	NEC code				
3	RGB(VGA) input	1	Rear			D-Sub 15 pin
4	Component input	0	Y, P _B , P _R			Option, Non-EU
5	PERI TV Connector	1	Rear (Full Scart)			Option, EU
6	AV input	1	Rear			
7	S-video input	1	Rear			
8	RS232 Port	1	Rear			Only for RMS
9	H/P output	1	Rear			
10	PC sound Input	1				
11	2 Carrier stereo	BG, DK				
12	NICAM Stereo	BG, I, LL'				
13	2 Carrier Dual	BG, DK				
14	NICAM Dual	BG, I, LL'				
15	Local Key	TV/video, menu, enter Volume (◀,▶), Channel(▲,▼)				
16	Main Power Key	O				
17	DPM (Display power management)	O				
18	AVL	O				
19	On/Off Timer	O				
20	APC	O				PAL : PSM
21	DASP	O				PAL : SSM

DESCRIPTION OF CONTROLS

All the functions can be controlled with the remote control handset. Some functions can also be adjusted with the buttons on the side panel of the set.
Only the remote control handset supplied will operate this set.

Remote control handset

Before you use the remote control handset, please install the batteries. See the next page.

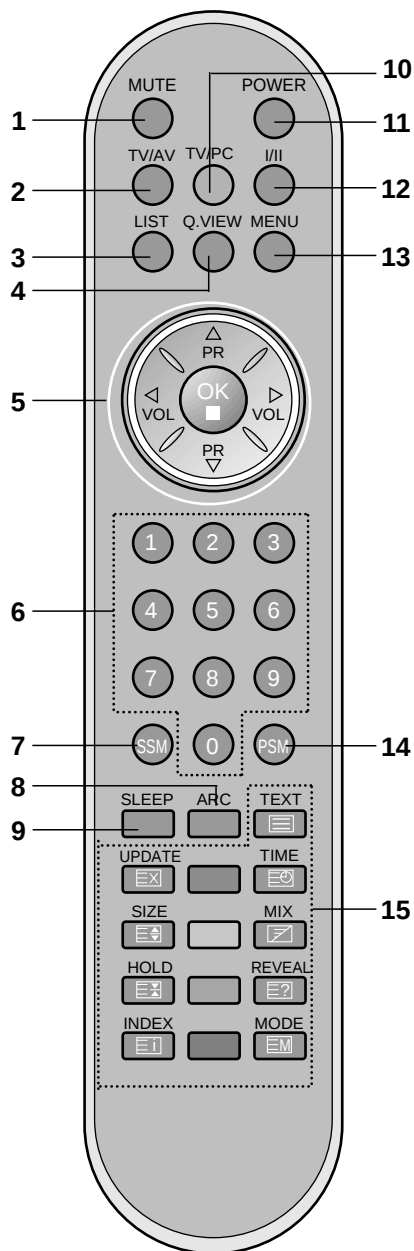

- 1. MUTE**
switches the sound on or off.
- 2. TV/AV**
selects TV or AV mode.
clears the menu from the screen.
switches the set on from standby.
- 3. LIST**
displays the programme table.
- 4. Q.VIEW**
returns to the previously viewed programme.
selects a favourite programme.
- 5. D / E (Programme Up/Down)**
selects a programme or a menu item.
switches the set on from standby.
F / G (Volume Up/Down)
adjusts the volume.
adjusts menu settings.
OK
accepts your selection or displays the current mode.
- 6. NUMBER BUTTONS**
switches the set on from standby or directly select a number.
- 7. SSM (Sound Status Memory)**
recalls your preferred sound setting.
- 8. ARC (option)**
select your desired picture format.
- 9. SLEEP**
sets the sleep timer.

10. TV/PC

selects TV or PC mode.
clears the menu from the screen.
switches the set on from standby.

11. POWER

switches the set on from standby or off to standby.

12. I/II

selects the language during dual language broadcast.
selects the sound output (option).

13. MENU

selects a menu.

14. PSM (Picture Status Memory)


recalls your preferred picture setting.

15. TELETEXT BUTTONS (option)


These buttons are used for teletext.
For further details, see the 'Teletext' section.

*** : No function**


COLOURED BUTTONS : These buttons are used for teletext (only TELETEXT models) or programme edit.

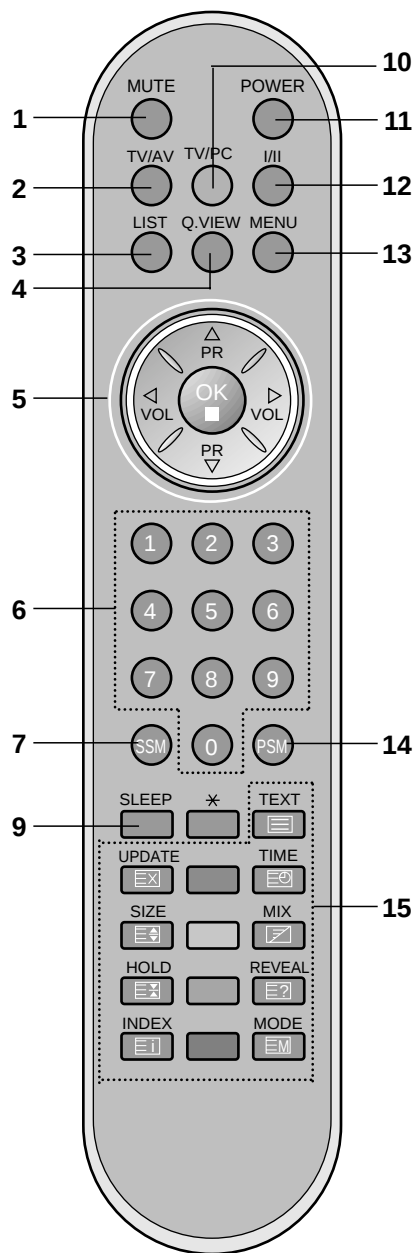


• RZ-17LZ40 series

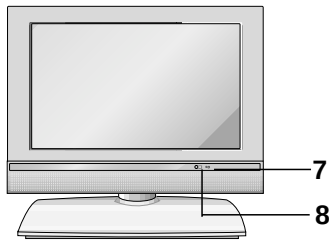



Top panel



• RZ-15LA70 series



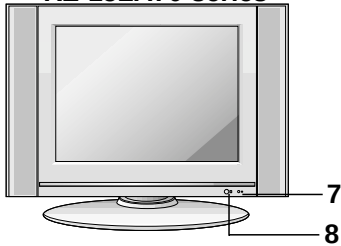


Side panel

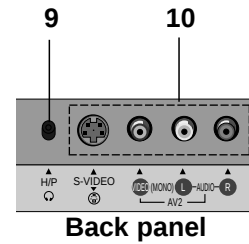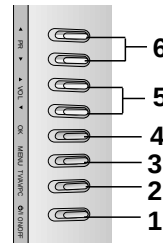

Back panel

• RZ-15LA66 series

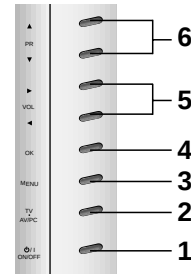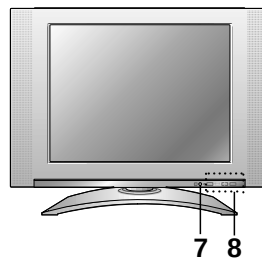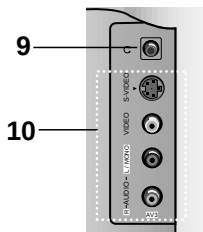

1. **ON/OFF**
switches the set on from standby or off to standby.
Note : Power line lives even when the power is off.
2. **TV/AV/PC**
selects TV, AV or PC monitor mode.
clears the menu from the screen.
switches the set on from standby.
3. **MENU**
selects a menu.
4. **OK**
accepts your selection or displays the current mode.
5. **F / G (Volume Up/Down)**
adjusts the volume.
adjusts menu settings.
6. **D / E (Programme Up/Down)**
selects a programme or a menu item.
switches the set on from standby.
7. **POWER/STANDBY INDICATOR (r)**
illuminates red in standby mode.
illuminates green when the set is switched on.
8. **REMOTE CONTROL SENSOR (option)**
illuminates brightly when the set is switched on.
 - ⏻ : POWER/STANDBY indicator
 - MONO : MONO indicator
 - (ST) : STEREO indicator
 - DUAL : DUAL indicator
 - DPM : DPM indicator
9. **HEADPHONE SOCKET**
Connect the headphone plug to this socket.
10. **AUDIO/VIDEO IN SOCKETS (AV2)**
Connect the audio/video out sockets of external equipment to these sockets.

S-VIDEO/AUDIO IN SOCKETS (SAV)
 Connect the video out socket of an S-VIDEO VCR to the **S-VIDEO** socket.
 Connects the audio out sockets of the S-VIDEO VCR to the audio sockets as in **AV2**.

ADJUSTMENT INSTRUCTION

1. Application Object

This instruction is for the application to the LCD TV/Monitor, ML-024F.

2. Notes

- (1) This LCD TV has power within set. Connect the power correctly, then start the adjustment.
 - (2) The adjustment must be performed under the correct sequence.
 - (3) The adjustment must be performed in the circumstance of $25\pm 5^{\circ}\text{C}$ of temperature and $65\pm 10\%$ of relative humidity if there is no specific designation.
 - (4) The input voltage of the receiver must keep 100~220V, 50/60Hz in adjusting.
 - (5) The set must be operated for 15 minutes preliminary before adjustment if there is no specific designation.
- o 'Heat Run' must be performed with the full white signal or TV noise signal in the internal part of the set.
 - o The time for 'Heat Run' can be changed owing to production plan.
 - o Condition of Line Test : Standard color signal - $65\pm 1\text{dBuV}$


3. PC Mode Adjustment

3-1. Required Test Equipment

- (1) Window Pattern which satisfied with VESA Spec. or pattern which has White-Black signal simultaneously.
- (2) Remote control for adjustment

3-2. Preparation for Adjustment

- (1) Perform 'Heat Run' for more than 15 minutes in white pattern.
- (2) Connect the signal of pattern generator with LCD TV of PC Input Jack.
- (3) Confirm the XGA(1024x768) Window Pattern or signal(White-Black) using the 801-GF/GD, VG819.
- (4) Use the IN-START Key on R/C for adjustment to enter the PC adjustment mode.
- (5) Example of adjustment screen.

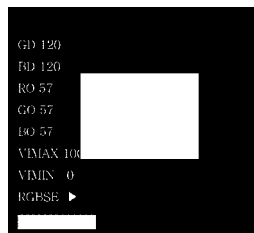

<Fig. 1>

- (6) Enter into the adjustment mode as <Fig. 1> and select the cursor(red letters) to "RGBSE ►" with the channel key on R/C for adjustment.
- (7) Press the Volume (►) key on R/C for adjustment.

- (8) At this time the adjustment starts automatically changing the number in order of RO --> GO --> BO --> RD --> GD --> BD.

In adjustment, the lastest line, "60 Swver:2.5" is change to "adjust". When adjustment is finished it's return to "60 Swver:2.5".

- (9) Press the MENU or EXIT key to come out of the adjustment mode.

4. COMPONENT Adjustment


(Only CMO MODULE)

4-1. Required Test Equipment

- (1) Standard Color bar (75% Full Color bar) -> refer <fig.2>
- (2) Remote control for adjustment

4-2. Preparation for Adjustment

- (1) Operate Component Mode adjustment, after PC Mode adjustment.
- (2) Connect the signal of pattern generator with LCD TV of Component Input Jack
- (3) Confirm the Color bar (75% Full Color bar) signal using the 801-GF/GD, VG819.
- (4) Use the IN-START Key on R/C for adjustment to enter the Component adjustment mode.

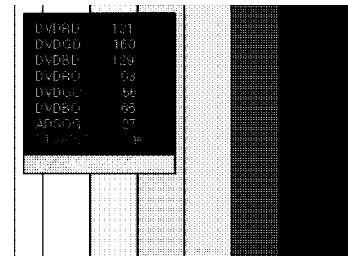

<Fig. 2>

- (5) Example of adjustment screen.
- (6) Enter into the adjustment mode as <Fig. 2> and select the cursor(red letters) to "DTVADJT ►" with the channel key on R/C for adjustment.
- (7) Press the Volume (►) key on R/C for adjustment.
- (8) At this time the adjustment starts automatically changing the color of Color bar.
Changing a color bar color, the adjustment start. When adustment is finished, the of previors adjustment and changt the data's cost.
- (9) Press the ENTER key. and then press EXIT key to come out of the adjustment mode.

5. Option1 data(200PR~A2 ST:1bit,SYS:2bit)

OPTION Data	200PR	TEXT	I/II SAVE	TOP	SCART	A2 STER	SYS
0	0	0	0	0	0	0	0
1	0	0	0	0	0	0	1
2	0	0	0	0	0	0	2
3	0	0	0	0	0	0	3
4	0	0	0	0	0	1	0
5	0	0	0	0	0	1	1
6	0	0	0	0	0	1	2
7	0	0	0	0	0	1	3
8	0	0	0	0	1	0	0
9	0	0	0	0	1	0	1
10	0	0	0	0	1	0	2
11	0	0	0	0	1	0	3
12	0	0	0	0	1	1	0
13	0	0	0	0	1	1	1
14	0	0	0	0	1	1	2
15	0	0	0	0	1	1	3
16	0	0	0	1	0	0	0
17	0	0	0	1	0	0	1
18	0	0	0	1	0	0	2
19	0	0	0	1	0	0	3
20	0	0	0	1	0	1	0
21	0	0	0	1	0	1	1
22	0	0	0	1	0	1	2
23	0	0	0	1	0	1	3
24	0	0	0	1	1	0	0
25	0	0	0	1	1	0	1
26	0	0	0	1	1	0	2
27	0	0	0	1	1	0	3
28	0	0	0	1	1	1	0
29	0	0	0	1	1	1	1
30	0	0	0	1	1	1	2
31	0	0	0	1	1	1	3

OPTION Data	200PR	TEXT	I/II SAVE	TOP	SCART	A2 STER	SYS
32	0	0	1	0	0	0	0
33	0	0	1	0	0	0	1
34	0	0	1	0	0	0	2
35	0	0	1	0	0	0	3
36	0	0	1	0	0	1	0
37	0	0	1	0	0	1	1
38	0	0	1	0	0	1	2
39	0	0	1	0	0	1	3
40	0	0	1	0	1	0	0
41	0	0	1	0	1	0	1
42	0	0	1	0	1	0	2
43	0	0	1	0	1	0	3
44	0	0	1	0	1	1	0
45	0	0	1	0	1	1	1
46	0	0	1	0	1	1	2
47	0	0	1	0	1	1	3
48	0	0	1	1	0	0	0
49	0	0	1	1	0	0	1
50	0	0	1	1	0	0	2
51	0	0	1	1	0	0	3
52	0	0	1	1	0	1	0
53	0	0	1	1	0	1	1
54	0	0	1	1	0	1	2
55	0	0	1	1	0	1	3
56	0	0	1	1	1	0	0
57	0	0	1	1	1	0	1
58	0	0	1	1	1	0	2
59	0	0	1	1	1	0	3
60	0	0	1	1	1	1	0
61	0	0	1	1	1	1	1
62	0	0	1	1	1	1	2
63	0	0	1	1	1	1	3

OPTION Data	200PR	TEXT	I/II SV	TOP	SCART	A2 ST	SYS
64	0	1	0	0	0	0	0
65	0	1	0	0	0	0	1
66	0	1	0	0	0	0	2
67	0	1	0	0	0	0	3
68	0	1	0	0	0	1	0
69	0	1	0	0	0	1	1
70	0	1	0	0	0	1	2
71	0	1	0	0	0	1	3
72	0	1	0	0	1	0	0
73	0	1	0	0	1	0	1
74	0	1	0	0	1	0	2
75	0	1	0	0	1	0	3
76	0	1	0	0	1	1	0
77	0	1	0	0	1	1	1
78	0	1	0	0	1	1	2
79	0	1	0	0	1	1	3
80	0	1	0	1	0	0	0
81	0	1	0	1	0	0	1
82	0	1	0	1	0	0	2
83	0	1	0	1	0	0	3
84	0	1	0	1	0	1	0
85	0	1	0	1	0	1	1
86	0	1	0	1	0	1	2
87	0	1	0	1	0	1	3
88	0	1	0	1	1	0	0
89	0	1	0	1	1	0	1
90	0	1	0	1	1	0	2
91	0	1	0	1	1	0	3
92	0	1	0	1	1	1	0
93	0	1	0	1	1	1	1
94	0	1	0	1	1	1	2
95	0	1	0	1	1	1	3
96	0	1	1	0	0	0	0
97	0	1	1	0	0	0	1
98	0	1	1	0	0	0	2
99	0	1	1	0	0	0	3
100	0	1	1	0	0	1	0
101	0	1	1	0	0	1	1
102	0	1	1	0	0	1	2
103	0	1	1	0	0	1	3
104	0	1	1	0	1	0	0
105	0	1	1	0	1	0	1
106	0	1	1	0	1	0	2
107	0	1	1	0	1	0	3
108	0	1	1	0	1	1	0
109	0	1	1	0	1	1	1

OPTION Data	200PR	TEXT	I/II SV	TOP	SCART	A2 ST	SYS
110	0	1	1	0	1	1	2
111	0	1	1	0	1	1	3
112	0	1	1	1	0	0	0
113	0	1	1	1	0	0	1
114	0	1	1	1	0	0	2
115	0	1	1	1	0	0	3
116	0	1	1	1	0	1	0
117	0	1	1	1	0	1	1
118	0	1	1	1	0	1	2
119	0	1	1	1	0	1	3
120	0	1	1	1	1	0	0
121	0	1	1	1	1	0	1
122	0	1	1	1	1	0	2
123	0	1	1	1	1	0	3
124	0	1	1	1	1	1	0
125	0	1	1	1	1	1	1
126	0	1	1	1	1	1	2
127	0	1	1	1	1	1	3
128	1	0	0	0	0	0	0
129	1	0	0	0	0	0	1
130	1	0	0	0	0	0	2
131	1	0	0	0	0	0	3
132	1	0	0	0	0	1	0
133	1	0	0	0	0	1	1
134	1	0	0	0	0	1	2
135	1	0	0	0	0	1	3
136	1	0	0	0	1	0	0
137	1	0	0	0	1	0	1
138	1	0	0	0	1	0	2
139	1	0	0	0	1	0	3
140	1	0	0	0	1	1	0
141	1	0	0	0	1	1	1
142	1	0	0	0	1	1	2
143	1	0	0	0	1	1	3
144	1	0	0	1	0	0	0
145	1	0	0	1	0	0	1
146	1	0	0	1	0	0	2
147	1	0	0	1	0	0	3
148	1	0	0	1	0	1	0
149	1	0	0	1	0	1	1
150	1	0	0	1	0	1	2
151	1	0	0	1	0	1	3
152	1	0	0	1	1	0	0
153	1	0	0	1	1	0	1
154	1	0	0	1	1	0	2
155	1	0	0	1	1	0	3

OPTION Data	200PR	TEXT	I/II SV	TOP	SCART	A2 ST	SYS
156	1	0	0	1	1	1	0
157	1	0	0	1	1	1	1
158	1	0	0	1	1	1	2
159	1	0	0	1	1	1	3
160	1	0	1	0	0	0	0
161	1	0	1	0	0	0	1
162	1	0	1	0	0	0	2
163	1	0	1	0	0	0	3
164	1	0	1	0	0	1	0
165	1	0	1	0	0	1	1
166	1	0	1	0	0	1	2
167	1	0	1	0	0	1	3
168	1	0	1	0	1	0	0
169	1	0	1	0	1	0	1
170	1	0	1	0	1	0	2
171	1	0	1	0	1	0	3
172	1	0	1	0	1	1	0
173	1	0	1	0	1	1	1
174	1	0	1	0	1	1	2
175	1	0	1	0	1	1	3
176	1	0	1	1	0	0	0
177	1	0	1	1	0	0	1
178	1	0	1	1	0	0	2
179	1	0	1	1	0	0	3
180	1	0	1	1	0	1	0
181	1	0	1	1	0	1	1
182	1	0	1	1	0	1	2
183	1	0	1	1	0	1	3
184	1	0	1	1	1	0	0
185	1	0	1	1	1	0	1
186	1	0	1	1	1	0	2
187	1	0	1	1	1	0	3
188	1	0	1	1	1	1	0
189	1	0	1	1	1	1	1
190	1	0	1	1	1	1	2
191	1	0	1	1	1	1	3
192	1	1	0	0	0	0	0
193	1	1	0	0	0	0	1
194	1	1	0	0	0	0	2
195	1	1	0	0	0	0	3
196	1	1	0	0	0	1	0
197	1	1	0	0	0	1	1
198	1	1	0	0	0	1	2
199	1	1	0	0	0	1	3
200	1	1	0	0	1	0	0
201	1	1	0	0	1	0	1

OPTION Data	200PR	TEXT	I/II SV	TOP	SCART	A2 ST	SYS
202	01	1	0	0	1	0	2
203	1	1	0	0	1	0	3
204	1	1	0	0	1	1	0
205	1	1	0	0	1	1	1
206	1	1	0	0	1	1	2
207	1	1	0	0	1	1	3
208	1	1	0	1	0	0	0
209	1	1	0	1	0	0	1
210	1	1	0	1	0	0	2
211	1	1	0	1	0	0	3
212	1	1	0	1	0	1	0
213	1	1	0	1	0	1	1
214	1	1	0	1	0	1	2
215	1	1	0	1	0	1	3
216	1	1	0	1	1	0	0
217	1	1	0	1	1	0	1
218	1	1	0	1	1	0	2
219	1	1	0	1	1	0	3
220	1	1	0	1	1	1	0
221	1	1	0	1	1	1	1
222	1	1	0	1	1	1	2
223	1	1	0	1	1	1	3
224	1	1	1	0	0	0	0
225	1	1	1	0	0	0	1
226	1	1	1	0	0	0	2
227	1	1	1	0	0	0	3
228	1	1	1	0	0	1	0
229	1	1	1	0	0	1	1
230	1	1	1	0	0	1	2
231	1	1	1	0	0	1	3
232	1	1	1	0	1	0	0
233	1	1	1	0	1	0	1
234	1	1	1	0	1	0	2
235	1	1	1	0	1	0	3
236	1	1	1	0	1	1	0
237	1	1	1	0	1	1	1
238	1	1	1	0	1	1	2
239	1	1	1	0	1	1	3
240	1	1	1	1	0	0	0
241	1	1	1	1	0	0	1
242	1	1	1	1	0	0	2
243	1	1	1	1	0	0	3
244	1	1	1	1	0	1	0
245	1	1	1	1	0	1	1
246	1	1	1	1	0	1	2
247	1	1	1	1	0	1	3

OPTION Data	200PR	TEXT	I/II SV	TOP	SCART	A2 ST	SYS
248	1	1	1	1	1	0	0
249	1	1	1	1	1	0	1
250	1	1	1	1	1	0	2
251	1	1	1	1	1	0	3
252	1	1	1	1	1	1	0
253	1	1	1	1	1	1	1
254	1	1	1	1	1	1	2
255	1	1	1	1	1	1	3

6. Option2 data(ACMS~BBACK:1bit,LANG:3bit)


Data	ACMS	VOL	BBACK	LANG
0	0	0	0	0
1	0	0	0	1
2	0	0	0	2
3	0	0	0	3
4	0	0	0	4
5	0	0	0	5
6	0	0	0	6
7	0	0	0	7
8	0	0	1	0
9	0	0	1	1
10	0	0	1	2
11	0	0	1	3
12	0	0	1	4
13	0	0	1	5
14	0	0	1	6
15	0	0	1	7
16	0	1	0	0
17	0	1	0	1
18	0	1	0	2
19	0	1	0	3
20	0	1	0	4
21	0	1	0	5
22	0	1	0	6
23	0	1	0	7
24	0	1	1	0
25	0	1	1	1
26	0	1	1	2
27	0	1	1	3
28	0	1	1	4
29	0	1	1	5
30	0	1	1	6
31	0	1	1	7

Data	ACMS	VOL	BBACK	LANG
32	1	0	0	0
33	1	0	0	1
34	1	0	0	2
35	1	0	0	3
36	1	0	0	4
37	1	0	0	5
38	1	0	0	6
39	1	0	0	7
40	1	0	1	0
41	1	0	1	1
42	1	0	1	2
43	1	0	1	3
44	1	0	1	4
45	1	0	1	5
46	1	0	1	6
47	1	0	1	7
48	1	1	0	0
49	1	1	0	1
50	1	1	0	2
51	1	1	0	3
52	1	1	0	4
53	1	1	0	5
54	1	1	0	6
55	1	1	0	7
56	1	1	1	0
57	1	1	1	1
58	1	1	1	2
59	1	1	1	3
60	1	1	1	4
61	1	1	1	5
62	1	1	1	6
63	1	1	1	7


7. Option3 data(IIC AFT~CH+AU:1bit)

OPTION Data	HiDEV	TSS	IIC T	MONO	CH+AUS
0	0	0	0	0	0
1	0	0	0	0	1
2	0	0	0	1	0
3	0	0	0	1	1
4	0	0	1	0	0
5	0	0	1	0	1
6	0	0	1	1	0
7	0	0	1	1	1
8	0	1	0	0	0
9	0	1	0	0	1
10	0	1	0	1	0
11	0	1	0	1	1
12	0	1	1	0	0
13	0	1	1	0	1
14	0	1	1	1	0
15	0	1	1	1	1
16	1	0	0	0	0
17	1	0	0	0	1
18	1	0	0	1	0
19	1	0	0	1	1
20	1	0	1	0	0
21	1	0	1	0	1
22	1	0	1	1	0
23	1	0	1	1	1
24	1	1	0	0	0
25	1	1	0	0	1
26	1	1	0	1	0
27	1	1	0	1	1
28	1	1	1	0	0
29	1	1	1	0	1
30	1	1	1	1	0
31	1	1	1	1	1

BLOCK DIAGRAM

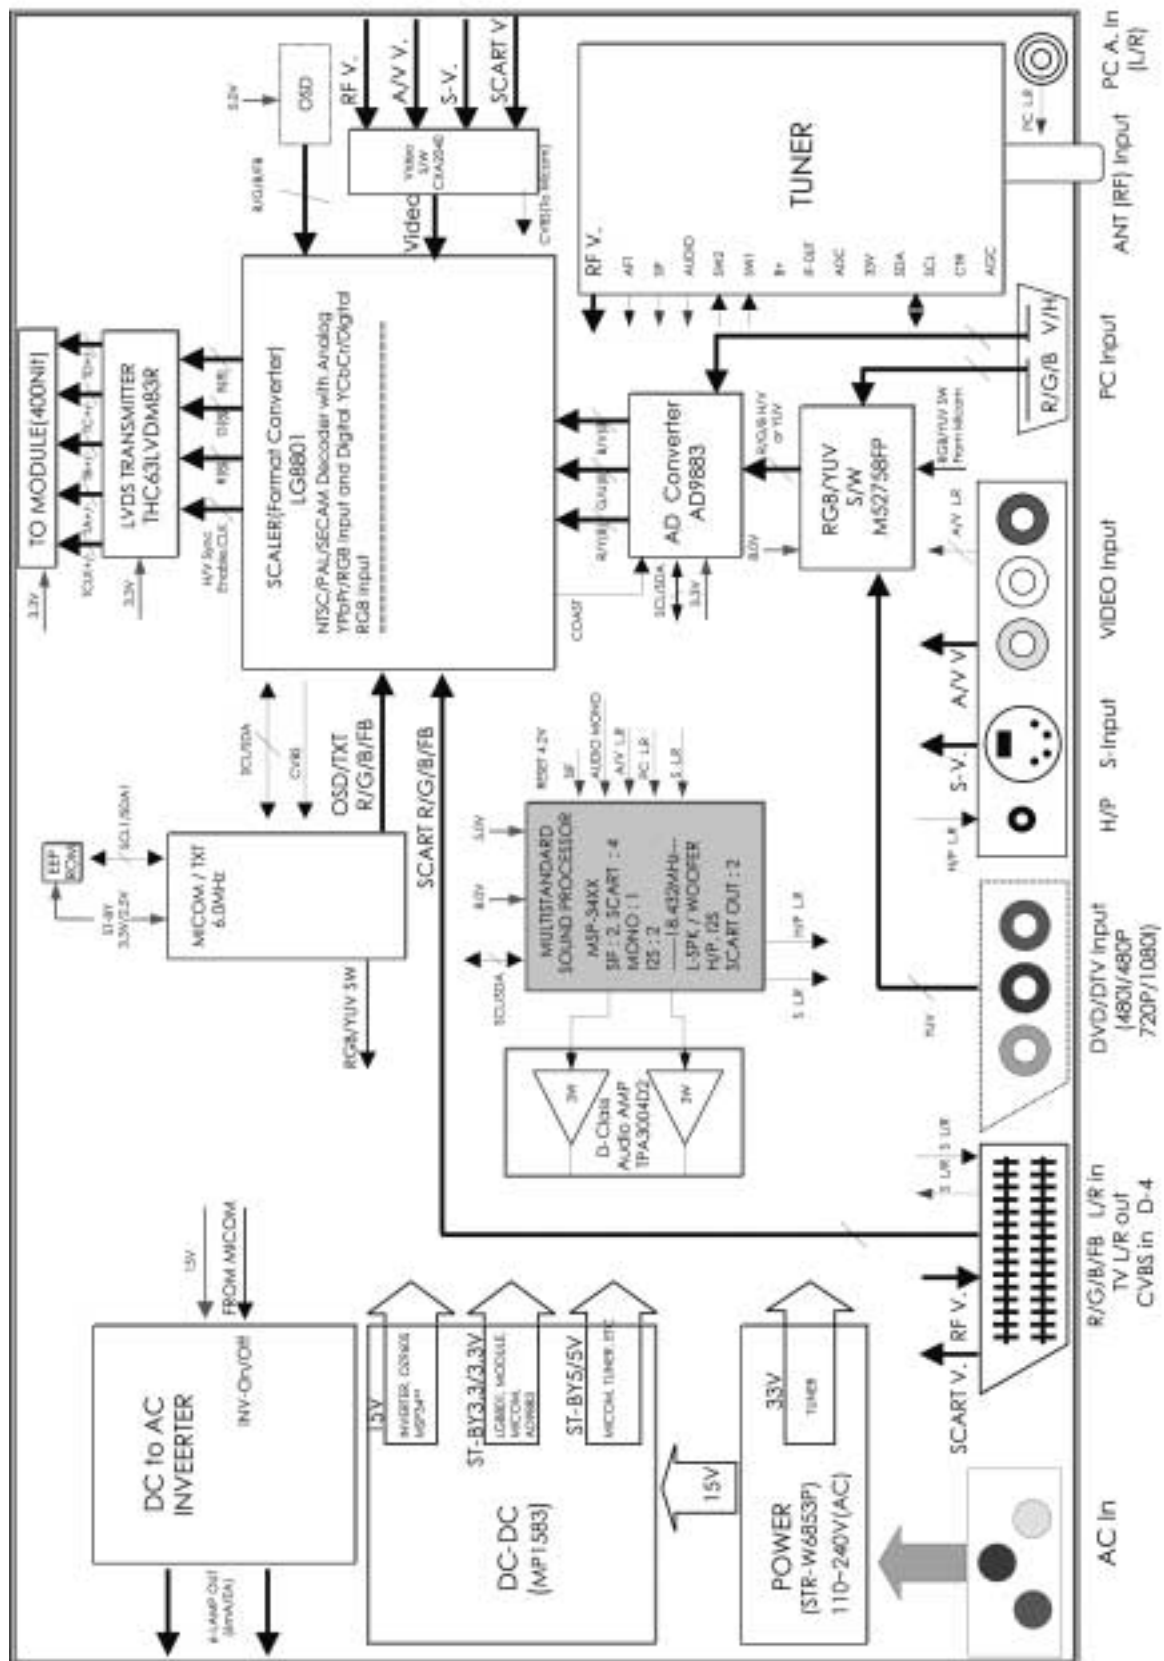

EXPLODED VIEW

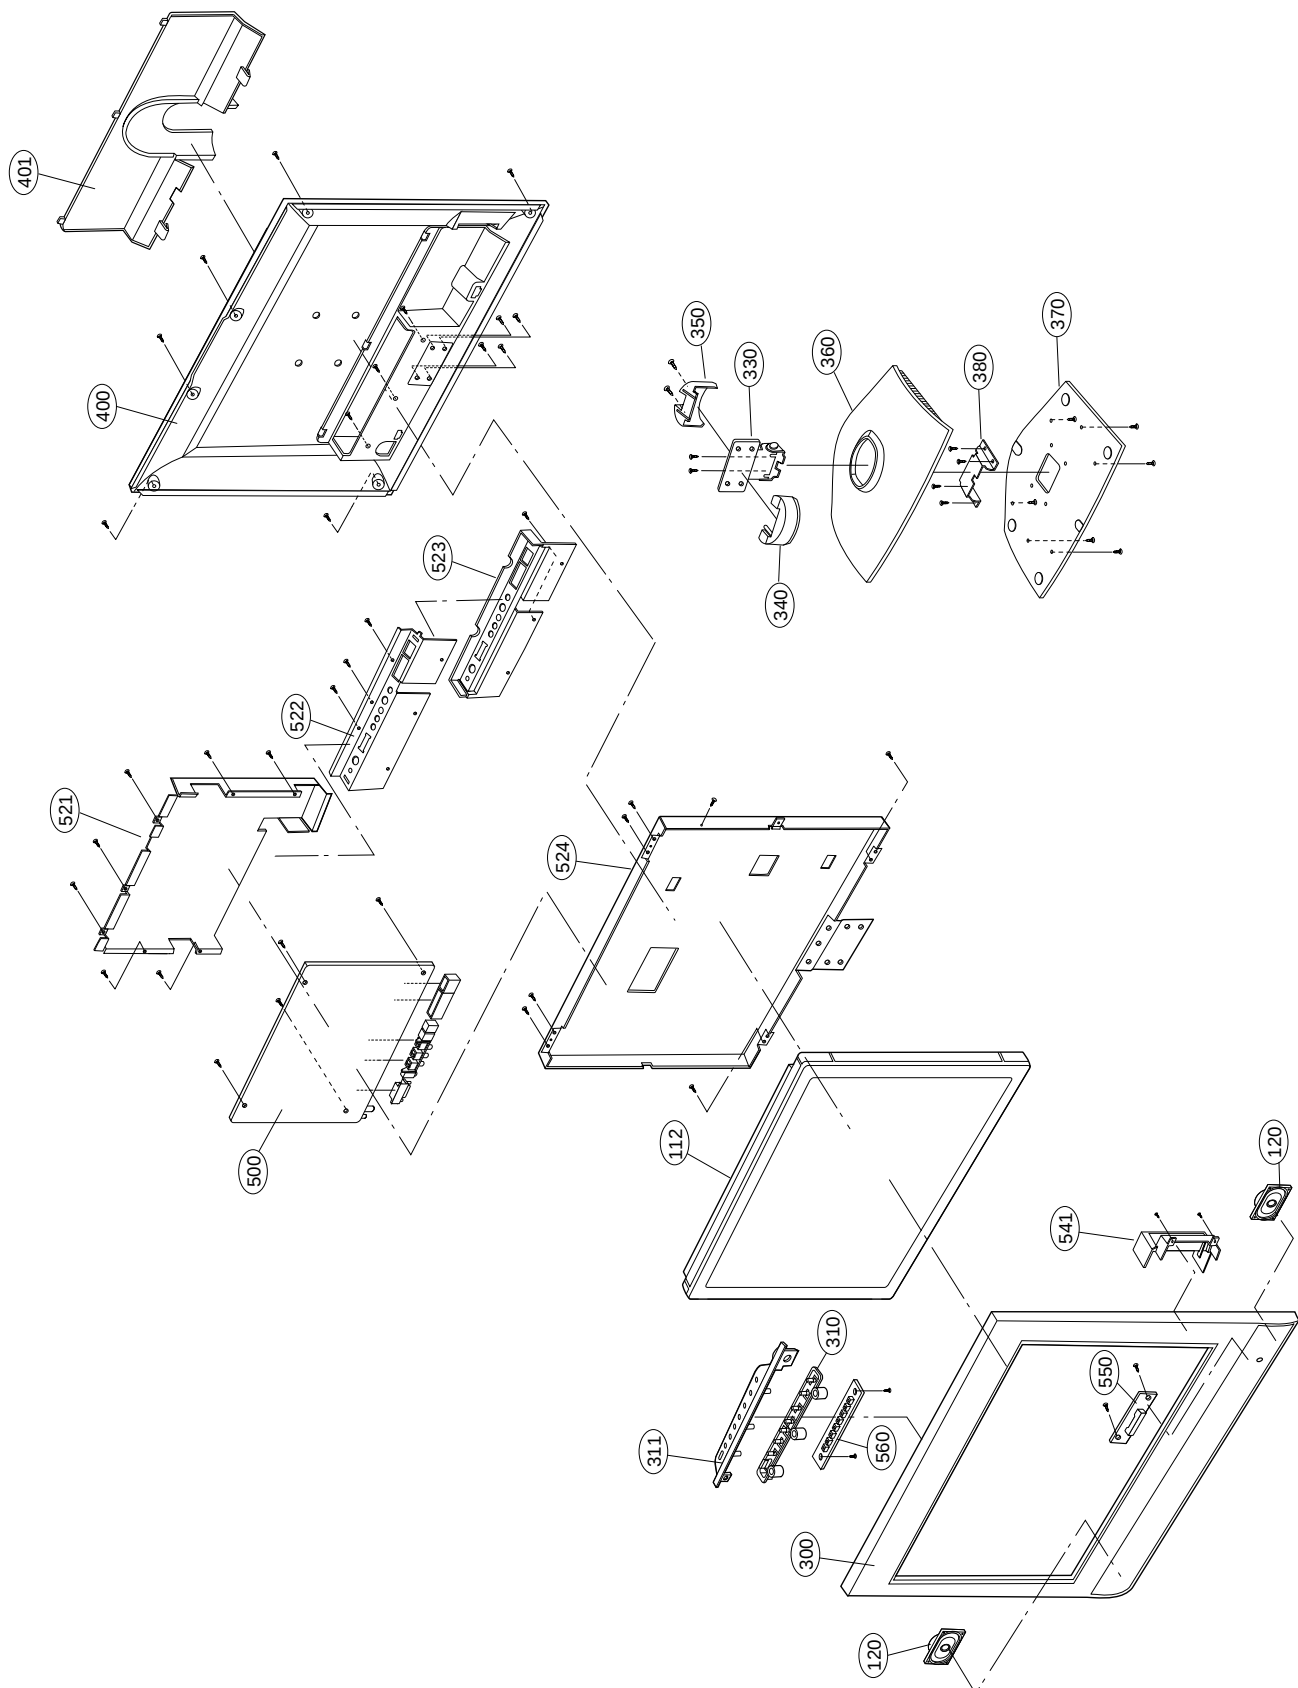

EXPLODED VIEW PARTS LIST

No.	PART NO.	DESCRIPTION
112	6306V17001B	LCD(LIQUID CRYSTAL DISPLAY),LC171W03-A4K4 LG PHILPS TFT COLOR
120	6400GKTX01A	SPEAKER,FULLRANGE F1527C-6428 K-TONE 8OHM 7/12W 83DB OTHERS 34.5X71
300	3091V00623B	CABINET ASSEMBLY,RZ-17LZ40 MONO E_PHONE ML024F C/SKD
310	5020V00798D	BUTTON,CONTROL RZ-17LZ40 ABS, HF-380 8KEY .
311	4810V00836B	BRACKET,CONTROL KZ-17LZ21 ML027C ABS, HF-380 .
330	4950V00157F	METAL,HINGE ASSY NON 15LA70
340	4810V00777D	BRACKET,STAND RU-15LA61 ML012C HIPS 60HR FRONT
350	4810V00778D	BRACKET,STAND RU-15LA61 ML012C HIPS 60HR REAR
360	4810V00949A	BRACKET,STAND RZ-17LZ40 ML024F ABS, HF-380 .
370	4950V00203A	METAL,BASE EGI 17LZ40
380	4950V00194A	METAL,STAND SPCC(CR) SUPPORTER(LA70)
400	3809V00427B	BACK COVER ASSEMBLY,RZ-17LZ40 1SCART 1PHONE C/SKD
	3809V00427C	BACK COVER ASSEMBLY,RZ-17LZ40 1SCART 1PHONE C/SKD 412-36D
401	3550V00335C	COVER,REAR AV RU-17LZ22 ABS, HF-380 SKD
500	6871VMMR43A	PWB(PCB) ASSEMBLY,MAIN ML-024F RZ-17LZ40(PCB ASSY MAIN)
521	4950V00168F	METAL,SHIELD EGI 0.8T ML-024F C/SKD
522	4950V00198A	METAL,NON NON SHIELD REAR AV
	4950V00198C	METAL,SHIELD ET.
523	4810V00932A	BRACKET,REAR AV RZ-17LZ40 NON ABS, HF-380 .
524	4950V00167K	METAL,FRAME EGI 1T ML-024F C/SKD
541	4810V00969A	BRACKET,NON RZ-17LZ40 ML024F HIPS 60HR NO HOLE
550	6871VSMQ47A	PWB(PCB) ASSEMBLY,SUB POWER ML024F RZ-17LZ40 (PWR ASSY)
560	6871VSMQ46B	PWB(PCB) ASSEMBLY,SUB CONT ML024F RZ-17LZ40 CONTROL ASSY

REPLACEMENT PARTS LIST

For Capacitor & Resistors, the characters at 2nd and 3rd digit in the P/No. means as follows;

CC, CX, CK, CN : Ceramic
CQ : Polyester
CE : Electrolytic

RD : Carbon Film
RS : Metal Oxide Film
RN : Metal Film
RF : Fusible

LOCA. NO	PART NO	DESCRIPTION
IC		
IC1	0IMCRTH001A	IC,HC63LVDM83R THINE 56P TSSOP
IC100	0ISM555000B	IC,SDA555XFL 52DIP ST FLASH MEMORY
IC101	0IAL241610B	IC,AT24C16A-10PI-2.7 8PIN DIP ST
IC102	0IFA752700A	IC,KA75270Z 3 TP RE-SET IC MC-007
IC1101	0IMCRO2001A	IC,OZ960S O2MICRO 20P SSOP
IC1106	0IKE704200J	IC,KIA7042AF SOT-89 TP 4.2V VOLTAGE
IC1110	0IMCRRH005A	IC,UM6K1N ROHM 6P SOT363 R/TP 30V 0.1A
IC1111	0IMCRRH005A	IC,UM6K1N ROHM 6P SOT363 R/TP 30V 0.1
IC1112	0IMCRRH005A	IC,UM6K1N ROHM 6P SOT363 R/TP 30V 0.1A R
IC1116	0IMCRKE010A	IC,KIA7812AF KEC 2P DPACK R/TP 12V
IC1121	0IMCRMZ001A	IC,MP1583DN POWER SYSTEM 8P TSOP
IC1122	0IMCRMZ001A	IC,MP1583DN POWER SYSTEM 8P TSOP
IC351	0IMCRFA010A	IC,KA7809R, FAIRCHILD 2P D-PAK
IC352	0ISO204000A	IC,CXA2040AQ 32P,QFP BK IIC BUS VIDEO S/W
IC500	0IMCRFA016A	IC,KA78RH33RTF FAIRCHILD 2P D-PAK
IC501	0IMCRTW001B	IC,LG8801-H TECHWELL 160P QPFD
IC502	0ICTMMO005B	IC,SC786110DW MOTOROLA SOIC 16P
IC601	0IMCRMN011D	IC,MSP3410G QA B8 V3 MICRONAS 80P QFP
IC603	0IKE704200J	IC,KIA7042AF SOT-89 TP 4.2V VOLTAGE
IC604	0IMCRFA009A	IC,KA78M08RTM, FAIRCHILD 2P D-PAK
IC650	0IMCRTI022D	IC,TPA3004D2 TEXAS INSTRUMENT 48P PQFP
IC701	0IPMGSK012A	IC,STR-W6853P SANKEN 6P T0-220 ST
IC702	0IMCRFA007A	IC,KA431Z FAIRCHILD 3DIP,T0-92 TP
IC801	0IMCRAD002A	IC,AD9883AKST-110 ANALOG DEVICE 80P TQFP
PC1	0ILI817000G	IC,LTV817M-VB 4P,DIP BK
Q101	0IFA270000A	IC,2N7000TA T0-92, 3P TP
Q102	0IFA270000A	IC,2N7000TA T0-92, 3P TPIFT 60V/0.2A
TRANSISTOR		
IC1102	0TFFC80044A	TR,FDS8958A FAIRCHILD R/TP SO-8 30V 7A
IC1103	0TFFC80044A	TR,FDS8958A FAIRCHILD R/TP SO-8 30V 7A
IC1104	0TFFC80044A	TR,FDS8958A FAIRCHILD R/TP SO-8 30V 7A
IC1105	0TFFC80044A	TR,FDS8958A FAIRCHILD R/TP SO-8 30V 7A
IC1223	0TF492509AA	TR,SI4925DY TP TEMIC 30V 6.1A SO-8
IC1224	0TF492509AA	TR,SI4925DY TP TEMIC 30V 6.1A SO-8
IC2	0TF492509AA	TR,SI4925DY TP TEMIC 30V 6.1A SO-8
Q1	0TR387500AA	TR,CHIP 2SC3875S(ALY) KEC
Q100	0TR387500AA	TR,CHIP 2SC3875S(ALY) KEC
Q1101	0TR387500AA	TR,CHIP 2SC3875S(ALY) KEC
Q1101	0TR387500AA	TR,CHIP 2SC3875S(ALY) KEC
Q1102	0TR387500AA	TR,CHIP 2SC3875S(ALY) KEC
Q1103	0TR387500AA	TR,CHIP 2SC3875S(ALY) KEC
Q1200	0TR150400BA	TR,CHIP 2SA1504S(ASY) KEC
Q200	0TR387500AA	TR,CHIP 2SC3875S(ALY) KEC
Q202	0TR387500AA	TR,CHIP 2SC3875S(ALY) KEC
Q353	0TR150400BA	TR,CHIP 2SA1504S(ASY) KEC
Q402	0TR150400BA	TR,CHIP 2SA1504S(ASY) KEC

LOCA. NO	PART NO	DESCRIPTION
Q403	0TR150400BA	TR,CHIP 2SA1504S(ASY) KEC
Q404	0TR387500AA	TR,CHIP 2SC3875S(ALY) KEC
Q405	0TR387500AA	TR,CHIP 2SC3875S(ALY) KEC
Q406	0TR387500AA	TR,CHIP 2SC3875S(ALY) KEC
Q407	0TR387500AA	TR,CHIP 2SC3875S(ALY) KEC
Q501	0TR387500AA	TR,CHIP 2SC3875S(ALY) KEC
Q502	0TR150400BA	TR,CHIP 2SA1504S(ASY) KEC
Q510	0TR150400BA	TR,CHIP 2SA1504S(ASY) KEC
Q551	0TR150400BA	TR,CHIP 2SA1504S(ASY) KEC
Q602	0TR150400BA	TR,CHIP 2SA1504S(ASY) KEC
Q603	0TR150400BA	TR,CHIP 2SA1504S(ASY) KEC
Q701	0TR387500AA	TR,CHIP 2SC3875S(ALY) KEC
Q706	0TR322709AA	TR,KTC3227-Y,TP(KTC1627A),KEC
Q801	0TR387500AA	TR,CHIP 2SC3875S(ALY) KEC
Q802	0TR150400BA	TR,CHIP 2SA1504S(ASY) KEC
DIODE		
D100	0DD181009AB	DIODE,KDS181 TP KEC - 85V300MA
D1101	0DD181009AB	DIODE,KDS181 TP KEC - 85V300MA
D1102	0DD181009AB	DIODE,KDS181 TP KEC - 85V300MA
D1103	0DD181009AB	DIODE,KDS181 TP KEC - 85V300MA
D1104	0DD181009AB	DIODE,KDS181 TP KEC - 85V300MA
D1105	0DD181009AB	DIODE,KDS181 TP KEC - 85V300MA
D1106	0DD181009AB	DIODE,KDS181 TP KEC - 85V300MA
D701	0DRSA00150A	DIODE,RBV-406 BK USC 600V 4A 80VA .SEC 10MA
D702	0DD100009AM	DIODE,EU1ZV(1) TP SANKEN
D704	0DD100009AM	DIODE,EU1ZV(1) TP SANKEN
D706	0DR060009AA	DIODE,TVR06J TP GULF DO41 600V 0.6A
D707	0DRSD00091A	DIODE,SF20JC10 ST FTO220(4115) 100V 20A 200A
D710	0DR340009AA	DIODE,MBRS340 - 40V 3A 80A - 2MA
D711	0DR340009AA	DIODE,MBRS340 TP FAIRCHILD - 40V 3A 80A - 2MA
LED1	0DL200000CA	LED,SAM5670(DL-2LRG) BK Y-GREEN -
ZD1101	0DZRM00178A	DIODE,UDZS TE-17 5.1B ROHM
ZD1102	0DZRM00178A	DIODE,UDZS TE-17 5.1B ROHM
ZD202	0DZRM00178A	DIODE,UDZS TE-17 5.1B ROHM
ZD203	0DZRM00178A	DIODE,UDZS TE-17 5.1B ROHM
ZD400	0DZ330009BA	DIODE,ZENER HZT33 TAPING
ZD701	0DZ910009AJ	DIODE,MTZJ9.1B TP ROHM-K DO34 0.5W 9.1V 5UA
ZD704	0DZ110009AD	DIODE,MTZJ11B TP ROHM-K DO34 - 11V 5UA
CAPACITOR		
C10	0CE227DF618	220UF STD 16V M FL TP5
C101	0CE107BF618	100UF KME 16V M FL TP5
C1101	0CC15003G06	15PF D 3KV 10%,-10% SL FMTW
C1102	0CC15003G06	15PF D 3KV 10%,-10% SL FMTW
C1103	0CC15003G06	15PF D 3KV 10%,-10% SL FMTW
C1104	0CC15003G06	15PF D 3KV 10%,-10% SL FMTW
C1105	0CC15003G06	15PF D 3KV 10%,-10% SL FMTW
C1106	0CC15003G06	15PF D 3KV 10%,-10% SL FMTW

For Capacitor & Resistors, the characters at 2nd and 3rd digit in the P/No. means as follows;

CC, CX, CK, CN : Ceramic
CQ : Polyester
CE : Electrolytic

RD : Carbon Film
RS : Metal Oxide Film
RN : Metal Film
RF : Fusible

LOCA. NO	PART NO	DESCRIPTION
C1107	OCE4772J618	470UF KMF 35V 20% TP 5 FL
C1127	OCK105DF64A	1UF 2012 16V 20% R/TP F(Y5V)
C1128	OCK105DF64A	1UF 2012 16V 20% R/TP F(Y5V)
C113	OCE107BF618	100UF KME 16V M FL TP5
C1132	OCK105DF64A	1UF 2012 16V 20% R/TP F(Y5V)
C1132	OCK105DF64A	1UF 2012 16V 20% R/TP F(Y5V)
C1133	OCK105DF64A	1UF 2012 16V 20% R/TP F(Y5V)
C1133	OCK105DF64A	1UF 2012 16V 20% R/TP F(Y5V)
C1134	OCK105DF64A	1UF 2012 16V 20% R/TP F(Y5V)
C1134	OCK105DF64A	1UF 2012 16V 20% R/TP F(Y5V)
C1137	OCK105DF64A	1UF 2012 16V 20% R/TP F(Y5V)
C1137	OCK105DF64A	1UF 2012 16V 20% R/TP F(Y5V)
C1140	OCK225DFK4A	2.2UF 2012 16V 20%,-20% F(Y5V) R/TP
C1141	OCK225DFK4A	2.2UF 2012 16V 20%,-20% F(Y5V) R/TP
C1142	OCK225DFK4A	2.2UF 2012 16V 20%,-20% F(Y5V) R/TP
C1143	OCK225DFK4A	2.2UF 2012 16V 20%,-20% F(Y5V) R/TP
C1144	OCK225DFK4A	2.2UF 2012 16V 20%,-20% F(Y5V) R/TP
C1145	OCK225DFK4A	2.2UF 2012 16V 20%,-20% F(Y5V) R/TP
C1146	OCK225DFK4A	2.2UF 2012 16V 20%,-20% F(Y5V) R/TP
C1147	OCK225DFK4A	2.2UF 2012 16V 20%,-20% F(Y5V) R/TP
C1150	OCE4772J618	470UF KMF 35V 20% TP 5 FL
C1151	OCE4772J618	470UF KMF 35V 20% TP 5 FL
C1200	OCE227DH618	220UF STD 25V M FL TP5
C1202	OCN475FH67A	4.7UF 3225 25V 20% R/TP X5R
C1207	OCK105DF64A	1UF 2012 16V 20% R/TP F(Y5V)
C1208	OCK105DF64A	1UF 2012 16V 20% R/TP F(Y5V)
C1209	OCK105DF64A	1UF 2012 16V 20% R/TP F(Y5V)
C1210	OCK105DF64A	1UF 2012 16V 20% R/TP F(Y5V)
C1211	OCK105DF64A	1UF 2012 16V 20% R/TP F(Y5V)
C1222	OCN475FH67A	4.7UF 3225 25V 20% R/TP X5R
C1226	OCK105DF64A	1UF 2012 16V 20% R/TP F(Y5V)
C1227	OCK105DF64A	1UF 2012 16V 20% R/TP F(Y5V)
C1228	OCK105DF64A	1UF 2012 16V 20% R/TP F(Y5V)
C1229	OCK105DF64A	1UF 2012 16V 20% R/TP F(Y5V)
C1230	OCN475FH67A	4.7UF 3225 25V 20% R/TP X5R
C1231	OCK105DF64A	1UF 2012 16V 20% R/TP F(Y5V)
C1234	OCK105DF64A	1UF 2012 16V 20% R/TP F(Y5V)
C1235	OCE107DD618	100UF STD 10V M FL TP5
C13	OCE227DF618	220UF STD 16V M FL TP5
C200	OCK225DFK4A	2.2UF 2012 16V 20%,-20% F(Y5V) R/TP
C201	OCK225DFK4A	2.2UF 2012 16V 20%,-20% F(Y5V) R/TP
C209	OCE476DF618	47UF STD 16V M FL TP5
C211	OCE106DF618	10UF STD 16V M FL TP5
C212	OCE227DD618	220UF STD 10V M FL TP5
C215	OCE106DF618	10UF STD 16V M FL TP5
C216	OCE106DF618	10UF STD 16V M FL TP5
C219	OCE226DF618	22UF STD 16V M FL TP5
C220	OCE226DF618	22UF STD 16V M FL TP5
C225	OCK225DFK4A	2.2UF 2012 16V 20%,-20% F(Y5V) R/TP
C226	OCK225DFK4A	2.2UF 2012 16V 20%,-20% F(Y5V) R/TP
C289	OCE104DK618	0.1000UF STD 50V M FL TP5
C331	OCE107DF618	100UF STD 16V M FL TP5

LOCA. NO	PART NO	DESCRIPTION
C351	OCE227DF618	220UF STD 16V M FL TP5
C353	OCE475DK618	4.7UF STD 50V 20% FL TP 5
C354	OCE476DF618	47UF STD 16V M FL TP5
C356	OCE106DF618	10UF STD 16V M FL TP5
C357	OCE106DF618	10UF STD 16V M FL TP5
C362	OCE107DF618	100UF STD 16V M FL TP5
C364	OCE336DF618	33UF STD 16V M FL TP5
C380	OCE105DK618	1UF STD 50V M FL TP5
C381	OCE106DF618	10UF STD 16V M FL TP5
C383	OCE106DF618	10UF STD 16V M FL TP5
C403	OCE476DH618	47UF STD 25V 20% FL TP 5
C404	OCE108DD618	1000UF STD 10V M FL TP5
C408	OCE106DK618	10UF STD 50V M FL TP5
C410	OCE227DF618	220UF STD 16V M FL TP5
C412	OCE105DK618	1UF STD 50V M FL TP5
C413	OCK224DF56A	220000PF 2012 16V 10% R/TP X7R
C499	OCE476DK618	47UF STD 50V M FL TP5
C501	OCE107DF618	100UF STD 16V M FL TP5
C523	OCE104DK618	0.1000UF STD 50V M FL TP5
C526	OCE107DF618	100UF STD 16V M FL TP5
C541	OCE107DF618	100UF STD 16V M FL TP5
C581	OCE107DF618	100UF STD 16V M FL TP5
C613	OCE106DF618	10UF STD 16V M FL TP5
C614	OCE106DF618	10UF STD 16V M FL TP5
C616	OCE107DF618	100UF STD 16V M FL TP5
C617	OCE107BF618	100UF KME 16V M FL TP5
C617	OCE107BH618	100UF KME 25V M FL TP5
C620	OCE335DK618	3.3UF STD 50V 20% FL TP 5
C621	OCE107BF618	100UF KME 16V M FL TP5
C624	OCK224DF56A	220000PF 2012 16V 10% R/TP X7R
C625	OCK224DF56A	220000PF 2012 16V 10% R/TP X7R
C629	OCE107DF618	100UF STD 16V M FL TP5
C633	OCE107DF618	100UF STD 16V M FL TP5
C643	OCE476BF618	47UF KME TYPE 16V 20% FL TP 5
C700	181-091D	DEHR33A102KN2A 1000PF 1KV 10%,-10%
C701	OCF474285B0	0.47UF S 275V 10% PCX2 337 BULK
C703	181-120P	470 PF 4KV K JE R FL 10
C704	181-120P	470 PF 4KV K JE R FL 10
C706	OCE226BK618	22UF KME 50V M FL TP5
C707	OCE1072V610	100UF KMF 450V 20% FL BULK
C708	181-091D	DEHR33A102KN2A 1000PF 1KV 10%,-10%
C709	181-120K	2200PF 4KV M E FMTW LEAD 4.5
C710	181-120K	2200PF 4KV M E FMTW LEAD 4.5
C717	181-091D	DEHR33A102KN2A 1000PF 1KV 10%,-10%
C718	181-091D	DEHR33A102KN2A 1000PF 1KV 10%,-10%
C719	OCE227BJ618	220U KME 35V M FL TP5
C725	OCE4772J618	470UF KMF 35V 20% TP 5 FL
C726	181-091N	SL 100PF 1KV 10%,-10% R/TP TP5
C727	OCE226BK618	22UF KME 50V M FL TP5
C727	OCE226BN618	22UF KME 100V M FL TP5
C728	OCE476BK618	47UF KME 50V M FL TP5
C730	OCE4772J618	470UF KMF 35V 20% TP 5 FL

For Capacitor & Resistors, the characters at 2nd and 3rd digit in the P/No. means as follows;

CC, CX, CK, CN : Ceramic	RD : Carbon Film
CQ : Polyester	RS : Metal Oxide Film
CE : Electrolytic	RN : Metal Film
	RF : Fusible

LOCA. NO	PART NO	DESCRIPTION
C731	OCE227BJ618	220U KME 35V M FL TP5
C733	181-120N	1000PF 4KV M E FMTW LEAD4.5
C734	OCE4772J618	470UF KMF 35V 20% TP 5 FL
C743	OCE477BD618	470UF KME TYPE 10V 20% FL TP 5
C744	OCE227DK618	220UF STD 50V M FL TP5
C745	OCE477BD618	470UF KME TYPE 10V 20% FL TP 5
C746	OCE477BD618	470UF KME TYPE 10V 20% FL TP 5
C747	OCE477BD618	470UF KME TYPE 10V 20% FL TP 5
C777	181-091D	DEHR33A102KN2A 1000PF 1KV 10%,-10%
C810	OCK823DK56A	82000PF 2012 50V 10% R/TP X7R
C832	OCE107DF618	100UF STD 16V M FL TP5

COIL & TRANSFORMER

L1201	6140VR0005B	COIL,SLF7045T-330MR82 TDK 33UF SMD
L1202	6140VR0005B	COIL,SLF7045T-330MR82 TDK 34UF SMD
L1203	6140VR0005B	COIL,SLF7045T-330MR82 TDK 35UF SMD
L1204	6140VR0005B	COIL,SLF7045T-330MR82 TDK 36UF SMD
L401	0LA0272K139	INDUCTOR,27UH K 4X10.5 TP
L705	6140VR0008B	COIL,SLF12575T-150M3R2 15UH SMD
L706	6140VR0008B	COIL,SLF12575T-150M3R2 15UH SMD
T1101	6170VH0002A	TRANSFORMER,UI-11.7 860000UH 1-CH 5W TRS1002A
T1102	6170VH0002A	TRANSFORMER,UI-11.7 860000UH 1-CH 5W TRS1002A
T1103	6170VH0002A	TRANSFORMER,UI-11.7 860000UH 1-CH 5W TRS1002A
T1104	6170VH0002A	TRANSFORMER,UI-11.7 860000UH 1-CH 5W TRS1002A
T1105	6170VH0002A	TRANSFORMER,UI-11.7 860000UH 1-CH 5W TRS1002A
T1106	6170VH0002A	TRANSFORMER,UI-11.7 860000UH 1-CH 5W TRS1002A
T701	6170VMCA65A	TRANSFORMER,EER3019 450UH RZ-15/20LA70

RESISTOR

FR704	ORP0020J809	0.02 OHM 1 W 20% TA52
L502	ORRZVTA001A	MNR-14-E0A-J-101 R OHM 100 OHM 5%
L503	ORRZVTA001A	MNR-14-E0A-J-101 R OHM 100 OHM 5%
L504	ORRZVTA001A	MNR-14-E0A-J-101 R OHM 100 OHM 5%
L505	ORRZVTA001A	MNR-14-E0A-J-101 R OHM 100 OHM 5%
L506	ORRZVTA001A	MNR-14-E0A-J-101 R OHM 100 OHM 5%
L507	ORRZVTA001A	MNR-14-E0A-J-101 R OHM 100 OHM 5%
L518	ORRZVTA001A	MNR-14-E0A-J-101 R OHM 100 OHM 5%
L521	ORRZVTA001A	MNR-14-E0A-J-101 R OHM 100 OHM 5%
L522	ORRZVTA001A	MNR-14-E0A-J-101 R OHM 100 OHM 5%
L523	ORRZVTA001A	MNR-14-E0A-J-101 R OHM 100 OHM 5%
L524	ORRZVTA001A	MNR-14-E0A-J-101 R OHM 100 OHM 5%
L525	ORRZVTA001A	MNR-14-E0A-J-101 R OHM 100 OHM 5%
L526	ORRZVTA001A	MNR-14-E0A-J-101 R OHM 100 OHM 5%
R702	ORKZVTA001C	8.2M OHM 1/2 W 5% TA52 UL PILKOR
R703	ORKZVTA001K	0.47M OHM 1/2 W 5% TA52 PILKOR
R704	ORS5602K619	56K OHM 2 W 5.00% TR
R705	ORS5602K619	56K OHM 2 W 5.00% TR
R706	ORS1203K607	120K OHM 2 W 5.00% TA62
R711	ORS5602K619	56K OHM 2 W 5.00% TR
R712	ORS5602K619	56K OHM 2 W 5.00% TR
R714	ORS5602K619	56K OHM 2 W 5.00% TR
R715	180-A01E	2 W RW ROUND G 2W 0.33J TA31(63)

LOCA. NO	PART NO	DESCRIPTION
R727	ORD0472H609	47 OHM 1/2 W 5.00% TA52
R736	ORD0472H609	47 OHM 1/2 W 5.00% TA52

SWITCH

SW1101	140-313A	SWITCH,TACT 2LEAD 100G(TA) NON 5V 0.001A
SW1102	140-313A	SWITCH,TACT 2LEAD 100G(TA) NON 5V 0.001A
SW1103	140-313A	SWITCH,TACT 2LEAD 100G(TA) NON 5V 0.001A
SW1104	140-313A	SWITCH,TACT 2LEAD 100G(TA) NON 5V 0.001A
SW1105	140-313A	SWITCH,TACT 2LEAD 100G(TA) NON 5V 0.001A
SW1106	140-313A	SWITCH,TACT 2LEAD 100G(TA) NON 5V 0.001A
SW1107	140-313A	SWITCH,TACT 2LEAD 100G(TA) NON 5V 0.001A
SW1108	140-313A	SWITCH,TACT 2LEAD 100G(TA) NON 5V 0.001A

JACK

JA201	6612VCH003B	JACK,PEJ012C H=6.5 STEREO 1P W/O S/W WHITE
RJ201	6613V00008F	JACK,PMJ014F E/P(ST)+S-VHS+3P H6.5
SC204	381-091B	JACK,S-091B UGCOM SCART 21 PIN W/O BOSS

CRYSTAL & FILTER


L1	6210TCE001G	FILTER,HH-1M3216-501 CERATEC 3216MM
L101	6210TCE001G	FILTER,HH-1M3216-501 CERATEC 3216MM
L1101	6210TCE001A	FILTER,HB-1S2012-080JT CERATEC 2012MM
L1101	6210TCE001G	FILTER,HH-1M3216-501 CERATEC 3216MM
L119	6210TCE001A	FILTER,HB-1S2012-080JT CERATEC 2012MM
L1200	6210TCE001G	FILTER,HH-1M3216-501 CERATEC 3216MM
L1205	6210TCE001G	FILTER,HH-1M3216-501 CERATEC 3216MM
L1206	6210TCE001G	FILTER,HH-1M3216-501 CERATEC 3216MM
L200	6200JB8010L	FILTER,MLB-201209-1000L-N2 MAG LAYERS
L201	6200JB8010L	FILTER,MLB-201209-1000L-N2 MAG LAYERS
L202	6200JB8010L	FILTER,MLB-201209-1000L-N2 MAG LAYERS
L204	6210TCE001A	FILTER,HB-1S2012-080JT CERATEC 2012MM
L205	6210TCE001A	FILTER,HB-1S2012-080JT CERATEC 2012MM
L206	6210TCE001G	FILTER,HH-1M3216-501 CERATEC 3216MM
L207	6200JB8010L	FILTER,MLB-201209-1000L-N2 R/TP 1000OHM 350MA
L208	6210TCE001A	FILTER,HB-1S2012-080JT CERATEC 2012MM
L209	6210TCE001A	FILTER,HB-1S2012-080JT CERATEC 2012MM
L298	6210TCE001A	FILTER,HB-1S2012-080JT CERATEC 2012MM
L299	6210TCE001A	FILTER,HB-1S2012-080JT CERATEC 2012MM
L351	6210TCE001G	FILTER,HH-1M3216-501 CERATEC 3216MM
L400	6210TCE001G	FILTER,HH-1M3216-501 CERATEC 3216MM
L402	6210TCE001G	FILTER,HH-1M3216-501 CERATEC 3216MM
L501	6210TCE001G	FILTER,HH-1M3216-501 CERATEC 3216MM
L515	6210TCE001G	FILTER,HH-1M3216-501 CERATEC 3216MM
L516	6210VC0004A	FILTER,BK3216 4S600 3.2X1.6X0.8MM
L517	6210TCE001G	FILTER,HH-1M3216-501 CERATEC 3216MM
L581	6210TCE001A	FILTER,HB-1S2012-080JT CERATEC 2012MM
L601	6210TCE001G	FILTER,HH-1M3216-501 CERATEC 3216MM
L602	6210TCE001G	FILTER,HH-1M3216-501 CERATEC 3216MM
L603	6210TCE001G	FILTER,HH-1M3216-501 CERATEC 3216MM
L701	125-022K	FILTER,FERRITE NON 62MM 1UH NY 3.5X6.0MM
L702	125-022K	FILTER,FERRITE NON 62MM 1UH NY 3.5X6.0MM
L703	6210TCE001G	FILTER,HH-1M3216-501 CERATEC 3216MM

LOCA. NO	PART NO	DESCRIPTION
		

MISCELLANEOUS

LOCA. NO	PART NO	DESCRIPTION
		

CIRCUIT DIAGARM FOR ML024F CHASSIS

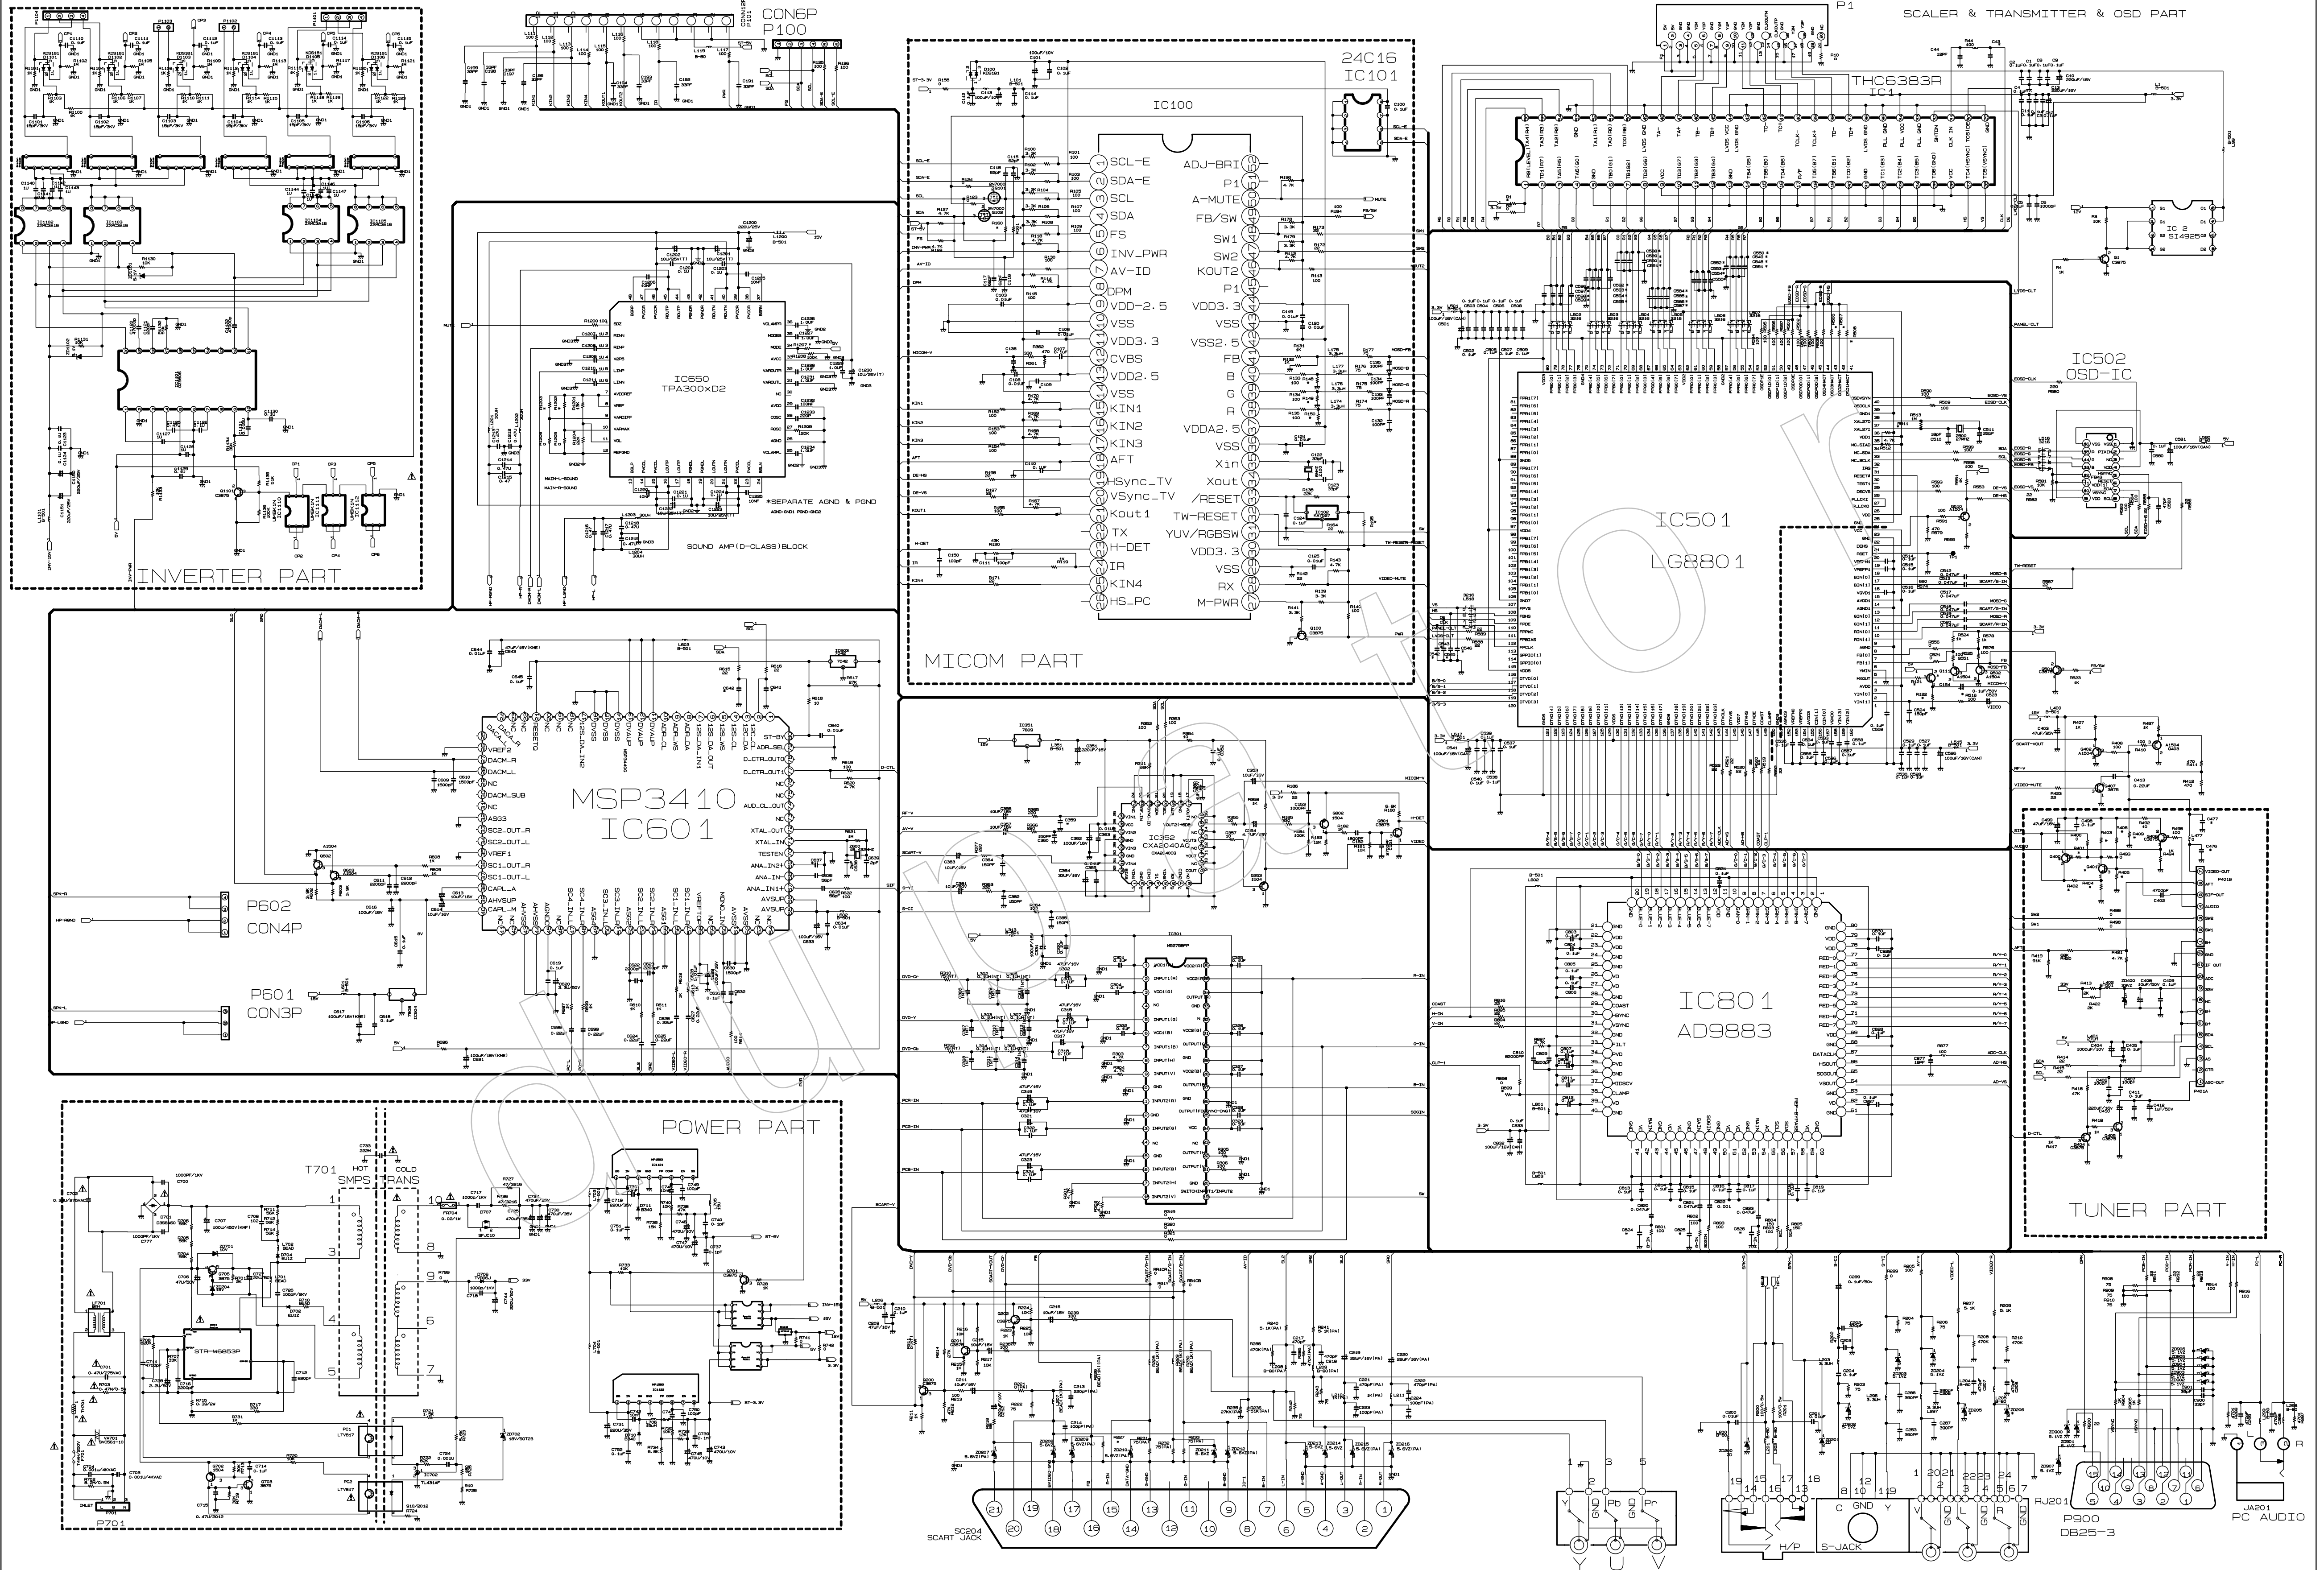

PRINTED CIRCUIT BOARD

MAIN(TOP)

MAIN(BOTTOM)

POWER

CONTROL



P/NO : 3828VD0168M

Dec, 2003
Printed in Korea