




SERVICE MANUAL

20" COLOR TELEVISION

TV-2000T MK6

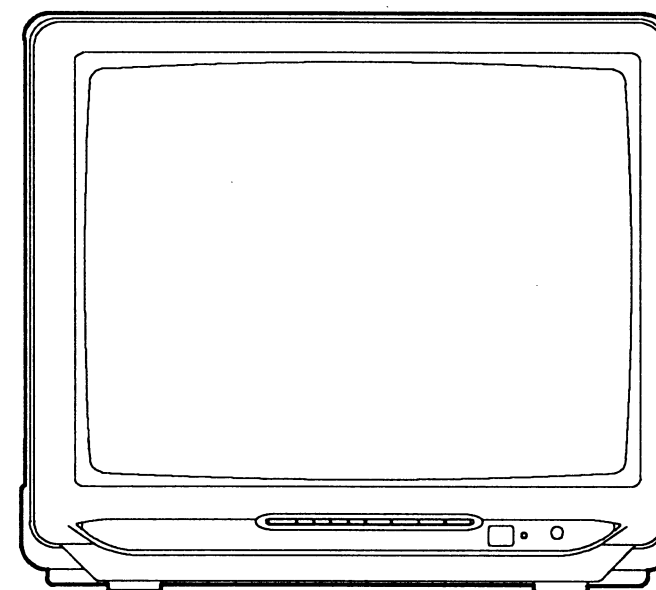

IMPORTANT SAFETY NOTICE

Proper service and repair is important to the safe, reliable operation of all Funai Equipment. The service procedures recommended by Funai and described in this service manual are effective methods of performing service operations. Some of these service special tools should be used when and as recommended.

It is important to note that this service manual contains various CAUTIONS and NOTICES which should be carefully read in order to minimize the risk of personal injury to service personnel. The possibility exists that improper service methods may damage the equipment. It also is important to understand that these CAUTIONS and NOTICES ARE NOT EXHAUSTIVE. Funai could not possibly know, evaluate and advice the service trade of all conceivable ways in which service might be done or of the possible hazardous consequences of each way. Consequently, Funai has not undertaken any such broad evaluation. Accordingly, a servicer who uses a service procedure or tool which is not recommended by Funai must first use all precautions thoroughly so that neither his safety nor the safe operation of the equipment will be jeopardized by the service method selected.

TABLE OF CONTENTS

General Specifications	1-1	Waveform Photogaraphs	10-1
Performance Specifications	2-1	Voltage Charts	11-1
Important Safety Precautions	3-1	Wiring Diagram	12-1
Operating Controls and Functions	4-1	Cabinet Exploded View	13-1
Remote Control Operation	5-1	Packing Exploded View	14-1
Disassembly Instructions	6-1	Mechanical Parts List	15-1
Electrical Adjustment Instructions	7-1	Electrical Parts List	16-1
Block Diagram	8-1		
Schematic Diagram / P.C.B. and Test Points	9-1		

GENERAL SPECIFICATIONS *

FEATURE and SPECIFICATIONS

Color System:	PAL - B/G, SECAM - B/G, D/K NTSC 3.58/4.43MHz (Video In only)
Tuning System:	Voltage Synthesized
Receivable Channels:	VHF-L; R1~R5 / - OIRT ch + CCIR ch - E2~E4 ch (X~S1 ch) VHF-H; R6~R12 / E5~E12 ch (S2~S20 ch) UHF; 21~69 ch CATV (OSCAR ch)
Number of Preset:	Up to 50
Antenna Impedance:	UHF / VHF 75Ω, Unbalanced
Picture Tube:	14"
Picture Control:	Color, Brightness, (Remote) Contrast and Video mode (Sharp/Soft)
Picture Control Memory:	Standard - Select (Remote)
Speaker:	77mm, Round Type, 8Ω
Output Power:	1W, 10% THD
Other Features:	Automatic Channel Preset Automatic Degaussing
Power Source:	220V, 50Hz AC
Power Consumption:	70W
Cabinet Size:	364(W)x355(D)x317(H) mm (Approx.)
Weight:	9Kg (Approx.)
Regulations:	IEC-65 Passable

JACK and TERMINALS

UHF/VHF Antenna:	IEC jack (75Ω)
Video In:	BNC jack
Audio In:	RCA jack
Earphone:	ø3.5mm

CONTROL and SWITCHES

Power:	Push (Front)
Channel Up / Down:	Push (Front)
Volume Up / Down:	Push (Front)
Tuning Up / Down:	Push (Front)
Program:	Push (Front)
Auto Memo / Band:	Push (Front)
Remote Control:	1~9, Display (31keys) Previous, 0/AV Red, Green, Yellow, Cyan Text/Mix, Index, Subcode Update, Reveal, Hold Expand, Sleep Picture Select (Bright/Contrast/ Color/Video Mode) Standby, Mute Channel & Page Up/Down Control & Volume Up/Down

DISPLAY

On Screen Display:	Channel Volume Brightness Color Contrast Sharp-Soft Sleep Timer (10~90 Minute) Tuning Indicator Band Position
LED Indicator:	LED (Red)

* When turning on the power, the stand-by LED will turn off.

ACCESSORIES

Remote Control Transmitter	
Battery:	R03x2
Rod Antenna	
Owner's Manual	

* Specifications are subject to change without notice.

PERFORMANCE SPECIFICATIONS

< Tuner >

ANT. Input ----- 75Ω Unbal., IEC connector
Reference Level ----- 300mVp-p at Video Output
Test Input Signal ----- 400Hz 30% modulation

Description	Condition	Unit	Nominal	Limit
1. Peak Picture Sens	VHF	dBμV	20	30
	UHF	dBμV	30	40
2. AFT Pull In Range (80dBμ input)	—	MHz	± 1.0	± 0.7
3. Intermediate Freq.	Picture	MHz	38.0	—
	Sound	MHz	31.5 (D/K)	—
	Sound	MHz	32.5 (B/G)	—
4. Intercarrier Freq.	—	MHz	6.5 (D/K)	—
	—	MHz	5.5 (B/G)	—

< Deflection >

Description	Condition	Unit	Nominal	Limit
1. Deflection Freq.	Horizontal (PAL/SECAM)	KHz	15.625	—
		KHz	15.75	—
	Vertical (PAL/SECAM)	Hz	50	—
		Hz	60	—
2. Linearity	Horizontal	%	—	± 15
	Vertical	%	—	± 15
3. High Voltage	—	KV	23	—

< Video & Chroma>

Description	Condition	Unit	Nominal	Limit
1. Misconvergence	Center	mm	—	0.4
	Side	mm	—	2.0
	Corner	mm	—	1.5
2. Over Scan	Horizontal	%	10	—
	Vertical	%	10	—
3. Color Temperature	—	K	8000K-10MPCD	—
4. Resolution	Horizontal	Line	300	—
	Vertical	Line	300	—
5. Brightness	APL 100%	Ft-L	45	35

<Audio>

All items are measured across 8Ω resistor at speaker output terminal.

Description	Condition	Unit	Nominal	Limit
1. Audio Output Power	10% THD	W	1.2	0.8
2. Audio Distortion	500mW	%	2	5
3. Audio Freq. Response	−6dB	Hz	—	100~6K

IMPORTANT SAFETY PRECAUTIONS

Prior to shipment from the factory, our products are strictly inspected for recognized product safety and electrical codes of the countries in which they are to be sold. However, in order to maintain such compliance, it is equally important to implement the following precautions when a set is being serviced.

Safety Precautions for TV Circuit

1. **Before returning an instrument to the customer**, always make a safety check of the entire instrument, including, but not limited to, the following items:


a. Be sure that no built-in protective devices are defective and have been defeated during servicing. (1) Protective shields are provided on this chassis to protect both the technician and the customer. Correctly replace all missing protective shields, including any removed for servicing convenience. (2) When reinstalling the chassis and/or other assembly in the cabinet, be sure to put back in place all protective devices, including but not limited to, nonmetallic control knobs, insulating fishpapers, adjustment and compartment covers/shields, and isolation resistor/capacitor networks. **Do not operate this instrument or permit it to be operated without all protective devices correctly installed and functioning. Servicers who defeat safety features or fail to perform safety checks may be liable for any resulting damage.**

b. Be sure that there are no cabinet openings through which an adult or child might be able to insert their fingers and contact a hazardous voltage. Such openings include, but are not limited to, (1) spacing between the picture tube and the cabinet mask, (2) excessively wide cabinet ventilation slots, and (3) an improperly fitted and/or incorrectly secured cabinet back cover.

c. **Antenna Cold Check** - With the instrument AC plug removed from any AC source, connect an electrical jumper across the two AC plug prongs. Place the instrument AC switch in the on position. Connect one lead of an ohmmeter to the AC plug prongs tied together and touch the other ohmmeter lead in turn to each tuner antenna input exposed terminal screw and, if applicable, to the coaxial connector. If the measured resistance is less than 1.0 megohm or greater than 5.2 megohm, an abnormality exists that must be corrected before the instrument is returned to the customer.

Repeat this test with the instrument AC switch in the off position.

d. **Leakage Current Hot Check** - With the instrument completely reassembled, plug the AC line cord directly into a AC outlet. (Do not use an isolation transformer during this test.) Use a leakage current tester. With the instrument AC switch first in the on position and then in the off position, measure from a known earth ground (metal water pipe, conduit, etc.) to all exposed metal parts of the instrument (antennas, handle brackets, metal cabinet, screw heads, metallic overlays, control shafts, etc.), especially any exposed metal parts that offer an electrical return path to the chassis. Any current measured must not exceed 0.5 milli-ampere. Reverse the instrument power cord plug in the outlet and repeat the test.

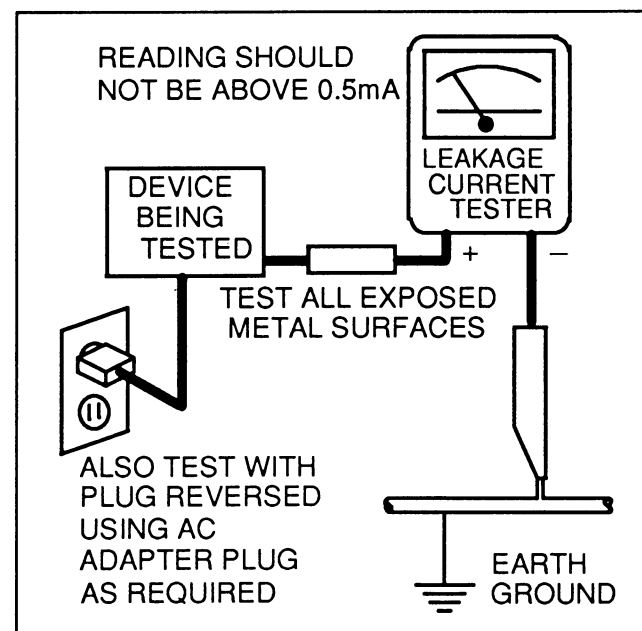

ANY MEASUREMENTS NOT WITHIN THE LIMITS SPECIFIED HEREIN INDICATE A POTENTIAL SHOCK HAZARD THAT MUST BE ELIMINATED BEFORE RETURNING THE INSTRUMENT TO THE CUSTOMER OR BEFORE CONNECTING THE ANTENNA OR ACCESSORIES.

e. **X-Radiation and High Voltage Limits** - Because the picture tube is the primary potential source of X-radiation in solid-state TV receivers, it is specially constructed to prohibit X-radiation emissions. For continued X-radiation protection, the replacement picture tube must be the same type as the original. Also, because the picture tube shields and mounting hardware perform an X-radiation protection function, they must be correctly in place. High voltage must be measured each time servicing is performed that involves B+, horizontal deflection or high voltage. Correct operation of the X-radiation protection circuits also must be reconfirmed each time they are serviced. (X-radiation protection circuits also may be called "horizontal disable" or "hold down.") Read and apply the high voltage limits and, if the chassis is so equipped, the X-radiation protection circuit specifications given on instrument labels and in the Product Safety & X-Radiation Warning note on the service data chassis schematic. High voltage is maintained within specified limits by close tolerance safety-related components/adjustments in the high-voltage circuit. If high voltage exceeds specified limits, check each component specified on the chassis schematic and take corrective action.

2. Read and comply with all caution and safety-related notes on or inside the receiver cabinet, on the receiver chassis, or on the picture tube.

3. **Design Alteration Warning** - Do not alter or add to the mechanical or electrical design of this TV receiver. Design alterations and additions, including, but not limited to circuit modifications and the addition of items such as auxiliary audio and/or video output connections, might alter the safety characteristics of this receiver and create a hazard to the user. Any design alterations or additions will void the manufacturer's warranty and may make you, the servicer, responsible for personal injury or property damage resulting therefrom.

4. **Picture Tube Implosion Protection Warning** - The picture tube in this receiver employs integral implosion protection. For continued implosion protection, replace the picture tube only with one of the same type number. Do not remove, install, or otherwise handle the picture tube in any manner without first putting on shatterproof goggles equipped with side shields. People not so equipped must be kept safely away while picture tubes are handled. Keep the picture tube away from your body. Do not handle

the picture tube by its neck. Some "in-line" picture tubes are equipped with a permanently attached deflection yoke; because of potential hazard, do not try to remove such "permanently attached" yokes from the picture tube.

5. Hot Chassis Warning -

a. Some TV receiver chassis are electrically connected directly to one conductor of the AC power cord and may be safety-serviced without an isolation transformer only if the AC power plug is inserted so that the chassis is connected to the ground side of the AC power source. To confirm that the AC power plug is inserted correctly, with an AC voltmeter, measure between the chassis and a known earth ground. If a voltage reading in excess of 1.0V is obtained, *remove and reinsert the AC power plug in the opposite polarity and again measure the voltage potential between the chassis and a known earth ground.

b. Some TV receiver chassis have a circuit which obtain voltage about 70% of AC voltage between chassis and earth ground regardless of the AC plug polarity. This chassis can be safety-serviced only with an isolation transformer inserted in the power line between the receiver and the AC power source, for both personnel and test equipment protection.

c. Some TV receiver chassis have a secondary ground system in addition to the main chassis ground. This secondary ground system is not isolated from the AC power line. The two ground systems are electrically separated by insulation material that must not be defeated or altered.

Note: * In case unit has no polarity AC plug only.

6. Observe original lead dress. Take extra care to assure correct lead dress in the following areas: a. near sharp edges, b. near thermally hot parts-be sure that leads and components do not touch thermally hot parts, c. the AC supply, d. high voltage, and e. antenna wiring. Always inspect in all areas for pinched, out of place, or frayed wiring. Check AC power cord for damage.

7. Components, parts, and/or wiring that appear to have overheated or are otherwise damaged should be replaced with components, parts, or wiring that meet original specifications. Additionally, determine the cause of overheating and/or damage and, if necessary, take corrective action to remove any potential safety hazard.

8. **Product Safety Notice** - Some electrical and mechanical parts have special safety-related characteristics which are often not evident from visual

inspection, nor can the protection they give necessarily be obtained by replacing them with components rated for higher voltage, wattage, etc.. Parts that have special safety characteristics are identified by a (Δ) on schematics and in parts lists. Use of a substitute replacement that does not have the same safety characteristics as the recommended replacement part might create shock, fire, and/or other hazards. The Product's Safety is under review continu-

Precautions during Servicing

- A. Parts identified by the (Δ) symbol are critical for safety.
Replace only with part number specified.
- B. In addition to safety, other parts and assemblies are specified for conformance with regulations applying to spurious radiation. These must also be replaced only with specified replacements.
Examples: RF converters, RF cables, noise blocking capacitors, and noise blocking filters, etc.
- C. Use specified internal wiring. Note especially:
 - 1) Wires covered with PVC tubing
 - 2) Double insulated wires
 - 3) High voltage leads
- D. Use specified insulating materials for hazardous live parts. Note especially:
 - 1) Insulation Tape
 - 2) PVC tubing
 - 3) Spacers
 - 4) Insulators for transistors.
- E. When replacing AC primary side components (transformers, power cord, etc.), wrap ends of wires securely about the terminals before soldering.
- F. Observe that the wires do not contact heat producing parts (heatsinks, oxide metal film resistors, fusible resistors, etc.)
- G. Check that replaced wires do not contact sharp edged or pointed parts.

ously and new instructions are issued whenever appropriate. Prior to shipment from the factory, our products are strictly inspected to confirm with the recognized product safety and electrical codes of the countries in which they are to be sold. However, in order to maintain such compliance, it is equally important to implement the following precautions when a set is being serviced.

- H. When a power cord has been replaced, check that 10-15 kg of force in any direction will not loosen it.
- I. Also check areas surrounding repaired locations.
- J. Use care that foreign objects (screws, solder droplets, etc.) do not remain inside the set.
- K. Crimp type wire connector
When replacing the power transformer in sets where the connections between the power cord and power transformer primary lead wires are performed using crimp type connectors, in order to prevent shock hazards, perform carefully and precisely the following steps.
Replacement procedure
 - 1) Remove the old connector by cutting the wires at a point close to the connector.
 - Important: Do not re-use a connector (discard it).
 - 2) Strip about 15 mm of the insulation from the ends of the wires. If the wires are stranded, twist the strands to avoid frayed conductors.
 - 3) Align the lengths of the wires to be connected. Insert the wires fully into the connector.
 - 4) Use the crimping tool to crimp the metal sleeve at the center position. Be sure to crimp fully to the complete closure of the tool.
- L. When connecting or disconnecting the VCR connectors, first, disconnect the AC plug from AC supply socket.

Safety Check after Servicing

Examine the area surrounding the repaired location for damage or deterioration. Observe that screws, parts and wires have been returned to original positions. Afterwards, perform the following tests and confirm the specified values in order to verify compliance with safety standards.

1. Clearance Distance

When replacing primary circuit components, confirm specified clearance distance (d) and (d') between soldered terminals, and between terminals and surrounding metallic parts. (See Fig. 1)

Table 1 : Ratings for selected area

AC Line Voltage	Region	Clearance Distance (d) (d')
200 to 240 V	Europe	$\geq 4\text{mm (d)}$
	Australia	$\geq 6\text{mm (d')}$

Note: This table is unofficial and for reference only. Be sure to confirm the precise values.

2. Leakage Current Test

Confirm specified (or lower) leakage current between B (earth ground, power cord plug prongs) and externally exposed accessible parts (RF terminals, antenna terminals, video and audio input and output terminals, microphone jacks, earphone jacks, etc.).

Measuring Method : (Power ON)

Insert load Z between B (earth ground, power cord plug prongs) and exposed accessible parts. Use an AC voltmeter to measure across both terminals of load Z. See Fig. 2 and following table.

Table 2 : Leakage current ratings for selected areas

AC Line Voltage	Region	Load Z	Leakage Current (i)	Earth Ground (B) to:
200 to 240 V	Europe Australia	2k Ω RES. in connected	$i \leq 0.7\text{mA rms}$ $i \leq 2\text{mA dc}$	Antenna terminals
		50k Ω RES. in connected	$i \leq 0.7\text{mA rms}$ $i \leq 2\text{mA dc}$	Other terminals

Note: This table is unofficial and for reference only. Be sure to confirm the precise values.

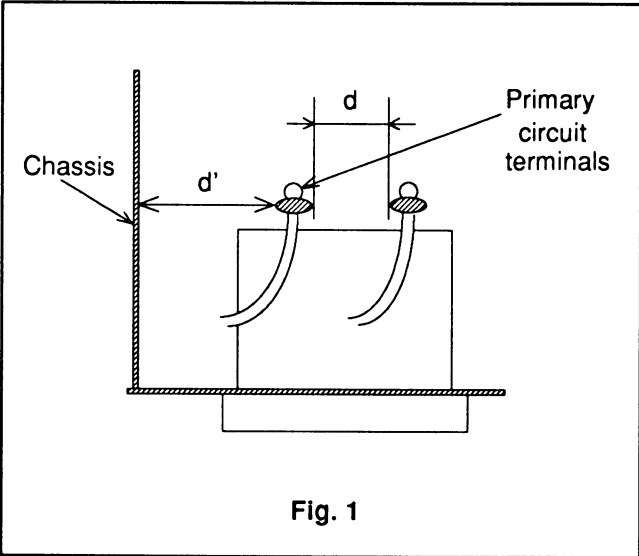


Fig. 1


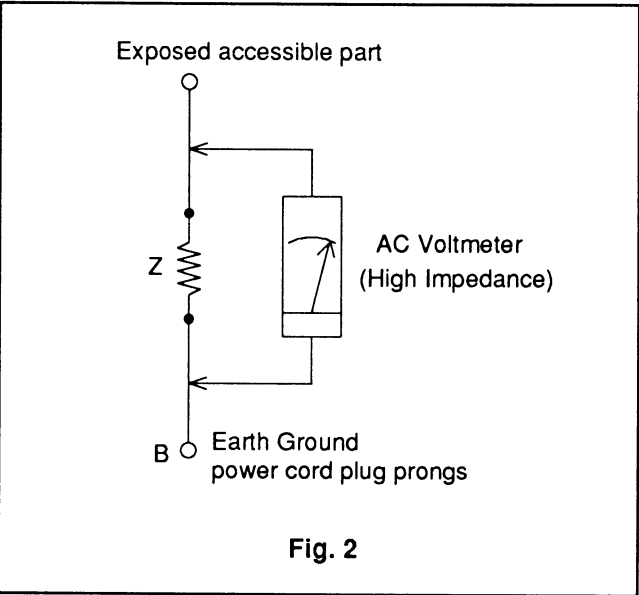



Fig. 2

OPERATING CONTROLS AND FUNCTIONS

—FRONT VIEW—

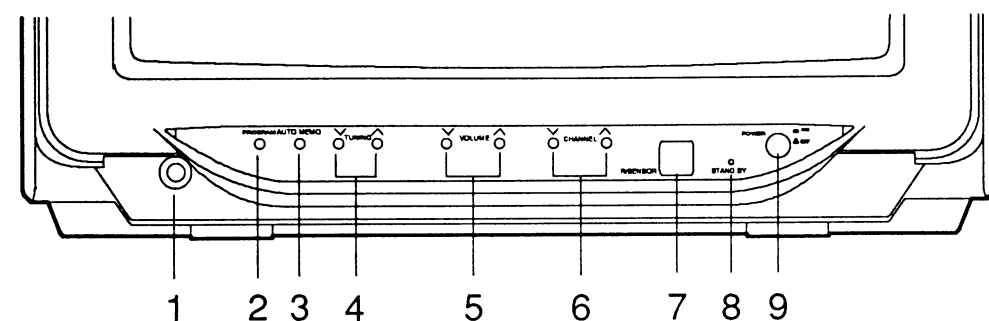

—REAR VIEW—

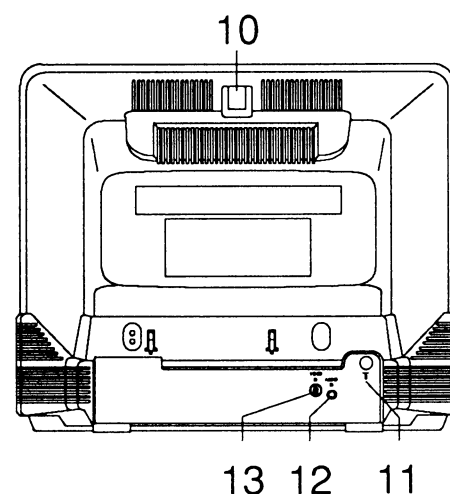


- | | |
|--|--|
| <p>1 EARPHONE jack— To connect earphones (not supplied) for personal listening.</p> <p>2 PROGRAM button— Press to set program mode.</p> <p>3 AUTO MEMO. button— Press to preset the tuner memories automatically.</p> <p>4 TUNING $\nabla/\wedge$ buttons— Press to tune the receiving channel.</p> <p>5 VOLUME $\nabla/\wedge$ buttons— Press to control the volume.</p> <p>6 CHANNEL $\nabla/\wedge$ buttons— Press to select the channel.</p> <p>7 R/SENSOR window— Receives the infrared control signals from the remote control unit.</p> | <p>8 STAND BY indicator— Lights when power is connected and lights off when POWER button is pressed.</p> <p>9 POWER button— To turn the unit on and off.</p> <p>10 Antenna holder— Insert Rod Antenna.</p> <p>11 VHF/UHF/antenna terminal— Connect a VHF/UHF antenna (75 ohm).</p> <p>12 AUDIO IN terminal— Connect to the audio output of the external audio component.</p> <p>13 VIDEO IN terminal— Connected to the video output.</p> |
|--|--|

REMOTE CONTROL OPERATION


You can operate your functions from the Remote Control (included).

HOW TO USE THE REMOTE CONTROL



- 1 NUMBER buttons**—Press two digits to directly access any channel you choose. For example, press "0" then "6" for channel 6, or press "1" then "3" for channel 13.
- 2 RED, GREEN, YELLOW, CYAN button**—For use teletext operation.
- 3 TEXT/MIX button**—For use Teletext operation.
- 4 INDEX button**—For use Teletext operation.
- 5 UP DATE button**—For use Teletext operation.
- 6 REVEAL button**—For use Teletext operation.
- 7 EXPAND button**—For use Teletext operation.
- 8 SLEEP button**—Press to select the sleep function. And then, press CONT " $\blacktriangle$ " (or " $\blacktriangledown$ ") within a few seconds for time select.

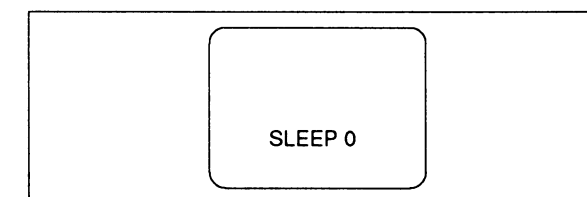


- 9 STANDBY button**— To turn the unit on and off.
- 10 MUTE button**— Press to mute sound. Press again to resume sound. To release mute mode, press VOL or MUTE button.

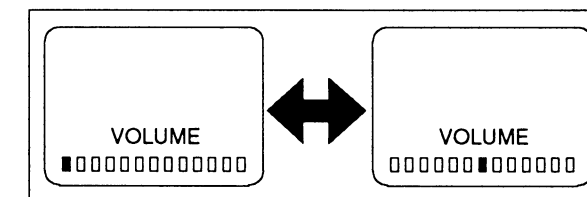


- 11 CONT " $\blacktriangle$ " (or " $\blacktriangledown$ ") buttons**— Press to set the hours (or minutes) in timer function, or press to increase (or decrease) picture control using picture control functions.
- VOL " $\blacktriangle$ " (or " $\blacktriangledown$ ") buttons**— Press to control the volume in TV mode.

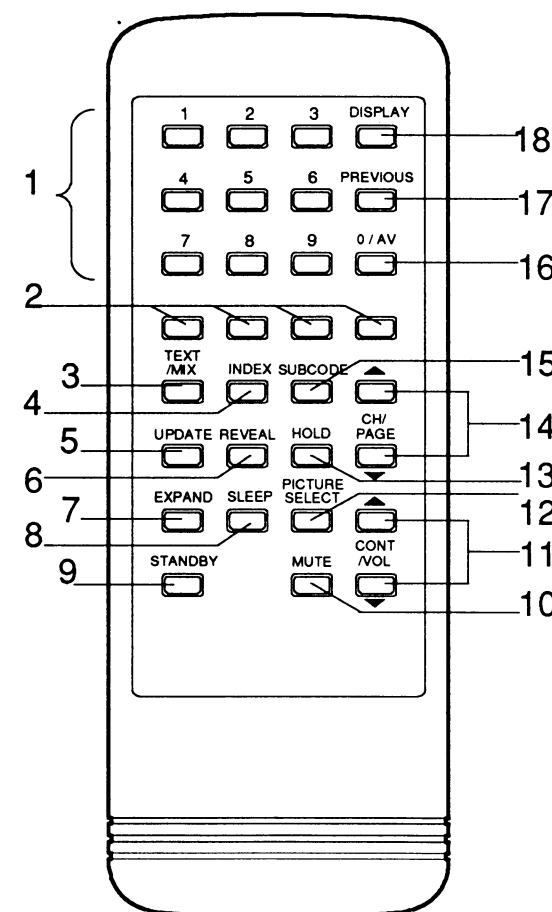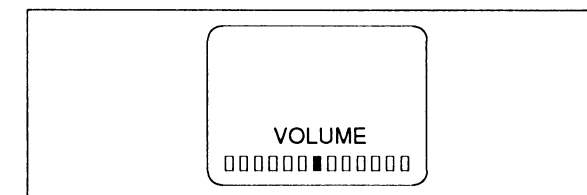


- 12 PICTURE SELECT button**– Press to select the picture adjustment function for contrast, brightness, color, sharpness. And then, press PICTURE SELECT button within a few seconds for next function or CONT "▲" (or "▼") within a few seconds for picture control.

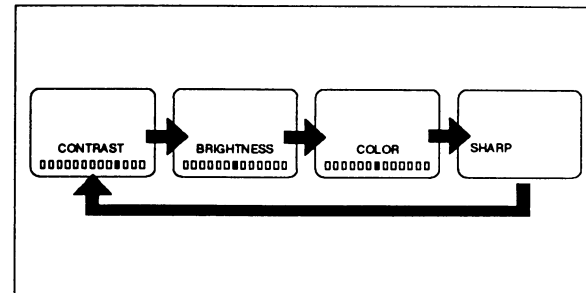

- 13 HOLD button**–For use Teletext operation.
14 CHANNEL buttons– Press to up (higher) or down (lower) positions when TV mode selected.
PAGE "▲" ("▼") buttons–For use Teletext operation.
15 SUBCODE–For use Teletext operation.
16 0/AV button– Press to select TV or VCR mode. (For example, press "0" then "0" for VCR mode)
17 PREVIOUS button–Press to call previous received channel in TV mode.
18 DISPLAY button–Press to display the position number on the screen. Press again, display disappears.
[TV mode]

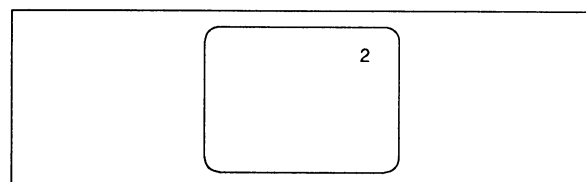


[VCR mode]

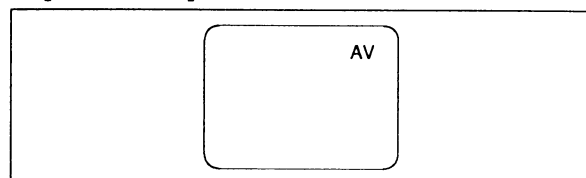


INSTALLING THE BATTERIES


- 1**
Slide the battery compartment cover on the remote unit in the direction of the arrow.

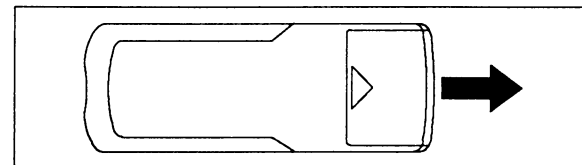

- 2**
Insert 2 "R03" penlight batteries into battery compartment in the direction as indicated by the polarity (+ / -) markings. Batteries installed with incorrect polarity may damage the remote unit.

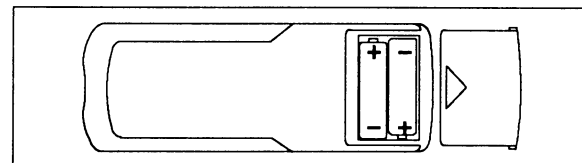

- 3**
Replace the cover.

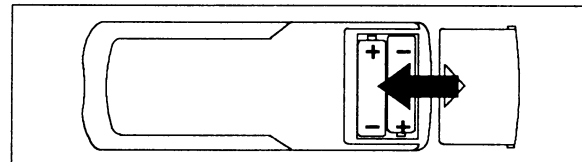


DISASSEMBLY INSTRUCTIONS

General Note: "P.C.B." is abbreviation of "Printed Circuit Board".

1. DISASSEMBLY FLOW CHART

This flow chart indicates the disassembly steps of the cabinet parts and P.C.B. in order to gain access to item(s) to be serviced. When reassembling, perform the step(s) in the reverse order. Bend, route and dress the cables as they were originally.

Caution ! : When removing the CRT, make sure to discharge Anode Lead of the CRT. Use the CRT Ground Wire to discharge the CRT before removing the Anode Cap.

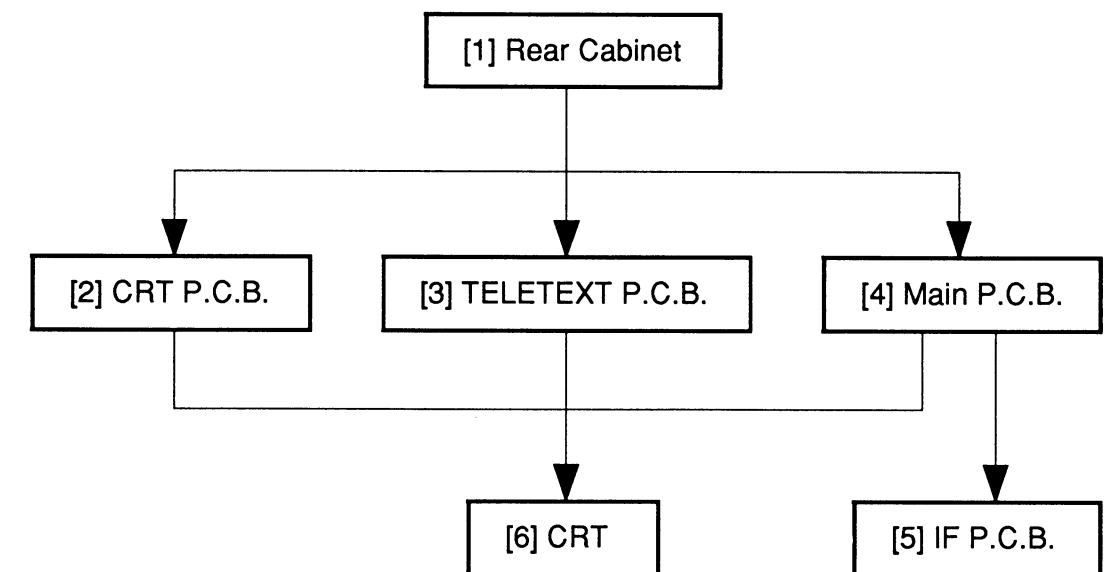

2. DISASSEMBLY METHOD



STEP / LOC. NO.	PART	REMOVAL		
		FIG. NO.	REMOVE / *UNLOCK / RELEASE / UNPLUG / UNCLAMP / DESOLDER	NOTE
[1]	Rear Cabinet	CAB1 CAB2	L2 (4pcs)	1
[2]	CRT P.C.B.	CAB4 CAB5	CN601, CN602, CN603, CN604 FOCUS WIRE, SCREEN WIRE	2
[3]	Teletext P.C.B.	CAB3 CAB5	CN701, CN702	3
[4]	Main P.C.B.	CAB3 CAB5	CN201, CN202, CN203, CN204, CN501 ANODE CAP, FOCUS WIRE, SCREEN WIRE	4
[5]	IF P.C.B.	CAB3	CN101, CN102	5
[6]	CRT	CAB4	B2 (4pcs)	6



Reference <Notes> in Table

- 1. (1) Remove 4 screws (L2) and slide the Rear Cabinet backward.
- 2. (1) If not already removed, first remove the Rear Cabinet.
(2) Remove all relative wires, then pull the CRT P.C.B. backward.
- 3. (1) If not already removed, first remove the Rear Cabinet.
(2) Remove all relative wires, then pull the Teletext P.C.B. backward.
- 4. (1) If not already removed, first remove the Rear Cabinet.
(2) Remove all relative wires on the Main P.C.B. and remove the Anode Cap, then slide the main P.C.B. backward.
- 5. (1) If not already removed, first remove the Rear Cabinet.
(2) Desolder CN101 and CN102, then remove the IF P.C.B. from the Main P.C.B..

Caution !
Discharge Anode Lead of the CRT with the CRT Ground Wire before removing the Anode Cap.

- 6. (1) If not already removed, first remove the Rear Cabinet and Main P.C.B..
(2) Remove 4 screws (B2), then the CRT can be removed.

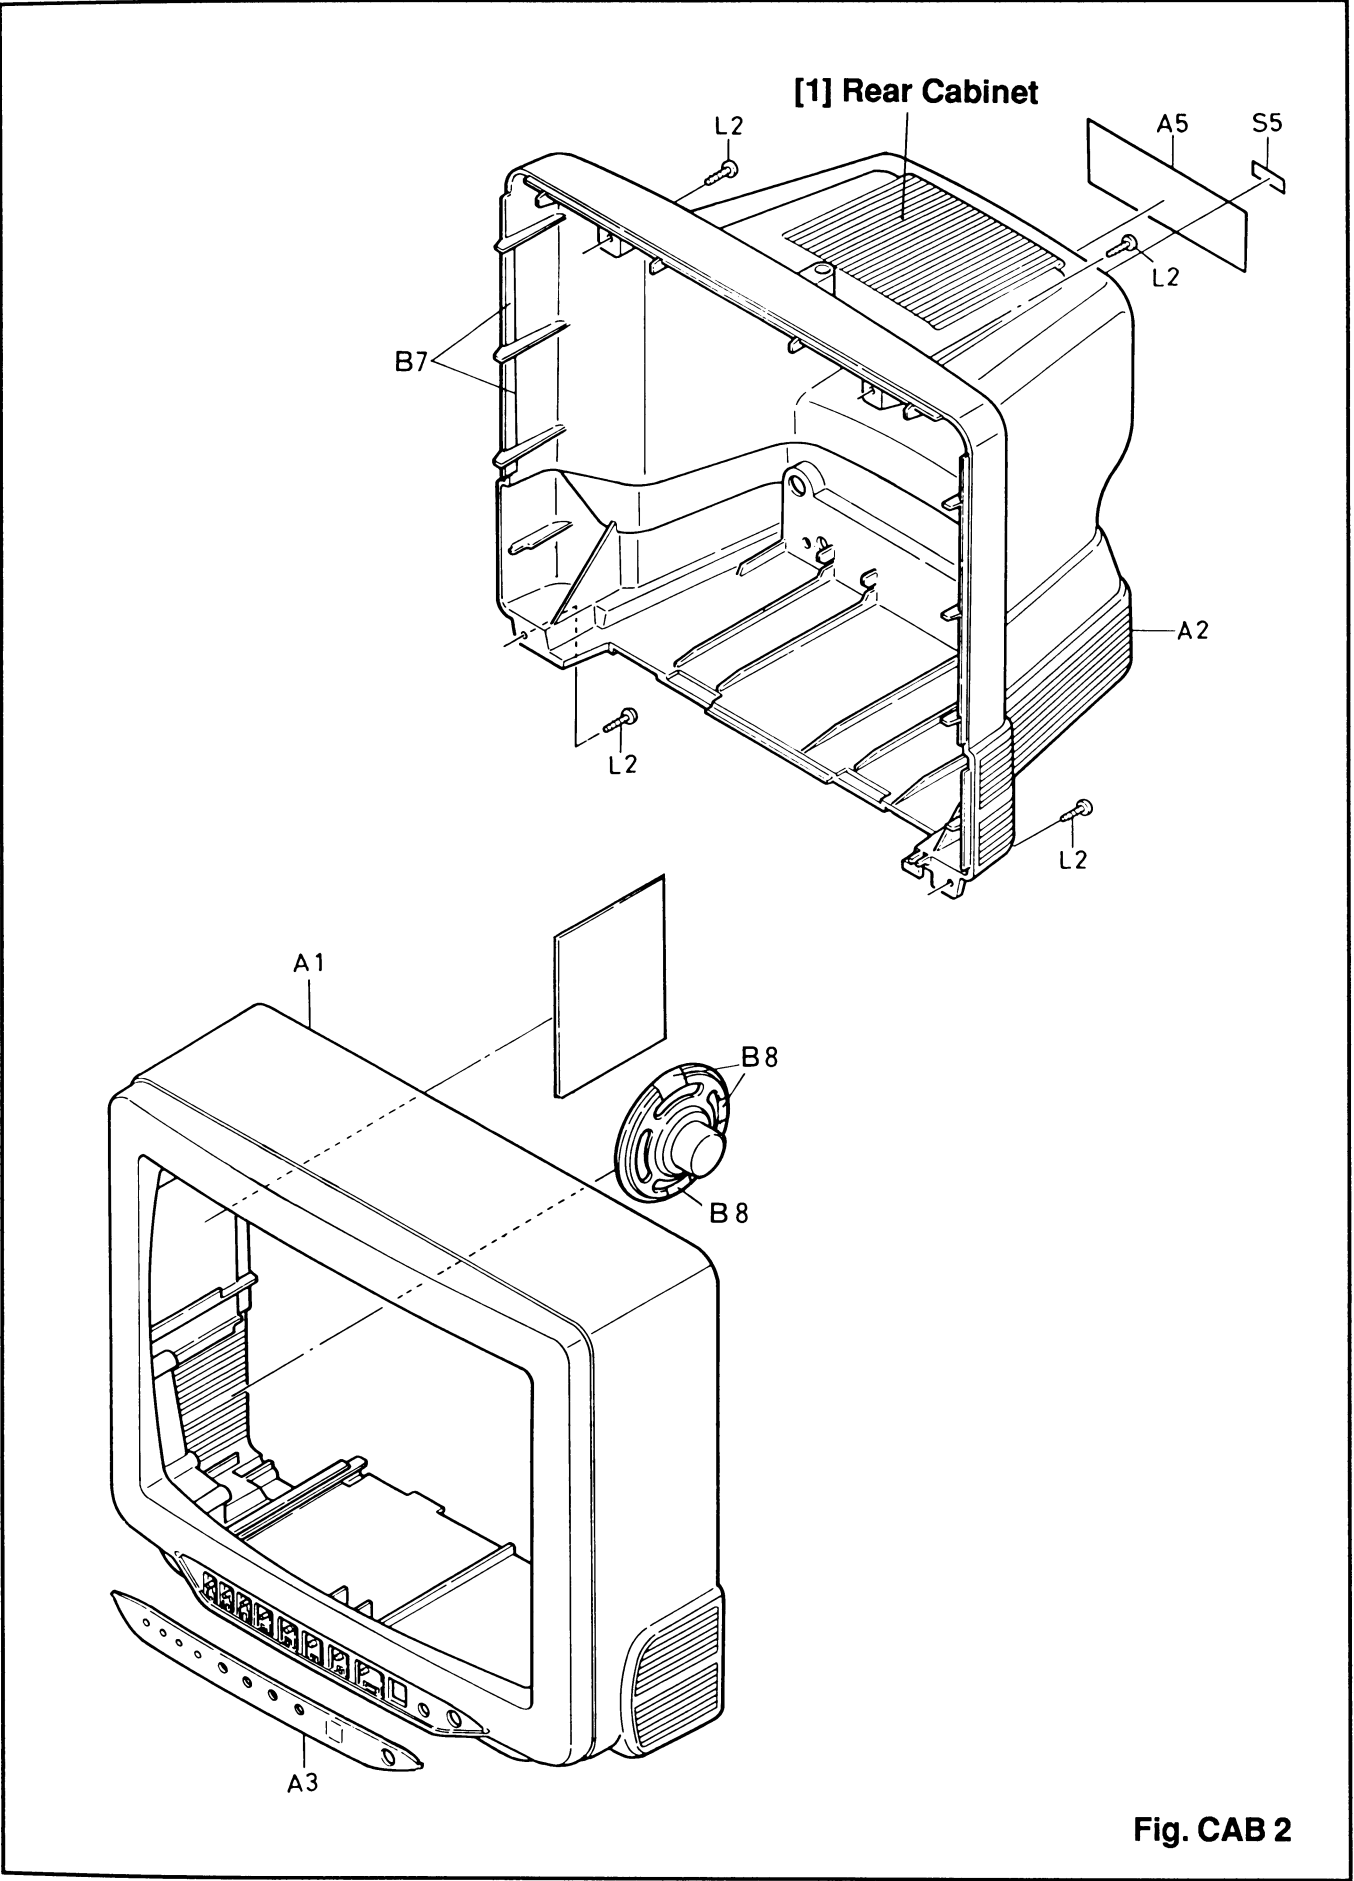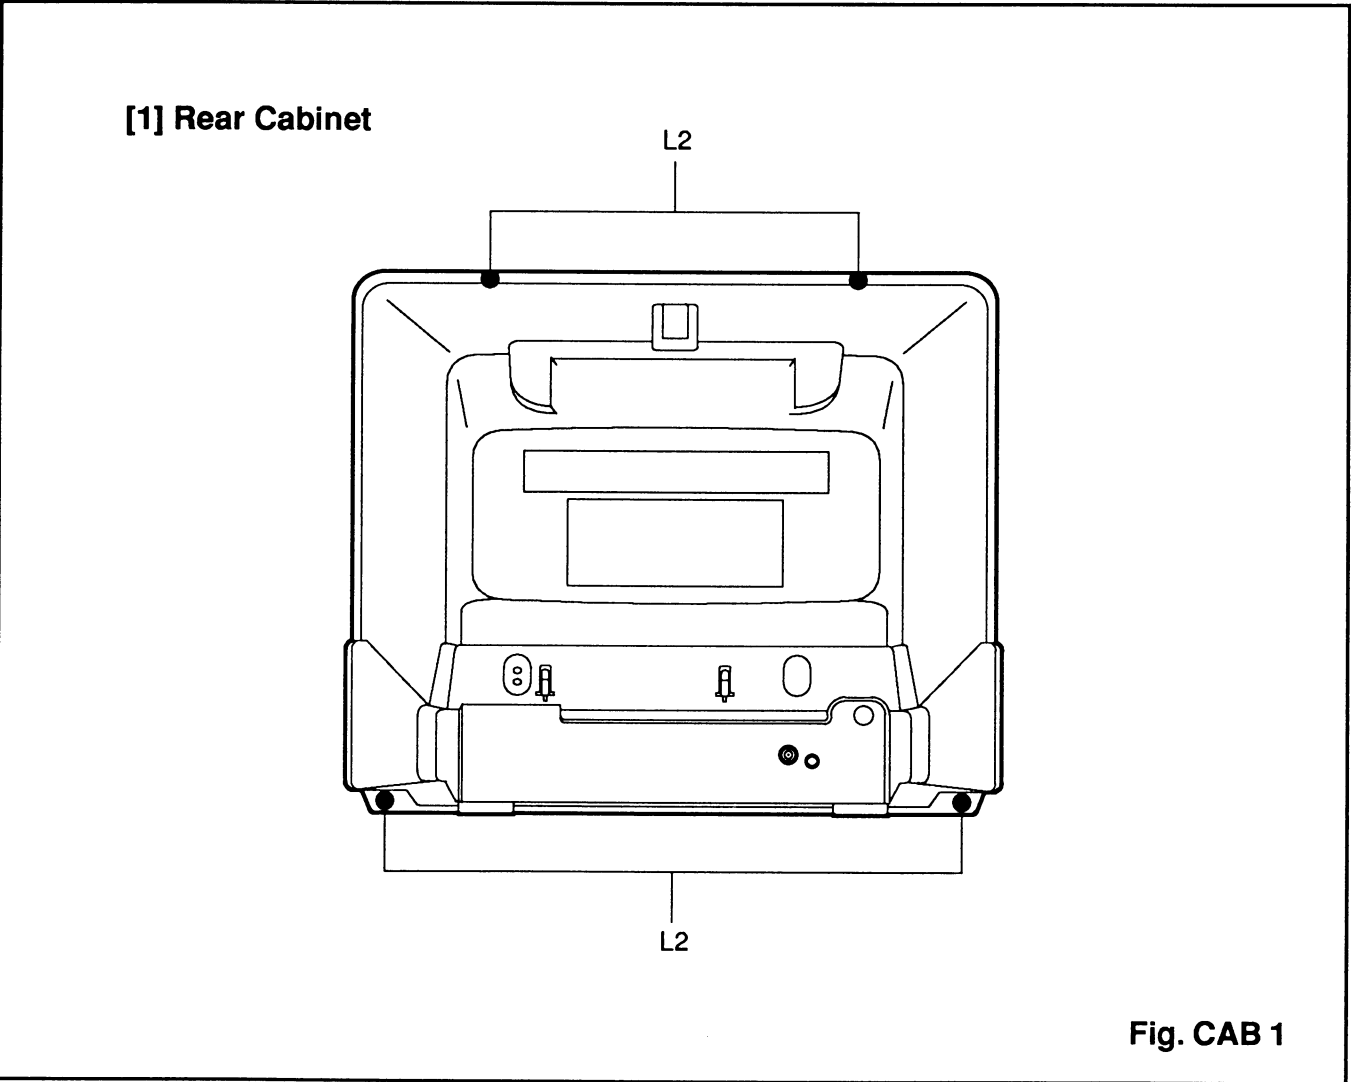

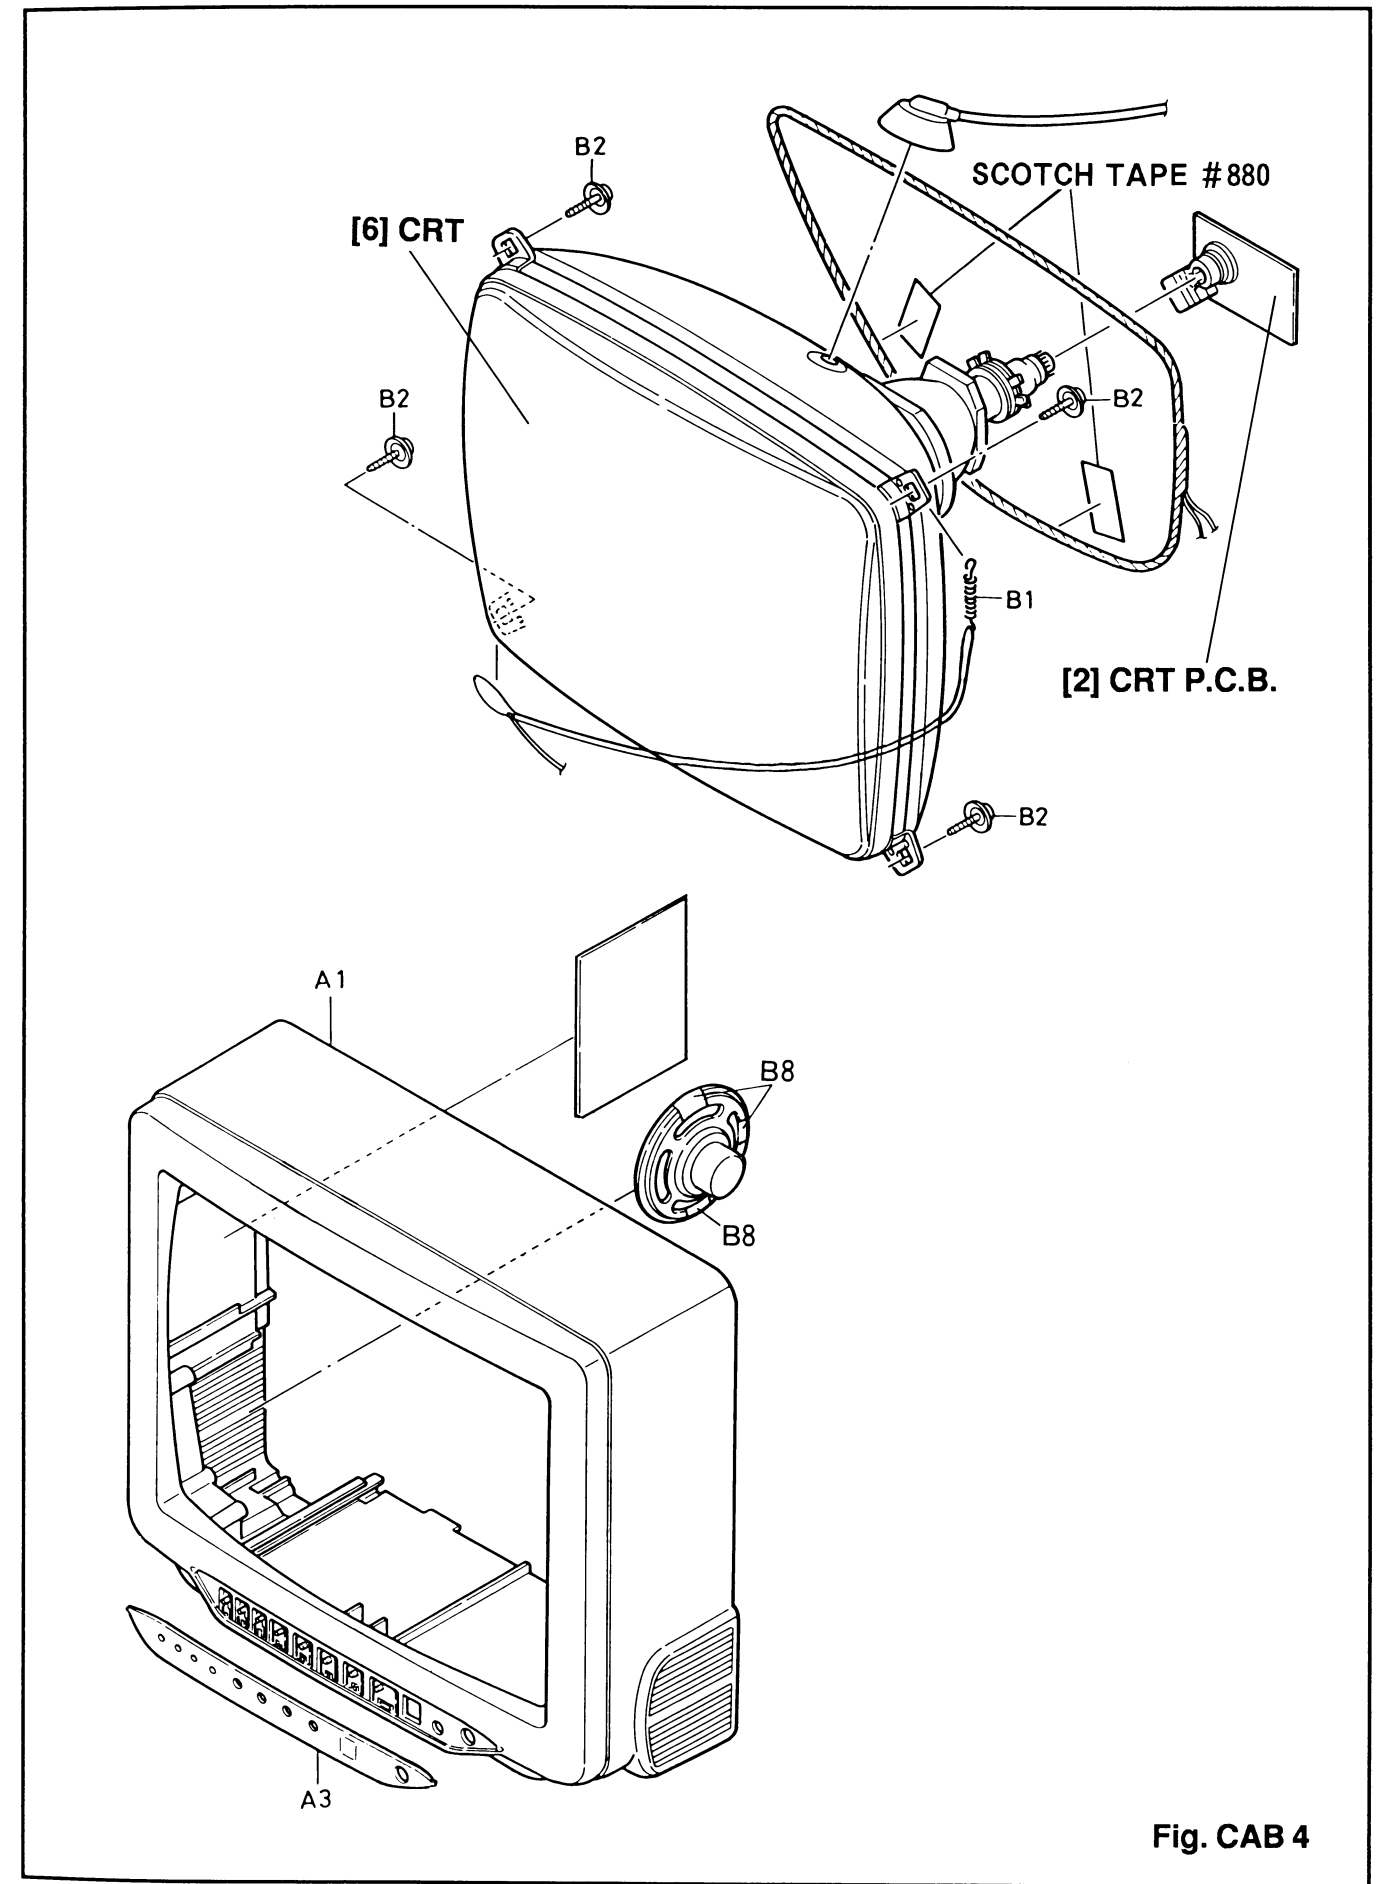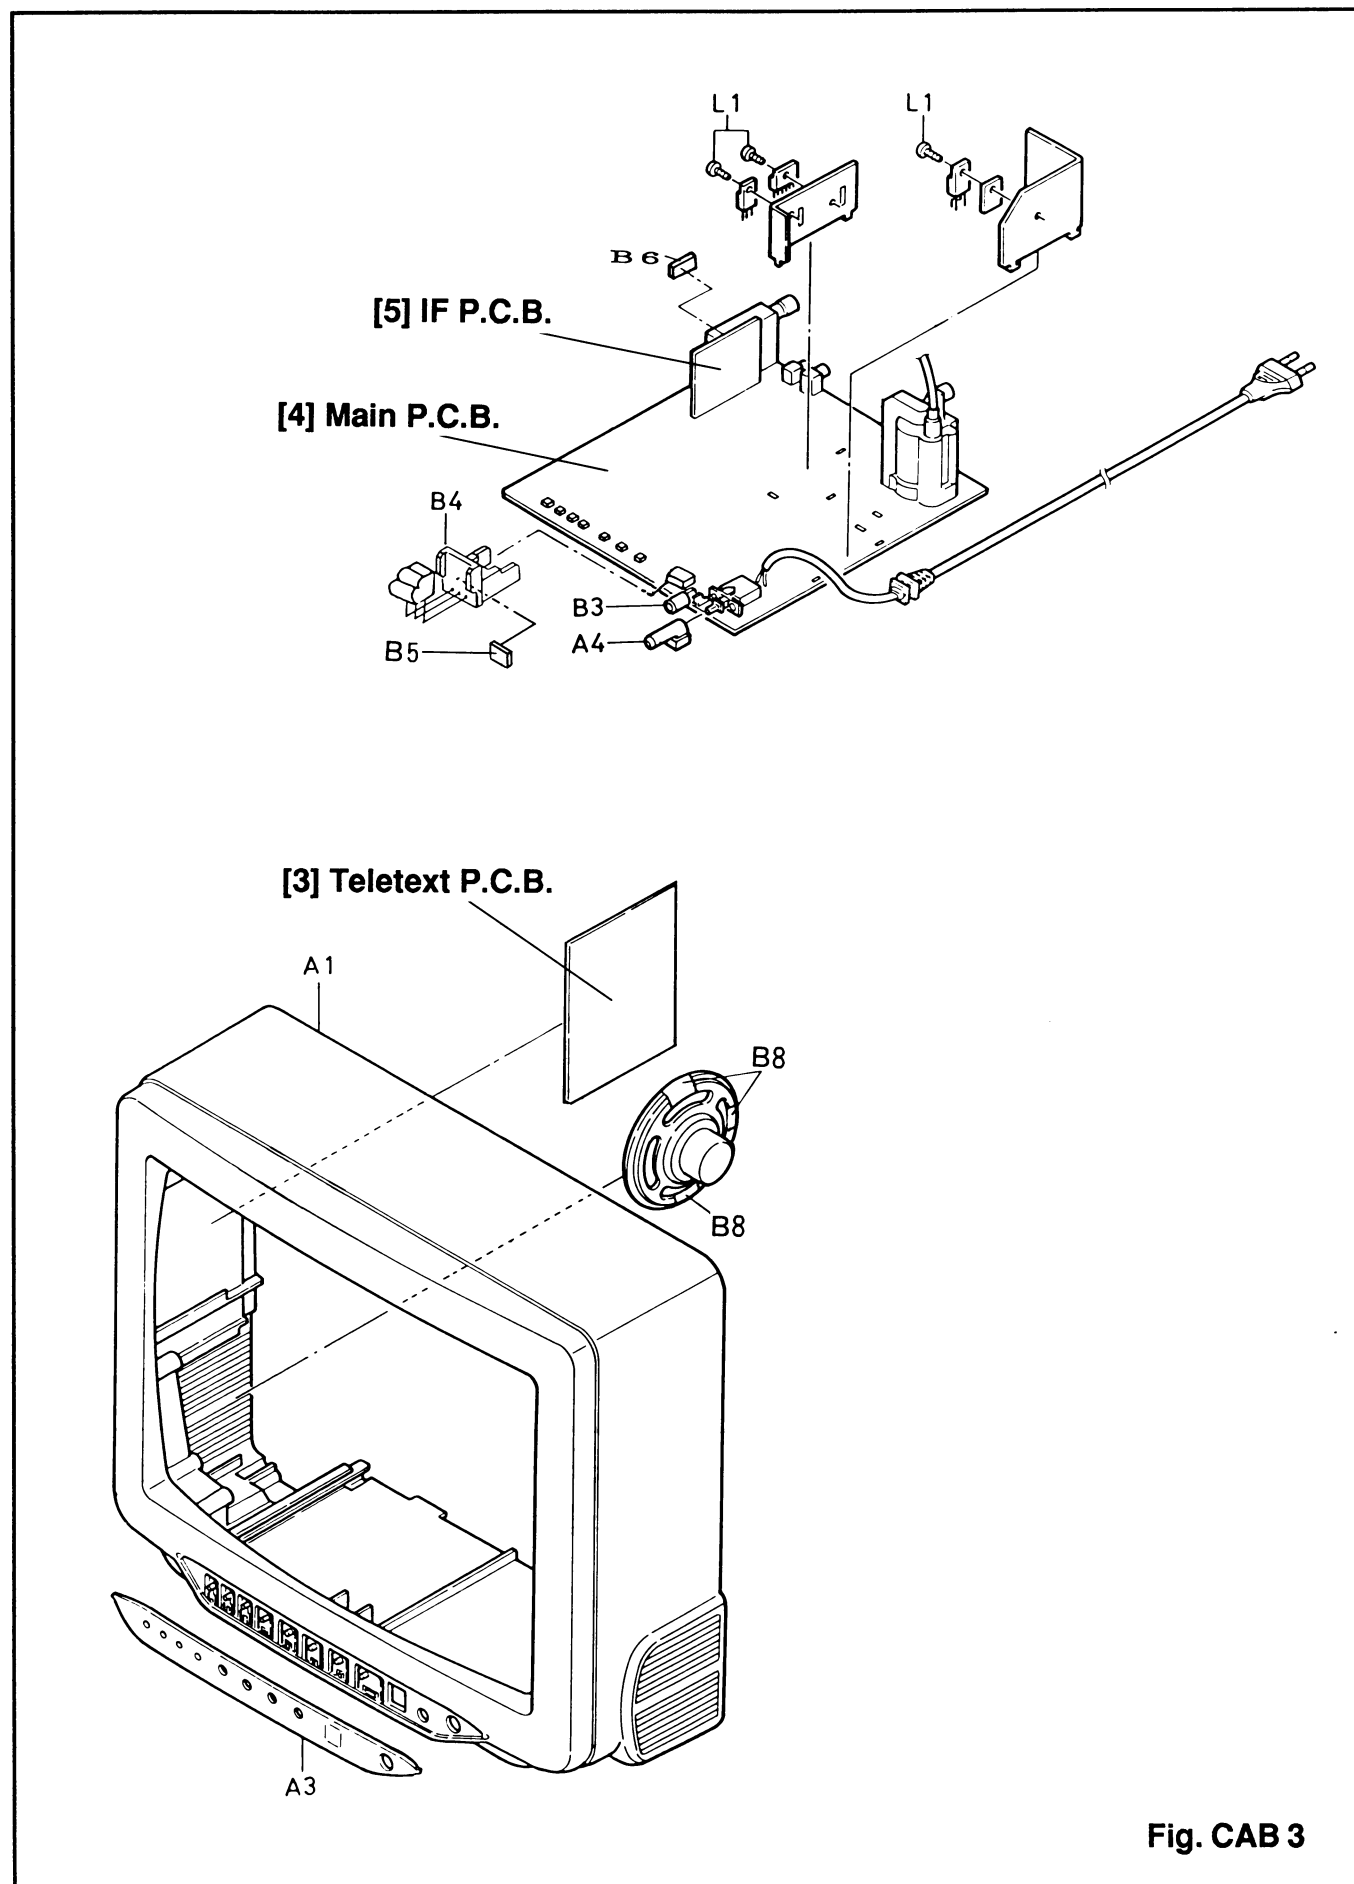

ELECTRICAL ADJUSTMENT INSTRUCTIONS

NOTE:

Electrical adjustments are required after replacing circuit components. It is important to perform these adjustments only after all repairs and replacements have been completed. Also, do not attempt these adjustments unless the proper equipment is available.

TEST EQUIPMENT REQUIRED:

1. IF Sweeper
2. DC Volt Meter
3. Oscilloscope: Dual Trace with 10:1 probe
4. PAL and SECAM Pattern Generator
5. Monoscope
6. Color Analyzer

HOW TO SET UP THE ADJUSTMENT MODE:

Preset Mode: Press Picture Select button on the remote control unit, then press the number "1" button.

Brightness ----- Center
Color ----- Center
Contrast ----- Approx 70%

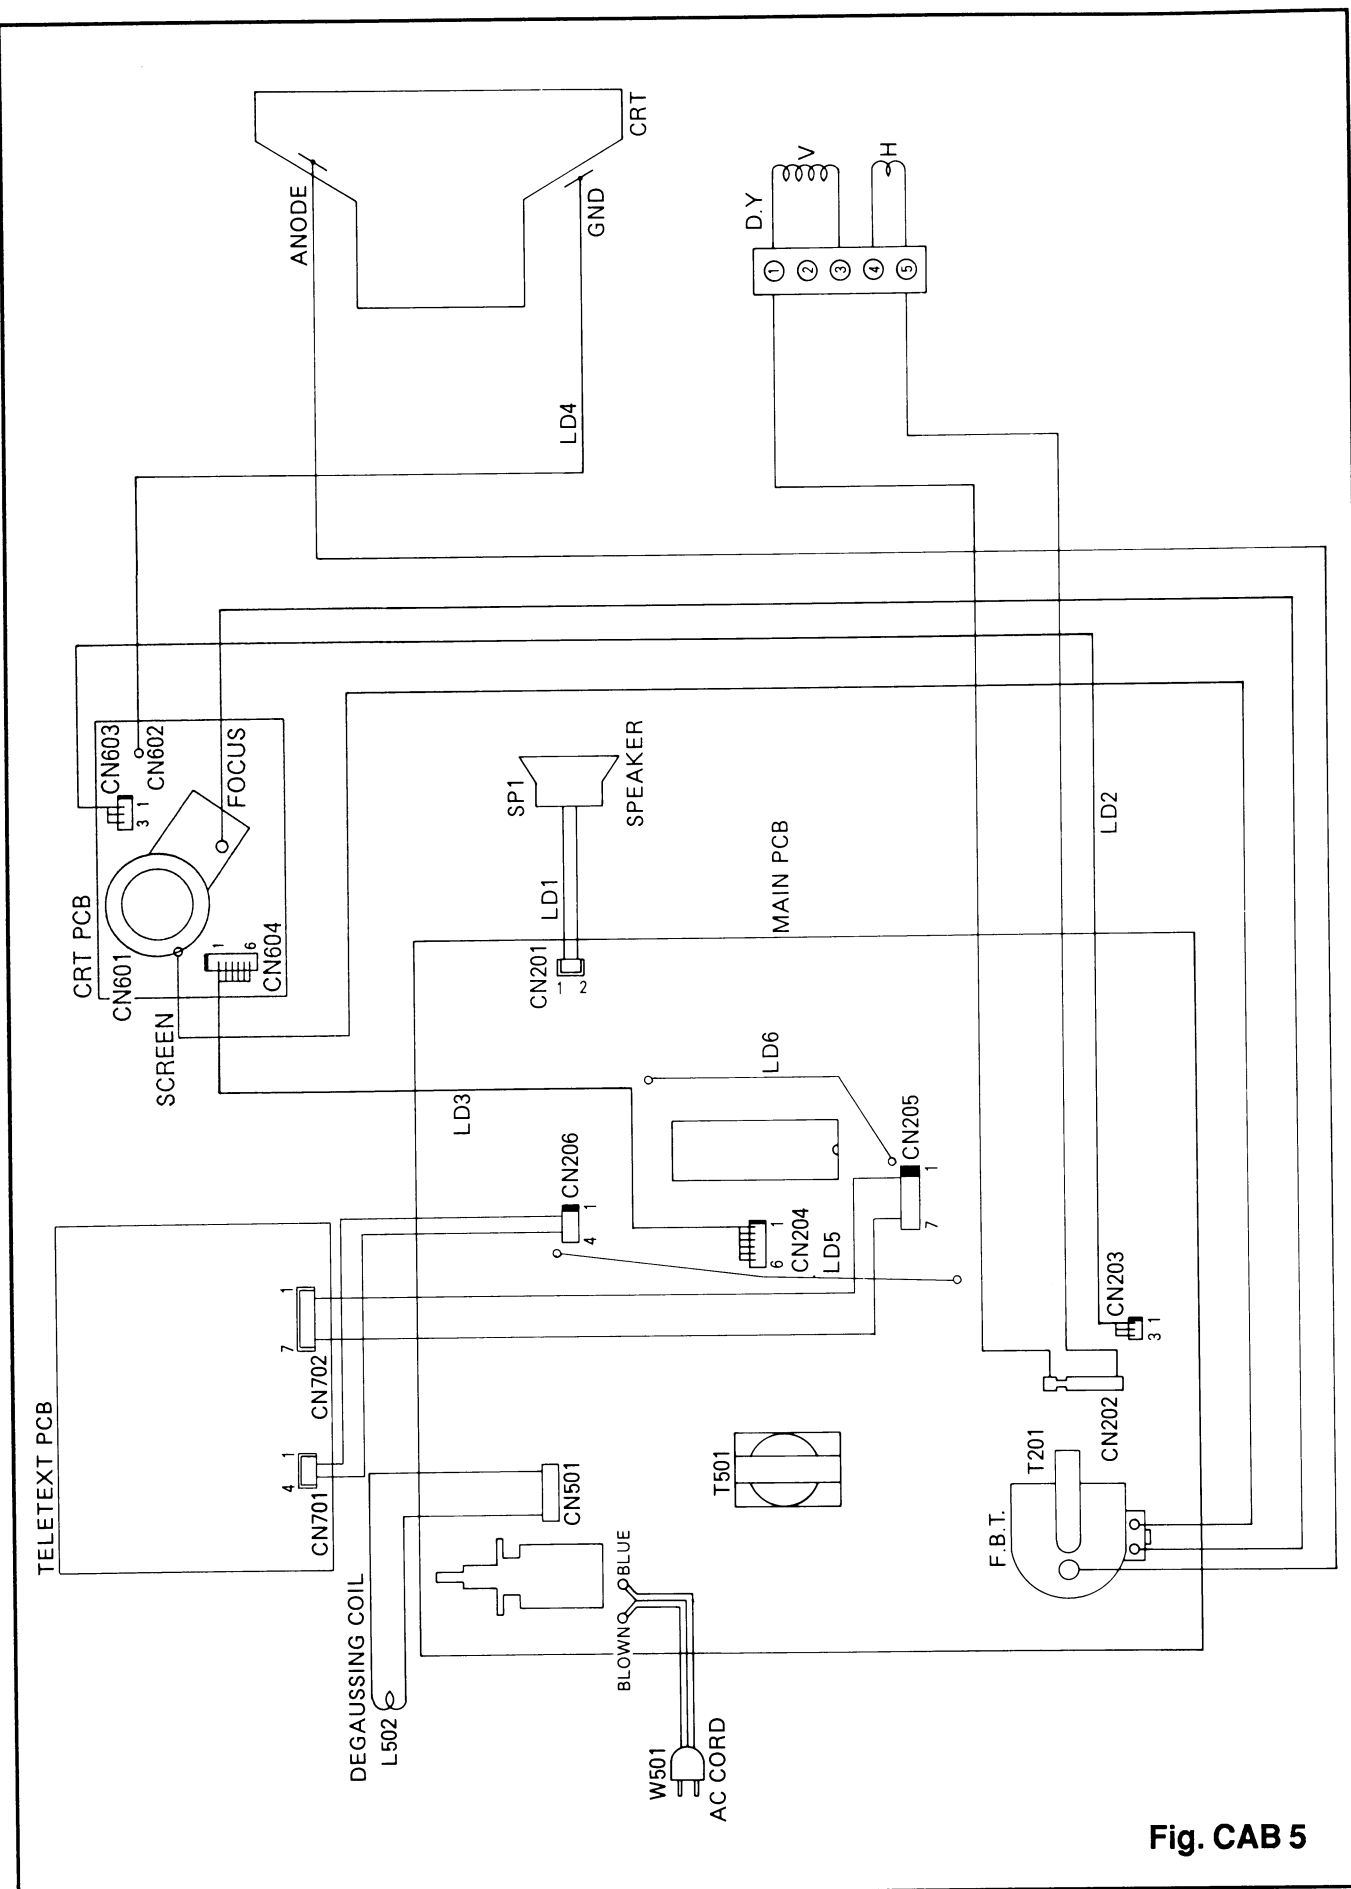
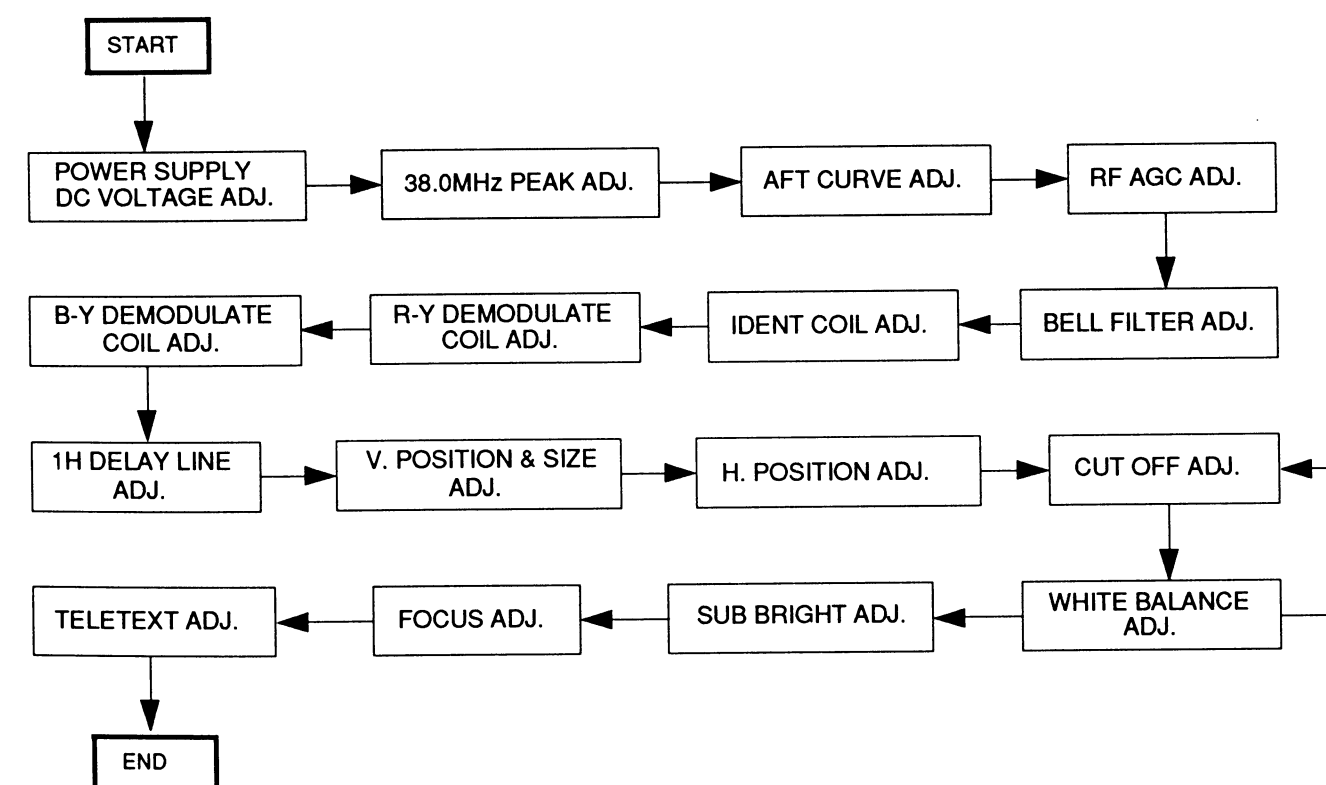


Fig. CAB 5

1. POWER SUPPLY DC VOLTAGE ADJUSTMENT

Purpose: To get correct voltage.
Symptom of Misadjustment: If voltage is incorrect, picture is dark.

Test Point	Adjustment Point	Input
D245	VR205	---
Equipment		Spec.
DC Volt Meter		DC +115±0.5V
Connections of M. EQ.		

- Reference Notes:** D245, VR205 --- MAIN P.C.B.
- To inactivate F.B.T., ground the base of Q220.
 - Connect both terminal of C343 by 1KΩ (60W~80W).
 - Connect the equipment as shown in the above table.
 - Adjust VR205 for reading +115±0.5V on the DC Volt Meter.

2. 38.0MHz PEAK ADJUSTMENT (for TUNER)

Purpose: To adjust PIF (Picture Intermediate Frequency).
Symptom of Misadjustment: Beat may appear on the picture and buzz may sound.

Test Point	Adjustment Point	Input
IC101 6pin, 16pin	L106	---
Equipment		Spec.
IF Sweeper, Oscilloscope		See below
Figure		

- Reference Notes:** IC101, L106 --- IF P.C.B.
- Connect Output of sweeper to 6pin of IC101.
Frequency set of sweeper are below:
(1) 31.5MHz (2) 32.4MHz (3) 33.57MHz (4) 35.8MHz (5) 38.0MHz (6) 39.45MHz
 - Connect the oscilloscope to 16pin of IC101.
 - Load DC Voltage to 4pin of IC101 as the wave of oscilloscope not to clip.
 - Adjust L106 as the marker for 38.0MHz to be peak.

3. AFT CURVE ADJUSTMENT (for TUNER)

Purpose: To operate AFT correctly.
Symptom of Misadjustment: AFT does not work correctly and/or synchronism will be faulty.

Test Point	Adjustment Point	Input
IC101 6pin, 11pin	L107	---
Equipment		Spec.
IF Sweeper, Oscilloscope		See below
Figure		

- Reference Notes:** SW206 --- MAIN P.C.B. IC101, L107 --- IF P.C.B.
- Connect output of sweeper to 6pin of IC101.
Frequency set is the same as for 38.0MHz Peak Adjustment.
 - Connect the oscilloscope to 11pin of IC101.
 - Push SW206 to disengage AFT action.
 - Adjust L107 as the marker for 38.0MHz to the center of AFT curve.

4. RF AGC ADJUSTMENT (for TUNER)

Purpose: Set AGC (Auto Gain Control) Level.
Symptom of Misadjustment: AGC does not synchronize correctly when RF Input Level is weak and distortion may cause on the picture when it is strong.

Test Point	Adjustment Point	Input
TU201 6pin	VR101	PAL Color Bar
Equipment		Spec.
PAL Pattern Generator, DC Volt Meter		DC +4.6±0.1V
Connections of M. EQ.		

- Reference Notes:** TU201 --- MAIN P.C.B. VR101 --- IF P.C.B.
- Receive the PAL Color Bar signal for 2ch (48.25MHz). (RF input level 80dBμV at the best synchronized point)
 - Connect the equipment as shown in the above table.
 - Adjust VR101 for reading +4.1±0.1V on the DC Volt Meter.

5. BELL FILTER ADJUSTMENT (for SECAM)

Purpose: To adjust the center frequency of SECAM bell filter.
Symptom of Misadjustment: The color will be reversed when the SECAM signal is entered.

Test Point	Adjustment Point	Input
TP2 TP1 (GND)	L215	SECAM Color Bar
Equipment		Spec.
SECAM Pattern Generator Oscilloscope (5mV/div, 10μS/div AC)		See below

Connections of M. EQ.

Figure

- Reference Notes:** D230, TP1, TP2, L215 --- MAIN P.C.B.
1. Connect the equipment as shown in the above table.
 2. Input the SECAM Color Bar signal from Video In.
 3. Set oscilloscope to 10 : 1 probe, AC 5mV/div and Range 10μs/div.
 4. Adjust L215 with core driver to flat waveform.

6. IDENT COIL ADJUSTMENT (for SECAM)

Purpose: To adjust the peak value of SECAM IDENT signal.
Symptom of Misadjustment: The display is not colored when the SECAM signal is entered.

Test Point	Adjustment Point	Input
TP5 TP1 (GND)	L216	SECAM Color Bar
Equipment		Spec.
SECAM Pattern Generator Oscilloscope (0.2V/div, 5μS/div DC)		See below

Connections of M. EQ.

- Reference Notes:** TP1, TP5, L216 --- MAIN P.C.B.
1. Connect the equipment as shown in the above table.
 2. Input the SECAM Color Bar signal from Video In.
 3. Set oscilloscope to 10 : 1 probe, DC 0.2V/div and Range 5μs/div.
 4. Adjust L216 with core driver to peak DC voltage.

7. R-Y DEMODULATE COIL ADJUSTMENT (for SECAM)

Purpose: To adjust the level of R-Y color difference signal.
Symptom of Misadjustment: The R, G and B will be unbalanced.

Test Point	Adjustment Point	Input
TP3 TP1 (GND)	L212	SECAM Black Raster
Equipment		Spec.
SECAM Pattern Generator Oscilloscope (20mV/div, 5mS/div AC)		See below

Connections of M. EQ.

Figure

- Reference Notes:** D230, TP1, TP3, L212 --- MAIN P.C.B.
1. Connect the equipment as shown in the above table.
 2. Input the SECAM Black Raster signal from Video In.
 3. Adjust L212 with core driver so that ① becomes center of ② as shown in the above table.

8. B-Y DEMODULATE COIL ADJUSTMENT (for SECAM)

Purpose: To adjust the level of B-Y color difference signal.
Symptom of Misadjustment: The R, G and B will be unbalanced.

Test Point	Adjustment Point	Input
TP4 TP1 (GND)	L211	SECAM Black Raster
Equipment		Spec.
SECAM Pattern Generator Oscilloscope (20mV/div, 5mS/div AC)		See below

Connections of M. EQ.

Figure


- Reference Notes:** D230, TP1, TP4, L211 --- MAIN P.C.B.
1. Connect the equipment as shown in the above table.
 2. Input the SECAM Black Raster signal from Video In.
 3. Adjust L211 with core driver so that ① becomes center of ② as shown in the above table.

9. 1 H DELAY LINE ADJUSTMENT (for PAL)



Purpose: To get correct 1H delay line when the PAL signal is entered.
Symptom of Misadjustment: The Anti-PAL signal part is colored when the Philips Pattern is entered.
Each scanning line is colored on the color bar.

Test Point	Adjustment Point	Input
TP4 TP1 (GND)	L210, VR203	Philips Pattern
Equipment		Spec.
Pattern Generator Oscilloscope		See below

Connections of M. EQ.

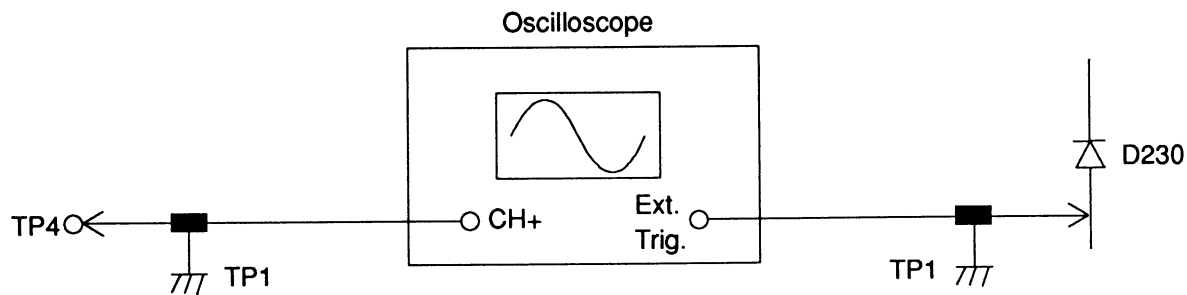

Figure

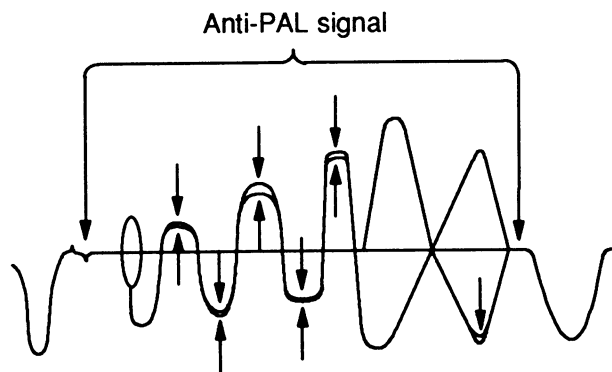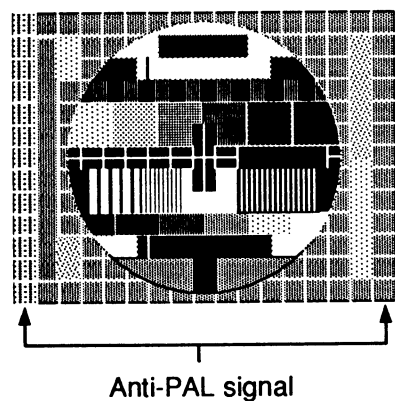


Reference Notes: D230, TP1, TP4, L210, VR203 --- MAIN P.C.B.
1. Connect the equipment as shown in the above table.
2. Input the Philips Pattern from Video In.
3. Adjust VR203 and L210 so that the amplitude at Anti-PAL signal part becomes minimum (no color) and the waveform at the color bar part is not seen in double ("Venetian Blind" does not appear at the color bar signal part).

10. V. POSITION & SIZE ADJUSTMENT

Purpose: To get correct vertical position and size of screen image.
Symptom of Misadjustment: Vertical position and size of screen image may not be properly displayed.

Test Point	Adjustment Point	Input
Screen	VR201 (V. Position) VR204 (V. Size)	Monoscopic Pattern
Equipment		Spec.
Monoscope		See below


Figure

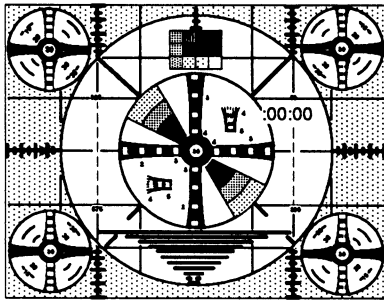

Reference Note: VR201, VR204 --- MAIN P.C.B.
1. Operate the unit more than 20 minutes.
2. Input the Monoscopic Pattern from Video In.
3. Adjust VR201 so that the top and bottom of Monoscopic Pattern will be equal.
4. Adjust VR204 so that the vertical size will be 90±5% of Monoscopic Pattern and the circle is round.

11. H. POSITION ADJUSTMENT


Purpose: To get correct horizontal position and size of screen image.
Symptom of Misadjustment: Horizontal position and size of screen image may not be properly displayed.

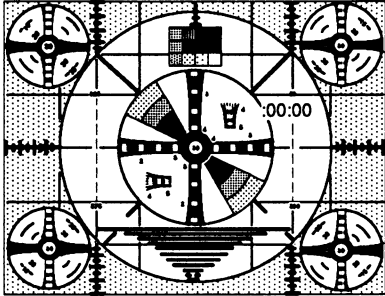Test Point	Adjustment Point	Input
Screen	VR202	Monoscopic Pattern
Equipment		Spec.
Monoscope		See below
Figure		
		

- Reference Note:** VR202 --- MAIN P.C.B.
1. Operate the unit more than 20 minutes.
 2. Input the Monoscopic Pattern from Video In.
 3. Adjust VR202 so that the right and left of Monoscopic Pattern will be equal.

12. CUT OFF ADJUSTMENT

Purpose: To adjust the beam current of R, G, B and screen voltage.
Symptom of Misadjustment: White color may be reddish, greenish or bluish.
When the screen voltage is too high, the scanning line is appeared on the screen.

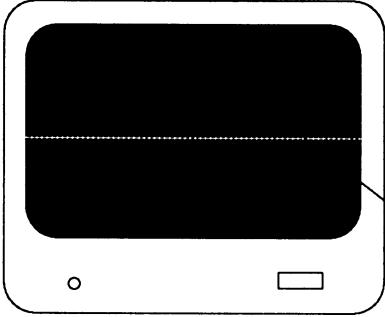
Test Point	Adjustment Point	Input
Screen	VR604, VR605, VR606 Screen-VR (F.B.T.)	White Raster (APL 100%)
Equipment		Spec.
Pattern Generator		See below
Figure		
		

- Reference Notes:** VR601, VR602, VR603, VR604, VR605, VR606 --- CRT P.C.B.
SW209 --- MAIN P.C.B.
Screen-VR --- MAIN P.C.B. (F.B.T.)
1. Operate the unit more than 20 minutes.
 2. Degauss the CRT using Degaussing Coil.
 3. Input the White Raster signal (APL 100%) from Video In.
 4. Turn the Screen-VR (F.B.T.) fully counterclockwise.
 5. Set VR602 (B. Drive), VR603 (R. Drive), VR604 (B. Cut Off), VR605 (G. Cut Off), VR606 (R. Cut Off) and VR601 (Sub Bright) to center.
 6. Set the SW209 (Service SW) to ON.
 7. Slowly turn the Screen-VR (F.B.T.) to the point where horizontal line just visible.
 8. Adjust VR604 (B. Cut Off), VR605 (G. Cut Off) and VR606 (R. Cut Off) so that horizontal line becomes pure white.
 9. Turn off the SW209 (Service SW).

Note: Confirm that White Balance Adj. is correct after this adjustment, and attempt White Balance Adj. if needed.

13. WHITE BALANCE ADJUSTMENT

Purpose: To mix red, green and blue beams correctly for pure white.
Symptom of Misadjustment: White becomes bluish or reddish.

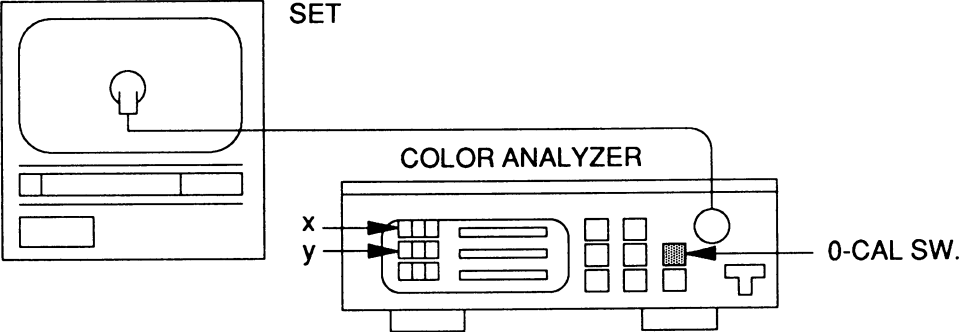
Test Point	Adjustment Point	Input
Screen	VR602, VR603	White Raster (APL 100%)
Equipment		Spec.
Pattern Generator Color Analyzer		See below
Connections of M. EQ.		
		

- Reference Notes:** VR602, VR603 --- CRT P.C.B.
1. Operate the unit more than 20 minutes.
 2. Face the unit to east. Degauss the CRT using Degaussing Coil.
 3. Input the White Raster signal (APL 100%) from Video In.
 4. Set the color analyzer to the CHROMA mode and after zero point calibration, bring the optical receptor to the center on the tube surface (CRT).
 5. Adjust VR603 (R. DRIVE) and VR602 (B. DRIVE) so that the respective chroma temperatures become 8000K-10MPCD (x : 0.300 / y : 0.290) ±4%.

Note: Confirm that Cut Off Adj. is correct after this adjustment, and attempt Cut Off Adj. if needed.

14. SUB BRIGHT ADJUSTMENT


Purpose: To get proper brightness.
Symptom of Misadjustment: Proper brightness cannot be obtained by adjusting the Bright Control.

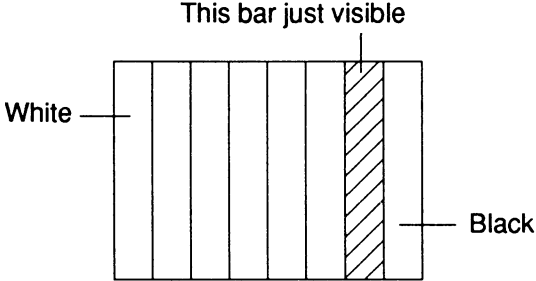Test Point	Adjustment Point	Input
Screen	VR601	Gray Scale (8step)
Equipment		Spec.
Pattern Generator		See below
Figure		
		

- Reference Notes:** VR601 --- CRT P.C.B.
1. Operate the unit more than 20 minutes.
 2. Input the Gray Scale signal (8step) from Video In.
 3. Adjust VR601 so that the bar is just visible. (See above figure)

15. FOCUS ADJUSTMENT

Purpose: To get correct focus.
Symptom of Misadjustment: Blurred image is shown on the display.

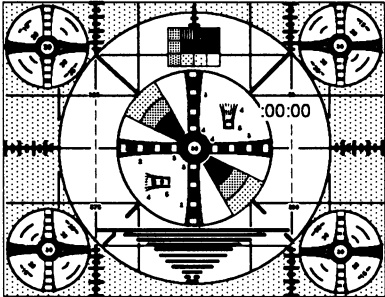Test Point	Adjustment Point	Input
Screen	Focus-VR (F.B.T.)	Monoscopic Pattern
Equipment		Spec.
Monoscope		See below
Figure		
		

- Reference Note:** Focus-VR (F.B.T.) --- MAIN P.C.B.
1. Operate the unit more than 20 minutes.
 2. Input the Monoscopic Pattern from Video In.
 3. Adjust Focus-VR (F.B.T.) to be obtained clear picture.

16. TELETEXT ADJUSTMENT

Purpose: To synchronize TELETEXT signal.
Symptom of Misadjustment: TELETEXT is not displayed synchronously.

Test Point	Adjustment Point	Input
TP701 TP702 (GND)	L702	PAL Color Bar
Equipment		Spec.
PAL Pattern Generator DC Volt Meter		DC +2.5±0.1V
Figure		

Reference Note: TP701, TP702, L702 --- TELETEXT P.C.B.

1. Connect the equipment as shown in the above table.
2. Input the PAL Color Bar signal from Video In.
3. Set the TEXT mode by press TEXT/MIX key on the remote control unit.
4. Adjust VR702 for reading +2.5±0.1V on the DC Volt Meter.

SCHEMATIC DIAGRAMS / P.C.B. AND TEST POINTS

STANDARD NOTES

Warning

Critical components having special safety characteristics are identified with a Δ by the Ref. No. in the parts list and enclosed within a broken line * (where several critical components are grouped in one area) along with the safety symbol Δ on the schematics or exploded views.
Use of substitute replacement parts which do not have the same specified safety characteristics may create shock, fire, or other hazards.
Under no circumstances should the original design be modified or altered without written permission from Funai Electric Company. Funai assumes no liability, express or implied, arising out of any unauthorized modification of design. Servicer assumes all liability.

Notes:

- ① Do not use the part number shown on these drawings for ordering. The correct part number is shown in the parts list, and may be slightly different or amended since these drawings were prepared.
- ② All resistance values are indicated in ohms ($K=10^3$, $M=10^6$).
- ③ Resistor wattages are 1/5W or 1/6W unless otherwise specified.
- ④ All capacitance values are indicated in μF ($P=10^{-6}\mu F$).

Note of Capacitors:

(M) --- Mylar Cap. (SC) --- Semiconductor Cap. (TF) --- Stacked Metallized Film Cap.

Temperature Characteristics of Capacitors are noted with the following:

(YB) --- ±10% (SR) --- ±15% (NP0) --- 0±60ppm/°C (SL) --- +350~-1000ppm/°C

Tolerance of Capacitors are noted with the following:


(K) --- ±10% (Z) --- +80~-20%

Note of Resistor:


(F) --- Fuse Res.

CABINET EXPLODED VIEW

★ Marked parts see the Electrical Parts List.

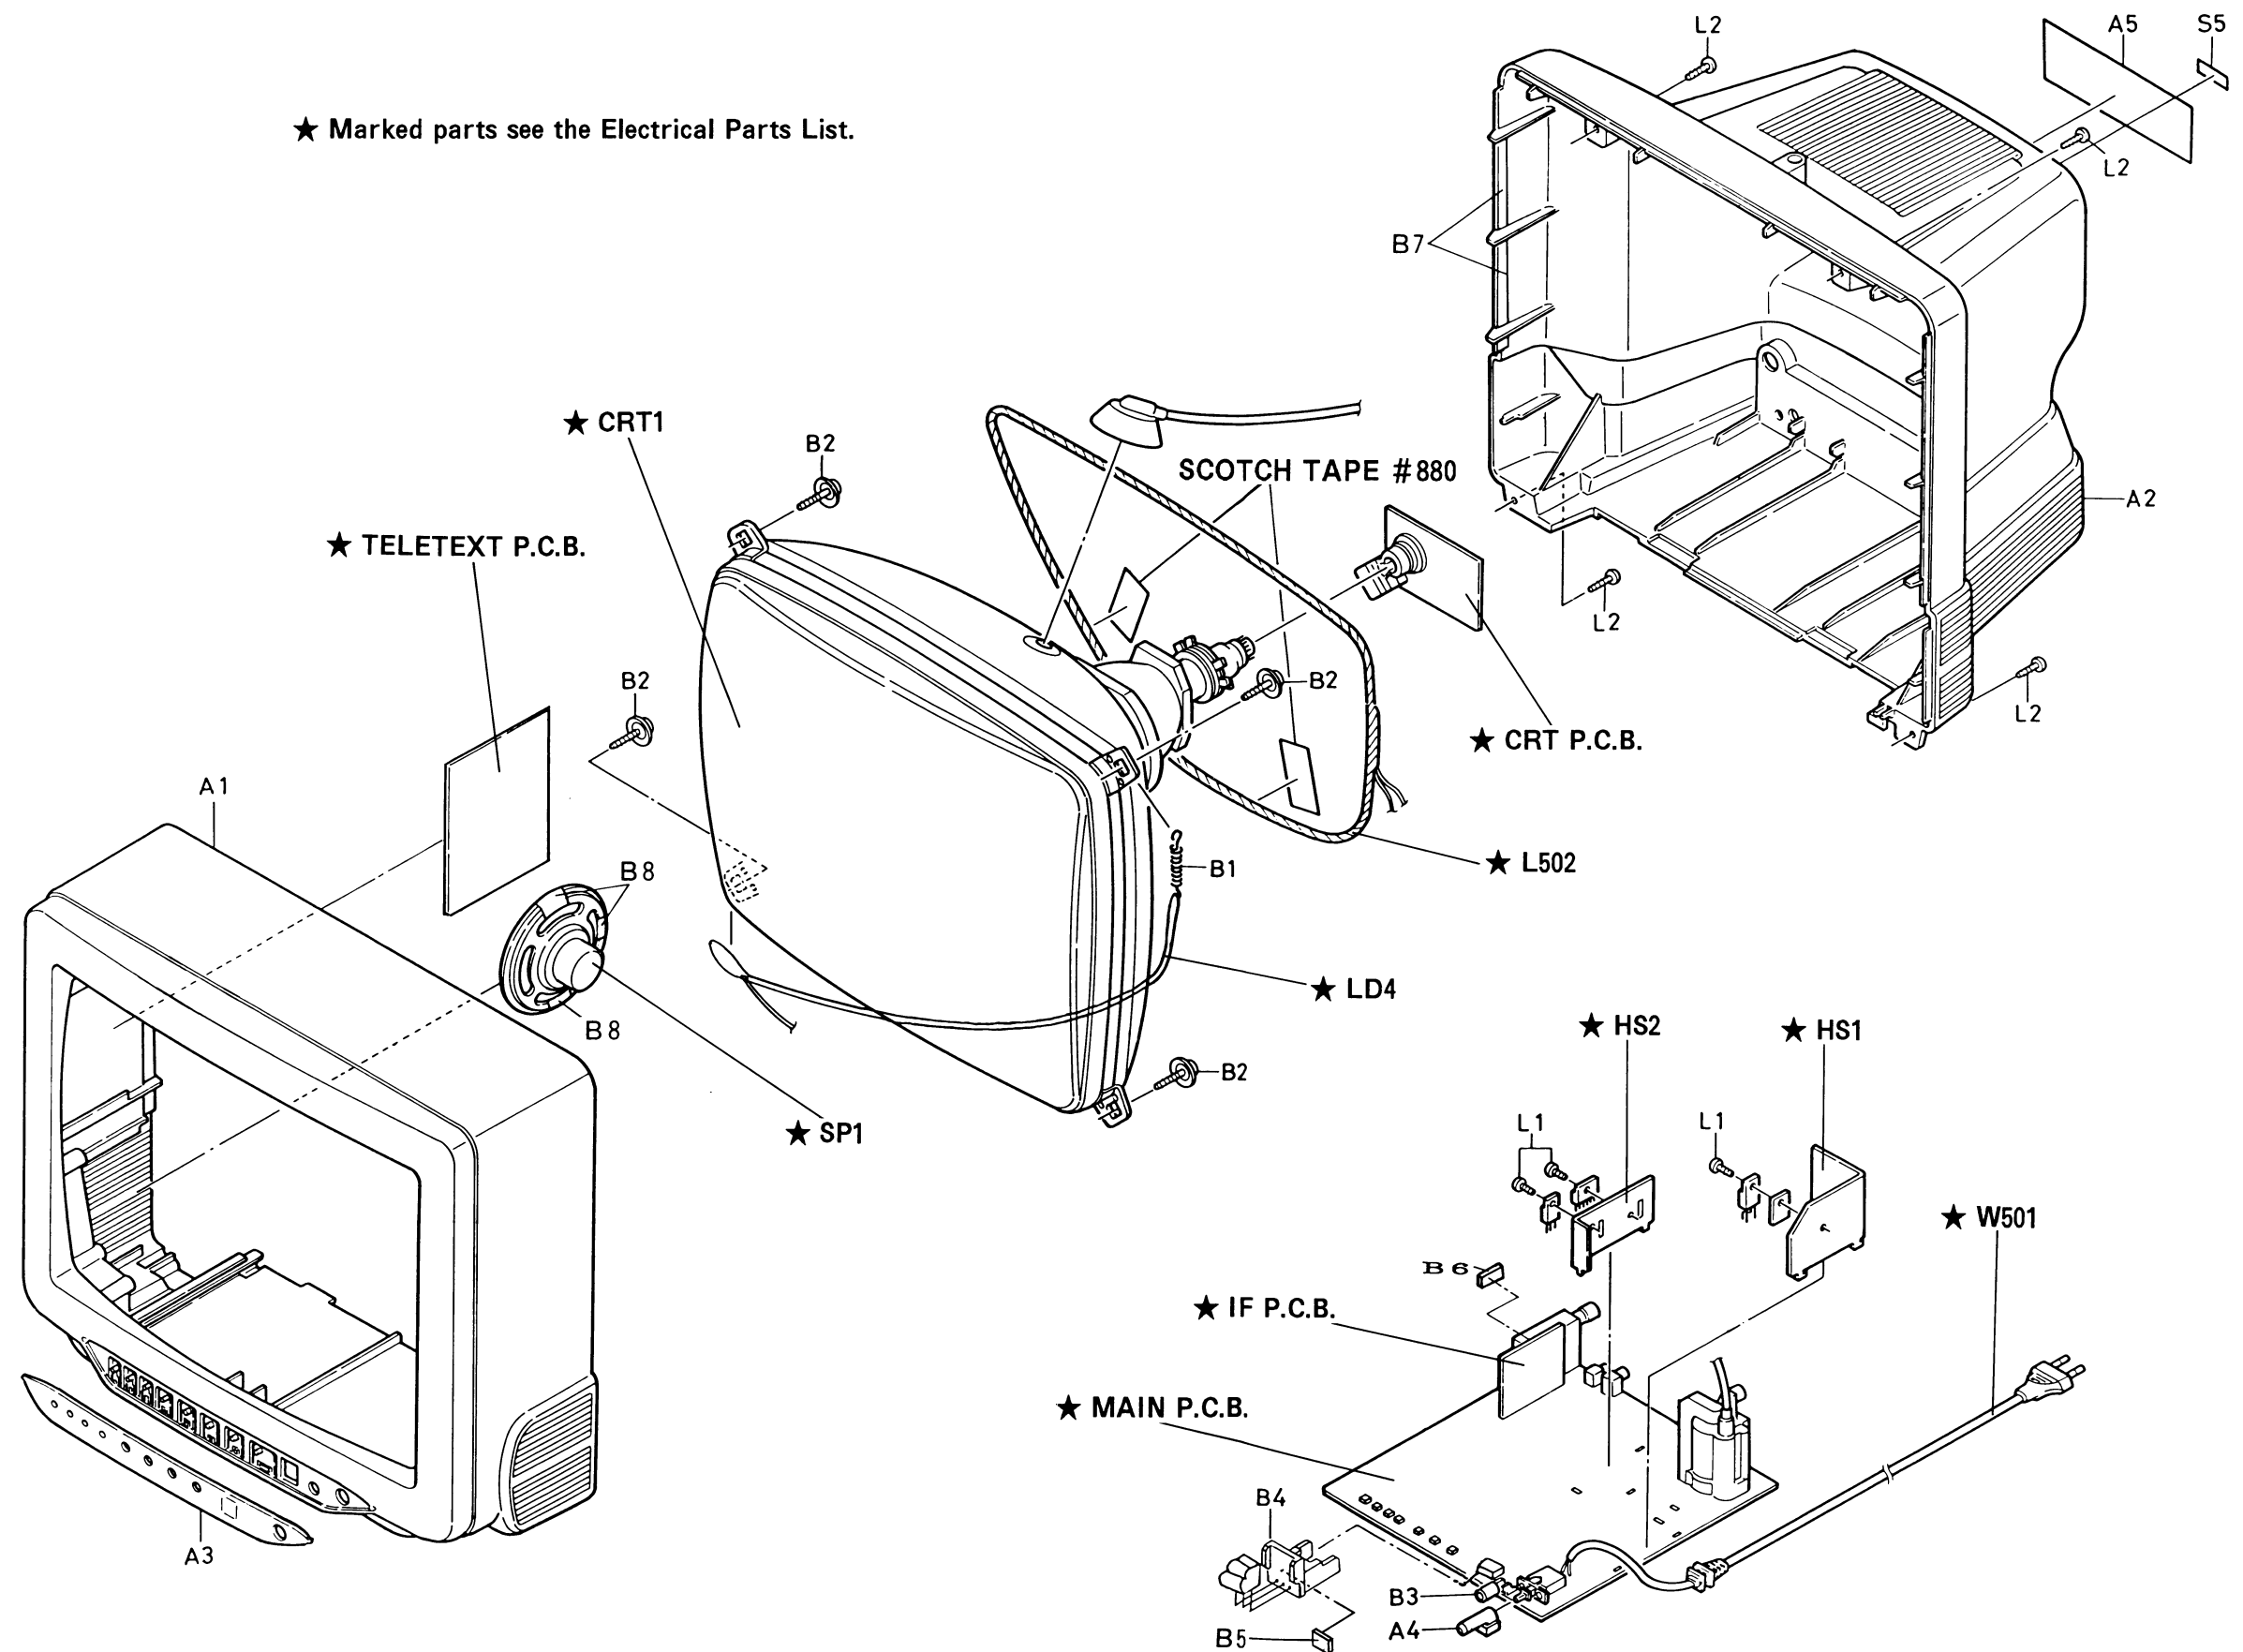

PACKING EXPLODED VIEW

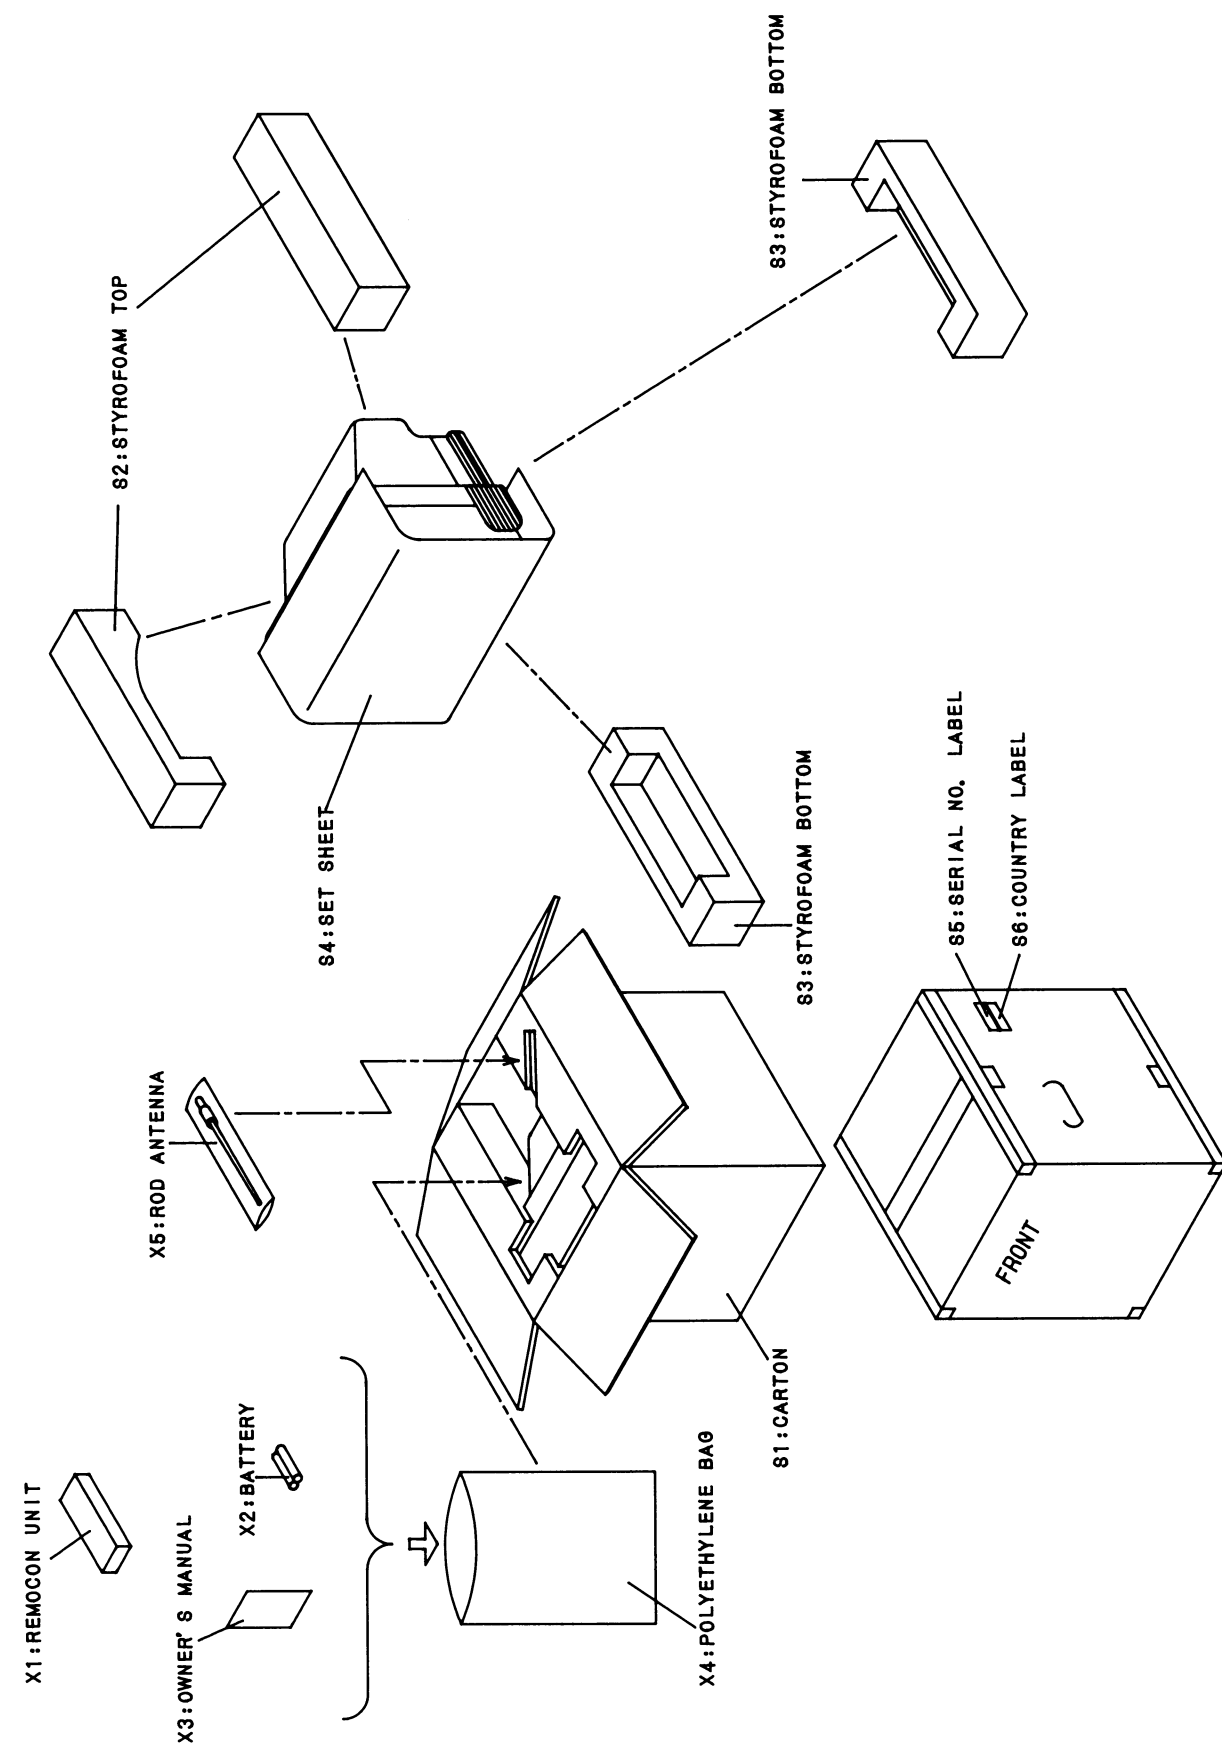

MECHANICAL PARTS LIST

PRODUCT SAFETY NOTE: Products marked with a Δ have special characteristics important to safety. Before replacing any of these components, read carefully the product safety notice of this service manual. Don't degrade the safety of the product through improper servicing.

Ref. No.	Description	Part No.
A 1	FRONT CABINET	0EM000108
A 2 *	REAR CABINET	0EM100310
A 3	CONTROL PANEL	0EM300532
A 4	POWER KNOB	0EM300440
A 5 Δ	RATING LABEL	0EM401398
B 1	TENSION SPRING EM40808	26WH006
B 2	CRT MOUNTING SCREW K42419	8A00083
B 3	LED HOLDER	0EM300471
B 4	SENSOR HOLDER	0EM401308
B 5	CUSHION (for SENSOR HOLDER)	0EM400705
B 6	CUSHION (for IF PCB)	0EM401374
B 7	CLOTH (for REAR CABINET)	TS7346
B 8	CLOTH (for SPERKER)	TS7628
L 1	B-TIGHT SCREW BIND HEAD 3 x 8	GBMB3080
L 2	P-TIGHT SCREW BIND HEAD 4 x 18	GBMP4180
S 1	CARTON	0EM401399
S 2	STYROFOAM TOP	0EM100278
S 3	STYROFOAM BOTTOM	0EM100279
S 4	SET SHEET	0EM401153
S 5	SERIAL NO. LABEL	TS7619
S 6	COUNTRY LABEL	0EM400947
X 1	REMOTE CONTROL UNIT	UREMT31MS015
X 2	BATTERY "R03" x 2 or BATTERY "R03" x 2 or BATTERY "R03" x 2	1790741 1790901 XB0M641FA001
X 3 Δ	OWNER'S MANUAL	0EMN00605
X 4	POLYETHYLENE BAG	Z325350
X 5	ROD ANTENNA	0EMN00542

* Material certificate is required to attach.

ELECTRICAL PARTS LIST

PRODUCT SAFETY NOTE: Products marked with a  have special characteristics important to safety. Before replacing any of these components, read carefully the product safety notice of this service manual. Don't degrade the safety of the product through improper servicing.

NOTE: Parts that not assigned part numbers (-----) are not available.

Tolerance of Capacitors and Resistors are noted with the following symbols.

C.....±0.25%	J.....±5%	Z.....+80/-20%
D.....±0.5%	K.....±10%	X.....+40/-20%
F.....±1%	M.....±20%	P.....+100%
G.....±2%	N.....±30%	

MMA-84J P.C.B. ASSEMBLY

Ref. No.	Description	Part No.
	MMA-84J P.C.B. ASSEMBLY	MMA-84J
	Consists of the following:	
	P.C.B. (MAIN+CRT+IF)	BL7501F01001
	MAIN P.C.B.	-----
	CRT P.C.B.	-----
	IF P.C.B.	-----

MAIN P.C.B.

Ref. No.	Description	Part No.
	MAIN P.C.B.	-----
	Consists of the following:	
CAPACITORS		
C202	ELECTROLYTIC CAP. 47µF/16V	126C476S
C203	ELECTROLYTIC CAP. 4.7µF/50V	126F475S
C209	ELECTROLYTIC CAP. 4.7µF/50V	126F475S
C211	ELECTROLYTIC CAP. 4.7µF/50V	126F475S
C212	ELECTROLYTIC CAP. 1000µF/6.3V	126A108
C213	ELECTROLYTIC CAP. 1µF/50V	126F105S
C214	CHIP CERAMIC CAP. 0.022µF/50V Z or CHIP CERAMIC CAP. 0.022µF/50V Z	CHE1JJ80F223 12F3223C
C215	ELECTROLYTIC CAP. 10µF/50V	126F106S
C216	*MYLAR CAP. 0.18µF/50V K	2250184
C217	ELECTROLYTIC CAP. 10µF/50V	126F106
C218	ELECTROLYTIC CAP. 10µF/50V	126F106
C219	ELECTROLYTIC CAP. 1µF/50V	126F105S
C220	CHIP CERAMIC CAP. 120pF/50V SL or CHIP CERAMIC CAP. 120pF/50V SL	CHE1JJ8SL121 1270121C
C221	ELECTROLYTIC CAP. 2.2µF/50V	126F225S
C224	CHIP CERAMIC CAP. 24pF/50V CH or CHIP CERAMIC CAP. 24pF/50V CH	CHE1JJ8CH240 12CH240C
C225	CHIP CERAMIC CAP. 24pF/50V CH or CHIP CERAMIC CAP. 24pF/50V CH	CHE1JJ8CH240 12CH240C
C229	CHIP CERAMIC CAP. 0.01µF/50V Z or CHIP CERAMIC CAP. 0.01µF/50V Z	CHE1JJ80F103 12F3103C
C230	ELECTROLYTIC CAP. 47µF/16V	126C476S
C232	CHIP CERAMIC CAP. 100pF/50V SL or CHIP CERAMIC CAP. 100pF/50V SL	CHE1JJ8SL101 1270101C
C233	ELECTROLYTIC CAP. 10µF/50V	126F106S
C234	ELECTROLYTIC CAP. 1µF/50V	126F105S

*Mylar is a registered trademark of E. I. Du Pont de Nemours and Company.

Ref. No.	Description	Part No.
C264	P.P.CAP. 0.0018µF/1.6KV or P.P.CAP. 0.0018µF/1.6KV [for CRT: 134KFC12XX8] P.P.CAP. 0.0022µF/1.6KV or P.P.CAP. 0.0022µF/1.6KV [for CRT: 37GDA85X-TC01(P)] P.P.CAP. 0.0027µF/1.6KV or P.P.CAP. 0.0027µF/1.6KV [for CRT: 370KRB22-TC09(SPYB)]	122Z278 122Z491 122Z182 1220492 122Z279 1220493
C265	ELECTROLYTIC CAP. 0.47µF/160V or ELECTROLYTIC CAP. 0.47µF/160V or ELECTROLYTIC CAP. 0.47µF/160V	CE2CMANTLR47 CE2CMADDLR47 122Z328
C268	CERAMIC CAP. 0.0022µF/500V	CCD2JKS0B222
C271	ELECTROLYTIC CAP. 47µF/160V(105°C) or ELECTROLYTIC CAP. 47µF/160V(105°C)	CE2CMZDEH470 CA2C470NC009
C272	CHIP CERAMIC CAP. 330pF/50V SL or CHIP CERAMIC CAP. 330pF/50V SL	CHE1JJ8SL331 1270331C
C273	ELECTROLYTIC CAP. 4.7µF/50V	126F475S
C274	ELECTROLYTIC CAP. 0.47µF/50V	126F474S
C275	CHIP CERAMIC CAP. 0.0027µF/50V B or CHIP CERAMIC CAP. 0.0027µF/50V B	CHE1JK80B272 12B3272C
C276	CHIP CERAMIC CAP. 240pF/50V SL or CHIP CERAMIC CAP. 240pF/50V SL	CHE1JJ8SL241 1270241C
C277	ELECTROLYTIC CAP. 3.3µF/50V	126F335S
C278	MYLAR CAP. 0.01µF/50V K	2250103S
C279	SEMI.-COND.-CAP. 0.015µF/25V K	12Y2153S
C280	SEMI.-COND.-CAP. 0.022µF/25V K	12Y2223S
C281	ELECTROLYTIC CAP. 47µF/16V	126C476S
C282	CHIP CERAMIC CAP. 0.01µF/50V Z or CHIP CERAMIC CAP. 0.01µF/50V Z	CHE1JJ80F103 12F3103C
C284	ELECTROLYTIC CAP. 0.47µF/50V	126F474S
C286	ELECTROLYTIC CAP. 0.47µF/50V	126F474S
C287	ELECTROLYTIC CAP. 10µF/50V	126F106S
C288	ELECTROLYTIC CAP. 0.1µF/50V	126F104S
C289	ELECTROLYTIC CAP. 0.1µF/50V	126F104S
C290	ELECTROLYTIC CAP. 0.1µF/50V	126F104S
C291	SEMI.-COND.-CAP. 0.01µF/25V K	12Y2103S
C292	CHIP CERAMIC CAP. 12pF/50V SL or CHIP CERAMIC CAP. 12pF/50V SL	CHE1JJ8SL120 1270120C
C293	ELECTROLYTIC CAP. 1µF/50V	126F105S
C294	ELECTROLYTIC CAP. 10µF/50V	126F106S
C295	SEMI.-COND.-CAP. 0.1µF/25V Z	1220520S
C296	SEMI.-COND.-CAP. 0.1µF/25V Z	1220520S
C297	CHIP CERAMIC CAP. 180pF/50V CH or CHIP CERAMIC CAP. 180pF/50V CH	CHE1JJ8CH181 12CH181C
C298	ELECTROLYTIC CAP. 10µF/50V	126F106S
C300	CHIP CERAMIC CAP. 100pF/50V SL or CHIP CERAMIC CAP. 100pF/50V SL	CHE1JJ8SL101 1270101C
C301	CHIP CERAMIC CAP. 100pF/50V SL or CHIP CERAMIC CAP. 100pF/50V SL	CHE1JJ8SL101 1270101C
C302	CHIP CERAMIC CAP. 100pF/50V SL or CHIP CERAMIC CAP. 100pF/50V SL	CHE1JJ8SL101 1270101C
C303	CHIP CERAMIC CAP. 180pF/50V CH or CHIP CERAMIC CAP. 180pF/50V CH	CHE1JJ8CH181 12CH181C
C304	CHIP CERAMIC CAP. 180pF/50V CH or CHIP CERAMIC CAP. 180pF/50V CH	CHE1JJ8CH181 12CH181C
C305	CHIP CERAMIC CAP. 180pF/50V CH or CHIP CERAMIC CAP. 180pF/50V CH	CHE1JJ8CH181 12CH181C
C306	CHIP CERAMIC CAP. 7pF/50V CH or CHIP CERAMIC CAP. 7pF/50V CH	CHE1JD8CH7R0 12CH709C

Ref. No.	Description	Part No.
C307	CHIP CERAMIC CAP. 20pF/50V CH or CHIP CERAMIC CAP. 20pF/50V CH	CHE1JJ8CH200 12CH200C
C308	CHIP CERAMIC CAP. 0.022µF/50V Z or CHIP CERAMIC CAP. 0.022µF/50V Z	CHE1JJ80F223 12F3223C
C309	CHIP CERAMIC CAP. 8pF/50V CH or CHIP CERAMIC CAP. 8pF/50V CH	CHE1JD8CH8R0 12CH809C
C310	CHIP CERAMIC CAP. 20pF/50V CH or CHIP CERAMIC CAP. 20pF/50V CH	CHE1JJ8CH200 12CH200C
C312	CHIP CERAMIC CAP. 56pF/50V SL or CHIP CERAMIC CAP. 56pF/50V SL	CHE1JJ8SL560 1270560C
C313	ELECTROLYTIC CAP. 1000µF/16V or ELECTROLYTIC CAP. 1000µF/16V	626C108 CE1CMZNTL102
C314	CHIP CERAMIC CAP. 0.01µF/50V Z or CHIP CERAMIC CAP. 0.01µF/50V Z	CHE1JJ80F103 12F3103C
C315	CHIP CERAMIC CAP. 0.01µF/50V Z or CHIP CERAMIC CAP. 0.01µF/50V Z	CHE1JJ80F103 12F3103C
C316	CHIP CERAMIC CAP. 0.01µF/50V Z or CHIP CERAMIC CAP. 0.01µF/50V Z	CHE1JJ80F103 12F3103C
C317	ELECTROLYTIC CAP. 0.47µF/50V	126F474S
C318	CHIP CERAMIC CAP. 0.01µF/50V Z or CHIP CERAMIC CAP. 0.01µF/50V Z	CHE1JJ80F103 12F3103C
C319	CHIP CERAMIC CAP. 27pF/50V SL or CHIP CERAMIC CAP. 27pF/50V SL	CHE1JJ8SL270 1270270C
C320	CHIP CERAMIC CAP. 0.022µF/50V Z or CHIP CERAMIC CAP. 0.022µF/50V Z	CHE1JJ80F223 12F3223C
C321	CHIP CERAMIC CAP. 22pF/50V SL or CHIP CERAMIC CAP. 22pF/50V SL	CHE1JJ8SL220 1270220C
C322	CHIP CERAMIC CAP. 47pF/50V SL or CHIP CERAMIC CAP. 47pF/50V SL	CHE1JJ8SL470 1270470C
C323	CHIP CERAMIC CAP. 22pF/50V SL or CHIP CERAMIC CAP. 22pF/50V SL	CHE1JJ8SL220 1270220C
C324	MYLAR CAP. 0.056µF/50V K	2250563S
C325	MYLAR CAP. 0.056µF/50V K	2250563S
C326	CHIP CERAMIC CAP. 0.01µF/50V Z or CHIP CERAMIC CAP. 0.01µF/50V Z	CHE1JJ80F103 12F3103C
C328	SEMI.-COND.-CAP. 0.01µF/25V K	12Y2103S
C329	ELECTROLYTIC CAP. 2.2µF/50V NP	126X226S
C330	CHIP CERAMIC CAP. 39pF/50V SL or CHIP CERAMIC CAP. 39pF/50V SL	CHE1JJ8SL390 1270390C
C331	CHIP CERAMIC CAP. 13pF/50V SL or CHIP CERAMIC CAP. 13pF/50V SL	CHE1JJ8SL130 1270130C
C332	CHIP CERAMIC CAP. 27pF/50V SL or CHIP CERAMIC CAP. 27pF/50V SL	CHE1JJ8SL270 1270270C
C333	CHIP CERAMIC CAP. 33pF/50V SL or CHIP CERAMIC CAP. 33pF/50V SL	CHE1JJ8SL330 1270330C
C334	SEMI.-COND.-CAP. 0.027µF/25V K	12Y2273S
C335	ELECTROLYTIC CAP. 1µF/50V	126F105S
C336	CHIP CERAMIC CAP. 0.001µF/50V B or CHIP CERAMIC CAP. 0.001µF/50V B	CHE1JK80B102 12B3102C
C337	CHIP CERAMIC CAP. 0.01µF/50V Z or CHIP CERAMIC CAP. 0.01µF/50V Z	CHE1JJ80F103 12F3103C
C339	ELECTROLYTIC CAP. 100µF/16V	126C107S
C340	CERAMIC CAP. 470pF/500V	CCD2JKSSL471
C341	CERAMIC CAP. 470pF/50V (YB)	12B3471S
C342	CERAMIC CAP. 470pF/50V (YB)	12B3471S
C343	ELECTROLYTIC CAP. 100µF/160V(105°C) or ELECTROLYTIC CAP. 100µF/160V(105°C)	CA2C101NC009 CE2CMZDEH101
C344	ELECTROLYTIC CAP. 1000µF/25V or ELECTROLYTIC CAP. 1000µF/25V	626D108 CE1EMZNTL102

Ref. No.	Description	Part No.
C345	ELECTROLYTIC CAP. 470μF/16V or ELECTROLYTIC CAP. 470μF/16V	CE1AMZNTL471 626C477
C346	ELECTROLYTIC CAP. 2200μF/25V	CE1EMZNTL222
C347	ELECTROLYTIC CAP. 470μF/16V or ELECTROLYTIC CAP. 470μF/16V	CE1AMZNTL471 626C477
C348	ELECTROLYTIC CAP. 2.2μF/50V	126F225S
C353	MYLAR CAP. 0.056μF/50V K	2250563S
C363	ELECTROLYTIC CAP. 470μF/16V or ELECTROLYTIC CAP. 470μF/16V	CE1AMZNTL471 626C477
C364	MYLAR CAP. 0.1μF/50V K	2250104S
C368	CHIP CERAMIC CAP. 0.001μF/50V B or CHIP CERAMIC CAP. 0.001μF/50V B	CHE1JK80B102 12B3102C
C370	MYLAR CAP. 0.1μF/50V K	2250104S
C372	CERAMIC CAP. 10pF/50V CH	12CH100S
C373	CHIP CERAMIC CAP. 0.022μF/50V Z or CHIP CERAMIC CAP. 0.022μF/50V Z	CHE1JJ80F223 12F3223C
C374	CHIP CERAMIC CAP. 0.022μF/50V Z or CHIP CERAMIC CAP. 0.022μF/50V Z	CHE1JJ80F223 12F3223C
C375	ELECTROLYTIC CAP. 47μF/16V	626C476
C376	CERAMIC CAP. 1000pF/1KV or CERAMIC CAP. 1000pF/1KV	CCD3AKP0B102 6220574
C377	CERAMIC CAP. 47pF/50V CH	12CH470
C378	ELECTROLYTIC CAP. 220μF/6.3V	126A227
C382	CHIP CERAMIC CAP. 0.027μF/50V B or CHIP CERAMIC CAP. 0.027μF/50V B	CHE1JK80B273 12B3273C
C501 ▲	CERAMIC CAP. 2200pF/AC400V or CERAMIC CAP. 2200pF/AC400V	CCG2HMP0E222 1220621
C502 ▲	CERAMIC CAP. 2200pF/AC400V or CERAMIC CAP. 2200pF/AC400V	CCG2HMP0E222 1220621
C503 ▲	CERAMIC CAP. 2200pF/AC400V or CERAMIC CAP. 2200pF/AC400V	CCG2HMP0E222 1220621
C504 ▲	CERAMIC CAP. 2200pF/AC400V or CERAMIC CAP. 2200pF/AC400V	CCG2HMP0E222 1220621
C505 ▲	LINE ACROSS CAP. 0.1μF/250V or LINE ACROSS CAP. 0.1μF/250V or LINE ACROSS CAP. 0.1μF/250V	1220971 122Z181 622Z631
C506	ELECTROLYTIC CAP. 150μF/400V	CA2H151NC013
C507	MYLAR CAP. 0.039μF/50V K	2250393S
C508	CERAMIC CAP. 680pF/2KV or CERAMIC CAP. 680pF/2KV	CCD3DZP0B681 6220584
C509	MYLAR CAP. 0.022μF/50V K	2250223S
C510	MYLAR CAP. 0.022μF/50V K	2250223S
C512 ▲	CERAMIC CAP. 2200pF/AC400V (T4KV) or CERAMIC CAP. 2200pF/AC400V (T4KV)	CCN2HMP0E222 122Z011
C513	CERAMIC CAP. 2200pF/1KV or CERAMIC CAP. 2200pF/1KV	CCD3AKP0B222 6220576
C516	ELECTROLYTIC CAP. 220μF/6.3V	126A227S
C517	CERAMIC CAP. 2200pF/1KV or CERAMIC CAP. 2200pF/1KV	CCD3AKP0B222 6220576
CONNECTORS		
CN201	CONNECTOR BASE 2P (for SPEAKER)	1740764
CN202	CONNECTOR BASE 5P (for D.Y.) or CONNECTOR BASE 5P (for D.Y.) or CONNECTOR BASE 5P (for D.Y.)	1730812 1730813 1780168
CN203	CABLE HOLDER 3P or CABLE HOLDER 3P	XW01D03NF001 XW01B03NF001
CN204	CABLE HOLDER 6P or CABLE HOLDER 6P	XW01D06NF001 XW01B06NF001
CN205	WIRE ASSEMBLY 7P (for TEXT PCB)	WX1L7401-006
CN206	WIRE ASSEMBLY 4P (for TEXT PCB)	WX1L7401-005

Ref. No.	Description	Part No.
CN207	CONNECTOR BASE 3P (for U201)	JE51C03NF001
CN501	CONNECTOR BASE 2P (for D.G. COIL) or CONNECTOR BASE 2P (for D.G. COIL)	1780276 1780165
DIODES		
D202	DIODE 1SS133 or DIODE 1SS176	1SS133T 1SS176T
D204	DIODE 1SS133 or DIODE 1SS176	1SS133T 1SS176T
D211	ZENER DIODE MTZ7.5 (B) or ZENER DIODE GZS7.5 (Y)	MTZ7.5BT QDTY00GZS7R5
D212	ZENER DIODE MTZ7.5 (B) or ZENER DIODE GZS7.5 (Y)	MTZ7.5BT QDTY00GZS7R5
D213	DIODE 1SS133 or DIODE 1SS176	1SS133T 1SS176T
D214	DIODE 1SS133 or DIODE 1SS176	1SS133T 1SS176T
D215	DIODE 1SS133 or DIODE 1SS176	1SS133T 1SS176T
D216	DIODE 1SS133 or DIODE 1SS176	1SS133T 1SS176T
D217	DIODE 1SS133 or DIODE 1SS176	1SS133T 1SS176T
D218	DIODE 1SS133 or DIODE 1SS176	1SS133T 1SS176T
D221	LED SLR-55VC 3F or LED KLR133L	1401273 NP9ZOKLR133L
D222	ZENER DIODE MTZ5.1 (C) or ZENER DIODE GZS5.1 (Z)	MTZ5.1CT QDTZ00GZS5R1
D223	ZENER DIODE MTZ6.2 (B) or ZENER DIODE GZS6.2 (Y)	MTZ6.2BT QDTY00GZS6R2
D224	ZENER DIODE MTZ5.1 (B) or ZENER DIODE GZS5.1 (Y)	MTZ5.1BT QDTY00GZS5R1
D225	ZENER DIODE MTZ5.1 (B) or ZENER DIODE GZS5.1 (Y)	MTZ5.1BT QDTY00GZS5R1
D226	ZENER DIODE MTZ5.1 (B) or ZENER DIODE GZS5.1 (Y)	MTZ5.1BT QDTY00GZS5R1
D227	DIODE ERA15-02KFRB	QDNZ0ERA1502
D228	DIODE 1SS133 or DIODE 1SS176	1SS133T 1SS176T
D229	DIODE ERB12-02L3	AERB1202L300
D230	DIODE ERB44-04L3	QDQZ0ERB4404
D231	DIODE 1SS130	1SS130T
D232	ZENER DIODE MTZ18 (B) or ZENER DIODE GZS18 (Y)	MTZ18BT QDTZ000GZS18
D233	ZENER DIODE MTZ20 (B) or ZENER DIODE GZS20 (Y)	MTZ20BT QDTZ000GZS20
D234	ZENER DIODE MTZ9.1 (B) or ZENER DIODE GZS9.1 (Y)	MTZ9.1BT QDTY00GZS9R1
D235	DIODE 1SS133 or DIODE 1SS176	1SS133T 1SS176T
D236	DIODE 1SS133 or DIODE 1SS176	1SS133T 1SS176T
D237	DIODE 1SS133 or DIODE 1SS176	1SS133T 1SS176T
D238	DIODE 1SS133 or DIODE 1SS176	1SS133T 1SS176T
D239	DIODE 1SS133 or DIODE 1SS176	1SS133T 1SS176T
D240	ZENER DIODE MTZ7.5 (B) or ZENER DIODE GZS7.5 (Y)	MTZ7.5BT QDTY00GZS7R5

Ref. No.	Description	Part No.
D242	DIODE ERD38-06L	AERD3806L000
D243	DIODE ERA22-02	QDPZ0ERA2202
D244	DIODE ERB44-02L3	QCDZ0ERB4402L
D245	DIODE R2MLF-B1 or DIODE EQB01-150	QDDZ00000R2M AEQB01150000
D248	DIODE 1SS133 or DIODE 1SS176	1SS133T 1SS176T
D249	DIODE 1SS133 or DIODE 1SS176	1SS133T 1SS176T
D251	ZENER DIODE MTZ6.8 (B) or ZENER DIODE GZS6.8 (Y)	MTZ6.8BT QDTY00GZS6R8
D252	DIODE 1SS133 or DIODE 1SS176	1SS133T 1SS176T
D253	DIODE ERB44-04L3	QDQZ0ERB4404
D254	ZENER DIODE MTZ8.2 (B) or ZENER DIODE GZS8.2 (Y)	MTZ8.2BT QDTY00GZS8R2
D256	DIODE 1SS133 or DIODE 1SS176	1SS133T 1SS176T
D501	DIODE ERC04-10L3	QDDZ0ERC0410
D502	DIODE ERC04-10L3	QDDZ0ERC0410
D503	DIODE ERC04-10L3	QDDZ0ERC0410
D504	DIODE ERC04-10L3	QDDZ0ERC0410
D505	DIODE 1SS133 or DIODE 1SS176	1SS133T 1SS176T
D506	DIODE ERB44-02L3	QCDZ0ERB4402L
D507	DIODE 1SS133 or DIODE 1SS176	1SS133T 1SS176T
D509	DIODE 1SS133 or DIODE 1SS176	1SS133T 1SS176T
D510	ZENER DIODE MTZ15 (B) or ZENER DIODE GZS15 (Y)	MTZ15BT QDTY000GZS15
D511	DIODE 1SS133 or DIODE 1SS176	1SS133T 1SS176T
ICS		
IC201	IC TMP47C634N-R514	QSMQA0ZTS016
IC202	IC TC89101P	GTC89101P***
IC203	IC TC4053BP or IC BU4053B	14DW168 14LF166
IC204	IC LA7830	14LQ163
IC205	IC AN5265	14LN160
IC206	IC TA8759AN	GTA8759AN000
IC207	IC 78M12 or IC 78M12 or IC 78M12 or IC 78M12	14L0242 AN78M12 uPC78M12HF L78M12
IC208	IC L5631	L5631
IC209	IC 78M05 or IC 78M05	AN78M05 L78M05
COILS		
L204	MICRO INDUCTOR 39μH J or MICRO INDUCTOR 39μH J	LLAXJATTU390 2161390T
L208	MICRO INDUCTOR 68μH K or MICRO INDUCTOR 68μH K	2165680T 2162680T
L209	DELAY LINE	113N852
L210	CASING COIL (1H DELAY ADJ.)	LFA07V0MM029
L211	CASING COIL (B-Y ADJ.)	LFA07V0MM031
L212	CASING COIL (R-Y ADJ.)	LFA07V0MM031
L213	MICRO INDUCTOR 10μH K or MICRO INDUCTOR 10μH K	2165100T 2162100T
L214	MICRO INDUCTOR 27μH K or	2165270T

Ref. No.	Description	Part No.
L215	MICRO INDUCTOR 27μH K	2162270T
L216	CASING COIL (BELL FILTER ADJ.)	LFA07V0MM032
L217	CASING COIL (INDENT COIL ADJ.)	LFA07V0MM030
L218	MICRO INDUCTOR 33μH K or MICRO INDUCTOR 33μH K	2165330T 2162330T
L219	POT TYPE COIL 47μH or POT TYPE COIL 47μH	LLBD**DMM001 LLBD00DQE001
L501 ▲	POT TYPE COIL 47μH or POT TYPE COIL 47μH LINE FILTER or LINE FILTER or LINE FILTER	LLBD**DMM001 LLBD00DQE001 LLBG00ZMS008 LLBG00ZBW007 1812745
TRANSISTORS		
Q204	TRANSISTOR KTC3199 (GR) or TRANSISTOR 2SC3331 (T) or TRANSISTOR 2SC3331 (U) or TRANSISTOR 2SC1815 (GR) or TRANSISTOR 2SC1740S (R) or TRANSISTOR 2SC1740S (S) or TRANSISTOR 2SC1685 (R) or TRANSISTOR 2SC1685 (S)	NQS10KTC3199 QSC3331TNPAA QSC3331UNPAA 2SC1815GRTPE2 2SC1740STPR 2SC1740STPS 2SC1685R 2SC1685S
Q205	TRANSISTOR KTC3199 (GR) or TRANSISTOR 2SC3331 (T) or TRANSISTOR 2SC3331 (U) or TRANSISTOR 2SC1815 (GR) or TRANSISTOR 2SC1740S (R) or TRANSISTOR 2SC1740S (S) or TRANSISTOR 2SC1685 (R) or TRANSISTOR 2SC1685 (S)	NQS10KTC3199 QSC3331TNPAA QSC3331UNPAA 2SC1815GRTPE2 2SC1740STPR 2SC1740STPS 2SC1685R 2SC1685S
Q206	TRANSISTOR KTC3199 (GR) or TRANSISTOR 2SC3331 (T) or TRANSISTOR 2SC3331 (U) or TRANSISTOR 2SC1815 (GR) or TRANSISTOR 2SC1740S (R) or TRANSISTOR 2SC1740S (S) or TRANSISTOR 2SC1685 (R) or TRANSISTOR 2SC1685 (S)	NQS10KTC3199 QSC3331TNPAA QSC3331UNPAA 2SC1815GRTPE2 2SC1740STPR 2SC1740STPS 2SC1685R 2SC1685S
Q207	TRANSISTOR KTC3199 (GR) or TRANSISTOR 2SC3331 (T) or TRANSISTOR 2SC3331 (U) or TRANSISTOR 2SC1815 (GR) or TRANSISTOR 2SC1740S (R) or TRANSISTOR 2SC1740S (S) or TRANSISTOR 2SC1685 (R) or TRANSISTOR 2SC1685 (S)	NQS10KTC3199 QSC3331TNPAA QSC3331UNPAA 2SC1815GRTPE2 2SC1740STPR 2SC1740STPS 2SC1685R 2SC1685S
Q208	TRANSISTOR KTC3199 (GR) or TRANSISTOR 2SC3331 (T) or TRANSISTOR 2SC3331 (U) or TRANSISTOR 2SC1815 (GR) or TRANSISTOR 2SC1740S (R) or TRANSISTOR 2SC1740S (S) or TRANSISTOR 2SC1685 (R) or TRANSISTOR 2SC1685 (S)	NQS10KTC3199 QSC3331TNPAA QSC3331UNPAA 2SC1815GRTPE2 2SC1740STPR 2SC1740STPS 2SC1685R 2SC1685S
Q209	TRANSISTOR KTA1267 (GR) or TRANSISTOR 2SA1318 (T) or TRANSISTOR 2SA1318 (U) or TRANSISTOR 2SA933S (R) or TRANSISTOR 2SA933S (S) or TRANSISTOR 2SA564 (R) or TRANSISTOR 2SA564 (S)	NQS10KTA1267 2SA1318T-AA-NP 2SA1318U-AA-NP 2SA933STPR 2SA933STPS 2SA564R 2SA564S

Ref. No.	Description	Part No.
R229	CHIP RES. 1/10W 10KΩ or CHIP RES. 1/10W 10KΩ	RRXAJR8Z0103 8Z01103C
R230	CHIP RES. 1/10W 10KΩ or CHIP RES. 1/10W 10KΩ	RRXAJR8Z0103 134F103C
R231	CHIP RES. 1/10W 47KΩ or CHIP RES. 1/10W 47KΩ	RRXAJR8Z0473 134F473C
R232	CHIP RES. 1/10W 47KΩ or CHIP RES. 1/10W 47KΩ	RRXAJR8Z0473 134F473C
R233	CHIP RES. 1/10W 10KΩ or CHIP RES. 1/10W 10KΩ	RRXAJR8Z0103 134F103C
R234	CHIP RES. 1/10W 15KΩ or CHIP RES. 1/10W 15KΩ	RRXAJR8Z0153 134F153C
R235	CHIP RES. 1/10W 18KΩ or CHIP RES. 1/10W 18KΩ	RRXAJR8Z0183 134F183C
R236	CHIP RES. 1/10W 10KΩ or CHIP RES. 1/10W 10KΩ	RRXAJR8Z0103 134F103C
R237	CHIP RES. 1/10W 33KΩ or CHIP RES. 1/10W 33KΩ	RRXAJR8Z0333 134F333C
R238	CHIP RES. 1/10W 15KΩ or CHIP RES. 1/10W 15KΩ	RRXAJR8Z0153 134F153C
R239	CHIP RES. 1/10W 15KΩ or CHIP RES. 1/10W 15KΩ	RRXAJR8Z0153 134F153C
R240	CHIP RES. 1/10W 22KΩ or CHIP RES. 1/10W 22KΩ	RRXAJR8Z0223 134F223C
R241	CHIP RES. 1/10W 27KΩ or CHIP RES. 1/10W 27KΩ	RRXAJR8Z0273 134F273C
R243	CHIP RES. 1/10W 68KΩ or CHIP RES. 1/10W 68KΩ	RRXAJR8Z0683 134F683C
R244	CHIP RES. 1/10W 68KΩ or CHIP RES. 1/10W 68KΩ	RRXAJR8Z0683 134F683C
R245	CHIP RES. 1/10W 390Ω or CHIP RES. 1/10W 390Ω	RRXAJR8Z0391 134F391C
R246	CHIP RES. 1/10W 1KΩ or CHIP RES. 1/10W 1KΩ	RRXAJR8Z0102 134F102C
R247	CHIP RES. 1/10W 5.6KΩ or CHIP RES. 1/10W 5.6KΩ	RRXAJR8Z0562 134F562C
R248	CHIP RES. 1/10W 1KΩ or CHIP RES. 1/10W 1KΩ	RRXAJR8Z0102 134F102C
R249	CARBON RES. 1/5W J 150Ω or CARBON RES. 1/6W J 150Ω	1324151 132A151
R250	CHIP RES. 1/10W 2.2KΩ or CHIP RES. 1/10W 2.2KΩ	RRXAJR8Z0222 134F222C
R251	CHIP RES. 1/10W 680Ω or CHIP RES. 1/10W 680Ω	RRXAJR8Z0681 134F681C
R252	CHIP RES. 1/10W 680Ω or CHIP RES. 1/10W 680Ω	RRXAJR8Z0681 134F681C
R253	CHIP RES. 1/10W 680Ω or CHIP RES. 1/10W 680Ω	RRXAJR8Z0681 134F681C
R254	CHIP RES. 1/10W 1.5KΩ or CHIP RES. 1/10W 1.5KΩ	RRXAJR8Z0152 134F152C
R260	CARBON RES. 1/5W J 330Ω or CARBON RES. 1/6W J 330Ω	1324331 132A331
R262	CHIP RES. 1/10W 10KΩ or CHIP RES. 1/10W 10KΩ	RRXAJR8Z0103 134F103C
R263	CHIP RES. 1/10W 10KΩ or CHIP RES. 1/10W 10KΩ	RRXAJR8Z0103 134F103C
R264	CHIP RES. 1/10W 33KΩ or CHIP RES. 1/10W 33KΩ	RRXAJR8Z0333 134F333C
R265	CHIP RES. 1/10W 8.2KΩ or CHIP RES. 1/10W 8.2KΩ	RRXAJR8Z0822 134F822C

Ref. No.	Description	Part No.
R266	CHIP RES. 1/10W 10KΩ or CHIP RES. 1/10W 10KΩ	RRXAJR8Z0103 134F103C
R267	CHIP RES. 1/10W 12KΩ or CHIP RES. 1/10W 12KΩ	RRXAJR8Z0123 134F123C
R268	CHIP RES. 1/10W 2.2KΩ or CHIP RES. 1/10W 2.2KΩ	RRXAJR8Z0153 134F153C
R269	CHIP RES. 1/10W 10KΩ or CHIP RES. 1/10W 10KΩ	RRXAJR8Z0103 134F103C
R270	CHIP RES. 1/10W 6.8KΩ or CHIP RES. 1/10W 6.8KΩ	RRXAJR8Z0682 134F682C
R271	CHIP RES. 1/10W 3.3KΩ or CHIP RES. 1/10W 3.3KΩ	RRXAJR8Z0332 134F332C
R272	CHIP RES. 1/10W 5.6KΩ or CHIP RES. 1/10W 5.6KΩ	RRXAJR8Z0562 134F562C
R273	CHIP RES. 1/10W 18KΩ or CHIP RES. 1/10W 18KΩ	RRXAJR8Z0183 134F183C
R274	CHIP RES. 1/10W 1.5KΩ or CHIP RES. 1/10W 1.5KΩ	RRXAJR8Z0152 134F152C
R275	CHIP RES. 1/10W 10KΩ or CHIP RES. 1/10W 10KΩ	RRXAJR8Z0103 134F103C
R276	CHIP RES. 1/10W 10KΩ or CHIP RES. 1/10W 10KΩ	RRXAJR8Z0103 134F103C
R277	CHIP RES. 1/10W 1KΩ or CHIP RES. 1/10W 1KΩ	RRXAJR8Z0102 134F102C
R278	CARBON RES. 1/5W J 10KΩ or CARBON RES. 1/6W J 10KΩ	1324103 132A103
R279	CHIP RES. 1/10W 47KΩ or CHIP RES. 1/10W 47KΩ	RRXAJR8Z0473 134F473C
R280	CHIP RES. 1/10W 10KΩ or CHIP RES. 1/10W 10KΩ	RRXAJR8Z0103 134F103C
R281	CHIP RES. 1/10W 82KΩ or CHIP RES. 1/10W 82KΩ	RRXAJR8Z0823 134F823C
R282	CHIP RES. 1/10W 47KΩ or CHIP RES. 1/10W 47KΩ	RRXAJR8Z0473 134F473C
R283	CHIP RES. 1/10W 33KΩ or CHIP RES. 1/10W 33KΩ	RRXAJR8Z0333 134F333C
R284	CHIP RES. 1/10W 1.8KΩ or CHIP RES. 1/10W 1.8KΩ	RRXAJR8Z0182 134F182C
R285	CHIP RES. 1/10W 1.5KΩ or CHIP RES. 1/10W 1.5KΩ	RRXAJR8Z0152 134F152C
R286	CHIP RES. 1/10W 56KΩ or CHIP RES. 1/10W 56KΩ	RRXAJR8Z0563 134F563C
R287	CHIP RES. 1/10W 68KΩ or CHIP RES. 1/10W 68KΩ	RRXAJR8Z0683 134F683C
R288	CHIP RES. 1/10W 68KΩ or CHIP RES. 1/10W 68KΩ	RRXAJR8Z0683 134F683C
R289	CHIP RES. 1/10W 220Ω or CHIP RES. 1/10W 220Ω	RRXAJR8Z0221 134F221C
R290	CHIP RES. 1/10W 3.3KΩ or CHIP RES. 1/10W 3.3KΩ	RRXAJR8Z0332 134F332C
R291	CARBON RES. 1/4W 1Ω	1345109S
R292	CARBON RES. 1/4W 2.2Ω	1345229S
R297	CEMENT RES. 5W 180Ω or CEMENT RES. 5W 180Ω	RW05181PG001 RW05181UB001
R298	CEMENT RES. 5W 180Ω or CEMENT RES. 5W 180Ω	RW05181KA006 RW05181KA006
R299	CHIP RES. 1/10W 4.7KΩ or CHIP RES. 1/10W 4.7KΩ	RRXAJR8Z0472 134F472C
R301	CHIP RES. 1/10W 10KΩ or CHIP RES. 1/10W 10KΩ	RRXAJR8Z0103 134F103C

Ref. No.	Description	Part No.
R302	CHIP RES. 1/10W 18KΩ or CHIP RES. 1/10W 18KΩ	RRXAJR8Z0183 134F183C
R303	CHIP RES. 1/10W 10KΩ or CHIP RES. 1/10W 10KΩ	RRXAJR8Z0103 134F103C
R304	CHIP RES. 1/10W 1.2KΩ or CHIP RES. 1/10W 1.2KΩ	RRXAJR8Z0122 134F122C
R305	CHIP RES. 1/10W 4.7Ω or CHIP RES. 1/10W 4.7Ω	RRXAJR8Z04R7 134F479C
R306	CARBON RES. 1/5W 220Ω or CARBON RES. 1/6W 220Ω	1324221 132A221
R307	FUSE RES. 1W 2.2Ω or FUSE RES. 1W 2.2Ω	RF01229KA004 5363229
R308	FUSE RES. 1W 2.2Ω or FUSE RES. 1W 2.2Ω	RF01229KA004 5363229
R310	CARBON RES. 1/5W J 5.6KΩ or CARBON RES. 1/6W J 5.6KΩ	1324562 132A562
R311	CARBON RES. 1/5W J 5.6KΩ or CARBON RES. 1/6W J 5.6KΩ	1324562 132A562
R314	CHIP RES. 1/10W 560Ω or CHIP RES. 1/10W 560Ω	RRXAJR8Z0561 134F561C
R315	CARBON RES. 1/4W 2.2KΩ	1345222S
R316	CEMENT RES. 5W 3.3KΩ or CEMENT RES. 5W 3.3KΩ	RW05332PG001 RW05332UB001
R317	CHIP RES. 1/10W 100KΩ or CHIP RES. 1/10W 100KΩ	RRXAJR8Z0104 134F104C
R318	CHIP RES. 1/10W 10KΩ or CHIP RES. 1/10W 10KΩ	RRXAJR8Z0103 134F103C
R319	CHIP RES. 1/10W 1.8KΩ or CHIP RES. 1/10W 1.8KΩ	RRXAJR8Z0182 134F182C
R320	CHIP RES. 1/10W 12KΩ or CHIP RES. 1/10W 12KΩ	RRXAJR8Z0123 134F123C
R321	CARBON RES. 1/5W J 220KΩ or CARBON RES. 1/6W J 220KΩ	1324224 132A224
R322	CHIP RES. 1/10W 150Ω or CHIP RES. 1/10W 150Ω	RRXAJR8Z0151 134F151C
R323	CARBON RES. 1/5W J 120Ω or CARBON RES. 1/6W J 120Ω	1324121 132A121
R324	CHIP RES. 1/10W 270KΩ or CHIP RES. 1/10W 270KΩ	RRXAJR8Z0274 134F274C
R325	CARBON RES. 1/5W J 27KΩ or CARBON RES. 1/6W J 27KΩ	1324273 132A273
R326	CHIP RES. 1/10W 3.3KΩ or CHIP RES. 1/10W 3.3KΩ	RRXAJR8Z0332 134F332C
R327	CHIP RES. 1/10W 470Ω or CHIP RES. 1/10W 470Ω	RRXAJR8Z0471 134F471C
R328	CHIP RES. 1/10W 10KΩ or CHIP RES. 1/10W 10KΩ	RRXAJR8Z0103 134F103C
R330	CHIP RES. 1/10W 10KΩ or CHIP RES. 1/10W 10KΩ	RRXAJR8Z0103 134F103C
R331	CHIP RES. 1/10W 33KΩ or CHIP RES. 1/10W 33KΩ	RRXAJR8Z0333 134F333C
R333	CHIP RES. 1/10W 270Ω or CHIP RES. 1/10W 270Ω	RRXAJR8Z0271 134F271C
R334	CHIP RES. 1/10W 270Ω or CHIP RES. 1/10W 270Ω	RRXAJR8Z0271 134F271C
R335	CHIP RES. 1/10W 270Ω or CHIP RES. 1/10W 270Ω	RRXAJR8Z0271 134F271C
R336	CHIP RES. 1/10W 270Ω or CHIP RES. 1/10W 270Ω	RRXAJR8Z0271 134F271C

Ref. No.	Description	Part No.
R337	CHIP RES. 1/10W 390Ω or CHIP RES. 1/10W 390Ω	RRXAJR8Z0391 134F391C
R338	CHIP RES. 1/10W 390Ω or CHIP RES. 1/10W 390Ω	RRXAJR8Z0391 134F391C
R339	CHIP RES. 1/10W 390Ω or CHIP RES. 1/10W 390Ω	RRXAJR8Z0391 134F391C
R340	CHIP RES. 1/10W 10KΩ or CHIP RES. 1/10W 10KΩ	RRXAJR8Z0103 134F103C
R341	CHIP RES. 1/10W 2.2KΩ or CHIP RES. 1/10W 2.2KΩ	RRXAJR8Z0222 134F222C
R342	CHIP RES. 1/10W 18KΩ or CHIP RES. 1/10W 18KΩ	RRXAJR8Z0183 134F183C
R343	CHIP RES. 1/10W 1KΩ or CHIP RES. 1/10W 1KΩ	RRXAJR8Z0102 134F102C
R344	CHIP RES. 1/10W 10KΩ or CHIP RES. 1/10W 10KΩ	RRXAJR8Z0103 134F103C
R346	CHIP RES. 1/10W 1.8KΩ or CHIP RES. 1/10W 1.8KΩ	RRXAJR8Z0182 134F182C
R347	CHIP RES. 1/10W 560Ω or CHIP RES. 1/10W 560Ω	RRXAJR8Z0561 134F561C
R348	CHIP RES. 1/10W 8.2KΩ or CHIP RES. 1/10W 8.2KΩ	RRXAJR8Z0822 134F822C
R349	CHIP RES. 1/10W 820Ω or CHIP RES. 1/10W 820Ω	RRXAJR8Z0821 134F821C
R350	CHIP RES. 1/10W 820Ω or CHIP RES. 1/10W 820Ω	RRXAJR8Z0821 134F821C
R351	CHIP RES. 1/10W 1.8KΩ or CHIP RES. 1/10W 1.8KΩ	RRXAJR8Z0182 134F182C
R352	CHIP RES. 1/10W 1.5KΩ or CHIP RES. 1/10W 1.5KΩ	RRXAJR8Z0152 134F152C
R353	CHIP RES. 1/10W 10KΩ or CHIP RES. 1/10W 10KΩ	RRXAJR8Z0103 134F103C
R354	CHIP RES. 1/10W 2.2KΩ or CHIP RES. 1/10W 2.2KΩ	RRXAJR8Z0222 134F222C
R355	CHIP RES. 1/10W 10KΩ or CHIP RES. 1/10W 10KΩ	RRXAJR8Z0103 134F103C
R356	CHIP RES. 1/10W 2.2KΩ or CHIP RES. 1/10W 2.2KΩ	RRXAJR8Z0222 134F222C
R357	CHIP RES. 1/10W 10KΩ or CHIP RES. 1/10W 10KΩ	RRXAJR8Z0103 134F103C
R358	CHIP RES. 1/10W 2.2KΩ or CHIP RES. 1/10W 2.2KΩ	RRXAJR8Z0222 134F222C
R359	CHIP RES. 1/10W 8.2KΩ or CHIP RES. 1/10W 8.2KΩ	RRXAJR8Z0822 134F822C
R360	CHIP RES. 1/10W 560Ω or CHIP RES. 1/10W 560Ω	RRXAJR8Z0561 134F561C
R361	CHIP RES. 1/10W 2.2KΩ or CHIP RES. 1/10W 2.2KΩ	RRXAJR8Z0222 134F222C
R362	CHIP RES. 1/10W 3.9KΩ or CHIP RES. 1/10W 3.9KΩ	RRXAJR8Z0392 134F392C
R363	CHIP RES. 1/10W 8.2KΩ or CHIP RES. 1/10W 8.2KΩ	RRXAJR8Z0822 134F822C
R364	CHIP RES. 1/10W 6.8KΩ or CHIP RES. 1/10W 6.8KΩ	RRXAJR8Z0682 134F682C
R365	CHIP RES. 1/10W 10KΩ or CHIP RES. 1/10W 10KΩ	RRXAJ RES103 134F103C
R366	CHIP RES. 1/10W 390Ω or CHIP RES. 1/10W 390Ω	RRXAJR8Z0391 134F391C
R367	CHIP RES. 1/10W 2.2KΩ or CHIP RES. 1/10W 2.2KΩ	RRXAJR8Z0222 134F222C

Ref. No.	Description	Part No.
R368	CHIP RES. 1/10W 15KΩ or CHIP RES. 1/10W 15KΩ	RRXAJR8Z0153 134F153C
R369	CHIP RES. 1/10W 5.6KΩ or CHIP RES. 1/10W 5.6KΩ	RRXAJR8Z0562 134F562C
R370	CHIP RES. 1/10W 5.6KΩ or CHIP RES. 1/10W 5.6KΩ	RRXAJR8Z0562 134F562C
R371	CHIP RES. 1/10W 330KΩ or CHIP RES. 1/10W 330KΩ	RRXAJR8Z0334 134F334C
R372	CHIP RES. 1/10W 4.7KΩ or CHIP RES. 1/10W 4.7KΩ	RRXAJR8Z0472 134F472C
R373	CHIP RES. 1/10W 2.2KΩ or CHIP RES. 1/10W 2.2KΩ	RRXAJR8Z0222 134F222C
R374	CHIP RES. 1/10W 10KΩ or CHIP RES. 1/10W 10KΩ	RRXAJR8Z0103 134F103C
R375	CHIP RES. 1/10W 10KΩ or CHIP RES. 1/10W 10KΩ	RRXAJR8Z0103 134F103C
R376	CHIP RES. 1/10W 820Ω or CHIP RES. 1/10W 820Ω	RRXAJR8Z0821 134F821C
R377	CHIP RES. 1/10W 150Ω or CHIP RES. 1/10W 150Ω	RRXAJR8Z0151 134F151C
R378	CHIP RES. 1/10W 4.7MΩ or CHIP RES. 1/10W 4.7MΩ	RRXAJR8Z0475 134F475C
R379	CHIP RES. 1/10W 33KΩ or CHIP RES. 1/10W 33KΩ	RRXAJR8Z0333 134F333C
R380	CHIP RES. 1/10W 10KΩ or CHIP RES. 1/10W 10KΩ	RRXAJR8Z0103 134F103C
R381	CHIP RES. 1/10W 1.2KΩ or CHIP RES. 1/10W 1.2KΩ	RRXAJR8Z0122 134F122C
R382	CHIP RES. 1/10W 1.8KΩ or CHIP RES. 1/10W 1.8KΩ	RRXAJR8Z0182 134F182C
R383	CHIP RES. 1/10W 10KΩ or CHIP RES. 1/10W 10KΩ	RRXAJR8Z0103 134F103C
R384	CHIP RES. 1/10W 10KΩ or CHIP RES. 1/10W 10KΩ	RRXAJR8Z0103 134F103C
R385	CHIP RES. 1/10W 8.2KΩ or CHIP RES. 1/10W 8.2KΩ	RRXAJR8Z0822 134F822C
R386	CHIP RES. 1/10W 10KΩ or CHIP RES. 1/10W 10KΩ	RRXAJR8Z0103 134F103C
R387	CHIP RES. 1/10W 10KΩ or CHIP RES. 1/10W 10KΩ	RRXAJR8Z0103 134F103C
R388	CHIP RES. 1/10W 10KΩ or CHIP RES. 1/10W 10KΩ	RRXAJR8Z0103 134F103C
R389	CHIP RES. 1/10W 470KΩ or CHIP RES. 1/10W 470KΩ	RRXAJR8Z0474 134F474C
R390	CHIP RES. 1/10W 68KΩ or CHIP RES. 1/10W 68KΩ	RRXAJR8Z0683 134F683C
R391	CHIP RES. 1/10W 1KΩ or CHIP RES. 1/10W 1KΩ	RRXAJR8Z0102 134F102C
R392	CHIP RES. 1/10W 3.3KΩ or CHIP RES. 1/10W 3.3KΩ	RRXAJR8Z0332 134F332C
R393	CHIP RES. 1/10W 3.3MΩ or CHIP RES. 1/10W 3.3MΩ	RRXAJR8Z0335 134F335C
R394	CHIP RES. 1/10W 560Ω or CHIP RES. 1/10W 560Ω	RRXAJR8Z0561 134F561C
R395	CHIP RES. 1/10W 1KΩ or CHIP RES. 1/10W 1KΩ	RRXAJR8Z0102 134F102C
R396	CARBON RES. 1/5W J 150KΩ or CARBON RES. 1/6W J 150KΩ	1324154 132A154
R397	CARBON RES. 1/5W J 10KΩ or CARBON RES. 1/6W J 10KΩ	1324103 132A103

Ref. No.	Description	Part No.
R398	CARBON RES. 1/5W J 33KΩ or CARBON RES. 1/6W J 33KΩ	1324333 132A333
R399	CARBON RES. 1/4W 1.5KΩ	1345152S
R400	CARBON RES. 1/5W J 22KΩ or CARBON RES. 1/6W J 22KΩ	1324223 132A223
R401	CARBON RES. 1/5W J 27KΩ or CARBON RES. 1/6W J 27KΩ	1324273 132A273
R402	CARBON RES. 1/5W J 10KΩ or CARBON RES. 1/6W J 10KΩ	1324103 132A103
R403	CARBON RES. 1/5W J 5.6KΩ or CARBON RES. 1/6W J 5.6KΩ	1324562 132A562
R404	CARBON RES. 1/5W J 100KΩ or CARBON RES. 1/6W J 100KΩ	1324104 132A104
R405	CARBON RES. 1/5W J 120KΩ or CARBON RES. 1/6W J 120KΩ	1324124 132A124
R406	CARBON RES. 1/5W J 47KΩ or CARBON RES. 1/6W J 47KΩ	1324473 132A473
R407	CARBON RES. 1/5W J 22KΩ or CARBON RES. 1/6W J 22KΩ	1324223 132A223
R408	METAL RES. 1W 15KΩ or METAL RES. 1W 15KΩ	RN01JZDZ0153 534A153
R410	CARBON RES. 1/4W 15Ω	1345150S
R411	CHIP RES. 1/10W 2.7KΩ or CHIP RES. 1/10W 2.7KΩ	RRXAJR8Z0272 134F272C
R412	METAL RES. 2W 27Ω or METAL RES. 2W 27Ω	RN02JZDZ0270 534B270
R413	CHIP RES. 1/10W 68KΩ or CHIP RES. 1/10W 68KΩ	RRXAJR8Z0683 134F683C
R414	CHIP RES. 1/10W 27KΩ or CHIP RES. 1/10W 27KΩ	RRXAJR8Z0273 134F273C
R415	CARBON RES. 1/5W J 10KΩ or CARBON RES. 1/6W J 10KΩ	1324103 132A103
R416	CARBON RES. 1/5W J 3.3KΩ or CARBON RES. 1/6W J 3.3KΩ	1324332 132A332
R417	CHIP RES. 1/10W 100Ω or CHIP RES. 1/10W 100Ω	RRXAJR8Z0101 134F101C
R418	FUSE RES. 1/2W 2.2Ω or FUSE RES. 1/2W 2.2Ω	5362229 5367229
R430	CHIP RES. 1/10W 2.2KΩ or CHIP RES. 1/10W 2.2KΩ	RRXAJR8Z0222 134F222C
R441	CARBON RES. 1/5W J 47Ω or CARBON RES. 1/6W J 47Ω	1324470 132A470
R442	CARBON RES. 1/5W J 33KΩ or CARBON RES. 1/6W J 33KΩ	1324333 132A333
R443	CARBON RES. 1/5W J 33KΩ or CARBON RES. 1/6W J 33KΩ	1324333 132A333
R444	CARBON RES. 1/5W J 560Ω or CARBON RES. 1/6W J 560Ω	1324561 132A561
R445	CARBON RES. 1/4W J 1KΩ	1345102
R446	CARBON RES. 1/5W J 10KΩ or CARBON RES. 1/6W J 10KΩ	1324103 132A103
R447	CARBON RES. 1/5W J 10KΩ or CARBON RES. 1/6W J 10KΩ	1324103 132A103
R501	CEMENT RES. 5W 1.2Ω or CEMENT RES. 5W 1.2Ω or CEMENT RES. 5W 1.2Ω	RW051R2PG001 RW051R2UB001 RW051R2KA006
R502	CARBON RES. 1/4W 120KΩ	1345124S
R503	CARBON RES. 1/4W 120KΩ	1345124S
R504	CARBON RES. 1/4W 15KΩ	1345153S
R505	CARBON RES. 1/4W 150Ω	1345151S

Ref. No.	Description	Part No.
R506	CARBON RES. 1/4W 2.2KΩ	1345222S
R507	METAL RES. 2W 82Ω or METAL RES. 2W 82Ω	RN02JZDZ0820 534B820
R508	METAL RES. 3W 68Ω or METAL RES. 3W 68KΩ	RN03680KE003 RN03JZDZ0680 RN03680KA001
R509	CARBON RES. 1/5W J 470Ω or CARBON RT RE 1/6W J 470Ω	1324471 132A471
R510	CARBON RES. 1/5W J 22KΩ or CARBON RES. 1/6W J 22KΩ	1324223 132A223
R512	METAL RES. 2W 0.68Ω or METAL RES. 2W 0.68Ω	RN02JZDZ068A 534B68A
R513	CARBON RES. 1/4W 5.6KΩ	1345562S
R514	METAL RES. 3W 33Ω or METAL RES. 3W 33Ω or METAL RES. 3W 33Ω	RN03330KE003 RN03JZDZ0330 RN03330KA001
R517	CARBON RES. 1/5W J 1.2MΩ or CARBON RES. 1/6W J 1.2MΩ	1324125 132A125
R518	CARBON RES. 1/5W J 1MΩ or CARBON RES. 1/6W J 1MΩ	1324105 132A105
R519	CARBON RES. 1/5W J 330Ω or CARBON RES. 1/6W J 330Ω	1324331 132A331
R520	CARBON RES. 1/5W J 47KΩ or CARBON RES. 1/6W J 47KΩ	1324473 132A473
R521	CARBON RES. 1/5W J 27KΩ or CARBON RES. 1/6W J 27KΩ	1324273 132A273
R522	CARBON RES. 1/4W 560KΩ	1345564S
SWITCHES		
SW201	TACT SWITCH or TACT SWITCH or TACT SWITCH or TACT SWITCH	SST0101AL013 SST0101MS013 SST0101AL014 5622217
SW202	TACT SWITCH or TACT SWITCH or TACT SWITCH or TACT SWITCH	SST0101AL013 SST0101MS013 SST0101AL014 5622217
SW203	TACT SWITCH or TACT SWITCH or TACT SWITCH or TACT SWITCH	SST0101AL013 SST0101MS013 SST0101AL014 5622217
SW204	TACT SWITCH or TACT SWITCH or TACT SWITCH or TACT SWITCH	SST0101AL013 SST0101MS013 SST0101AL014 5622217
SW205	TACT SWITCH or TACT SWITCH or TACT SWITCH or TACT SWITCH	SST0101AL013 SST0101MS013 SST0101AL014 5622217
SW206	TACT SWITCH or TACT SWITCH or TACT SWITCH or TACT SWITCH	SST0101AL013 SST0101MS013 SST0101AL014 5622217
SW207	TACT SWITCH or TACT SWITCH or TACT SWITCH or TACT SWITCH	SST0101AL013 SST0101MS013 SST0101AL014 5622217
SW208	TACT SWITCH or TACT SWITCH or TACT SWITCH or TACT SWITCH	SST0101AL013 SST0101MS013 SST0101AL014 5622217

Ref. No.	Description	Part No.
SW209	SLIDE SWITCH or SLIDE SWITCH or SLIDE SWITCH or SLIDE SWITCH	SSS0202DK001 1621654 SSS0202WM001 SSS0202HZ003
SW501	PUSH SWITCH	SPP0A8ZAL001
TRANSFORMERS		
T201 Δ	F.B.T. 154-064M or F.B.T. FCK-14B025	LTF00EPGS001 LTF00EPM002
T202	H. DRIVE TRANS	1150325
T501 Δ	POWER TRANS	LTT00EPM011
VOLUMES		
VR201	SEMIFIXED RES. 10KB (V. POSITION ADJ.)	138J781
VR202	SEMIFIXED RES. 500B (H. POSITION ADJ.)	138J776
VR203	SEMIFIXED RES. 1KB (1H DELAY ADJ.)	138J777
VR204	SEMIFIXED RES. 100KB (V. SIZE ADJ.)	138J785
VR205	SEMIFIXED RES. 2KB (VOLTAGE ADJ.)	138J778
MISCELLANEOUS		
DL201	GLASS DELAY or GLASS DELAY	1813554 1812056
F501 Δ	FUSE T4.0AH 250V	PAGC20BAG402
FH501	FUSE HOLDER or FUSE HOLDER or FUSE HOLDER	XH01Z00DK001 1790424 1790848
FH502	FUSE HOLDER or FUSE HOLDER or FUSE HOLDER	XH01Z00DK001 1790424 1790848
HS 1	HEAT SINK PZ (for Q501)	0EM300490
HS 2	HEAT SINK PX (for IC204 / IC207)	0EM401256
IP201 Δ	IC PROTECTOR ICP-N10	579F085Z
IP202 Δ	IC PROTECTOR ICP-N15	579F086Z
J201	EARPHONE JACK	JYSL030HD002
J202	RCA JACK	JXRL020HD001
J203	BNC JACK	JXNL010HD002
LD 2	RIBBON WIRE 3P (for CRT PCB)	WX1L7401-003
LD 3	RIBBON WIRE 6P (for CRT PCB)	WX1L7401-004
PS501 Δ	THERMISTER (POSISTER)	5790117
TP 1	TEST PIN or TEST PIN	1700093 1740354
TP 2	TEST PIN or TEST PIN	1700093 1740354
TP 3	TEST PIN or TEST PIN	1700093 1740354
TP 4	TEST PIN or TEST PIN	1700093 1740354
TP 5	TEST PIN or TEST PIN	1700093 1740354
TU201	TUNER (ENV-59874F2)	UTUNPSDMS003
U201	REMOCON RECEIVING UNIT	USESJRSSN001
W501 Δ	AC CORD	WAE0192LW001
XT201	CERAMIC RESONATOR 4.19MHz or CERAMIC RESONATOR 4.19MHz	1813682 1812885
XT202	CERAMIC RESONATOR CSB503F30	1813527
XT203	CRYSTAL OSCILLATOR 4.43MHz	1811387
XT204	CRYSTAL OSCILLATOR 3.58MHz	1811291
	CABLE TIE or CABLE TIE	1790256 1790356

CRT P.C.B.

Ref. No.	Description	Part No.
CRT P.C.B.		
Consists of the following:		
CAPACITORS		
C601	CERAMIC CAP. 0.01μF/2KV or CERAMIC CAP. 0.01μF/2KV	CCD3DZP0E103 6220602
C602	CHIP CERAMIC CAP. 150pF/50V SL or CHIP CERAMIC CAP. 150pF/50V SL	CHE1JJ8SL151 1270151C
C603	CHIP CERAMIC CAP. 150pF/50V SL or CHIP CERAMIC CAP. 150pF/50V SL	CHE1JJ8SL151 1270151C
C604	CHIP CERAMIC CAP. 150pF/50V SL or CHIP CERAMIC CAP. 150pF/50V SL	CHE1JJ8SL151 1270151C
C605	ELECTROLYTIC CAP. 10μF/50V	126F106S
CONNECTORS		
CN601	CRT SOCKET or CRT SOCKET	1780080 1780218
CN602	CONNECTOR BASE 1P (for CRT GND) or CONNECTOR BASE 1P (for CRT GND) or CONNECTOR BASE 1P (for CRT GND)	1700576 1730688 JTEA000LC001
CN603	CABLE HOLDER 3P or CABLE HOLDER 3P	XW01D03NF001 XW01B03NF001
CN604	CABLE HOLDER 6P or CABLE HOLDER 6P	XW01D06NF001 XW01B06NF001
COIL		
L601	MICRO INDUCTOR 180μH K or MICRO INDUCTOR 180μH K	2162181T 2165181T
TRANSISTORS		
Q601	TRANSISTOR 2SC2228 (D) or TRANSISTOR 2SC2228 (E)	2SC2228D-AE-MP 2SC2228E-AE-MP
Q602	TRANSISTOR 2SC2228 (D) or TRANSISTOR 2SC2228 (E)	2SC2228D-AE-MP 2SC2228E-AE-MP
Q603	TRANSISTOR 2SC2228 (D) or TRANSISTOR 2SC2228 (E)	2SC2228D-AE-MP 2SC2228E-AE-MP
RESISTORS		
R601	CARBON RES. 1/4W 1.8KΩ	1345182S
R602	CARBON RES. 1/4W 1.8KΩ	1345182S
R603	CARBON RES. 1/4W 1.8KΩ	1345182S
R604	CARBON RES. 1/4W 1.5KΩ	1345152S
R605	CARBON RES. 1/4W 1.5KΩ	1345152S
R606	CARBON RES. 1/4W 1.5KΩ	1345152S
R607	CHIP RES. 1/10W 1.8KΩ or CHIP RES. 1/10W 1.8KΩ	RRXAJR8Z0182 134F182C
R608	CHIP RES. 1/10W 1.2KΩ or CHIP RES. 1/10W 1.2KΩ	RRXAJR8Z0122 134F122C
R609	CHIP RES. 1/10W 220Ω or CHIP RES. 1/10W 220Ω	RRXAJR8Z0221 134F221C
R610	CHIP RES. 1/10W 1.8KΩ or CHIP RES. 1/10W 1.8KΩ	RRXAJR8Z0182 134F182C
R611	CHIP RES. 1/10W 220Ω or CHIP RES. 1/10W 220Ω	RRXAJR8Z0221 134F221C
R612	CHIP RES. 1/10W 1.2KΩ or CHIP RES. 1/10W 1.2KΩ	RRXAJR8Z0122 134F122C
R613	CHIP RES. 1/10W 220Ω or CHIP RES. 1/10W 220Ω	RRXAJR8Z0221 134F221C
R614	CHIP RES. 1/10W 1.8KΩ or CHIP RES. 1/10W 1.8KΩ	RRXAJR8Z0182 134F182C
R615	CHIP RES. 1/10W 1.2KΩ or CHIP RES. 1/10W 1.2KΩ	RRXAJR8Z0122 134F122C
R616	CHIP RES. 1/10W 220Ω or	RRXAJR8Z0221

Ref. No.	Description	Part No.
R617	CHIP RES. 1/10W 220Ω METAL RES. 1W 15KΩ or METAL RES. 1W 15KΩ	134F221C RN01JZDZ0153 534A153
R618	METAL RES. 1W 15KΩ or METAL RES. 1W 15KΩ	RN01JZDZ0153 534A153
R619	METAL RES. 1W 15KΩ or METAL RES. 1W 15KΩ	RN01JZDZ0153 534A153
VOLUMES		
VR601	SEMIFIXED RES. 20KB (SUB BRT ADJ.)	138J918
VR602	SEMIFIXED RES. 500B (B. DRIVE ADJ.)	138J912
VR603	SEMIFIXED RES. 500B (R. DRIVE ADJ.)	138J912
VR604	SEMIFIXED RES. 5KB (B. CUT OFF ADJ.)	138J916
VR605	SEMIFIXED RES. 5KB (G. CUT OFF ADJ.)	138J916
VR606	SEMIFIXED RES. 5KB (R. CUT OFF ADJ.)	138J916

IF P.C.B.

Ref. No.	Description	Part No.
IF P.C.B.		
Consists of the following:		
CAPACITORS		
C101	CHIP CERAMIC CAP. 22pF/50V SL or CHIP CERAMIC CAP. 22pF/50V SL	CHE1JJ8SL220 1270220C
C102	CHIP CERAMIC CAP. 10pF/50V SL or CHIP CERAMIC CAP. 10pF/50V SL	CHE1JF8SL100 1270100C
C103	CHIP CERAMIC CAP. 0.01μF/50V B or CHIP CERAMIC CAP. 0.01μF/50V B	CHE1JK80B103 12B3103C
C104	MYLAR CAP. 0.068μF/50V K	2250683S
C105	CHIP CERAMIC CAP. 0.001μF/50V B or CHIP CERAMIC CAP. 0.001μF/50V B	CHE1JK80B102 12B3102C
C106	ELECTROLYTIC CAP. 0.47μF/50V	126F474S
C107	ELECTROLYTIC CAP. 4.7μF/50V	126F475S
C108	CHIP CERAMIC CAP. 0.01μF/50V Z or CHIP CERAMIC CAP. 0.01μF/50V Z	CHE1JJ80F103 12F3103C
C110	CHIP CERAMIC CAP. 0.01μF/50V Z or CHIP CERAMIC CAP. 0.01μF/50V Z	CHE1JJ80F103 12F3103C
C111	CHIP CERAMIC CAP. 0.001μF/50V Z or CHIP CERAMIC CAP. 0.01μF/50V Z	CHE1JJ80F103 12F3103C
C112	CHIP CERAMIC CAP. 0.01μF/50V Z or CHIP CERAMIC CAP. 0.01μF/50V Z	CHE1JJ80F103 12F3103C
C113	CHIP CERAMIC CAP. 0.01μF/50V Z or CHIP CERAMIC CAP. 0.01μF/50V Z	CHE1JJ80F103 12F3103C
C120	CHIP CERAMIC CAP. 0.01μF/50V Z or CHIP CERAMIC CAP. 0.01μF/50V Z	CHE1JJ80F103 12F3103C
C121	CHIP CERAMIC CAP. 0.01μF/50V Z or CHIP CERAMIC CAP. 0.01μF/50V Z	CHE1JJ80F103 12F3103C
C122	CHIP CERAMIC CAP. 130pF/50V CH or CHIP CERAMIC CAP. 130pF/50V CH	CHE1JJ8CH131 12CH131C
C124	CHIP CERAMIC CAP. 27pF/50V SL or CHIP CERAMIC CAP. 27pF/50V SL	CHE1JJ8SL270 1270270C
C125	CHIP CERAMIC CAP. 33pF/50V SL or CHIP CERAMIC CAP. 33pF/50V SL	CHE1JJ8SL330 1270330C
C126	CHIP CERAMIC CAP. 22pF/50V SL or CHIP CERAMIC CAP. 22pF/50V SL	CHE1JJ8SL220 1270220C
C127	CHIP CERAMIC CAP. 27pF/50V SL or CHIP CERAMIC CAP. 27pF/50V SL	CHE1JJ8SL270 1270270C
C128	ELECTROLYTIC CAP. 47μF/50V	126F476S
C129	CHIP CERAMIC CAP. 0.01μF/50V Z or CHIP CERAMIC CAP. 0.01μF/50V Z	CHE1JJ80F103 12F3103C

Ref. No.	Description	Part No.
C130	CHIP CERAMIC CAP. 0.01μF/50V Z or CHIP CERAMIC CAP. 0.01μF/50V Z	CHE1JJ80F103 12F3103C
CONNECTORS		
CN101	PIN HEADER 6P	1770989
CN102	PIN HEADER 3P	1770986
CN103	CONNECTOR BASE 4P (for TEST POINT)	1730628
CN104	CONNECTOR BASE 3P (for TEST POINT)	1730627
IC		
IC101	IC LA7530N	14LQ162
COILS		
L101	MICRO INDUCTOR 3.9μH K or MICRO INDUCTOR 3.9μH K	2165399T 2162399T
L102	MICRO INDUCTOR 2.7μH K or MICRO INDUCTOR 2.7μH K	2165279T 2162279T
L104	MICRO INDUCTOR 10μH K or MICRO INDUCTOR 10μH K	2165100T 2162100T
L105	MICRO INDUCTOR 10μH K or MICRO INDUCTOR 10μH K	2165100T 2162100T
L106	CASING COIL (38.0MHz ADJ.)	LFA07V0MM001
L107	CASING COIL (AFT ADJ.)	LFA07V0MM002
TRANSISTORS		
Q102	TRANSISTOR KTC3199 (GR) or TRANSISTOR 2SC3331 (T) or TRANSISTOR 2SC3331 (U) or TRANSISTOR 2SC1815 (GR) or TRANSISTOR 2SC1740S (R) or TRANSISTOR 2SC1740S (S) or TRANSISTOR 2SC1685 (R) or TRANSISTOR 2SC1685 (S)	NQS10KTC3199 QSC3331TNPAA QSC3331UNPAA 2SC1815GRTP2 2SC1740STPR 2SC1740STPS 2SC1685R 2SC1685S
Q103	TRANSISTOR 2SC3000 (E)	C3000E-AA-NP
Q104	TRANSISTOR KTA1267 (GR) or TRANSISTOR 2SA1318 (T) or TRANSISTOR 2SA1318 (U) or TRANSISTOR 2SA933S (R) or TRANSISTOR 2SA933S (S) or TRANSISTOR 2SA564 (R) or TRANSISTOR 2SA564 (S)	NQS10KTA1267 2SA1318T-AA-NP 2SA1318U-AA-NP 2SA933STPR 2SA933STPS 2SA564R 2SA564S
RESISTORS		
R101	CHIP RES. 1/10W 470Ω or CHIP RES. 1/10W 470Ω	RRXAJR8Z0471 134F471C
R102	CHIP RES. 1/10W 390Ω or CHIP RES. 1/10W 390Ω	RRXAJR8Z0391 134F391C
R103	CHIP RES. 1/10W 470Ω or CHIP RES. 1/10W 470Ω	RRXAJR8Z0471 134F471C
R104	CHIP RES. 1/10W 330Ω or CHIP RES. 1/10W 330Ω	RRXAJR8Z0331 134F331C
R105	CHIP RES. 1/10W 5.6KΩ or CHIP RES. 1/10W 5.6KΩ	RRXAJR8Z0562 134F562C
R106	CHIP RES. 1/10W 1.8KΩ or CHIP RES. 1/10W 1.8KΩ	RRXAJR8Z0182 134F182C
R107	CHIP RES. 1/10W 47KΩ or CHIP RES. 1/10W 47KΩ	RRXAJR8Z0473 134F473C
R108	CHIP RES. 1/10W 1KΩ or CHIP RES. 1/10W 1KΩ	RRXAJR8Z0102 134F102C
R109	CHIP RES. 1/10W 22KΩ or CHIP RES. 1/10W 22KΩ	RRXAJR8Z0223 134F223C
R110	CHIP RES. 1/10W 560Ω or CHIP RES. 1/10W 560Ω	RRXAJR8Z0561 134F561C
R111	CHIP RES. 1/10W 1.5KΩ or	RRXAJR8Z0152

Ref. No.	Description	Part No.
R112	CHIP RES. 1/10W 1.5KΩ CHIP RES. 1/10W 82KΩ or CHIP RES. 1/10W 82KΩ	134F152C RRXAJR8Z0823 134F823C
R113	CHIP RES. 1/10W 180KΩ or CHIP RES. 1/10W 180KΩ	RRXAJR8Z0184 134F184C
R115	CHIP RES. 1/10W 330Ω or CHIP RES. 1/10W 330Ω	RRXAJR8Z0331 134F331C
R116	CHIP RES. 1/10W 560Ω or CHIP RES. 1/10W 560Ω	RRXAJR8Z0561 134F561C
R117	CHIP RES. 1/10W 5.6KΩ or CHIP RES. 1/10W 5.6KΩ	RRXAJR8Z0562 8Z05562C
R118	CHIP RES. 1/10W 33Ω or CHIP RES. 1/10W 33Ω	RRXAJR8Z0330 134F330C
R119	CHIP RES. 1/10W 1.5KΩ or CHIP RES. 1/10W 1.5KΩ	RRXAJR8Z0152 134F152C
R120	CHIP RES. 1/10W 68Ω or CHIP RES. 1/10W 68Ω	RRXAJR8Z0680 134F680C
R122	CHIP RES. 1/10W 120KΩ or CHIP RES. 1/10W 120KΩ	RRXAJR8Z0124 134F124C
R123	CHIP RES. 1/10W 100KΩ or CHIP RES. 1/10W 100KΩ	RRXAJR8Z0104 134F104C
R124	CHIP RES. 1/10W 1.8KΩ or CHIP RES. 1/10W 1.8KΩ	RRXAJR8Z0182 134F182C
R126	CHIP RES. 1/10W 1KΩ or CHIP RES. 1/10W 1KΩ	RRXAJR8Z0102 134F102C
R128	CHIP RES. 1/10W 3.3KΩ or CHIP RES. 1/10W 3.3KΩ	RRXAJR8Z0332 134F332C
R129	CHIP RES. 1/10W 120Ω or CHIP RES. 1/10W 120Ω	RRXAJR8Z0121 134F121C
R130	CHIP RES. 1/10W 1.5KΩ or CHIP RES. 1/10W 1.5KΩ	RRXAJR8Z0152 134F152C
R131	CHIP RES. 1/10W 560Ω or CHIP RES. 1/10W 560Ω	RRXAJR8Z0561 134F561C
R132	CHIP RES. 1/10W 100Ω or CHIP RES. 1/10W 100Ω	RRXAJR8Z0101 134F101C
VOLUME		
VR101	SEMIFIXED RES. 10KB (AGC ADJ.)	138J917
MISCELLANEOUS		
CF101	CERAMIC DISCRIMINATOR CDA5.5MC26	1812020
CF102	CERAMIC DISCRIMINATOR CDA6.5MC26	1813594
CF103	CERAMIC TRAP TPW02B	1813593
CF104	CERAMIC FILTER SFE5.5MBF	1812018
CF105	CERAMIC FILTER SFE6.5MBF	1813595
SAW101	SAW FILTER SAF38.0MZL70Z	FB8386PMR002

TELETXT P.C.B. ASSEMBLY

Ref. No.	Description	Part No.
	TELETXT P.C.B. ASSEMBLY	MCT-39B
	Consists of the following:	
▲	P.C.B.	BL7501F01002
CAPACITORS		
C701	CHIP CAP. 0.01μF/50V Z or CHIP CAP. 0.01μF/50V Z	CHE1JZB0Z103 12F3103C
C702	CHIP CAP. 220pF/50V SL	1270221C
C703	CHIP CAP. 15pF/50V SL	1270150C
C704	CHIP CAP. 15pF/50V SL	1270150C
C705	SEMICUNDUCTOR CAP. 0.1μF/50V Z	1220520S
C706	ELECTROLYTIC CAP. 47μF/16V	126C476S
C707	ELECTROLYTIC CAP. 1μF/50V	126F105S
C708	CHIP CAP. 0.001μF/50V B	12B3102C
C709	CHIP CAP. 47pF/50V SL	1270470C
C710	CHIP CAP. 220pF/50V SL	1270221C
C711	CHIP CAP. 0.001μF/50V B	12B3102C
C712	SEMICUNDUCTOR CAP. 0.1μF/50V Z	1220520S
C714	SEMICUNDUCTOR CAP. 0.1μF/50V Z	1220520S
C715	CHIP CAP. 0.0022μF/50V B	12B3222C
C716	CHIP CAP. 10pF/50V C	12CH100C
C717	CHIP CAP. 270pF/50V SL	1270271C
C718	CHIP CAP. 82pF/50V SL	1270820C
C719	ELECTROLYTIC CAP. 220μF/6.3V	126A227S
C720	ELECTROLYTIC CAP. 100μF/6.3V	126A107S
C721	ELECTROLYTIC CAP. 100μF/6.3V	126A107S
C722	CHIP CAP. 0.01μF/50V Z or CHIP CAP. 0.01μF/50V Z	CHE1JZB0Z103 12F3103C
C723	CHIP CAP. 330pF/50V SL	1270331C
C724	CHIP CAP. 330pF/50V SL	1270331C
C725	CHIP CAP. 330pF/50V SL	1270331C
C727	CHIP CAP. 330pF/50V SL	1270331C
C730	CHIP CAP. 100pF/50V SL	1270101C
C734	CHIP CAP. 100pF/50V SL	1270101C
CONNECTORS		
CN701	CONNECTOR BASE 4P	1770260
CN702	CONNECTOR BASE 7P	1770263
DIODE		
D701	BALI. CAP. DIODE SVC201	ASVC201SPACD
ICS		
IC701	IC CF70195	GC91000TY004
IC702	IC CF72306	NSMFASTY001
IC703	IC PST-529C-TA (C) or IC PST-523C-TA (C)	14D0665Z 14L0174Z
COILS		
L702	CASING COIL (TEXT ADJ.)	LFA07V0MM016
L703	MICRO INDUCTOR 1.5μH or MICRO INDUCTOR 1.5μH	2165159S 2162159S
L704	MICRO INDUCTOR 22μH or MICRO INDUCTOR 22μH	2165220S 2162220S
L705	MICRO INDUCTOR 1.5μH or MICRO INDUCTOR 1.5μH	2165159S 2162159S
L706	MICRO INDUCTOR 1.5μH or MICRO INDUCTOR 1.5μH	2165159S 2162159S
L708	MICRO INDUCTOR 1.5μH or MICRO INDUCTOR 1.5μH	2165159S 2162159S
L709	MICRO INDUCTOR 1.5μH or MICRO INDUCTOR 1.5μH	2165159S 2162159S
L710	MICRO INDUCTOR 1.5μH or	2165159S


Ref. No.	Description	Part No.
L711	MICRO INDUCTOR 1.5μH MICRO INDUCTOR 1.5μH or MICRO INDUCTOR 1.5μH	2162159S 2165159S 2162159S
L712	MICRO INDUCTOR 1.5μH or MICRO INDUCTOR 1.5μH	2165159S 2162159S
L713	MICRO INDUCTOR 1.5μH or MICRO INDUCTOR 1.5μH	2165159S 2162159S
TRANSISTOR		
Q701	TRANSISTOR KTC3199 (GR) or TRANSISTOR 2SC3331 (T) or TRANSISTOR 2SC3331 (U) or TRANSISTOR 2SC1815 (GR) or TRANSISTOR 2SC1740S (R) or TRANSISTOR 2SC1740S (S) or TRANSISTOR 2SC1685 (R) or TRANSISTOR 2SC1685 (S)	NQS10KTC3199 QSC3331TNPAA QSC3331UNPAA 2SC1815GRTPE2 2SC1740STPR 2SC1740STPS 2SC1685R 2SC1685S
RESISTORS		
R701	CHIP RES. 1/10W 10KΩ or CHIP RES. 1/10W 10KΩ	RRXAJR8Z0103 134F103C
R702	CHIP RES. 1/10W 1KΩ or CHIP RES. 1/10W 1KΩ	RRXAJR8Z0102 134F102C
R706	CHIP RES. 1/10W 560Ω or CHIP RES. 1/10W 560Ω	RRXAJR8Z0561 134F561C
R707	CHIP RES. 1/10W 1.5KΩ or CHIP RES. 1/10W 1.5KΩ	RRXAJR8Z0152 134F152C
R708	CHIP RES. 1/10W 100KΩ or CHIP RES. 1/10W 100KΩ	RRXAJR8Z0104 134F104C
R709	CHIP RES. 1/10W 33KΩ or CHIP RES. 1/10W 33KΩ	RRXAJR8Z0333 134F333C
R710	CHIP RES. 1/10W 10KΩ or CHIP RES. 1/10W 10KΩ	RRXAJR8Z0103 134F103C
R711	CHIP RES. 1/10W 6.8KΩ or CHIP RES. 1/10W 6.8KΩ	RRXAJR8Z0682 134F682C
R712	CHIP RES. 1/10W 8.2KΩ or CHIP RES. 1/10W 8.2KΩ	RRXAJR8Z0822 134F822C
R713	CHIP RES. 1/10W 10KΩ or CHIP RES. 1/10W 10KΩ	RRXAJR8Z0103 134F103C
R714	CHIP RES. 1/10W 33KΩ or CHIP RES. 1/10W 33KΩ	RRXAJR8Z0333 134F333C
R715	CHIP RES. 1/10W 1.2KΩ or CHIP RES. 1/10W 1.2KΩ	RRXAJR8Z0122 134F122C
R716	CHIP RES. 1/10W 1.2KΩ or CHIP RES. 1/10W 1.2KΩ	RRXAJR8Z0122 134F122C
R717	CHIP RES. 1/10W 1.2KΩ or CHIP RES. 1/10W 1.2KΩ	RRXAJR8Z0122 134F122C
R718	CHIP RES. 1/10W 1.2KΩ or CHIP RES. 1/10W 1.2KΩ	RRXAFR8Z0122 134F122C
R719	CHIP RES. 1/10W 220Ω or CHIP RES. 1/10W 220Ω	RRXAJR8Z0221 134F221C
R721	CHIP RES. 1/10W 10KΩ or CHIP RES. 1/10W 10KΩ	RRXAJR8Z0103 134F103C
R723	CHIP RES. 1/10W 1KΩ or CHIP RES. 1/10W 1KΩ	RRXAJR8Z0102 134F102C
R724	CHIP RES. 1/10W 1KΩ or CHIP RES. 1/10W 1KΩ	RRXAJR8Z0102 134F102C
MISCELLANEOUS		
TP701	TEST PIN or TEST PIN	1700093 1740354
TP702	TEST PIN or TEST PIN	1700093 1740354

Ref. No.	Description	Part No.
X701	CRYSTAL OSCILLATOR 13.875MHz	FX0136LCU001

CHASSIS ELECTRICAL PARTS

Ref. No.	Description	Part No.
CRT 1 ▲	CRT 370KRB22-TC09(SPYB) or CRT 37GDA85X-TC01(P) or CRT A34KFC12XX48	1812341 1812724 TCRT1C*GS001
L502 ▲	DEGAUSING COIL or DEGAUSING COIL	LLBH00ZT2001 LLBH00ZAB006
LD 1	WIRE ASSEMBLY (for SPEAKER)	WX1L7500-001
LD 4	WIRE ASSEMBLY (for CRT GND)	WX1L7401-001A
SP 1	SPEAKER or SPEAKER or SPEAKER or SPEAKER	1520568 1520614 1520589 DSD0807HC001 15700093





















BLOCK DIAGRAM

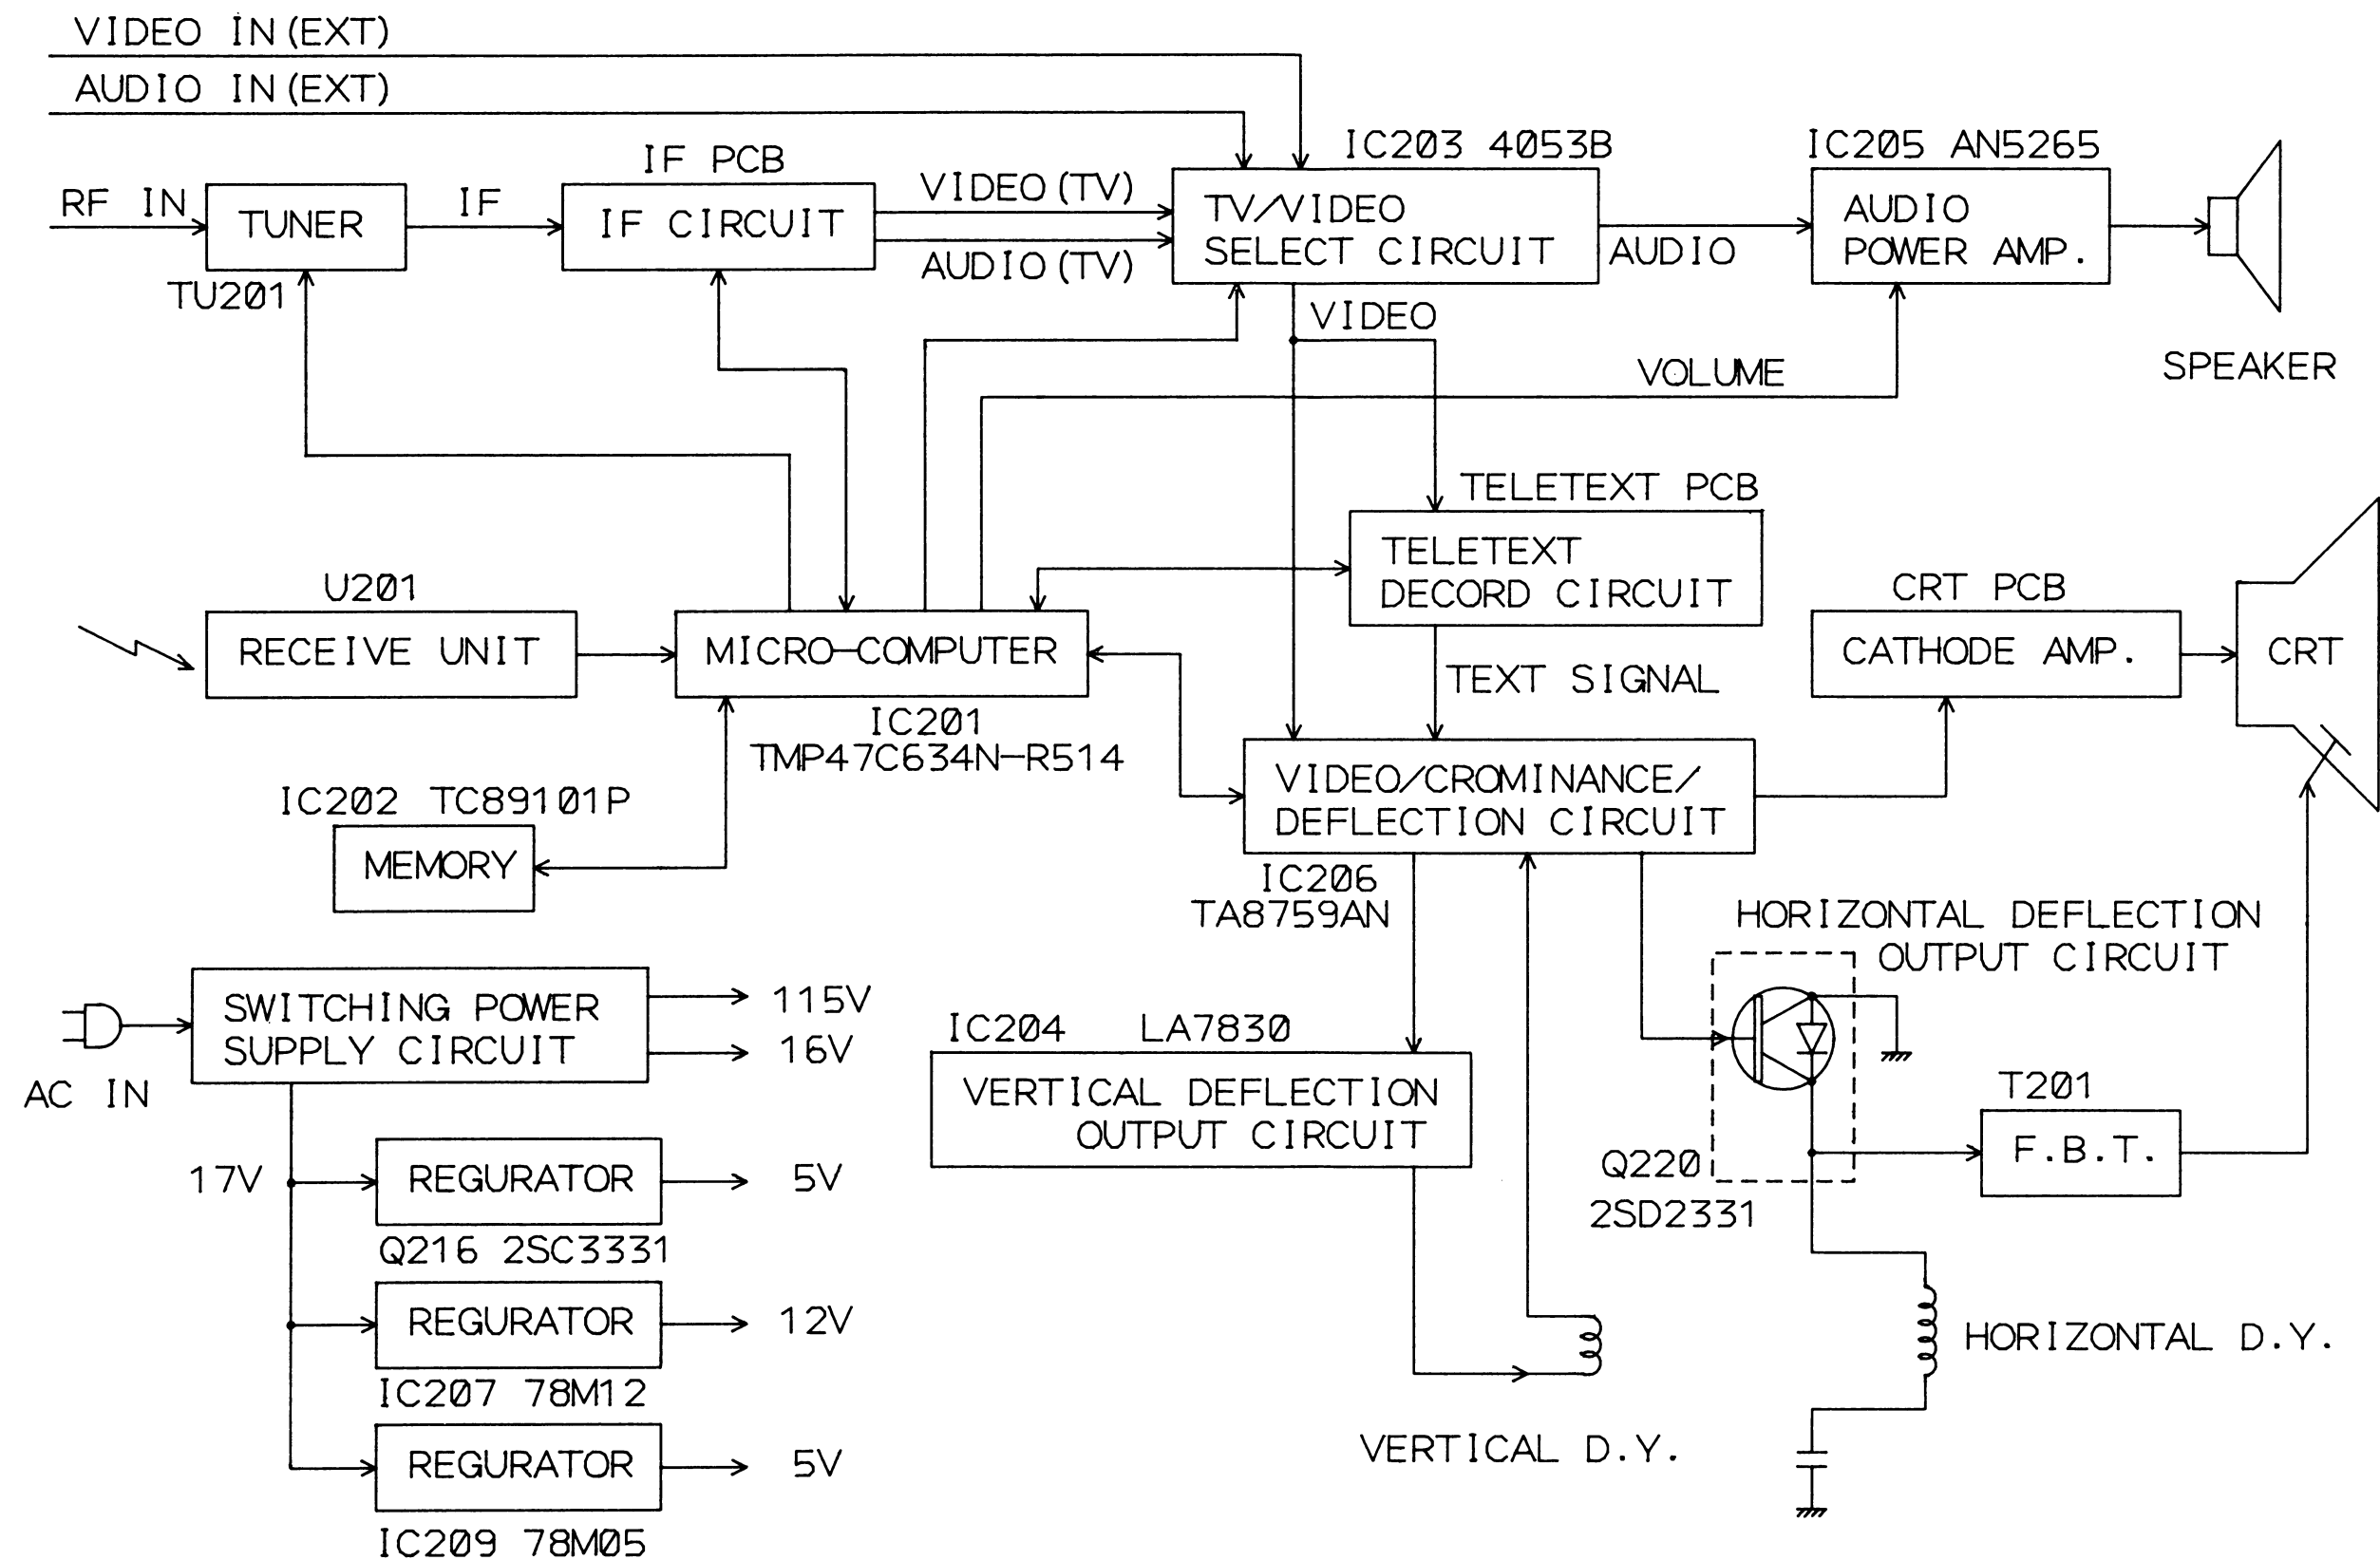


WAVEFORM PHOTOGRAPHS

INPUT: PAL Color Bar Signal (with 1KHz Audio Signal)
RECEIVING CH.: E2 ch (48.25 MHz)
PRESET MODE: Press Picture Select button on the remote control unit,
then press the number "1" button.
(Brightness--- Center Color--- Center Contrast--- Approx 70%)


WF1 ~ WF20 = Waveforms to be observed at
Waveform check points.
(Shown in Schematic Diagram.)

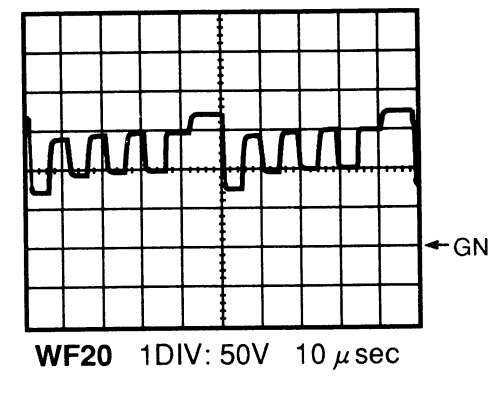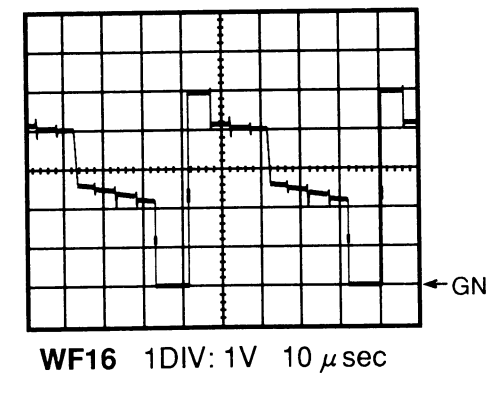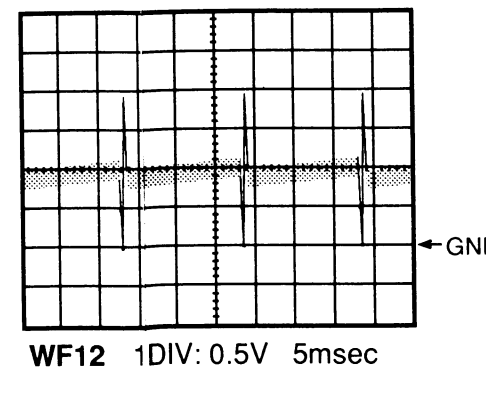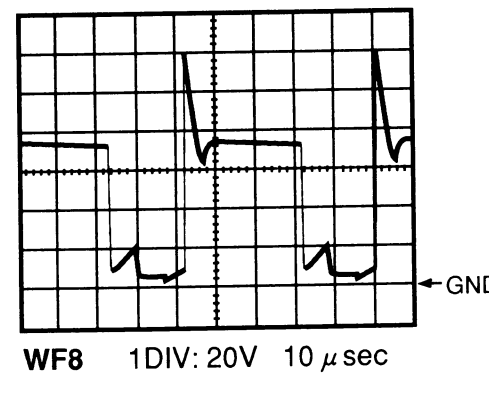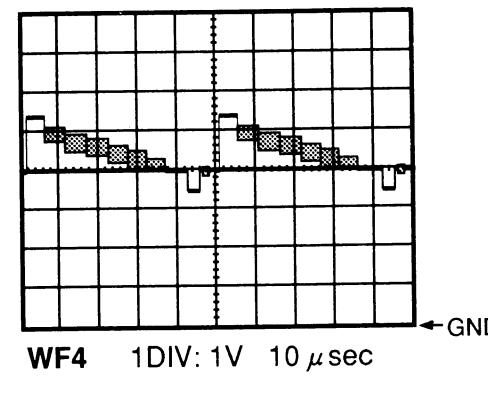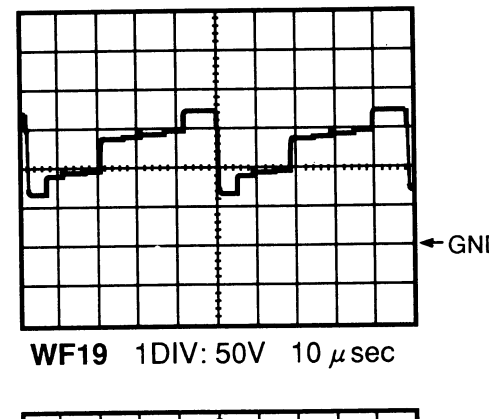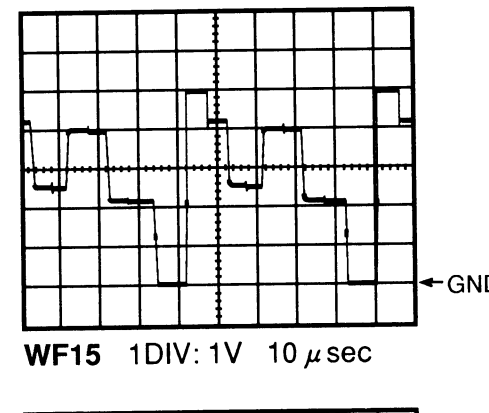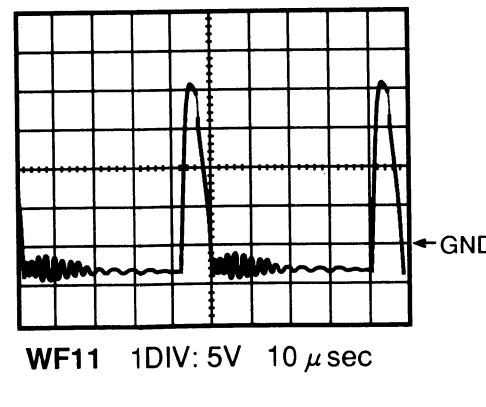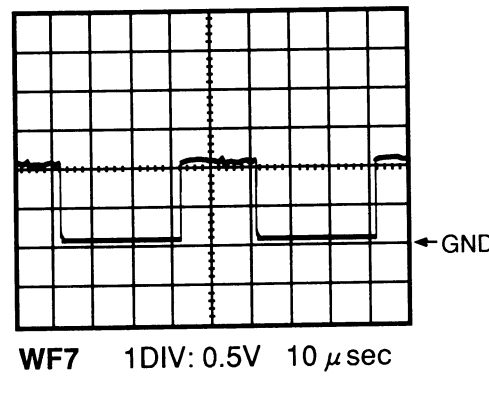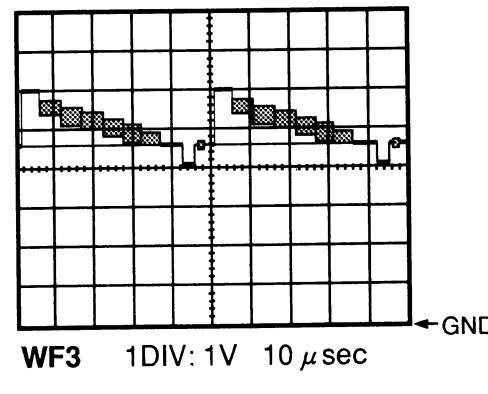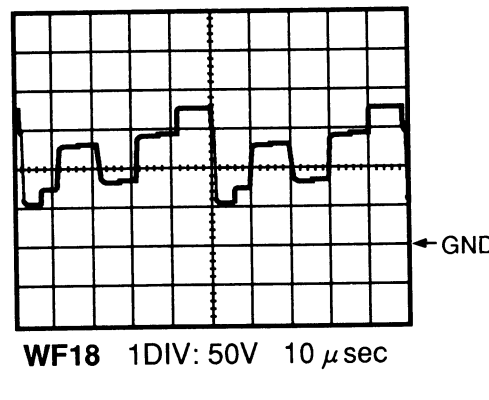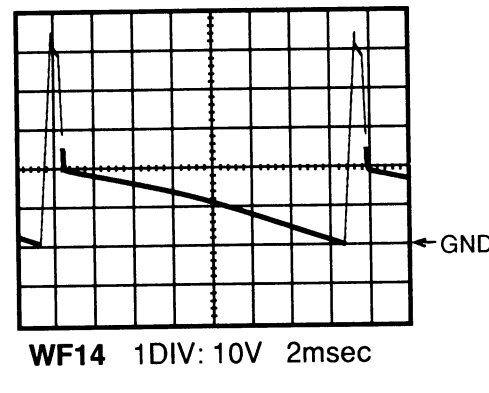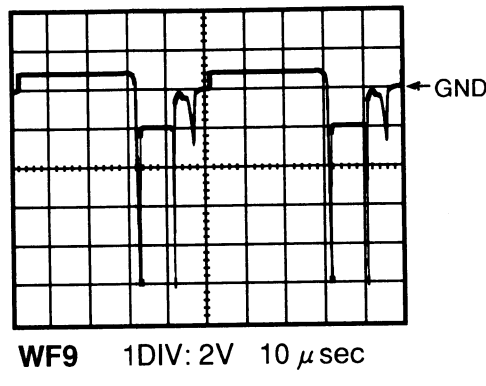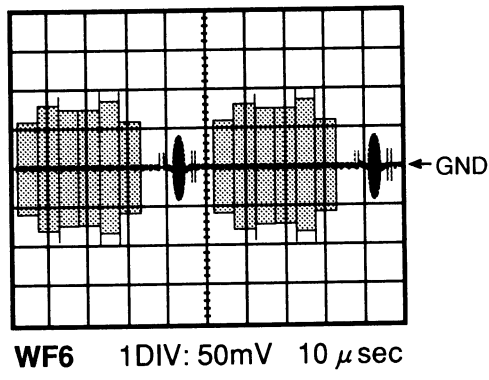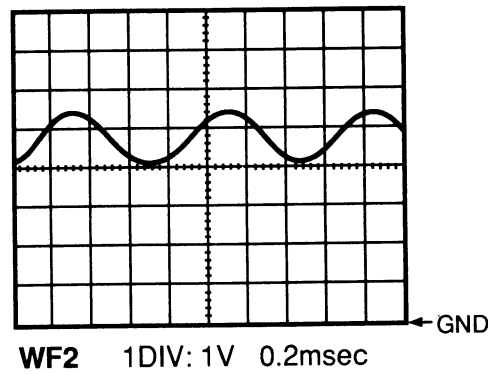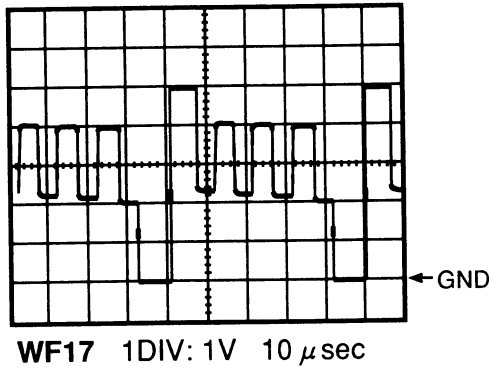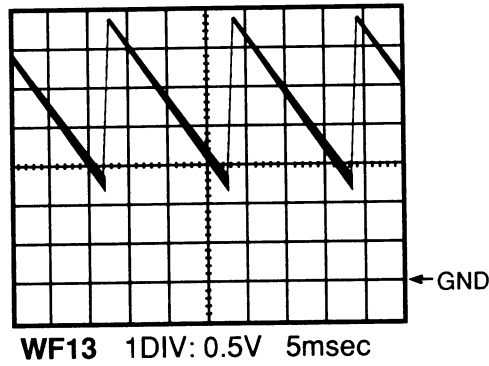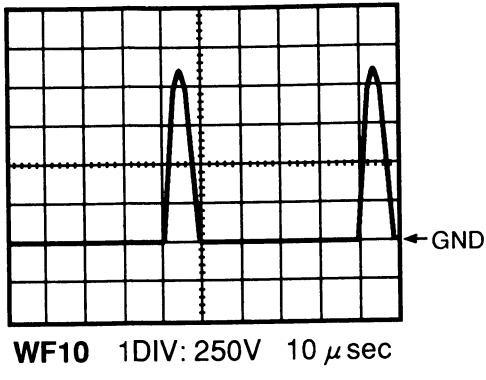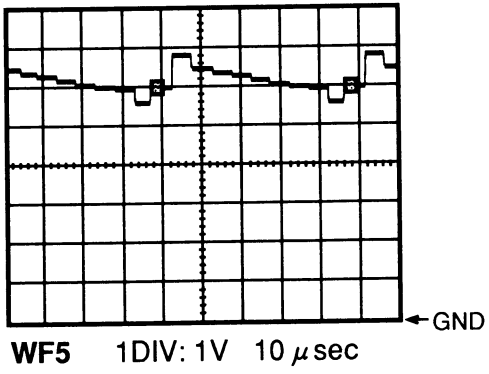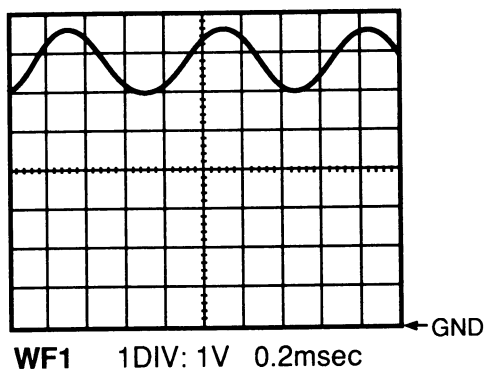

BOTTOM VIEW

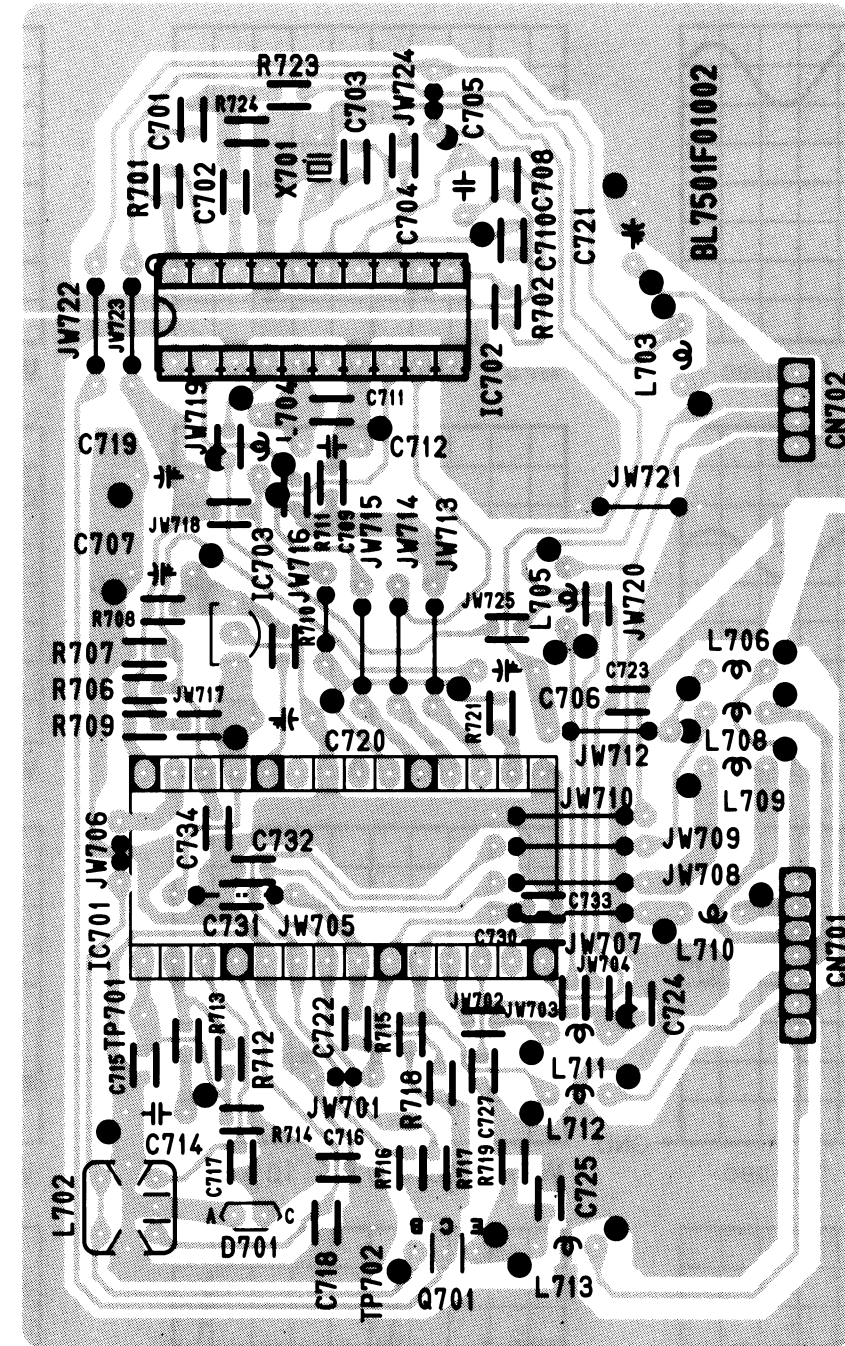

WIRING DIAGRAM

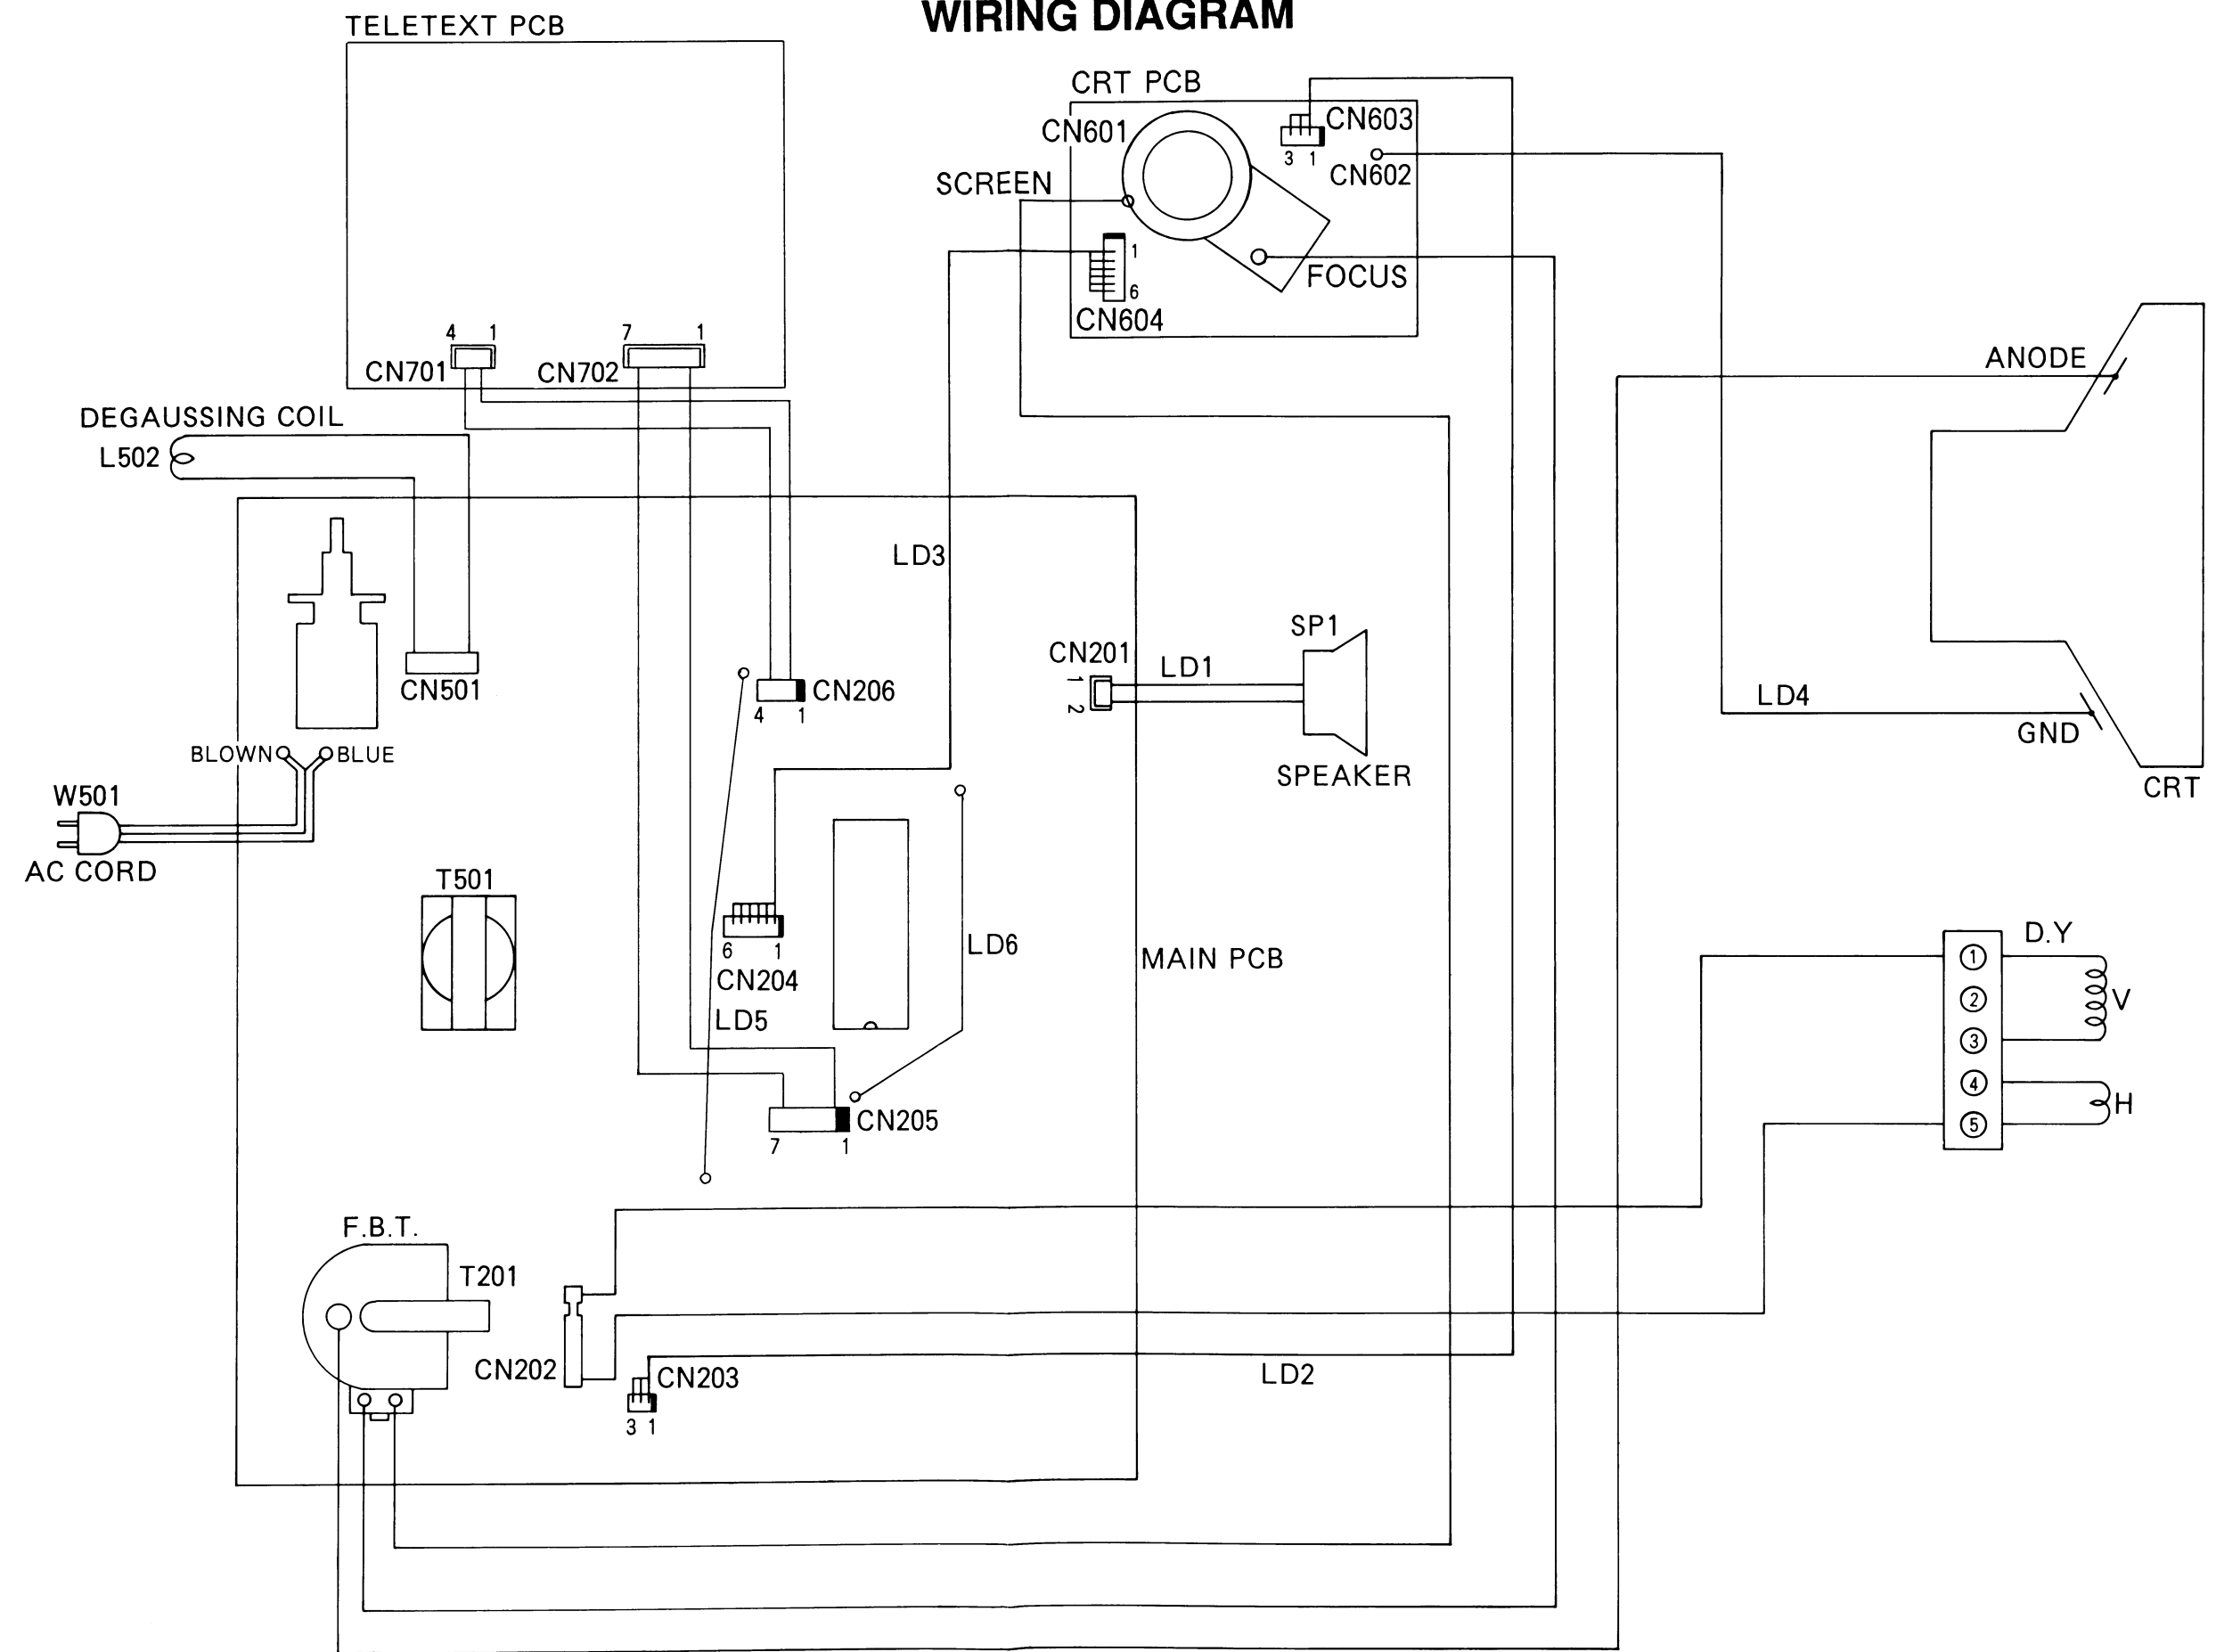

VOLTAGE CHARTS

(Unit: Volt)

Pin No.	IC101	IC201	IC202	IC203	IC204	IC205
1	5.7	4.6	5.0	6.0	0	11.0
2	4.7	3.5	2.5	5.9	13.0	4.9
3	5.4	2.6	2.5	6.9	27.4	NC
4	3.9	2.0	5.0	6.9	0.8	* 0.7~11.3
5	3.9	* 5.0~0.1	0	7.0	0.7	7.2
6	4.3	0	5.0	0	27.0	7.4
7	4.3	5.0	5.0	0	1.7	0
8	0	0	5.0	0		7.5
9	1.4	2.4		11.7		15.5
10	4.8	2.5		11.7		
11	6.0	2.5		11.7		
12	3.8	5.0		4.6		
13	8.4	5.0		5.0		
14	8.4	5.0		5.0		
15	3.8	5.0		6.0		
16	4.4	5.0		11.7		
17	11.7	NC				
18	0	5.0				
19	3.0	5.0				
20	3.0	3.5				
21		0				
22		NC				
23		0				
24		0				
25		0				
26		4.1				
27		5.0				
28		3.0				
29		3.0				
30		0				
31		—				
32		—				
33		4.9				
34		0				
35		5.0				
36		4.5				
37		0				
38		0 (5.0)				
39		0				
40		0				
41		0				
42		5.0				

* Vol. Min~Max () Text Mode

Pin No.	IC206	Pin No.	IC206
1	8.3	41	4.1
2	7.8	42	4.1
3	8.3	43	4.1
4	6.4	44	5.0
5	6.4	45	5.0
6	11.7	46	5.0
7	3.0	47	7.0
8	6.4	48	2.9
9	6.4	4	7.0
10	NC	50	0
11	5.7	51	7.1
12	5.1	52	0
13	5.1	53	0 (2.0)
14	7.6	54	0
15	5.9	55	6.6
16	10.2	56	3.1
17	3.4	57	5.7
18	4.3	58	4.7
19	0	59	3.8
20	5.8	60	5.9
21	0	61	11.7
22	11.1	62	5.9
23	5.1	63	11.7
24	5.7	64	7.8
25	4.7	() Text Mode	
26	3.2		
27	10.7		
28	3.2		
29	0.8		
30	8.2		
31	6.8		
32	6.7		
33	6.7		
34	3.6		
35	0.8		
36	0		
37	5.8		
38	6.7		
39	2.1		
40	8.8		

NOTES:


- Input: PAL Color Bar Signal (with 1KHz Audio Signal)
Receiving Ch.: E2 ch (48.25 MHz)
Preset Mode: Press Picture Select button on the remote control unit,
then press the number "1" button.
Brightness--- Center
Color--- Center
Contrast--- Approx 70%

(Unit: Volt)


Pin No.	IC207	IC208	IC210
1	16.3	32.0	11.8
2	0	0	0
3	11.8		8.9

Pin No.	IC701	IC702	IC703
1	1.0	1.7	5.0
2	3.2	1.7	0
3	3.7	0.7	5.0
4	5.0	0	
5	5.0	2.4	
6	NC	3.0	
7	0	5.0	
8	NC	0.7	
9	5.0	0	
10	0	1.7	
11	0	0	
12	4.6	0	
13	5.0	0	
14	0	0	
15	0.3	NC	
16	NC	5.0	
17	5.2	0.3	
18	5.2	0	
19	0.3	4.6	
20	0.3	NC	
21	5.0		
22	0.3		
23	0.3		
24	0		
25	2.6		
26	2.6		
27	2.5		
28	2.5		

MAIN P.C.B. TOP VIEW

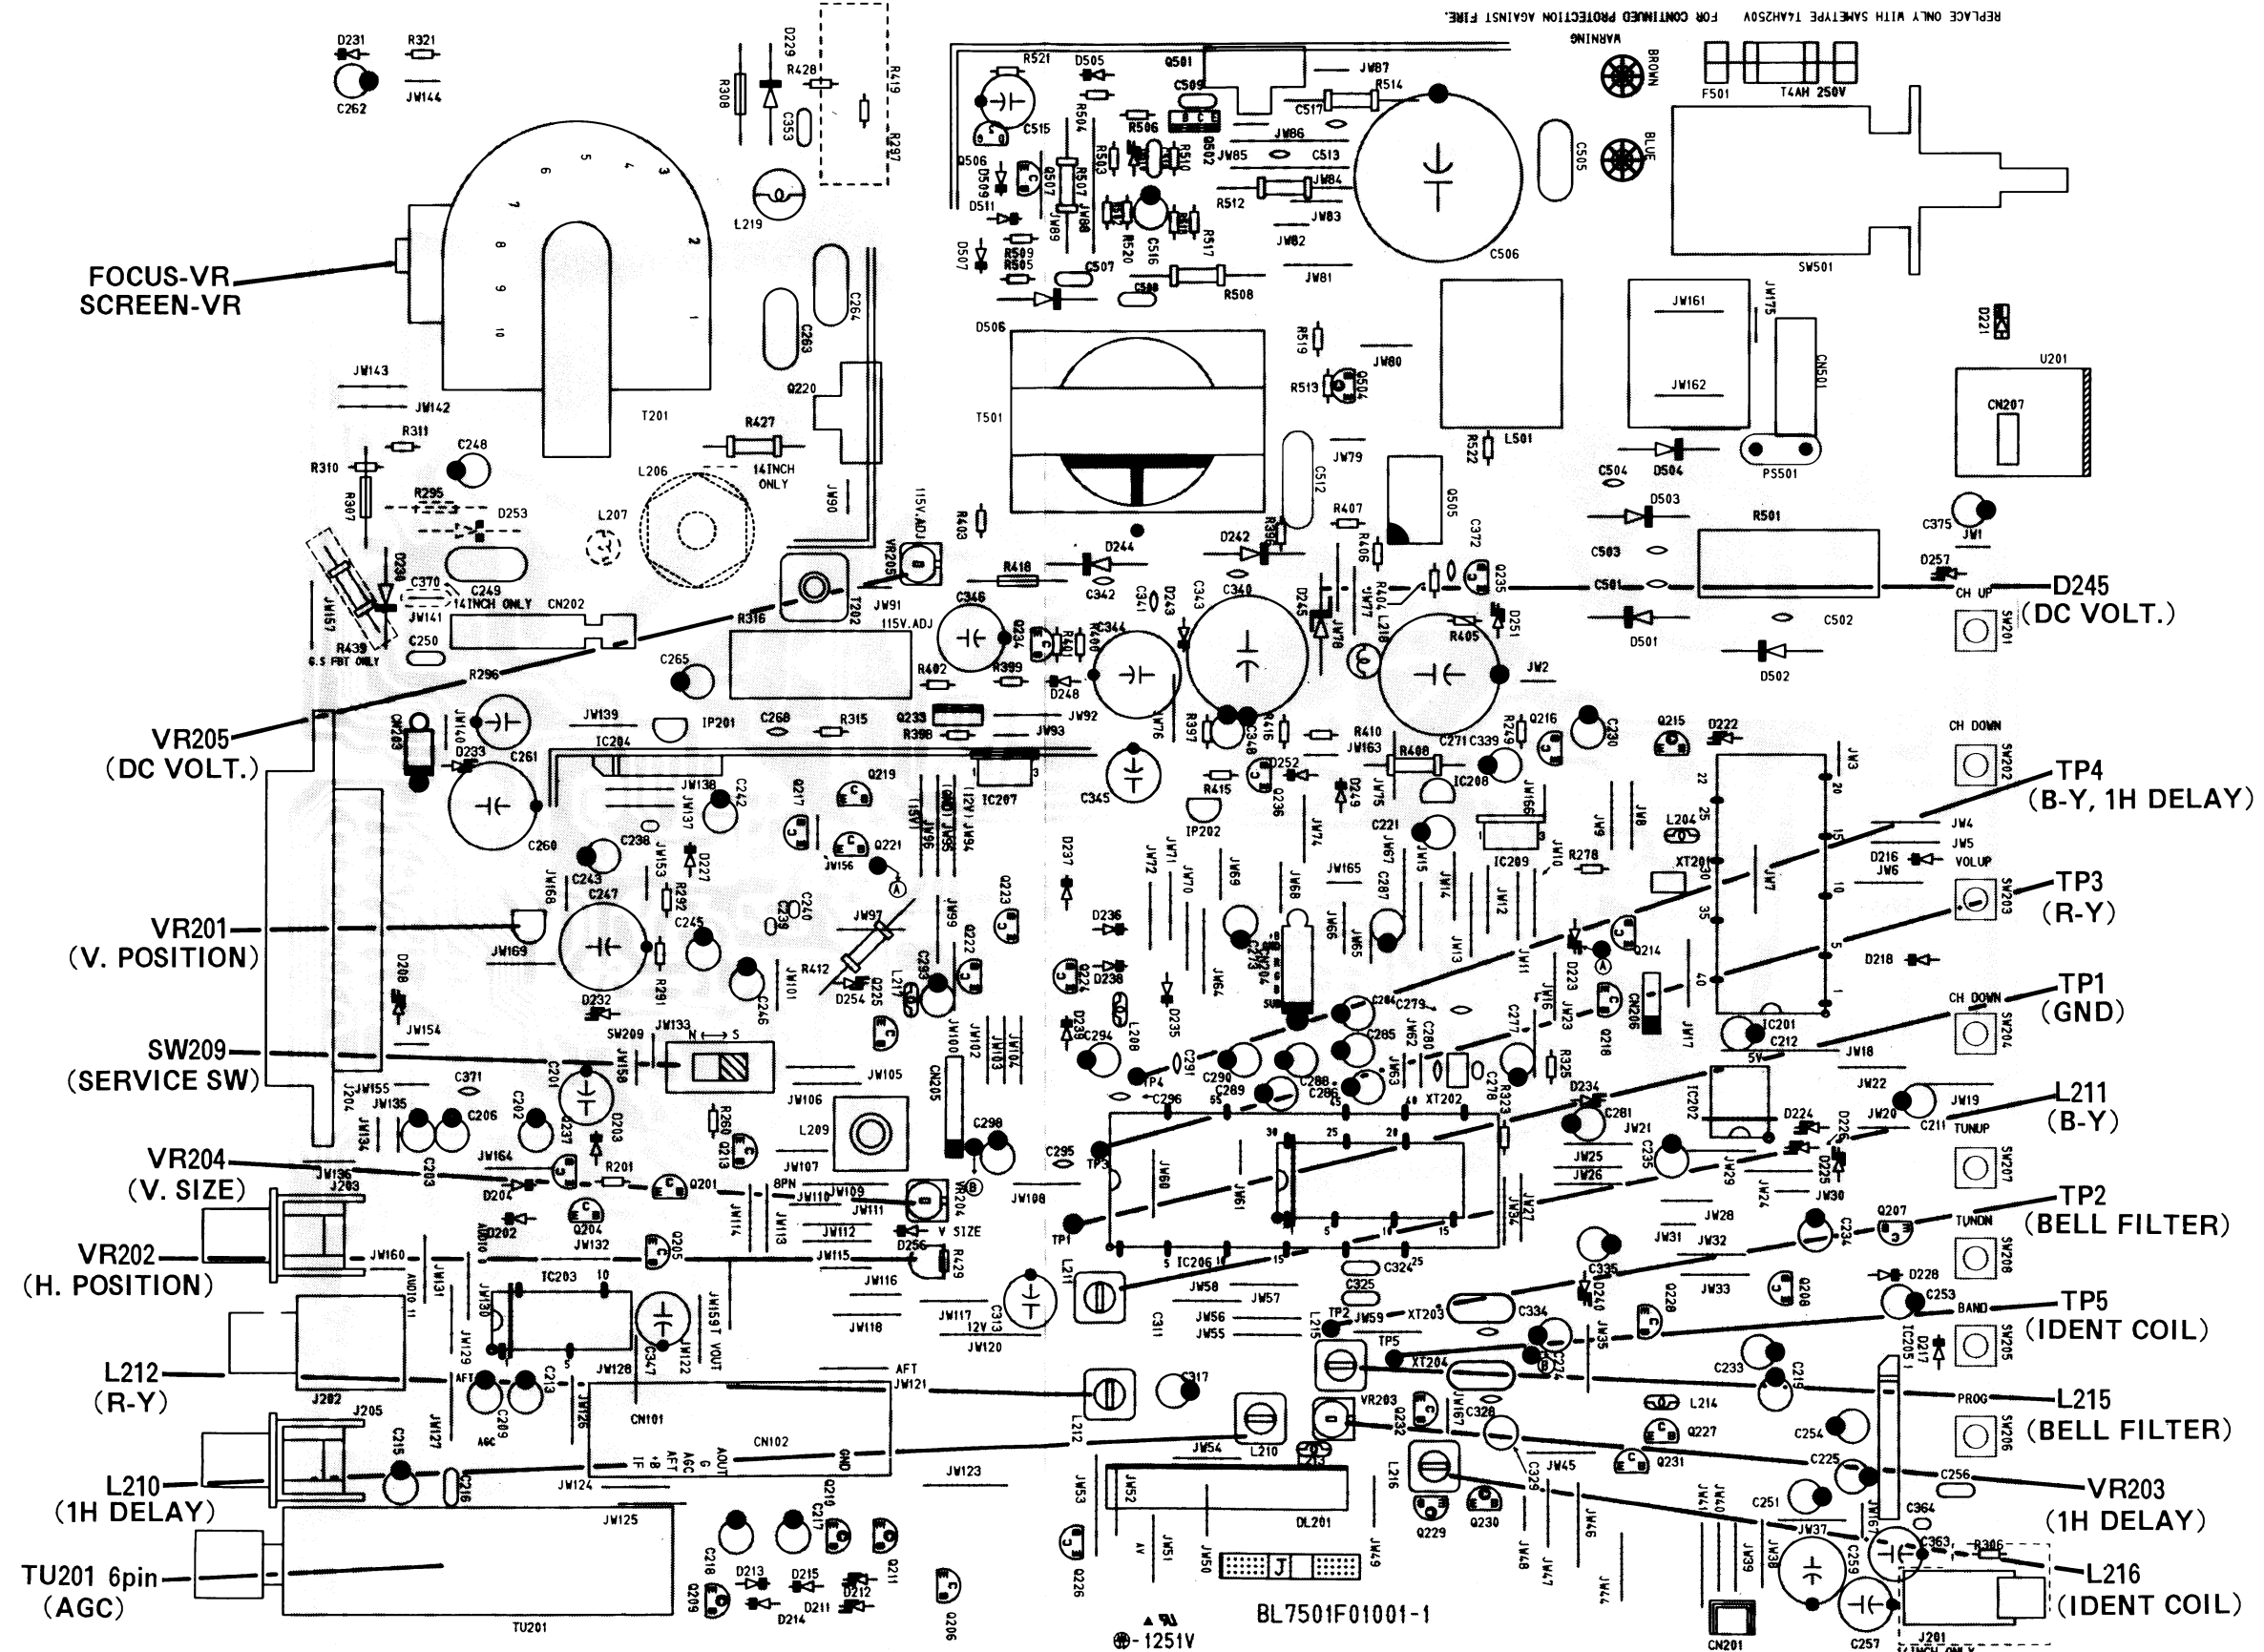


IF SCHEMATIC DIAGRAM

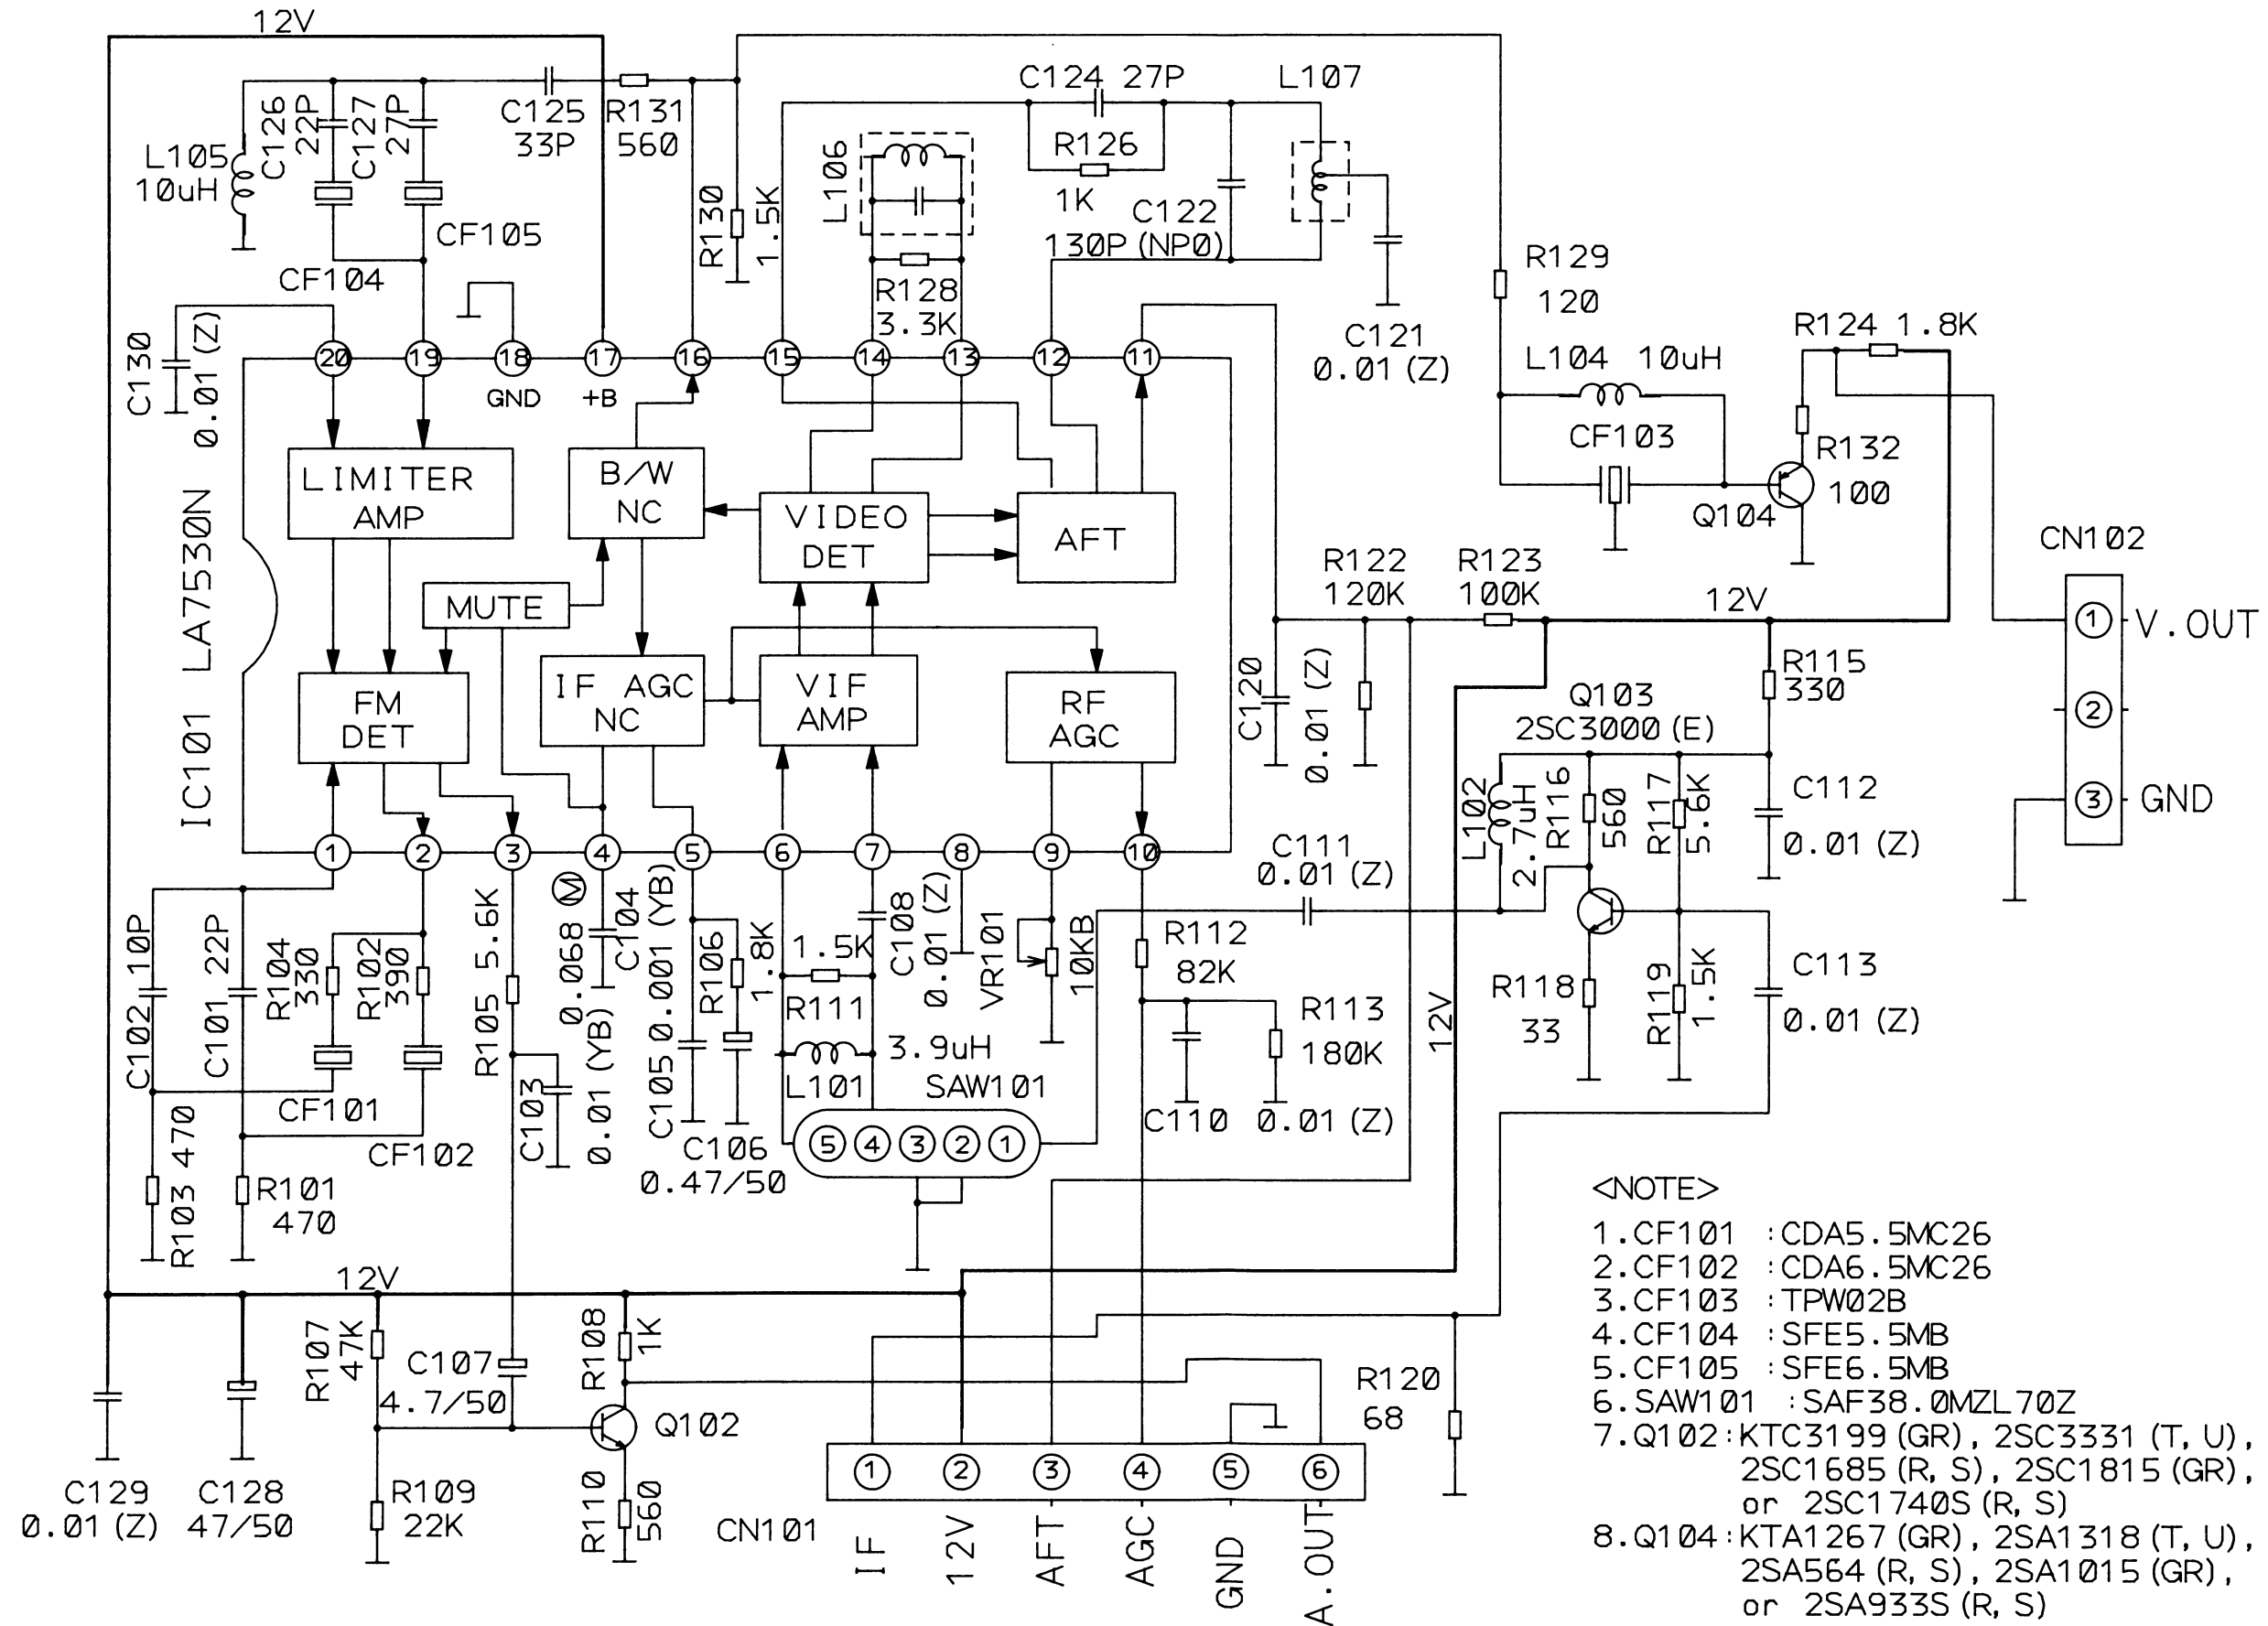



<NOTE>

1. CF101 : CDA5.5MC26
2. CF102 : CDA6.5MC26
3. CF103 : TPW02B
4. CF104 : SFE5.5MB
5. CF105 : SFE6.5MB
6. SAW101 : SAF38.0MZL70Z
7. Q102 : KTC3199 (GR), 2SC3331 (T, U), 2SC1685 (R, S), 2SC1815 (GR), or 2SC1740S (R, S)
8. Q104 : KTA1267 (GR), 2SA1318 (T, U), 2SA564 (R, S), 2SA1015 (GR), or 2SA933S (R, S)

TELETEXT SCHEMATIC DIAGRAM

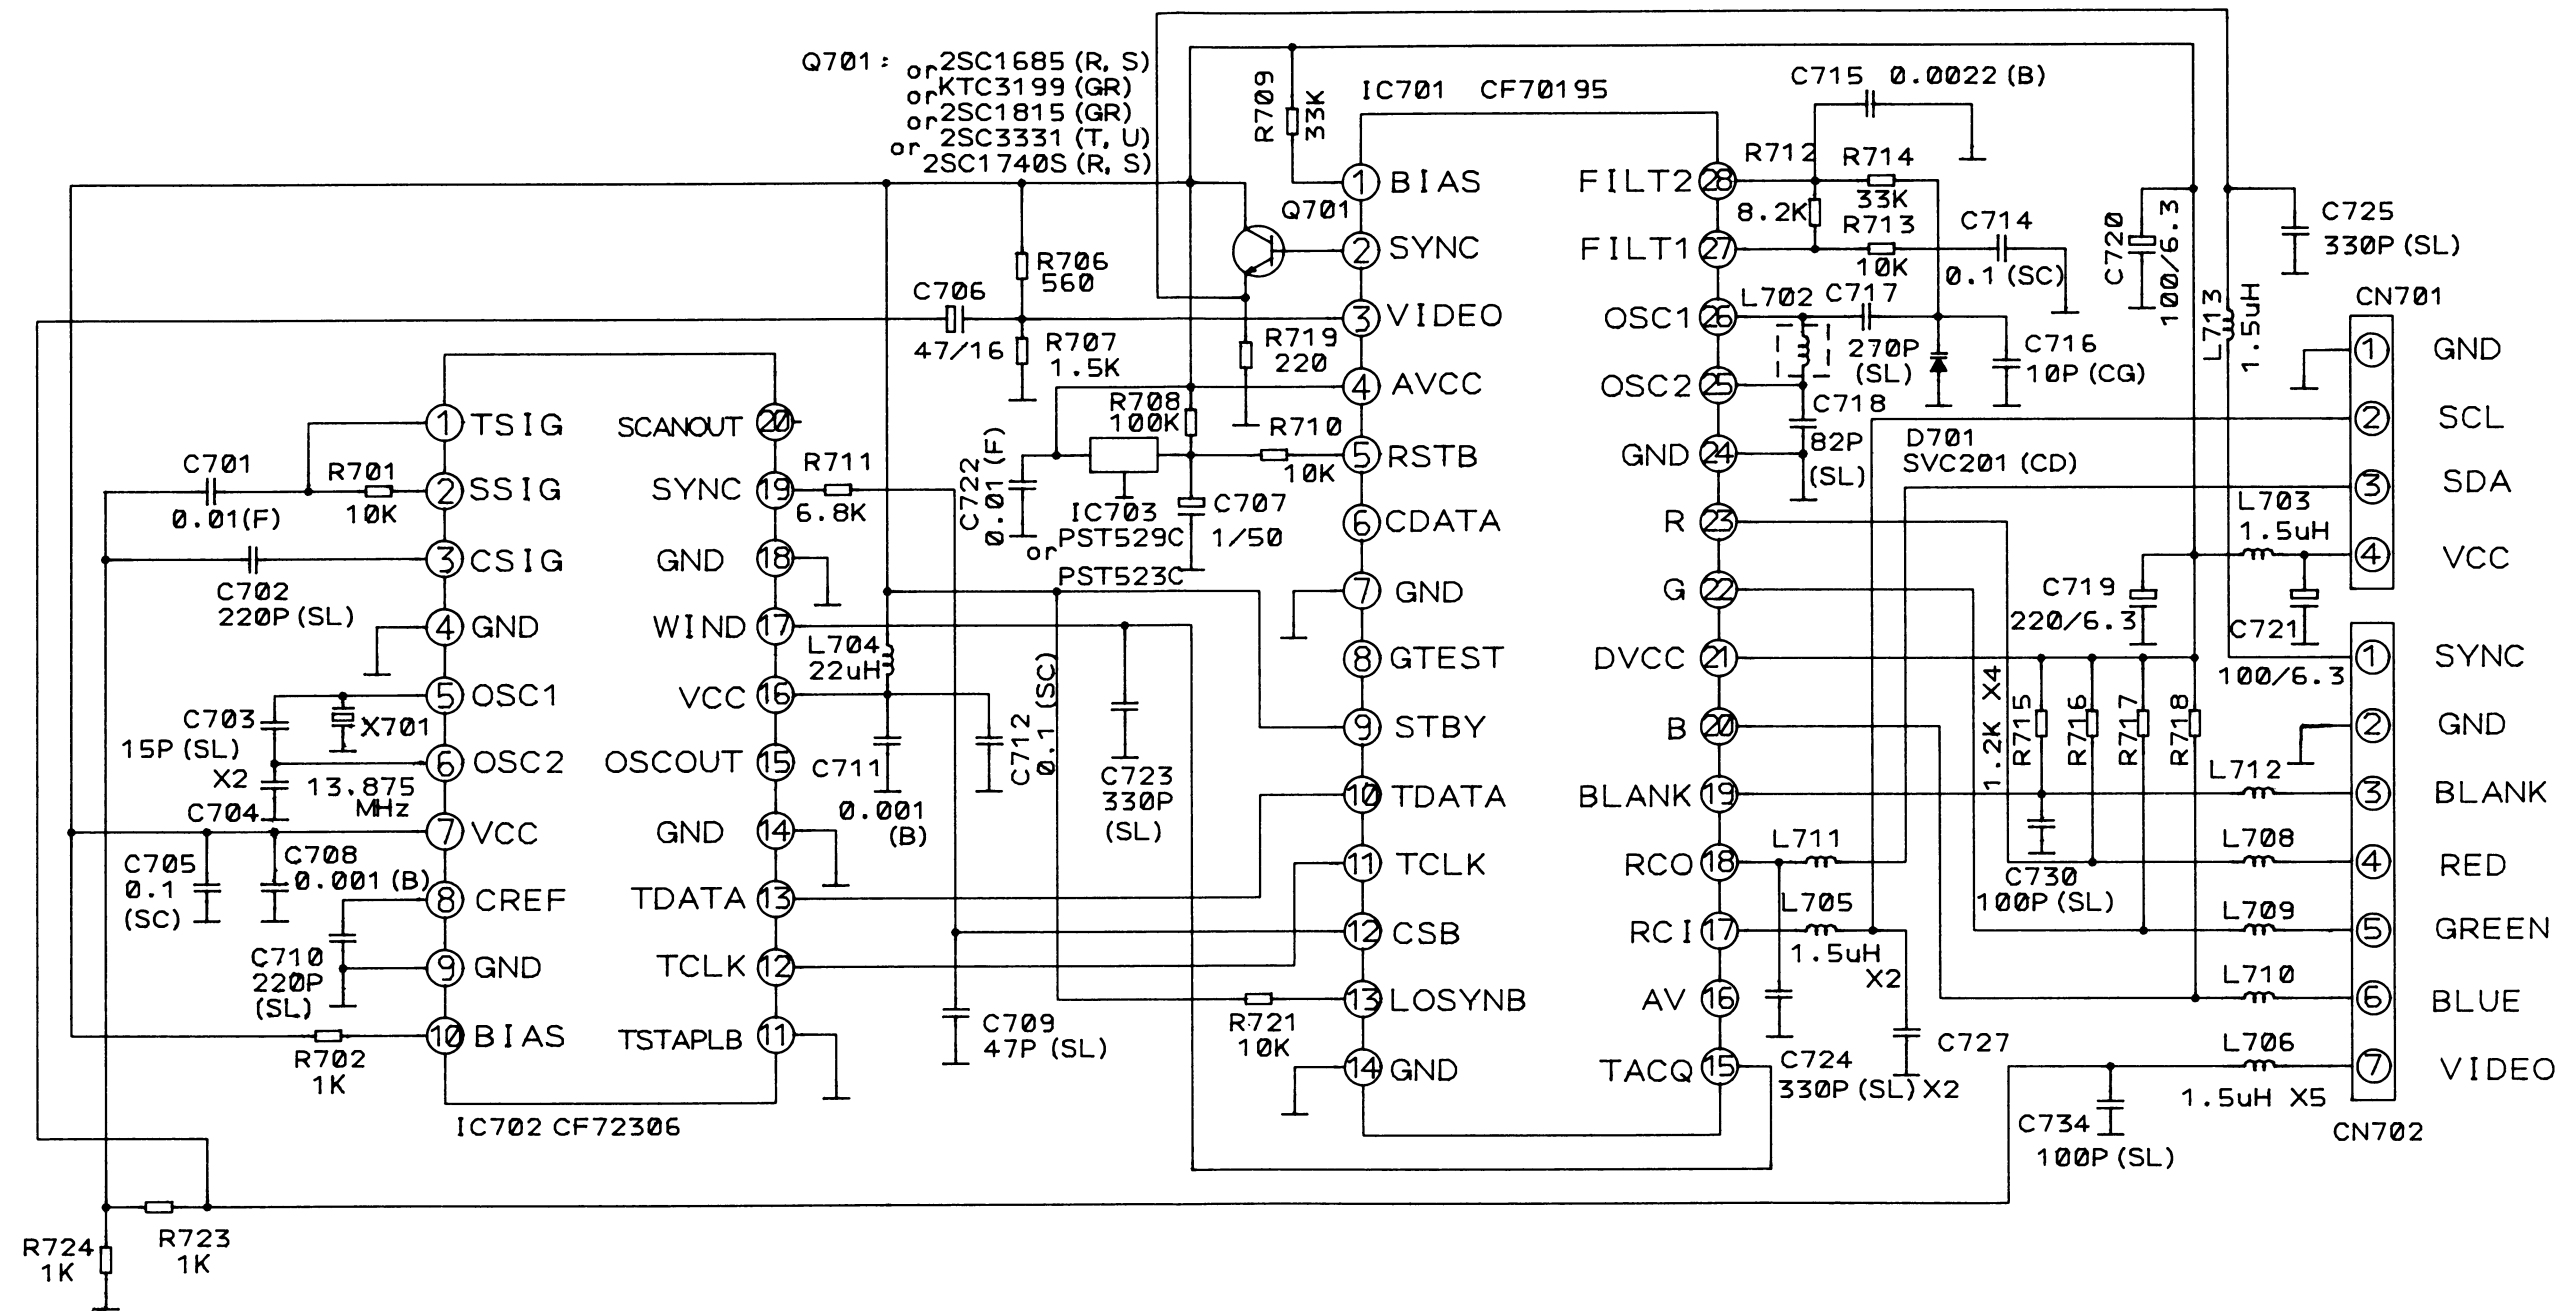


BOTTOM VIEW

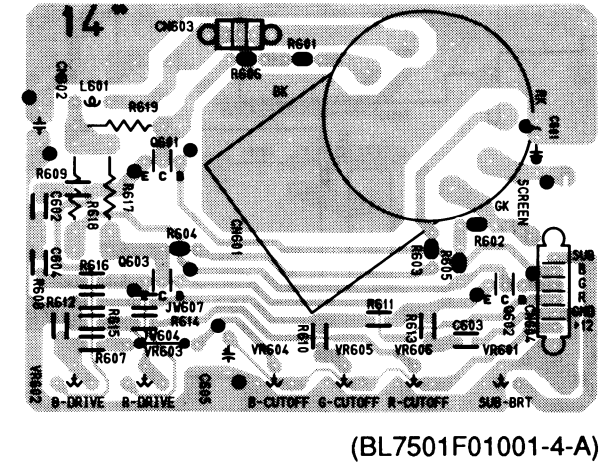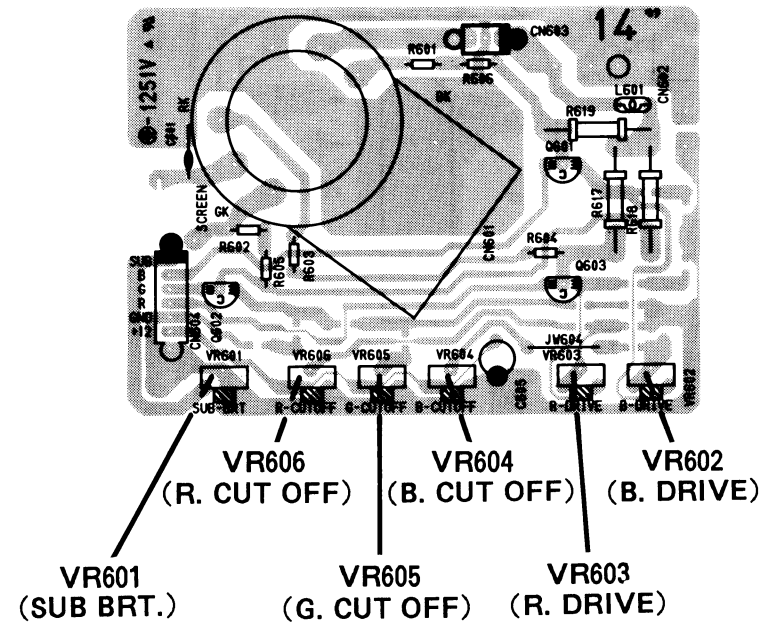


IF P.C.B.

TOP VIEW

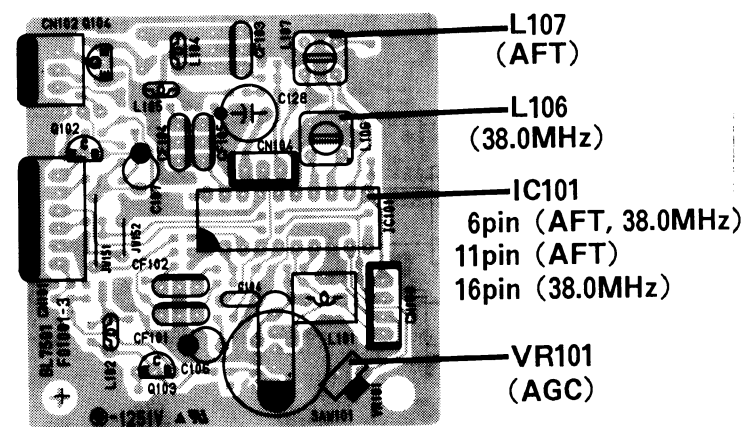

BOTTOM VIEW

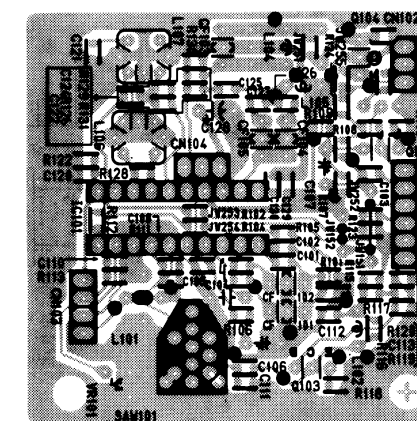

(BL7501F01001-3-A)



<NOTE 1>

Value of C264 is different from kinds of CRT and FBT.

	CRT	510UFB22 -TC52 (DPY)	A48KMX12XX44	51GGB95X-TC01
FBT				
FCM-20B031	0.0022	1.6KV	0.001	1.6KV
154-177T	0.0033	1.6KV	0.0018	1.6KV

<NOTE 2>

- 1.No indicated NPN type transistors are used KTC3199 (GR), 2SC1740S (R, S), 2SC3331 (T, U), 2SC1685 (R, S) or 2SC1815 (GR).
- 2.No indicated PNP type transistors are used KTA1267 (GR), 2SA933S (R, S), 2SA1318 (T, U), 2SA564 (R, S) or 2SA1015 (GR).
- 3.No indicated diodes are used 1SS133 or 1SS176.

CAUTION:

FOR CONTINUED PROTECTION AGAINST FIRE HAZARD,
REPLACE ONLY WITH THE SAME TYPE T4AH 250V FUSE.
ATTENTION: POUR UNE PROTECTION CONTINUE LES RISQUES
D'INCENDIE N'UTILISER QUE DES FUSIBLE DE MEME TYPE T4AH 250V.
RISK OF FIRE - REPLACE FUSE AS MARKED.

