




SERVICE MANUAL

25" COLOR TELEVISION

TV-2500A MK8

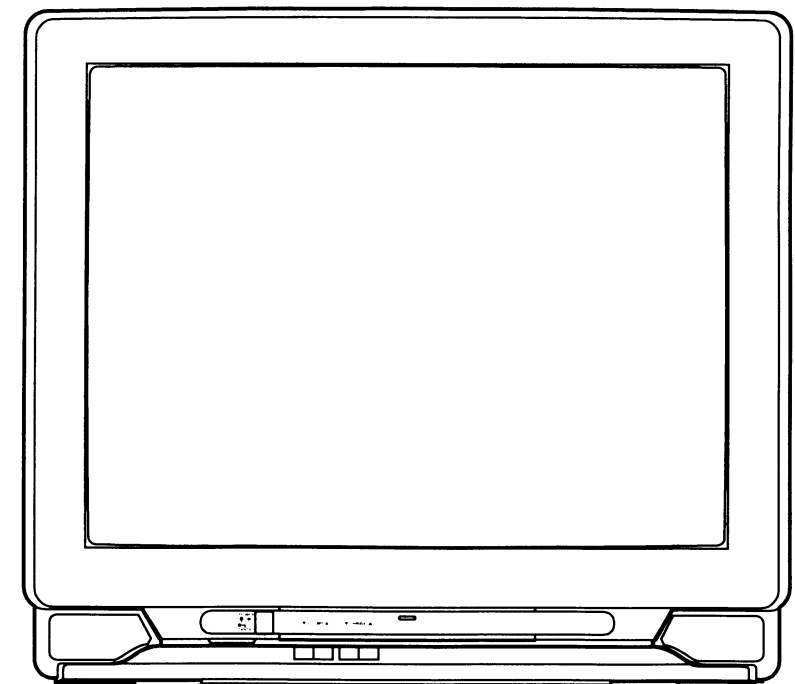

IMPORTANT SAFETY NOTICE

Proper service and repair is important to the safe, reliable operation of all Funai Equipment. The service procedures recommended by Funai and described in this service manual are effective methods of performing service operations. Some of these service special tools should be used when and as recommended.

It is important to note that this service manual contains various CAUTIONS and NOTICES which should be carefully read in order to minimize the risk of personal injury to service personnel. The possibility exists that improper service methods may damage the equipment. It also is important to understand that these CAUTIONS and NOTICES ARE NOT EXHAUSTIVE. Funai could not possibly know, evaluate and advice the service trade of all conceivable ways in which service might be done or of the possible hazardous consequences of each way. Consequently, Funai has not undertaken any such broad evaluation. Accordingly, a servicer who uses a service procedure or tool which is not recommended by Funai must first use all precautions thoroughly so that neither his safety nor the safe operation of the equipment will be jeopardized by the service method selected.

TABLE OF CONTENTS

GENERAL SPECIFICATIONS 1-1

PERFORMANCE SPECIFICATIONS 2-1

IMPORTANT SAFETY PRECAUTIONS 3-1

DISASSEMBLY INSTRUCTIONS 4-1

ELECTRICAL ADJUSTMENT INSTRUCTIONS 5-1

BLOCK DIAGRAM 6-1

SCHEMATIC DIAGRAMS / PCB'S AND TEST POINTS 7-1

VOLTAGE CHART 7-2

WAVEFORMS 8-1

WIRING DIAGRAM 9-1

EXPLODED VIEW 10-1

PACKING EXPLODED VIEW 11-1

MECHANICAL PARTS LIST 12-1

ELECTRICAL PARTS LIST 13-1

GENERAL SPECIFICATIONS *

Feature and Specifications

Color System:	PAL - B/G, SECAM - B/G, D/K
Tuning System:	Voltage Synthesized
Receivable Channels: (CCIR channel)	VHF-L; R1~R5 / E2~E4 ch (X-S10) VHF-H; R6~E12 E5~E12 ch (S11-S41) UHF; E21~E69 CATV(HYPER channel)
Number of Preset:	Up to 57
Antenna Impedance:	UHF/VHF 75Ω, Unbalanced
Picture Tube:	25", Tinted
Picture Control:	Color, Brightness, Contrast Game(ON/OFF), Sharp/Soft
Picture Control Memory:	Standard/User's Memory Select
Speaker:	90m/m x 50mm Oval Type, 8Ωx2
Output Power:	3Wx2
Other Features:	Automatic Channel Preset Automatic Degaussing
Power Source:	110~240V, 50/60Hz AC, Auto Voltage
Power Consumption:	120W
Cabinet Size:	578(W) x 475(D) x 514(H)mm
Weight:	28kg (Pending)
Regurations:	IEC-65 / GOST Passable

Control and Switches

Power:	Push (Front)
Channel Up/Down:	Push (Front)
Volume Up/Down:	Push (Front)
Tuning Up/Down:	Push (Front)
Program:	Push (Front)
Auto Memo / Band:	Push (Front)
Remote Control: (20 keys)	Standby, 0/AV, 1~9, Cannel Up, Channel Down, Mute, Display, Previous Picture Select (Bright / Contrast / Color / Video Mode) Control / Volume Up/Down Sleep

Display

LED Indicator:	Standby (RED), Power ON (GREEN)
* When turning on the power button stand-by LED is put off.	
On Screen Display:	Channel Volume GAME ON-OFF Brightness Color Contrast Sharp-Soft Sleep Timer (10~90 Minute) Tuning Indicator V/U Band Position

Jack and Terminals

UHF/VHF Antenna:	IEC (75Ω)
Video In/Out:	RCA - 2P
Audio In/Out:	RCA - 3P (2/1)
A/V in/Out:	21-Pin Euro Scart (W/O R.G.B.)

Accessories

Remote Control Unit	
Battery:	(R6, UM3 x 2)
Owner's Manual	

* Specifications are subject to change
without notice.

PERFORMANCE SPECIFICATIONS

<Tuner>

Antenna Input: 75Ω Unbalanced, IEC connector
Reference Level: 300mVp-p at Video out put
Test Input Signal: 400Hz, 30% Modulation

Description	Condition	Unit	Nominal	Limit
1. Peak Picture Sens.	VHF	dBμV	20	30
	UHF	dBμV	30	40
2. AFT Pull In Range (Input 80dBμ)		MHz	±0.7	±0.5
3. Intermediate Frequency	Picture	MHz	38.0	—
	Sound	MHz	32.5	—
	Sound	MHz	31.5	—

<Deflection>

Description	Condition	Unit	Nominal	Limit
1. Deflection Frequency	Horizontal (PAL/SECAM)	KHz	15.625	—
	(NTSC)	KHz	15.750	—
	Vertical (PAL/SECAM)	Hz	50	—
	(NTSC)	Hz	60	—
2. Linearity	Horizontal	%	—	±15
	Vertical	%	—	±10
3. High Voltage		KV	27	—

<Video & Chroma>

Description	Condition	Unit	Nominal	Limit
1. Misconvergence	Center	mm	—	0.4
	Side	mm	—	2.5
	Corner	mm	—	1.5
2. Over scan	Horizontal	%	10	—
	Vertical	%	10	—
3. Color Temperature		°K	8000° K-10MPCD	
4. Resolution	Horizontal	Line	320	—
	Vertical	Line	320	—
5. Brightness	APL100%	Ft-L	25	18

<Audio>

All items are measured across 8Ω resistor at speaker output terminal.

Description	Condition	Unit	Nominal	Limit
1. Audio Output Power	10%THD	W	3.0	2.5
2. Audio Distortion	500mW	%	2	5
3. Audio Frequency Response	-6dB	Hz	—	100-6K

IMPORTANT SAFETY PRECAUTIONS

Prior to shipment from the factory, our products are strictly inspected for recognized product safety and electrical codes of the countries in which they are to be sold. However, in order to maintain such compliance, it is equally important to implement the following precautions when a set is being serviced.

Safety Precautions for TV Circuit

1. Before returning an instrument to the customer, always make a safety check of the entire instrument, including, but not limited to, the following items:


a. Be sure that no built-in protective devices are defective and have been defeated during servicing. (1) Protective shields are provided on this chassis to protect both the technician and the customer. Correctly replace all missing protective shields, including any removed for servicing convenience. (2) When reinstalling the chassis and/or other assembly in the cabinet, be sure to put back in place all protective devices, including but not limited to, nonmetallic control knobs, insulating fishpapers, adjustment and compartment covers/shields, and isolation resistor/capacitor networks. **Do not operate this instrument or permit it to be operated without all protective devices correctly installed and functioning. Servicers who defeat safety features or fail to perform safety checks may be liable for any resulting damage.**

b. Be sure that there are no cabinet openings through which an adult or child might be able to insert their fingers and contact a hazardous voltage. Such openings include, but are not limited to, (1) spacing between the picture tube and the cabinet mask, (2) excessively wide cabinet ventilation slots, and (3) an improperly fitted and/or incorrectly secured cabinet back cover.

c. **Antenna Cold Check** - With the instrument AC plug removed from any AC source, connect an electrical jumper across the two AC plug prongs. Place the instrument AC switch in the on position. Connect one lead of an ohmmeter to the AC plug prongs tied together and touch the other ohmmeter lead in turn to each tuner antenna input exposed terminal screw and, if applicable, to the coaxial connector. If the measured resistance is less than 1.0 megohm or greater than 5.2 megohm, an abnormality exists that must be corrected before the instrument is returned to the customer.

Repeat this test with the instrument AC switch in the off position.

d. **Leakage Current Hot Check** - With the instrument completely reassembled, plug the AC line cord directly into a AC outlet. (Do not use an isolation transformer during this test.) Use a leakage current tester. With the instrument AC switch first in the on position and then in the off position, measure from a known earth ground (metal water pipe, conduit, etc.) to all exposed metal parts of the instrument (antennas, handle brackets, metal cabinet, screw heads, metallic overlays, control shafts, etc.), especially any exposed metal parts that offer an electrical return path to the chassis. Any current measured must not exceed 0.5 milliampere. Reverse the instrument power cord plug in the outlet and repeat the test.

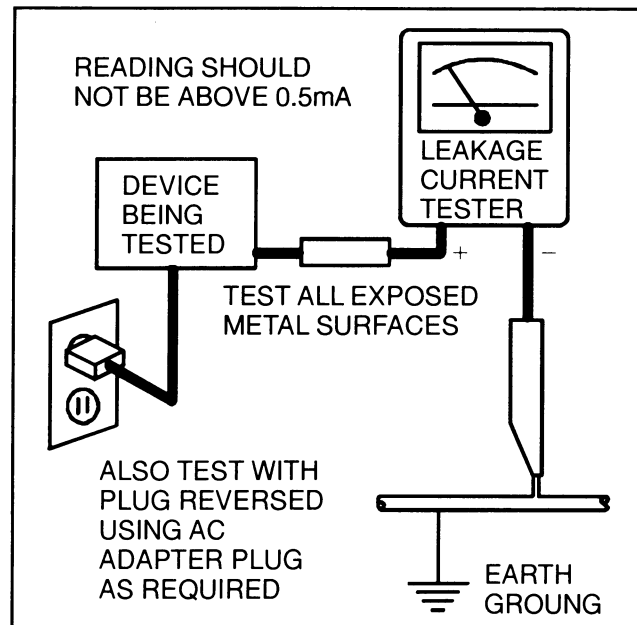

ANY MEASUREMENTS NOT WITHIN THE LIMITS SPECIFIED HEREIN INDICATE A POTENTIAL SHOCK HAZARD THAT MUST BE ELIMINATED BEFORE RETURNING THE INSTRUMENT TO THE CUSTOMER OR BEFORE CONNECTING THE ANTENNA OR ACCESSORIES.

e. **X-Radiation and High Voltage Limits** - Because the picture tube is the primary potential source of X-radiation in solid-state TV receivers, it is specially constructed to prohibit X-radiation emissions. For continued X-radiation protection, the replacement picture tube must be the same type as the original. Also, because the picture tube shields and mounting hardware perform an X-radiation protection function, they must be correctly in place. High voltage must be measured each time servicing is performed that involves B+, horizontal deflection or high voltage. Correct operation of the X-radiation protection circuits also must be reconfirmed each time they are serviced. (X-radiation protection circuits also may be called "horizontal disable" or "hold down.") Read and apply the high voltage limits and, if the chassis is so equipped, the X-radiation protection circuit specifications given on instrument labels and in the Product Safety & X-Radiation Warning note on the service data chassis schematic. High voltage is maintained within specified limits by close tolerance safety-related components/adjustments in the high-voltage circuit. If high voltage exceeds specified limits, check each component specified on the chassis schematic and take corrective action.

2. Read and comply with all caution and safety-related notes on or inside the receiver cabinet, on the receiver chassis, or on the picture tube.

3. **Design Alteration Warning** - Do not alter or add to the mechanical or electrical design of this TV receiver. Design alterations and additions, including, but not limited to circuit modifications and the addition of items such as auxiliary audio and/or video output connections, might alter the safety characteristics of this receiver and create a hazard to the user. Any design alterations or additions will void the manufacturer's warranty and may make you, the servicer, responsible for personal injury or property damage resulting therefrom.

4. **Picture Tube Implosion Protection Warning** - The picture tube in this receiver employs integral implosion protection. For continued implosion protection, replace the picture tube only with one of the same type number. Do not remove, install, or otherwise handle the picture tube in any manner without first putting on shatterproof goggles equipped with side shields. People not so equipped must be kept safely away while picture tubes are handled. Keep the picture tube away from your body. Do not handle

the picture tube by its neck. Some "in-line" picture tubes are equipped with a permanently attached deflection yoke; because of potential hazard, do not try to remove such "permanently attached" yokes from the picture tube.

5. Hot Chassis Warning -

a. Some TV receiver chassis are electrically connected directly to one conductor of the AC power cord and may be safety-serviced without an isolation transformer only if the AC power plug is inserted so that the chassis is connected to the ground side of the AC power source. To confirm that the AC power plug is inserted correctly, with an AC voltmeter, measure between the chassis and a known earth ground. If a voltage reading in excess of 1.0V is obtained, ***remove and reinsert the AC power plug in the opposite polarity** and again measure the voltage potential between the chassis and a known earth ground.

b. Some TV receiver chassis have a circuit which obtain voltage about 70% of AC voltage between chassis and earth ground regardless of the AC plug polarity. This chassis can be safety-serviced only with an isolation transformer inserted in the power line between the receiver and the AC power source, for both personnel and test equipment protection.

c. Some TV receiver chassis have a secondary ground system in addition to the main chassis ground. This secondary ground system is not isolated from the AC power line. The two ground systems are electrically separated by insulation material that must not be defeated or altered.

Note: * In case unit has no polarity AC plug only.

6. Observe original lead dress. Take extra care to assure correct lead dress in the following areas: a. near sharp edges, b. near thermally hot parts-be sure that leads and components do not touch thermally hot parts, c. the AC supply, d. high voltage, and e. antenna wiring. Always inspect in all areas for pinched, out of place, or frayed wiring. Check AC power cord for damage.

7. Components, parts, and/or wiring that appear to have overheated or are otherwise damaged should be replaced with components, parts, or wiring that meet original specifications. Additionally, determine the cause of overheating and/or damage and, if necessary, take corrective action to remove any potential safety hazard.

8. **Product Safety Notice** - Some electrical and mechanical parts have special safety-related characteristics which are often not evident from visual

inspection, nor can the protection they give necessarily be obtained by replacing them with components rated for higher voltage, wattage, etc.. Parts that have special safety characteristics are identified by a ($\triangle$) on schematics and in parts lists. Use of a substitute replacement that does not have the same safety characteristics as the recommended replacement part might create shock, fire, and/or other hazards. The Product's Safety is under review continu-

Precautions during Servicing

- A. Parts identified by the ($\triangle$) symbol are critical for safety.
Replace only with part number specified.
- B. In addition to safety, other parts and assemblies are specified for conformance with regulations applying to spurious radiation. These must also be replaced only with specified replacements.
Examples: RF converters, RF cables, noise blocking capacitors, and noise blocking filters, etc.
- C. Use specified internal wiring. Note especially:
 - 1) Wires covered with PVC tubing
 - 2) Double insulated wires
 - 3) High voltage leads
- D. Use specified insulating materials for hazardous live parts. Note especially:
 - 1) Insulation Tape
 - 2) PVC tubing
 - 3) Spacers
 - 4) Insulators for transistors.
- E. When replacing AC primary side components (transformers, power cord, etc.), wrap ends of wires securely about the terminals before soldering.
- F. Observe that the wires do not contact heat producing parts (heatsinks, oxide metal film resistors, fusible resistors, etc.)
- G. Check that replaced wires do not contact sharp edged or pointed parts.

ously and new instructions are issued whenever appropriate. Prior to shipment from the factory, our products are strictly inspected to confirm with the recognized product safety and electrical codes of the countries in which they are to be sold. However, in order to maintain such compliance, it is equally important to implement the following precautions when a set is being serviced.

- H. When a power cord has been replaced, check that 10-15 kg of force in any direction will not loosen it.
 - I. Also check areas surrounding repaired locations.
- J. Use care that foreign objects (screws, solder droplets, etc.) do not remain inside the set.
- K. Crimp type wire connector
When replacing the power transformer in sets where the connections between the power cord and power transformer primary lead wires are performed using crimp type connectors, in order to prevent shock hazards, perform carefully and precisely the following steps.
Replacement procedure
 - 1) Remove the old connector by cutting the wires at a point close to the connector.Important: Do not re-use a connector (discard it).
 - 2) Strip about 15 mm of the insulation from the ends of the wires. If the wires are stranded, twist the strands to avoid frayed conductors.
 - 3) Align the lengths of the wires to be connected. Insert the wires fully into the connector.
 - 4) Use the crimping tool to crimp the metal sleeve at the center position. Be sure to crimp fully to the complete closure of the tool.
- L. When connecting or disconnecting the VCR connectors, first, disconnect the AC plug from AC supply socket.

Safety Check after Servicing

Examine the area surrounding the repaired location for damage or deterioration. Observe that screws, parts and wires have been returned to original positions. Afterwards, perform the following tests and confirm the specified values in order to verify compliance with safety standards.

1. Clearance Distance

When replacing primary circuit components, confirm specified clearance distance (d) and (d') between soldered terminals, and between terminals and surrounding metallic parts. (See Fig. 1)

Table 1 : Ratings for selected area

AC Line Voltage	Region	Clearance Distance (d) (d')
110 to 240 V	Middle and Near East	$\geq 4\text{mm (d)}$
		$\geq 6\text{mm (d')}$

Note: This table is unofficial and for reference only. Be sure to confirm the precise values.

2. Leakage Current Test

Confirm specified (or lower) leakage current between B (earth ground, power cord plug prongs) and externally exposed accessible parts (RF terminals, antenna terminals, video and audio input and output terminals, microphone jacks, earphone jacks, etc.).

Measuring Method : (Power ON)

Insert load Z between B (earth ground, power cord plug prongs) and exposed accessible parts. Use an AC voltmeter to measure across both terminals of load Z. See Fig. 2 and following table.

Table 2 : Leakage current ratings for selected areas

AC Line Voltage	Region	Load Z	Leakage Current (i)	Earth Ground (B) to:
110 to 240 V	Middle and Near East	2k Ω RES. in connected	$i \leq 0.7\text{mA rms}$ $i \leq 2\text{mA dc}$	Antenna terminals
		50k Ω RES. in connected	$i \leq 0.7\text{mA rms}$ $i \leq 2\text{mA dc}$	Other terminals

Note: This table is unofficial and for reference only. Be sure to confirm the precise values.

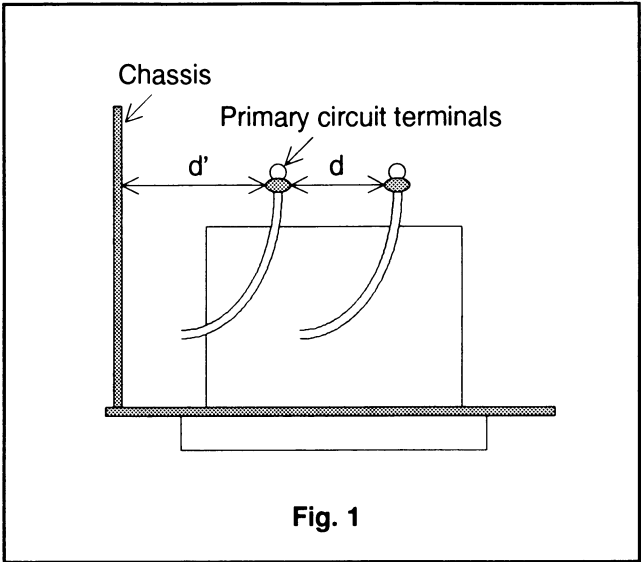


Fig. 1

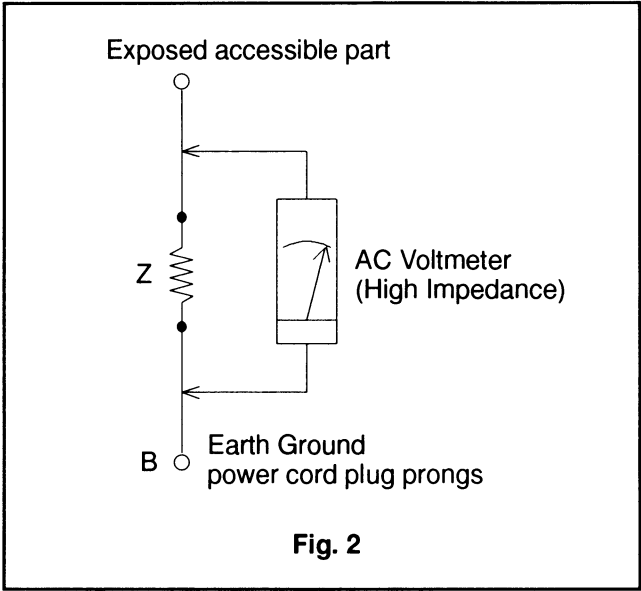


Fig. 2

DISASSEMBLY INSTRUCTIONS


1. Disassembly Flow Chart

This flow chart indicates the disassembly steps of the cabinet parts and PCB in order to gain access to item(s) to be serviced. When reassembling, perform the step(s) in the reverse order. Bend, route and dress the cables as they were originally.

CAUTION ! :

When removing the CRT, make sure to discharge Anode Lead of the CRT.

Use the CRT Ground Wire to discharge the CRT before removing the Anode Cap.

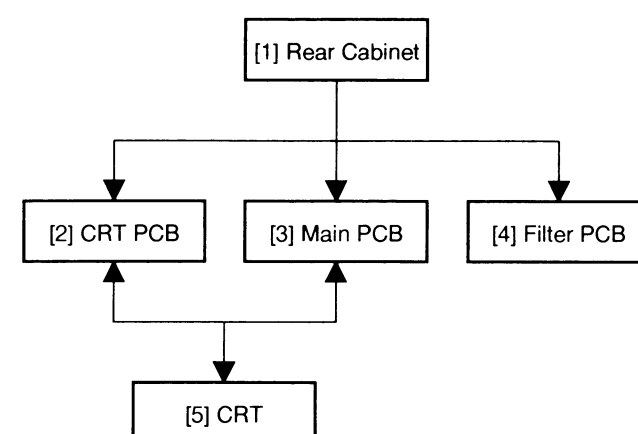

2. Disassembly Method

STEP/ LOC. NO.	PART	REMOVAL		
		FIG. NO.	REMOVE/*UNLOCK/ RELEASE/UNPLUG/ UNCLAMP/ DESOLDER	NOTE
[1]	Rear Cabinet	1, 2	L2 (7pcs), L3, L4	1
[2]	CRT PCB	4, 5	CL451B, CL452B, CN453, CN454 FOCUS WIRE, SCREEN WIRE	2
[3]	Main PCB	3, 5	CL451A, CL452A, CN501, CN601, CN602, CN801, CN802 ANODE CAP, FOCUS WIRE, SCREEN WIRE	3
[4]	Filter PCB	2, 3, 4, 5	CL661	4
[5]	CRT	4, 5	B1 (4pcs)	5

Reference <Notes> in Table

- (1) Remove 7 screws (L2, L3, L4) and slide the Rear Cabinet backward.
- (1) If not already removed, first remove the Rear Cabinet.
(2) Remove all relative wires, then pull the CRT PCB backward.
- (1) If not already removed, first remove the Rear Cabinet.
(2) Remove all relative wires on the Main PCB and remove the Anode Cap, then slide the Main PCB backward.
- (1) Slide the Filter PCB backward.

Caution !

Discharge Anode Lead of the CRT with the CRT Ground Wire before removing the Anode Cap.

- (1) If not already removed, first remove the Rear Cabinet and Main PCB.
(2) Remove 4 screws (B1), then the CRT can be removed.

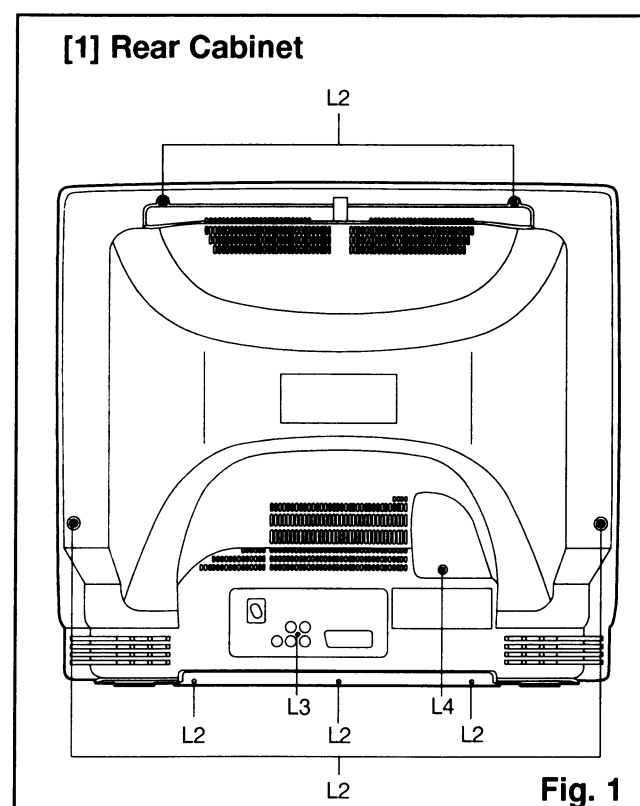


Fig. 1

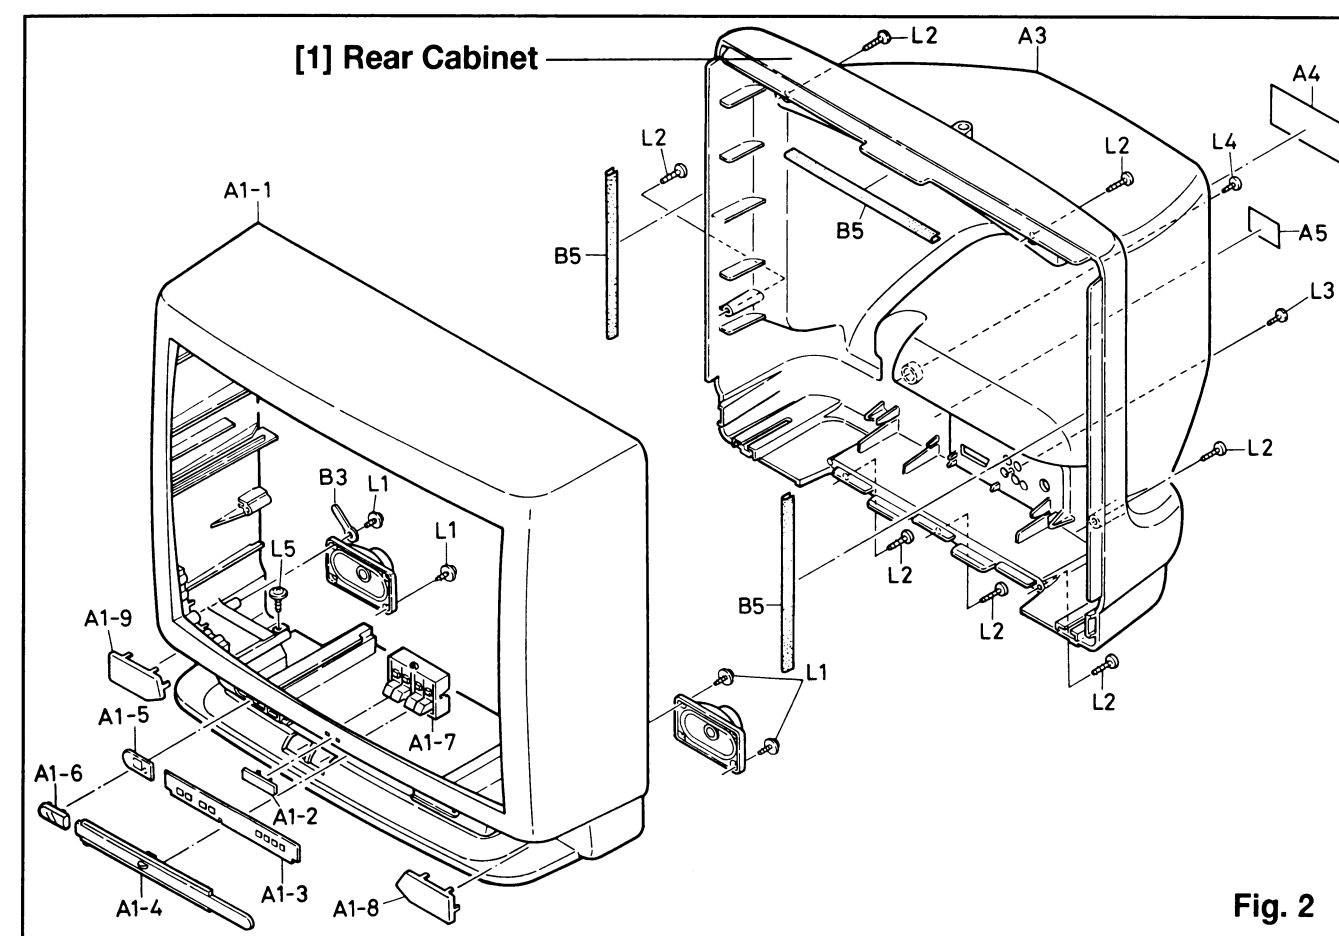


Fig. 2

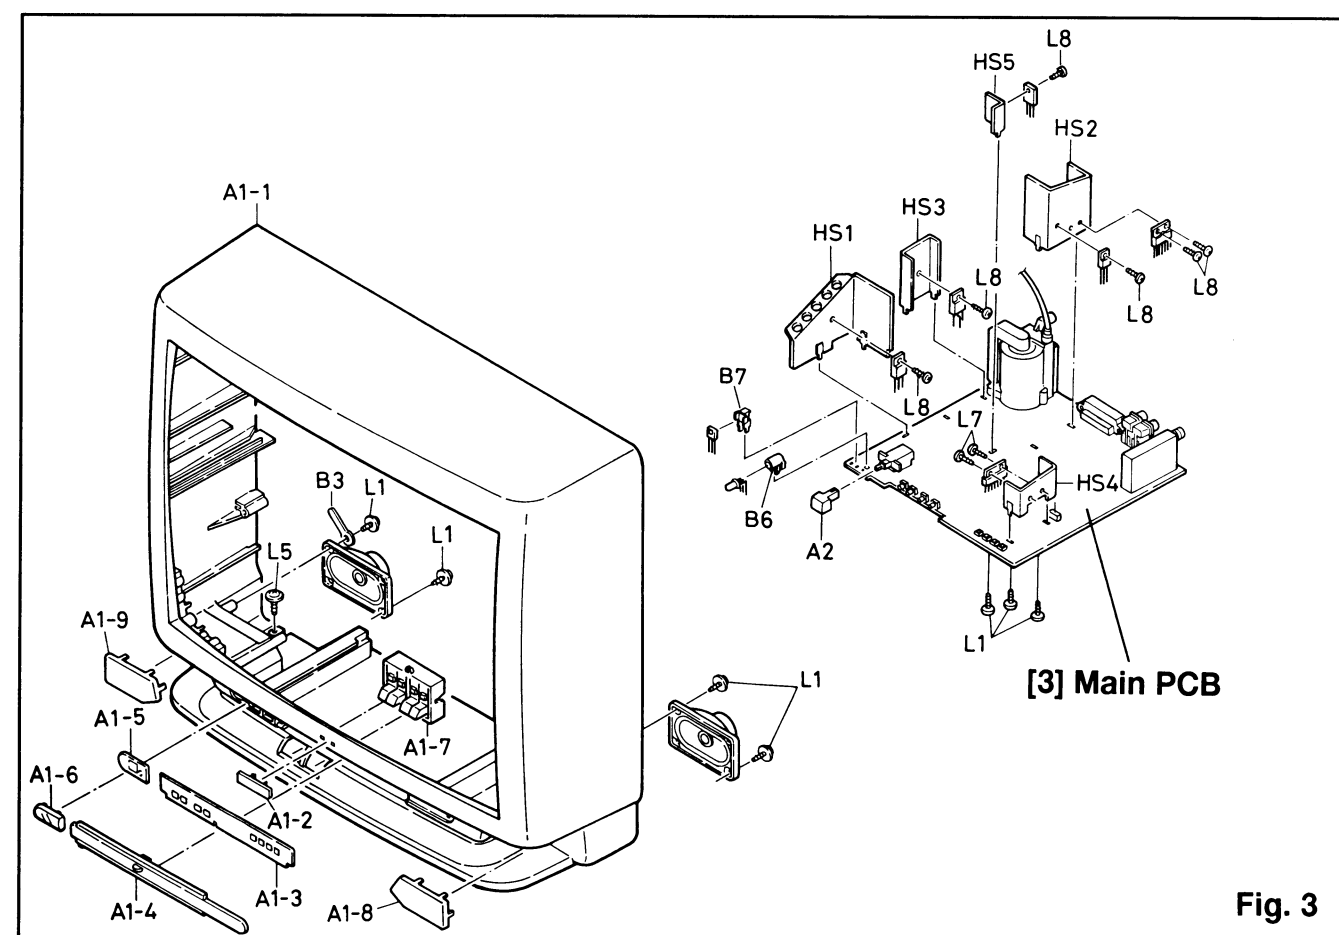


Fig. 3

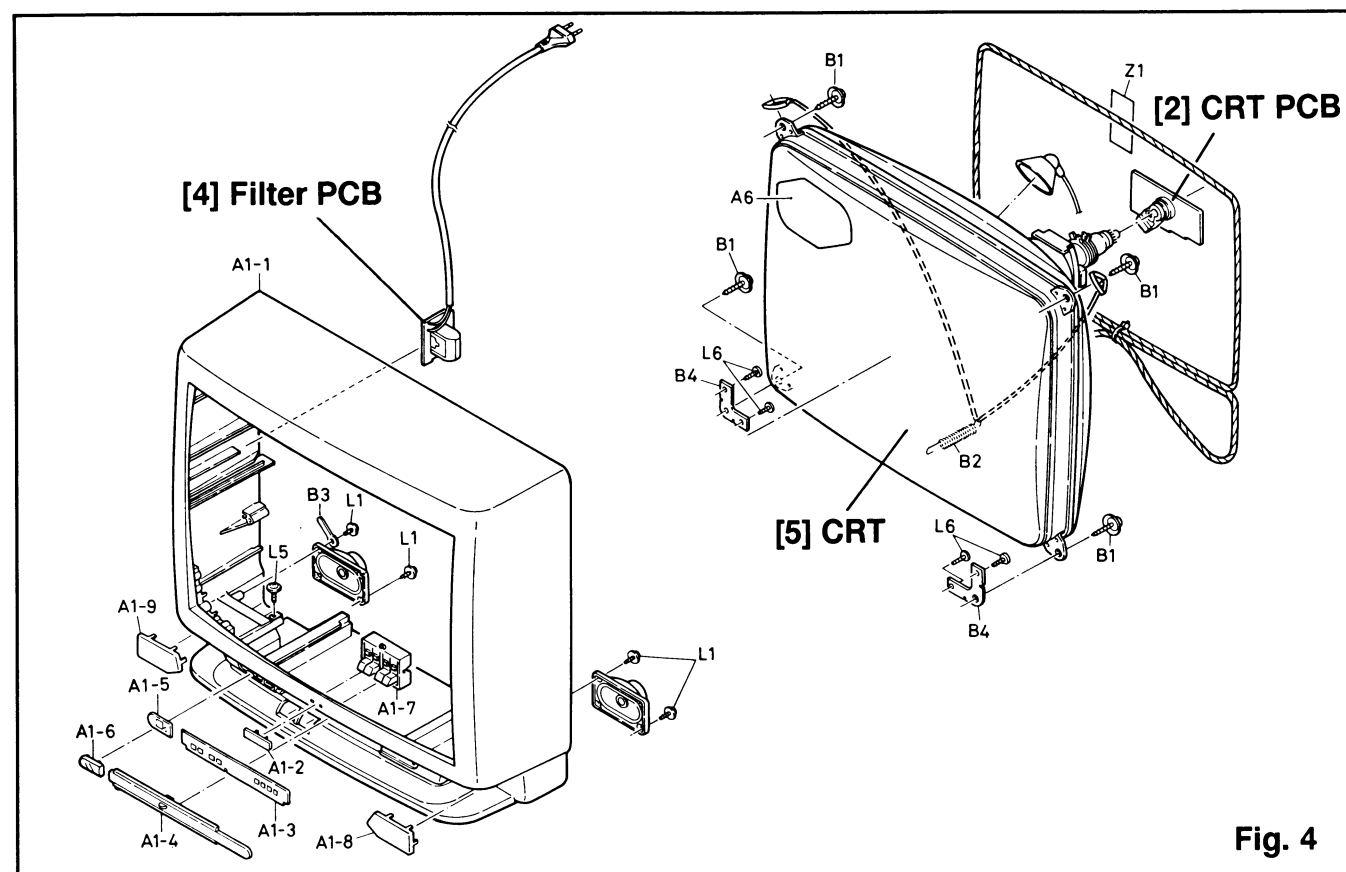


Fig. 4

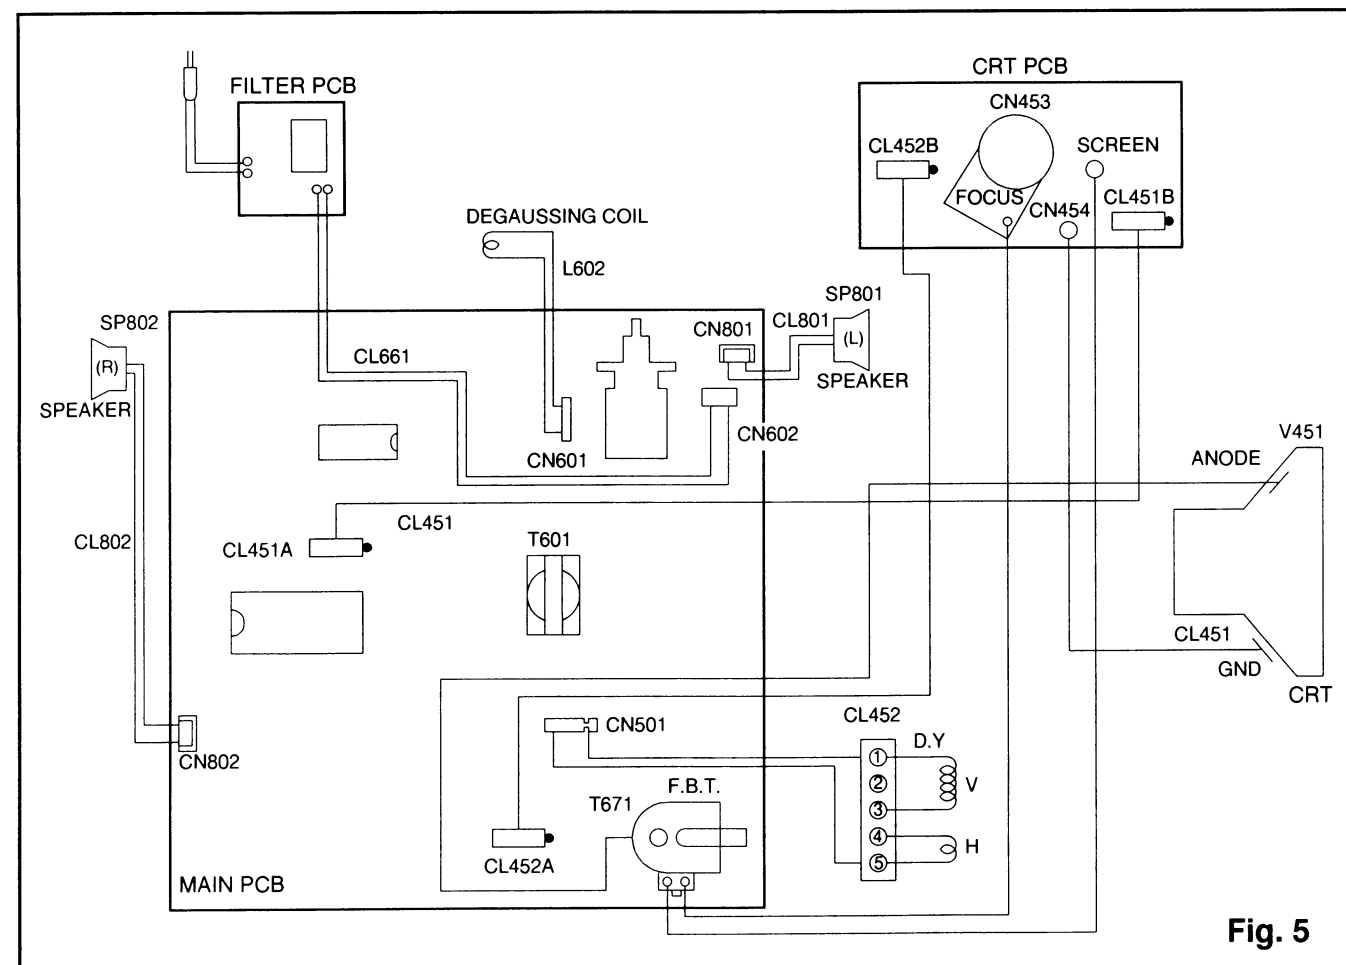


Fig. 5

ELECTRICAL ADJUSTMENT INSTRUCTIONS

Note:

Electrical adjustments are required after replacing circuit components. It is important to perform these adjustments only after all repairs and replacements have been completed. Also, do not attempt these adjustments unless the proper equipment is available.

Test Equipment Required:

1. Monoscope
2. PAL and SECAM Pattern Generator
3. IF Sweeper and Scope
4. Spectrum Analyzer
5. DC Volt Meter
6. Oscilloscope: Dual Trace with 10:1 probe
7. Color Analyzer
8. AM S.S.G. (Standard Signal Generator)

How to Set Up the Service Mode:

Preset Mode: Press Picture Select button on the remote control unit, then press the number "1" button.

- Brightness ----- Center
- Color ----- Center
- Contrast ----- Approx 70%

All adjustment procedures must be performed in order of numbering.

Operate the unit more than 20 minutes.

1. Power Supply DC Voltage Adjustment

Purpose: To get correct voltage.

Symptom of Misadjustment: The picture is dark and unit does not operate correctly.

Test Point	Adjustment Point	Input
D616 Cathode TP1 (GND)	VR601	Monoscope Pattern
Equipment		Spec.
Monoscope DC Volt Meter		DC +120±1V

Reference Notes: D616, TP1, VR601 --- Main PCB

- Adjust VR621 so that the + of C623 becomes DC +120±1V.

2. VCO Adjustment

Purpose: To set the IF (Intermediate Frequency).

Symptom of Misadjustment: Proper picture cannot be obtained.

Test Point	Adjustment Point	Input
T214	T214	—
Equipment		Spec.
Spectrum Analyzer		38.0±0.05MHz
Connections of M. EQ.		

Reference Notes: T214 --- Main PCB

1. Short C214.
2. Set the Spectrum Analyzer as shown in the above table. (Make a loop by connecting both probes of the Spectrum Analyzer and bring the loop near T214 to pick up the leakage wave.)
3. Adjust T214 for reading 38.0±0.05MHz on the Spectrum Analyzer.


<without Spectrum Analyzer>

1. Turn T214 in both directions, right and left, far enough to find the point where Noise Bands or Beats appear on the TV Screen.
2. After finding those points in both directions, adjust T214 so that it is exactly half-way between those two points.
3. After the above adjustment, tune in another Local Broadcast. Then confirm that no Noise Bands or Beats appear on the TV Screen.

3. AFT Adjustment

Purpose: To operate AFT correctly.
Symptom of Misadjustment: AFT does not work correctly and/or synchronization is faulty.

Test Point	Adjustment Point	Input
TP7 TP1 (GND)	T211	---
Equipment		Spec.
AM S.S.G. Oscilloscope		DC +3.4±0.2V
Connections of M. EQ.		
S.S.G. 38.0MHz 90dBμV Oscilloscope Main PCB Q201 Base TP7 TP1 (GND)		

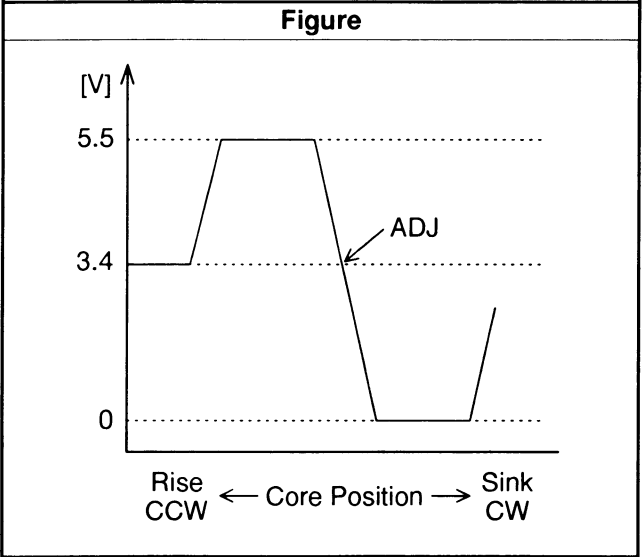

- Reference Notes:** Q201, T211, TP1, TP7 --- Main PCB
1. Input the 38.0MHz (90dBμV) no modulating signal from Q201 base.
 2. Turn the core inside of T211 counterclockwise until the top of core is the same height as metal case.
 3. Turn the core of T211 clockwise and find the point where the voltage drops from approximately 5.5V to 0V immediately on the oscilloscope.
 4. Turn the core of T211 little by little and find the point where DC +3.4±0.2V is obtained between the area mentioned in step 3.

Note: Before the adjustment, confirm that the tuner output does not have any noise except white noise.

4. AGC Adjustment

Purpose: Set AGC (Auto Gain Control) Level.
Symptom of Misadjustment: AGC does not synchronize correctly when RF Input Level is too weak and picture distortion may occur if it is too strong.


Test Point	Adjustment Point	Input
TP8 TP1 (GND)	VR211	PAL Color Bar
Equipment		Spec.
PAL Pattern Generator DC Volt Meter		DC +4.6±0.1V

- Reference Notes:** TP1, TP8, VR211 --- Main PCB
1. Receive the PAL Color Bar signal for channel 2 (48.25MHz). (RF Input Level: 80dBμV)
 2. Adjust VR211 so that the voltage of TP8 becomes DC +4.6±0.1V.

5. SIF Adjustment

Purpose: To set the SIF (Sound Intermediate Frequency).
Symptom of Misadjustment: Not sound.

Test Point	Adjustment Point	Input
TP9 TP1 (GND)	T212, T213	---
Equipment		Spec.
SIF Sweeper & Scope		See below
Connections of M. EQ.		
SIF Sweeper SIF Scope Main PCB IC201 12p TP9 TP1 (GND) 0.1μF + Insert the Capasitor (100μF/16V)		

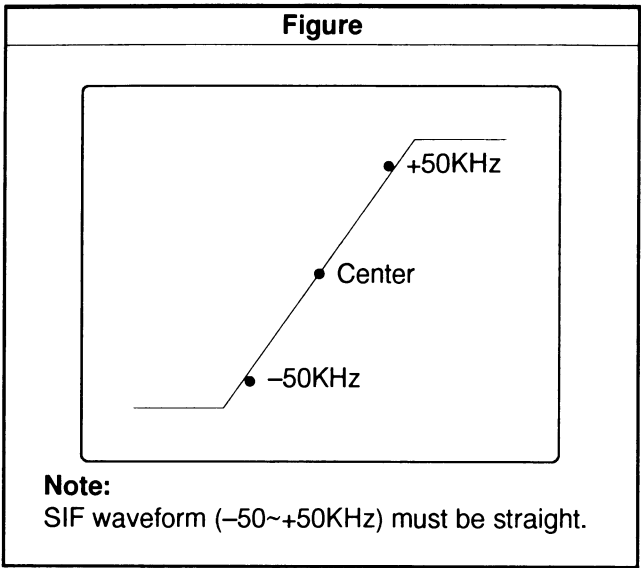


- Note:** SIF waveform (-50~+50KHz) must be straight.
- Reference Notes:** TP1, TP9, T212, T213 --- Main PCB
1. Connect SIF Sweeper & Scope shown in the above table.
 2. Adjust T212 (SIF=6.5MHz) so that the center mark will be center of SIF waveform and its waveform is straight.
 3. Adjust T213 (SIF=5.5MHz) so that the center mark will be center of SIF waveform and its waveform is straight.
 4. Repeat 2 & 3.

6. Bell Filter Adjustment

Purpose: To adjust the center frequency of SECAM bell filter.
Symptom of Misadjustment: The color will be reversed when the SECAM signal is entered.

Test Point	Adjustment Point	Input
TP2 TP1 (GND)	T404	SECAM Color Bar
Equipment		Spec.
SECAM Pattern Generator Oscilloscope		See below
Connections of M. EQ.		
Oscilloscope Main PCB TP2 TP1 (GND) D651 CH+ Ext. Trig. 5mV/div (AC) 10μS/div		

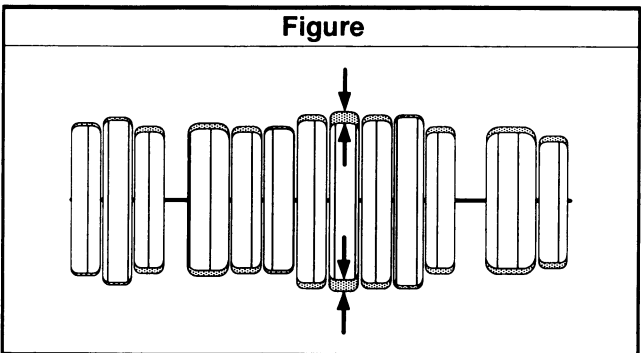

- Reference Notes:** D674, TP1, TP2, T404 --- Main PCB
- Adjust T404 so that the waveform will be flat shown in the above figure.

7. SECAM Ident Coil Adjustment

Purpose: To adjust the peak value of SECAM Ident signal.
Symptom of Misadjustment: The display is not colored when the SECAM signal is entered.

Test Point	Adjustment Point	Input
TP5 TP1 (GND)	T403	SECAM Color Bar
Equipment		Spec.
SECAM Pattern Generator Oscilloscope		See below

- Reference Notes:** TP1, TP5, T403 --- Main PCB
1. Set oscilloscope to 10:1 probe, 0.2V/div (DC) and Range 5μS/div.
 2. Adjust T403 so that the TP5 will be peak DC Voltage.

8. SECAM Demodulate Coil Adjustment

Purpose: To adjust the level of R-Y and (B-Y) color difference signal.

Symptom of Misadjustment: The Red, Green and Blue will be unbalanced.

Test Point	Adjustment Point	Input
TP3 (R-Y) TP4 (B-Y) TP1 (GND)	T402 (R-Y) T401 (B-Y)	SECAM Black Raster
Equipment		Spec.
SECAM Pattern Generator Oscilloscope		See below

Connections of M. EQ.

Figure

- Reference Notes:**
D674, TP1, TP3, TP4, T401, T402 — Main PCB
- Adjust T402 with core driver so that (A) becomes center of (B) as shown in the above table. (TP3)
 - Adjust T401 with core driver so that (A) becomes center of (B) as shown in the above table. (TP4)

9. 1H Delay Line Adjustment

Purpose: To get correct 1H delay line when the PAL signal is entered.

Symptom of Misadjustment: The Anti-PAL signal part is colored when the Philips Pattern is entered. Each scanning line is colored on the color bar.

Test Point	Adjustment Point	Input
TP6 TP1 (GND)	T301, VR301	Philips Pattern
Equipment		Spec.
PAL Pattern Generator Oscilloscope		See below

Connections of M. EQ.

Figure

- Reference Notes:**
D674, TP1, TP6, T301, VR301 — Main PCB
- Adjust VR301 and T301 so that the amplitude at Anti-PAL signal part becomes minimum (no color) and the waveform at the color bar part is not seen in double ("Venetian Blind" does not appear at the color bar signal part).

10. Black Level Adjustment

Purpose: To obtain optimum picture quality.

Symptom of Misadjustment: Black color may not be properly displayed (lighter or darker).

Test Point	Adjustment Point	Input
TP6 TP1 (GND)	VR351	Black Raster
Equipment		Spec.
Pattern Generator Oscilloscope		DC +3.2±0.05V

Figure

- Reference Notes:** TP1, TP6, VR351 — Main PCB
- Preset the picture control to initial position.
 - Receive the Black Raster pattern.
 - Adjust VR351 so that the TP6 becomes DC +3.2±0.05V as shown in the above table. (TP6 waveform)

11. Cut Off Adjustment

Purpose: To adjust the beam current of Red, Green, Blue and screen voltage.

Symptom of Misadjustment: White color may be reddish, greenish or bluish. When the screen voltage is too high, the scanning line is appeared on the screen.

Test Point	Adjustment Point	Input
Screen	VR451 VR452 VR453 Screen-VR	Black Raster
Equipment		Spec.
Pattern Generator		See below

Figure

- Reference Notes:**
VR451, VR452, VR453, VR454, VR455 — CRT PCB
Screen-VR — Main PCB (FBT)
- Degauss the CRT using Degaussing Coil..
 - Set the Screen-VR to minimum. (Counterclockwise)
 - Set the drive VRs (VR454, VR455) to mechanical center, and cut off VRs (VR451, VR452, VR453) to 10 o'clock position.
 - Short the Emitter and Collector of Q125. (Horizontal One Line)
 - Slowly turn the Screen-VR (FBT) to the point where horizontal line is just visible.
 - Adjust VR451 (R. Cut Off), VR452 (G. Cut Off) and VR453 (B. Cut Off) so that horizontal line becomes pure white.
 - Re-adjust the Screen-VR (FBT) to the point where horizontal line is just visible.
 - Open the Emitter and Collector of Q125.

Note: Confirm that White Balance Adj. is correct after this adjustment, and attempt White Balance Adj. if needed.

12. White Balance Adjustment

Purpose: To mix red, green and blue beams correctly for pure white.

Symptom of Misadjustment: White becomes bluish or reddish.

Test Point	Adjustment Point	Input
Screen	VR454 VR455	White Raster (APL 100%)
Equipment		Spec.
Pattern Generator Color Analyzer		See below

- Reference Notes:** VR454, VR455 --- CRT PCB
- Degauss the CRT using Degaussing Coil..

- Set the color analyzer to the CHROMA mode and after zero point calibration, bring the optical sensor into close contact with center on the CRT surface.
- Adjust VR454 (R. DRIVE) and VR455 (B. DRIVE) so that the respective chroma temperatures becomes 8000K-10MPCD (x : 0.300 / y : 0.290) $\pm 3\%$.

Note: Confirm that Cut Off Adj. is correct after this adjustment, and attempt Cut Off Adj. if needed.

13. Sub Bright Adjustment

Purpose: To get proper brightness.

Symptom of Misadjustment: Proper brightness cannot be obtained by adjusting the Brightness Control.

Test Point	Adjustment Point	Input
Screen	Screen-VR	Black Raster
Equipment		Spec.
Pattern Generator		See Below

Reference Notes: Screen-VR — Main PCB (FBT)

- Adjust Screen-VR so that the level of screen (Black) is just visible.

Note: Use the Black Raster Signal without set up.


14. Pin Cushion Warp Adjustment

Purpose: To correct the distortion on the both sides of display.

Symptom of Misadjustment: The vertical lines on the both sides of display are distorted.

Test Point	Adjustment Point	Input
Screen	VR571	Cross Hatch
Equipment		Spec.
Monoscope		See below

Figure

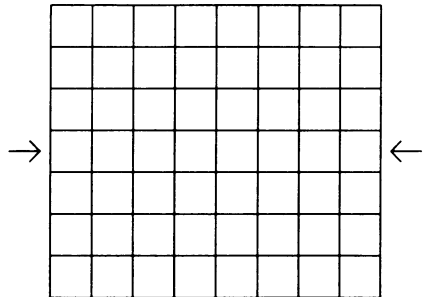

Reference Note: VR571 — Main PCB

- Adjust VR571 so that the both side lines become to straighten.

15. Focus Adjustment

Purpose: Set the optimum Focus.

Symptom of Misadjustment: Blurred images are shown on the display.

Test Point	Adjustment Point	Input
Screen	Focus VR	Monoscope Pattern
Equipment		Spec.
Monoscope		See below

Reference Note: Focus VR — Main PCB (FBT)

- Adjust Focus-VR (FBT) to be obtained clear picture.

16. V. Position & Size Adjustment

Purpose: To get correct vertical position and size of screen image.

Symptom of Misadjustment: Vertical position and size of screen image may not be properly displayed.

Test Point	Adjustment Point	Input
Screen	VR501, VR503	Monoscope Pattern
Equipment		Spec.
Monoscope		See below

Reference Note: VR501, VR503 — Main PCB

- Adjust VR503 so that the top & bottom of Monoscope pattern will be equal. (90 $\pm$ 3%)
- Adjust VR501 so that the vertical size will be 90 $\pm$ 2% of Monoscope Pattern and the circle is round.

17. H. Position & Size Adjustment

Purpose: To get correct horizontal position and size of screen image.


Symptom of Misadjustment: Horizontal position and size of screen image may not be properly displayed.

Test Point	Adjustment Point	Input
Screen	VR331, VR572	Monoscope Pattern
Equipment		Spec.
Monoscope		See below

Reference Note: VR331, VR572 — Main PCB

- Adjust VR331 so that the right & left of monoscope pattern will be equal. (90 $\pm$ 2%)
- Adjust L572 so that the horizontal size will be 90 $\pm$ 2% of Monoscope Pattern and the circle is round.

BLOCK DIAGRAM

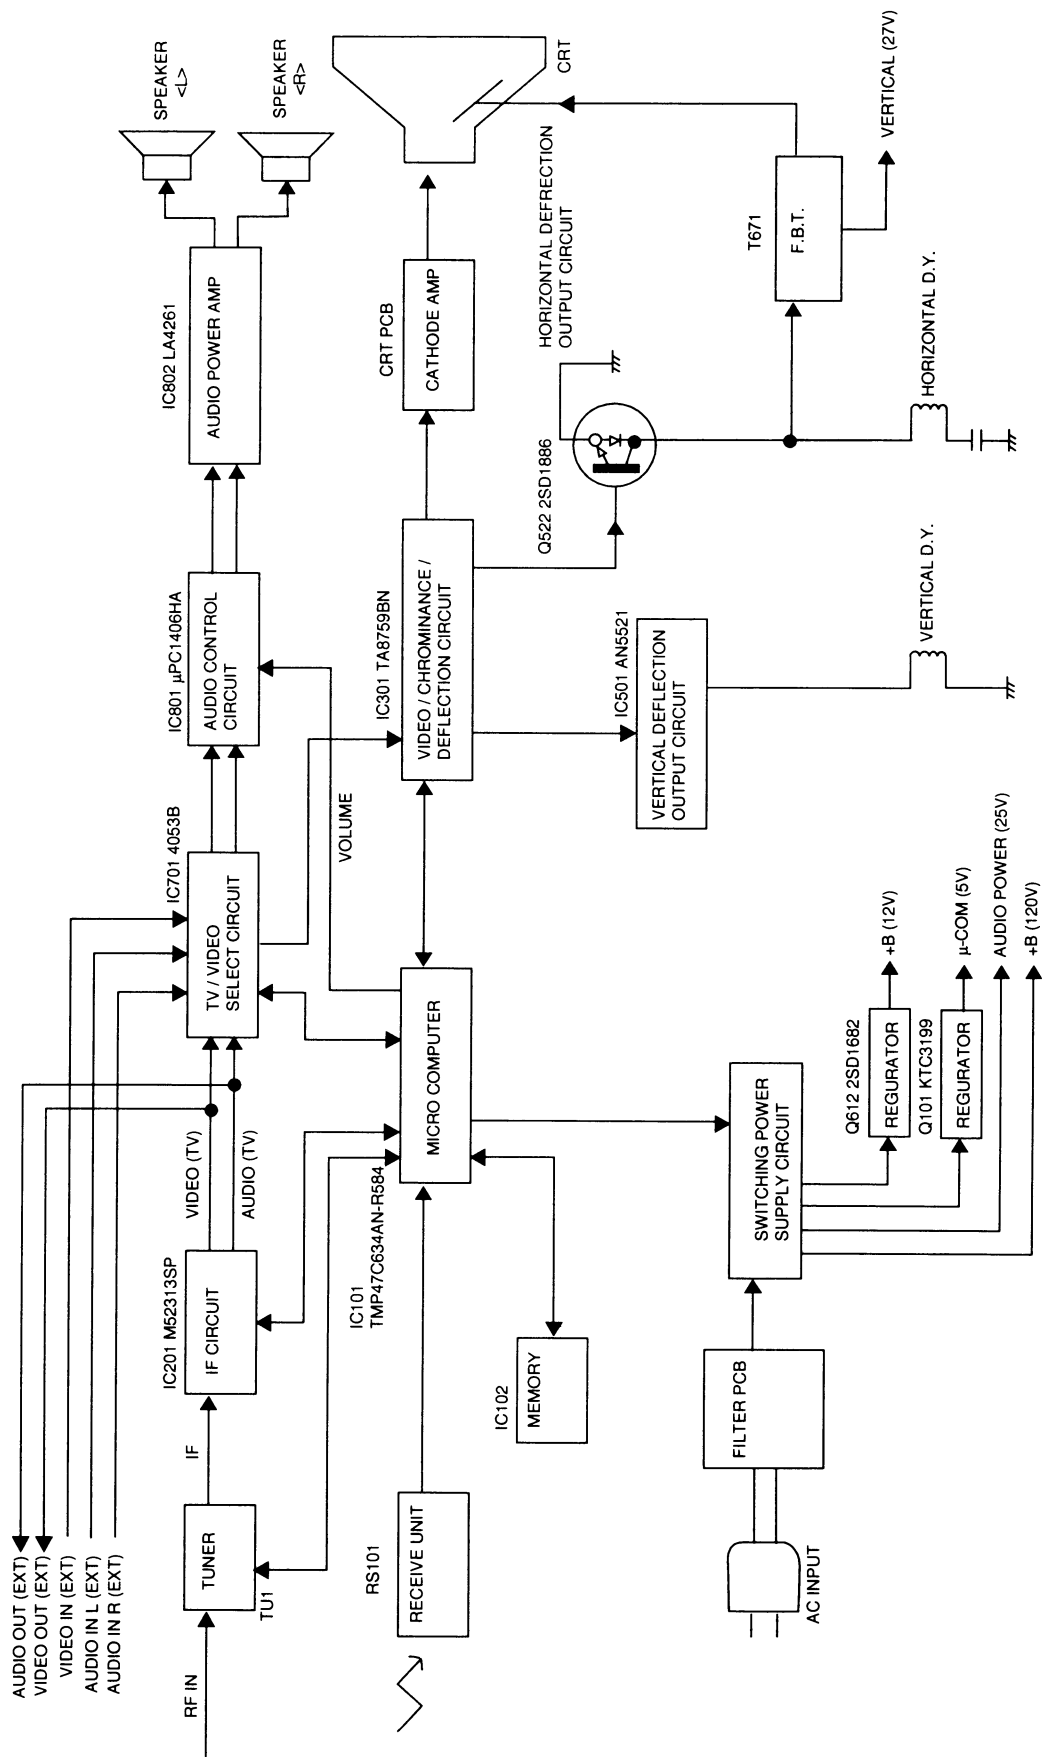

SCHEMATIC DIAGRAMS / PCB'S AND TEST POINTS

Standard Notes

Warning

Critical components having special safety characteristics are identified with a  by the Ref. No. in the parts list and enclosed within a broken line * (where several critical components are grouped in one area) along with the safety symbol  on the schematics or exploded views.

Use of substitute replacement parts which do not have the same specified safety characteristics may create shock, fire, or other hazards.

Under no circumstances should the original design be modified or altered without written permission from Funai Electric Company. Funai assumes no liability,

express or implied, arising out of any unauthorized modification of design. Servicer assumes all liability.

Notes:

- ① Do not use the part number shown on these drawings for ordering. The correct part number is shown in the parts list, and may be slightly different or amended since these drawings were prepared.
- ② All resistance values are indicated in ohms (K=10³, M=10⁶).
- ③ Resistor wattages are 1/5W or 1/6W unless otherwise specified.
- ④ All capacitance values are indicated in μ F (P=10⁻⁶ μ F).

VOLTAGE CHART

(Unit: Volt)

Pin No.	IC101	IC102	IC201	IC501	IC601	IC701	IC801
1	2.6	0.0	2.1	0.0	63.3	1.5	10.9
2	2.8	0.0	5.3	15.1	62.2	1.5	0
3	2.4	0.0	4.7	26.9	0	1.5	3.1
4	1.6	0.0	2.5	0.7	0.6	1.5	2.9
5	3.6	5.1	1.5	0		1.6	0
6	0.0	4.1	1.5	1.6		0.0	2.8
7	0.0	0.0	0.0	26.4		0.0	3.0
8	0.0	5.1	1.9			0.0	0
9	2.9		3.2			11.9	NC
10	1.7		2.3			11.9	
11	1.7		3.2			11.9	
12	1.7		2.8			2.4	
13	0.0		5.2			2.5	
14	0.0		4.4			2.5	
15	0.0		4.4			1.5	
16	4.3		5.2			12.0	
17	0.0		2.7				
18	5.2		12.0				
19	5.9		2.7				
20	0.0		2.5				
21	0.0						
22	0.0						
23	0.0						
24	0.0						
25	0.0						
26	3.9						
27	4.8						
28	2.9						
29	3.0						
30	0.0						
31	2.2						
32	2.3						
33	5.1						
34	0.0						
35	4.8						
36	4.4						
37	0.0						
38	0.0						
39	5.1						
40	5.1						
41	4.1						
42	5.1						

Pin No.	IC301	Pin No.	IC301
1	8.5	33	6.9
2	8.0	34	3.2
3	8.5	35	1.0
4	6.5	36	7.9
5	6.5	37	6.1
6	12.0	38	7.2
7	3.0	39	2.2
8	6.5	40	9.2
9	6.5	41	3.5
10	NC	42	3.5
11	5.9	43	3.5
12	5.2	44	5.0
13	5.2	45	5.0
14	7.8	46	5.0
15	6.0	47	7.3
16	10.6	48	3.1
17	3.4	49	7.2
18	4.4	50	0.0
19	0.0	51	7.4
20	5.9	52	0.0
21	0.0	53	0.0
22	11.3	54	0.0
23	5.3	55	6.0
24	5.8	56	3.2
25	4.9	57	5.8
26	3.2	58	4.8
27	11.0	59	3.3
28	3.3	60	6.0
29	0.7	61	12.0
30	8.7	62	6.0
31	6.2	63	12.0
32	6.1	64	8.0

Input: PAL Color Bar Signal (with 1KHz Audio Signal)

Receiving Ch.: E2 ch (48.25MHz)


Preset Mode: Press Picture Select button on the remote control unit, then press the number "1" button.

Brightness--- Center
Color--- Center
Contrast--- Approx 70%
Volume--- Minimum

Pin NO.	IC802	Pin No.	E	C	B	Pin No.	E	C	B
1	0.6	Q1	0.0	1.3	0.6	Q552	0.0	—	-0.1
2	0.0	Q2	11.9	0.0	11.5	Q571	1.6	8.5	2.1
3	~	Q3	11.9	0.0	11.8	Q572	11.0	0.6	10.5
4	0.0	Q4	11.9	11.8	11.1	Q573	0.0	10.8	0.6
5	0.0	Q101	5.1	9.8	5.7	Q601	0.5(G)	316(D)	0.1(S)
6	~	Q102	5.7	5.7	5.0	Q602	0.0	0.6	-0.1
7	9.1	Q103	0.0	3.1	0.0	Q603	0.0	0.6	-8.5
8	0.0	Q104	29.0	9.8	28.7	Q604	0.6	0.0	0.6
9	18.3	Q105	0.0	28.5	0.0	Q607	6.7	62.0	7.3
10	9.1	Q106	5.1	-2.1	5.3	Q608	4.2	120.0	0.0
		Q121	0.0	4.8	0.0	Q609	0.0	0.0	0.6
		Q122	0.0	3.9	0.0	Q610	18.5	18.5	17.8
		Q123	0.0	4.4	0.0	Q611	0.0	0.1	0.6
		Q125	0.0	0.7	0.0	Q612	12.0	12.4	12.7
		Q201	0.8	9.4	1.5	Q702	2.4	12.0	3.0
		Q223	12.0	5.2	11.9	Q703	1.9	12.0	2.5
		Q224	0.0	12.0	0.0	Q705	0.0	11.9	0.0
		Q251	0.0	4.3	0.0	Q721	3.1	0.0	2.5
		Q301	0.0	12.0	0.0	Q802	0.0	0.0	0.6
		Q391	0.0	0.0	0.7	Q804	0.0	18.2	0.0
		Q392	0.0	6.0	0.0	Q451	3.1	11.5	3.5
		Q393	5.1	0.0	4.5	Q452	11.5	147.1	12.0
		Q394	5.1	0.0	6.0	Q453	3.1	11.5	3.5
		Q395	0.0	6.1	0.0	Q454	11.5	153.9	12.0
		Q397	0.0	0.0	0.0	Q455	3.2	11.5	3.5
		Q551	0.0	86.1	0.3	Q456	11.5	154.0	12.0

EXPLODED VIEW

* Marked Parts see the Electrical Parts List.

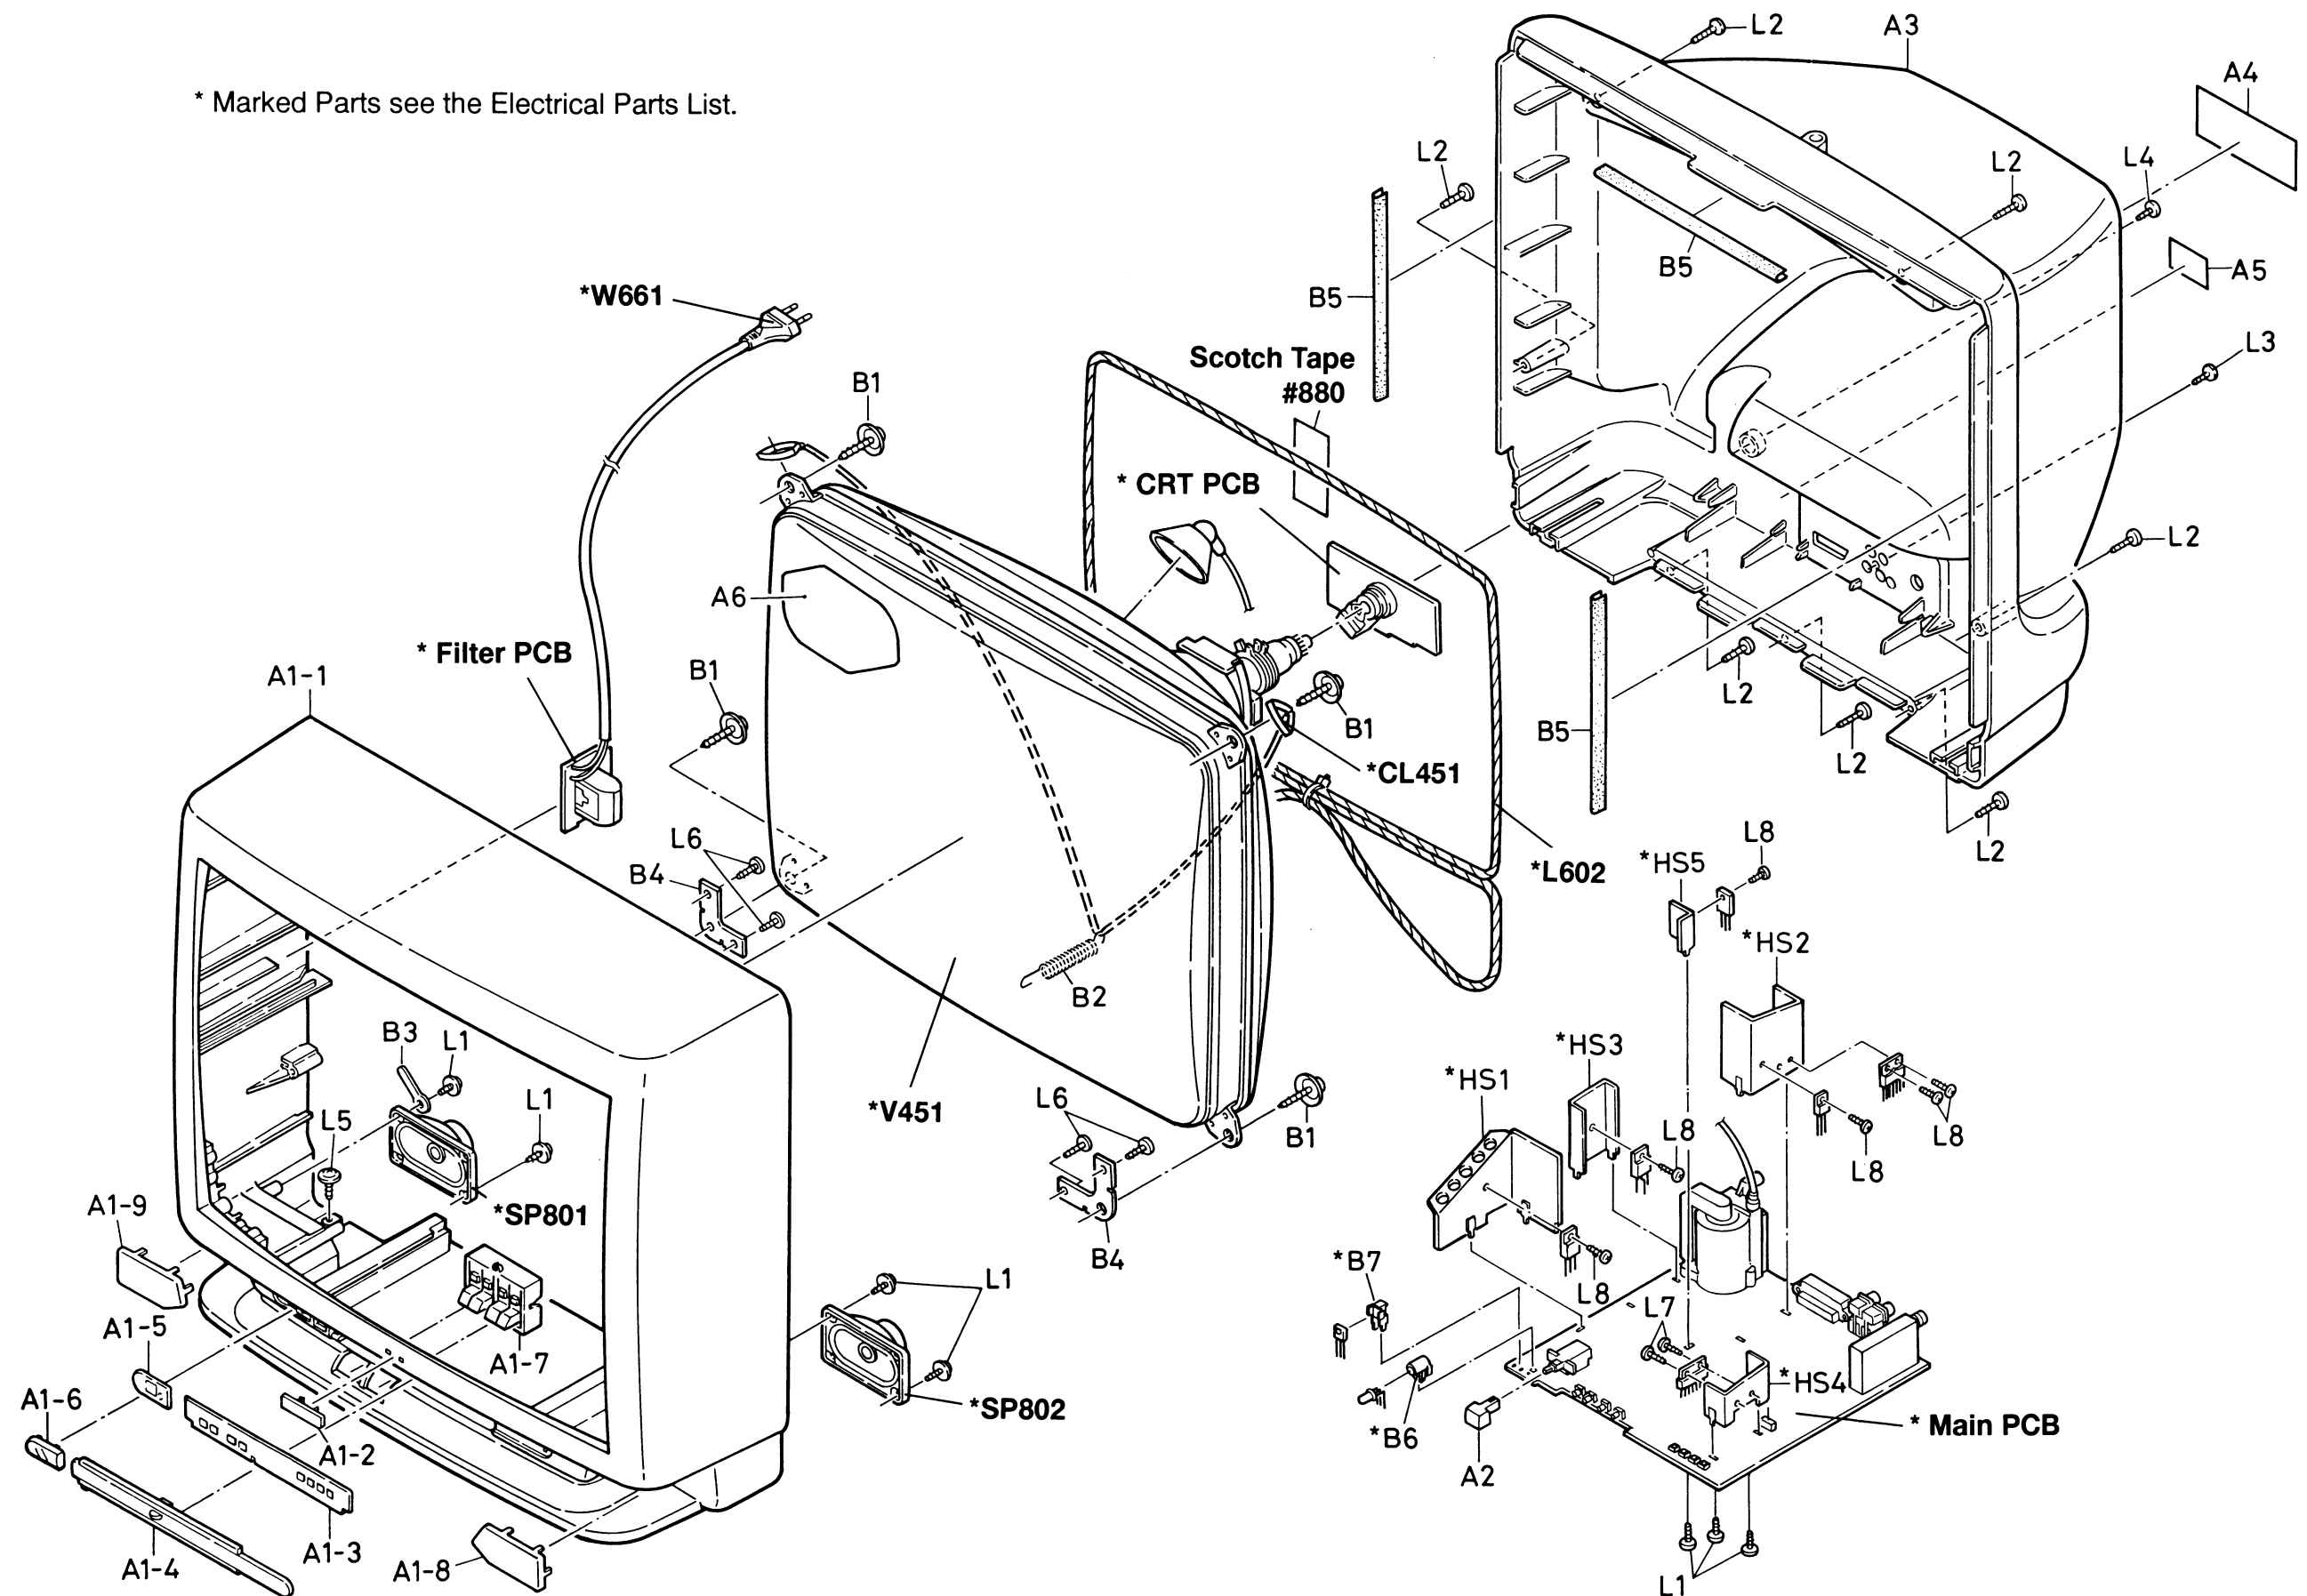

MECHANICAL PARTS LIST

PRODUCT SAFETY NOTE: Products marked with a  have special characteristics important to safety. Before replacing any of these components, read carefully the product safety notice in this service manual. Don't degrade the safety of the product through improper servicing.

Ref. No.	Description	Part No.
A 1	FRONT CABINET ASSEMBLY	0EM100651
A1-1	FRONT CABINET	0EM000188
A1-2	BRAND BADGE	0EM400975
A1-3	CONTROL PLATE	0EM300803
A1-4	CONTROL DOOR	0EM300867
A1-5	SENSOR PLATE	0EM402675
A1-6	SENSOR WINDOW	0EM402847
A1-7	CHANNEL/VOLUME KNOB	0EM300743
A1-8	SPEAKER GRILLE (R)	0EM300847
A1-9	SPEAKER GRILLE (L)	0EM300848
A 2	POWER KNOB	0EM402406
A 3	REAR CABINET	0EM100608
A 4	RATING LABEL	0EM402805
A 5	MARK OF CONFORMITY LABEL	0EM402171
A 6	POP LABEL	0EM402806
B 1	CRT MOUNTING SCREW	0EM402440
B 2	TENSION SPRING	26WH006
B 3	COATING CLIP	XF01056KZ001
B 4	CRT HOLDER	0EM402556
B 5	CLOTH	TS7623
L 1	P-TIGHT SCREW 3X10 CUP+	GFMP3100
L 2	P-TIGHT SCREW 4X18 BIND+	GBMP4180
L 3	P-TIGHT SCREW 3X10 BIND+	GBKP3100
L 4	P-TIGHT SCREW 4X12 BIND+	GBKP4120
L 5	P-TIGHT SCREW 3X8 ø12 PAN+	GCMP3080
L 6	P-TIGHT SCREW 4X12 BIND+	GBMP4120
L 7	B-TIGHT SCREW 3X6 BIND+	GBMB3060
L 8	B-TIGHT SCREW 3X10 BIND+	GBMB3100
S 1	CARTON	0EM402807
S 2	STYROFOAM TOP	0EM000176
S 3	STYROFOAM BOTTOM	0EM000177
S 4	SET BAG	0EM300164
S 5	SERIAL NO. LABEL	24LH033
S 6	FRONT PAD	0EM402561
S 7	T/B PAD	0EM402562
X 1	REMOCON UNIT	UREMT20MM011
X 2	BATTERY UM-3X2	XB0M451GW003
X 3	OWNER'S MANUAL (E)	0EMN00992
X 4	POLYETHYLENE BAG	Z220300
X 5	OWNER'S MANUAL (R)	0EMN00997
X 6	OWNER'S MANUAL (A)	0EMN00998

ELECTRICAL PARTS LIST

PRODUCT SAFETY NOTE: Products marked with a  have special characteristics important to safety. Before replacing any of these components, read carefully the product safety notice in this service manual. Don't degrade the safety of the product through improper servicing.

NOTE: Parts that not assigned part numbers (-----) are not available.

Tolerance of Capacitors and Resistors are noted with the following symbols.

C.....±0.25% D.....±0.5% F.....±1%
G.....±2% J.....±5% K.....±10%
M.....±20% N.....±30% Z.....+80/-20%

PCB Assembly

Ref. No.	Description	Part No.
	PCB Assembly	MMA-145A
	Consists of the following:	
	Main PCB	-----
	CRT PCB	-----
	Filter PCB	-----

Main PCB

Ref. No.	Description	Part No.
	Main PCB	-----
	Consists of the following:	
	CAPACITORS	
C 1	ELECTROLYTIC CAP. 10µF/50V	126F106S
C 2	CHIP CERAMIC CAP. CH 100pF/50V or CHIP CERAMIC CAP. CH 100pF/50V	CHE1JJ8CH101 12CH101C
C 3	TF CAP. J 0.1µF or TF CAP. J 0.1µF	125U104S 122Z309S
C 4	TF CAP. J 0.1µF or TF CAP. J 0.1µF	125U104S 122Z309S
C 5	TF CAP. J 0.1µF or TF CAP. J 0.1µF	125U104S 122Z309S
C 6	ELECTROLYTIC CAP. 10µF/50V	126F106S
C 7	ELECTROLYTIC CAP. 10µF/50V	126F106S
C 8	ELECTROLYTIC CAP. 10µF/50V	126F106S
C 9	ELECTROLYTIC CAP. 1µF/50V	126F105S
C 10	CHIP CERAMIC CAP. F 0.01µF/50V or CHIP CERAMIC CAP. F 0.01µF/50V	CHE1JJ80F103 12F3103C
C 11	ELECTROLYTIC CAP. 10µF/50V	126F106S
C 101	ELECTROLYTIC CAP. 47µF/16V	126C476S
C 102	CHIP CERAMIC CAP. F 0.01µF/50V or CHIP CERAMIC CAP. F 0.01µF/50V	CHE1JJ80F103 12F3103C
C 103	CHIP CERAMIC CAP. F 0.01µF/50V or CHIP CERAMIC CAP. F 0.01µF/50V	CHE1JJ80F103 12F3103C
C 104	CHIP CERAMIC CAP. F 0.01µF/50V or CHIP CERAMIC CAP. F 0.01µF/50V	CHE1JJ80F103 12F3103C
C 105	ELECTROLYTIC CAP. 220µF/6.3V	126A227S
C 110	ELECTROLYTIC CAP. 47µF/16V	126C476S
C 111	CHIP CERAMIC CAP. F 0.022µF/50V or CHIP CERAMIC CAP. F 0.022µF/50V	CHE1JJ80F223 12F3223C
C 152	ELECTROLYTIC CAP. 4.7µF/25V	126D475
C 155	ELECTROLYTIC CAP. 1µF/50V	126F105S
C 171	CHIP CERAMIC CAP. SL 100pF/50V or CHIP CERAMIC CAP. SL 100pF/50V	CHE1JJ8SL101 1270101C
C 172	CHIP CERAMIC CAP. SL 100pF/50V or CHIP CERAMIC CAP. SL 100pF/50V	CHE1JJ8SL101 1270101C
C 173	CHIP CERAMIC CAP. SL 100pF/50V or CHIP CERAMIC CAP. SL 100pF/50V	CHE1JJ8SL101 1270101C
C 174	CHIP CERAMIC CAP. SL 100pF/50V or CHIP CERAMIC CAP. SL 100pF/50V	CHE1JJ8SL101 1270101C
C 175	CHIP CERAMIC CAP. CH 24pF/50V or CHIP CERAMIC CAP. CH 24pF/50V	CHE1JJ8CH240 12CH240C
C 176	CHIP CERAMIC CAP. CH 24pF/50V or	CHE1JJ8CH240

Ref. No.	Description	Part No.
C 306	CHIP CERAMIC CAP. F 0.01μF/50V or CHIP CERAMIC CAP. F 0.01μF/50V	CHE1JJ80F103 12F3103C
C 307	*MYLAR CAP. K 0.056μF/50V or MYLAR CAP. K 0.056μF/50V	1250563S 2250563S
C 308	CHIP CERAMIC CAP. B 0.01μF/50V or CHIP CERAMIC CAP. B 0.01μF/50V	CHE1JK80B103 12B3103C
C 309	ELE CAP. NP 2.2μF/50V	126X225S
C 310	CHIP CERAMIC CAP. SL 13pF/50V or CHIP CERAMIC CAP. SL 13pF/50V	CHE1JJ8SL130 1270130C
C 311	CHIP CERAMIC CAP. CH 39pF/50V or CHIP CERAMIC CAP. CH 39pF/50V	CHE1JJ8CH390 12CH390C
C 312	CHIP CERAMIC CAP. CH 27pF/50V or CHIP CERAMIC CAP. CH 27pF/50V	CHE1JJ8CH270 12CH270C
C 313	SEMICON CAP. K 0.027μF 25V or SEMICON CAP. K 0.027μF 25V	CDA1EKS0X273 12Y2273S
C 314	CHIP CERAMIC CAP. F 0.01μF/50V or CHIP CERAMIC CAP. F 0.01μF/50V	CHE1JJ80F103 12F3103C
C 315	ELECTROLYTIC CAP. 100μF/16V	126C107S
C 317	CHIP CERAMIC CAP. SL 33pF/50V or CHIP CERAMIC CAP. SL 33pF/50V	CHE1JJ8SL330 1270330C
C 318	CHIP CERAMIC CAP. F 0.1μF/50V	12F3104C
C 320	ELECTROLYTIC CAP. 0.47μF/50V	126F474S
C 331	SEMICON CAP. K 0.015μF/25V or SEMICON CAP. K 0.015μF/25V	CDA1EKS0X153 12Y2153S
C 333	ELE CAP. 0.47μF/50V (L.L.) or ELE CAP. 0.47μF/50V (L.L.)	CE1JMAULLR47 CE1JMASLLR47
C 334	ELECTROLYTIC CAP. 330μF/10V	CE1AMASTL331
C 335	CHIP CERAMIC CAP. F 0.01μF/50V or CHIP CERAMIC CAP. F 0.01μF/50V	CHE1JJ80F103 12F3103C
C 336	SEMICON CAP. K 0.022μF 25V or SEMICON CAP. K 0.022μF 25V	CDA1EKS0X223 12Y2223S
C 337	ELECTROLYTIC CAP. 3.3μF/50V	126F335S
C 338	CHIP CERAMIC CAP. B 0.01μF/50V or CHIP CERAMIC CAP. B 0.01μF/50V	CHE1JK80B103 12B3103C
C 339	CHIP CERAMIC CAP. B 330pF/50V or CHIP CERAMIC CAP. B 330pF/50V	CHE1JK80B331 12B3331C
C 340	CHIP CERAMIC CAP. B 0.0022μF/50V or CHIP CERAMIC CAP. B 0.0022μF/50V	CHE1JK80B222 12B3222C
C 351	CHIP CERAMIC CAP. CH 180pF/50V or CHIP CERAMIC CAP. CH 180pF/50V	CHE1JJ8CH181 12CH181C
C 352	CHIP CERAMIC CAP. CH 180pF/50V or CHIP CERAMIC CAP. CH 180pF/50V	CHE1JJ8CH181 12CH181C
C 353	SEMICON CAP. K 0.1μF/25V or SEMICON CAP. K 0.1μF/25V	CDA1EKS0X104 12Y2104S
C 354	ELECTROLYTIC CAP. 10μF/50V	126F106S
C 355	SEMICON CAP. K 0.1μF/25V or SEMICON CAP. K 0.1μF/25V	CDA1EKS0X104 12Y2104S
C 356	ELECTROLYTIC CAP. 10μF/50V	126F106S
C 357	CHIP CERAMIC CAP. CH 27pF/50V or CHIP CERAMIC CAP. CH 27pF/50V	CHE1JJ8CH270 12CH270C
C 358	ELECTROLYTIC CAP. 1μF/50V	126F105S
C 359	CHIP CERAMIC CAP. CH 120pF/50V or CHIP CERAMIC CAP. CH 120pF/50V	CHE1JJ8CH121 12CH121C
C 360	CHIP CERAMIC CAP. SL 56pF/50V or CHIP CERAMIC CAP. SL 56pF/50V	CHE1JJ8SL560 1270560C
C 361	ELECTROLYTIC CAP. 0.1μF/50V	126F104S
C 362	ELECTROLYTIC CAP. 0.1μF/50V	126F104S
C 363	ELECTROLYTIC CAP. 1μF/50V	126F105S
C 364	ELECTROLYTIC CAP. 0.1μF/50V	126F104S
C 365	ELECTROLYTIC CAP. 0.47μF/50V	126F474S
C 366	ELECTROLYTIC CAP. 0.47μF/50V	126F474S
C 367	ELECTROLYTIC CAP. 0.47μF/50V	126F474S
C 381	CHIP CERAMIC CAP. SL 68pF/50V or CHIP CERAMIC CAP. SL 68pF/50V	CHE1JJ8SL680 1270680C

* Mylar is a registered trademark of E. I. DuPont de Nemours and Company.

Ref. No.	Description	Part No.
C 382	CHIP CERAMIC CAP. SL 33pF/50V or CHIP CERAMIC CAP. SL 33pF/50V	CHE1JJ8SL330 1270330C
C 383	CHIP CERAMIC CAP. SL 47pF/50V or CHIP CERAMIC CAP. SL 47pF/50V	CHE1JJ8SL470 1270470C
C 401	CHIP CERAMIC CAP. CH 180pF/50V or CHIP CERAMIC CAP. CH 180pF/50V	CHE1JJ8CH181 12CH181C
C 402	CHIP CERAMIC CAP. CH 180pF/50V or CHIP CERAMIC CAP. CH 180pF/50V	CHE1JJ8CH181 12CH181C
C 403	CHIP CERAMIC CAP. CH 7pF/50V or CHIP CERAMIC CAP. CH 7pF/50V	CHE1JJ8CH7R0 12CH7R0C
C 404	CHIP CERAMIC CAP. CH 20pF/50V or CHIP CERAMIC CAP. CH 20pF/50V	CHE1JJ8CH200 12CH200C
C 405	CHIP CERAMIC CAP. CH 6pF/50V or CHIP CERAMIC CAP. CH 6pF/50V	CHE1JJ8CH6R0 12CH6R0C
C 406	CHIP CERAMIC CAP. CH 20pF/50V or CHIP CERAMIC CAP. CH 20pF/50V	CHE1JJ8CH200 12CH200C
C 407	MYLAR CAP. K 0.056μF/50V or MYLAR CAP. K 0.056μF/50V	1250563S 2250563S
C 408	CHIP CERAMIC CAP. F 0.01μF/50V or CHIP CERAMIC CAP. F 0.01μF/50V	CHE1JJ80F103 12F3103C
C 409	CHIP CERAMIC CAP. F 0.01μF/50V or CHIP CERAMIC CAP. F 0.01μF/50V	CHE1JJ80F103 12F3103C
C 410	CHIP CERAMIC CAP. SL 27pF/50V or CHIP CERAMIC CAP. SL 27pF/50V	CHE1JJ8SL270 1270270C
C 412	CHIP CERAMIC CAP. F 0.01μF/50V or CHIP CERAMIC CAP. F 0.01μF/50V	CHE1JJ80F103 12F3103C
C 501	CHIP CERAMIC CAP. B 0.001μF or CHIP CERAMIC CAP. B 0.001μF	12B3102C CHE1JJ80B102
C 502	ELE CAP. 2.2μF/50V (L.L.) or ELE CAP. 2.2μF/50V (L.L.)	CE1JMAULL2R2 CE1JMASLL2R2
C 503	MYLAR CAP. K 0.033μF/50V or MYLAR CAP. K 0.033μF/50V	1250333S 2250333S
C 504	CHIP CERAMIC CAP. B 470pF/50V or CHIP CERAMIC CAP. B 470pF/50V	CHE1JK80B471 12B3471C
C 506	TF CAP. J 0.1μF or TF CAP. J 0.1μF	125U104S 122Z309S
C 507	ELE CAP. 470μF/35V or ELE CAP. 470μF/35V or ELE CAP. 470μF/35V	CE1GMZNEH471 CE1GMZNDL471 CE1GMZPDL471
C 508	MYLAR CAP. K 0.056μF/50V or MYLAR CAP. K 0.056μF/50V	1250563S 2250563S
C 509	ELE CAP. 2200μF/16V or ELE CAP. 2200μF/16V or ELE CAP. 2200μF/16V	CE1CMZNEH222 CE1CMZNDL222 CE1CMZPDL222
C 510	ELE CAP. 2200μF/16V or ELE CAP. 2200μF/16V or ELE CAP. 2200μF/16V	CE1CMZNEH222 CE1CMZNDL222 CE1CMZPDL222
C 511	ELE CAP. 2.2μF/50V (L.L.) or ELE CAP. 2.2μF/50V (L.L.)	CE1JMAULL2R2 CE1JMASLL2R2
C 512	ELE CAP. 2.2μF/50V (L.L.) or ELE CAP. 2.2μF/50V (L.L.)	CE1JMAULL2R2 CE1JMASLL2R2
C 513	ELECTROLYTIC CAP. 100μF/35V	126E107S
C 551	CHIP CERAMIC CAP. B 330pF/50V or CHIP CERAMIC CAP. B 330pF/50V	CHE1JK80B331 12B3331C
C 552	CERAMIC CAP. 330pF/500V	CCD2JKD0B331
C 553	CERAMIC CAP. 1000pF 1KV or CERAMIC CAP. 1000pF 1KV	CCD3AKP0B102 6220574
C 555	P.P. CAP. 0.0022μF 1.6KV or P.P. CAP. 0.0022μF 1.6KV or P.P. CAP. 0.0022μF 1.6KV	CBH3CJD00222 1220492 CA3C222DT007
C 556	P.P. CAP. 0.01μF 1.6KV or P.P. CAP. 0.01μF 1.6KV	CBH3CJD00103 1220500
C 557	P.P. CAP. 0.027μF 200V	122Z592

Ref. No.	Description	Part No.
C 558	P.P. CAP. 0.47μF 200V or P.P. CAP. 0.47μF 200V	122Z256 1220511
C 559	CERAMIC CAP. 220pF 1KV or CERAMIC CAP. 220pF 1KV	CCD3AKP0B221 6220486
C 560	CERAMIC CAP. 390pF 2KV (BN)	CCD3DKA0B391
C 571	MYLAR CAP. K 0.068μF/50V or MYLAR CAP. K 0.068μF/50V	1250683S 2250683S
C 572	ELECTROLYTIC CAP. 47μF/35V	126E476S
C 573	ELECTROLYTIC CAP. 470μF/6.3V	126A477S
C 574	MYLAR CAP. K 0.068μF/50V or MYLAR CAP. K 0.068μF/50V	1250683S 2250683S
C 575	ELE CAP. NP 4.7μF/63V	126Y475S
C 576	ELECTROLYTIC CAP. 47μF/35V	126E476S
C 577	ELECTROLYTIC CAP. 4.7μF/100V	126H475S
C 601	CERAMIC CAP. 820pF/2KV	CCD3DKP0B821
C 603	TF CAP. J 0.1μF or TF CAP. J 0.1μF	125U104S 122Z309S
C 604	TF CAP. J 0.1μF or TF CAP. J 0.1μF	125U104S 122Z309S
C 608	TF CAP. J 0.12μF or TF CAP. J 0.12μF	125U124S 122Z310S
C 609	ELE CAP. 330μF/400V or ELE CAP. 330μF/400V	CA2H331SM001 CA2H331NC029
C 610	ELECTROLYTIC CAP. 47μF/16V	126C476S
C 611	MYLAR CAP. K 0.001μF/50V or MYLAR CAP. K 0.001μF/50V	1250102S 2250102S
C 612	MYLAR CAP. K 0.0033μF/50V or MYLAR CAP. K 0.0033μF/50V	1250332S 2250332S
C 614	CERAMIC CAP. 470pF/2KV or CERAMIC CAP. 470pF/2KV	CCD3DKP0B471 6220583
C 615	LINE ACROSS CAP. 0.1μF/250V or LINE ACROSS CAP. 0.1μF/250V or LINE ACROSS CAP. 0.1μF/250V	CA2E104MS010 CT2E104DT001 122Z181
C 616	CERAMIC CAP. 0.01μF AC250V or CERAMIC CAP. 0.01μF AC250V	CA2E104MS005 CCH2E2A0F103
C 617	CERAMIC CAP. 0.01μF AC250V or CERAMIC CAP. 0.01μF AC250V	CCD2E2A0F103 CCH2E2A0F103
C 618	CERAMIC CAP. 0.01μF AC250V or CERAMIC CAP. 0.01μF AC250V	CCD2E2A0F103 CCH2E2A0F103
C 619	CERAMIC CAP. 0.01μF AC250V or CERAMIC CAP. 0.01μF AC250V	CCD2E2A0F103 CCH2E2A0F103
C 620	CERAMIC CAP. 220pF/2KV or CERAMIC CAP. 220pF/2KV	CCD3DKP0B221 6220581
C 621	ELE CAP. 100μF/160V (105C)	CE2CMZNA0101
C 622	ELE CAP. 100μF/160V (105C) or ELE CAP. 100μF/160V (105C)	CA2C101NC009 CE2CMZDEH101
C 624	ELE CAP. 1000μF/35V or ELE CAP. 1000μF/35V or ELE CAP. 1000μF/35V	CE1GMZNEH102 CE1GMZNDL102 CE1GMZPDL102
C 625	ELECTROLYTIC CAP. 33μF/16V	126C336S
C 627	ELE CAP. 1000μF/25V or ELE CAP. 1000μF/25V or ELE CAP. 1000μF/25V	CE1EMZNEH102 CE1EMZNDL102 CE1EMZPDL102
C 630	CERAMIC CAP. 0.0033μF AC400V or CERAMIC CAP. 0.0033μF AC400V	CCN2HMP0E332 122Z012
C 633	CERAMIC CAP. B 470pF/500V	CCD2JKS0B471
C 634	ELE CAP. 2200μF/16V or ELE CAP. 2200μF/16V or ELE CAP. 2200μF/16V	CE1CMZNEH222 CE1CMZNDL222 CE1CMZPDL222
C 635	ELECTROLYTIC CAP. 470μF/16V	CE1CMASTL471
C 661	LINE ACROSS CAP. 0.1μF/250V or LINE ACROSS CAP. 0.1μF/250V or LINE ACROSS CAP. 0.1μF/250V	CA2E104MS010 CT2E104DT001 122Z181
C 662	LINE ACROSS CAP. 0.047μF/250V or	CA2E104MS005 CA2E473MS010

Ref. No.	Description	Part No.
C 672	LINE ACROSS CAP. 0.047μF/250V or LINE ACROSS CAP. 0.047μF/250V	CT2E473DT001 122Z271
C 673	CERAMIC CAP. B 0.0047μF 500V	CCD2JKD0B472
C 674	ELE CAP. 1000μF/35V	CE1GMZNTL102
C 675	ELE CAP. 33μF/250V	CE2EMZNDL330
C 680	CERAMIC CAP. 100pF/500V	CCD2JKD0B101
C 701	ELE CAP. 0.47μF/160V	CE2CMZNDLR47
C 703	ELECTROLYTIC CAP. 47μF/16V	126C476S
C 704	SEMICON CAP. K 0.068μF/25V or SEMICON CAP. K 0.068μF/25V	CDA1EKS0X683 12Y2683S
C 704	ELECTROLYTIC CAP. 47μF/16V	126C476S
C 721	ELECTROLYTIC CAP. 470μF/10V	126B477S
C 723	ELECTROLYTIC CAP. 4.7μF/50V	126F475S
C 724	ELECTROLYTIC CAP. 4.7μF/50V	126F475S
C 725	ELECTROLYTIC CAP. 1μF/50V	126F105S
C 801	ELECTROLYTIC CAP. 100μF/6.3V	126A107S
C 802	ELE CAP. 470μF/16V or ELE CAP. 470μF/16V or ELE CAP. 470μF/16V	CE1CMZNEH471 CE1CMZNDL471 CE1CMZPDL471
C 803	ELECTROLYTIC CAP. 100μF/6.3V	126A107S
C 804	TF CAP. J 0.1μF or TF CAP. J 0.1μF	125U104S 122Z309S
C 807	TF CAP. J 0.1μF or TF CAP. J 0.1μF	125U104S 122Z309S
C 809	ELECTROLYTIC CAP. 4.7μF/50V	126F475S
C 810	ELECTROLYTIC CAP. 47μF/16V	126C476S
C 811	ELECTROLYTIC CAP. 4.7μF/50V	126F475S
C 812	ELECTROLYTIC CAP. 4.7μF/50V	126F475S
C 813	ELECTROLYTIC CAP. 4.7μF/50V	126F475S
C 814	ELECTROLYTIC CAP. 100μF/25V	126D107S
C 816	ELE CAP. 470μF/16V or ELE CAP. 470μF/16V or ELE CAP. 470μF/16V	CE1CMZNEH471 CE1CMZNDL471 CE1CMZPDL471
C 817	ELECTROLYTIC CAP. 4.7μF/50V	126F475S
C 818	ELE CAP. 2200μF/25V	CE1EMZNTL222
C 819	CHIP CERAMIC CAP. F 0.01μF/50V or CHIP CERAMIC CAP. F 0.01μF/50V	CHE1JJ80F103 12F3103C
C 822	CHIP CERAMIC CAP. B 0.0068μF/50V or CHIP CERAMIC CAP. B 0.0068μF/50V	CHE1JK80B682 12B3682C
C 823	CHIP CERAMIC CAP. B 0.0068μF/50V or CHIP CERAMIC CAP. B 0.0068μF/50V	CHE1JK80B682 12B3682C
C 824	SEMICON CAP. K 0.022μF 25V or SEMICON CAP. K 0.022μF 25V	CDA1EKS0X223 12Y2223S
C 825	SEMICON CAP. K 0.022μF 25V or SEMICON CAP. K 0.022μF 25V	CDA1EKS0X223 12Y2223S
C 951	CHIP CERAMIC CAP. SL 220pF/50V or CHIP CERAMIC CAP. SL 220pF/50V	CHE1JJ8SL221 1270221
CONNECTORS		
CN501	CONNECTOR BASE 5P or CONNECTOR BASE 5P or CONNECTOR BASE 5P or	J3RTC05JG001 1780168 1730812
CN601	CONNECTOR BASE 2P or CONNECTOR BASE 2P or CONNECTOR BASE 2P or	J3RTC05MY002 J3RTC02JG001 1780165
CN602	CONNECTOR BASE 2P or CONNECTOR BASE 2P or	1780276 J3RTC02MY002
CN801	CONNECTOR BASE 2P or CONNECTOR BASE 2P or	1740799 J383C02UG002
CN802	CONNECTOR BASE 2P or CONNECTOR BASE 2P or	1770258 J383C02UG002
DIODES		
D 1	ZENER DIODE L5631	L5631
D 2	DIODE 1N4148M or DIODE 1SS176 or DIODE 1SS133	QDSZ01N4148M 1SS176S 1SS133S

Ref. No.	Description	Part No.
D 3	DIODE 1N4148M or DIODE 1SS176 or DIODE 1SS133	QDSZ01N4148M 1SS176S 1SS133S
D 4	ZENER DIODE UZ-7.5BS (B) or ZENER DIODE MTZJ7.5 (B)	QDSB0UZ7R5BS QDSB0MTZJ7R5
D 5	ZENER DIODE UZ-7.5BS (B) or ZENER DIODE MTZJ7.5 (B)	QDSB0UZ7R5BS QDSB0MTZJ7R5
D 101	ZENER DIODE UZ-5.6BS (B) or ZENER DIODE MTZJ5.6 (B)	QDSB0UZ5R6BS QDSB0MTZJ5R6
D 102	ZENER DIODE UZ-4.3BS (B) or ZENER DIODE MTZJ4.3 (B)	QDSB0UZ4R3BS QDSB0MTZJ4R3
D 111	LED GL5ED5	QPQZ00GL5ED5
D 171	DIODE 1N4148M or DIODE 1SS176 or DIODE 1SS133	QDSZ01N4148M 1SS176S 1SS133S
D 173	DIODE 1N4148M or DIODE 1SS176 or DIODE 1SS133	QDSZ01N4148M 1SS176S 1SS133S
D 174	DIODE 1N4148M or DIODE 1SS176 or DIODE 1SS133	QDSZ01N4148M 1SS176S 1SS133S
D 190	DIODE 1N4148M or DIODE 1SS176 or DIODE 1SS133	QDSZ01N4148M 1SS176S 1SS133S
D 191	DIODE 1N4148M or DIODE 1SS176 or DIODE 1SS133	QDSZ01N4148M 1SS176S 1SS133S
D 201	ZENER DIODE UZ-5.1BS (B) or ZENER DIODE MTZJ5.1 (B)	QDSB0UZ5R1BS QDSB0MTZJ5R1
D 251	DIODE 1N4148M or DIODE 1SS176 or DIODE 1SS133	QDSZ01N4148M 1SS176S 1SS133S
D 252	ZENER DIODE UZ-11BS (B) or ZENER DIODE MTZJ11 (B)	QDSB00UZ11BS QDSB00MTZJ11
D 253	DIODE 1N4148M or DIODE 1SS176 or DIODE 1SS133	QDSZ01N4148M 1SS176S 1SS133S
D 254	DIODE 1N4148M or DIODE 1SS176 or DIODE 1SS133	QDSZ01N4148M 1SS176S 1SS133S
D 255	ZENER DIODE UZ-6.8BS (B) or ZENER DIODE MTZJ6.8 (B)	QDSB0UZ6R2BS QDSB0MTZJ6R2
D 256	DIODE 1N4148M or DIODE 1SS176 or DIODE 1SS133	QDSZ01N4148M 1SS176S 1SS133S
D 257	ZENER DIODE UZ-24BS (B) or ZENER DIODE MTZJ24 (B)	QDSB00UZ24BS QDSB00MTZJ24
D 301	DIODE 1N4148M or DIODE 1SS176 or DIODE 1SS133	QDSZ01N4148M 1SS176S 1SS133S
D 331	ZENER DIODE UZ-9.1BS (C) or ZENER DIODE MTZJ9.1 (C)	QDSC0UZ9R1BS QDSC0MTZJ9R1
D 351	DIODE 1N4148M or DIODE 1SS176 or DIODE 1SS133	QDSZ01N4148M 1SS176S 1SS133S
D 501	ZENER DIODE UZ-7.5BS (B) or ZENER DIODE MTZJ7.5 (B)	QDSB0UZ7R5BS QDSB0MTZJ7R5
D 502	DIODE ERA15-02KFRB	QDNZ0ERA1502
D 551	DIODE ERD07-15L	QD4ZERD0715L
D 552	DIODE ERD28-04L	QCPZERD2804L
D 571	DIODE 1N4148M or DIODE 1SS176 or DIODE 1SS133	QDSZ01N4148M 1SS176S 1SS133S
D 572	ZENER DIODE UZ-15BS (B) or ZENER DIODE MTZJ15	QDSB00UZ15BS QDSB00MTZJ15
D 573	ZENER DIODE UZ-6.8BS (B) or	QDSB0UZ6R2BS

Ref. No.	Description	Part No.
D 574	ZENER DIODE MTZJ6.8 (B) DIODE 1N4148M or DIODE 1SS176 or DIODE 1SS133	QDSB0MTZJ6R2 QDSZ01N4148M 1SS176S 1SS133S
D 575	DIODE 1N4148M or DIODE 1SS176 or DIODE 1SS133	QDSZ01N4148M 1SS176S 1SS133S
D 601	ZENER DIODE UZ-15BS (B) or ZENER DIODE MTZJ15	QDSB00UZ15BS QDSB00MTZJ15
D 602	DIODE 1N4148M or DIODE 1SS176 or DIODE 1SS133	QDSZ01N4148M 1SS176S 1SS133S
D 605	ZENER DIODE UZ-7.5BS (B) or ZENER DIODE MTZJ7.5 (B)	QDSB0UZ7R5BS QDSB0MTZJ7R5
D 606	DIODE 1N4148M or DIODE 1SS176 or DIODE 1SS133	QDSZ01N4148M 1SS176S 1SS133S
D 607	DIODE 1N4148M or DIODE 1SS176 or DIODE 1SS133	QDSZ01N4148M 1SS176S 1SS133S
D 611	DIODE ERC01-10L22	AERC0110L220
D 612	DIODE ERC01-10L22	AERC0110L220
D 613	DIODE ERC01-10L22	AERC0110L220
D 614	DIODE ERC01-10L22	AERC0110L220
D 615	DIODE ESAC39M-06C	QD4ZAC39M06C
D 616	DIODE 1Z150 (LC6)	QD4Z0001Z150
D 619	DIOE ERC30-02L38	AERC3002L300
D 620	DIODE 1N4148M or DIODE 1SS176 or DIODE 1SS133	QDSZ01N4148M 1SS176S 1SS133S
D 622	DIODE ERB44-04L3	QDQZ0ERB4404
D 623	DIODE 1N4148M or DIODE 1SS176 or DIODE 1SS133	QDSZ01N4148M 1SS176S 1SS133S
D 624	ZENER DIODE UZ-4.3BS (B) or ZENER DIODE MTZJ4.3 (B)	QDSB0UZ4R3BS QDSB0MTZJ4R3
D 625	DIODE GMB01U	GMB01U
D 626	DIODE GMB01U	GMB01U
D 627	ZENER DIODE UZ-6.8BS (B) or ZENER DIODE MTZJ6.8 (B)	QDSB0UZ6R2BS QDSB0MTZJ6R2
D 628	DIODE ERB44-04L3	QDQZ0ERB4404
D 629	ZENER DIODE UZ-12BS (B) or ZENER DIODE MTZJ12 (B)	QDSB00UZ12BS QDSB00MTZJ12
D 630	DIODE 1N4148M or DIODE 1SS176 or DIODE 1SS133	QDSZ01N4148M 1SS176S 1SS133S
D 631	DIODE 1N4148M or DIODE 1SS176 or DIODE 1SS133	QDSZ01N4148M 1SS176S 1SS133S
D 671	DIODE ERB44-04L3	QDQZ0ERB4404
D 672	ZENER DIODE UZ-20BS (B) or ZENER DIODE MTZJ20 (B)	QDSB00UZ20BS QDSB00MTZJ20
D 673	ZENER DIODE UZ-20BS (C) or ZENER DIODE MTZJ20 (C)	QDSC00UZ20BS QDSC00MTZJ20
D 674	DIODE ERB44-04L3	QDQZ0ERB4404
D 680	DIODE 1N4148M or DIODE 1SS176 or DIODE 1SS133	QDSZ01N4148M 1SS176S 1SS133S
D 682	ZENER DIODE UZ-15BS (B) or ZENER DIODE MTZJ15	QDSB00UZ15BS QDSB00MTZJ15
D 684	DIODE 1N4148M or DIODE 1SS176 or DIODE 1SS133	QDSZ01N4148M 1SS176S 1SS133S
D 701	DIODE 1N4148M or DIODE 1SS176 or DIODE 1SS133	QDSZ01N4148M 1SS176S 1SS133S

Ref. No.	Description	Part No.
D 702	DIODE 1N4148M or DIODE 1SS176 or DIODE 1SS133	QDSZ01N4148M 1SS176S 1SS133S
D 703	DIODE 1N4148M or DIODE 1SS176 or DIODE 1SS133	QDSZ01N4148M 1SS176S 1SS133S
D 704	DIODE 1N4148M or DIODE 1SS176 or DIODE 1SS133	QDSZ01N4148M 1SS176S 1SS133S
D 705	ZENER DIODE UZ-12BS (B) or ZENER DIODE MTZJ12 (B)	QDSB00UZ12BS QDSB00MTZJ12
D 706	ZENER DIODE UZ-12BS (B) or ZENER DIODE MTZJ12 (B)	QDSB00UZ12BS QDSB00MTZJ12
D 731	ZENER DIODE UZ-12BS (B) or ZENER DIODE MTZJ12 (B)	QDSB00UZ12BS QDSB00MTZJ12
D 801	DIODE 1N4148M or DIODE 1SS176 or DIODE 1SS133	QDSZ01N4148M 1SS176S 1SS133S
ICS		
IC101	IC TMP47C634AN-R584	QSMQA0ZTS045
IC102	IC AT24C01A-10PC or IC 24LC01B/P or IC X24C01AP or IC ST24C01B1	NSMMA0ZAZ003 NSMMA0SMH002 NSMMA0SXC002 NSMMA0ZSS002
IC201	IC M52313SP	QSBLa0SMB011
IC301	IC TA8759BN	QSBLa0ZTS042
IC501	IC AN5521	14LN468
IC601	PHOTO COUPLER PC120	QPEZ00PC120F
IC701	IC TC4053BP or IC MC14053BCP or IC NJU4053BD	14DW168 14D0168 14D0436
IC801	IC uPC1406HA	14LV233
IC802	IC LA4261	14L0046
COILS		
L 171	MICRO INDUCTOR 39μH J or MICRO INDUCTOR 39μH J	LLAXJDSKA390 2164390S
L 201	MICRO INDUCTOR 1.0μH K or MICRO INDUCTOR 1.0μH K	LLAXKDSKA1R0 2165109S
L 202	MICRO INDUCTOR 2.2μH K or MICRO INDUCTOR 2.2μH K	LLAXKDSKA2R2 2165229S
L 212	MICRO INDUCTOR 10μH K or MICRO INDUCTOR 10μH K	LLAXKDSKA100 2165100S
L 213	MICRO INDUCTOR 8.2μH K or MICRO INDUCTOR 8.2μH K	LLAXKDSKA8R2 2165829S
L 301	MICRO INDUCTOR 8.2μH K or MICRO INDUCTOR 8.2μH K	LLAXKDSKA8R2 2165829S
L 351	MICRO INDUCTOR 68μH K or MICRO INDUCTOR 68μH K	LLAXKDSKA680 2165680S
L 352	MICRO INDUCTOR 33μH K or MICRO INDUCTOR 33μH K	LLAXKDSKA330 2165330S
L 353	MICRO INDUCTOR 68μH K or MICRO INDUCTOR 68μH K	LLAXKDSKA680 2165680S
L 381	MICRO INDUCTOR 15μH K or MICRO INDUCTOR 15μH K	LLAXKDSKA150 2165150S
L 382	MICRO INDUCTOR 22μH K or MICRO INDUCTOR 22μH K	LLAXKDSKA220 2165220S
L 501	CHOKE COIL	117N696
L 552	LINEARITY COIL	LLBD00ZMS002
L 601	LINE FILTER	LLBG00ZMS012
L 602	POT TYPE COIL 47μH or POT TYPE COIL 47μH	LLARZGZSF470 LLBD**DMM001
T 211	CASING COIL	LFA07V0MM041
T 212	CASING COIL or CASING COIL	LFA07V0MM044 LFA07V0SF099
T 213	CASING COIL or CASING COIL	LFA07V0MM043 LFA07V0SF098

Ref. No.	Description	Part No.
T 214	CASING COIL or CASING COIL	LFA07V0MM042 LFA07V0SF096
T 301	CASING COIL or CASING COIL	LFA07V0MM029 LFA07V0SF100
T 401	CASING COIL or CASING COIL or CASING COIL	LFA07V0MM031 LFA07V0SF103 LFA07V0SF108
T 402	CASING COIL or CASING COIL or CASING COIL	LFA07V0MM031 LFA07V0SF103 LFA07V0SF108
T 403	CASING COIL or CASING COIL or CASING COIL	LFA07V0MM030 LFA07V0SF102 LFA07V0SF107
T 404	CASING COIL or CASING COIL or CASING COIL	LFA07V0MM032 LFA07V0SF101 LFA07V0SF106
TRANSISTORS		
Q 1	TRANSISTOR KTC3198 (GR) or TRANSISTOR KTC3199 (GR) or TRANSISTOR 2SC3331 (T) or TRANSISTOR 2SC3331 (U) or TRANSISTOR 2SC1815 (GR)	NQS10KTC3198 NQS10KTC3199 QSC3331TNPAA QSC3331UNPAA QQS102SC1815
Q 2	TRANSISTOR KTA1266 (GR) or TRANSISTOR KTA1267 (GR) or TRANSISTOR 2SA1318 (T) or TRANSISTOR 2SA1318 (U) or TRANSISTOR 2SA1015 (GR)	NQS40KTA1266 NQS10KTA1267 2SA1318TZ 2SA1318UZ QQS102SA1015
Q 3	TRANSISTOR 2SA1318 (T) or TRANSISTOR 2SA1318 (U) or TRANSISTOR 2SA1015 (GR)	2SA1318TZ 2SA1318UZ QQS102SA1015
Q 4	TRANSISTOR 2SA1318 (T) or TRANSISTOR 2SA1318 (U) or TRANSISTOR 2SA1015 (GR)	2SA1318TZ 2SA1318UZ QQS102SA1015
Q 101	TRANSISTOR KTC3198 (GR) or TRANSISTOR KTC3199 (GR) or TRANSISTOR 2SC3331 (T) or TRANSISTOR 2SC3331 (U) or TRANSISTOR 2SC1815 (GR)	NQS10KTC3198 NQS10KTC3199 QSC3331TNPAA QSC3331UNPAA QQS102SC1815
Q 102	TRANSISTOR KTA1266 (GR) or TRANSISTOR KTA1267 (GR) or TRANSISTOR 2SA1318 (T) or TRANSISTOR 2SA1318 (U) or TRANSISTOR 2SA1015 (GR)	NQS40KTA1266 NQS10KTA1267 2SA1318TZ 2SA1318UZ QQS102SA1015
Q 103	TRANSISTOR KTC3198 (GR) or TRANSISTOR KTC3199 (GR) or TRANSISTOR 2SC3331 (T) or TRANSISTOR 2SC3331 (U) or TRANSISTOR 2SC1815 (GR)	NQS10KTC3198 NQS10KTC3199 QSC3331TNPAA QSC3331UNPAA QQS102SC1815
Q 104	TRANSISTOR KTA1266 (GR) or TRANSISTOR KTA1267 (GR) or TRANSISTOR 2SA1318 (T) or TRANSISTOR 2SA1318 (U) or TRANSISTOR 2SA1015 (GR)	NQS40KTA1266 NQS10KTA1267 2SA1318TZ 2SA1318UZ QQS102SA1015
Q 105	TRANSISTOR KTC3198 (GR) or TRANSISTOR KTC3199 (GR) or TRANSISTOR 2SC3331 (T) or TRANSISTOR 2SC3331 (U) or TRANSISTOR 2SC1815 (GR)	NQS10KTC3198 NQS10KTC3199 QSC3331TNPAA QSC3331UNPAA QQS102SC1815
Q 106	TRANSISTOR KTA1266 (GR) or TRANSISTOR KTA1267 (GR) or TRANSISTOR 2SA1318 (T) or TRANSISTOR 2SA1318 (U) or TRANSISTOR 2SA1015 (GR)	NQS40KTA1266 NQS10KTA1267 2SA1318TZ 2SA1318UZ QQS102SA1015
Q 121	TRANSISTOR KTC3198 (GR) or TRANSISTOR KTC3199 (GR) or TRANSISTOR 2SC3331 (T) or	NQS10KTC3198 NQS10KTC3199 QSC3331TNPAA

Ref. No.	Description	Part No.
Q 122	TRANSISTOR 2SC3331 (U) or	QSC3331UNPAA
	TRANSISTOR 2SC1815 (GR)	QQS102SC1815
	TRANSISTOR KTC3198 (GR) or	NQS10KTC3198
	TRANSISTOR KTC3199 (GR) or	NQS10KTC3199
Q 123	TRANSISTOR 2SC3331 (T) or	QSC3331TNPAA
	TRANSISTOR 2SC3331 (U) or	QSC3331UNPAA
	TRANSISTOR 2SC1815 (GR)	QQS102SC1815
	TRANSISTOR KTC3198 (GR) or	NQS10KTC3198
Q 125	TRANSISTOR KTC3199 (GR) or	NQS10KTC3199
	TRANSISTOR 2SC3331 (T) or	QSC3331TNPAA
	TRANSISTOR 2SC3331 (U) or	QSC3331UNPAA
	TRANSISTOR 2SC1815 (GR)	QQS102SC1815
Q 201	TRANSISTOR 2SC3000 (D) or	2SC3000DZ
	TRANSISTOR 2SC3000 (E)	2SC3000EZ
Q 223	TRANSISTOR KTA1266 (GR) or	NQS40KTA1266
	TRANSISTOR KTA1267 (GR) or	NQS10KTA1267
	TRANSISTOR 2SA1318 (T) or	2SA1318TZ
	TRANSISTOR 2SA1318 (U) or	2SA1318UZ
Q 224	TRANSISTOR 2SA1015 (GR)	QQS102SA1015
	TRANSISTOR KTC3198 (GR) or	NQS10KTC3198
	TRANSISTOR KTC3199 (GR) or	NQS10KTC3199
	TRANSISTOR 2SC3331 (T) or	QSC3331TNPAA
Q 251	TRANSISTOR 2SC3331 (U) or	QSC3331UNPAA
	TRANSISTOR 2SC1815 (GR)	QQS102SC1815
	TRANSISTOR KTC3198 (GR) or	NQS10KTC3198
	TRANSISTOR KTC3199 (GR) or	NQS10KTC3199
Q 301	TRANSISTOR 2SC3331 (T) or	QSC3331TNPAA
	TRANSISTOR 2SC3331 (U) or	QSC3331UNPAA
	TRANSISTOR 2SC1815 (GR)	QQS102SC1815
	TRANSISTOR KTC3198 (GR) or	NQS10KTC3198
Q 391	TRANSISTOR KTC3199 (GR) or	NQS10KTC3199
	TRANSISTOR 2SC3331 (T) or	QSC3331TNPAA
	TRANSISTOR 2SC3331 (U) or	QSC3331UNPAA
	TRANSISTOR 2SC1815 (GR)	QQS102SC1815
Q 392	TRANSISTOR KTC3198 (GR) or	NQS10KTC3198
	TRANSISTOR KTC3199 (GR) or	NQS10KTC3199
	TRANSISTOR 2SC3331 (T) or	QSC3331TNPAA
	TRANSISTOR 2SC3331 (U) or	QSC3331UNPAA
Q 393	TRANSISTOR 2SC1815 (GR)	QQS102SC1815
	TRANSISTOR KTA1266 (GR) or	NQS40KTA1266
	TRANSISTOR KTA1267 (GR) or	NQS10KTA1267
	TRANSISTOR 2SA1318 (T) or	2SA1318TZ
Q 394	TRANSISTOR 2SA1318 (U) or	2SA1318UZ
	TRANSISTOR 2SA1015 (GR)	QQS102SA1015
	TRANSISTOR KTA1266 (GR) or	NQS40KTA1266
	TRANSISTOR KTA1267 (GR) or	NQS10KTA1267
Q 395	TRANSISTOR 2SA1318 (T) or	2SA1318TZ
	TRANSISTOR 2SA1318 (U) or	2SA1318UZ
	TRANSISTOR 2SA1015 (GR)	QQS102SA1015
	TRANSISTOR KTC3198 (GR) or	NQS10KTC3198
Q 396	TRANSISTOR KTC3199 (GR) or	NQS10KTC3199
	TRANSISTOR 2SC3331 (T) or	QSC3331TNPAA
	TRANSISTOR 2SC3331 (U) or	QSC3331UNPAA
	TRANSISTOR 2SC1815 (GR)	QQS102SC1815

Ref. No.	Description	Part No.
Q 397	TRANSISTOR 2SC3331 (T) or	QSC3331TNPAA
	TRANSISTOR 2SC3331 (U) or	QSC3331UNPAA
	TRANSISTOR 2SC1815 (GR)	QQS102SC1815
	TRANSISTOR KTC3198 (GR) or	NQS10KTC3198
Q 551	TRANSISTOR KTC3199 (GR) or	NQS10KTC3199
	TRANSISTOR 2SC3331 (T) or	QSC3331TNPAA
	TRANSISTOR 2SC3331 (U) or	QSC3331UNPAA
	TRANSISTOR 2SC1815 (GR)	QQS102SC1815
Q 552	TRANSISTOR 2SC2271 (D) or	2SC2271DZ
	TRANSISTOR 2SC2271 (E) or	2SC2271EZ
Q 571	TRANSISTOR 2SD2482	QQSZ02SC2482
	TRANSISTOR 2SD1886CA	Q2SD1886CA**
Q 572	TRANSISTOR KTC3198 (GR) or	NQS10KTC3198
	TRANSISTOR KTC3199 (GR) or	NQS10KTC3199
	TRANSISTOR 2SC3331 (T) or	QSC3331TNPAA
	TRANSISTOR 2SC3331 (U) or	QSC3331UNPAA
Q 573	TRANSISTOR 2SC1815 (GR)	QQS102SC1815
	TRANSISTOR KTA1266 (GR) or	NQS40KTA1266
	TRANSISTOR KTA1267 (GR) or	NQS10KTA1267
	TRANSISTOR 2SA1318 (T) or	2SA1318TZ
Q 601	TRANSISTOR 2SA1318 (U) or	2SA1318UZ
	TRANSISTOR 2SA1015 (GR)	QQS102SA1015
	TRANSISTOR 2SD1407 (O) or	QQQ002SD1407
	TRANSISTOR 2SD1407 (Y)	QQQ002SD1407
Q 602	FET 2SK1464	QF4Z02SK1464
	TRANSISTOR KTC3198 (GR) or	NQS10KTC3198
	TRANSISTOR KTC3199 (GR) or	NQS10KTC3199
	TRANSISTOR 2SC3331 (T) or	QSC3331TNPAA
Q 603	TRANSISTOR 2SC3331 (U) or	QSC3331UNPAA
	TRANSISTOR 2SC1815 (GR)	QQS102SC1815
	TRANSISTOR KTC3198 (GR) or	NQS10KTC3198
	TRANSISTOR KTC3199 (GR) or	NQS10KTC3199
Q 604	TRANSISTOR 2SC3331 (T) or	QSC3331TNPAA
	TRANSISTOR 2SC3331 (U) or	QSC3331UNPAA
	TRANSISTOR 2SC1815 (GR)	QQS102SC1815
	TRANSISTOR KTC3198 (GR) or	NQS10KTC3198
Q 607	TRANSISTOR KTC3199 (GR) or	NQS10KTC3199
	TRANSISTOR 2SC3331 (T) or	QSC3331TNPAA
	TRANSISTOR 2SC3331 (U) or	QSC3331UNPAA
	TRANSISTOR 2SC1815 (GR)	QQS102SC1815
Q 608	TRANSISTOR 2SC2271 (D) or	2SC2271DZ
	TRANSISTOR 2SC2271 (E) or	2SC2271EZ
	TRANSISTOR 2SC2482	QQSZ02SC2482
	TRANSISTOR 2SC2271 (D) or	2SC2271DZ
Q 609	TRANSISTOR 2SC2271 (E) or	2SC2271EZ
	TRANSISTOR 2SC2482	QQSZ02SC2482
	TRANSISTOR 2SB1274 (R) or	Q2SB1274R000
	TRANSISTOR 2SB1274 (S)	Q2SB1274S000
Q 610	TRANSISTOR KTC3198 (GR) or	NQS10KTC3198
	TRANSISTOR KTC3199 (GR) or	NQS10KTC3199
	TRANSISTOR 2SC3331 (T) or	QSC3331TNPAA
	TRANSISTOR 2SC3331 (U) or	QSC3331UNPAA
Q 611	TRANSISTOR 2SC1815 (GR)	QQS102SC1815
	TRANSISTOR KTA1266 (GR) or	NQS40KTA1266
	TRANSISTOR KTA1267 (GR) or	NQS10KTA1267
	TRANSISTOR 2SA1318 (T) or	2SA1318TZ
Q 612	TRANSISTOR 2SA1318 (U) or	2SA1318UZ
	TRANSISTOR 2SA1015 (GR)	QQS102SA1015
	TRANSISTOR KTA1266 (GR) or	NQS40KTA1266
	TRANSISTOR KTA1267 (GR) or	NQS10KTA1267
Q 702	TRANSISTOR 2SA1318 (T) or	2SA1318TZ
	TRANSISTOR 2SA1318 (U) or	2SA1318UZ
	TRANSISTOR 2SA1015 (GR)	QQS102SA1015
	TRANSISTOR KTC3198 (GR) or	NQS10KTC3198
Q 703	TRANSISTOR KTC3199 (GR) or	NQS10KTC3199
	TRANSISTOR 2SC3331 (T) or	QSC3331TNPAA
	TRANSISTOR 2SC3331 (U) or	QSC3331UNPAA
	TRANSISTOR 2SC1815 (GR)	QQS102SC1815

Ref. No.	Description	Part No.
Q 705	TRANSISTOR KTC3198 (GR) or	NQS10KTC3198
	TRANSISTOR KTC3199 (GR) or	NQS10KTC3199
	TRANSISTOR 2SC3331 (T) or	QSC3331TNPAA
	TRANSISTOR 2SC3331 (U) or	QSC3331UNPAA
Q 721	TRANSISTOR 2SC1815 (GR)	QQS102SC1815
	TRANSISTOR KTA1266 (GR) or	NQS40KTA1266
	TRANSISTOR KTA1267 (GR) or	NQS10KTA1267
	TRANSISTOR 2SA1318 (T) or	2SA1318TZ
Q 802	TRANSISTOR 2SA1318 (U) or	2SA1318UZ
	TRANSISTOR 2SA1015 (GR)	QQS102SA1015
	TRANSISTOR KTC3198 (GR) or	NQS10KTC3198
	TRANSISTOR KTC3199 (GR) or	NQS10KTC3199
Q 804	TRANSISTOR 2SC3331 (T) or	QSC3331TNPAA
	TRANSISTOR 2SC3331 (U) or	QSC3331UNPAA
	TRANSISTOR 2SC1815 (GR)	QQS102SC1815
	TRANSISTOR KTC3198 (GR) or	NQS10KTC3198
RESISTORS		
R 1	CHIP RES. 1/10W 10K Ω or	RRXAJR8Z0103
R 2	CHIP RES. 1/10W 10K Ω	134F103C
	CHIP RES. 1/10W 22K Ω or	RRXAJR8Z0223
R 3	CHIP RES. 1/10W 22K Ω	134F223C
	CHIP RES. 1/10W 22K Ω or	RRXAJR8Z0223
R 4	CHIP RES. 1/10W 22K Ω	134F223C
	CHIP RES. 1/10W 15K Ω or	RRXAJR8Z0153
R 5	CHIP RES. 1/10W 15K Ω	134F153C
	CHIP RES. 1/10W 15K Ω or	RRXAJR8Z0153
R 6	CHIP RES. 1/10W 15K Ω	134F153C
	CHIP RES. 1/10W 22K Ω or	RRXAJR8Z0223
R 7	CHIP RES. 1/10W 22K Ω	134F223C
	CHIP RES. 1/10W 22K Ω or	RRXAJR8Z0223
R 8	CHIP RES. 1/10W 22K Ω	134F223C
	CHIP RES. 1/10W 22K Ω	134F223C
R 9	CHIP RES. 1/10W 22K Ω or	RRXAJR8Z0223
	CHIP RES. 1/10W 22K Ω	134F223C
R 10	CHIP RES. 1/10W 22K Ω or	RRXAJR8Z0223
	CHIP RES. 1/10W 22K Ω	134F223C
R 11	CHIP RES. 1/10W 3.3K Ω or	RRXAJR8Z0332
	CHIP RES. 1/10W 3.3K Ω	134F332C
R 12	CHIP RES. 1/10W 3.3K Ω or	RRXAJR8Z0332
	CHIP RES. 1/10W 3.3K Ω	134F332C
R 13	CHIP RES. 1/10W 5.6K Ω or	RRXAJR8Z0562
	CHIP RES. 1/10W 5.6K Ω	134F562C
R 14	CHIP RES. 1/10W 5.6K Ω or	RRXAJR8Z0562
	CHIP RES. 1/10W 5.6K Ω	134F562C
R 15	CHIP RES. 1/10W 22K Ω or	RRXAJR8Z0223
	CHIP RES. 1/10W 22K Ω	134F223C
R 16	CHIP RES. 1/10W 10K Ω or	RRXAJR8Z0103
	CHIP RES. 1/10W 10K Ω	134F103C
R 17	CHIP RES. 1/10W 4.7 Ω or	RRXAJR8Z04R7
	CHIP RES. 1/10W 4.7 Ω	134F479C
R 18	CHIP RES. 1/10W 0 Ω or	RRXAJR8Z0000
	CHIP RES. 1/10W 0 Ω	134F000C
R 101	CARBON RES. 1/4W 10 Ω	RCX4JASZ0100
R 102	CARBON RES. 1/4W 330 Ω	RCX4JASZ0331
R 103	CHIP RES. 1/10W 1K Ω or	RRXAJR8Z0102
	CHIP RES. 1/10W 1K Ω	134F102C
R 104	CHIP RES. 1/10W 1K Ω or	RRXAJR8Z0102
	CHIP RES. 1/10W 1K Ω	134F102C
R 105	CHIP RES. 1/10W 1K Ω or	RRXAJR8Z0102
	CHIP RES. 1/10W 1K Ω	134F102C
R 106	CHIP RES. 1/10W 8.2K Ω or	RRXAJR8Z0822

Ref. No.	Description	Part No.
R 107	CHIP RES. 1/10W 8.2K Ω	134F822C
	CHIP RES. 1/10W 10K Ω or	RRXAJR8Z0103
R 108	CHIP RES. 1/10W 10K Ω	134F103C
	CHIP RES. 1/10W 10K Ω or	RRXAJR8Z0103
R 109	CHIP RES. 1/10W 10K Ω	134F103C
	CHIP RES. 1/10W 4.7K Ω or	RRXAJR8Z0472
R 110	CHIP RES. 1/10W 4.7K Ω	134F472C
	CARBON RES. 1/4W 1K Ω	RCX4JASZ0102
R 111	CHIP RES. 1/10W 22K Ω or	RRXAJR8Z0223
	CHIP RES. 1/10W 22K Ω	134F223C
R 112	CHIP RES. 1/10W 22K Ω or	RRXAJR8Z0223
	CHIP RES. 1/10W 22K Ω	134F223C
R 113	CHIP RES. 1/10W 220 Ω or	RRXAJR8Z0221
	CHIP RES. 1/10W 220 Ω	134F221C
R 114	CHIP RES. 1/10W 220 Ω or	RRXAJR8Z0221
	CHIP RES. 1/10W 220 Ω	134F221C
R 115	CHIP RES. 1/10W 100K Ω or	RRXAJR8Z0104
	CHIP RES. 1/10W 100K Ω	134F104C
R 116	CHIP RES. 1/10W 10K Ω or	RRXAJR8Z0103
	CHIP RES. 1/10W 10K Ω	134F103C
R 117	CHIP RES. 1/10W 22K Ω or	RRXAJR8Z0223
	CHIP RES. 1/10W 22K Ω	134F223C
R 118	CHIP RES. 1/10W 4.7K Ω or	RRXAJR8Z0472
	CHIP RES. 1/10W 4.7K Ω	134F472C
R 119	CARBON RES. 1/4W 10K Ω	RCX4JASZ0103
R 121	CHIP RES. 1/10W 22K Ω or	RRXAJR8Z0223
	CHIP RES. 1/10W 22K Ω	134F223C
R 122	CHIP RES. 1/10W 10K Ω or	RRXAJR8Z0103
	CHIP RES. 1/10W 10K Ω	134F103C
R 123	CHIP RES. 1/10W 1K Ω or	RRXAJR8Z0102
	CHIP RES. 1/10W 1K Ω	134F102C
R 124	CHIP RES. 1/10W 47K Ω or	RRXAJR8Z0473
	CHIP RES. 1/10W 47K Ω	134F473C
R 125	CHIP RES. 1/10W 47K Ω or	RRXAJR8Z0473
	CHIP RES. 1/10W 47K Ω	134F473C
R 127	CHIP RES. 1/10W 10K Ω or	RRXAJR8Z0103
	CHIP RES. 1/10W 10K Ω	134F103C
R 128	CHIP RES. 1/10W 100 Ω or	RRXAJR8Z0101
	CHIP RES. 1/10W 100 Ω	134F101C
R 130	CHIP RES. 1/10W 82K Ω or	RRXAJR8Z0823
	CHIP RES. 1/10W 82K Ω	134F823C
R 133	CHIP RES. 1/10W 22K Ω or	RRXAJR8Z0223
	CHIP RES. 1/10W 22K Ω	134F223C
R 135	CHIP RES. 1/10W 2.2K Ω or	RRXAJR8Z0222
	CHIP RES. 1/10W 2.2K Ω	134F222C
R 136	CHIP RES. 1/10W 10K Ω or	RRXAJR8Z0103
	CHIP RES. 1/10W 10K Ω	134F103C
R 138	CHIP RES. 1/10W 220 Ω or	RRXAJR8Z0221
	CHIP RES. 1/10W 220 Ω	134F221C
R 139	CHIP RES. 1/10W 22K Ω or	RRXAJR8Z0223
	CHIP RES. 1/10W 22K Ω	134F223C
R 140	CHIP RES. 1/10W 1K Ω or	RRXAJR8Z0102
	CHIP RES. 1/10W 1K Ω	134F102C
R 145	CHIP RES. 1/10W 22K Ω or	RRXAJR8Z0223
	CHIP RES. 1/10W 22K Ω	134F223C
R 146	CHIP RES. 1/10W 22K Ω or	RRXAJR8Z0223
R 147	CHIP RES. 1/10W 22K Ω	134F223C
	CARBON RES. 1/4W 220 Ω	RCX4JASZ0221
R 148	CARBON RES. 1/4W 680 Ω	RCX4JASZ0681
R 149	CHIP RES. 1/10W 22K Ω or	RRXAJR8Z0223
	CHIP RES. 1/10W 22K Ω	134F223C
R 150	CHIP RES. 1/10W 18K Ω or	RRXAJR8Z0183
	CHIP RES. 1/10W 18K Ω	134F183C
R 152	CHIP RES. 1/10W 3.9K Ω or	RRXAJR8Z0392
	CHIP RES. 1/10W 3.9K Ω	134F392C
R 153	CHIP RES. 1/10W 4.7K Ω or	RRXAJR8Z0472

Ref. No.	Description	Part No.
R 523	CARBON RES. 1/2W 560 Ω	RCX2561KA004
R 524	CARBON RES. 1/4W 1.5K Ω	RCX4JASZ0152
R 544	CARBON RES. 1/4W 1.5K Ω	RCX4JASZ0152
	METAL RES. 1W 15K Ω or	RN01JZDZ0153
	METAL RES. 1W 15K Ω or	RN01153KE004
	METAL RES. 1W 15K Ω	RN01153PY001
R 552	CARBON RES. 1/4W 5.6K Ω	RCX4JASZ0562
R 553	CEMENT RES. 5W 1.5K Ω or	RW05152PG004
	CEMENT RES. 5W 1.5K Ω or	RW05152UB004
	CEMENT RES. 5W 1.5K Ω	RW05152KA004
R 554	METAL RES. 1W 1K Ω or	RN01JZDZ0102
	METAL RES. 1W 1K Ω or	RN01102KE004
	METAL RES. 1W 1K Ω	RN01102PY001
R 557	CHIP RES. 1/10W 330 Ω or	RRXAJR8Z0331
	CHIP RES. 1/10W 330 Ω	134F331C
R 571	CHIP RES. 1/10W 180K Ω or	RRXAJR8Z0184
	CHIP RES. 1/10W 180K Ω	134F184C
R 572	CHIP RES. 1/10W 10K Ω or	RRXAJR8Z0103
	CHIP RES. 1/10W 10K Ω	134F103C
R 573	CHIP RES. 1/10W 270K Ω or	RRXAJR8Z0274
	CHIP RES. 1/10W 270K Ω	134F274C
R 574	CHIP RES. 1/10W 1K Ω or	RRXAJR8Z0102
	CHIP RES. 1/10W 1K Ω	134F102C
R 575	CHIP RES. 1/10W 39K Ω or	RRXAJR8Z0393
	CHIP RES. 1/10W 39K Ω	134F393C
R 576	CHIP RES. 1/10W 18K Ω or	RRXAJR8Z0183
	CHIP RES. 1/10W 18K Ω	134F183C
R 577	CARBON RES. 1/4W 220 Ω	RCX4JASZ0221
R 578	CHIP RES. 1/10W 68K Ω or	RRXAJR8Z0683
	CHIP RES. 1/10W 68K Ω	134F683C
R 579	CHIP RES. 1/10W 1.5K Ω or	RRXAJR8Z0152
	CHIP RES. 1/10W 1.5K Ω	134F152C
R 580	CHIP RES. 1/10W 3.9K Ω or	RRXAJR8Z0392
	CHIP RES. 1/10W 3.9K Ω	134F392C
R 581	CHIP RES. 1/10W 4.7K Ω or	RRXAJR8Z0472
	CHIP RES. 1/10W 4.7K Ω	134F472C
R 582	CHIP RES. 1/10W 2.7K Ω or	RRXAJR8Z0272
	CHIP RES. 1/10W 2.7K Ω	134F272C
R 583	METAL RES. 2W 10 Ω or	RN02JZDZ0100
	METAL RES. 2W 10 Ω or	534B100
	METAL RES. 2W 10 Ω	RN02100PY001
R 584	CARBON RES. 1/4W 10K Ω	RCX4JASZ0103
R 585	CHIP RES. 1/10W 22K Ω or	RRXAJR8Z0223
	CHIP RES. 1/10W 22K Ω	134F223C
R 586	CARBON RES. 1/4W 2.2K Ω	RCX4JASZ0222
R 589	CHIP RES. 1/10W 220 Ω or	RRXAJR8Z0221
	CHIP RES. 1/10W 220 Ω	134F221C
R 603	CEMENT RES. 5W 82 Ω or	RW05820PG004
	CEMENT RES. 5W 82 Ω	RW05820UB004
R 606	CARBON RES. 1/4W 2.2M Ω	RCX4JZPZ0225
R 607	CHIP RES. 1/10W 220 Ω or	RRXAJR8Z0221
	CHIP RES. 1/10W 220 Ω	134F221C
R 608	CEMENT RES. 3W 0.22 Ω or	RW03R22PG007
	CEMENT RES. 3W 0.22 Ω	RW03R22UB001
R 609	CHIP RES. 1/10W 220 Ω or	RRXAJR8Z0221
	CHIP RES. 1/10W 220 Ω	134F221C
R 610	CARBON RES. 1/4W 1.2K Ω	RCX4JASZ0122
R 611	CHIP RES. 1/10W 100 Ω or	RRXAJR8Z0101
	CHIP RES. 1/10W 100 Ω	134F101C
R 612	CHIP RES. 1/10W 560 Ω or	RRXAJR8Z0561
	CHIP RES. 1/10W 560 Ω	134F561C
R 613	CARBON RES. 1/4W 270 Ω	RCX4JASZ0271
R 614	CHIP RES. 1/10W 1.5K Ω or	RRXAJR8Z0152
	CHIP RES. 1/10W 1.5K Ω	134F152C
R 615	CARBON RES. 1/4W 560K Ω	RCX4JASZ0564
R 616	CARBON RES. 1/4W 2.2M Ω	RCX4JZPZ0225

Ref. No.	Description	Part No.
R 617	CHIP RES. 1/10W 33K Ω or	RRXAJR8Z0333
	CHIP RES. 1/10W 33K Ω	134F333C
R 618	CHIP RES. 1/10W 220K Ω or	RRXAJR8Z0224
	CHIP RES. 1/10W 220K Ω	134F224C
R 619	CHIP RES. 1/10W 220K Ω or	RRXAJR8Z0224
	CHIP RES. 1/10W 220K Ω	134F224C
R 624	CEMENT RES. 5W 0.56 Ω or	RW05R56PG001
	CEMENT RES. 5W 0.56 Ω or	RW05R56UB001
	CEMENT RES. 5W 0.56 Ω	RW05R56KA006
R 626	CARBON RES. 1/4W 10M Ω	RCX4JZPZ0106
R 628	CARBON RES. 1/4W 2.7K Ω	RCX4JASZ0272
R 630	CARBON RES. 1/4W 1.2K Ω	RCX4JASZ0122
R 633	CARBON RES. 1/4W 6.8K Ω	RCX4JASZ0682
R 635	CARBON RES. 1/4W 22K Ω	RCX4JASZ0223
R 636	CARBON RES. 1/4W 15K Ω	RCX4JASZ0153
R 637	CARBON RES. 1/4W 6.8K Ω	RCX4JASZ0682
R 638	CARBON RES. 1/4W 12K Ω	RCX4JASZ0123
R 639	CARBON RES. 1/4W 15K Ω	RCX4JASZ0153
R 640	CARBON RES. 1/4W 33K Ω	RCX4JASZ0333
R 641	CARBON RES. 1/4W 33K Ω	RCX4JASZ0333
R 642	CARBON RES. 1/4W 120K Ω	RCX4JASZ0124
R 643	CHIP RES. 1/10W 47K Ω or	RRXAJR8Z0473
	CHIP RES. 1/10W 47K Ω	134F473C
R 644	CHIP RES. 1/10W 15K Ω or	RRXAJR8Z0153
	CHIP RES. 1/10W 15K Ω	134F153C
R 647	CHIP RES. 1/10W 10K Ω or	RRXAJR8Z0103
	CHIP RES. 1/10W 10K Ω	134F103C
R 648	CARBON RES. 1/2W 1K Ω or	RCX2JZSZ0102
	CARBON RES. 1/2W 1K Ω	RCX2102KA004
R 650	CHIP RES. 1/10W 18K Ω or	RRXAJR8Z0183
	CHIP RES. 1/10W 18K Ω	134F183C
R 652	METAL RES. 2W 3.3 Ω or	RN02JZDZ03R3
	METAL RES. 2W 3.3 Ω	RN023R3PY001
R 653	CARBON RES. 1/4W 100 Ω	RCX4JASZ0101
R 654	CARBON RES. 1/4W 560 Ω	RCX4JASZ0561
R 655	CHIP RES. 1/10W 0 Ω or	RRXAJR8Z0000
	CHIP RES. 1/10W 0 Ω	134F000C
R 656	CHIP RES. 1/10W 0 Ω or	RRXAJR8Z0000
	CHIP RES. 1/10W 0 Ω	134F000C
R 657	CARBON RES. 1/2W 1 Ω	RCX21R0KA004
R 672	FUSE RES. 1/4W 1.2 Ω or	RFX41R2QJ001
	FUSE RES. 1/4W 1.2 Ω	RFX41R2KA007
R 673	CARBON RES. 1/4W 4.7K Ω	RCX4JASZ0472
R 674	CARBON RES. 1/4W 220K Ω	RCX4JASZ0224
R 675	CARBON RES. 1/4W 22K Ω	RCX4JASZ0223
R 676	FUSE RES. 2W 1.8 Ω or	RF02189UB001
	FUSE RES. 2W 1.8 Ω	RF02189KA009
R 677	FUSE RES. 1W 4.7 Ω or	RF014R7QJ001
	FUSE RES. 1W 4.7 Ω	RF014R7KA008
R 678	CARBON RES. 1/2W 1.2 Ω	RCX21R2KA004
R 680	CARBON RES. 1/4W 1K Ω	RCX4JASZ0102
R 681	CARBON RES. 1/4W 150K Ω	RCX4JASZ0154
R 685	CHIP RES. 1/10W 820 Ω or	RRXAJR8Z0821
	CHIP RES. 1/10W 820 Ω	134F821C
R 686	CARBON RES. 1/4W 1.5K Ω	RCX4JASZ0152
R 701	CHIP RES. 1/10W 10K Ω or	RRXAJR8Z0103
	CHIP RES. 1/10W 10K Ω	134F103C
R 702	CHIP RES. 1/10W 10K Ω or	RRXAJR8Z0103
	CHIP RES. 1/10W 10K Ω	134F103C
R 703	CHIP RES. 1/10W 3.3K Ω or	RRXAJR8Z0332
	CHIP RES. 1/10W 3.3K Ω	134F332C
R 704	CHIP RES. 1/10W 2.2K Ω or	RRXAJR8Z0222
	CHIP RES. 1/10W 2.2K Ω	134F222C
R 705	CHIP RES. 1/10W 330 Ω or	RRXAJR8Z0331
	CHIP RES. 1/10W 330 Ω	134F331C
R 709	CHIP RES. 1/10W 2.7K Ω or	RRXAJR8Z0272

Ref. No.	Description	Part No.
	CHIP RES. 1/10W 2.7K Ω	134F272C
R 710	CHIP RES. 1/10W 27K Ω or	RRXAJR8Z0273
	CHIP RES. 1/10W 27K Ω	134F273C
R 711	CHIP RES. 1/10W 2.7K Ω or	RRXAJR8Z0272
	CHIP RES. 1/10W 2.7K Ω	134F272C
R 712	CHIP RES. 1/10W 27K Ω or	RRXAJR8Z0273
	CHIP RES. 1/10W 27K Ω	134F273C
R 713	CHIP RES. 1/10W 47K Ω or	RRXAJR8Z0473
	CHIP RES. 1/10W 47K Ω	134F473C
R 715	CHIP RES. 1/10W 22K Ω or	RRXAJR8Z0223
	CHIP RES. 1/10W 22K Ω	134F223C
R 716	CHIP RES. 1/10W 1.5K Ω or	RRXAJR8Z0152
	CHIP RES. 1/10W 1.5K Ω	134F152C
R 720	CHIP RES. 1/10W 3.3K Ω or	RRXAJR8Z0332
	CHIP RES. 1/10W 3.3K Ω	134F332C
R 721	CHIP RES. 1/10W 1K Ω or	RRXAJR8Z0102
	CHIP RES. 1/10W 1K Ω	134F102C
R 722	CHIP RES. 1/10W 68 Ω or	RRXAJR8Z0680
	CHIP RES. 1/10W 68 Ω	134F680C
R 723	CHIP RES. 1/10W 100K Ω or	RRXAJR8Z0104
	CHIP RES. 1/10W 100K Ω	134F104C
R 724	CHIP RES. 1/10W 100K Ω or	RRXAJR8Z0104
	CHIP RES. 1/10W 100K Ω	134F104C
R 725	CHIP RES. 1/10W 1.5K Ω or	RRXAJR8Z0152
	CHIP RES. 1/10W 1.5K Ω	134F152C
R 726	CHIP RES. 1/10W 150K Ω or	RRXAJR8Z0154
	CHIP RES. 1/10W 150K Ω	134F154C
R 727	CHIP RES. 1/10W 22K Ω or	RRXAJR8Z0223
	CHIP RES. 1/10W 22K Ω	134F223C
R 728	CHIP RES. 1/10W 1.5K Ω or	RRXAJR8Z0152
	CHIP RES. 1/10W 1.5K Ω	134F152C
R 729	CHIP RES. 1/10W 150K Ω or	RRXAJR8Z0154
	CHIP RES. 1/10W 150K Ω	134F154C
R 730	CHIP RES. 1/10W 22K Ω or	RRXAJR8Z0223
	CHIP RES. 1/10W 22K Ω	134F223C
R 731	CHIP RES. 1/10W 1K Ω or	RRXAJR8Z0102
	CHIP RES. 1/10W 1K Ω	134F102C
R 733	CHIP RES. 1/10W 15K Ω or	RRXAJR8Z0153
	CHIP RES. 1/10W 15K Ω	134F153C
R 734	CHIP RES. 1/10W 10K Ω or	RRXAJR8Z0103
	CHIP RES. 1/10W 10K Ω	134F103C
R 735	CHIP RES. 1/10W 1K Ω or	RRXAJR8Z0102
	CHIP RES. 1/10W 1K Ω	134F102C
R 801	CHIP RES. 1/10W 5.6K Ω or	RRXAJR8Z0562
	CHIP RES. 1/10W 5.6K Ω	134F562C
R 802	CHIP RES. 1/10W 10K Ω or	RRXAJR8Z0103
	CHIP RES. 1/10W 10K Ω	134F103C
R 803	CHIP RES. 1/10W 12K Ω or	RRXAJR8Z0123
	CHIP RES. 1/10W 12K Ω	134F123C
R 804	CARBON RES. 1/4W 47K Ω	RCX4JASZ0473
R 806	CHIP RES. 1/10W 10K Ω or	RRXAJR8Z0103
	CHIP RES. 1/10W 10K Ω	134F103C
R 807	CARBON RES. 1/4W 100 Ω	RCX4JASZ0101
R 808	CHIP RES. 1/10W 8.2K Ω or	RRXAJR8Z0822
	CHIP RES. 1/10W 8.2K Ω	134F822C
R 810	CHIP RES. 1/10W 1.5K Ω or	RRXAJR8Z0152
	CHIP RES. 1/10W 1.5K Ω	134F152C
R 811	CHIP RES. 1/10W 3.3K Ω or	RRXAJR8Z0332
	CHIP RES. 1/10W 3.3K Ω	134F332C
R 812	CHIP RES. 1/10W 3.3K Ω or	RRXAJR8Z0332
	CHIP RES. 1/10W 3.3K Ω	134F332C
R 813	CHIP RES. 1/10W 1.5K Ω or	RRXAJR8Z0152
	CHIP RES. 1/10W 1.5K Ω	134F152C
R 814	CARBON RES. 1/4W 180 Ω	RCX4JASZ0181
R 815	CARBON RES. 1/4W 22K Ω	RCX4JASZ0223
R 816	CARBON RES. 1/4W 22K Ω	RCX4JASZ0223

Ref. No.	Description	Part No.
R 818	CARBON RES. 1/4W 180 Ω	RCX4JASZ0181
R 819	CARBON RES. 1/4W 3.3 Ω	RCX4JASZ03R2
R 821	CARBON RES. 1/4W 3.3 Ω	RCX4JASZ03R2
R 824	CHIP RES. 1/10W 10K Ω or	RRXAJR8Z0103
	CHIP RES. 1/10W 10K Ω	134F103C
R 825	CHIP RES. 1/10W 10K Ω or	RRXAJR8Z0103
	CHIP RES. 1/10W 10K Ω	134F103C
R 826	CARBON RES. 1/4W 120 Ω	RCX4JASZ0121
R 827	METAL RES. 2W 2.7 Ω or	RN02JZDZ02R7
	METAL RES. 2W 2.7 Ω	RN022R7PY001
R 828	METAL RES. 1W 1.2 Ω or	RN01JZDZ01R2
	METAL RES. 1W 1.2 Ω	RN011R2PY001
R 954	CHIP RES. 1/10W 10K Ω or	RRXAJR8Z0103
	CHIP RES. 1/10W 10K Ω	134F103C
R 955	CHIP RES. 1/10W 0 Ω or	RRXAJR8Z0000
	CHIP RES. 1/10W 0 Ω	134F000C
JC 2	CHIP RES. 1/10W 0 Ω or	RRXAJR8Z0000
	CHIP RES. 1/10W 0 Ω	134F000C
JC 3	CHIP RES. 1/10W 0 Ω or	RRXAJR8Z0000
	CHIP RES. 1/10W 0 Ω	134F000C
JC 4	CHIP RES. 1/10W 0 Ω or	RRXAJR8Z0000
	CHIP RES. 1/10W 0 Ω	134F000C
JC 5	CHIP RES. 1/10W 0 Ω or	RRXAJR8Z0000
	CHIP RES. 1/10W 0 Ω	134F000C
JC 6	CHIP RES. 1/10W 0 Ω or	RRXAJR8Z0000
	CHIP RES. 1/10W 0 Ω	134F000C
JC 7	CHIP RES. 1/10W 0 Ω or	RRXAJR8Z0000
	CHIP RES. 1/10W 0 Ω	134F000C
JC 8	CHIP RES. 1/10W 0 Ω or	RRXAJR8Z0000
	CHIP RES. 1/10W 0 Ω	134F000C
JC 9	CHIP RES. 1/10W 0 Ω or	RRXAJR8Z0000
	CHIP RES. 1/10W 0 Ω	134F000C
JC 10	CHIP RES. 1/10W 0 Ω or	RRXAJR8Z0000
	CHIP RES. 1/10W 0 Ω	134F000C
JC 11	CHIP RES. 1/10W 0 Ω or	RRXAJR8Z0000
	CHIP RES. 1/10W 0 Ω	134F000C
JC 13	CHIP RES. 1/10W 0 Ω or	RRXAJR8Z0000
	CHIP RES. 1/10W 0 Ω	134F000C
JC 15	CHIP RES. 1/10W 0 Ω or	RRXAJR8Z0000
	CHIP RES. 1/10W 0 Ω	134F000C
JC 16	CHIP RES. 1/10W 0 Ω or	RRXAJR8Z0000
	CHIP RES. 1/10W 0 Ω	134F000C
JC 18	CHIP RES. 1/10W 0 Ω or	RRXAJR8Z0000
	CHIP RES. 1/10W 0 Ω	134F000C
JC 22	CHIP RES. 1/10W 0 Ω or	RRXAJR8Z0000
	CHIP RES. 1/10W 0 Ω	134F000C
JC 36	CHIP RES. 1/10W 0 Ω or	RRXAJR8Z0000
	CHIP RES. 1/10W 0 Ω	134F000C
JC 37	CHIP RES. 1/10W 0 Ω or	RRXAJR8Z0000
	CHIP RES. 1/10W 0 Ω	134F000C
SWITCHES		
SW102	TACT SWITCH (V-TYPE)	SST0101AL032
SW103	TACT SWITCH (V-TYPE)	SST0101AL032
SW104	TACT SWITCH (V-TYPE)	SST0101AL032
SW105	TACT SWITCH (V-TYPE)	SST0101AL032
SW107	TACT SWITCH	5622102
SW108	TACT SWITCH	5622102
SW109	TACT SWITCH	5622102
SW110	TACT SWITCH	5622102
SW601	MAIN SWITCH	SPP0AAZMS001
TRANSFORMERS		
T 551	H. DRIVE TRANS	115N841
T 601	POWER TRANS	LTT00EPMS017
VARIABLE RESISTORS		
VR211	SEMIFIXED RES. 10KB or SEMIFIXED RES. 10KB	138J781 638A103

Ref. No.	Description	Part No.
VR301	SEMIFIXED RES. 1KB or	138J777
	SEMIFIXED RES. 1KB	638A102
VR331	SEMIFIXED RES. 200B or	238J113
	SEMIFIXED RES. 200B	638A221
VR351	SEMIFIXED RES. 10KB or	138J781
	SEMIFIXED RES. 10KB	638A103
VR501	SEMIFIXED RES. 50KB or	138J784
	SEMIFIXED RES. 50KB	638A473
VR503	SEMIFIXED RES. 10KB or	138J781
	SEMIFIXED RES. 10KB	638A103
VR571	SEMIFIXED RES. 20KB or	138J782
	SEMIFIXED RES. 20KB	638A223
VR572	SEMIFIXED RES. 5KB or	138J780
	SEMIFIXED RES. 5KB	638A472
VR601	SEMIFIXED RES. 20KB or	138J782
	SEMIFIXED RES. 20KB	638A223
CRYSTAL OSCILLATORS		
X 101	CERAMIC RESONATOR 4.19MHz or	FY0415LMS002
	CERAMIC RESONATOR 4.19MHz or	1813682
	CERAMIC RESONATOR 4.19MHz	1812885
X 301	CRYSTAL OSCILLATOR 4.43MHz	1811387
X 302	CRYSTAL OSCILLATOR 3.58MHz	1811291
X 331	CERAMIC RESONATOR CSB503F30	1813527
MISCELLANEOUS		
B 6	LED HOLDER	0EM402341
B 7	SENSOR HOLDER	0EM402360
BC552	BEADS CORE	1190038
BC553	BEADS CORE	1190038
BC603	BEADS CORE	1190038
BC604	BEADS CORE	1190038
BC605	BEADS CORE	1190038
BC606	BEADS CORE	1190038
BC607	BEADS CORE	1190038
CF211	CERAMIC TRAP 5.5MHz+6.5MHz or	FBE655PMS002
	CERAMIC TRAP 5.5MHz+6.5MHz	FBE655PMR002
CF212	CERAMIC FILTER 5.5MHz or	1812018
	CERAMIC FILTER 5.5MHz	FBB555PMS001
CF213	CERAMIC FILTER 6.5MHz or	1813595
	CERAMIC FILTER 6.5MHz	FBB655PMS001
CL451A	CABLE HOLDER 5P or	XW01D05NF001
	CABLE HOLDER 5P	XW01B05NF001
CL452A	CABLE HOLDER 4P or	XW01D04NF001
	CABLE HOLDER 4P	XW01B04NF001
DL301	DELAY LINE	113N852
DL311	GLASS DELAY or	FD0445PXX001
	GLASS DELAY	1812056
HS 1	HEAT SINK PBC ASSEMBLY	0EM300845
HS 2	HEAT SINK PBD ASSEMBLY	0EM402679
HS 3	HEAT SINK PBE	0EM402593
HS 4	HEAT SINK PBI ASSEMBLY	0EM402680
HS 5	HEAT SINK PBM	0EM402812
JK701	RCA JACK (4 PIN) or	JXRL040JD012
	RCA JACK (4 PIN) or	JXRL040MY001
	RCA JACK (4 PIN)	JXRL040JC001
JK702	RCA JACK (1 PIN)	JYRL010JC002
JK731	21PIN JACK or	JXGL210XZ001
	21PIN JACK or	JSZZ000HD001
	21PIN JACK or	JXGL210NF001
	21PIN JACK or	1780187
	21PIN JACK	1780260
LD451	RIBBON WIRE 4P	WX1L8750-002
LD452	RIBBON WIRE 5P	WX1L8750-001
PS601	THERMISTER (POSISTER)	QNSZ66BL200D
RS101	REMOCON RECEIVING UNIT	USESJRSKK011
SF201	SAW FILTER	FBB386PKC001
T 671	F.B.T.	LTF00EPSM007

Ref. No.	Description	Part No.
TP 1	TEST PIN or	1700093
	TEST PIN or	XU0C000ER001
	TEST PIN	1740354
TP 2	TEST PIN or	1700093
	TEST PIN or	XU0C000ER001
	TEST PIN	1740354
TP 5	TEST PIN or	1700093
	TEST PIN or	XU0C000ER001
	TEST PIN	1740354
TP 6	TEST PIN or	1700093
	TEST PIN or	XU0C000ER001
	TEST PIN	1740354
TP 7	TEST PIN or	1700093
	TEST PIN or	XU0C000ER001
	TEST PIN	1740354
TP 8	TEST PIN or	1700093
	TEST PIN or	XU0C000ER001
	TEST PIN	1740354
TP 9	TEST PIN or	1700093
	TEST PIN or	XU0C000ER001
	TEST PIN	1740354
TU 1	TUNER TEKE4-134A	UTUNPSDAL009
A-A'	LEAD WIRE	WX3501A6FF23

CRT PCB

Ref. No.	Description	Part No.
	CRT PCB	
	Consists of the following:	
CAPACITORS		
C 451	CERAMIC CAP. B 390pF/50V	3B42391S
C 452	CERAMIC CAP. B 390pF/50V	3B42391S
C 453	CERAMIC CAP. B 470pF/50V	3B42471S
C 456	ELECTROLYTIC CAP. 100µF/16V	126C107S
C 458	CERAMIC CAP. 0.01µF 2KV or	CCD3DKP0E103
	CERAMIC CAP. 0.01µF 2KV	6220602
C 459	CERAMIC CAP. B 100pF/50V	3B42101S
CONNECTORS		
CN454	CONNECTOR PIN 1P or	1700576
	CONNECTOR PIN 1P or	1730688
	CONNECTOR PIN 1P	JTEA000LC001
DIODES		
D 451	DIODE 1N4148M or	QDSZ01N4148M
	DIODE 1SS176 or	1SS176S
	DIODE 1SS133	1SS133S
D 452	DIODE 1N4148M or	QDSZ01N4148M
	DIODE 1SS176 or	1SS176S
	DIODE 1SS133	1SS133S
D 453	DIODE 1N4148M or	QDSZ01N4148M
	DIODE 1SS176 or	1SS176S
	DIODE 1SS133	1SS133S
COILS		
L 451	MICRO INDUCTOR (RD) 100µH K or	LLARKCSTU101
	MICRO INDUCTOR (RD) 100µH K or	2162101S
	MICRO INDUCTOR (RD) 100µH K	LLARKDSKA101
L 452	MICRO INDUCTOR (RD) 100µH K or	LLARKCSTU101
	MICRO INDUCTOR (RD) 100µH K or	2162101S
	MICRO INDUCTOR (RD) 100µH K	LLARKDSKA101
L 453	MICRO INDUCTOR (RD) 100µH K or	LLARKCSTU101
	MICRO INDUCTOR (RD) 100µH K or	2162101S
	MICRO INDUCTOR (RD) 100µH K	LLARKDSKA101
L 454	MICRO INDUCTOR 47µH K or	LLAXKDSKA470
	MICRO INDUCTOR 47µH K	2165470S
L 455	MICRO INDUCTOR 47µH K or	LLAXKDSKA470
	MICRO INDUCTOR 47µH K	2165470S
L 456	MICRO INDUCTOR 47µH K or	LLAXKDSKA470

Ref. No.	Description	Part No.
	MICRO INDUCTOR 47µH K	2165470S
TRANSISTORS		
Q 451	TRANSISTOR KTC3198 (GR) or	NQS10KTC3198
	TRANSISTOR KTC3199 (GR) or	NQS10KTC3199
	TRANSISTOR 2SC3331 (T) or	QSC3331TNPAA
	TRANSISTOR 2SC3331 (U) or	QSC3331UNPAA
	TRANSISTOR 2SC1815 (GR)	QQS102SC1815
Q 452	TRANSISTOR 2SC2621 (D) or	2SC2621D
	TRANSISTOR 2SC2621 (E)	2SC2621E
Q 453	TRANSISTOR KTC3198 (GR) or	NQS10KTC3198
	TRANSISTOR KTC3199 (GR) or	NQS10KTC3199
	TRANSISTOR 2SC3331 (T) or	QSC3331TNPAA
	TRANSISTOR 2SC3331 (U) or	QSC3331UNPAA
	TRANSISTOR 2SC1815 (GR)	QQS102SC1815
Q 454	TRANSISTOR 2SC2621 (D) or	2SC2621D
	TRANSISTOR 2SC2621 (E)	2SC2621E
Q 455	TRANSISTOR KTC3198 (GR) or	NQS10KTC3198
	TRANSISTOR KTC3199 (GR) or	NQS10KTC3199
	TRANSISTOR 2SC3331 (T) or	QSC3331TNPAA
	TRANSISTOR 2SC3331 (U) or	QSC3331UNPAA
	TRANSISTOR 2SC1815 (GR)	QQS102SC1815
Q 456	TRANSISTOR 2SC2621 (D) or	2SC2621D
	TRANSISTOR 2SC2621 (E)	2SC2621E
RESISTORS		
R 451	METAL RES. 2W 27K Ω or	RN02JZDZ0273
	METAL RES. 2W 27K Ω or	534B273
	METAL RES. 2W 27K Ω	RN02273PY001
R 452	METAL RES. 2W 27K Ω or	RN02JZDZ0273
	METAL RES. 2W 27K Ω or	534B273
	METAL RES. 2W 27K Ω	RN02273PY001
R 453	METAL RES. 2W 27K Ω or	RN02JZDZ0273
	METAL RES. 2W 27K Ω or	534B273
	METAL RES. 2W 27K Ω	RN02273PY001
R 454	METAL RES. 2W 27K Ω or	RN02JZDZ0273
	METAL RES. 2W 27K Ω or	534B273
	METAL RES. 2W 27K Ω	RN02273PY001
R 455	METAL RES. 2W 27K Ω or	RN02JZDZ0273
	METAL RES. 2W 27K Ω or	534B273
	METAL RES. 2W 27K Ω	RN02273PY001
R 456	METAL RES. 2W 27K Ω or	RN02JZDZ0273
	METAL RES. 2W 27K Ω or	534B273
	METAL RES. 2W 27K Ω	RN02273PY001
R 460	CARBON RES. 1/4W 1.5K Ω	RCX4JASZ0152
R 461	CARBON RES. 1/4W 1.5K Ω	RCX4JASZ0152
R 462	CARBON RES. 1/4W 1.5K Ω	RCX4JASZ0152
R 463	CARBON RES. 1/4W 680 Ω	RCX4JASZ0681
R 464	CARBON RES. 1/4W 680 Ω	RCX4JASZ0681
R 465	CARBON RES. 1/4W 680 Ω	RCX4JASZ0681
R 466	CARBON RES. 1/4W 120 Ω	RCX4JASZ0121
R 467	CARBON RES. 1/4W 120 Ω	RCX4JASZ0121
R 468	CARBON RES. 1/4W 120 Ω	RCX4JASZ0121
R 469	CARBON RES. 1/4W 1K Ω	RCX4JASZ0102
R 470	CARBON RES. 1/4W 1K Ω	RCX4JASZ0102
R 471	CARBON RES. 1/4W 1K Ω	RCX4JASZ0102
R 472	CARBON RES. 1/4W 270 Ω	RCX4JASZ0271
R 473	CARBON RES. 1/4W 270 Ω	RCX4JASZ0271
R 474	CARBON RES. 1/4W 270 Ω	RCX4JASZ0271
R 475	CARBON RES. 1/4W 560 Ω	RCX4JASZ0561
R 480	CARBON RES. 1/4W 150K Ω	RCX4JASZ0154
R 481	CARBON RES. 1/4W 3.3K Ω	RCX4JASZ0332
R 482	CARBON RES. 1/4W 3.3K Ω	RCX4JASZ0332
R 483	CARBON RES. 1/4W 150K Ω	RCX4JASZ0154
R 484	CARBON RES. 1/4W 3.3K Ω	RCX4JASZ0332
R 485	CARBON RES. 1/4W 3.3K Ω	RCX4JASZ0332

Ref. No.	Description	Part No.
R 486	CARBON RES. 1/4W 150K Ω	RCX4JASZ0154
R 487	CARBON RES. 1/4W 3.3K Ω	RCX4JASZ0332
R 489	CARBON RES. 1/4W 3.3K Ω	RCX4JASZ0332
R 490	CARBON RES. 1/4W 150 Ω	RCX4JASZ0151
R 491	CARBON RES. 1/4W 150 Ω	RCX4JASZ0151
R 492	CARBON RES. 1/4W 150 Ω	RCX4JASZ0151
VARIABLE RESISTORS		
VR451	SEMIFIXED RES. (V) 5KB or	138J916
	SEMIFIXED RES. (V) 5KB	138A957
VR452	SEMIFIXED RES. (V) 5KB or	138J916
	SEMIFIXED RES. (V) 5KB	138A957
VR453	SEMIFIXED RES. (V) 5KB or	138J916
	SEMIFIXED RES. (V) 5KB	138A957
VR454	SEMIFIXED RES. (V) 1KB or	138J913
	SEMIFIXED RES. (V) 1KB	138A953
VR455	SEMIFIXED RES. (V) 1KB or	138J913
	SEMIFIXED RES. (V) 1KB	138A953
MISCELLANEOUS		
CL451B	CABLE HOLDER 5P or	XW01D05NF001
	CABLE HOLDER 5P	XW01B05NF001
CL452B	CABLE HOLDER 4P or	XW01D04NF001
	CABLE HOLDER 4P	XW01B04NF001
CN453	CRT SOCKET	JSCC290HD001


Filter PCB

Ref. No.	Description	Part No.
	Filter PCB	
	Consists of the following:	
CAPACITORS		
C 661	LINE ACROSS CAP. 0.1µF/250V or	CA2E104MS010
	LINE ACROSS CAP. 0.1µF/250V or	CT2E104DT001
	LINE ACROSS CAP. 0.1µF/250V or	122Z181
	LINE ACROSS CAP. 0.1µF/250V	CA2E104MS005
C 662	LINE ACROSS CAP. 0.047µF 250V or	CT2E473DT001
	LINE ACROSS CAP. 0.047µF 250V or	CA2E473MS010
	LINE ACROSS CAP. 0.047µF 250V	122Z271
RESISTOR		
R 661	SOLID RES. 1/2W 1M Ω	RSX2105KE002
MISCELLANEOUS		
CL661	WIRE ASSEMBLY 2P	WX1L8750-004
F 661	FUSE T4.0AH 250V	PAGC20BAG402
FH661	FUSE HOLDER or	XH01Z00DK001
	FUSE HOLDER or	1790424
	FUSE HOLDER	1790848
FH662	FUSE HOLDER or	XH01Z00DK001
	FUSE HOLDER or	1790424
	FUSE HOLDER	1790848
L 661	LINE FILTER	LLBG00ZMS012
W 661	AC CORD	5750112


Chassis Electrical Parts

Ref. No.	Description	Part No.
V 451	CRT A59KPR84X01	TCRT190SM006
CL451	WIRE ASSEMBLY	WX1L8750-005
CL801	WIRE ASSEMBLY	WX1L8750-006
CL802	WIRE ASSEMBLY	WX1L8700-002
L 602	DEGAUSSING COIL	LLBH00ZTZ015
SP801	SPEAKER	DSD0809MS001
SP802	SPEAKER	DSD0809MS001
	CABLE TIE or	1790256
	CABLE TIE	1790356

Main PCB (Top View)

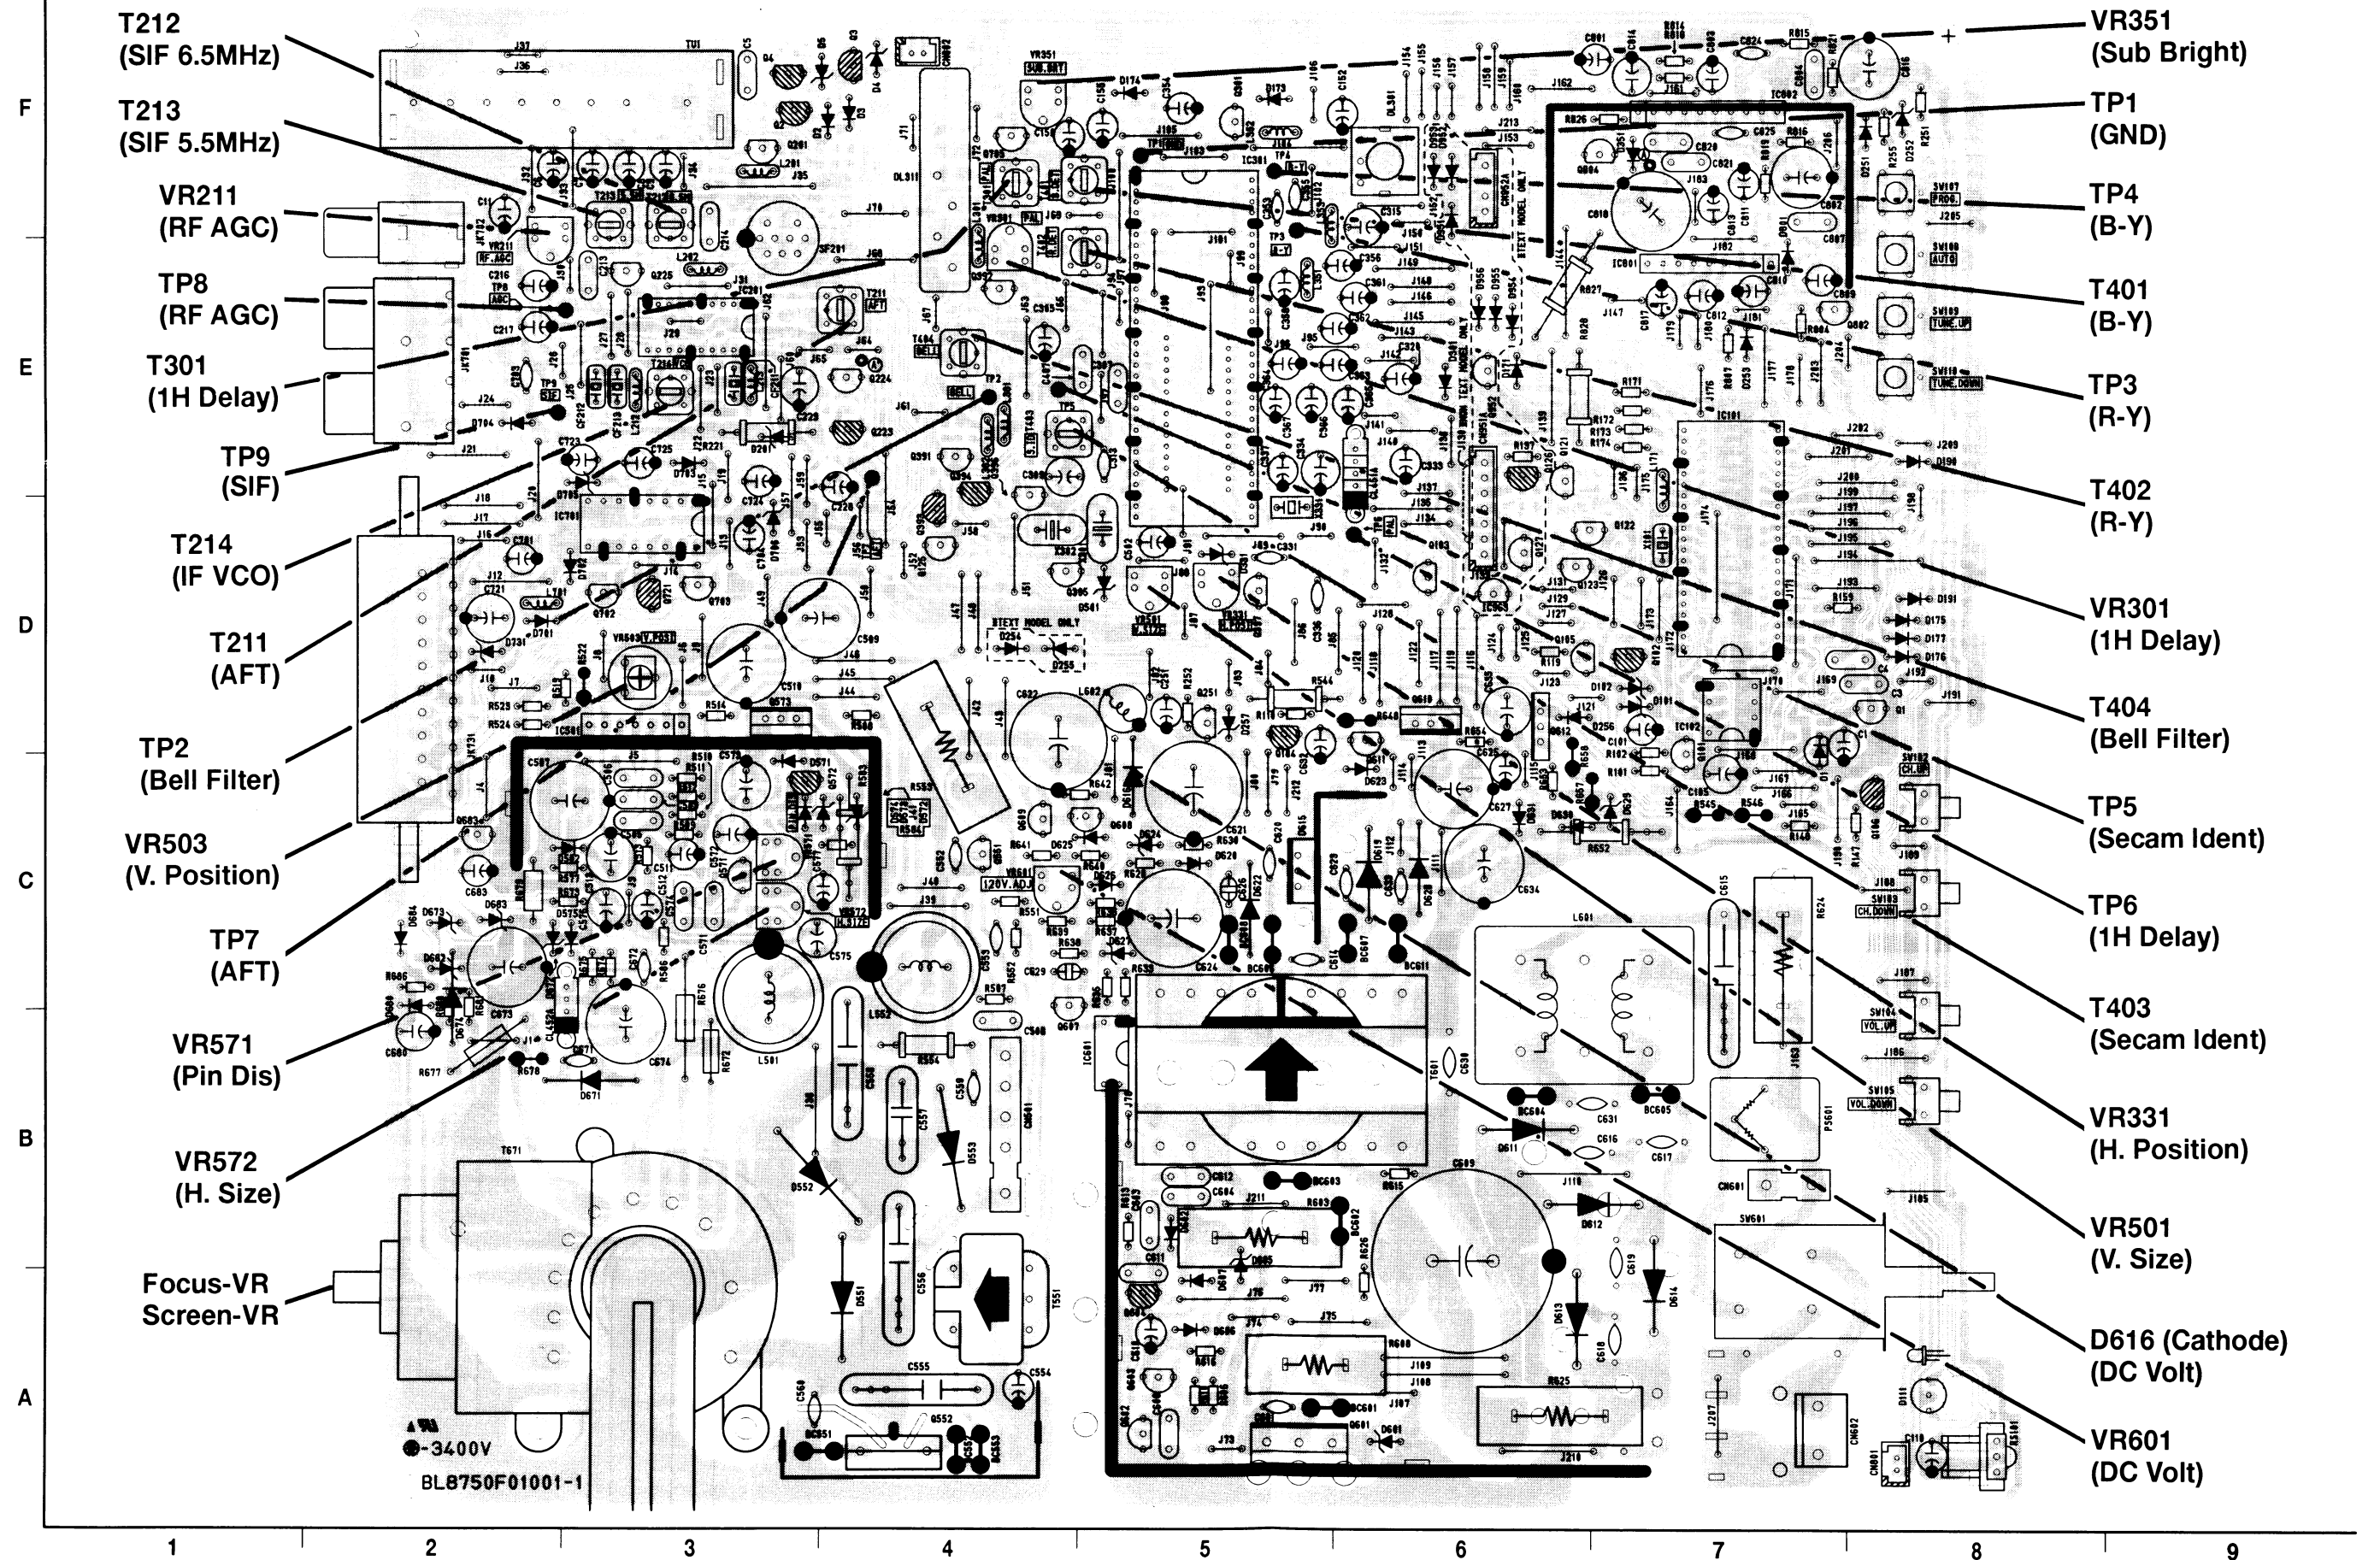

Main PCB (Bottom View)

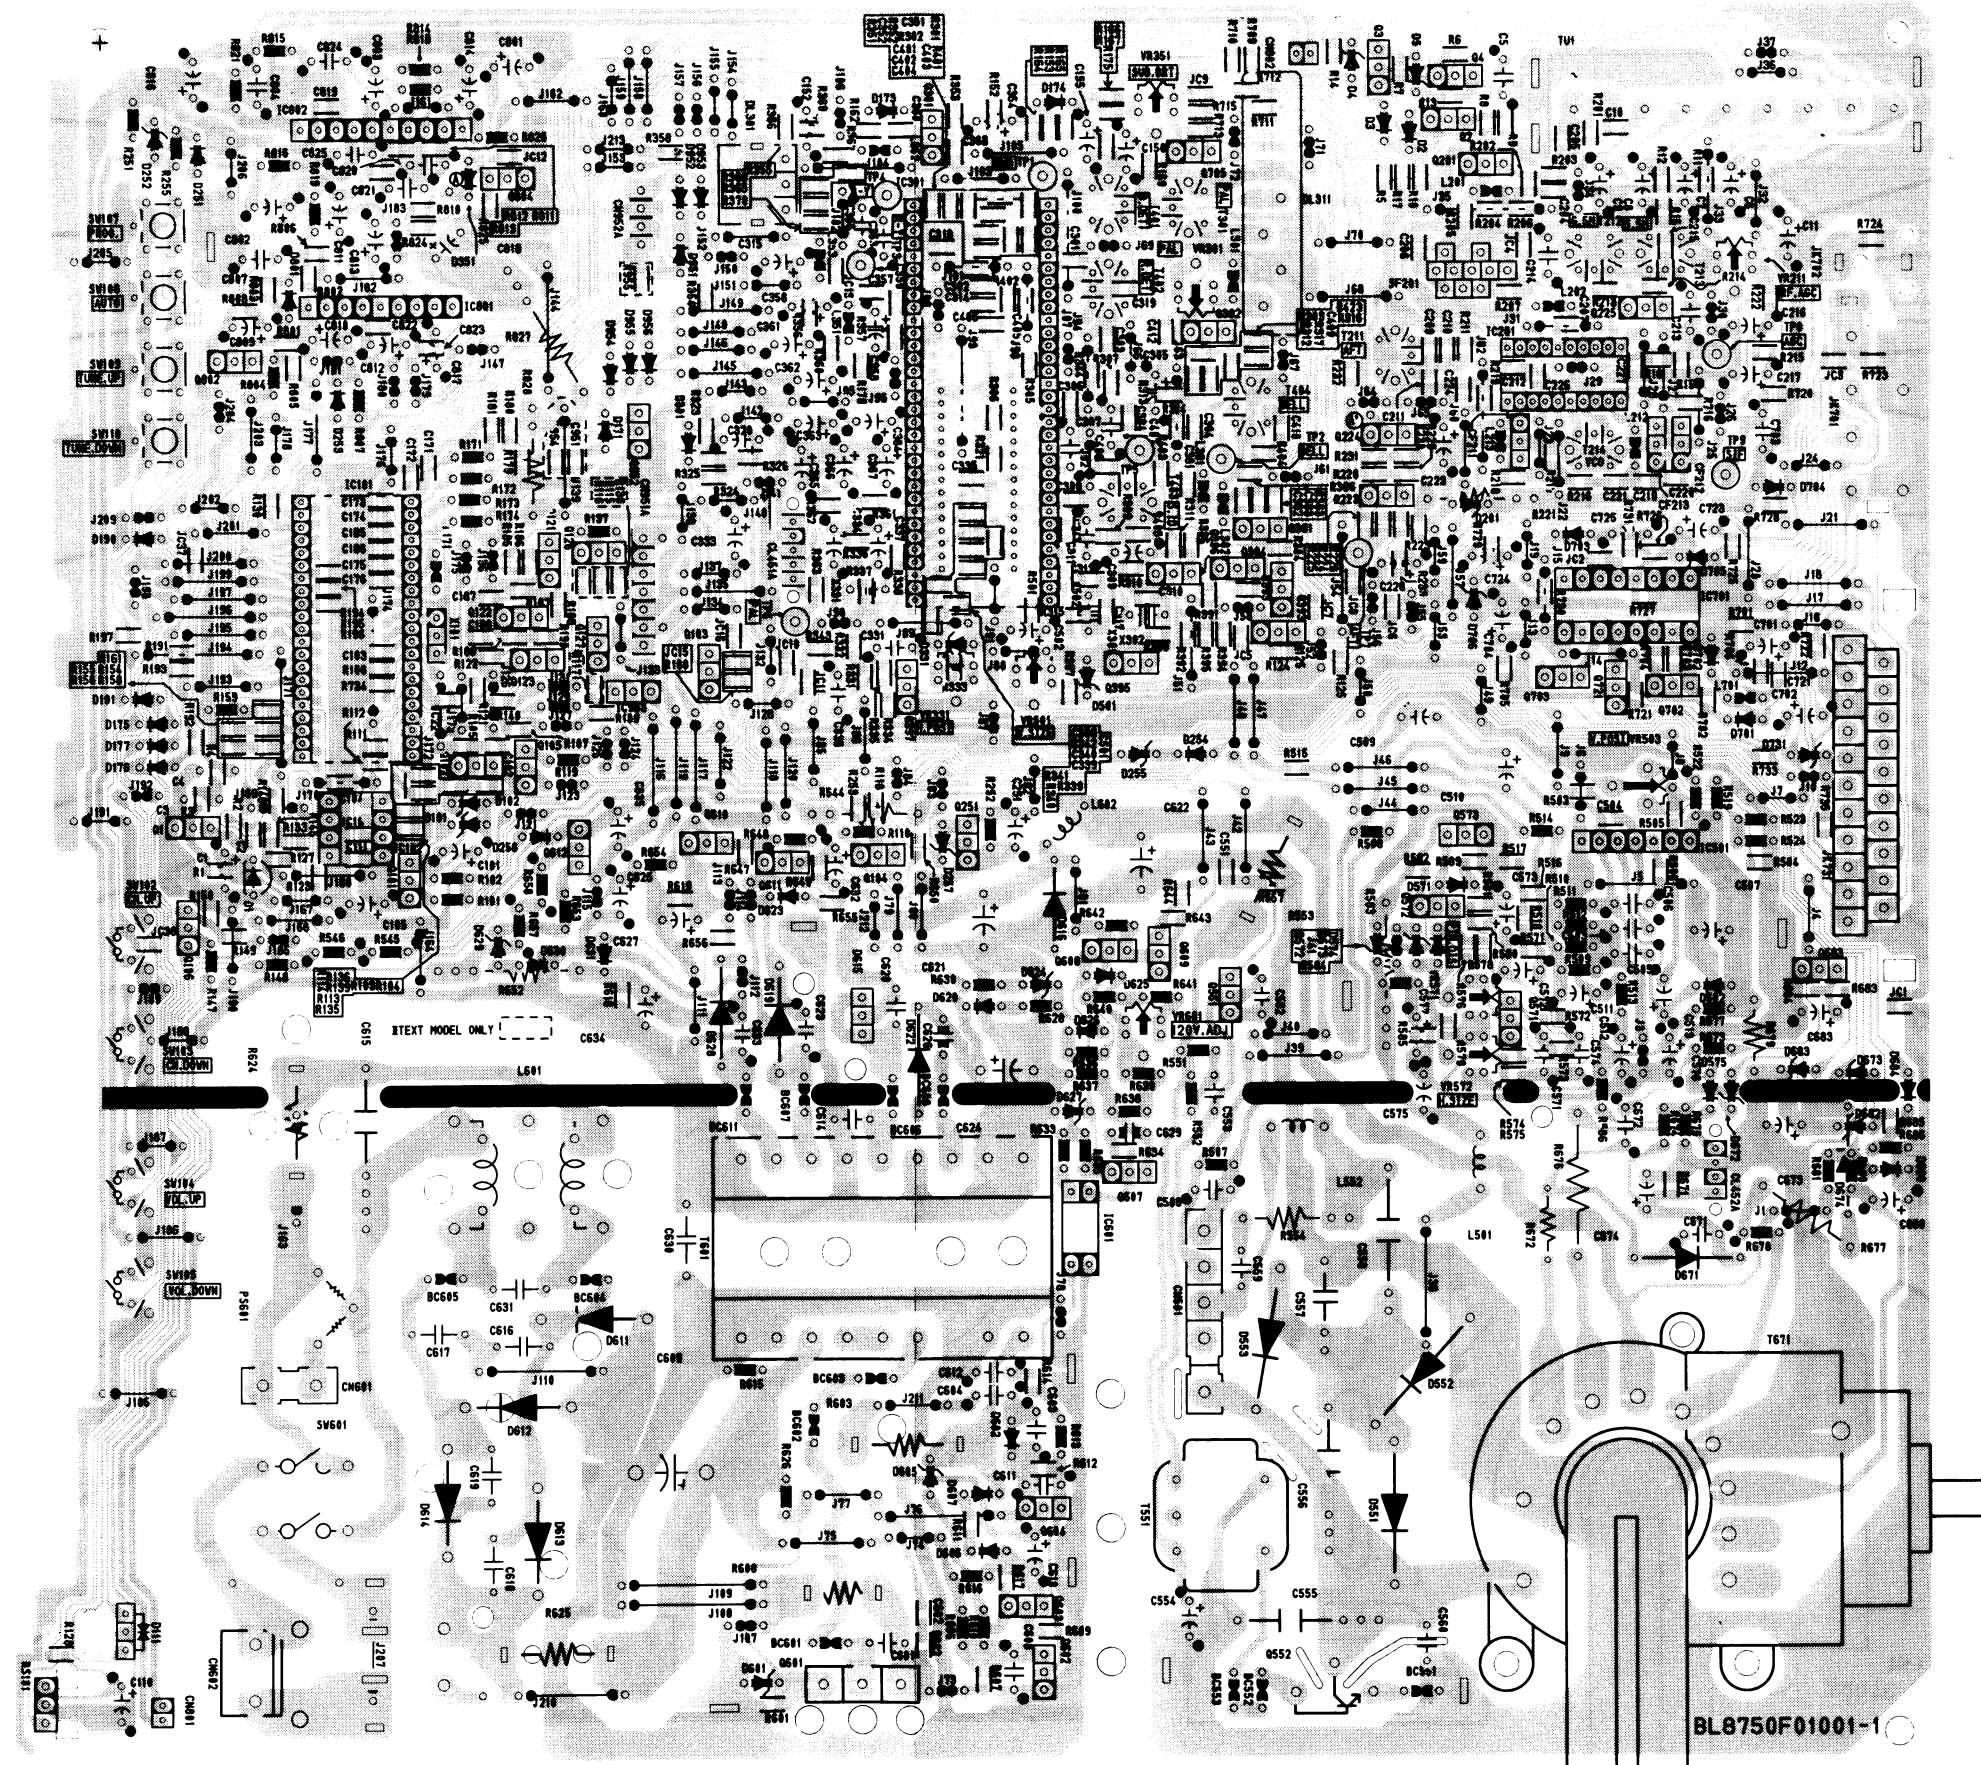

CRT Schematic Diagram

F


E

D

C

B

A

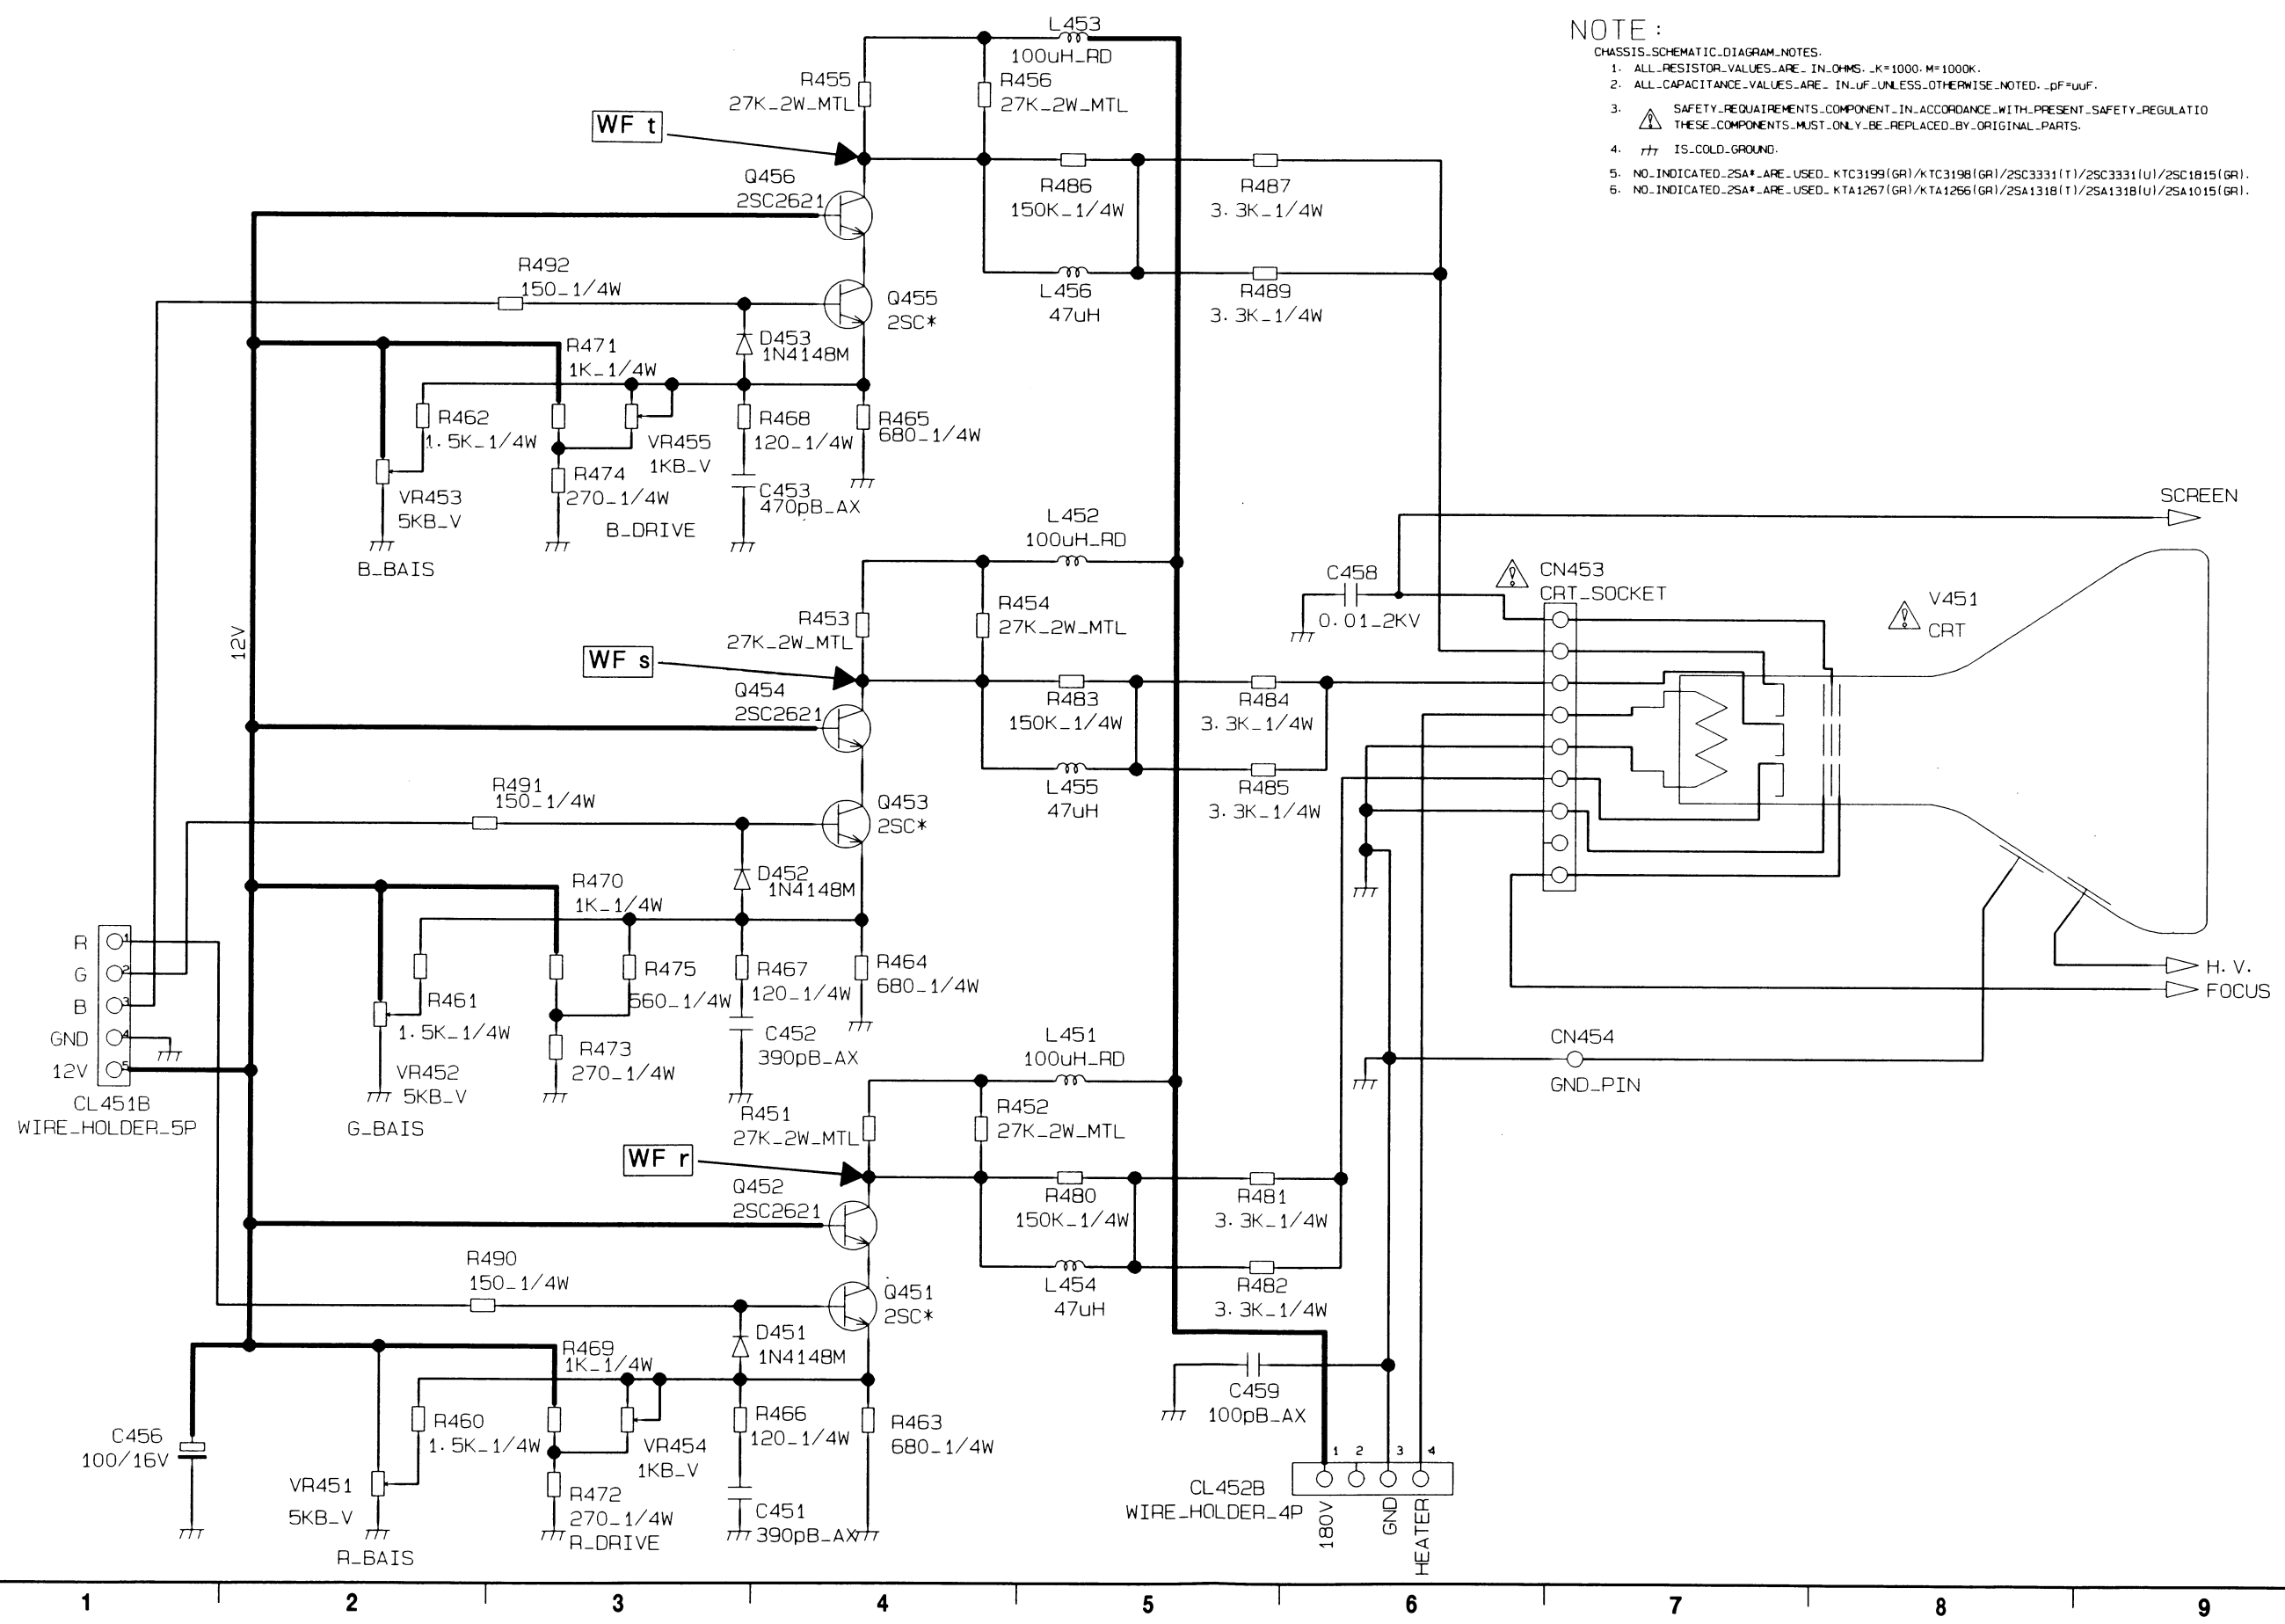

NOTE :

- CHASSIS SCHEMATIC DIAGRAM NOTES:
1. ALL RESISTOR VALUES ARE IN OHMS. K=1000, M=1000K.
 2. ALL CAPACITANCE VALUES ARE IN UF, UNLESS OTHERWISE NOTED. PF=UF.
 3. SAFETY REQUIREMENTS COMPONENT IN ACCORDANCE WITH PRESENT SAFETY REGULATIONS THESE COMPONENTS MUST ONLY BE REPLACED BY ORIGINAL PARTS.
 4. IS COLD GROUND.
 5. NO INDICATED 2SA* ARE USED. KTC3199(GR)/KTC3198(GR)/2SC3331(T)/2SC3331(U)/2SC1815(GR).
 6. NO INDICATED 2SA* ARE USED. KTA1267(GR)/KTA1266(GR)/2SA1318(T)/2SA1318(U)/2SA1015(GR).

F

D

C

- B**

1

3


7-6

(L8750SC-FILTER)

9-1























CRT PCB (Top View)

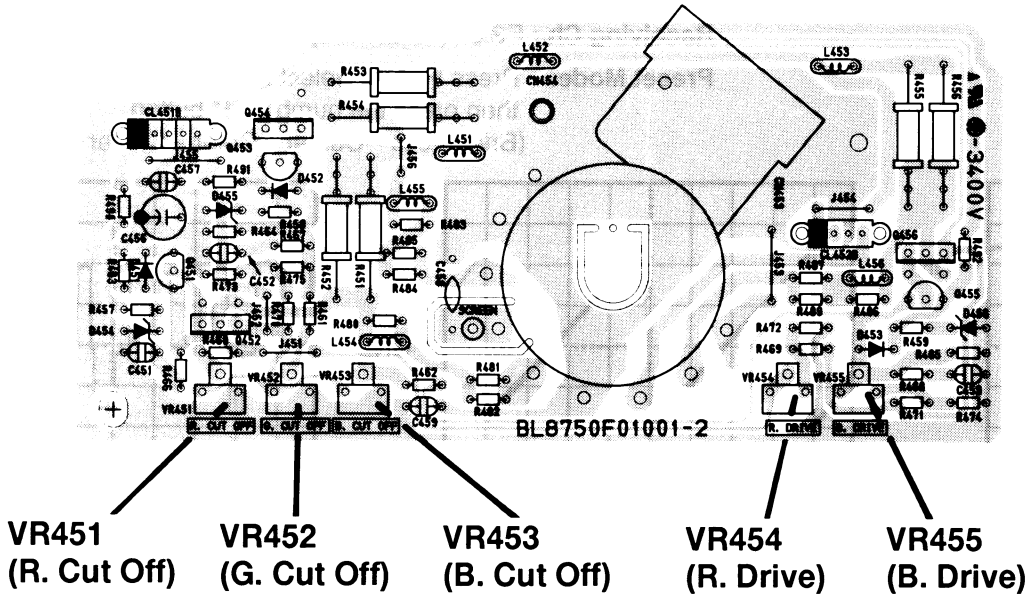


WAVEFORMS


WFa ~ WFt = Waveforms to be observed at
Waveform check points.
(Shown in Schematic Diagram.)


Input: PAL Color Bar Signal (with 1KHz Audio Signal)
Receiving Ch.: E2 ch (48.25MHz)
Preset Mode: Press Picture Select button on the remote control unit,
then press the number "1" button.
(Brightness---Center Color---Center Contrast---Approx 70%)

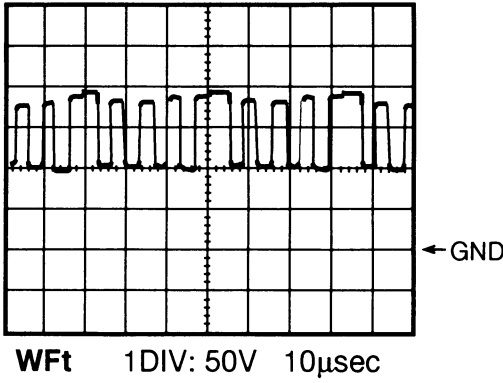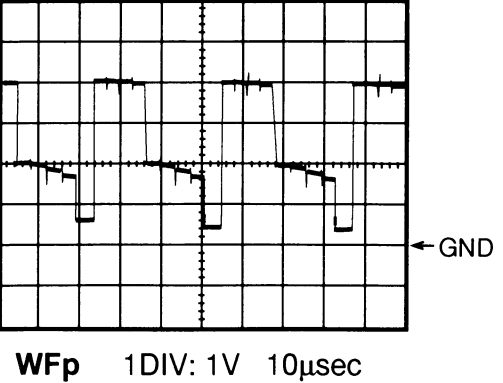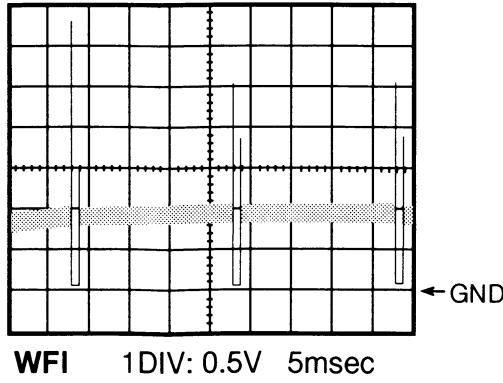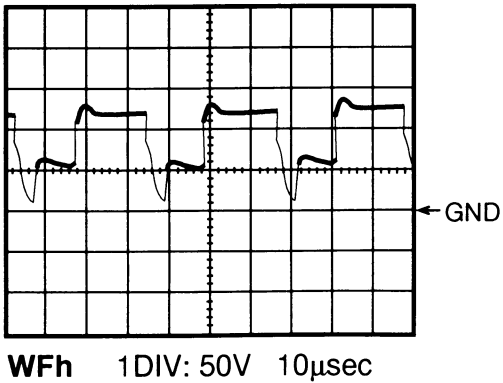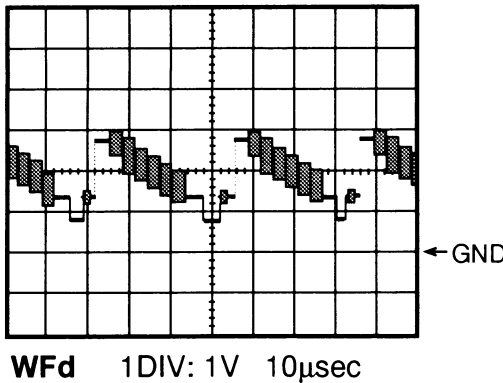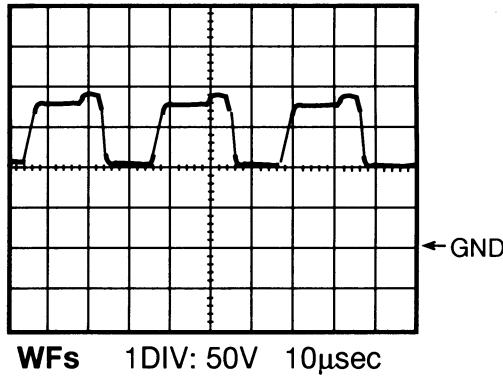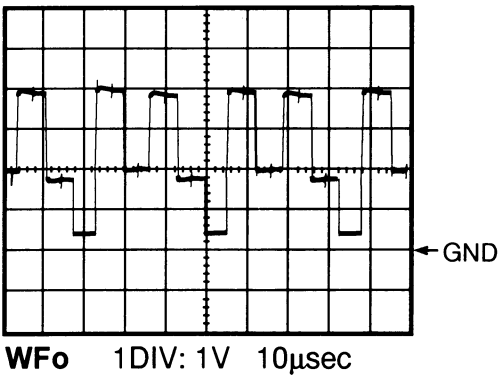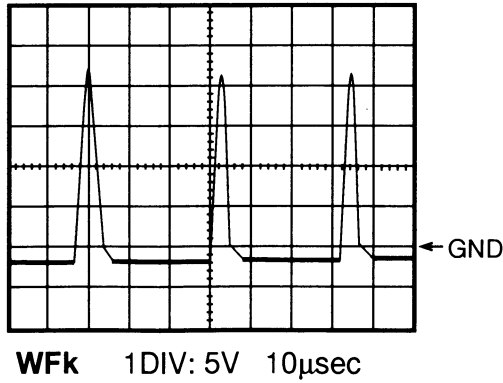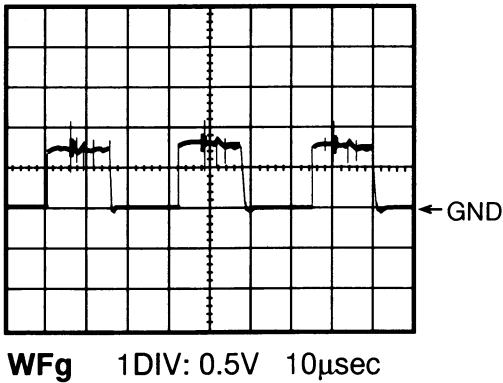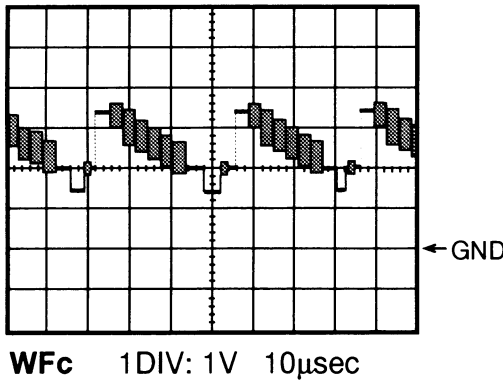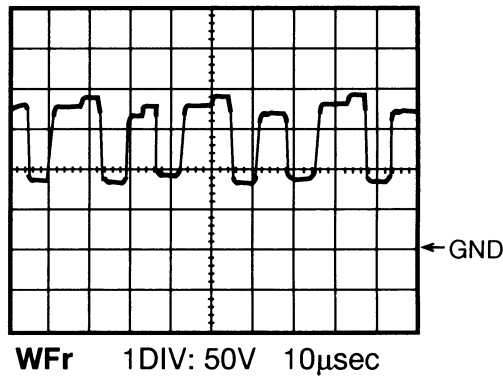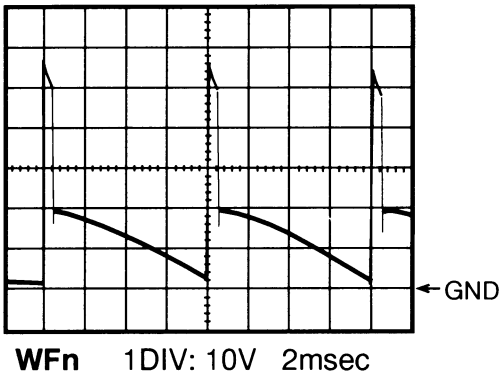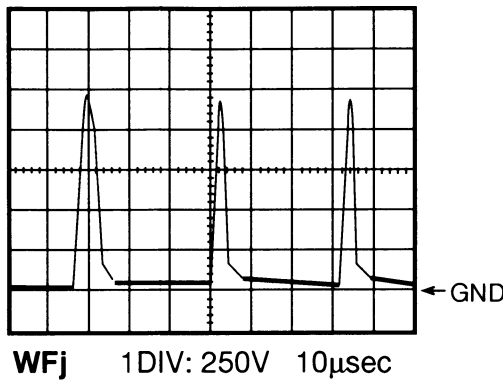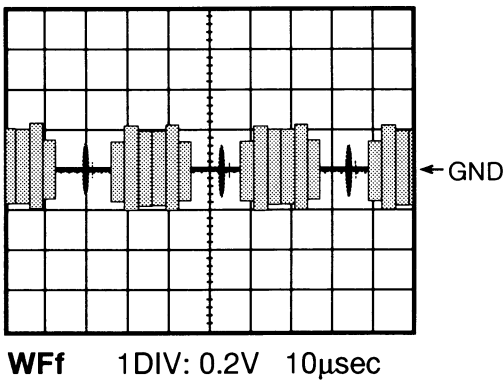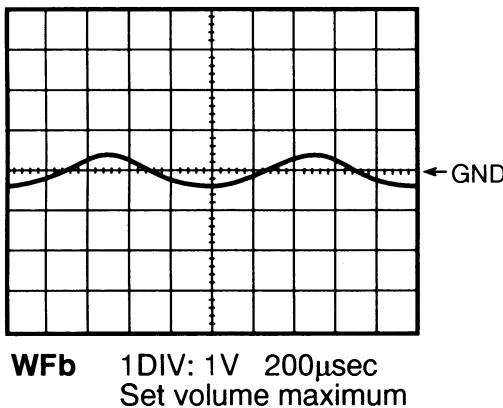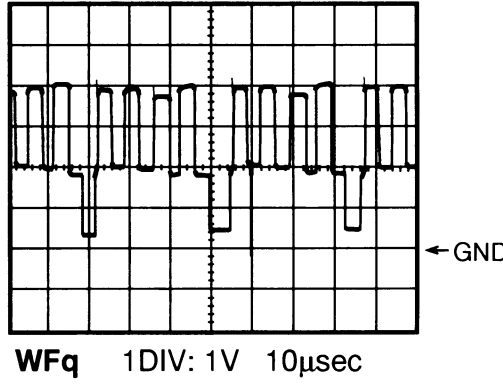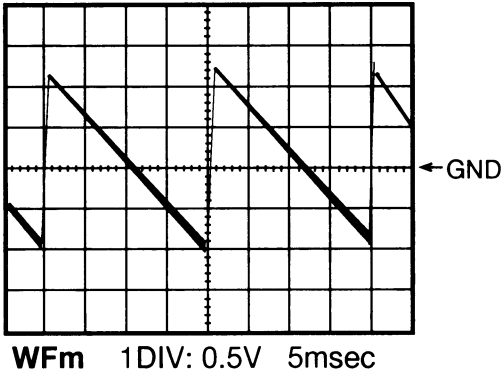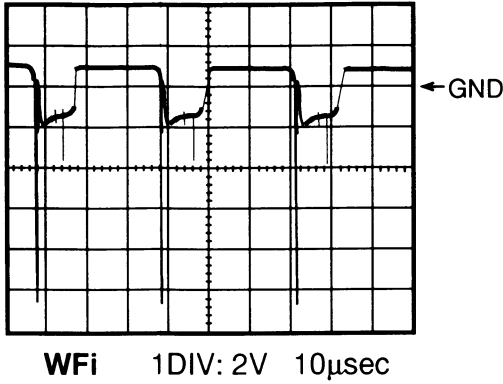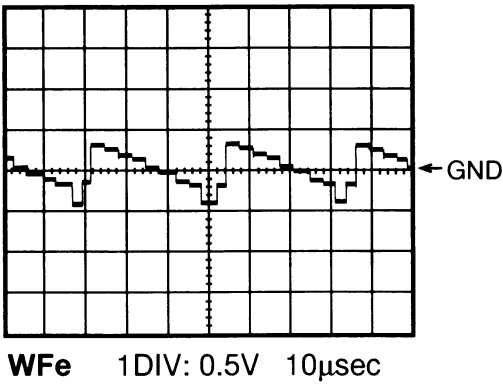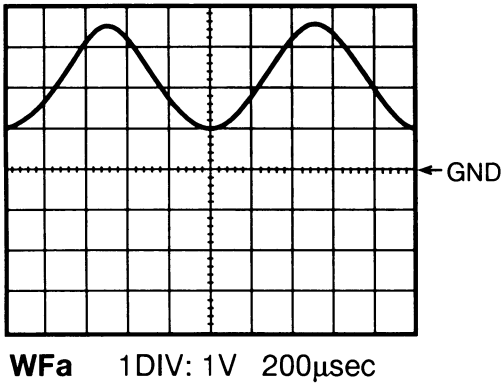

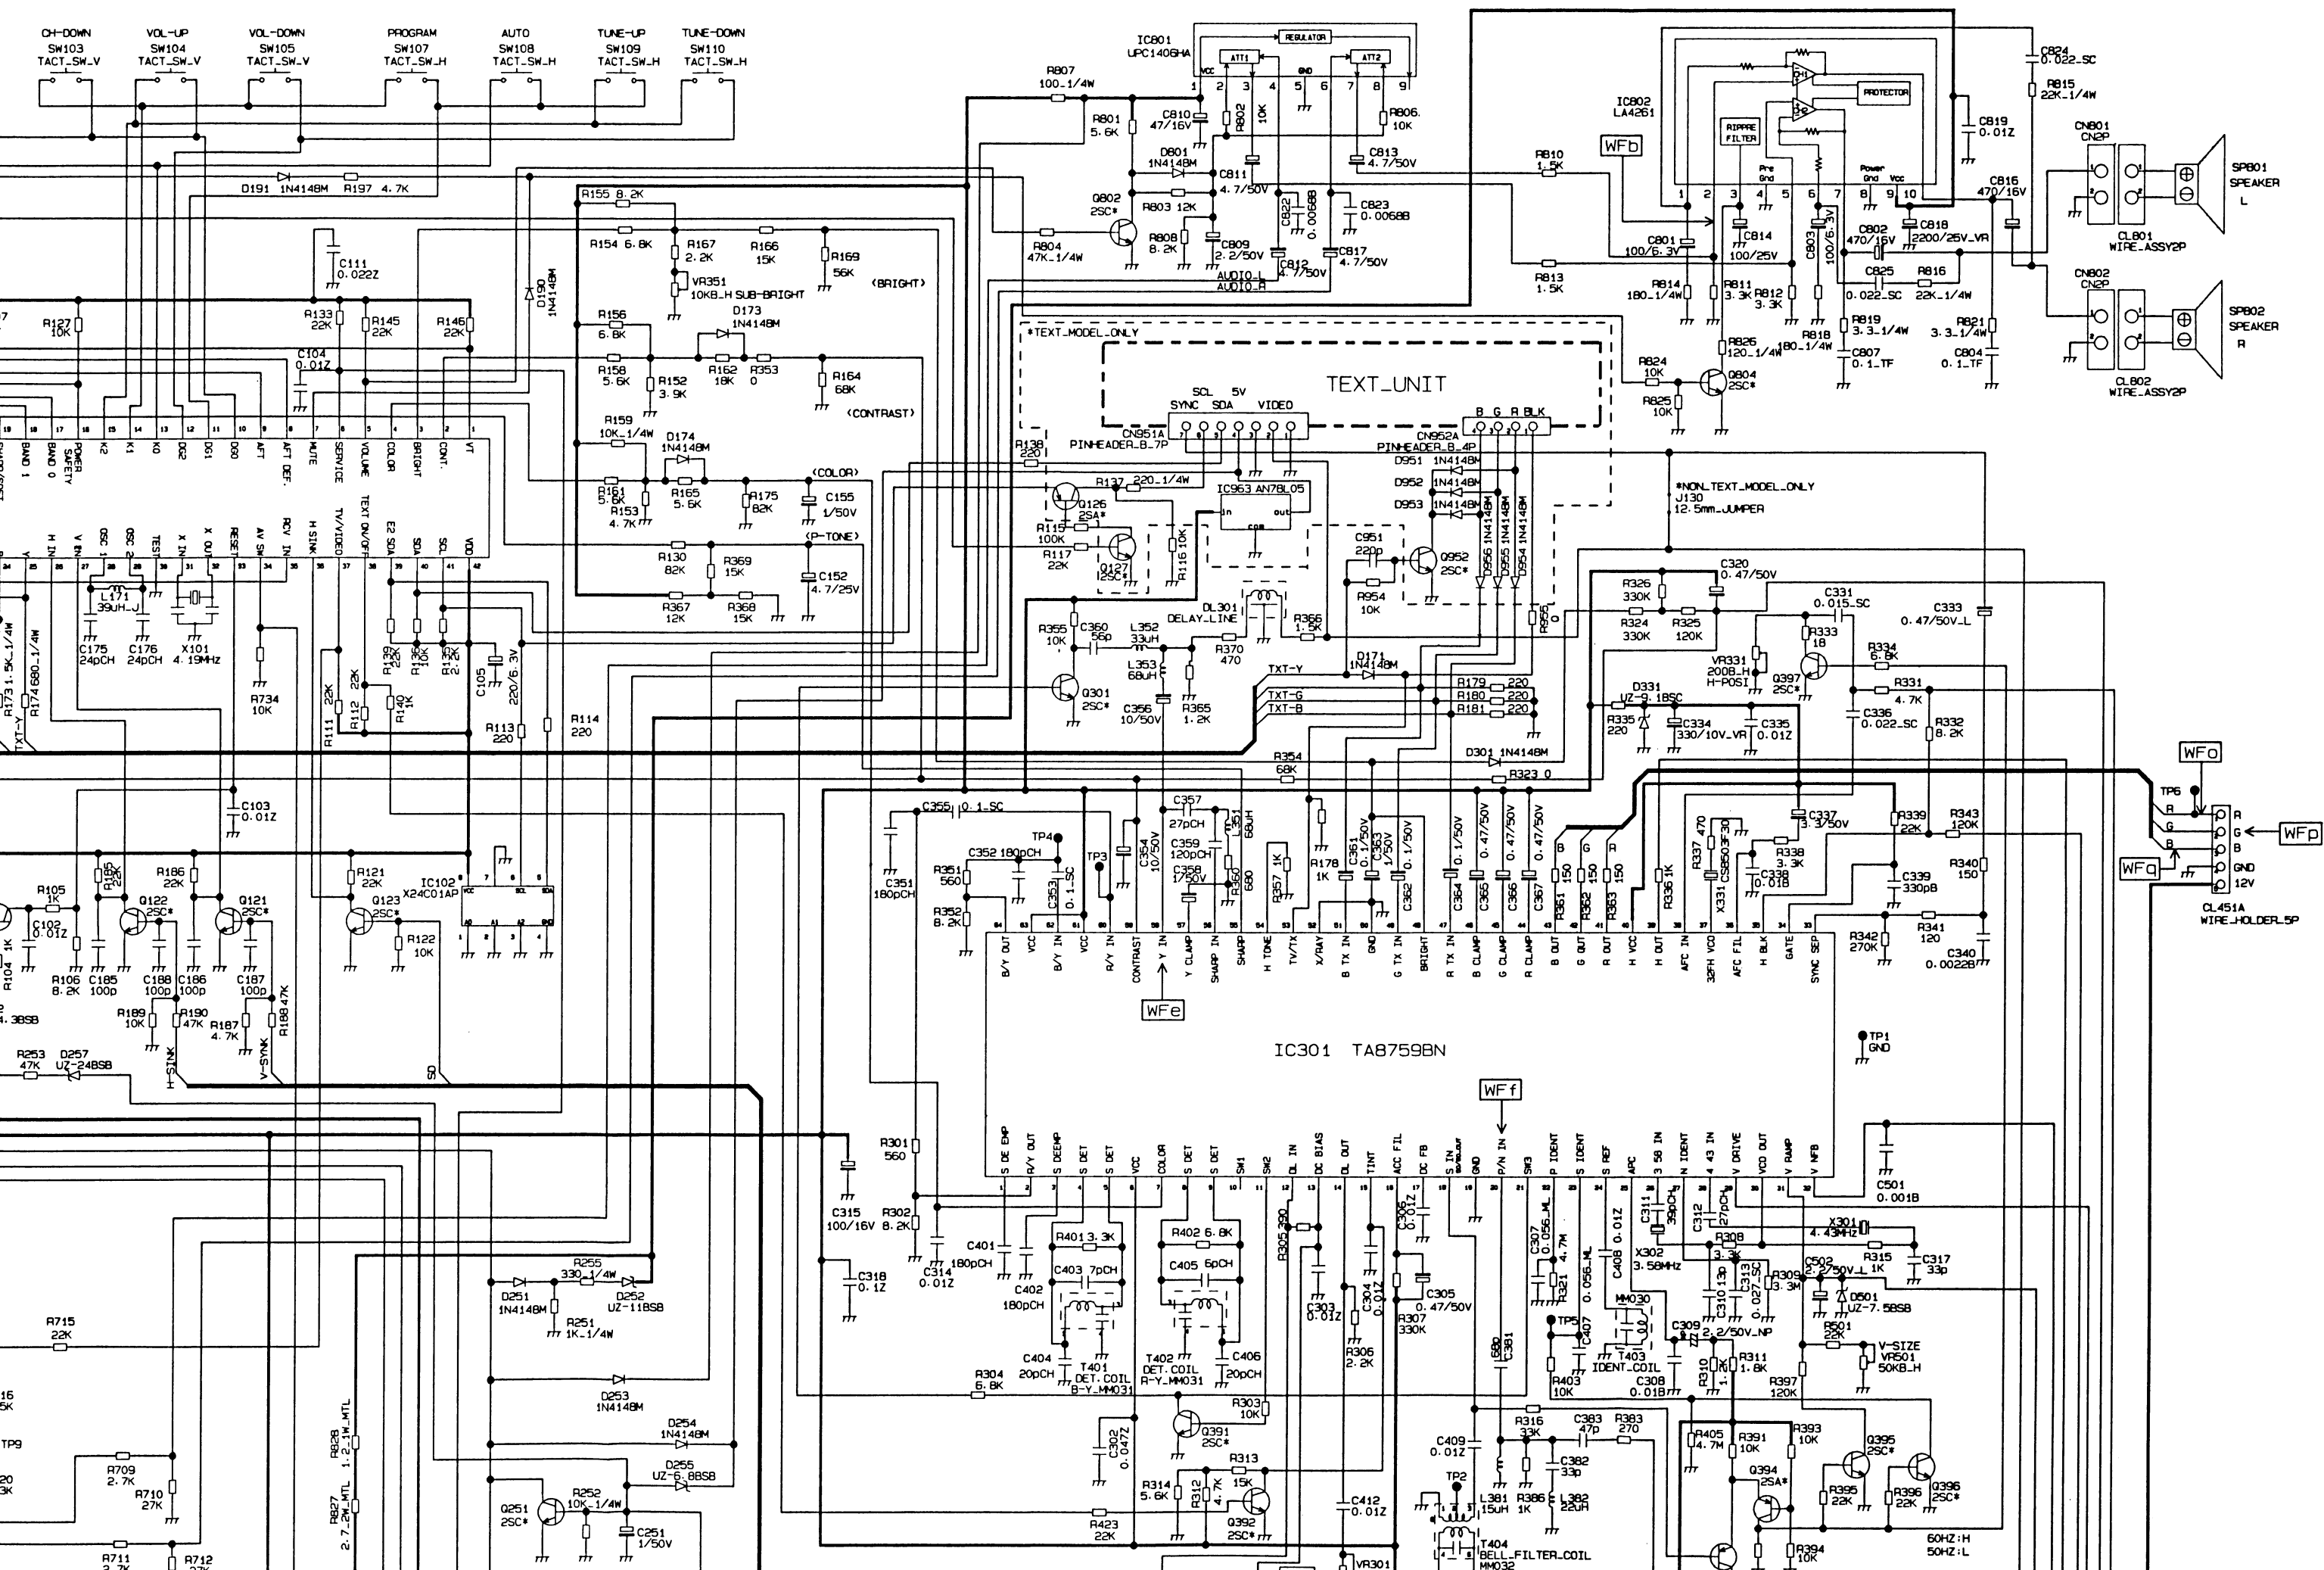

Main Schematic Diagram

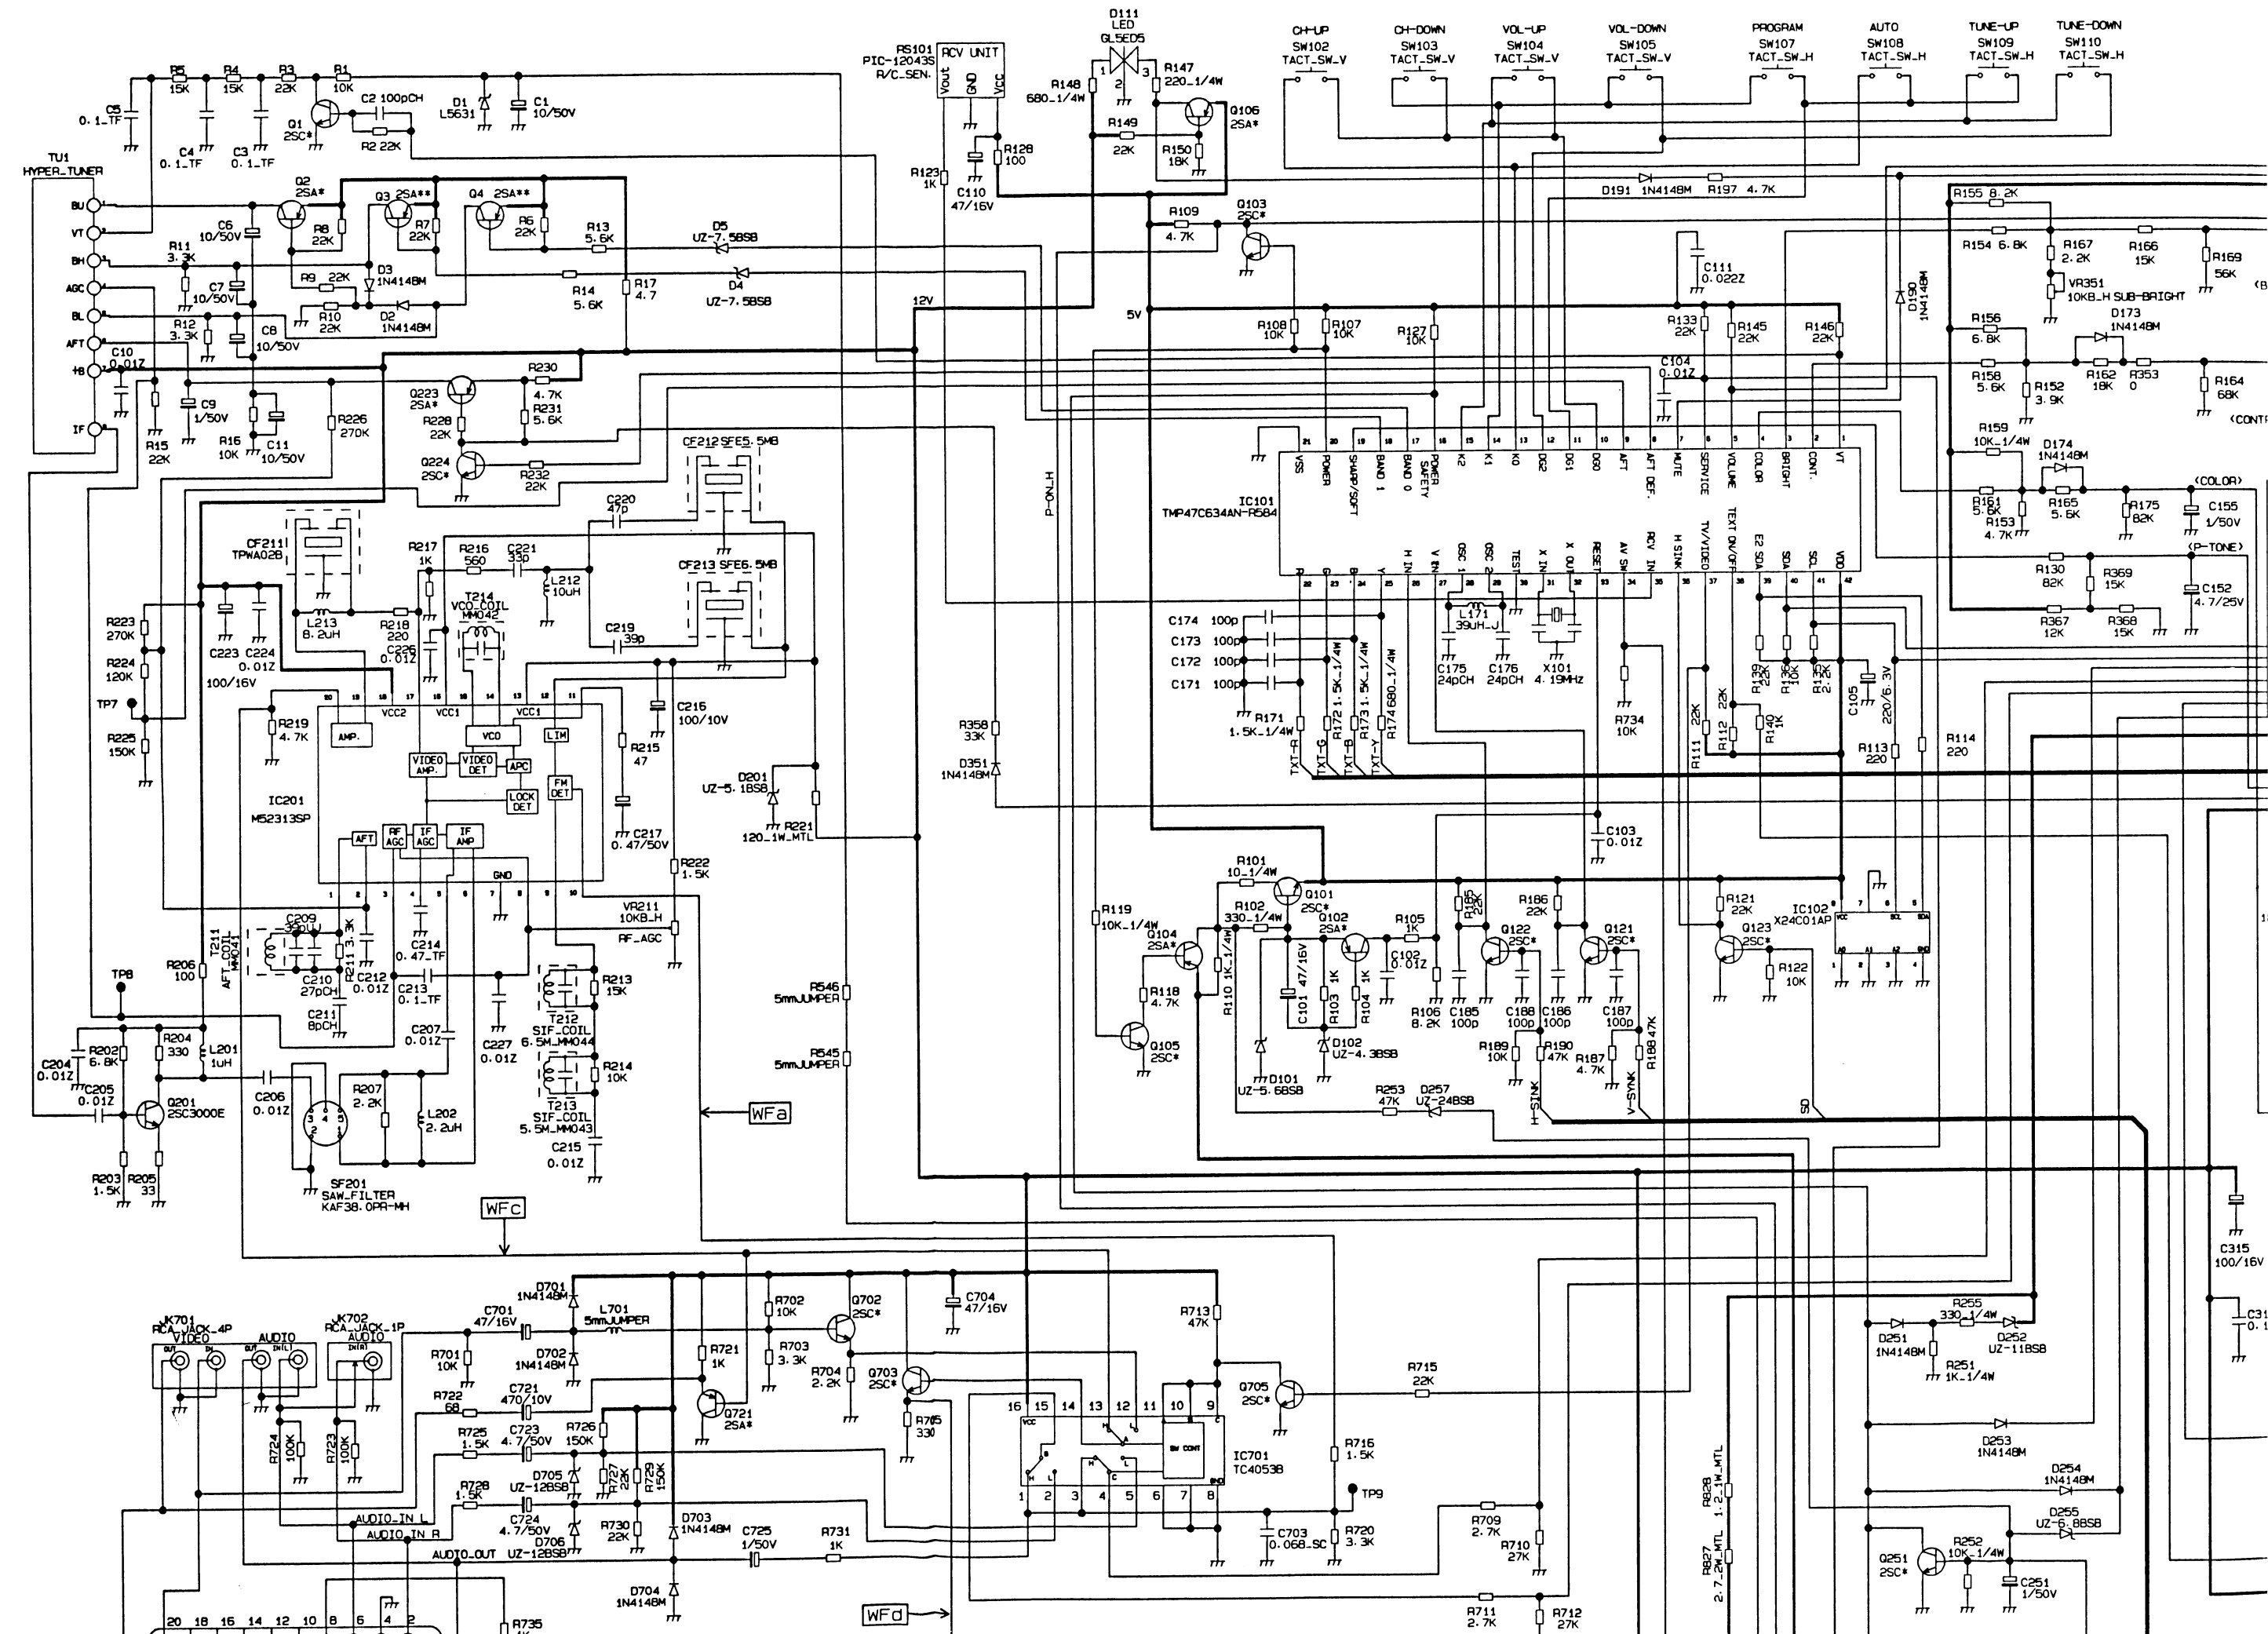

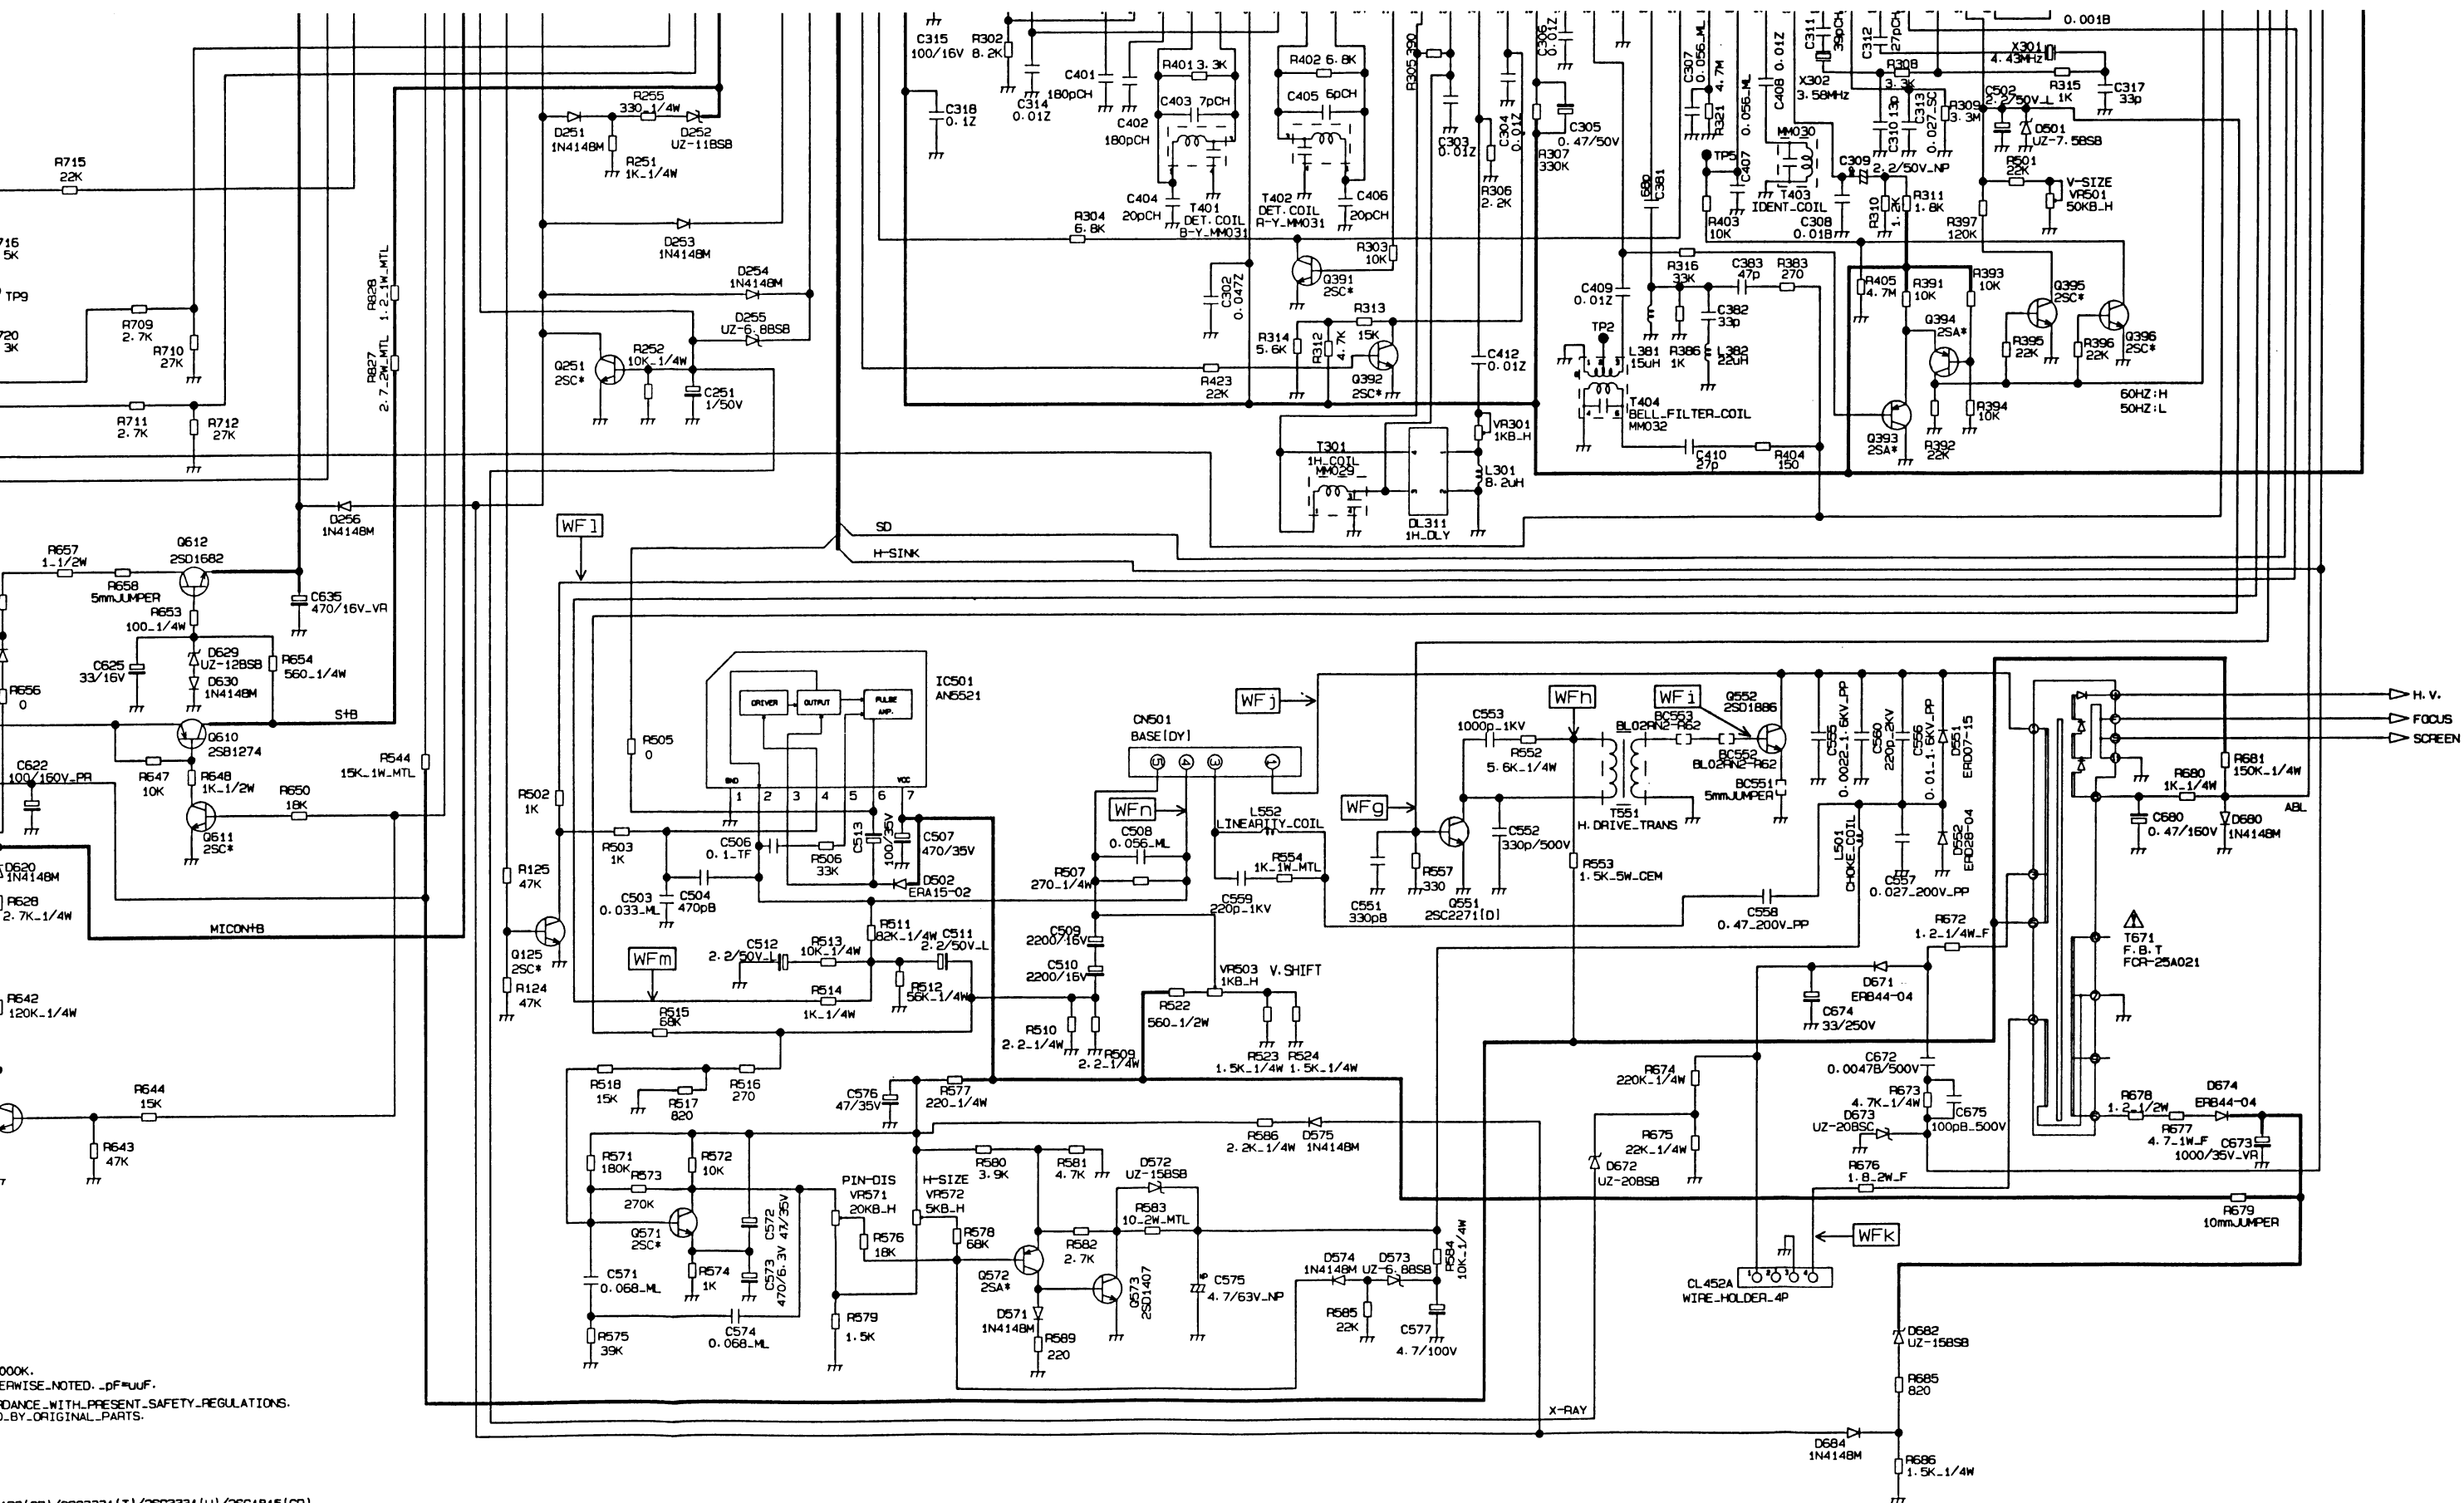

5

6

7

8

9

10

11

D

C

B

A

